

# TL80A, TL90A, TL100A REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL .....	2
SECTION 10 - ENGINE .....	2
SECTION 18 - CLUTCH .....	7
SECTION 21 - TRANSMISSIONS .....	8
SECTION 23 - FWD TRANSFER BOX .....	11
SECTION 25 - FRONT AXLE MECHANICAL TRANSMISSION .....	12
SECTION 27 - REAR AXLE MECHANICAL TRANSMISSION .....	13
SECTION 31 - POWER TAKE-OFF .....	14
SECTION 33 - BRAKES .....	16
SECTION 35 - HYDRAULIC SYSTEMS .....	17
SECTION 41 - STEERING .....	24
SECTION 44 - AXLES AND WHEELS .....	25
SECTION 50 - AUXILIARY UNITS .....	26
SECTION 55 - ELECTRICAL SYSTEMS .....	28
SECTION 90 - CAB, PLATFORM, AND BODYWORK .....	37

The following pages are the collation of the contents pages from each section and chapter of the TLA Series Repair manual. Complete Repair part # 87580875.

The sections used through out all New Holland product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the TLA Series Tractors.

---

# SECTION 00 - GENERAL

BOOK 1 - 87580876

## Chapter 1 - General

### CONTENTS

Section	Description	Page
	General Instructions .....	3
	Health and Safety .....	5
	Precautionary Statements .....	15
	Safety .....	16
	Ecology and the Environment .....	19
	Minimum Hardware Tightening Torques .....	20
	Federal Emissions Warranty .....	22
	Consumables .....	25

# SECTION 10 - ENGINE

BOOK 1 - 87580876

## Chapter 1 - Engine

### CONTENTS

Operation	Description	Page
	Specifications .....	3
	Tightening Torques .....	9
	Special Tools .....	11
	Description and Operation .....	12
	Sectional Views .....	12
	Troubleshooting .....	17
	Overhaul .....	21
10 001 10	Engine .....	21
	Removal .....	21
	Installation .....	39
	Compression Test .....	41
	Considerations .....	41
	Uniform Compression .....	41
	Low Compression Readings .....	41

---

# SECTION 10 - ENGINE

BOOK 1 - 87580876

## Chapter 1 - Engine (Continued)

### CONTENTS

Operation	Description	Page
	Disassembly .....	42
	Crankshaft Front Seal Removal .....	45
	Crankshaft Rear Seal Removal .....	47
	Assembly .....	53
	Bushings .....	53
	Tappet .....	54
	Camshaft .....	54
	Oil Nozzle .....	55
	Crankshaft .....	55
	Connecting Rod and Piston .....	58
	Installing the Piston Connecting Rod Assemblies in the Cylinder .....	59
	Big End Cap Assembly .....	60
	Thermostat Valve .....	61
	Cylinder Head .....	61
	Fuel Injectors .....	63
	Rocker Arm Assembly .....	63
	Timing Gear .....	64
	Injection Pump .....	66
	Counterweight and Balancer .....	66
	Hydraulic Pump Drive Gear .....	67
	Timing Gear Casing .....	68
	Crankshaft Rear Seal .....	68
	Flywheel .....	69
	Oil Pump .....	70
	Oil Sump .....	70
	Crankshaft Front Seal .....	70
	Crankshaft Front Pulley .....	70
	Cooling System Union .....	71
	Coolant Pump .....	71
	Fan-Alternator Pulley .....	71
	Auxiliary Drive Belt .....	73

---

# SECTION 10 - ENGINE

BOOK 1 - 87580876

## Chapter 1 - Engine (Continued)

### CONTENTS

Operation	Description	Page
	Exhaust Manifold - Turbocharger .....	73
	Injector Feed Pipe .....	73
	Priming Pump - Feed Pipe .....	73
	Installing The Pipes Between The Fuel Supply and Injection Pumps, Pre-Heating System and Tappet Cover .....	74
	Starter Motor .....	75
	Checks, Measurements and Repairs .....	76
	Cylinder Block .....	76
	Crankshaft .....	79
	Main Crankshaft Tolerances .....	80
	Connecting Rods .....	81
	Pistons .....	83
	Measuring the Piston Diameter .....	84
	Piston Pins .....	84
	Conditions for Correct Pin-piston Coupling .....	85
	Piston Rings .....	85
	Camshaft and Valves .....	87
	Decarbonizing and grinding valves .....	87
	Checking Valve Spring Flexibility .....	89
	Tappets .....	89
	Camshaft .....	90
	Cylinder Head .....	91
	Crankshaft Front Seal .....	92
	Crankshaft Rear Seal .....	95
	Valve Tappet and Rocker Arm .....	98

---

## SECTION 10 - ENGINE

BOOK 1 - 87580876

### Chapter 2 - Cooling System

#### CONTENTS

Operation	Description	Page
	Specifications .....	2
	Description of Operation .....	3
	Radiator .....	3
	Coolant Thermometer .....	3
	Thermostat Valve .....	3
	Sectional Views .....	4
	Overhaul .....	5
10 402 10	Coolant Pump .....	5
	Removal .....	5
	Installation .....	6
10 402 30	Thermostat Valve .....	7
	Removal .....	7
	Installation .....	8
10 406 10	Radiator .....	9
	Removal .....	9
	Installation .....	14
10 414 10	Coolant Pump and Alternator Belts .....	15
	Tension Adjustment .....	15
	Polyvee Belt .....	15

## SECTION 10 - ENGINE

BOOK 1 - 87580876

### Chapter 3 - Lubrication System

#### CONTENTS

Operation	Description	Page
	Specifications .....	2
	Lubrication System Components .....	4
	Oil Pressure Indicator .....	5
	Oil Filter .....	6
	Oil Pump .....	6

---

# SECTION 10 - ENGINE

BOOK 1 - 87580876

## Chapter 4 - Fuel System

### CONTENTS

Operation	Description	Page
	Specifications .....	2
	Special Tools .....	4
	Description and Operation .....	6
	Turbocharged Engine .....	6
	Manifold Pressure Compensator (LDA) .....	6
	Description .....	6
	Operation .....	7
	All Models .....	8
	Electrical Cold-start Accelerator (KKSB) .....	8
	Overhaul .....	10
10 218 30	Fuel Injectors .....	10
	Removal .....	10
	Installation .....	12
10 246 14	BOSCH Fuel Injection Pump .....	13
	Removal .....	13
	Locking the Injection Pump .....	16
	Timing the Fuel Injection Pump on a Workbench .....	18
	Installation .....	21
	Timing the Pump on the Tractor .....	21

---

# SECTION 18 - CLUTCH

BOOK 1 - 87580876

## Chapter 1 - Clutch

### CONTENTS

Operation	Description	Page
	Specifications .....	2
	Tightening Torques .....	3
	Special Tools .....	3
	Description and Operation .....	4
	Cross Sectional Views .....	4
	Troubleshooting .....	5
	Overhaul .....	6
	Inspection and Adjustment .....	6
	12"/12" Dual Clutch .....	6
<b>18 100 40</b>	Clutch Pedal .....	8
<b>18 110 10</b>	12"/12" Dual Clutch .....	9
	Removal .....	9
	Installation .....	10
	Disassembly .....	12
	Assembly .....	15
	Adjust Release Levers .....	16
	Single Disk Clutch .....	17
	Inspection .....	17

---

## SECTION 21 - TRANSMISSIONS

BOOK 2 - 87053392

### Chapter 1 - 12 x 12 Synchro Command Mechanical Shuttle Transmission (TL80A, TL90A, TL100A Standard Models)

#### CONTENTS

Operation	Description	Page
	12 x 12 Synchro Command Mechanical Shuttle Transmission .....	3

## SECTION 21 - TRANSMISSIONS

BOOK 2 - 87053392

### Chapter 2 - Reverser (12 x 12 Mechanical Shuttle Transmissions)

#### CONTENTS

Operation	Description	Page
	Specifications .....	2
	Tightening Torques .....	3
	Special Tools .....	4
	Description and Operation .....	4
	Cross-Sectional Views .....	4
	Troubleshooting .....	6
	Overhaul .....	7
<b>21 110 85</b>	Clutch-Reverser Casing .....	7
	Removal .....	7
	Disassembly .....	7
	Assembly .....	10
	Installation .....	10



---

## SECTION 21 - TRANSMISSIONS

BOOK 2 - 87053392

### Chapter 3 - Reverser and Creeper Unit for 20 x 12 Mechanical Shuttle Transmission (Optional for TL80A, TL90A Standard and all Deluxe Models)

#### CONTENTS

Operation	Description	Page
	Specifications .....	2
	Tightening Torques .....	3
	Special Tools .....	4
	Description and Operation .....	6
	Cross-Sectional Views .....	6
	Troubleshooting .....	8
	Overhaul .....	9
<b>21 110 87</b>	Reverser-Clutch Casing and Creeper Unit .....	9
	Removal .....	9
	Disassembly .....	9
	Assembly .....	13
	Installation .....	14

---

## SECTION 21 - TRANSMISSIONS

BOOK 2 - 87053392

### Chapter 4 - 24 x 24 Dual Command Power Shuttle (TL80A, TL90A, TL100A Deluxe Models)

#### CONTENTS

Operation	Description	Page
	Specifications .....	2
	Tightening Torques .....	4
	Special Tools .....	6
	Description and Operation .....	8
	Cross-Sectional Views .....	8
	Overhaul .....	18
<b>21 110 88</b>	Clutch Casing with Power Shuttle and Dual Command .....	18
	Removal .....	18
	Disassembly .....	18
	Assembly .....	24
	Installation .....	24
<b>21 154 60</b>	Clutch (A) .....	25
	Disassembly .....	25
	Assembly .....	27
	Installing on Clutch Casing .....	28
<b>21 154 60</b>	Clutch (B) .....	30
	Disassembly - Assembly .....	30

---

# SECTION 23 - FWD TRANSFER BOX

BOOK 2 - 87053392

## Chapter 1 - FWD Transfer Box

### CONTENTS

Operation	Description	Page
	Specifications .....	2
	Tightening Torques .....	3
	Special Tools .....	4
	Description and Operation .....	5
	Cross-Sectional Views .....	5
	Electro-Hydraulic Four Wheel Drive (FWD) .....	7
	Troubleshooting .....	8
	Overhaul .....	9
<b>23 202 20</b>	Services Control Valve .....	9
	Removal .....	9
	Installation .....	11
	Disassembly .....	12
	Assembly .....	13
<b>23 202 50</b>	Drive Gear .....	14
	Removal .....	14
	Installation .....	18
<b>23 202 52</b>	Drive Gear Housing .....	19
	Removal .....	19
	Installation .....	22

---

# SECTION 25 - FRONT AXLE MECHANICAL TRANSMISSION

BOOK 2 - 87053392

## Chapter 1 - Front Axle Mechanical Transmission

### CONTENTS

Operation	Description	Page
	Specifications .....	2
	Tightening Torques .....	4
	Special Tools .....	6
	Description and Operation .....	9
	Cross-Sectional Views .....	9
	Limited-Slip Self-Locking Differential .....	12
	Front Differential Lock .....	13
	Troubleshooting .....	14
	Overhaul .....	15
<b>25 100 30</b>	Front Axle .....	15
	Removal .....	15
	Installation .....	18
	Correctly Installing Axle Support to the Engine .....	19
	Disassembly .....	20
	Assembly .....	28
<b>25 102 24</b>	Front Axle Differential .....	29
	Backlash Between Side and Planetary Pinion Teeth .....	29
<b>25 102 27</b>	Front Axle Differential with Limited-Slip Unit .....	30
	Removal .....	30
	Disassembly .....	31
	Assembly .....	31
	Installation .....	31
<b>25 104 34</b>	Front Differential Lock Clutch Assembly .....	32
	Disassembly .....	32
	Assembly .....	33
<b>25 108 30</b>	Front Epicyclic Final Drive .....	34
	Removal .....	34
	Installation .....	35
	Wheel Hub Seal Replacement .....	37
<b>25 108 46</b>	Steering Knuckle Pins and Bearings Replacement .....	38
	Adjustments .....	39
	Stub Axle .....	39
	Pinion .....	41
	Differential .....	45

---

# SECTION 27 - REAR AXLE MECHANICAL TRANSMISSION

BOOK 2 - 87053392

## Chapter 1 - Rear Axle Mechanical Transmission

### CONTENTS

Operation	Description	Page
	Specifications .....	2
	Drive and Differential Data .....	2
	Final Drive Data .....	3
	Tightening Torques .....	3
	Special Tools .....	5
	Description and Operation .....	10
	Sectional Views .....	10
	Hydraulically Controlled Rear Differential Lock .....	14
	Troubleshooting .....	15
	Drive and Differential .....	15
	Final Drive .....	15
	Differential Lock .....	16
	Overhaul .....	17
<b>21 118 12</b>	Rear Gearbox - Transmission Casing .....	17
	Removal .....	17
	Installation .....	36
	Disassembly .....	39
	Assembly, Adjustment, Installation .....	47
	Final Drive Casing .....	59
	Removal .....	59
	Installation .....	61
	Epicyclic Final Drive .....	62
	Disassembly .....	62
	Assembly .....	62
<b>27 120 34</b>	Drive Wheel Shaft .....	63
	Disassembly .....	63
	Assembly .....	64

---

# SECTION 31 - POWER TAKE-OFF

BOOK 3 - 87580877

## Chapter 1 - Mechanical Power Take-Off

### CONTENTS

<b>Operation</b>	<b>Description</b>	<b>Page</b>
	Specifications .....	2
	Special Tools .....	4
	Tightening Torques .....	5
	Description and Operation .....	6
	Sectional Views .....	6
	Mechanically Operated PTO .....	8
	Troubleshooting .....	10
	Overhaul .....	11
<b>31 112 20</b>	Power Take-Off Housing .....	11
	Removal .....	11
	Installation .....	13
<b>31 112 45</b>	Power Take-Off Shafts .....	14
	Disassembly .....	14
	Assembly .....	16

---

# SECTION 31 - POWER TAKE-OFF

BOOK 3 - 87580877

## Chapter 2 - Electro-Hydraulic Power Take-Off

### CONTENTS

Operation	Description	Page
	Specification . . . . .	2
	Special Tools . . . . .	4
	Tightening Torques . . . . .	5
	Description and Operation . . . . .	6
	Sectional Views . . . . .	6
	Electro-Hydraulic PTO . . . . .	10
	PTO Engagement . . . . .	11
	Troubleshooting . . . . .	18
	Overhaul . . . . .	19
<b>31 114 64</b>	PTO Clutch Brake . . . . .	19
	Removal . . . . .	19
	Installation . . . . .	21
<b>31 116 21</b>	PTO Housing . . . . .	22
	Removal . . . . .	22
	Installation . . . . .	25
	Disassembly . . . . .	26
	Assembly . . . . .	32

---

# SECTION 33 - BRAKES

BOOK 3 - 87580877

## Chapter 1 - Brakes

### CONTENTS

<b>Operation</b>	<b>Description</b>	<b>Page</b>
	Specifications .....	2
	Tightening Torques .....	3
	Description of Operation .....	4
	Sectional Views .....	4
	Troubleshooting .....	7
	Overhaul .....	8
<b>33 110 08</b>	Handbrake Lever .....	8
	Adjustment .....	8
	Parking Brake Housing .....	9
	Removal .....	9
	Disassembly .....	9
	Assembly .....	11
	Installation .....	11
<b>33 202 04</b>	Brake System Bleeding .....	12
<b>33 202 46</b>	Brake Pump .....	13
	Removal .....	13
	Installation .....	14
	Adjustment of Pedal Travel .....	14
<b>33 202 60</b>	Brake Units .....	15
	Removal .....	15
	Installation .....	18



---

# SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 87580877

## Chapter 1 - Hydraulic System Description

### CONTENTS

<b>Operation</b>	<b>Description</b>	<b>Page</b>
	Specifications .....	2
	Precautionary Statements .....	3
	Description and Operation .....	4
	Power Steering and Lift Pump Components .....	4
	Hydraulic System Configurations .....	5
	Hydraulic System - General Description .....	6
	Hydraulic Power Lift (HPL) Control .....	7
	Rear Auxiliary (Remote) Control Valves .....	11
	Rear Remote Valve Arrangement .....	12
	Mid-Mount Control Remote Control Valves .....	13
	Auxiliary Control Valve Oil Flow .....	14

---

## SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 87580877

### Chapter 2 - Mechanically Operated Hydraulic Power Lift (HPL)

#### CONTENTS

<b>Operation</b>	<b>Description</b>	<b>Page</b>
	Specifications .....	2
	Torque Valves .....	4
	Sectional Views .....	7
	Special Tools .....	6
	Troubleshooting .....	9
	Description and Operation .....	10
	Hydraulic Power Lift (HPL) Control Valve Oil Flow .....	10
	Lower Phase .....	10
	Neutral Phase .....	12
	Lift Phase .....	14
	Overhaul .....	16
	HPL Cover .....	16
	Removal .....	16
	Disassembly .....	20
	Assembly .....	24
	Adjusting the HPL on a Workbench .....	26
	Adjusting the HPL on the Tractor .....	39
	Fast Raise/Lower Control Upper Stroke Limit .....	42
	HPL Control Valve .....	43
	Removal .....	43
	Disassembly .....	45
	Assembly .....	49
	Installation .....	50
	HPL Pump Seals .....	51
	Lift Pressure Relief Valve .....	52

---

## SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 87580877

### Chapter 3 - KONTAK Auxiliary Control Valves (TLA Standard Models)

#### CONTENTS

Operation	Description	Page
	Sectional Views .....	2
	Description and Operation .....	4
	Kontak Remote Valve Oil Flow .....	5
	Double-Acting Raise Position .....	5
	Double-Acting Lower Position .....	5
	Single-Acting Raise Position .....	6
	Single-Acting Lower Position .....	6
	Kontak Remote Valve With Detent Release and Float Oil Flow .....	7
	Double-Acting Raise Position .....	7
	Double-Acting Lower Position .....	7
	Double-Acting Float Position .....	8

## SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 87580877

### Chapter 4 - BOSCH Auxiliary Control Valves (TLA Deluxe Models)

#### CONTENTS

Operation	Description	Page
	Sectional Views .....	2
	Description and Operation .....	5
	Bosch Closed-Center Remote Control Valves With Open-Center Pump .....	5
	Bosch Remote Valve With Detent (Non-Adjustable), Float, and Flow Control Oil Flow ...	6
	Neutral Position .....	7
	Raise Position .....	7
	Lower Position .....	8
	Float Position .....	8
35 204 40	BOSCH Remote Valves .....	9
	Removal .....	9
	Disassembly .....	11
	Assembly .....	15
	Installation .....	17

---

## SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 87580877

### Chapter 5 - Kontak Mid-Mount Auxiliary Control Valves

#### CONTENTS

Operation	Description	Page
	Sectional Views .....	2
	Torque Values .....	4
	Description and Operation .....	5
	Kontak Mid-Mount Remote Valve Oil Flow .....	5
35 204 46	Flow Control Valve .....	7
	Disassembly .....	7
	Assembly .....	9
35 204 46	Mid-Mount Remote Valves .....	11
	Disassembly .....	11
	Assembly .....	11

## SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 87580877

### Chapter 6 - Low Pressure Hydraulic System

#### CONTENTS

Operation	Description	Page
	Low-Pressure, Steering and Lubrication Circuit .....	2
	Description and Operation .....	2
	Low Pressure Circuit Hydraulic Pump .....	2
	Power Shuttle Transmissions with Dual Command .....	3
	Services Control Valve (Models with Power Shuttle Transmission) .....	4
	Services Control Valve (Models with Mechanical Shuttle Transmission) .....	4
	Lubrication Oil Flow on TLA Models with Power Shuttle Transmission and Dual Command .....	5
	Oil Flow .....	6
	12x12 Synchro Command Mechanical Shuttle Transmission on TL80A, TL90A and TL100A Standard Models .....	6
	24x24 Dual Command Power Shuttle Transmission on TL80A, TL90A and TL100A Deluxe Models .....	7
	Rear Differential Lock (Hydraulic Control) on all TL80A, TL90A and TL100A Deluxe Models and on Standard Models with FWD .....	8
	Front Differential Lock (Hydraulic Control) on TL80A, TL90A and TL100A Deluxe Models with FWD .....	10
	Electro-Hydraulically Disengaged Four-Wheel Drive (FWD) - All Models .....	11
	Power Take-Off [Electro-Hydraulic Engagement] (TLA Deluxe models) .....	12