

Product: John Deere 5210, 5310, 5410, and 5510 Tractors Service Repair Technical Manual

Full Download: <https://www.arepairmanual.com/downloads/john-deere-5210-5310>

[-5410-and-5510-tractors-service-repair-technical-manual/](https://www.arepairmanual.com/downloads/john-deere-5210-5310-5410-and-5510-tractors-service-repair-technical-manual/)

5210, 5310, 5410, and 5510 Tractors



TECHNICAL MANUAL 5210, 5310, 5410, and 5510 Tractors TM1716 26APR04 (ENGLISH)

For complete service information also see:

Component Technical Manual 3029 2.9L	
Engine	CTM125
Component Technical Manual 4045 4.5L	
Engine	CTM104
Component Technical Manual 4045 4.5L	
Mechanical Fuel Systems	CTM207
Alternators and Starting Motors.....	CTM77



John Deere Augusta Works

LITHO IN U.S.A.

Sample of manual. Download All 1436 pages at:

<https://www.arepairmanual.com/downloads/john-deere-5210-5310-5410-and-5510-tractors-service-repair-technical-manual/>

Introduction

Foreword

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.

 This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

DX,TMIFC -19-29SEP98-1/1

Sample of manual. Download All 1436 pages at:

<https://www.arepairmanual.com/downloads/john-deere-5210-5310-5410-and-5510-tractors-service-repair-technical-manual/>

TM1716 (26APR04)

5210, 5310, 5410, and 5510 Tractors

042604

PN=2

Contents

SECTION 10—General Information	10
Group 05—Safety	
Group 10—General Specifications	
Group 20—Fuel and Lubricants	
Group 25—Serial Number Locations	
Group 30—Features and Accessories	
SECTION 20—Engine Repair	20
Group 05—Engine	
Group 10—Cooling System	
SECTION 30—Fuel and Air Repair	30
Group 05—Fuel System	
Group 10—Air Intake System	
Group 15—Speed Control Linkage	
SECTION 40—Electrical Repair	40
Group 05—Battery, Starter and Alternator	
Group 10—Electrical System Components	
Group 15—Wiring Harness	
SECTION 50—Power Train Repair	50
Group 05—Clutch Housing	
Group 10—Clutch Assembly— CollarShift/SyncShuttle™ Transmissions	
Group 11—Clutch Assembly—PowrReverser™ Transmission	
Group 12—PowrReverser™	
Group 15—CollarShift/SyncShuttle™ Transmission	
Group 16—PowrReverser™ Transmission	
Group 20—Rear PTO Drive Shaft	
Group 25—Differential	
Group 30—Final Drives	
Group 35—Mechanical Front Wheel Drive	
Group 40—Creeper Assembly	
SECTION 60—Steering and Brake Repair	60
Group 05—Steering Repair	
Group 10—Brake Repair	
SECTION 70—Hydraulic Repair	70
Group 05—Hydraulic Pump and Filter	
Group 06—Hydraulic Oil Cooler	
Group 10—Rockshaft	
Group 15—Dual Selective Control Valve	
SECTION 80—Miscellaneous Repair	80
Group 05—Front Axle—2WD	
Group 10—Wheels	
Group 15—3-Point Hitch	
SECTION 90—Operator Station Repair	90
Group 05—Seat and Support	
Group 06—Control Console and Panel—Tractors Without Cab	
Group 10—ROLL-GARD	
Group 15—Cab Components	
Group 20—Air Conditioning System	
Group 25—Heating System	
SECTION 210—Operational Checkout Procedures	210
Group 10—Operational Checkout Procedures	
SECTION 220—Engine Operation, Tests, and Adjustments	210
Group 05—Component Location	
Group 10—Theory of Operation	
Group 15—Diagnosis, Tests, and Adjustments	
SECTION 230—Fuel/Air Operation, Tests, and Adjustments	210
Group 05—Component Location	
Group 10—Theory of Operation	
Group 15—Diagnosis, Tests and Adjustments	
SECTION 240—Electrical System Operation, Tests & Adjust	210
Group 05—Component Location	
Group 10—Theory of Operation	
Group 15—Diagnosis, Test and Adjust	
Group 20—Wiring Schematics	
SECTION 250—Power Train Operation, Tests, and Adjustments	210
Group 05—Component Location—Collar Shift and	
Continued on next page	210

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT © 2004
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION® Manual
Previous Editions
Copyright © 2000

10

SyncShuttle™ Transmissions

Group 06—Component Location—PowrReverser™
Transmission

Group 10—Theory of Operation—Collar Shift and
SyncShuttle™ Transmissions

Group 11—Theory of Operation—PowrReverser™
Transmission

Group 15—Diagnosis, Tests, and Adjustments—
CS/SS Transmissions

Group 16—Diagnosis, Tests, and Adjustments—
PowrReverser™

20

30

SECTION 260—Steering and Brake Operation, Tests, and Adjustments

Group 05—Component Location

Group 10—Theory of Operation

Group 15—Diagnosis, Tests and Adjustments

40

SECTION 270—Hydraulic System Operation, Tests, and Adjustments

Group 05—Component Location

Group 10—Theory of Operation

Group 15—Diagnosis

Group 16—Hydraulic Tests—Without SCV

Group 17—Hydraulic Tests—With SCV

Group 18—Hydraulic Tests—All

Group 19—Adjustments

Group 20—Hydraulic Schematics

50

60

SECTION 290—Operator Station

Group 05—Component Location

Group 10—Theory of Operation

Group 15—Diagnosis, Tests, and Adjustments

70

SECTION 299—Dealer Fabricated Tools

Group 00—Dealer Fabricated Tools

80

90

210

Contents

220

230

240

250

260

270

290

299

INDX

Contents

220
230
240
250
260
270
290
299
INDX

Section 10

General Information

Contents

Page	Page
Group 05—Safety	10-05-1
Group 10—General Specifications	
Machine Specifications—5210 and 5310	10-10-1
Travel Speeds—5210 and 5310	10-10-7
Machine Specifications—5410	10-10-10
Travel Speeds—5410	10-10-13
Machine Specifications—5510	10-10-16
Travel Speeds—5510	10-10-19
Service Recommendations for O-Ring	
Boss Fittings	10-10-21
Service Recommendations for Flat Face	
O-Ring Seal Fittings	10-10-23
Metric Cap Screw Torque Values—Grade	
7	10-10-24
Metric Bolt and Cap Screw Torque Values	10-10-25
Unified Inch Bolt and Cap Screw Torque	
Values	10-10-26
Abbreviations	10-10-27
Group 20—Fuel and Lubricants	
Diesel Fuel Specifications	10-20-1
Storing Fuel	10-20-1
Do Not Use Galvanized Containers	10-20-2
Fill Fuel Tank	10-20-2
Diesel Engine Oil	10-20-3
Diesel Engine Coolant	10-20-4
Liquid Coolant Conditioner	10-20-5
Transmission and Hydraulic Oil	10-20-6
MFWD Gear Oil	10-20-7
Grease (Specific Application)	10-20-7
Grease	10-20-8
Alternative and Synthetic Lubricants	10-20-9
Lubricant Storage	10-20-9
Group 25—Serial Number Locations	
Serial Numbers	10-25-1
Product Identification Number Location	10-25-1
Engine Serial Number Location	10-25-1
Fuel Injection Pump Serial Number Location	10-25-1
Alternator Serial Number Location	10-25-2
Power Steering Valve Serial Number	
Location	10-25-2
Starter Serial Number Location	10-25-2
Transmission Serial Number Location	10-25-2
Front Axle (2WD) Serial Number Location	10-25-3
Mechanical Front Wheel Drive (MFWD) Serial Number Location	10-25-3
Air Conditioning Compressor Serial Number Location	10-25-3
Group 30—Features and Accessories	
Features and Accessories	10-30-1
Standard Features—5210 and 5310	10-30-2
Standard Features—5410 and 5510	10-30-3
Standard Features—5210 through 5510	10-30-4
Factory Installed Optional Equipment (5210—5510)	10-30-5
Field Installed Optional Kits and Accessories—5210 Through 5510	10-30-6

Contents

10

Recognize Safety Information

This is a safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.



DX,ALERT -19-29SEP98-1/1

T81389 -UN-07DEC88

Understand Signal Words

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.

⚠ DANGER**⚠ WARNING****⚠ CAUTION**

DX,SIGNAL -19-03MAR93-1/1

TS187 -19-30SEP88

Follow Safety Instructions

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.



TS201 -UN-23AUG88

DX,READ -19-03MAR93-1/1

Handle Fluids Safely—Avoid Fires

When you work around fuel, do not smoke or work near heaters or other fire hazards.

Store flammable fluids away from fire hazards. Do not incinerate or puncture pressurized containers.

Make sure machine is clean of trash, grease, and debris.

Do not store oily rags; they can ignite and burn spontaneously.



TS227 -UN-23AUG88

DX,FLAME -19-29SEP98-1/1

Prevent Battery Explosions

Keep sparks, lighted matches, and open flame away from the top of battery. Battery gas can explode.

Never check battery charge by placing a metal object across the posts. Use a volt-meter or hydrometer.

Do not charge a frozen battery; it may explode. Warm battery to 16°C (60°F).



TS204 -UN-23AUG88


DX,SPARKS -19-03MAR93-1/1

Prepare for Emergencies

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

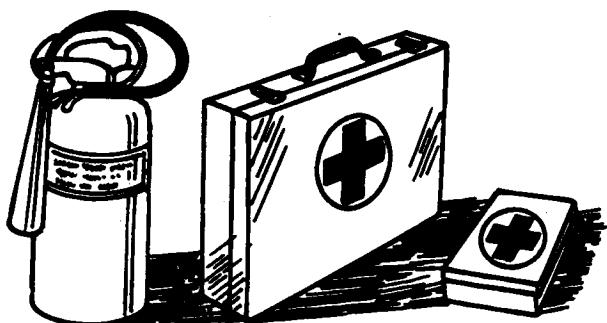

TS291 -UN-23AUG88

DX,FIRE2 -19-03MAR93-1/1

Prevent Acid Burns

Sulfuric acid in battery electrolyte is poisonous. It is strong enough to burn skin, eat holes in clothing, and cause blindness if splashed into eyes.

Avoid the hazard by:


1. Filling batteries in a well-ventilated area.
2. Wearing eye protection and rubber gloves.
3. Avoiding breathing fumes when electrolyte is added.
4. Avoiding spilling or dripping electrolyte.
5. Use proper jump start procedure.

If you spill acid on yourself:

1. Flush your skin with water.
2. Apply baking soda or lime to help neutralize the acid.
3. Flush your eyes with water for 15—30 minutes. Get medical attention immediately.

If acid is swallowed:

1. Do not induce vomiting.
2. Drink large amounts of water or milk, but do not exceed 2 L (2 quarts).
3. Get medical attention immediately.

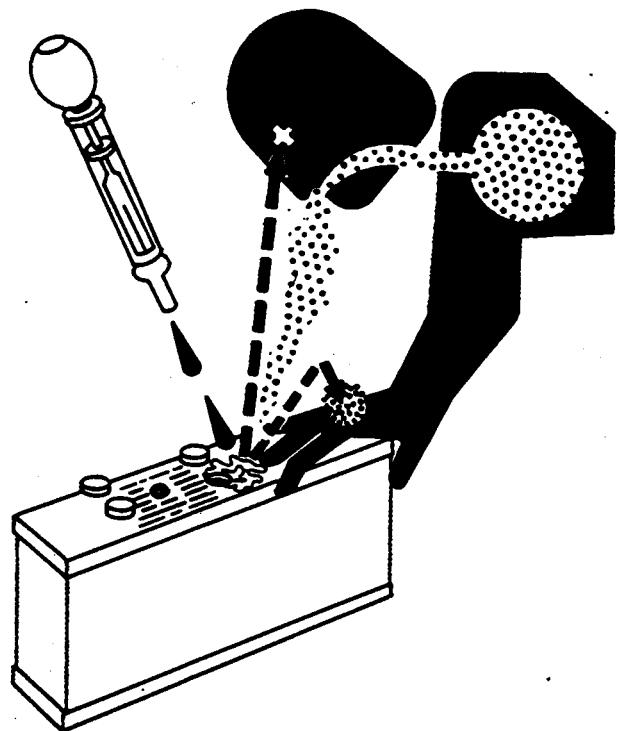

TS203 -UN-23AUG88

DX,POISON -19-21APR93-1/1

Service Cooling System Safely

Explosive release of fluids from pressurized cooling system can cause serious burns.

Shut off engine. Only remove filler cap when cool enough to touch with bare hands. Slowly loosen cap to first stop to relieve pressure before removing completely.



TS281 -UN-23AUG88

DX,RCAP -19-04JUN90-1/1

Handle Chemical Products Safely

Direct exposure to hazardous chemicals can cause serious injury. Potentially hazardous chemicals used with John Deere equipment include such items as lubricants, coolants, paints, and adhesives.

A Material Safety Data Sheet (MSDS) provides specific details on chemical products: physical and health hazards, safety procedures, and emergency response techniques.

Check the MSDS before you start any job using a hazardous chemical. That way you will know exactly what the risks are and how to do the job safely. Then follow procedures and recommended equipment.

(See your John Deere dealer for MSDS's on chemical products used with John Deere equipment.)



TS1132 -UN-26NOV90

DX,MSDS,NA -19-03MAR93-1/1


Avoid High-Pressure Fluids

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A.

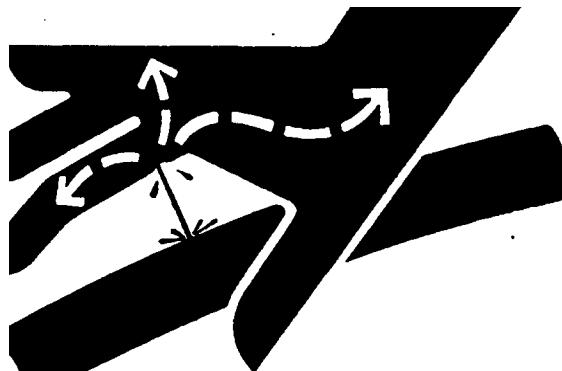


X9811 -UN-23AUG88

DX,FLUID -19-03MAR93-1/1

Park Machine Safely

Before working on the machine:

- Lower all equipment to the ground.
- Shift transmission to PARK.
- Engage park brake if equipped.
- Stop the engine and remove the key.
- Disconnect the battery ground strap.
- Hang a "DO NOT OPERATE" tag in operator station.

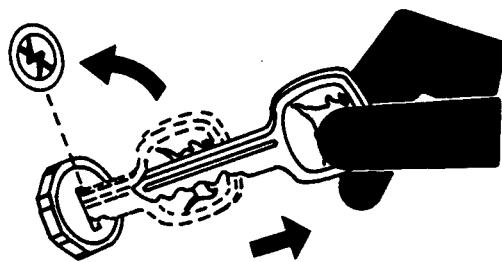


TS230 -UN-24MAY89

CED,OUO1085,7 -19-26JUL00-1/1

Support Machine Properly

Always lower the attachment or implement to the ground before you work on the machine. If you must work on a lifted machine or attachment, securely support the machine or attachment.

Do not support the machine on cinder blocks, hollow tiles, or props that may crumble under continuous load. Do not work under a machine that is supported solely by a jack. Follow recommended procedures in this manual.

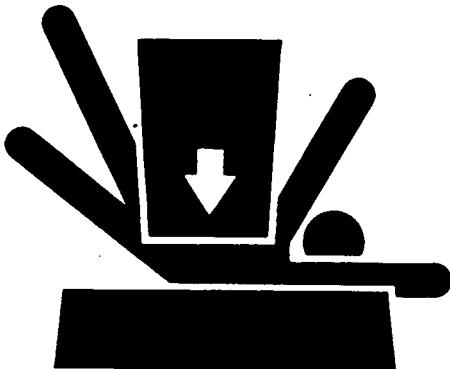

TS229 -UN-23AUG89

CED,OUO1085,8 -19-26JUL00-1/1


Wear Protective Clothing

Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

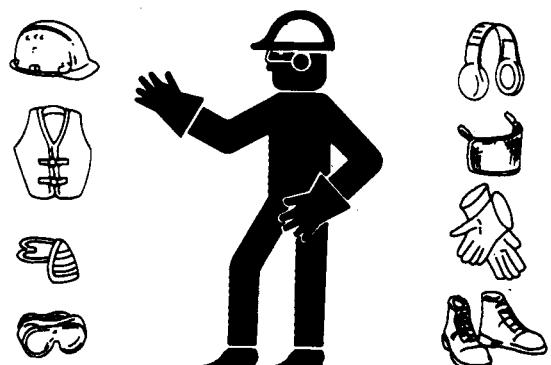


TS206 -UN-23AUG88

DX,WEAR -19-10SEP90-1/1

Work in Clean Area

Before starting a job:

- Clean work area and machine.
- Make sure you have all necessary tools to do your job.
- Have the right parts on hand.
- Read all instructions thoroughly; do not attempt shortcuts.

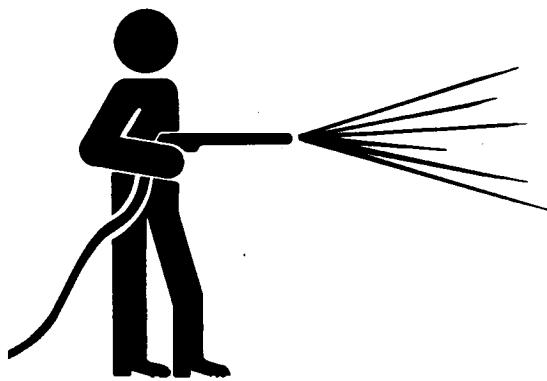


T6642EJ -UN-18OCT88

DX,CLEAN -19-04JUN90-1/1

Service Machines Safely

Tie long hair behind your head. Do not wear a necktie, scarf, loose clothing, or necklace when you work near machine tools or moving parts. If these items were to get caught, severe injury could result.

Remove rings and other jewelry to prevent electrical shorts and entanglement in moving parts.

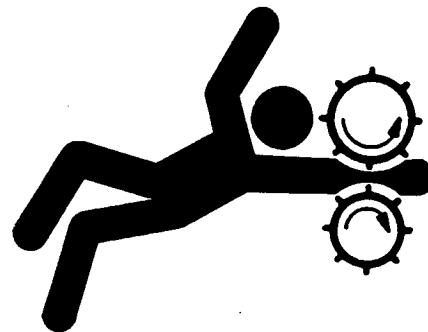

TS228 -UN-23AUG88

DX,LOOSE -19-04JUN90-1/1

Work in Ventilated Area

Engine exhaust fumes can cause sickness or death. If it is necessary to run an engine in an enclosed area, remove the exhaust fumes from the area with an exhaust pipe extension.

If you do not have an exhaust pipe extension, open the doors and get outside air into the area



TS220 -UN-23AUG88

DX,AIR -19-17FEB99-1/1

Illuminate Work Area Safely

Illuminate your work area adequately but safely. Use a portable safety light for working inside or under the machine. Make sure the bulb is enclosed by a wire cage. The hot filament of an accidentally broken bulb can ignite spilled fuel or oil.



TS223 -UN-23AUG88

DX,LIGHT -19-04JUN90-1/1

042604

PN=12

Replace Safety Signs

Replace missing or damaged safety signs. See the machine operator's manual for correct safety sign placement.




DX,SIGNS1 -19-04JUN90-1/1

TS201 -UN-23AUG88

Use Proper Lifting Equipment

Lifting heavy components incorrectly can cause severe injury or machine damage.

Follow recommended procedure for removal and installation of components in the manual.

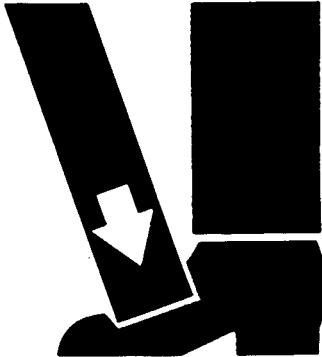


DX,LIFT -19-04JUN90-1/1

TS226 -UN-23AUG88

Keep ROPS Installed Properly

Make certain all parts are reinstalled correctly if the roll-over protective structure (ROPS) is loosened or removed for any reason. Tighten mounting bolts to proper torque.

The protection offered by ROPS will be impaired if ROPS is subjected to structural damage, is involved in an overturn incident, or is in any way altered by welding, bending, drilling, or cutting. A damaged ROPS should be replaced, not reused.

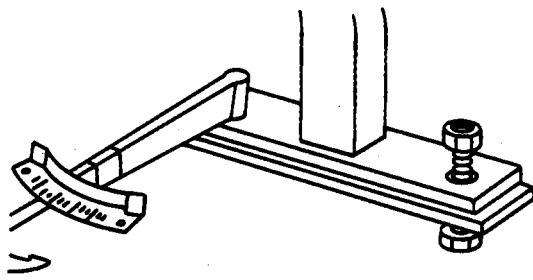

TS212 -UN-23AUG88

DX,ROPS3 -19-03MAR93-1/1

Service Tires Safely


Explosive separation of a tire and rim parts can cause serious injury or death.

Do not attempt to mount a tire unless you have the proper equipment and experience to perform the job.

Always maintain the correct tire pressure. Do not inflate the tires above the recommended pressure. Never weld or heat a wheel and tire assembly. The heat can cause an increase in air pressure resulting in a tire explosion. Welding can structurally weaken or deform the wheel.

When inflating tires, use a clip-on chuck and extension hose long enough to allow you to stand to one side and NOT in front of or over the tire assembly. Use a safety cage if available.

Check wheels for low pressure, cuts, bubbles, damaged rims or missing lug bolts and nuts.

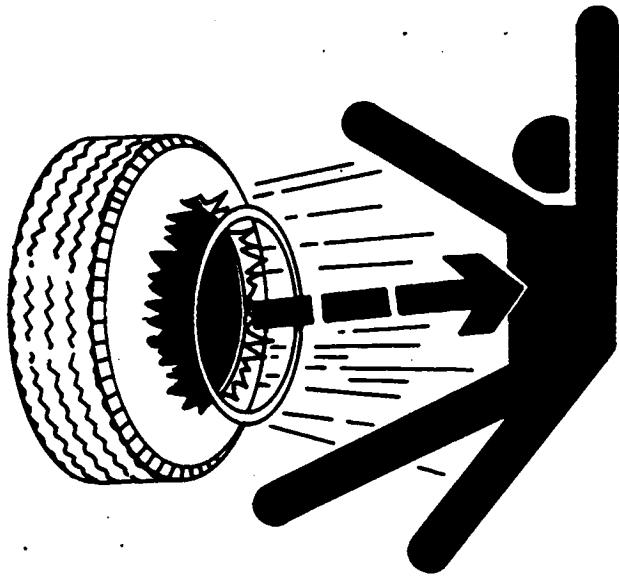

TS211 -UN-23AUG88

DX,RIM -19-24AUG90-1/1

Avoid Harmful Asbestos Dust

Avoid breathing dust that may be generated when handling components containing asbestos fibers. Inhaled asbestos fibers may cause lung cancer.

Components in products that may contain asbestos fibers are brake pads, brake band and lining assemblies, clutch plates, and some gaskets. The asbestos used in these components is usually found in a resin or sealed in some way. Normal handling is not hazardous as long as airborne dust containing asbestos is not generated.

Avoid creating dust. Never use compressed air for cleaning. Avoid brushing or grinding material containing asbestos. When servicing, wear an approved respirator. A special vacuum cleaner is recommended to clean asbestos. If not available, apply a mist of oil or water on the material containing asbestos.

Keep bystanders away from the area.



TS220 -UN-23AUG88

DX,DUST -19-15MAR91-1/1

Avoid Heating Near Pressurized Fluid Lines

Flammable spray can be generated by heating near pressurized fluid lines, resulting in severe burns to yourself and bystanders. Do not heat by welding, soldering, or using a torch near pressurized fluid lines or other flammable materials. Pressurized lines can be accidentally cut when heat goes beyond the immediate flame area.



TS953 -UN-15MAY93-1/1

DX,TORCH -19-03MAR93-1/1

Remove Paint Before Welding or Heating


Avoid potentially toxic fumes and dust.

Hazardous fumes can be generated when paint is heated by welding, soldering, or using a torch.

Do all work outside or in a well ventilated area. Dispose of paint and solvent properly.

Remove paint before welding or heating:

- If you sand or grind paint, avoid breathing the dust. Wear an approved respirator.
- If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers and other flammable material from area. Allow fumes to disperse at least 15 minutes before welding or heating.

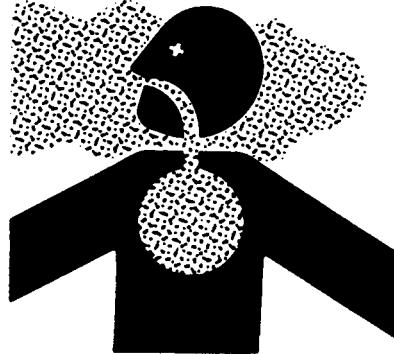

TS220 -UN-23AUG88

DX,PAINT -19-03MAR93-1/1

Use Proper Tools

Use tools appropriate to the work. Makeshift tools and procedures can create safety hazards.

Use power tools only to loosen threaded parts and fasteners.

For loosening and tightening hardware, use the correct size tools. DO NOT use U.S. measurement tools on metric fasteners. Avoid bodily injury caused by slipping wrenches.

Use only service parts meeting John Deere specifications.



TS779 -UN-08NOV89

DX,REPAIR -19-17FEB99-1/1

Dispose of Waste Properly


Improperly disposing of waste can threaten the environment and ecology. Potentially harmful waste used with John Deere equipment include such items as oil, fuel, coolant, brake fluid, filters, and batteries.

Use leakproof containers when draining fluids. Do not use food or beverage containers that may mislead someone into drinking from them.

Do not pour waste onto the ground, down a drain, or into any water source.

Air conditioning refrigerants escaping into the air can damage the Earth's atmosphere. Government regulations may require a certified air conditioning service center to recover and recycle used air conditioning refrigerants.

Inquire on the proper way to recycle or dispose of waste from your local environmental or recycling center, or from your John Deere dealer.

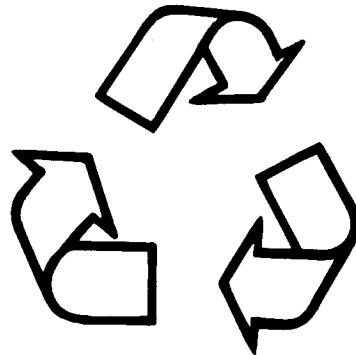

TS1133 -UN-26NOV90

DX,DRAIN -19-03MAR93-1/1

Live With Safety

Before returning machine to customer, make sure machine is functioning properly, especially the safety systems. Install all guards and shields.



10
05
11

TS231 -19-07OCT88

DX,LIVE -19-25SEP92-1/1

Machine Specifications—5210 and 5310

NOTE: Specifications and design subject to change without notice.

5210 Tractor

Item	Measurement	Specification
Engine	Make Type Model Aspiration Horsepower Rated Engine Speed Operating Range Number of Cylinders Displacement Bore and Stroke Compression Ratio Fast Idle Slow Idle Start Aid Firing Order Timing Lubrication Cooling Air Cleaner Engine Shutoff	John Deere Diesel CD3029DLV50 Natural 40 kW (53 hp) 2400 rpm 1600—2400 rpm 3 2.9 L (179 cu in.) 106 x 110 mm (4.19 x 4.33 in.) 17.8:1 2625 ± 25 rpm 825 ± 25 rpm Air heater 1-2-3 18° BTDC Pressurized Liquid cooled Dry type w/safety element Key switch
Fuel System	Type Injection Pump Type	Direct injection Rotary w/electric shutoff
Electrical System	Type Battery Size Alternator Without Cab Alternator With Cab	12 Volt 700 cold cranking amps at -18° C 40 amp 60 amp
Drive Train	Transmission Type Number of Speeds Final Drive Clutch	CollarShift (standard) SyncShuttle™ (optional) PowrReverser™ (optional) 9 forward, 3 reverse (SyncShuttle™) 12 forward, 12 reverse (PowrReverser™) Planetary Dual, dry Multi-disk, wet (PowrReverser™)

Continued on next page

General Specifications

10
10
2

Item	Measurement	Specification
Steering/Brakes	Steering Brakes	Hydrostatic power Wet disk Self-equalizing Self-adjusting
Hydraulic System	Type Working Pressure	Open Center 18995—19700 kPa (190—197 bar) (2755—2855 psi)
	Pump Type Capacity Hitch Lift Capacity at 610 mm (24 in.) Behind Hitch Balls Lift Control Type	Tandem gear (68.8 L/min 18.2 gpm) 1530 kg (3374 lb)
Rear PTO ¹	Type Horsepower (Standard Mode) Speed (540 Standard Mode) @ 2400 rpm Engine Speed Speed (540E Economy Mode) @ 1700 rpm Engine Speed	Fully independent 34 kW (45 hp) 540 rpm
Capacities	Fuel Tank (Open Station) Fuel Tank (Cab Tractors) Cooling System Engine Crankcase w/Filter Hydraulic System MFWD Wheel Hubs MFWD Differential Housing	68 L (18 U.S. gal) 83 L (22 U.S. gal) 9.5 L (10 U.S. qt) 8.5 L (9 U.S. qt) 38 L (10 U.S. gal) 0.6 L (0.63 U.S. qt) 5 L (5.3 U.S. qt)

¹540E Economy Mode available only on SyncSuttle™ Transmission.

Continued on next page

CED,OUO1085.9 -19-03APR02-2/6

General Specifications

Item	Measurement	Specification	10 10 3
Tires (Standard Equipment)	2WD Front 2WD Rear MFWD Front MFWD Rear	6.50—16 6PR F2 13.6—28 4PR R1 8.3—24 4PR R1 13.6—28 4PR R1	
Overall Dimensions (Standard Equipment) ²	Drawbar Ground Clearance Front Axle Ground Clearance (2WD) Front Axle Ground Clearance (MFWD) Overall Length without Hitch and Drawbar Overall Width (Maximum) Height to Top of Steering Wheel Height to Top of ROPS (Add 4 Inches if Equipped with a Canopy)	364 mm (14.3 in.) 478 mm (19 in.) 430 mm (17 in.) 3150 mm (124 in.) 2402 mm (94.6 in.) 1600 mm (63 in.) 2254 mm (88.7 in.) extended	
	Height to Top of Cab from Center Line of Rear Axle Approximate Weight (2WD) Approximate Weight (MFWD)	1948 mm (76.7 in.) folded 1844 mm (72.6 in.) 1982 kg (4370 lb) 2145 kg (4730 lb)	

²Weights will vary slightly with optional tires. Add 1000 lbs. to weight of tractor if equipped with a cab.

Continued on next page

CED,OUO1085,9 -19-03APR02-3/6

5310 Tractor

Item	Measurement	Specification
Engine	Make	John Deere
	Type	Diesel
	Model	CD3029TLV50
	Aspiration	Turbocharged
	Horsepower	48 kW (64 hp)
	Rated Engine Speed	2400 rpm
	Operating Range	1600—2400 rpm
	Number of Cylinders	3
	Displacement	2.9 L (179 cu in.)
	Bore and Stroke	106 x 110 mm (4.19 x 4.33 in.)
	Compression Ratio	17.8:1
	Fast Idle	2625 ± 25 rpm
	Slow Idle	825 ± 25 rpm
	Start Aid	Air heater
	Firing Order	1-2-3
	Timing	18° BTDC
	Lubrication	Pressurized
	Cooling	Liquid cooled
	Air Cleaner	Dry type w/safety element
	Engine Shutoff	Key switch
Fuel System	Type	Direct injection
	Injection Pump Type	Rotary w/electric shutoff
Electrical System	Type	12 volt
	Battery Size	700 cold cranking amps at -18° C
	Alternator Without Cab	40 amp
	Alternator With Cab	60 amp
Drive Train	Transmision Type	CollarShift (standard) SyncShuttle™ (optional) PowrReverser™ (optional)
	Number of Speeds	9 forward, 3 reverse (SyncShuttle™) 12 forward, 12 reverse (PowrReverser™)
	Final Drive	Planetary
	Clutch	Dual, dry Multi-disk, wet (PowrReverser™)
Steering/Brakes	Steering	Hydrostatic power
	Brakes	Wet disk Self-equalizing Self-adjusting

Continued on next page

CED,OUO1085.9 -19-03APR02-4/6

General Specifications

Item	Measurement	Specification	
Hydraulic System	Type Working Pressure	Open center 18 995—19 700 kPa (190—197 bar) (2755—2855 psi)	10 10 5
	Pump Type Capacity Hitch Lift Capacity at 610 mm (24 in.) Behind Hitch Balls Lift Control Type	Tandem gear 68.8 L/min (18.2 gpm) 1530 kg (3374 lb) Position and depth	
Rear PTO ³	Type Horsepower (Standard Mode) Speed (540 Standard Mode) @ 2400 rpm Engine Speed Speed (540E Economy Mode) @ 1700 rpm Engine Speed	Fully independent 41 kW (55 hp) 540 rpm 540 rpm	
Capacities	Fuel Tank (Open Station) Fuel Tank (Cab Tractors) Cooling System Engine Crankcase w/Filter Hydraulic System MFWD Wheel Hubs MFWD Differential Housing	68 L (18 U.S. gal) 83 L (22 U.S. gal) 9.5 L (10 U.S. qt) 8.5 L (9 U.S. qt) 38 L (10 U.S. gal) 0.6 L (0.63 U.S. qt) 5 L (5.3 U.S. qt)	

³540E Economy Mode available only on SyncShuttle™ Transmission.

Continued on next page

CED,OUO1085.9 -19-03APR02-5/6

General Specifications

10
10
6

Item	Measurement	Specification
Tires (Standard Equipment)	2WD Front 2WD Rear MFWD Front MFWD Rear	7.50—16 6PR F2 14.9—28 6PR R1 9.5—24 4PR R1 14.9—28 6PR R1
Overall Dimensions (Standard Equipment) ²	Drawbar Ground Clearance Front Axle Ground Clearance (2WD) Front Axle Ground Clearance (MFWD) Overall Length without Hitch and Drawbar Overall Width (Maximum) Height to Top of Steering Wheel Height to Top of ROPS (Add 4 Inches to Top of ROPS if Equipped with a Canopy)	364 mm (14.3 in.) 478 mm (19 in.) 430 mm (17 in.) 3150 mm (124 in.) 2402 mm (94.6 in.) 1625 mm (64 in.) 2254 mm (88.7 in.) extended
	Height to Top of Cab from Center Line of Rear Axle Approximate Weight (2WD) Approximate Weight (MFWD)	1973 mm (77.7 in.) folded 1844 mm (72.6 in.) 2064 kg (4550 lb) 2250 kg (4960 lb)

²Weights will vary slightly with optional tires. Add 1000 lbs. to weight of tractor if equipped with a cab.

CED,OUO1085,9 -19-03APR02-6/6

Travel Speeds—5210 and 5310

Item	Measurement	Specification
Travel Speeds for CollarShift or SyncShuttle™ Units at Full Engine RPM with 14.9—28 R1 Rear Tire Types ¹		
Creeper-1 Gear in Forward	Speed	0.3 km/h (0.2 mph)
Creeper-2 Gear in Forward	Speed	0.5 km/h (0.3 mph)
Creeper-3 Gear in Forward	Speed	0.7 km/h (0.4 mph)
A-1st Gear in Forward	Speed	2.0 km/h (1.2 mph)
A-2nd Gear in Forward	Speed	2.1 km/h (1.3 mph)
A-3rd Gear in Forward	Speed	4.0 km/h (2.5 mph)
B-1st Gear in Forward	Speed	4.7 km/h (2.9 mph)
B-2nd Gear in Forward	Speed	6.7 km/h (4.2 mph)
B-3rd Gear in Forward	Speed	9.2 km/h (5.7 mph)
C-1st Gear in Forward	Speed	12.8 km/h (7.9 mph)
C-2nd Gear in Forward	Speed	18.4 km/h (11.5 mph)
C-3rd Gear in Forward	Speed	25.1 km/h (15.6 mph)
Creeper-R Gear in Reverse	Speed	0.6 km/h (0.34 mph)
Reverse-1st Gear	Speed	3.4 km/h (2.1 mph)
Reverse-2nd Gear	Speed	7.8 km/h (4.8 mph)
Reverse-3rd Gear	Speed	21.3 km/h (13.2 mph)

¹Travel speeds will vary with optional rear tires. Creeper assembly is optional.

Continued on next page

OUO1080,0000287 -19-23JUL02-1/3

Item	Measurement	Specification
Travel Speeds for PowrReverser™ Units at Full Engine RPM with 16.9— 30 R1 Rear Tire Types ¹		
Creeper-1 Gear in Forward	Speed	0.24 km/h (0.15 mph)
Creeper-2 Gear in Forward	Speed	0.31 km/h (0.19 mph)
Creeper-3 Gear in Forward	Speed	0.40 km/h (0.25 mph)
Creeper-4 Gear in Forward	Speed	0.54 km/h (0.34 mph)
A-1 Gear in Forward	Speed	1.49 km/h (0.93 mph)
A-2 Gear in Forward	Speed	1.87 km/h (1.16 mph)
A-3 Gear in Forward	Speed	2.42 km/h (1.50 mph)
A-4 Gear in Forward	Speed	2.87 km/h (1.79 mph)
B-1 Gear in Forward	Speed	4.33 km/h (2.69 mph)
B-2 Gear in Forward	Speed	5.42 km/h (3.37 mph)
B-3 Gear in Forward	Speed	7.00 km/h (4.34 mph)
B-4 Gear in Forward	Speed	9.56 km/h (5.94 mph)
C-1 Gear in Forward	Speed	12.2 km/h (7.61 mph)
C-2 Gear in Forward	Speed	15.3 km/h (9.51 mph)
C-3 Gear in Forward	Speed	19.8 km/h (12.3 mph)
C-4 Gear in Forward	Speed	27.0 km/h (16.8 mph)
Creeper-1 Gear in Reverse	Speed	0.28 km/h (0.18 mph)
Creeper-2 Gear in Reverse	Speed	0.35 km/h (0.22 mph)
Creeper-3 Gear in Reverse	Speed	0.46 km/h (0.28 mph)
Creeper-4 Gear in Reverse	Speed	0.62 km/h (0.39 mph)

¹Travel speeds will vary with optional rear tires. Creeper assembly is optional.

General Specifications

Item	Measurement	Specification	10
A-1 Gear in Reverse	Speed	1.72 km/h (1.07 mph)	10
A-2 Gear in Reverse	Speed	2.16 km/h (1.34 mph)	9
A-3 Gear in Reverse	Speed	2.79 km/h (1.74 mph)	
A-4 Gear in Reverse	Speed	3.32 km/h (2.07 mph)	
B-1 Gear in Reverse	Speed	5.01 km/h (3.11 mph)	
B-2 Gear in Reverse	Speed	6.26 km/h (3.89 mph)	
B-3 Gear in Reverse	Speed	8.10 km/h (5.04 mph)	
B-4 Gear in Reverse	Speed	11.0 km/h (6.87 mph)	
C-1 Gear in Reverse	Speed	14.2 km/h (8.80 mph)	
C-2 Gear in Reverse	Speed	17.7 km/h (11.0 mph)	
C-3 Gear in Reverse	Speed	22.9 km/h (14.2 mph)	
C-4 Gear in Reverse	Speed	31.2 km/h (19.4 mph)	

OUO1080,0000287 -19-23JUL02-3/3

Machine Specifications—5410

5410 Tractor

Item	Measurement	Specification
Engine	Make	John Deere
	Type	Diesel
	Model	CD4045DLV50
	Aspiration	Natural
	Horsepower	48 kW (65 hp)
	Rated Engine Speed	2400 rpm
	Number of Cylinders	4
	Displacement	4.5 L (274 cu in.)
	Bore and Stroke	106 x 127 mm (4.19 x 5.00 in.)
	Compression Ratio	17.6:1
	Fast Idle	2625 ± 25 rpm
	Slow Idle	825 ± 25 rpm
	Start Aid	Air heater
	Firing Order	1-3-4-2
	Timing	17° BTDC
	Lubrication	Pressurized
	Cooling	Liquid cooled
	Air Cleaner	Dry type w/safety element
	Engine Shutoff	Key switch
Fuel System	Type	Direct injection
	Injection Pump Type	Rotary w/electric shutoff
Electrical System	Type	12 volt
	Battery Size	700 cold cranking amps at -18°C
	Alternator	40 amp without cab 65 amp with cab
Drive Train	Transmission Type	CollarShift
	Number of Speeds	SyncShuttle™ (optional) PowrReverser™ (optional) 9 Forward, 3 Reverse (SyncShuttle™) 12 Forward, 12 Reverse (PowrReverser™)
	Final Drive	Planetary
	Clutch	Dual, dry Multi-disk, wet (PowrReverser™)

Sample of manual. Download All 1436 pages at:

<https://www.arepairmanual.com/downloads/john-deere-5210-5310-5410-and-5510-tractors-service-repair-technical-manual/>

TM1716 (26APR04)

10-10-10

Continued on next page

OUO1080.0000288 -19-23JUL02-1/3

5210, 5310, 5410, and 5510 Tractors

042604

PN=28