



*JOHN DEERE 9610 MAXIMIZER™ COMBINE WITH 900 SERIES CUTTING PLATFORM*

*MANUFACTURED (1998- )*

*(SPECIFICATIONS AND DESIGN SUBJECT TO CHANGE WITHOUT NOTICE)*

*COPYRIGHT (C) 2000. DEERE & COMPANY. MOLINE, ILLINOIS, USA. ALL RIGHT RESERVED.*

Sample of manual. Download All 1043 pages at:

<https://www.aresairmanual.com/downloads/john-deere-9610-maximizer-combine-service-repair-parts-manual/>

## NOTE

FOR 900 SERIES PLATFORM PARTS INFORMATION, REFER TO JOHN DEERE 900 SERIES PLATFORM PARTS CATALOG - PC-2104.

FOR 40 SERIES CORN HEAD PARTS INFORMATION, REFER TO JOHN DEERE 40 SERIES CORN HEAD PARTS CATALOG - PC-1223.

FOR 50A SERIES ROW-CROP HEAD PARTS INFORMATION, REFER TO JOHN DEERE 50A SERIES ROW-CROP HEAD PARTS CATALOG - PC-1747.

FOR THREE-ROLLER BELT PICKUP PARTS INFORMATION, REFER TO JOHN DEERE THREE-ROLLER BELT PICKUP PARTS CATALOG - PC-2210.

FOR 918 AND 920 DRAPER PARTS INFORMATION, REFER TO JOHN DEERE 918 AND 920 DRAPER PLATFORMS PARTS CATALOG - PC-2212.

FOR 90 SERIES CORN HEAD PARTS INFORMATION, REFER TO JOHN DEERE 90 SERIES CORN HEAD PARTS CATALOG - PC-2404.

## IMPORTANT

THIS PARTS CATALOG CONTAINS PARTS INFORMATION FOR THE 9610 MAXIMIZER™ COMBINE. VINTAGE IS DETERMINED BY THE COMBINE SERIAL NUMBER OR THE PRODUCT IDENTIFICATION NUMBER (PIN). IT IS IMPORTANT THAT THE CORRECT NUMBERS BE USED WHEN ORDERING PARTS.

Sample of manual. Download All 1043 pages at:

<https://www.arepairmanual.com/downloads/john-deere-9610-maximizer-combine-service-repair-parts-manual/>

## PRODUCT INFORMATION NUMBER (PIN) PLATE

THE PRODUCT IDENTIFICATION PLATE (PIN) IS LOCATED NEAR THE RIGHT-HAND SIDE OF THE TOOL BOX.  
AN EXAMPLE OF THE TWO-LINES ON THIS PIN PLATE IS:

HO9610X675000  
COMBINE

(FIRST LINE)

HO - MANUFACTURING UNIT (HARVESTER WORKS)

9610 - MODEL IDENTIFIER

X - CONFIGURATION CODE/MODEL IDENTIFIER SUFFIX

675000 - SEQUENTIAL NUMBER USED IN SERIAL NO. COLUMN

(SECOND LINE)

COMBINE - TYPE OF PRODUCT

## PARTS LISTING INFORMATION

SERIAL NUMBER OR PRODUCT IDENTIFICATION NUMBER (PIN) INFORMATION SHOWS ON WHICH MACHINES PART MAY BE USED; FOR EXAMPLE:

- THE PART CAN BE USED ON ALL MACHINES.
- 000000 THE PART CAN BE USED ON ALL MACHINES UP TO AND INCLUDING THE SERIAL NUMBER LISTED.
- 000000- THE PART CAN BE USED ON ALL MACHINES BEGINNING WITH THE SERIAL NUMBER LISTED.
- 000000-000000 THE PART CAN BE USED ON ALL MACHINES BETWEEN AND INCLUDING SERIAL NUMBERS LISTED.

WHEN XXXXXX'S ARE LISTED IN PLACE OF A SERIAL NUMBER, A SERIAL NUMBER CHANGE WAS MADE, BUT THE EXACT SERIAL NUMBER WAS NOT AVAILABLE WHEN THE CATALOG WAS PRINTED.

### SHORT BLOCK SERIAL NUMBER PLATE

( -RGSB076882500)

RGP3513 -UN-01JAN94




RGP3513

THE REPLACEMENT SHORT BLOCK ASSEMBLY HAS A SERIAL NUMBER PLATE ATTACHED. THE ORIGINAL ENGINE SERIAL NUMBER MUST BE STAMPED ONTO THE NEW PLATE IN THE BLANK SPACE PROVIDED, AS A REFERENCE FOR YOUR DEALER. THE PLATE CAN BE ATTACHED WITH (2) 37H44 DRIVE SCREWS.

- |                                       |                            |
|---------------------------------------|----------------------------|
| 1. DESIGNATES ENGINE MANUFACTURER     | RG - WATERLOO ENGINE WORKS |
| 2. DESIGNATES REPLACEMENT SHORT BLOCK | SB                         |
| 3. DESIGNATES LITERS                  | XXX- 076 (7.6)             |
| 4. DESIGNATES THE PRODUCTION DATE     | 8825                       |
| 5. DESIGNATES COMPONENT SEQUENCE      | 00                         |

## SHORT BLOCK SERIAL NUMBER IDENTIFICATION

RGP4574 -UN-02OCT95

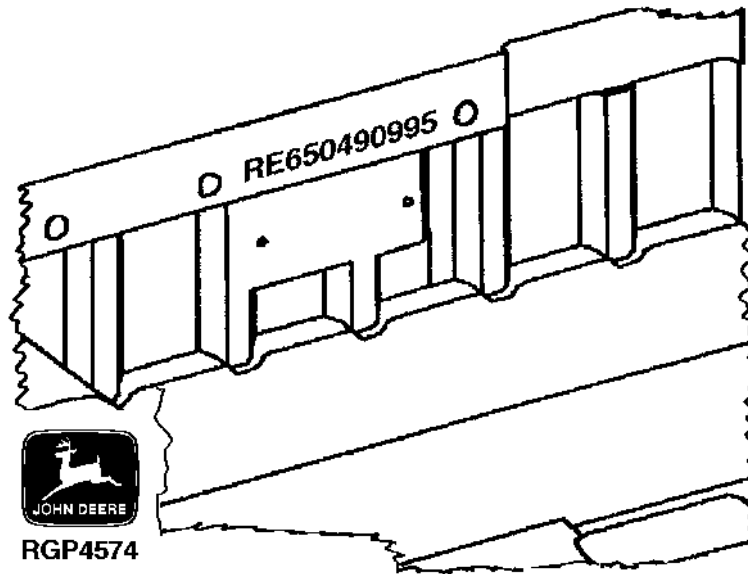

SERIAL NUMBER STAMPED INTO CASTING OF BLOCK NEAR PREVIOUS SERIAL NUMBER PLATE.

EXAMPLE: RE650490995

- |                                   |         |
|-----------------------------------|---------|
| 1. DESIGNATES SERVICE PART NUMBER | RE65049 |
| 2. DESIGNATES MONTH ASSEMBLED     | 09      |
| 3. DESIGNATES YEAR ASSEMBLED      | 95      |

## TWO LINE BAR CODED ENGINE SERIAL NUMBER PLATE

RGP4942

-UN-25JUL97



RGP4942

### FIRST LINE

RG - WATERLOO ENGINE WORKS

6

081 (8.1 LITERS)

H - AIR-TO-AIR

H

XXXXXX

### SECOND LINE

6081HH003

### DEFINES

DESIGNATES ENGINE MANUFACTURER.

DESIGNATES NUMBER OF CYLINDERS.

DESIGNATES LITER DISPLACEMENT.

DESIGNATES TYPE OF AIR INTAKE SYSTEM.

DESIGNATES HARVESTER VEHICLE.

DESIGNATES ENGINE SERIAL NUMBER.

### APPLICATION

9610

## **DIRECTION ARROW**

ARROWS ARE USED WITH ILLUSTRATIONS TO INDICATE THE FRONT OF THE UNIT. "RIGHT-HAND" AND "LEFT-HAND" SIDES ARE DETERMINED BY FACING IN THE DIRECTION OF MACHINE FORWARD TRAVEL.

## **BOX-ENCLOSED ILLUSTRATIONS**

A KEY NUMBER, SHOWN IN THE PARTS LIST, IS ASSIGNED TO A BOX ENCLOSING ALL PARTS SOLD AS A SERVICE ASSEMBLY. A BOX NOT KEYED INCLUDES NON-CURRENT PARTS.

## **KITS**

KIT INFORMATION WILL BE FOUND IMMEDIATELY FOLLOWING THE STORY IN WHICH IT IS USED. THE ILLUSTRATION IS REPEATED WITH ONLY THE KIT PARTS CALLED OUT AND WITH ALL OTHER PARTS SHOWN IN PHANTOM.

## **JDM REMANUFACTURED COMPONENTS**

THE SERVICE PARTS LISTED IN THIS CATALOG ARE INTENDED FOR THE REPAIR OF ORIGINAL EQUIPMENT COMPONENTS. ALTHOUGH MOST SERVICE PARTS MAY BE USED TO REPAIR REMANUFACTURED COMPONENTS, THE REMANUFACTURED DESIGN MAY CHANGE PARTS SUFFICIENTLY SO THAT SERVICE PARTS ARE INADEQUATE OR NOT USABLE.

## **BOLT AND CAP SCREW STRENGTH IDENTIFICATION**

BOLTS AND CAP SCREWS REQUIRED TO HAVE HIGH-STRENGTH QUALITIES EQUIVALENT TO SAE GRADE 8 ARE IDENTIFIED THROUGHOUT THIS CATALOG BY THE DESCRIPTION HS SAE 8. ALL STANDARD BOLTS AND CAP SCREWS ARE SAE GRADE 5 OR LOWER. BOLTS AND CAP SCREWS REQUIRED TO HAVE HIGH-STRENGTH QUALITIES EQUIVALENT TO PROPERTY CLASS 10.9 ARE IDENTIFIED THROUGHOUT THIS CATALOG BY HS 10.9. ALL STANDARD BOLTS AND CAP SCREWS ARE PROPERTY CLASS 8.8 OR LOWER.

## **SI UNITS OF MEASURE**

METRIC DIMENSIONS ARE GIVEN, WHERE APPLICABLE, THROUGHOUT THIS PARTS CATALOG.

## TRADEMARKS

THROUGHOUT THIS PARTS CATALOG, YOU WILL FIND THE FOLLOWING DEERE & COMPANY TRADEMARKS:

DIAL-A-SPEED™  
DIAL-A-MATIC™  
HARVESTRAK™  
CONTOUR MASTER™

POSI-TORQ™  
TORQ-GARD SUPREME®  
QUIK-TATCH™

## CHANGE INDICATOR LINE

CHANGES AFFECTING THE ORDERING OF PARTS ARE IDENTIFIED BY VERTICAL LINES MARKED IN THE LEFT-HAND MARGIN OF REVISED PARTS LISTING IMAGES. A LINE IS ALSO AT THE LEFT-HAND EDGE OF THE SAME PART NUMBER IN THE NUMERICAL INDEX TO SHOW THE LOCATION OF REVISED INFORMATION.

## FUNCTION CODE

(EXAMPLE - FC: 5000)

FUNCTION CODES ARE LOCATED ON EACH PAGE IN THE UPPER RIGHT-HAND CORNER IN THE BOX. THE CODE LISTED IS A GROUPING CODE THAT CAN BE USED FOR WARRANTIES AND FOR DTAC TO IDENTIFY CERTAIN AREAS.

## COMPLETE GOODS LISTINGS

COMPLETE GOODS ARE IN BOLD FACE TYPE. ORDER SEPARATELY. DO NOT INCLUDE ON REPLACEMENT PARTS ORDER.

## FOR INDIVIDUAL HEADERS PARTS CATALOGS REFER TO:

PC-2104 - PARTS CATALOG FOR JOHN DEERE 900 SERIES PLATFORMS  
PC-2210 - PARTS CATALOG FOR JOHN DEERE THREE ROLLER BELT PICK-UP  
PC-2212 - PARTS CATALOG FOR JOHN DEERE 918 AND 920 DRAPER PLATFORMS  
PC-1747 - PARTS CATALOG FOR JOHN DEERE 50A SERIES ROW-CROP HEADS  
PC-1223 - PARTS CATALOG FOR JOHN DEERE 40 SERIES CORN HEADS  
PC-2404 - PARTS CATALOG FOR JOHN DEERE 90 SERIES CORN HEADS

SECTION INDEX

SECTION 10 - GENERAL INFORMATION

SECTION 20 - ENGINE FAN, INTERCOOLER AND SCREENS

SECTION 24 - ENGINE

SECTION 30 - FUEL AND AIR

SECTION 40 - ELECTRICAL

SECTION 50 - POWER TRAIN

SECTION 60 - STEERING AND BRAKES

SECTION 70 - HYDRAULICS

SECTION 80 - SEPARATOR SHELL

SECTION 90 - OPERATOR'S STATION

SECTION 110 - FEEDER HOUSE

SECTION 120 - THRESHING AND SEPARATION

SECTION 121 - DRIVES

SECTION 125 - RESIDUE DISPOSAL

SECTION 130 - CLEAN GRAIN ELEVATOR, GRAIN TANK AND UNLOADING AUGER

SECTION 160 - DIAL-A-MATIC HEADER HEIGHT CONTROL

SECTION 170 - DECALS, BELTS AND CHAINS

SECTION 180 - NUMERICAL INDEX

**ALPHABETICAL INDEX**

GRID		PAGE	GRID		PAGE
	A				
3K6	A/C COMPRESSOR HARDWARE R134A .....	90 - 81	4J5	ARM, CHARGE PUMP MOUNTING .....	121 - 60
3K4	A/C COMPRESSOR HOSE .....	90 - 79	4B18	ARM, DRIVE TIGHTENER, FIXED SPEED .....	110 - 12
3K3	A/C COMPRESSOR MANIFOLD.....	90 - 78	4J1	ARM, FAN DRIVE SPEED CONTROL .....	121 - 56
3K3	A/C COMPRESSOR R134A .....	90 - 78	4C10	ARM, FEEDER HOUSE FLOOR .....	110 - 30
3E11	A/C CONDENSER .....	70 - 84	4H21	ARM, LOCKOUT, DUAL-RANGE .....	121 - 28
1H18	A/C HIGH PRESSURE SWITCH.....	40 - 56	3F17	ARM, REAR LADDER LATCH .....	80 - 16
1E19	ACCESS COVER FUEL INJECTION PUMP .....	24 - 60	4I7	ARM, SECONDARY COUNTERSHAFT DRIVE .....	121 - 38
3B9	ACCUMULATOR PRESSURE GAUGE WIRING HARNESS .....	70 - 2	4J7	ARM, STRAW CHOPPER DRIVE (FRONT).....	121 - 62
3C20	ACCUMULATOR, DUAL, ONE HALF GALLON .....	70 - 40	5F21	ARM, UNLOADING AUGER COUNTERSHAFT DRIVE..	130 - 58
3C22	ACCUMULATOR, ONE GALLON .....	70 - 42	4H11	ARMATURE, HEADER ELECTROMAGNETIC CLUTCH	121 - 18
3C18	ACCUMULATOR, ONE HALF GALLON .....	70 - 38	3J13	ARMREST (L.H.) .....	90 - 62
1D6	ADAPTER, OIL COOLER .....	24 - 23	3J11	ARMREST ADJUSTING MECHANISM, R.H. ....	90 - 60
1D10	ADAPTER, OIL COOLER BYPASS .....	24 - 27	1G3	ARMREST PANEL, OPERATOR'S .....	40 - 14
1H3	ADAPTER, WIRING HARNESS (CONTOUR MASTER)	40 - 40	1G3	ARMREST ROCKER SWITCHES .....	40 - 14
1H5	ADAPTER, WIRING HARNESS (CONTOUR MASTER)	40 - 42	1G1	ARMREST WIRING HARNESS.....	40 - 12
1D4	ADHESIVE,ROCKER ARM COVER GASKET .....	24 - 21	3J9	ARMREST WITH GLOVE BOX (R.H.).....	90 - 58
2G18	ADJUSTABLE REAR AXLE.....	60 - 37	4F19	ARMS, FRAME, PRECLEANER CHAFFER .....	120 - 56
3I15	ADJUSTER, OPERATOR'S SEAT .....	90 - 38	1D3	ARMS, ROCKER .....	24 - 20
3I20	ADJUSTER, OPERATOR'S SEAT LEVER .....	90 - 44	2D23	ARMS, STEERING, CAM LOBE MOTOR (STEERABLE MOTOR).....	50 - 68
4I5	ADJUSTING BRACKET, CYLINDER DRIVE, DUAL-RANGE .....	121 - 36	5B12	ARMS, TAILBOARD - CHOP-TO-BALE .....	125 - 5A
3J11	ADJUSTING MECHANISM, ARMREST, R.H.....	90 - 60	1G3	ASHTRAY .....	40 - 14
1I8	ADJUSTING MOTOR, CONCAVE.....	40 - 72	1E15	ASSEMBLY, CLUTCH (STARTER).....	24 - 56
1I4	ADJUSTING MOTOR, SEPARATOR FAN DRIVE .....	40 - 67	2F23	ATTENUATOR, STEERING HOSES.....	60 - 16
1F7	AIR CLEANER AND INTAKE TUBES.....	30 - 10	5G12	AUGER BELTS .....	170 - 2
1H18	AIR CLEANER PLUGGED SWITCH.....	40 - 56	5C25	AUGER CHAIN TIGHTENER, LOWER TAILINGS .....	125 - 40
1G11	AIR CONDITIONER AND HEATER SWITCH.....	40 - 22	5F20	AUGER COVERS AND CHANNEL, CROSS .....	130 - 56
1E18	AIR CONDITIONER COMPRESSOR FAN PULLEY .....	24 - 59	5D6	AUGER DRIVE SHIELD, UPPER TAILINGS .....	125 - 48
1E18	AIR CONDITIONER COMPRESSOR IDLER PULLEY....	24 - 59	3F21	AUGER DRIVE SHIELDS (R.H.).....	80 - 20
1E18	AIR CONDITIONER COMPRESSOR SUPPORT .....	24 - 59	5D6	AUGER DRIVE, UPPER TAILINGS .....	125 - 48
1G9	AIR CONDITIONER WIRING HARNESS .....	40 - 20	5E3	AUGER HOUSING, LOADING, UPPER CLEAN GRAIN .....	130 - 12
3I6	AIR CONDITIONING AND HEATER DUCTS .....	90 - 29	5E5	AUGER HOUSING, LOADING, UPPER CLEAN GRAIN .....	130 - 14
3J24	AIR CONDITIONING SYSTEM .....	90 - 74	1H13	AUGER SENSOR AND WIRING HARNESS, UNLOADING .....	40 - 50
3J22	AIR CONDITIONING/HEATER AND PRESSURIZING FAN .....	90 - 72	3D13	AUGER SWING SOLENOID CONTROL VALVE .....	70 - 60
3J20	AIR CONDITIONING/HEATER HOUSING AND FILTERS.....	90 - 70	5F5	AUGER SWIVEL SUPPORT AND BRACES .....	130 - 40
1F7	AIR DUCT, AIR CLEANER .....	30 - 10	5E3	AUGER TRANSITION HOUSING .....	130 - 12
4F7	AIR DUCT, CLEANING FAN .....	120 - 44	5C19	AUGER TROUGH, LOWER TAILINGS.....	125 - 34
4F9	AIR DUCT, CLEANING FAN .....	120 - 46	1H13	AUGER WIRING HARNESS, UNLOADING .....	40 - 50
1B21	AIR DUCT, RADIATOR .....	20 - 16	5F1	AUGER, GRAIN TANK, VERTICAL UNLOADING .....	130 - 36
1B9	AIR DUCT, ROTARY SCREEN DOOR.....	20 - 4	5F14	AUGER, HORIZONTAL UNLOADING (17- AND 20-FT.).....	130 - 50
3I5	AIR FILTER, CAB .....	90 - 28	5E7	AUGER, LOADING, CLEAN GRAIN .....	130 - 16
1H18	AIR INLET TEMP SWITCH (253 HP) .....	40 - 56	5E9	AUGER, LOADING, CLEAN GRAIN FOLD .....	130 - 18
3I24	AIR SEAT SUSPENSION .....	90 - 48	5C17	AUGER, LOWER TAILINGS .....	125 - 32
3J1	AIR SEAT SUSPENSION KITS.....	90 - 50	5G13	AUGER, LOWER TAILINGS, BELTS .....	170 - 3
3J3	AIR SEAT SUSPENSION KITS.....	90 - 52	5D6	AUGER, UPPER TAILINGS.....	125 - 48
3J5	AIR SEAT SUSPENSION KITS.....	90 - 54	5F18	AUGERS, GRAIN TANK CROSS .....	130 - 54
3J7	AIR SEAT SUSPENSION KITS.....	90 - 56	4F1	AUGERS, SHOE GRAIN SUPPLY AND HOUSING.....	120 - 38
1G9	AIR SEAT WIRING HARNESS .....	40 - 20	4F3	AUGERS, SHOE GRAIN SUPPLY AND HOUSING.....	120 - 40
3J1	AIR SUSPENSION KITS, SEAT .....	90 - 50	1F18	AUX FIELD LIGHTS SWITCH, OPTIONAL .....	40 - 4
3J3	AIR SUSPENSION KITS, SEAT .....	90 - 52	1F24	AUXILIARY FIELD LIGHTING .....	40 - 10
3J5	AIR SUSPENSION KITS, SEAT .....	90 - 54	2E2	AXLE SHAFT FINAL DRIVE .....	50 - 72
3J7	AIR SUSPENSION KITS, SEAT .....	90 - 56	2B19	AXLE SPACERS (RING AND PINION FINAL DRIVE) .....	50 - 11
3I24	AIR SUSPENSION, SEAT .....	90 - 48	2B20	AXLE SPACERS, PLANETARY FINAL DRIVE .....	50 - 12
1E19	ALTERNATOR ADJUSTING STRAP.....	24 - 60	2C9	AXLE, FINAL DRIVE (RING AND PINION) .....	50 - 26
1E19	ALTERNATOR BRACKET .....	24 - 60	2B18	AXLE, FRONT (PLANETARY FINAL DRIVE) .....	50 - 10
1I6	ALTERNATOR MOUNTING.....	40 - 69	2B17	AXLE, FRONT (RING AND PINION FINAL DRIVE) .....	50 - 9
1E19	ALTERNATOR SUPPORT.....	24 - 60	2G18	AXLE, REAR, ADJUSTABLE.....	60 - 37
1I5	ALTERNATOR, SHEAVE AND BELT - BOSCH.....	40 - 68	2G19	AXLE, REAR, SPINDLES .....	60 - 38
1I7	ALTERNATOR, VOLTAGE REGULATOR (95 AMP) BOSCH.....	40 - 70	2G16	AXLE, REAR, SUPPORT.....	60 - 34
4C24	ANGLE , RETURN FLOOR, FEEDERHOUSE .....	110 - 44			
1G18	ANTENNA, SPEAKERS AND RADIO .....	40 - 30			

## ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
	<b>B</b>				
1J11	BACKSHAFT SPEED SENSOR, FEEDER HOUSE.....	40 - 100	5G12	BELTS, ENGINE DRIVE .....	170 - 2
3H6	BARRIERS, SOUND .....	90 - 4	1B13	BELTS, ENGINE FAN DRIVES .....	20 - 8
1E9	BASE, FUEL FILTER .....	24 - 50	1B15	BELTS, ENGINE FAN DRIVES (HI POWER).....	20 - 10
5E18	BASE, GRAIN TANK .....	130 - 28	5G14	BELTS, FAN, CLEANING .....	170 - 4
1D11	BASE, OIL FILTER .....	24 - 28	5G12	BELTS, FEEDER CONVEYOR .....	170 - 2
1I9	BATTERIES, CABLE AND HOLDDOWN .....	40 - 73	5G14	BELTS, FEEDER HOUSE .....	170 - 4
4G11	BEARING KIT, STRAW WALKERS .....	120 - 72	5G14	BELTS, HEADER AND REEL .....	170 - 4
1E21	BEARING KIT, UNDERSIZED MAIN BEARING CRANKSHAFT .....	24 - 62	5G15	BELTS, LOWER TAILINGS AUGER .....	170 - 5
2D18	BEARING, COVER AND QUILL (STEERABLE MOTOR).....	50 - 63	5G13	BELTS, LOWER TAILINGS AUGER .....	170 - 3
5F9	BEARING, GEARCASE, HORIZONTAL UNLOADING AUGER.....	130 - 44	4H13	BELTS, PRIMARY COUNTERSHAFT.....	121 - 20
4B11	BEARING, REVERSER GEARBOX .....	110 - 4	5G13	BELTS, ROTARY SCREEN.....	170 - 3
1C21	BEARING, THRUST.....	24 - 13	5G14	BELTS, STRAW CHOPPER .....	170 - 4
2E2	BEARINGS, FINAL DRIVE .....	50 - 72	5G14	BELTS, STRAW SPREADER .....	170 - 4
2C8	BEARINGS, FINAL DRIVE (RING AND PINION) .....	50 - 25	5G14	BELTS, UNLOADING AUGERS .....	170 - 4
2C9	BEARINGS, FINAL DRIVE (RING AND PINION) .....	50 - 26	5G15	BELTS, UNLOADING SYSTEM.....	170 - 5
2C10	BEARINGS, FINAL DRIVE (RING AND PINION) .....	50 - 28	5G15	BELTS, UPPER TAILINGS AUGER .....	170 - 5
2E3	BEARINGS, FINAL DRIVE PINION SHAFT .....	50 - 74	5G12	BELTS, WALKER.....	170 - 2
2E5	BEARINGS, FINAL DRIVE PINION SHAFT .....	50 - 76	4J23	BLADE, FINE CUT ROTOR (PADDLED WIDE).....	121 - 78
1C21	BEARINGS, MAIN .....	24 - 13	4J21	BLADE, FINE CUT ROTOR, STRAW CHOPPER .....	121 - 76
5C23	BEARINGS, TAILINGS ELEVATOR CONVEYOR .....	125 - 38	5B18	BLADE, STRAW SPREADER .....	125 - 8
2C1	BEARINGS, TRANSMISSION .....	50 - 18	4J19	BLADE, TRI ROTOR STRAW CHOPPER .....	121 - 74
2C3	BEARINGS, TRANSMISSION PINION SHAFT.....	50 - 20	1C2	BLOCK, ENGINE COOLANT HEATER.....	20 - 22
5G15	BEATER BELTS SHEAVES .....	170 - 5	1C14	BLOCK, SHORT.....	24 - 6
4E24	BEATER COVER .....	120 - 34	2C24	BLOCK, VALVE .....	50 - 43
4I19	BEATER DRIVE SHEAVES AND TIGHTENER .....	121 - 50	2D11	BLOCK, VALVE .....	50 - 55
4E3	BEATER GRATE CURTAIN .....	120 - 12	1D1	BOLTS, CYLINDER HEAD .....	24 - 18
4E22	BEATER SHAFT AND DRIVE BELT.....	120 - 32	1I7	BOSCH ALTERNATOR AND VOLTAGE REGULATOR (95 AMP) .....	40 - 70
5F23	BELT GUIDE, UNLOADING AUGER DRIVE .....	130 - 60	1I5	BOSCH ALTERNATOR, SHEAVE AND BELT .....	40 - 68
4J5	BELT PICKUP / REEL DRIVE, PUMP MOUNTING SHEAVE.....	121 - 60	3H24	BOX, TOOL .....	90 - 22
1E19	BELT TENSIONER (ALT.).....	24 - 60	3F13	BRACE, ENGINE ACCESS PLATFORM .....	80 - 12
4I19	BELT, BEATER DRIVE .....	121 - 50	1B15	BRACE, ENGINE FAN DRIVES (HI POWER) .....	20 - 10
4B18	BELT, DRIVE TIGHTENER, FIXED SPEED.....	110 - 12	3G5	BRACE, FRONT CORNER SHEET (R.H.) .....	80 - 30
4E22	BELT, DRIVE, SHAFT AND BEATER.....	120 - 32	3G7	BRACE, REAR CORNER SHEET.....	80 - 32
1B11	BELT, ENGINE FAN AND DRIVES .....	20 - 6	4B17	BRACE, VARIABLE SPEED DRIVE TIGHTENER .....	110 - 10
4D3	BELT, FAN, DUST, LH FEEDER HOUSE .....	110 - 48	3C18	BRACKET, ACCUMULATOR MOUNTING ONE HALF GALLON.....	70 - 38
4J13	BELT, FINE CUT STRAW CHOPPER (REAR) .....	121 - 68	1F7	BRACKET, AIR CLEANER .....	30 - 10
4J9	BELT, FINE CUT STRAW CHOPPER DRIVES .....	121 - 64	1E19	BRACKET, ALTERNATOR .....	24 - 60
3I17	BELT, OPERATOR'S SEAT .....	90 - 40	2F20	BRACKET, BRAKE CABLE SUPPORT .....	60 - 13
1B7	BELT, ROTARY SCREEN DRIVE.....	20 - 2	3F25	BRACKET, DRIVE SHIELD (R.H. REAR).....	80 - 24
3I19	BELT, SEAT - RETROFIT KIT (MACHINES PRIOR TO 1996 MODEL YEAR) .....	90 - 42	4B20	BRACKET, DRIVE SHIELDS.....	110 - 14
3I18	BELT, SEAT - TRAINING SEAT .....	90 - 41	4B22	BRACKET, DRIVE SHIELDS, CONTOUR MASTER .....	110 - 16
4I21	BELT, SEPARATOR FAN DRIVE .....	121 - 52	4C12	BRACKET, FEEDER CONVEYOR .....	110 - 32
4H17	BELT, SLOW SPEED CYLINDER DRIVE .....	121 - 24	4C16	BRACKET, FEEDER CONVEYOR DRIVE .....	110 - 36
4J7	BELT, STRAW CHOPPER DRIVE (FRONT) .....	121 - 62	2G5	BRACKET, FRONT STEERING HOSES .....	60 - 22
4J11	BELT, STRAW CHOPPER DRIVES (REAR) .....	121 - 66	2G7	BRACKET, L.H. STEERING LINES .....	60 - 24
4K1	BELT, STRAW CHOPPER ROTOR AND SHEAVE.....	121 - 80	3G11	BRACKET, MUD SHIELDS (R.H.).....	80 - 36
5B18	BELT, STRAW SPREADER .....	125 - 8	3E13	BRACKET, OIL FILTER ASSEMBLY .....	70 - 86
4D5	BELT, UPPER DRIVE SHAFT, FIXED SPEED .....	110 - 50	2G9	BRACKET, R.H. STEERING LINES .....	60 - 26
4B17	BELT, VARIABLE SPEED DRIVE TIGHTENER.....	110 - 10	3G7	BRACKET, REAR CORNER SHEET .....	80 - 32
5G13	BELTS, AIR CONDITIONER COMPRESSOR .....	170 - 3	1J7	BRACKET, REEL SPEED MOTOR.....	40 - 96
5G12	BELTS, AUGER .....	170 - 2	1H7	BRACKET, STRAW CHOPPER SENSOR .....	40 - 44
5G15	BELTS, BEATER .....	170 - 5	5C24	BRACKET, TAILINGS DRIVE AND LOWER TROUGH SUPPORT.....	125 - 39
5G13	BELTS, CLEAN GRAIN ELEVATOR.....	170 - 3	5B12	BRACKETS, CHOP-TO-BALE .....	125 - 5A
5G12	BELTS, CONVEYOR FEEDER .....	170 - 2	4E20	BRACKETS, CONCAVE INDICATOR AND CABLE.....	120 - 30
5G13	BELTS, COOLING FAN.....	170 - 3	1H15	BRACKETS, LOW SHAFT SPEED SENSORS .....	40 - 52
5G13	BELTS, CYLINDER DRIVE .....	170 - 3	3E11	BRACKETS, OIL COOLER, A/C CONDENSER.....	70 - 84
5G13	BELTS, DRIVE, CYLINDER INTERMEDIATE .....	170 - 3	3D18	BRACKETS, SOLENOID CONTROL VALVE .....	70 - 66
			2F20	BRAKE CABLE SUPPORT BRACKET .....	60 - 13
			2F15	BRAKE CYLINDER, MASTER.....	60 - 8
			2F11	BRAKE CYLINDERS, MASTER AND BRAKE PEDALS .....	60 - 4
			2F13	BRAKE LINES, MASTER CYLINDER AND RESERVOIR .....	60 - 6
			2F9	BRAKE PEDAL AND SEAL, PARKING .....	60 - 2
			2F11	BRAKE PEDALS AND CYLINDERS, MASTER .....	60 - 4

## ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
2F17	BRAKE SHOES AND DRUM (LEFT-HAND ILLUSTRATED) .....	60 - 10	5B20	CHAFF SPREADER DISC (DUAL MOTOR).....	125 - 10
2F19	BRAKE SLAVE CYLINDER .....	60 - 12	5C7	CHAFF SPREADER LINES AND FITTINGS .....	125 - 22
1110	BREAKERS, CIRCUIT, ENGINE COMPARTMENT .....	40 - 74	3B15	CHAFF SPREADER MOTOR (EATON) .....	70 - 8
1E23	BREATHER, FUEL TANK .....	30 - 2	5C1	CHAFF SPREADER MOUNTING SUPPORT .....	125 - 16
1C11	BUSHING, CAMSHAFT .....	24 - 2	5B24	CHAFF SPREADER PAN AND SEALS .....	125 - 14
1C25	BUSHING, CAMSHAFT .....	24 - 17	5C13	CHAFF SPREADER PUMP .....	125 - 28
1D10	BYPASS TUBES, OIL COOLER .....	24 - 27	5C11	CHAFF SPREADER, HOSES, LINES AND MOTOR .....	125 - 26
1D11	BYPASS VALVE, OIL FILTER.....	24 - 28	5C9	CHAFF SPREADER, LINES, HOSES, VALVE AND PUMP .....	125 - 24
<b>C</b>			4I15	CHAFFER DRIVE, JACKSHAFT, IDLER .....	121 - 46
3I5	CAB AIR FILTER AND HOUSING .....	90 - 28	4I17	CHAFFER DRIVE, STRAW WALKER, CONVEYOR AUGERS AND SIEVE .....	121 - 48
1F15	CAB DOME LIGHT .....	40 - 1	4F21	CHAFFER ELEMENT.....	120 - 58
3H14	CAB DOOR AND GLASS .....	90 - 12	4F23	CHAFFER EXTENSION ELEMENT .....	120 - 60
3H12	CAB DOOR LATCH .....	90 - 10	4G1	CHAFFER FRAME .....	120 - 62
3H4	CAB FLOOR MAT .....	90 - 2	4F19	CHAFFER FRAME ARMS, PRECLEANER .....	120 - 56
3H16	CAB FRAME AND SUPPORT.....	90 - 14	4F15	CHAFFER FRAME, PRECLEANER .....	120 - 52
3H10	CAB INTERIOR TRIM PANELS .....	90 - 8	4F13	CHAFFER, PRE-CLEANING .....	120 - 50
3I1	CAB LANDING AND MIRROR .....	90 - 24	4B15	CHAIN SPROCKET, FRONT SHAFT, REVERSER .....	110 - 8
3I3	CAB LANDING AND MIRROR (R.H.) .....	90 - 26	5C25	CHAIN TIGHTENER, LOWER TAILINGS AUGER .....	125 - 40
1F15	CAB LIGHT, DOME .....	40 - 1	5D5	CHAIN TIGHTENER, UPPER TAILINGS DRIVE .....	125 - 46
3H4	CAB PANELS AND FLOOR MAT .....	90 - 2	5D20	CHAIN, CONVEYOR, CLEAN GRAIN LOWER ELEVATOR .....	130 - 4
1F20	CAB POST INSTRUMENT PANEL .....	40 - 6	5D22	CHAIN, CONVEYOR, CLEAN GRAIN LOWER ELEVATOR .....	130 - 6
3I7	CAB POST INSTRUMENT PANEL .....	90 - 30	5F16	CHAIN, CROSS AUGER .....	130 - 52
3H8	CAB REAR AND SIDE SEALS .....	90 - 6	4C12	CHAIN, FEEDER CONVEYOR DRIVE .....	110 - 32
3H18	CAB ROOF AND SUPPORTS.....	90 - 16	4C16	CHAIN, FEEDER CONVEYOR DRIVE .....	110 - 36
1F22	CAB ROOF LIGHTS .....	40 - 8	5F18	CHAIN, GRAIN TANK CROSS AUGERS .....	130 - 54
3I22	CAB SEAT HEIGHT ADJUSTER (VERTICAL CONTROL).....	90 - 46	5C23	CHAIN, TAILINGS ELEVATOR CONVEYOR .....	125 - 38
3H6	CAB SOUND DEADENING, FOAM AND SEALS.....	90 - 4	5D3	CHAIN, UPPER TAILINGS .....	125 - 44
1F16	CAB WIRING HARNESS.....	40 - 2	5F20	CHANNEL, CROSS AUGER .....	130 - 56
3H14	CAB, COMPLETE .....	90 - 12	5F16	CHANNEL, CROSS AUGER BEARING .....	130 - 52
4E20	CABLE, CONCAVE INDICATOR, AND BRACKETS .....	120 - 30	1B21	CHANNEL, RADIATOR MOUNTING.....	20 - 16
3I9	CABLE, GEARSHIFT LEVER .....	90 - 32	4K3	CHANNEL, STRAW CHOPPER HOUSING .....	121 - 82
1I24	CABLE, WIRING .....	40 - 88	1E23	CHANNEL, SUPPORTS, FUEL TANK .....	30 - 2
1I9	CABLES, BATTERY.....	40 - 73	5F1	CHARGE HOUSING, VERTICAL UNLOADING AUGER .....	130 - 36
2B12	CABLES, HYDROSTATIC DRIVE CONTROL .....	50 - 4	3E20	CHARGE PRESSURE HOSE .....	70 - 94
2D12	CAM LOBE MOTOR (STEERABLE MOTOR) .....	50 - 56	5C3	CHECK VALVE, ROD AND KNOB, CHAFF SPREADER CONTROL.....	125 - 18
2D19	CAM, CARRIER, AND PISTON (STEERABLE MOTOR).....	50 - 64	5B14	CHOP-TO-DROP DECLUTCHING LEVER.....	125 - 5C
4B9	CAM, FRONT VARIABLE DRIVE SHEAVE .....	110 - 2	5B15	CHOPPER COVER AND BRACKETS - CHOP-TO- BALE .....	125 - 5D
4E12	CAM, SPIKE TOOTH CONCAVE .....	120 - 22	5E24	CHUTE, GRAIN TANK CLEAN OUT .....	130 - 34
1C25	CAMSHAFT .....	24 - 17	1G3	CIGARETTE LIGHTER .....	40 - 14
1C11	CAMSHAFT BUSHING .....	24 - 2	1F20	CIRCUIT BOARD, CAB POST INSTRUMENT PANEL .....	40 - 6
1C25	CAMSHAFT BUSHING .....	24 - 17	3I7	CIRCUIT BOARD, CAB POST INSTRUMENT PANEL .....	90 - 30
1C25	CAMSHAFT FOLLOWER.....	24 - 17	1I16	CIRCUIT BOARDS, CENTRAL ELECTRONICS MODULE .....	40 - 80
1D3	CAMSHAFT FOLLOWER.....	24 - 20	1I10	CIRCUIT BREAKER RELAYS .....	40 - 74
1C25	CAMSHAFT GEAR.....	24 - 17	1I10	CIRCUIT BREAKERS, ENGINE COMPARTMENT.....	40 - 74
1E23	CAP, FILLER, FUEL TANK .....	30 - 2	1I1	CLAMPS, UNLOADING AUGER LIGHT .....	40 - 64
5E24	CAP, GRAIN TANK CLEAN OUT CHUTE .....	130 - 34	5D20	CLEAN GRAIN CONVEYOR CHAIN.....	130 - 4
1C11	CAPS, MAIN BEARING .....	24 - 2	5D22	CLEAN GRAIN CONVEYOR CHAIN.....	130 - 6
2D21	CAPS, YOKE AND PIVOTS (STEERABLE MOTOR) ....	50 - 66	5E12	CLEAN GRAIN ELEVATOR DRIVE IDLER .....	130 - 22
2D19	CARRIER, PISTON, AND CAM (STEERABLE MOTOR).....	50 - 64	5E12	CLEAN GRAIN ELEVATOR DRIVE TIGHTENER .....	130 - 22
2E21	CASE DRAIN, 4-WHEEL DRIVE, HYDRAULIC LINES .....	50 - 92	5E12	CLEAN GRAIN ELEVATOR DRIVE TIGHTENER AND IDLER.....	130 - 22
5E24	CASE, VERTICAL AUGER LOWER GEAR .....	130 - 34	5E10	CLEAN GRAIN ELEVATOR GEARCASE .....	130 - 20
1I16	CENTRAL ELECTRONICS MODULE AND CIRCUIT BOARDS .....	40 - 80	5E14	CLEAN GRAIN ELEVATOR SHIELDS, UPPER.....	130 - 24
1I16	CENTRAL ELECTRONICS MODULE CIRCUIT BOARDS .....	40 - 80	5E1	CLEAN GRAIN ELEVATOR UPPER SHAFT .....	130 - 10
5B22	CHAFF SPREADER (DUAL MOTOR) SHIELDS AND HANDLES .....	125 - 12	5E1	CLEAN GRAIN ELEVATOR UPPER SHAFT, SPROCKET AND SHEAVE.....	130 - 10
5C3	CHAFF SPREADER CONTROL, CHECK VALVE, ROD AND KNOB.....	125 - 18	5E1	CLEAN GRAIN ELEVATOR UPPER SHEAVE.....	130 - 10
			5E1	CLEAN GRAIN ELEVATOR UPPER SPROCKET .....	130 - 10

**ALPHABETICAL INDEX - CONTINUED**

<i>GRID</i>		<i>PAGE</i>	<i>GRID</i>		<i>PAGE</i>
5D24	CLEAN GRAIN ELEVATOR, UPPER .....	130 - 8	1H5	CONTOUR MASTER WIRING HARNESS ADAPTER ....	40 - 42
5E7	CLEAN GRAIN LOADING AUGER .....	130 - 16	4C1	CONTOUR MASTER, FEEDER HOUSE SHELL, WEAR PLATES AND SEALS .....	110 - 20
5E3	CLEAN GRAIN LOADING AUGER HOUSING, UPPER	130 - 12	4C5	CONTOUR MASTER, LOCKOUT ASSEMBLY (OPTIONAL).....	110 - 24
5E5	CLEAN GRAIN LOADING AUGER HOUSING, UPPER	130 - 14	2B12	CONTROL CABLES, HYDROSTATIC DRIVE .....	50 - 4
5E9	CLEAN GRAIN LOADING AUGER, FOLD .....	130 - 18	1G3	CONTROL PANEL, OPERATOR'S ARMREST .....	40 - 14
5D18	CLEAN GRAIN LOWER AUGER .....	130 - 2	1E3	CONTROL UNIT, ELECTRONIC .....	24 - 44
5D18	CLEAN GRAIN LOWER AUGER AND HINGED DOOR	130 - 2	1I14	CONTROL UNIT, ELECTRONIC (ECU) .....	40 - 78
5D20	CLEAN GRAIN LOWER ELEVATOR .....	130 - 4	2D25	CONTROL VALVE .....	50 - 70
5D22	CLEAN GRAIN LOWER ELEVATOR .....	130 - 6	2E1	CONTROL VALVE SOLENOID (FOUR-WHEEL DR.) ....	50 - 71
5D20	CLEAN GRAIN LOWER ELEVATOR AND CONVEYOR CHAIN .....	130 - 4	3C17	CONTROL VALVE, HEADER HEIGHT.....	70 - 37
5D22	CLEAN GRAIN LOWER ELEVATOR AND CONVEYOR CHAIN .....	130 - 6	3K1	CONTROL VALVE, HEATER .....	90 - 76
5E24	CLEAN OUT CHUTE, GRAIN TANK .....	130 - 34	2C19	CONTROL VALVE, HYDRO. DR. DISPLACEMENT .....	50 - 38
1F7	CLEANER, AIR AND INTAKE TUBES .....	30 - 10	1J9	CONVENIENCE OUTLET .....	40 - 98
4I21	CLEANING FAN DRIVE, SEPARATOR .....	121 - 52	1G5	CONVENIENCE OUTLET,KIT .....	40 - 16
4F7	CLEANING FAN INTAKE SHIELDS .....	120 - 44	3B25	CONVERSION PARTS, HUDRAULIC, 200 SERIES CUTTING PLATFORM.....	70 - 19
4F9	CLEANING FAN INTAKE SHIELDS .....	120 - 46	5G12	CONVEYOR AUGER BELTS, .....	170 - 2
4F11	CLEANING FAN INTAKE SHIELDS .....	120 - 48	4I17	CONVEYOR AUGERS, SIEVE, CHAFFER DRIVE AND STRAW WALKER.....	121 - 48
4F5	CLEANING FAN LEAF SCREENS (CORN) .....	120 - 42	4I15	CONVEYOR AUGERS, STRAW WALKER, SIEVE AND CHAFFER DRIVE .....	121 - 46
4F7	CLEANING FANS AND SHROUDS .....	120 - 44	5D20	CONVEYOR CHAIN, CLEAN GRAIN .....	130 - 4
4F9	CLEANING FANS AND SHROUDS .....	120 - 46	5D22	CONVEYOR CHAIN, CLEAN GRAIN .....	130 - 6
1J17	CLEANING SHOE LAMP INSTALLATION .....	40 - 106	1C2	COOLANT HEATER, ENGINE BLOCK.....	20 - 22
4C3	CLOSURE PLATES, FEEDER HOUSE - CONTOUR MASTER .....	110 - 22	1B19	COOLANT RECOVERY TANK .....	20 - 14
1E15	CLUTCH ASSEMBLY(STARTER) .....	24 - 56	1D6	COOLER, ENGINE OIL .....	24 - 23
3K5	CLUTCH, COMPRESSOR R134A.....	90 - 80	1F5	COOLER, FUEL .....	30 - 8
4H11	CLUTCH, HEADER ELECTROMAGNETIC.....	121 - 18	3E11	COOLER, OIL.....	70 - 84
4C20	CLUTCH, SLIP, FEEDER HOUSE .....	110 - 40	3B19	COOLER, OIL, FEEDER HOUSE .....	70 - 12
2G1	COLD WEATHER START BUTTON .....	60 - 18	3B21	COOLER, OIL, FEEDER HOUSE GEARCASE .....	70 - 14
3J16	COLD WEATHER START BUTTON .....	90 - 66	5G13	COOLING FAN BELTS .....	170 - 3
1F6	COLD WEATHER STARTING AID .....	30 - 9	4I11	CORN AND SMALL GRAIN CONCAVE INDICATOR ....	121 - 42
3F9	COMPARTMENT, ENGINE .....	80 - 8	5B8	CORN CURTAIN AND DEFLECTORS .....	125 - 2
3K7	COMPRESSOR PARTS (650301- ) R134A .....	90 - 82	4D22	CORN CYLINDER DOOR (ARGENTINA ONLY).....	120 - 6
3K4	COMPRESSOR, A/C, HOSE .....	90 - 79	3G9	CORNER SHEET (L.H.) FRONT .....	80 - 34
5G13	COMPRESSOR, AIR CONDITIONING BELTS.....	170 - 3	3G5	CORNER SHEET, R.H. FRONT .....	80 - 30
3K3	COMPRESSOR, AIR CONDITIONING, R134A .....	90 - 78	3G7	CORNER SHEET, REAR (L.H.) .....	80 - 32
3K5	COMPRESSOR, CLUTCH R134A.....	90 - 80	4I7	COUNTERSHAFT DRIVE, SECONDARY.....	121 - 38
1I8	CONCAVE ADJUSTING MOTOR .....	40 - 72	5F21	COUNTERSHAFT DRIVE, UNLOADING AUGER .....	130 - 58
3F3	CONCAVE CLEARANCE DOOR.....	80 - 2	4H7	COUNTERSHAFT GEARCASE, PRIMARY .....	121 - 14
4E20	CONCAVE INDICATOR, CABLE AND BRACKETS.....	120 - 30	4H9	COUNTERSHAFT, PRIMARY, GEARCASE .....	121 - 16
4I11	CONCAVE INDICATOR, CORN AND SMALL GRAIN....	121 - 42	1C1	COUPLING WITH HUB, ENGINE GEARCASE .....	20 - 21
4E4	CONCAVE, RASP BAR AND GRATE .....	120 - 14	4E24	COVER, BEATER .....	120 - 34
4E6	CONCAVE, RASP BAR AND GRATE .....	120 - 16	5B15	COVER, CHOPPER - CHOP-TO-BALE .....	125 - 5D
4E14	CONCAVE, SPIKE TOOTH .....	120 - 24	3F9	COVER, ENGINE .....	80 - 8
4E8	CONCAVE, SPIKE-TOOTH .....	120 - 18	3F11	COVER, ENGINE .....	80 - 10
4E12	CONCAVE, SPIKE-TOOTH .....	120 - 22	1E19	COVER, FUEL INJECTION PUMP ACCESS .....	24 - 60
3E11	CONDENSER, A/C.....	70 - 84	5F18	COVER, GRAIN TANK CROSS AUGERS .....	130 - 54
1C18	CONNECTING RODS .....	24 - 10	2C14	COVER, HYDROSTATIC DRIVE PUMP.....	50 - 33
1I18	CONNECTORS, ELECTRICAL, WEATHERPACK .....	40 - 82	2D5	COVER, HYDROSTATIC DRIVE PUMP.....	50 - 49
1E5	CONNECTORS, FUEL INJECTION PUMP HOUSING ..	24 - 46	2D1	COVER, HYDROSTATIC PUMP (PLANETARY) .....	50 - 44
1J5	CONNECTORS, HARNESS, UPPER, FOR ENGINE....	40 - 94	2C12	COVER, HYDROSTATIC PUMP (RING AND PINION) .....	50 - 30
1J3	CONNECTORS, LOWER HARNESS FOR ENGINE .....	40 - 92	2D15	COVER, INNER .....	50 - 60
1J1	CONNECTORS, SUPPLEMENTARY TERMINALS .....	40 - 90	1D6	COVER, OIL COOLER .....	24 - 23
3J9	CONSOLE GLOVE BOX AND ARM REST, R.H. ....	90 - 58	2D18	COVER, QUILL AND BEARING (STEERABLE MOTOR).....	50 - 63
1F18	CONSOLE PANEL, OVERHEAD.....	40 - 4	1D4	COVER, ROCKER ARM .....	24 - 21
4C3	CONTOUR MASTER - FEEDER HOUSE FRAME, TILT BEAM & CLOSURE PLATES.....	110 - 22	1D19	COVER, THERMOSTAT .....	24 - 36
4D11	CONTOUR MASTER DRIVE SHAFT (FOR 444,494 CORN HEAD AND 914 BPU).....	110 - 56	4D17	COVER, THRESHING CYLINDER .....	120 - 1
4D9	CONTOUR MASTER DRIVESHAFT .....	110 - 54	1C24	COVER, TIMING GEAR.....	24 - 16
3C13	CONTOUR MASTER HOSES, (L.H.) .....	70 - 32	5F20	COVERS AND CHANNEL, CROSS AUGER .....	130 - 56
4C7	CONTOUR MASTER LOCKOUT ADAPTER KIT (BELT PU & 4R CORN HEADS) .....	110 - 26	5C21	CRANK, TAILINGS ELEVATOR .....	125 - 36
3E7	CONTOUR MASTER TILT CYLINDER.....	70 - 80			
1H3	CONTOUR MASTER WIRING HARNESS .....	40 - 40			

## ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
1C4	CRANKCASE, ENGINE, OIL DRAIN.....	20-24	5H6	DECALS, REAR.....	170-22
4G13	CRANKS, STRAW WALKER, STRAW SPREADER DRIVE AND SHIELD.....	120-74	5H4	DECALS, REAR WHEEL.....	170-20
1C19	CRANKSHAFT.....	24-11	5H1	DECALS, RIGHT-HAND.....	170-16
1E13	CRANKSHAFT DAMPERS.....	24-54	5G16	DECALS, SAFETY AND LOCATIONS.....	170-6
1C24	CRANKSHAFT FRONT OIL SEAL.....	24-16	5G18	DECALS, SAFETY AND LOCATIONS.....	170-8
1C20	CRANKSHAFT KIT, UNDERSIZE (CONNECTING ROD JOURNAL).....	24-12	5G20	DECALS, SAFETY AND LOCATIONS.....	170-10
1E13	CRANKSHAFT PULLEY AND DAMPERS.....	24-54	5G22	DECALS, SAFETY AND LOCATIONS.....	170-12
5F16	CROSS AUGER BEARING PLATE, L.H.....	130-52	5G24	DECALS, SAFETY AND LOCATIONS.....	170-14
5F20	CROSS AUGER COVERS AND CHANNEL.....	130-56	5H8	DECALS, TOP.....	170-24
5F18	CROSS AUGERS, GRAIN TANK.....	130-54	4J17	DECK, SUPPORTS AND FINS, STRAW CHOPPER.....	121-72
3F3	CROSS BRACES, SEPARATOR.....	80-2	5B14	DECLUTCHING LEVER - CHOP-TO-DROP.....	125-5C
5B24	CROSSBAR, CHAFF SPREADER PAN.....	125-14	4D20	DEFLECTOR, CYLINDER DOOR.....	120-4
3J15	CUP HOLDER.....	90-64	4B24	DEFLECTOR, FEEDER HOUSE FRAME.....	110-18
4E3	CURTAIN, BEATER GRATE.....	120-12	5B8	DEFLECTORS AND CORN CURTAIN.....	125-2
5C15	CURTAIN, SPREADER.....	125-30	4J17	DEFLECTORS, STRAW CHOPPER DECK.....	121-72
5E20	CURTAINS, GRAIN TANK.....	130-30	4G9	DEFLECTORS, STRAW WALKERS.....	120-70
3B25	CUTTING PLATFORM, 200 SERIES CONVERSION PARTS.....	70-19	5G8	DIAL-A-MATIC ELECTRICAL HARNESS.....	160-4
1C11	CYLINDER BLOCK FITTINGS.....	24-2	5G6	DIAL-A-MATIC HEADER HEIGHT CONTROL HYDRAULIC LINE AND VALVE BLOCK.....	160-2
3F3	CYLINDER CLEARANCE DOOR.....	80-2	5G7	DIAL-A-MATIC HEADER HEIGHT CONTROL VALVE BLOCK SOLENOID.....	160-3
4D17	CYLINDER COVER, THRESHING.....	120-1	3C17	DIAL-A-MATIC HEADER HEIGHT CONTROL VALVE.....	70-37
4D20	CYLINDER DOOR (WITH CYLINDER BAFFLE).....	120-4	2F13	DIAPHRAGM, BRAKE LINES.....	60-6
4D22	CYLINDER DOOR, CORN (ARGENTINA ONLY).....	120-6	2C5	DIFFERENTIAL GEARS.....	50-22
415	CYLINDER DRIVE ADJUSTING BRACKET, DUAL-RANGE.....	121-36	2C5	DIFFERENTIAL SHAFTS.....	50-22
4H19	CYLINDER DRIVE GEAR CASE, DUAL-RANGE.....	121-26	1D15	DIPSTICK, ENGINE OIL.....	24-32
411	CYLINDER DRIVE INTERMEDIATE SHAFT MOUNTING, DUAL-RANGE.....	121-32	4B11	DIPSTICK, REVERSER GEARBOX.....	110-4
413	CYLINDER DRIVE INTERMEDIATE SHEAVE, DUAL-RANGE.....	121-34	5B20	DISC, CHAFF SPREADER (DUAL MOTOR).....	125-10
4H23	CYLINDER DRIVE TIGHTENER, DUAL-RANGE.....	121-30	2C19	DISPLACEMENT CONTROL VALVE, HYDRO. DR. ....	50-38
4H15	CYLINDER DRIVE, SINGLE RANGE.....	121-22	3H12	DOOR LATCH, CAB.....	90-10
4H17	CYLINDER DRIVE, SLOW SPEED.....	121-24	3G9	DOOR, (L.H.) FRONT CORNER SHEET.....	80-34
1D1	CYLINDER HEAD.....	24-18	3H14	DOOR, CAB AND GLASS.....	90-12
1D1	CYLINDER HEAD BOLTS.....	24-18	5B10	DOOR, CHOPPER STRAW.....	125-4
1D1	CYLINDER HEAD GASKET.....	24-18	5D18	DOOR, CLEAN GRAIN LOWER AUGER.....	130-2
1E11	CYLINDER HEAD GASKET KIT.....	24-52	4D20	DOOR, CYLINDER (WITH CYLINDER BAFFLE).....	120-4
1C18	CYLINDER LINERS.....	24-10	4D22	DOOR, CYLINDER DOOR (ARGENTINA ONLY).....	120-6
4D24	CYLINDER SHEAR BAR.....	120-8	3F7	DOOR, ENGINE ACCESS.....	80-6
3D6	CYLINDER SPEED HYDRAULIC LINES AND HOSES..	70-52	3F11	DOOR, ENGINE PLATFORM.....	80-10
3D11	CYLINDER SPEED, SOLENOID CONTROL VALVE.....	70-58	3G1	DOOR, R.H. SERVICE ACCESS SHIELD.....	80-26
4E10	CYLINDER THRESHING, SPIKE TOOTH.....	120-20	3F7	DOOR, RADIATOR.....	80-6
2F19	CYLINDER, BRAKE SLAVE.....	60-12	1B21	DOOR, RADIATOR ACCESS.....	20-16
2F15	CYLINDER, BRAKE, MASTER.....	60-8	4E25	DOOR, SHOE GRAIN SUPPLY.....	120-36
3E3	CYLINDER, DRIVE, GRAIN TANK UNLOADING.....	70-76	5B10	DOOR, STRAW CHOPPER.....	125-4
3G1	CYLINDER, GAS, SERVICE ACCESS SHIELD.....	80-26	5C21	DOOR, TAILINGS ELEVATOR HOUSING.....	125-36
3G3	CYLINDER, GAS, SERVICE ACCESS SHIELD.....	80-28	5E14	DOOR, UPPER CLEAN GRAIN ELEVATOR.....	130-24
3C16	CYLINDER, HEADER LIFT.....	70-35	4C8	DOOR, UPPER FEEDER HOUSE.....	110-28
3G7	CYLINDER, REAR CORNER SHEET.....	80-32	1D19	DRAIN VALVE, CYLINDER HEAD.....	24-36
2G13	CYLINDER, STEERING.....	60-30	1D13	DRAIN VALVE, OIL PAN.....	24-30
4E1	CYLINDER, THRESHING, RASP BAR.....	120-10	5F23	DRIVE BELT GUIDE, UNLOADING AUGER.....	130-60
3E7	CYLINDER, TILT - CONTOUR MASTER.....	70-80	5C24	DRIVE BRACKET, TAILINGS AND LOWER TROUGH SUPPORT.....	125-39
3E5	CYLINDER, UNLOADING AUGER SWING.....	70-78	5D5	DRIVE CHAIN TIGHTENER, UPPER TAILINGS.....	125-46
2F11	CYLINDERS, MASTER BRAKE AND BRAKE PEDALS	60-4	2B12	DRIVE CONTROL CABLES, HYDROSTATIC.....	50-4
			1C19	DRIVE GEAR, OIL PUMP.....	24-11
			4113	DRIVE GEARCASE, STRAW WALKER.....	121-44
			5E12	DRIVE IDLER, CLEAN GRAIN ELEVATOR.....	130-22
			3D23	DRIVE PUMP, REEL BELT PICKUP.....	70-72
			4D11	DRIVE SHAFT, CONTOUR MASTER (FOR 444,494 CORN HEAD AND 914 BPU).....	110-56
			4H5	DRIVE SHAFT, GEARCASE AND PRIMARY COUNTERSHAFT.....	121-12
			5B18	DRIVE SHAFT, STRAW SPREADER.....	125-8
			2B19	DRIVE SHAFTS.....	50-11
			2B20	DRIVE SHAFTS.....	50-12
			3F25	DRIVE SHIELD, R.H. REAR.....	80-24

## D

1C19	DAMPER KEY.....	24-11
1E13	DAMPERS, CRANKSHAFT.....	24-54
5H6	DECALS, FRONT.....	170-22
5H4	DECALS, FRONT WHEEL.....	170-20
5H2	DECALS, LEFT-HAND.....	170-18

## ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
4B22	DRIVE SHIELDS, CONTOUR MASTER FEEDER HOUSE.....	110 - 16	1H20	EITHER START SOLENOID .....	40 - 58
4B20	DRIVE SHIELDS, SAFETY STOP, FEEDER HOUSE ....	110 - 14	1I20	ELECTRICAL CONNECTOR SERVICE KIT .....	40 - 84
4J15	DRIVE SHIELDS, STRAW CHOPPER .....	121 - 70	1I22	ELECTRICAL CONNECTOR SERVICE KIT .....	40 - 86
4K5	DRIVE SPROCKETS, STRAW CHOPPER.....	121 - 84	5G8	ELECTRICAL HARNESS, DIAL-A-MATIC.....	160 - 4
5E12	DRIVE TIGHTENER, CLEAN GRAIN ELEVATOR.....	130 - 22	1J2	ELECTRICAL SERVICE OUTLET.....	40 - 91
4J3	DRIVE TIGHTENER, FEEDER HOUSE .....	121 - 58	1I18	ELECTRICAL TERMINALS AND CONNECTORS, WEATHERPACK .....	40 - 82
4B18	DRIVE TIGHTENER, FIXED SPEED FEEDER HOUSE.....	110 - 12	4H11	ELECTROMAGNETIC HEADER CLUTCH .....	121 - 18
4B17	DRIVE TIGHTENER, VARIABLE SPEED .....	110 - 10	1E3	ELECTRONIC CONTROL UNIT .....	24 - 44
2B14	DRIVE WHEELS .....	50 - 6	1I14	ELECTRONIC CONTROL UNIT (ECU).....	40 - 78
2B15	DRIVE WHEELS, HIGH FLOATATION PLANETARY FINAL DRIVE .....	50 - 7	1E3	ELECTRONIC FUEL INJECTION PUMP .....	24 - 44
4J5	DRIVE, BELT PICKUP / REEL PUMP MOUNTING SHEAVE .....	121 - 60	1I16	ELECTRONICS MODULE, CENTRAL AND CIRCUIT BOARDS .....	40 - 80
4I21	DRIVE, CLEANING FAN, SEPARATOR.....	121 - 52	4F21	ELEMENT, CHAFFER .....	120 - 58
5F21	DRIVE, COUNTERSHAFT, UNLOADING AUGER.....	130 - 58	4F23	ELEMENT, CHAFFER EXTENSION .....	120 - 60
5G13	DRIVE, CYLINDER INTERMEDIATE, BELTS .....	170 - 3	4G3	ELEMENT, SIEVE .....	120 - 64
5G13	DRIVE, CYLINDER, BELTS.....	170 - 3	5E12	ELEVATOR DRIVE IDLER, CLEAN GRAIN .....	130 - 22
4J1	DRIVE, FAN, SPEED CONTROL SHEAVE LINKAGE....	121 - 56	5E12	ELEVATOR DRIVE TIGHTENER, CLEAN GRAIN.....	130 - 22
4I9	DRIVE, GEARCASE, STRAW WALKER.....	121 - 40	5E14	ELEVATOR SHIELDS, UPPER CLEAN GRAIN.....	130 - 24
2D8	DRIVE, HYDROSTATIC MOTOR, FIXED .....	50 - 52	5G13	ELEVATOR, CLEAN GRAIN BELTS.....	170 - 3
2C21	DRIVE, HYDROSTATIC MOTOR, FIXED (RING AND PINION) .....	50 - 40	5D20	ELEVATOR, LOWER, CLEAN GRAIN .....	130 - 4
2E13	DRIVE, HYDROSTATIC OIL HOSES, UPPER.....	50 - 84	5D22	ELEVATOR, LOWER, CLEAN GRAIN .....	130 - 6
2E9	DRIVE, HYDROSTATIC, LOWER OIL LINES (FOUR WHEEL DRIVE) .....	50 - 80	5C21	ELEVATOR, TAILINGS .....	125 - 36
2E11	DRIVE, HYDROSTATIC, LOWER OIL LINES (TWO WHEEL DRIVE) .....	50 - 82	5D24	ELEVATOR, UPPER CLEAN GRAIN .....	130 - 8
4I7	DRIVE, SECONDARY COUNTERSHAFT.....	121 - 38	3F7	ENGINE ACCESS DOOR, HANDRAILS, AND RADIATOR DOOR.....	80 - 6
1B11	DRIVES, ENGINE FAN .....	20 - 6	3F13	ENGINE ACCESS PLATFORM AND STEP .....	80 - 12
1B13	DRIVES, ENGINE FAN .....	20 - 8	1H22	ENGINE AIR FILTER WARNING SWITCH.....	40 - 60
1B15	DRIVES, ENGINE FAN (HI POWER) .....	20 - 10	1I6	ENGINE ALTERNATOR MOUNTING .....	40 - 69
4J7	DRIVES, STRAW CHOPPER (FRONT) .....	121 - 62	1C2	ENGINE BLOCK COOLANT HEATER .....	20 - 22
4J11	DRIVES, STRAW CHOPPER, (REAR) .....	121 - 66	1I10	ENGINE CIRCUIT BREAKERS .....	40 - 74
4J9	DRIVES, STRAW CHOPPER, FINE CUT (FRONT) .....	121 - 64	3F9	ENGINE COMPARTMENT.....	80 - 8
4J13	DRIVES, STRAW CHOPPER, FINE CUT (REAR).....	121 - 68	5G12	ENGINE DRIVE BELTS.....	170 - 2
4D9	DRIVESHAFT, CONTOUR MASTER .....	110 - 54	1B11	ENGINE FAN DRIVES .....	20 - 6
1B13	DRIVESHAFT, ENGINE FAN DRIVES .....	20 - 8	1B13	ENGINE FAN DRIVES.....	20 - 8
4F1	DRIVESHAFT, SHOE GRAIN SUPPLY AUGERS .....	120 - 38	1B15	ENGINE FAN DRIVES (HI POWER) .....	20 - 10
2F17	DRUM, BRAKE.....	60 - 10	1C1	ENGINE GEARCASE COUPLING WITH HUB.....	20 - 21
3C20	DUAL ACCUMULATOR, ONE HALF GALLON .....	70 - 40	3E13	ENGINE GEARCASE OIL FILTER ASSEMBLY .....	70 - 86
1I1	DUAL LEVEL MONITOR .....	40 - 64	3E15	ENGINE GEARCASE PRESSURE REGULATOR .....	70 - 88
1I1	DUAL LEVEL MONITOR WIRING HARNESS .....	40 - 64	3E17	ENGINE GEARCASE SOLENOID VALVE (PRESSURE REGULATOR) .....	70 - 90
2B16	DUAL WHEELS, WIDE-SPACED (PLANETARY FINAL DRIVE) .....	50 - 8	4G24	ENGINE GEARCASE- SEPARATOR DRIVE WET-CLUTCH AND PUMP DRIVE SHAFT .....	121 - 6
4I5	DUAL-RANGE CYLINDER DRIVE ADJUSTING BRACKET.....	121 - 36	4G20	ENGINE GEARCASE- STRAW CHOPPER, UNLOADING DRIVE AND SEPARATOR DRIVE GEAR .....	121 - 2
4H19	DUAL-RANGE CYLINDER DRIVE GEAR CASE .....	121 - 26	4H1	ENGINE GEARCASE, SEPARATOR AND PUMP DRIVE .....	121 - 8
4I1	DUAL-RANGE CYLINDER DRIVE INTERMEDIATE SHAFT MOUNTING.....	121 - 32	4H3	ENGINE GEARCASE, SEPARATOR AND PUMP DRIVE .....	121 - 10
4I3	DUAL-RANGE CYLINDER DRIVE INTERMEDIATE SHEAVE .....	121 - 34	4G22	ENGINE GEARCASE, STRAW CHOPPER, UNLOADING DRIVE AND SEPARATOR DRIVE GEAR .....	121 - 4
4H23	DUAL-RANGE CYLINDER DRIVE TIGHTENER .....	121 - 30	1B23	ENGINE INTERCOOLER.....	20 - 18
4H21	DUAL-RANGE LOCKOUT ARM .....	121 - 28	1B25	ENGINE MOUNTS .....	20 - 20
3I6	DUCTS, HEATER AND AIR CONDITIONING .....	90 - 29	1B25	ENGINE MOUNTS AND REAR SUPPORT .....	20 - 20
4D3	DUST FAN BELT, LH FEEDER HOUSE .....	110 - 48	1C10	ENGINE OIL (TORQ-GARD PLUS-50).....	24 - 1
4D1	DUST FAN, LH SIDE FEEDER HOUSE.....	110 - 46	1D6	ENGINE OIL COOLER .....	24 - 23
3B19	DUST SUPPRESSSION, LUBE OIL PUMP .....	70 - 12	1D15	ENGINE OIL DIPSTICK.....	24 - 32
			1D15	ENGINE OIL DIPSTICK TUBE .....	24 - 32
			1D11	ENGINE OIL FILTER .....	24 - 28
			1H20	ENGINE OIL PRESSURE SENDING UNIT .....	40 - 58
			1D7	ENGINE OIL PUMP .....	24 - 24
			1D9	ENGINE OIL PUMP INTAKE.....	24 - 26
			1C16	ENGINE OVERHAUL KIT .....	24 - 8
			3F11	ENGINE PLATFORM .....	80 - 10
			1H22	ENGINE PLUGGED AIR FILTER WARNING SWITCH ..	40 - 60
			3F9	ENGINE RAILS .....	80 - 8
			1E11	ENGINE REBUILD GASKET KIT .....	24 - 52

### E

1E3	E.C.U. ....	24 - 44
1I12	ECU MOUNTING SUPPORT ( -XXXXXX).....	40 - 76
1I14	ECU, ELECTRONIC CONTROL UNIT .....	40 - 78

## ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
1C13	ENGINE SERVICE PARTS, KEY .....	24 - 4	4D7	FEEDER HOUSE FRONT DRIVE SHAFT, SHEAVE, MOUNTINGS (FIXED SPEED WITH REVERSER) ....	110 - 52
1E17	ENGINE SPEED SENSOR .....	24 - 58	3B21	FEEDER HOUSE GEARCASE OIL COOLER .....	70 - 14
1H18	ENGINE TACH SENSOR .....	40 - 56	3B23	FEEDER HOUSE GEARCASE OIL COOLER FITTINGS AND HOSES .....	70 - 16
1H20	ENGINE TEMP SWITCH .....	40 - 58	3B17	FEEDER HOUSE OIL COOLER LUBE OIL PUMP .....	70 - 10
1H20	ENGINE TEMPERATURE SENDING UNIT .....	40 - 58	3B19	FEEDER HOUSE OIL COOLER, LUBE OIL PUMP .....	70 - 12
1H20	ENGINE, LOWER HARNESS .....	40 - 58	3I11	FEEDER HOUSE REVERSER FOOT CONTROL .....	90 - 34
1H18	ENGINE, UPPER HARNESS .....	40 - 56	4B13	FEEDER HOUSE REVERSER FOOT CONTROL .....	110 - 6
2G1	ETHER START BUTTON .....	60 - 18	4C1	FEEDER HOUSE SHELL - CONTOUR MASTER .....	110 - 20
3J16	ETHER START BUTTON .....	90 - 66	4C20	FEEDER HOUSE SLIP CLUTCH .....	110 - 40
1J3	ETHER START CONNECTOR .....	40 - 92	4D5	FEEDER HOUSE UPPER DRIVE SHAFT, SHEAVE, MOUNTING (FIXED SPEED WITH REVERSER) ....	110 - 50
1F6	ETHER STARTING AID .....	30 - 9	4C8	FEEDER HOUSE UPPER SHAFT .....	110 - 28
1D24	ETHER STARTING FITTINGS .....	24 - 41	3B16	FEEDER HOUSE VARIABLE DRIVE HYDRAULIC HOSE .....	70 - 9
3K1	EVAPORATOR/HEATER UNIT .....	90 - 76	4C1	FEEDER HOUSE WEAR PLATES - CONTOUR MASTER .....	110 - 20
1D23	EXHAUST MANIFOLD GASKETS .....	24 - 40	4D18	FEEDER HOUSE/SEPARATOR SEAL, STONE TRAP AND DOOR .....	120 - 2
1D23	EXHAUST MANIFOLD HEAT SHIELD .....	24 - 40	4C22	FEEDER HOUSE, UPPER COUNTERSHAFT VARIABLE DRIVE .....	110 - 42
1D23	EXHAUST MANIFOLDS .....	24 - 40	1F24	FIELD LIGHTING, AUXILIARY .....	40 - 10
1F9	EXHAUST PIPE AND MUFFLER .....	30 - 12	1J13	FIELD LIGHTS .....	40 - 102
1D1	EXHAUST VALVE SHIELD .....	24 - 18	1F18	FIELD LIGHTS SWITCH, AUX, OPTIONAL .....	40 - 4
1D1	EXHAUST VALVES .....	24 - 18	1F7	FILTER, AIR AND INTAKE TUBES .....	30 - 10
2B22	EXPORT, TRANSMISSION .....	50 - 14	3I5	FILTER, CAB AIR .....	90 - 28
3E1	EXTEND LINES, HOSES, UNLOADING AUGER .....	70 - 74	1D11	FILTER, ENGINE OIL .....	24 - 28
1C2	EXTENSION CORD, ENGINE BLOCK COOLANT HEATER .....	20 - 22	1E9	FILTER, FUEL .....	24 - 50
4F23	EXTENSION ELEMENT, CHAFFER .....	120 - 60	1F1	FILTER, FUEL PUMP .....	30 - 4
5E22	EXTENSIONS, GRAIN TANK .....	130 - 32	3C15	FILTER, MAIN HYDRAULIC .....	70 - 34
<b>F</b>					
3F23	FAN DRIVE SHIELD (L.H.) .....	80 - 22	3E13	FILTER, OIL, ENGINE GEARCASE .....	70 - 86
4I23	FAN DRIVE SPEED CONTROL LINKAGE .....	121 - 54	1C24	FILTER, WATER PUMP (WEEP HOLE) .....	24 - 16
4J1	FAN DRIVE SPEED CONTROL SHEAVE LINKAGE .....	121 - 56	3J20	FILTERS, AIR CONDITIONER AND HEATER AND HOUSING .....	90 - 70
1E8	FAN DRIVE, FIXED .....	24 - 49	3J20	FILTERS, HEATER AND AIR CONDITIONING AND HOUSING .....	90 - 70
1B13	FAN DRIVES, ENGINE .....	20 - 8	2C7	FINAL DRIVE (RING AND PINION) .....	50 - 24
1B15	FAN DRIVES, ENGINE (HI POWER) .....	20 - 10	2E2	FINAL DRIVE AXLE SHAFT .....	50 - 72
1E8	FAN PULLEY HUB .....	24 - 49	2E3	FINAL DRIVE AXLE SHAFT .....	50 - 74
1E18	FAN PULLEY, AIR CONDITIONER COMPRESSOR .....	24 - 59	2C9	FINAL DRIVE AXLE, GEAR AND BEARINGS (RING AND PINION) .....	50 - 26
3J22	FAN, AIR CONDITIONING/HEATER AND PRESSURIZING .....	90 - 72	2E2	FINAL DRIVE BEARINGS .....	50 - 72
5G14	FAN, CLEANING, BELTS .....	170 - 4	2C8	FINAL DRIVE BEARINGS (RING AND PINION) .....	50 - 25
4I21	FAN, DRIVE, CLEANING, SEPARATOR .....	121 - 52	2C8	FINAL DRIVE HOUSING AND BRG. CAP (RING AND PINION) .....	50 - 25
4D1	FAN, DUST, LH SIDE FEEDER HOUSE .....	110 - 46	2E5	FINAL DRIVE INNER HOUSING .....	50 - 76
1B11	FAN, ENGINE .....	20 - 6	2E2	FINAL DRIVE OUTER HOUSING .....	50 - 72
4F7	FANS, CLEANING .....	120 - 44	2E3	FINAL DRIVE OUTER HOUSING .....	50 - 74
4F9	FANS, CLEANING .....	120 - 46	2E5	FINAL DRIVE PINION SHAFT .....	50 - 76
4C18	FEED PLATE LATCH HANDLE .....	110 - 38	2E3	FINAL DRIVE PINION SHAFT BEARINGS .....	50 - 74
5G12	FEEDER CONVEYOR BELTS .....	170 - 2	2E5	FINAL DRIVE PINION SHAFT BEARINGS .....	50 - 76
4C12	FEEDER CONVEYOR BRACKET .....	110 - 32	2E5	FINAL DRIVE PINION SHAFT GEARS .....	50 - 76
4C12	FEEDER CONVEYOR DRIVE CHAIN .....	110 - 32	2C10	FINAL DRIVE PINION, SHAFTS AND BEARINGS (RING AND PINION) .....	50 - 28
4C14	FEEDER CONVEYOR DRIVE CHAIN, TIGHTENER AND GUIDES .....	110 - 34	2E2	FINAL DRIVE PLANETARY PINION .....	50 - 72
4C12	FEEDER CONVEYOR IDLER .....	110 - 32	2E23	FINAL DRIVE SHAFT SHIELDS - PLANETARY FINAL DRIVE .....	50 - 94
1J11	FEEDER HOUSE BACKSHAFT SPEED SENSOR .....	40 - 100	2E22	FINAL DRIVE SHAFT SHIELDS - SINGLE REDUCTION .....	50 - 93
5G14	FEEDER HOUSE BELTS .....	170 - 4	4J23	FINE CUT ROTOR STRAW CHOPPER (PADDLED WIDE .....	121 - 78
4B22	FEEDER HOUSE DRIVE SHIELDS - CONTOUR MASTER .....	110 - 16	4J21	FINE CUT ROTOR STRAW CHOPPER (STRAIGHT WIDE .....	121 - 76
4B20	FEEDER HOUSE DRIVE SHIELDS AND SAFETY STOP .....	110 - 14	4J9	FINE CUT STRAW CHOPPER DRIVES (FRONT) .....	121 - 64
4J3	FEEDER HOUSE DRIVE TIGHTENER .....	121 - 58	4J13	FINE CUT STRAW CHOPPER DRIVES (REAR) .....	121 - 68
4B18	FEEDER HOUSE DRIVE TIGHTENER (FIXED SPEED) .....	110 - 12			
4D3	FEEDER HOUSE DUST FAN BELT, LH .....	110 - 48			
4D1	FEEDER HOUSE DUST FAN, LH SIDE .....	110 - 46			
4C10	FEEDER HOUSE FLOOR .....	110 - 30			
4B24	FEEDER HOUSE FRAME .....	110 - 18			
4C3	FEEDER HOUSE FRAME, TILT BEAM & CLOSURE PLATES, CONTOUR MASTER .....	110 - 22			

## ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
4E16	FINGER GRATE, SPIKE-TOOTH .....	120-26	1E1	FUEL LEAK-OFF LINES .....	24-42
4F23	FINGERS, PLASTIC, CHAFFER .....	120-60	1E3	FUEL LEAK-OFF LINES .....	24-44
4J17	FINS, SUPPORTS AND DECK, STRAW CHOPPER.....	121-72	1F1	FUEL PUMP, WATER SEPARATOR, AND FUEL SENDER .....	30-4
3B23	FITTINGS AND HOSES, OIL COOLER FEEDER HOUSE.....	70-16	1F1	FUEL SENDER .....	30-4
1C11	FITTINGS, CYLINDER BLOCK .....	24-2	1E3	FUEL SHUT-OFF SOLENOID (FIP) .....	24-44
1D24	FITTINGS, ETHER STARTING .....	24-41	1E23	FUEL TANK, SUPPORTS, AND FITTINGS .....	30-2
1E23	FITTINGS, FUEL TANK .....	30-2	1E6	FUEL TRANSFER PUMP (ROBERT BOSCH) .....	24-47
3E8	FITTINGS, HOSES, TILT CYLINDER CONTOUR MASTER.....	70-81	<b>G</b>		
1F3	FITTINGS, TANK FUEL LINES .....	30-6	1D4	GASKET ADHESIVE, ROCKER ARM COVER .....	24-21
1E8	FIXED FAN DRIVE .....	24-49	1E11	GASKET KIT, CYLINDER HEAD .....	24-52
2G17	FIXED REAR AXLE .....	60-36	1E11	GASKET KIT, ENGINE REBUILD .....	24-52
2G22	FIXED REAR AXLE STEERING TIE RODS.....	60-41	1E11	GASKET KIT, SHORT BLOCK .....	24-52
4B18	FIXED SPEED FEEDER HOUSE DRIVE TIGHTENER..	110-12	1D1	GASKET, CYLINDER HEAD .....	24-18
3E18	FLAT O-RING KIT, HYDRAULIC.....	70-92	1D16	GASKET, INTAKE MANIFOLD .....	24-33
3H4	FLOOR MAT, CAB.....	90-2	1D11	GASKET, OIL FILTER HOUSING .....	24-28
4C10	FLOOR, FEEDER HOUSE .....	110-30	1D13	GASKET, OIL PAN .....	24-30
3B13	FLOW CONTROL VALVE, REEL DRIVE .....	70-6	1D7	GASKET, OIL PUMP .....	24-24
5C5	FLOW CONTROL VALVE, REEL DRIVE .....	125-20	1D9	GASKET, OIL PUMP INTAKE .....	24-26
1C23	FLYWHEEL.....	24-15	1C22	GASKET, REAR OIL SEAL .....	24-14
1C23	FLYWHEEL HUB .....	24-15	1D4	GASKET, ROCKER ARM COVER .....	24-21
3H6	FOAM, SEALS AND SOUND DEADENING, CAB .....	90-4	1D19	GASKET, THERMOSTAT .....	24-36
1C25	FOLLOWER, CAMSHAFT .....	24-17	1C24	GASKET, TIMING GEAR COVER.....	24-16
1D3	FOLLOWER, CAMSHAFT .....	24-20	1D21	GASKET, TURBOCHARGER .....	24-38
3I11	FOOT PEDAL, FEEDER HOUSE REVERSER .....	90-34	1D19	GASKET, WATER MANIFOLD .....	24-36
4B13	FOOT PEDAL, FEEDER HOUSE REVERSER .....	110-6	1D17	GASKET, WATER PUMP .....	24-34
3D14	FOUR STACK SOLENOID CONTROL VALVE .....	70-62	1D23	GASKETS, EXHAUST MANIFOLD .....	24-40
2E17	FOUR WHEEL DRIVE HYDRAULIC LINES AND HOS ES, L.H. ....	50-88	4B11	GEAR BOX, REVERSER.....	110-4
4F19	FRAME ARMS, PRECLEANER CHAFFER .....	120-56	4H19	GEAR CASE, DUAL-RANGE CYLINDER DRIVE.....	121-26
3H16	FRAME, CAB AND SUPPORT .....	90-14	5E24	GEAR CASE, VERTICAL AUGER LOWER .....	130-34
5B20	FRAME, CHAFF SPREADER DISC .....	125-10	1C25	GEAR, CAMSHAFT .....	24-17
4G1	FRAME, CHAFFER .....	120-62	4H19	GEAR, DUAL-RANGE CYLINDER DRIVE .....	121-26
4B24	FRAME, FEEDER HOUSE .....	110-18	2C9	GEAR, FINAL DRIVE (RING AND PINION) .....	50-26
4C3	FRAME, FEEDER HOUSE, CONTOUR MASTER .....	110-22	1E3	GEAR, INJECTION PUMP.....	24-44
1B21	FRAME, RADIATOR .....	20-16	1C19	GEAR, OIL PUMP DRIVE .....	24-11
3F3	FRAME, SEPARATOR.....	80-2	1D7	GEAR, OIL PUMP DRIVE .....	24-24
4G5	FRAME, SIEVE .....	120-66	4B11	GEAR, REVERSER GEARBOX .....	110-4
1F23	FRONT AND REAR TURN AND TAIL LIGHTS .....	40-9	1C23	GEAR, STARTER.....	24-15
2B18	FRONT AXLE (PLANETARY FINAL DRIVE) .....	50-10	4I13	GEAR, STRAW WALKER DRIVE GEARCASE .....	121-44
2B17	FRONT AXLE (RING AND PINION FINAL DRIVE) .....	50-9	4I9	GEARCASE DRIVE, STRAW WALKER .....	121-40
3G5	FRONT CORNER SHEET (R.H.) .....	80-30	5E10	GEARCASE, CLEAN GRAIN ELEVATOR .....	130-20
3G9	FRONT CORNER SHEET AND DOOR (L.H.) .....	80-34	4H5	GEARCASE, DRIVE SHAFT AND PRIMARY COUNTERSHAFT .....	121-12
1C24	FRONT OIL SEAL .....	24-16	4G24	GEARCASE, ENGINE .....	121-6
4B15	FRONT SHAFT WITH REVERSER (VARIABLE).....	110-8	4H1	GEARCASE, ENGINE .....	121-8
3G13	FRONT SHIELD ASSEMBLY, LEFT SIDE .....	80-38	4H3	GEARCASE, ENGINE .....	121-10
3G19	FRONT SHIELD ASSEMBLY, RIGHT SIDE.....	80-44	5F9	GEARCASE, HORIZONTAL UNLOADING AUGER DRIVE .....	130-44
2G5	FRONT STEERING HOSES AND LINES.....	60-22	4H7	GEARCASE, PRIMARY COUNTERSHAFT .....	121-14
4B9	FRONT VARIABLE DRIVE SHEAVE AND MOUNTINGS .....	110-2	4H9	GEARCASE, PRIMARY COUNTERSHAFT .....	121-16
1D19	FRONT WATER MANIFOLD .....	24-36	2C5	GEARS, DIFFERENTIAL .....	50-22
5H4	FRONT WHEEL DECALS .....	170-20	2E3	GEARS, FINAL DRIVE PINION SHAFT .....	50-74
1E9	FUEL CHECK VALVE .....	24-50	2E5	GEARS, FINAL DRIVE PINION SHAFT .....	50-76
1F5	FUEL COOLER .....	30-8	2C1	GEARS, TRANSMISSION .....	50-18
1E9	FUEL FILTER.....	24-50	2C3	GEARS, TRANSMISSION PINION .....	50-20
1E9	FUEL FILTER BASE .....	24-50	2B24	GEARSHIFT LEVER AND LINKAGE .....	50-16
1E9	FUEL FILTER LINES .....	24-50	3I9	GEARSHIFT LEVER AND LINKAGE .....	90-32
1E1	FUEL INJ LINES .....	24-42	3H14	GLASS, CAB AND DOOR.....	90-12
1E7	FUEL INJECTION NOZZLE.....	24-48	3J9	GLOVE BOX AND ARM REST, R.H. ....	90-58
1E1	FUEL INJECTION NOZZLES (ROBERT BOSCH) .....	24-42	5E20	GRAIN TANK AND CURTAINS.....	130-30
1E3	FUEL INJECTION PUMP.....	24-44	5E18	GRAIN TANK BASE.....	130-28
1H18	FUEL INJECTION PUMP.....	40-56	5F18	GRAIN TANK CROSS AUGERS.....	130-54
1E19	FUEL INJECTION PUMP ACCESS COVER .....	24-60	1I1	GRAIN TANK DUAL LEVEL MONITOR HARNESS.....	40-64
1E5	FUEL INJECTION PUMP HOUSING CONNECTORS ...	24-46			

## ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
5E22	GRAIN TANK EXTENSIONS .....	130 - 32	3C16	HEADER LIFT CYLINDER.....	70 - 35
4F17	GRAIN TANK LEAK KIT .....	120 - 54	3C11	HEADER LIFT LINES AND HOSES .....	70 - 30
1H24	GRAIN TANK LEVEL MONITOR.....	40 - 62	3D9	HEADER LIFT MODULE, SOLENOID CONTROL VALVE .....	70 - 56
1H24	GRAIN TANK LIGHT .....	40 - 62	2B10	HEADER LIFT/LOWER SWITCH .....	50 - 2
5E16	GRAIN TANK TOP.....	130 - 26	3H10	HEADLINER, CAB .....	90 - 8
1H24	GRAIN TANK UNLOADING AUGER LIMIT SWITCH ....	40 - 62	1F5	HEAT EXCHANGER, FUEL.....	30 - 8
3E3	GRAIN TANK UNLOADING DRIVE CYLINDER.....	70 - 76	1D23	HEAT SHIELD, EXHAUST MANIFOLD.....	24 - 40
3E3	GRAIN TANK UNLOADING DRIVE CYLINDER MOUNTING .....	70 - 76	1G11	HEATER AND AIR CONDITIONER SWITCH.....	40 - 22
5F1	GRAIN TANK VERTICAL UNLOADING AUGER .....	130 - 36	3I6	HEATER AND AIR CONDITIONING DUCTS .....	90 - 29
5F1	GRAIN TANK VERTICAL UNLOADING AUGER HOUSING.....	130 - 36	3J20	HEATER AND AIR CONDITIONING HOUSING AND FILTERS.....	90 - 70
1H24	GRAIN TANK WIRING HARNESS, LIGHT, LIMIT SWITCH AND LEVEL MONITOR .....	40 - 62	3K1	HEATER SYSTEM.....	90 - 76
4E4	GRATE AND RASP BAR CONCAVE .....	120 - 14	1G9	HEATER WIRING HARNESS .....	40 - 20
4E6	GRATE AND RASP BAR CONCAVE .....	120 - 16	3J22	HEATER/AIR CONDITIONING AND PRESSURIZING FAN .....	90 - 72
4E3	GRATE CURTAIN, BEATER .....	120 - 12	1C2	HEATER, COOLANT, ENGINE BLOCK .....	20 - 22
4E16	GRATE, FINGER, SPIKE-TOOTH.....	120 - 26	3I22	HEIGHT ADJUSTER, CAB SEAT .....	90 - 46
3I6	GRILLE, AIR DUCTS.....	90 - 29	2B15	HIGH FLOATATION DRIVE WHEELS PLANETARY FINAL DRIVE .....	50 - 7
3F15	GRIP, REAR LADDER.....	80 - 14	5D18	HINGED DOOR, LOWER AUGER, CLEAN GRAIN.....	130 - 2
5B16	GUARD AND STRAW SPREADER MOUNTING .....	125 - 6	1I9	HOLDDOWN, BATTERY .....	40 - 73
5B18	GUARD, STRAW SPREADER .....	125 - 8	3J15	HOLDER, CUP.....	90 - 64
3G11	GUIDE, FAN DRIVE.....	80 - 36	3F19	HOOD, REAR.....	80 - 18
4C14	GUIDES, TIGHTENER AND FEEDER CONVEYOR DRIVE CHAIN .....	110 - 34	5F14	HORIZONTAL UNLOADING AUGER (17- AND 20-FT.).....	130 - 50
<b>H</b>					
3I3	HAND RAIL, R.H.....	90 - 26	5F9	HORIZONTAL UNLOADING AUGER DRIVE GEARCASE .....	130 - 44
3H12	HANDLE, CAB DOOR .....	90 - 10	5F12	HORIZONTAL UNLOADING AUGER HOUSING (EXPORT) (17 AND 20 FT.) .....	130 - 48
3H16	HANDLE, FRONT CAB .....	90 - 14	5F10	HORIZONTAL UNLOADING AUGER HOUSING (20 FT.) .....	130 - 46
3G13	HANDLE, LEFT SIDE FRONT SHIELD .....	80 - 38	5F7	HORIZONTAL UNLOADING AUGER HUB SUPPORT ..	130 - 42
3G11	HANDLE, MUD SHIELDS (R.H.).....	80 - 36	5F3	HORIZONTAL UNLOADING AUGER SWIVEL.....	130 - 38
3G15	HANDLE, RIGHT SIDE SHIELD ASSEMBLY.....	80 - 40	2G1	HORN BUTTON .....	60 - 18
5B22	HANDLES AND SHIELDS, CHAFF SPREADER (DUAL MOTOR).....	125 - 12	3J16	HORN BUTTON .....	90 - 66
3H20	HANDRAILS, OPERATOR'S PIVOTING PLATFORM ....	90 - 18	3C20	HOSE AND MOUNTING, DUAL ACCUMULATOR HALF GALLON .....	70 - 40
3F7	HANDRAILS, REAR LADDER LANDING .....	80 - 6	3K4	HOSE, A/C COMPRESSOR .....	90 - 79
3K8	HARDWARE KIT, CAB .....	90 - 84	3E20	HOSE, CHARGE PRESSURE.....	70 - 94
1J3	HARNESS CONNECTORS, LOWER, FOR ENGINE.....	40 - 92	1B19	HOSE, COOLANT RECOVERY TANK .....	20 - 14
1J5	HARNESS CONNECTORS, UPPER, FOR ENGINE .....	40 - 94	1C4	HOSE, ENGINE CRANKCASE OIL DRAIN .....	20 - 24
1H7	HARNESS FOR REAR LIGHTS AND SHIELDS .....	40 - 44	3B16	HOSE, HYDRAULIC, VARIABLE DRIVE, FEEDER HOUSE.....	70 - 9
1H3	HARNESS WIRING, MAIN, L.H. CENTER .....	40 - 40	1B23	HOSE, INTERCOOLER .....	20 - 18
1H20	HARNESS, LOWER, ENGINE.....	40 - 58	3B23	HOSES AND FITTINGS, OIL COOLER FEEDER HOUSE.....	70 - 16
1E15	HARNESS, STARTER, WIRING .....	24 - 56	3D6	HOSES AND LINES, CYLINDER SPEED .....	70 - 52
1H18	HARNESS, UPPER, ENGINE .....	40 - 56	2E17	HOSES AND LINES, FOUR WHEEL DRIVE HYDRAU LIC, L.H. ....	50 - 88
1G9	HARNESS, WIRING, A/C, HEATER AND AIRSEAT .....	40 - 20	3C11	HOSES AND LINES, HEADER LIFT .....	70 - 30
1I5	HARNESS, WIRING, ALTERNATOR .....	40 - 68	2E15	HOSES AND LINES, HYDRO. OIL COOLER .....	50 - 86
1G1	HARNESS, WIRING, ARMREST.....	40 - 12	2E7	HOSES AND LINES, OIL, HYDROSTATIC DRIVE, LOWER (4 WHEEL DRIVE) .....	50 - 78
1F16	HARNESS, WIRING, CAB .....	40 - 2	3C1	HOSES AND LINES, REEL DRIVE, HYD., FRONT.....	70 - 20
1J9	HARNESS, WIRING, CONVENIENCE OUTLET .....	40 - 98	3B11	HOSES AND LINES, REEL DRIVE, HYDRAULIC, L.H. SIDE .....	70 - 4
1H5	HARNESS, WIRING, MAIN, L.H. CENTER .....	40 - 42	3C5	HOSES AND LINES, REEL LIFT .....	70 - 24
1H9	HARNESS, WIRING, R.H. MAIN.....	40 - 46	3C3	HOSES AND LINES, REEL PUMP .....	70 - 22
1G7	HARNESS, WIRING, STEERING COLUMN.....	40 - 18	2G5	HOSES AND LINES, STEERING, FRONT .....	60 - 22
1F20	HARVESTRAK GAUGE .....	40 - 6	2G11	HOSES AND LINES, STEERING, REAR (DUAL CYLINDER) .....	60 - 28
3I7	HARVESTRAK GAUGE .....	90 - 30	1B17	HOSES AND RADIATOR .....	20 - 12
1H16	HARVESTRAK MONITOR WIRING HARNESS .....	40 - 54	3C13	HOSES, CONTOUR MASTER (L.H.) .....	70 - 32
1D1	HEAD BOLT KIT .....	24 - 18	3E8	HOSES, FITTINGS, TILT CYLINDER CONTOUR MASTER.....	70 - 81
1D1	HEAD, CYLINDER .....	24 - 18	1F3	HOSES, FUEL LINES, TANK .....	30 - 6
5G14	HEADER BELTS .....	170 - 4			
4H11	HEADER ELECTROMAGNETIC CLUTCH .....	121 - 18			
5G7	HEADER HEIGHT CONTROL VALVE .....	160 - 3			
5G6	HEADER HEIGHT CONTROL, DIAL-A-MATIC HYDRAULIC LINE AND VALVE BLOCK .....	160 - 2			
5G8	HEADER HEIGHT CONTROL, ELECTRIC HARNESS, DIAL-A-MATIC .....	160 - 4			



## ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
1E3	INJECTION PUMP LUBE LINE .....	24 - 44	4K3	KNIFEBANK AND HOUSING, STRAW CHOPPER .....	121 - 82
1E3	INJECTION PUMP, ELECTRONIC FUEL .....	24 - 44			
1H23	INLET AIR TEMPERATURE SWITCH .....	40 - 61		L	
2D15	INNER COVER.....	50 - 60			
2E5	INNER HOUSING, FINAL DRIVE .....	50 - 76	1H1	L H MAIN WIRING HARNESS, L H FRONT .....	40 - 38
2C1	INPUT SHAFT, TRANSMISSION .....	50 - 18	1H7	L.H. AND R.H. MAIN WIRING HARNESS, L.H. AND R.H. REAR .....	40 - 44
1D1	INSERTS, VALVE SEAT .....	24 - 18	1G24	L.H. MAIN WIRING HARNESS, FRONT.....	40 - 36
1F20	INSTRUMENT PANEL, CAB POST .....	40 - 6	1H3	L.H. MAIN WIRING HARNESS, L.H. CENTER .....	40 - 40
3I7	INSTRUMENT PANEL, CAB POST .....	90 - 30	2G7	L.H. SIDE HOSES AND LINES, STEERING .....	60 - 24
1D16	INTAKE MANIFOLD.....	24 - 33	3H22	LADDER AND LATCH, OPERATOR'S PLATFORM .....	90 - 20
1D16	INTAKE MANIFOLD GASKET.....	24 - 33	3F15	LADDER, REAR.....	80 - 14
4D13	INTAKE SHIELD.....	110 - 58	5E16	LADDER, TOP GRAIN TANK .....	130 - 26
4F7	INTAKE SHIELDS, CLEANING FAN.....	120 - 44	1J20	LAMP ASSEMBLY, REAR - L.H. SIDE.....	40 - 109
4F9	INTAKE SHIELDS, CLEANING FAN.....	120 - 46	1J19	LAMP ASSEMBLY, REAR - R.H. SIDE .....	40 - 108
1F7	INTAKE TUBES AND AIR CLEANER.....	30 - 10	1J17	LAMP, INSTALLATION .....	40 - 106
1D1	INTAKE VALVES .....	24 - 18	3H20	LANDING, OPERATOR'S PLATFORM.....	90 - 18
1D9	INTAKE, ENGINE OIL PUMP .....	24 - 26	3I3	LANDING, R.H. ....	90 - 26
1B23	INTERCOOLER .....	20 - 18	3F15	LANDING, REAR LADDER .....	80 - 14
411	INTERMEDIATE SHAFT MOUNTING, CYLINDER DRIVE, DUAL-RANGE.....	121 - 32	3H22	LATCH AND LADDER, OPERATOR'S PLATFORM .....	90 - 20
4I3	INTERMEDIATE SHEAVE, CYLINDER DRIVE, DUAL-RANGE .....	121 - 34	3F17	LATCH ARM, REAR LADDER LANDING.....	80 - 16
	J		4C18	LATCH HANDLE, FEED PLATE .....	110 - 38
4I15	JACKSHAFT, STRAW WALKER DRIVE.....	121 - 46	3H12	LATCH, CAB DOOR .....	90 - 10
4C20	JAW, SLIP CLUTCH .....	110 - 40	5E24	LATCH, GRAIN TANK CLEAN OUT CHUTE .....	130 - 34
1C11	JETS, PISTON COOLING .....	24 - 2	3F15	LATCH, REAR LADDER .....	80 - 14
	K		5B12	LATCHES, CHOP-TO-BALE .....	125 - 5A
1C13	KEY ENGINE SERVICE PARTS.....	24 - 4	4F5	LEAF SCREENS, CLEANING FAN (CORN) .....	120 - 42
4K7	KEY STOCK, METRIC KIT .....	121 - 86	4F17	LEAK KIT, GRAIN TANK.....	120 - 54
1C19	KEY, DAMPER.....	24 - 11	3G13	LEFT SIDE FRONT SHIELD ASSEMBLY .....	80 - 38
1G5	KIT-CONVENIENCE, OUTLET .....	40 - 16	3G17	LEFT SIDE SHIELD ASSEMBLY .....	80 - 42
3J1	KIT, AIR SUSPENSION SEAT .....	90 - 50	3J13	LEFT-HAND ARMREST.....	90 - 62
3J3	KIT, AIR SUSPENSION SEAT .....	90 - 52	5H2	LEFT-HAND DECALS .....	170 - 18
3J5	KIT, AIR SUSPENSION SEAT .....	90 - 54	3I1	LEFT-HAND LANDING AND MIRROR .....	90 - 24
3J7	KIT, AIR SUSPENSION SEAT .....	90 - 56	1I1	LEVEL MONITOR WIRING HARNESS, DUAL.....	40 - 64
1E11	KIT, CYLINDER HEAD .....	24 - 52	1I1	LEVEL MONITOR, DUAL .....	40 - 64
1I20	KIT, ELECTRICAL CONNECTOR SERVICE .....	40 - 84	1H24	LEVEL MONITOR, GRAIN TANK .....	40 - 62
1I22	KIT, ELECTRICAL CONNECTOR SERVICE .....	40 - 86	2B10	LEVER ASSEMBLY, GEARSHIFT .....	50 - 2
1C16	KIT, ENGINE OVERHAUL.....	24 - 8	3I20	LEVER, ADJUSTER, OPERATOR'S SEAT .....	90 - 44
1E11	KIT, ENGINE REBUILD .....	24 - 52	5B14	LEVER, DECLUTCHING - CHOP-TO-DROP .....	125 - 5C
4F17	KIT, GRAIN TANK LEAK.....	120 - 54	2B24	LEVER, GEARSHIFT .....	50 - 16
1D1	KIT, HEAD BOLT .....	24 - 18	3I9	LEVER, GEARSHIFT .....	90 - 32
2D10	KIT, HYDROSTATIC DRIVE MOTOR (PLANETARY) .....	50 - 54	3C16	LIFT CYLINDER, HEADER .....	70 - 35
2C23	KIT, HYDROSTATIC DRIVE MOTOR (RING AND PINION) .....	50 - 42	1D5	LIFT STRAPS, ENGINE.....	24 - 22
4C7	KIT, LOCKOUT ADAPTER - CONTOUR MASTER (BELT PU & 4R CORN HEADS) .....	110 - 26	1J15	LIGHT SWITCH, SHOE ADJUSTING .....	40 - 104
4K7	KIT, METRIC KEY STOCK .....	121 - 86	1F15	LIGHT, CAB DOME .....	40 - 1
1C18	KIT, PISTON/LINER.....	24 - 10	1H24	LIGHT, GRAIN TANK.....	40 - 62
3I19	KIT, RETROFIT SEAT BELT (MACHINES PRIOR TO 1996 MODEL YEAR) .....	90 - 42	1I1	LIGHT, UNLOADING AUGER .....	40 - 64
4G11	KIT, STRAW WALKER BEARING.....	120 - 72	1G3	LIGHTER, CIGARETTE .....	40 - 14
1I24	KIT, TERMINAL AND WIRING .....	40 - 88	1F24	LIGHTING, AUXILIARY FIELD .....	40 - 10
3F5	KIT, UPRIGHT NO.1 .....	80 - 4	1F22	LIGHTS, CAB ROOF .....	40 - 8
3F6	KIT, UPRIGHT NO.5 .....	80 - 5	1J13	LIGHTS, FIELD .....	40 - 102
1D17	KIT, WATER PUMP SEAL.....	24 - 34	1F23	LIGHTS, FRONT AND REAR TAIL.....	40 - 9
1C20	KIT,UNDERSIZE CRANKSHAFT (CONNECTING ROD JOURNAL) .....	24 - 12	1F23	LIGHTS, FRONT AND REAR TURN .....	40 - 9
1E21	KIT,UNDERSIZED MAIN BEARING CRANKSHAFT .....	24 - 62	1I3	LIGHTS, SIDE FINDER .....	40 - 66
			1J16	LIGHTS, TRANSPORT WARNING .....	40 - 105
			4E3	LIMIT CURTAIN, BEATER GRATE.....	120 - 12
			4D1	LIMIT CURTAIN, DUST FAN.....	110 - 46
			1H24	LIMIT SWITCH, GRAIN TANK UNLOADING AUGER ....	40 - 62
			1E3	LINE, INJECTION PUMP LUBE .....	24 - 44
			1C18	LINER O-RINGS.....	24 - 10
			1C18	LINER SHIM.....	24 - 10
			1C18	LINERS, CYLINDER .....	24 - 10
			5C7	LINES AND FITTING, CHAFF SPREADER .....	125 - 22
			3D6	LINES AND HOSES, CYLINDER SPEED .....	70 - 52
			2E17	LINES AND HOSES, FOUR WHEEL DRIVE HYDRAU LIC, L.H.....	50 - 88

## ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
3C11	LINES AND HOSES, HEADER LIFT .....	70 - 30	5C17	LOWER TAILINGS AUGER SHAFT .....	125 - 32
2E15	LINES AND HOSES, HYDRO. OIL COOLER .....	50 - 86	5C17	LOWER TAILINGS AUGER SHAFT TIGHTENER .....	125 - 32
2E7	LINES AND HOSES, OIL, HYDROSTATIC DRIVE, LOWER (4 WHEEL DRIVE) .....	50 - 78	5C19	LOWER TAILINGS AUGER TROUGH .....	125 - 34
3C1	LINES AND HOSES, REEL DRIVE, HYD., FRONT.....	70 - 20	5C24	LOWER TROUGH SUPPORT AND TAILINGS DRIVE BRACKET .....	125 - 39
3B11	LINES AND HOSES, REEL DRIVE, HYDRAULIC, L.H. SIDE .....	70 - 4	5G3	LUBE BANK, UNLOADING AUGER LOWER .....	130 - 66
3C5	LINES AND HOSES, REEL LIFT .....	70 - 24	5G1	LUBE BANK, UNLOADING AUGER UPPER .....	130 - 64
3C3	LINES AND HOSES, REEL PUMP .....	70 - 22	5D14	LUBE HOSES L. H. ....	125 - 56
2G5	LINES AND HOSES, STEERING, FRONT .....	60 - 22	5D12	LUBE HOSES R. H. ....	125 - 54
2G11	LINES AND HOSES, STEERING, REAR (DUAL CYLINDER) .....	60 - 28	3B19	LUBE OIL PUMP WITH DUST SUPPRESSION .....	70 - 12
2E19	LINES AND HOSES, 4-WHEEL DRIVE .....	50 - 90	3B17	LUBE OIL PUMP, FEEDER HOUSE OIL COOLER.....	70 - 10
2F13	LINES, BRAKE, RESERVOIR, MASTER CYLINDER ....	60 - 6	2C1	LUBE PUMP, TRANSMISSION .....	50 - 18
1E9	LINES, FUEL FILTER .....	24 - 50		<b>M</b>	
1E1	LINES, FUEL INJ .....	24 - 42	1E17	MAGNETIC PICK-UP (ENGINE) .....	24 - 58
1E1	LINES, FUEL LEAK-OFF .....	24 - 42	1C11	MAIN BEARING CAPS .....	24 - 2
1E3	LINES, FUEL LEAK-OFF .....	24 - 44	1C21	MAIN BEARINGS .....	24 - 13
3C7	LINES, HOSES, REEL (FORE-AND-AFT), FRONT .....	70 - 26	3F3	MAIN FRAME, SEPARATOR .....	80 - 2
2G7	LINES, HOSES, STEERING, L.H. SIDE .....	60 - 24	3D21	MAIN HYDRAULIC PUMP .....	70 - 70
5C9	LINES, HOSES, VALVE AND PUMP, CHAFF SPREADER .....	125 - 24	2F3	MAIN HYDRAULIC PUMP - HYDROSTATIC DRIVE PUMP CONNECTING HARDWARE .....	50 - 98
3E9	LINES, HOSES, WET CLUTCH OIL COOLER .....	70 - 82	1G20	MAIN WIRING HARNESS, L.H. FRONT (S.N. -680100) .....	40 - 32
2E9	LINES, OIL, HYDROSTATIC DRIVE, LOWER (FOUR WHEEL DRIVE) .....	50 - 80	1H5	MAIN WIRING HARNESS,L.H. CENTER .....	40 - 42
2E11	LINES, OIL, HYDROSTATIC DRIVE, LOWER (TWO WHEEL DRIVE) .....	50 - 82	2D17	MANIFOLD AND PACKINGS .....	50 - 62
3D4	LINES, PRESSURE .....	70 - 50	3K3	MANIFOLD, A/C COMPRESSOR, R134A .....	90 - 78
3C9	LINES, REEL FORE-AND-AFT, L.H. SIDE .....	70 - 28	1D16	MANIFOLD, INTAKE .....	24 - 33
3C24	LINES, RETURN, HYDRAULIC .....	70 - 44	1D19	MANIFOLD, WATER, FRONT .....	24 - 36
2G9	LINES, STEERING R.H. SIDE .....	60 - 26	1D23	MANIFOLDS, EXHAUST .....	24 - 40
1F3	LINES, TANK FUEL .....	30 - 6	2F15	MASTER BRAKE CYLINDER .....	60 - 8
1D21	LINES, TURBOCHARGER OIL .....	24 - 38	2F13	MASTER CYLINDER, RESERVOIR, BRAKE LINES .....	60 - 6
3E1	LINES, UNLOADING AUGER SWING CYLINDER .....	70 - 74	2F11	MASTER CYLINDERS .....	60 - 4
3D1	LINES, UPPER RETURN, RESERVOIR .....	70 - 46	4K7	METRIC KEY STOCK KIT .....	121 - 86
2B24	LINKAGE, GEARSHIFT .....	50 - 16	3I1	MIRROR, LEFT-HAND REAR VIEW .....	90 - 24
3I9	LINKAGE, GEARSHIFT .....	90 - 32	3I3	MIRROR, R.H. ....	90 - 26
4J1	LINKAGE, SHEAVE, FAN DRIVE SPEED CONTROL....	121 - 56	1I16	MODULE, CENTRAL ELECTRONICS AND CIRCUIT BOARDS .....	40 - 80
4I23	LINKAGE, SPEED CONTROL, FAN DRIVE .....	121 - 54	5F7	MODULE, HORIZONTAL UNLOADING AUGER .....	130 - 42
5E7	LOADING AUGER, CLEAN GRAIN .....	130 - 16	1H3	MODULE, LOGIC .....	40 - 40
5E9	LOADING AUGER, CLEAN GRAIN, FOLD .....	130 - 18	1H5	MODULE, LOGIC .....	40 - 42
4C7	LOCKOUT ADAPTER KIT - CONTOUR MASTER (BELT PU & 4R CORN HEADS) .....	110 - 26	3D8	MODULE, SOLENOID CONTROL RELIEF VALVE .....	70 - 54
4H21	LOCKOUT ARM, DUAL-RANGE .....	121 - 28	1H16	MONITOR WIRING HARNESS, HARVESTRAK .....	40 - 54
4C5	LOCKOUT ASSEMBLY - CONTOUR MASTER (OPTIONAL) .....	110 - 24	1H24	MONITOR, LEVEL, GRAIN TANK .....	40 - 62
1H3	LOGIC MODULE .....	40 - 40	5B20	MOTOR AND DISC, CHAFF SPREADER .....	125 - 10
1H5	LOGIC MODULE .....	40 - 42	2F1	MOTOR DRIVE, HYDROSTATIC .....	50 - 96
4F19	LOUVER, CHAFFER .....	120 - 56	1I8	MOTOR, ADJUSTING, CONCAVE .....	40 - 72
4F13	LOUVER, PRECLEANING CHAFFER .....	120 - 50	1I4	MOTOR, ADJUSTING, SEPARATOR FAN DRIVE .....	40 - 67
1H9	LOW SHAFT SPEED SENSOR .....	40 - 46	2D12	MOTOR, CAM LOBE (STEERABLE MOTOR) .....	50 - 56
1H15	LOW SHAFT SPEED SENSORS AND BRACKETS .....	40 - 52	3B15	MOTOR, CHAFF SPREADER (EATON) .....	70 - 8
5D18	LOWER AUGER, CLEAN GRAIN .....	130 - 2	2F1	MOTOR, HYDROSTATIC DRIVE .....	50 - 96
5D20	LOWER ELEVATOR, CLEAN GRAIN .....	130 - 4	2D8	MOTOR, HYDROSTATIC DRIVE, FIXED .....	50 - 52
5D22	LOWER ELEVATOR, CLEAN GRAIN .....	130 - 6	2C21	MOTOR, HYDROSTATIC DRIVE, FIXED (RING AND PINION) .....	50 - 40
1H20	LOWER HARNESS FOR ENGINE .....	40 - 58	1J7	MOTOR, REEL SPEED, AND BRACKET .....	40 - 96
2E9	LOWER HYDROSTATIC DRIVE OIL LINES AND HOSES (FOUR WHEEL DRIVE) .....	50 - 80	5C1	MOUNTING SUPPORT, CHAFF SPREADER .....	125 - 16
2E11	LOWER HYDROSTATIC DRIVE OIL LINES AND HOSES (TWO WHEEL DRIVE) .....	50 - 82	1I12	MOUNTING SUPPORT, ELECTRONIC CONTROL UNIT ( -XXXXXX) .....	40 - 76
2E7	LOWER HYDROSTATIC DRIVE OIL LINES AND HOSES (4 WHEEL DRIVE) .....	50 - 78	1I6	MOUNTING, ALTERNATOR .....	40 - 69
2G3	LOWER STEERING COLUMN .....	60 - 20	3E3	MOUNTING, GRAIN TANK UNLOADING DRIVE CYLINDER .....	70 - 76
5C17	LOWER TAILINGS AUGER .....	125 - 32	3D3	MOUNTING, HYDRAULIC/HYDRO OIL RESERVOIR ....	70 - 48
5G15	LOWER TAILINGS AUGER BELT .....	170 - 5	3C22	MOUNTING, ONE GALLON ACCUMULATOR .....	70 - 42
5C25	LOWER TAILINGS AUGER CHAIN TIGHTENER .....	125 - 40	5B16	MOUNTING, STRAW SPREADER AND GUARD .....	125 - 6
5D1	LOWER TAILINGS AUGER DRIVE TIGHTENER .....	125 - 42	3E5	MOUNTING, UNLOADING AUGER SWING CYLINDER .....	70 - 78

## ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
3D16	MOUNTINGS, FIVE STACK SOLENOID CONTROL VALVE .....	70 - 64	1D7	OIL PUMP DRIVE GEAR .....	24 - 24
3D14	MOUNTINGS, FOUR STACK SOLENOID CONTROL VALVE .....	70 - 62	1D7	OIL PUMP GASKET .....	24 - 24
3D19	MOUNTINGS, SIX STACK SOLENOID CONTROL VALVE .....	70 - 68	1D9	OIL PUMP INTAKE .....	24 - 26
3F23	MUD AND FAN DRIVE SHIELDS (L.H.) .....	80 - 22	1D9	OIL PUMP INTAKE GASKET .....	24 - 26
2E24	MUD SHIELDS .....	50 - 95	1D7	OIL PUMP, ENGINE .....	24 - 24
3F23	MUD SHIELDS (L.H.) .....	80 - 22	1C24	OIL SEAL, CRANKSHAFT FRONT .....	24 - 16
3G11	MUD SHIELDS (R.H.) .....	80 - 36	1C22	OIL SEAL, REAR .....	24 - 14
1F9	MUFFLER AND EXHAUST PIPE .....	30 - 12	3K3	OIL, A/C COMPRESSOR .....	90 - 78
<b>N</b>			1C10	OIL, ENGINE (TORQ-GARD, PLUS-50) .....	24 - 1
3J9	NEUTRAL START SWITCH .....	90 - 58	3C22	ONE GALLON ACCUMULATOR AND MOUNTING .....	70 - 42
3F5	NO. 1 UPRIGHT KIT .....	80 - 4	1G3	OPERATOR'S ARMREST PANEL .....	40 - 14
3F6	NO. 5 UPRIGHT KIT .....	80 - 5	1F18	OPERATOR'S OVERHEAD CONSOLE PANEL .....	40 - 4
1E7	NOZZLE, FUEL INJECTION .....	24 - 48	3H22	OPERATOR'S PLATFORM LADDER AND LATCH .....	90 - 20
1E1	NOZZLES, FUEL INJECTION (ROBERT BOSCH) .....	24 - 42	3H20	OPERATOR'S PLATFORM LANDING .....	90 - 18
<b>O</b>			3I15	OPERATOR'S SEAT AND BACKREST .....	90 - 38
1D17	O-RING, WATER PUMP .....	24 - 34	3I22	OPERATOR'S SEAT HEIGHT ADJUSTER .....	90 - 46
3K4	O-RINGS, A/C COMPRESSOR HOSE .....	90 - 79	3I17	OPERATOR'S SEAT SEATBELT .....	90 - 40
3E18	O-RINGS, HYDRAULIC, FLAT .....	70 - 92	2E3	OUTER HOUSING FINAL DRIVE .....	50 - 74
1C18	O-RINGS, LINER .....	24 - 10	1J9	OUTLET, CONVENIENCE .....	40 - 98
3E11	OIL COOLER .....	70 - 84	1G5	OUTLET, CONVENIENCE, KIT .....	40 - 16
1D6	OIL COOLER ADAPTER .....	24 - 23	1J2	OUTLET, ELECTRICAL SERVICE .....	40 - 91
1D10	OIL COOLER BYPASS ADAPTER .....	24 - 27	1C16	OVERHAUL KIT, ENGINE .....	24 - 8
1D10	OIL COOLER BYPASS TUBES .....	24 - 27	1F18	OVERHEAD CONSOLE PANEL .....	40 - 4
1D6	OIL COOLER COVER .....	24 - 23	<b>P</b>		
2E15	OIL COOLER LINES AND HOSES, HYDRO. .....	50 - 86	2D17	PACKINGS AND MANIFOLD .....	50 - 62
3B17	OIL COOLER LUBE PUMP, FEEDER HOUSE .....	70 - 10	3G3	PAD, SERVICE ACCESS SHIELD (L.H.) .....	80 - 28
1D6	OIL COOLER TUBES .....	24 - 23	3G1	PAD, SERVICE ACCESS SHIELD (R.H.) .....	80 - 26
1D6	OIL COOLER, ENGINE .....	24 - 23	5D3	PADDLES, UPPER TAILINGS AUGER .....	125 - 44
3B19	OIL COOLER, FEEDER HOUSE .....	70 - 12	1D13	PAN, OIL .....	24 - 30
3B21	OIL COOLER, FEEDER HOUSE GEARCASE .....	70 - 14	4G7	PAN, SHAKER .....	120 - 68
3B23	OIL COOLER, FITTINGS AND HOSES FEEDER HOUSE .....	70 - 16	1G3	PANEL, ARMREST .....	40 - 14
1C4	OIL DRAIN, ENGINE CRANKCASE .....	20 - 24	1F20	PANEL, INSTRUMENT, CAB POST .....	40 - 6
3E13	OIL FILTER ASSEMBLY, ENGINE GEARCASE .....	70 - 86	3I7	PANEL, INSTRUMENT, CAB POST .....	90 - 30
1D11	OIL FILTER BASE .....	24 - 28	1F18	PANEL, OVERHEAD CONSOLE .....	40 - 4
1D11	OIL FILTER BYPASS VALVE .....	24 - 28	3H4	PANELS, CAB .....	90 - 2
1D11	OIL FILTER HOUSING .....	24 - 28	3H10	PANELS, CAB INTERIOR TRIM .....	90 - 8
1D11	OIL FILTER HOUSING GASKET .....	24 - 28	1H3	PARK BRAKE SWITCH .....	40 - 40
1D11	OIL FILTER, ENGINE .....	24 - 28	2F9	PARKING BRAKE PEDAL AND SEAL .....	60 - 2
2E9	OIL HOSES, HYDROSTATIC DRIVE, LOWER (FOUR WHEEL DRIVE) .....	50 - 80	1C13	PARTS, KEY ENGINE SERVICE .....	24 - 4
2E11	OIL HOSES, HYDROSTATIC DRIVE, LOWER (TWO WHEEL DRIVE) .....	50 - 82	3I13	PASSENGER SEAT .....	90 - 36
2E13	OIL HOSES, UPPER, HYDROSTATIC DRIVE .....	50 - 84	2F9	PEDAL AND SEAL, PARKING BRAKE .....	60 - 2
2E7	OIL LINES AND HOSES, HYDROSTATIC DRIVE, LOWER (4 WHEEL DRIVE) .....	50 - 78	3I11	PEDAL, REVERSER FOOT CONTROL, FEEDER HOUSE .....	90 - 34
2E9	OIL LINES HYDROSTATIC DRIVE, LOWER (FOUR WHEEL DRIVE) .....	50 - 80	4B13	PEDAL, REVERSER FOOT CONTROL, FEEDER HOUSE .....	110 - 6
2E11	OIL LINES HYDROSTATIC DRIVE, LOWER (TWO WHEEL DRIVE) .....	50 - 82	2G3	PEDAL, STEERING COLUMN (LOWER) .....	60 - 20
1D21	OIL LINES, TURBOCHARGER .....	24 - 38	2F11	PEDALS, BRAKE AND CYLINDERS, MASTER .....	60 - 4
1D13	OIL PAN .....	24 - 30	1E17	PICK-UP, MAGNETIC (ENGINE) .....	24 - 58
1D13	OIL PAN DRAIN VALVE .....	24 - 30	2E3	PINION SHAFT BEARINGS, FINAL DRIVE .....	50 - 74
1D13	OIL PAN GASKET .....	24 - 30	2E5	PINION SHAFT BEARINGS, FINAL DRIVE .....	50 - 76
1D6	OIL PRESSURE REGULATING VALVE .....	24 - 23	2E3	PINION SHAFT GEARS, FINAL DRIVE .....	50 - 74
1D11	OIL PRESSURE REGULATING VALVE .....	24 - 28	2E5	PINION SHAFT GEARS, FINAL DRIVE .....	50 - 76
1H20	OIL PRESSURE SENDING UNIT, ENGINE .....	40 - 58	2C10	PINION, FINAL DRIVE (RING AND PINION) .....	50 - 28
1C19	OIL PUMP DRIVE GEAR .....	24 - 11	4I9	PINION, STRAW WALKER DRIVE GEARCASE .....	121 - 40
			4B11	PINIONS, REVERSER GEARBOX .....	110 - 4
			1C11	PISTON COOLING JETS .....	24 - 2
			1C18	PISTON RINGS .....	24 - 10
			1C18	PISTON/LINER KIT .....	24 - 10
			2D19	PISTON, CAM, AND CARRIER (STEERABLE MOTOR) .....	50 - 64
			1C18	PISTON, ENGINE .....	24 - 10
			3E15	PISTON, PRESSURE REGULATOR .....	70 - 88
			4C22	PISTON, VARIABLE DRIVE COUNTERSHAFT .....	110 - 42

## ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
4J3	PIVOT, FEEDER HOUSE DRIVE TIGHTENER .....	121 - 58	3D23	PUMP, REEL BELT PICKUP, DRIVE .....	70 - 72
3H20	PIVOTING PLATFORM AND HANDRAILS.....	90 - 18	2F21	PUMP, STEERING.....	60 - 14
2D21	PIVOTS, CAPS AND YOKE (STEERABLE MOTOR) ....	50 - 66	2G3	PUMP, STEERING.....	60 - 20
2B16	PLANETARY FINAL DRIVE WIDE-SPACED		1D17	PUMP, WATER .....	24 - 34
	DUAL WHEELS .....	50 - 8	3I11	PUSH PULL CABLE, REVERSER FOOT CONTROL ....	90 - 34
2E3	PLANETARY PINION, AND BEARINGS.....	50 - 74	1D3	PUSH RODS .....	24 - 20
2E2	PLANETARY PINION, FINAL DRIVE .....	50 - 72			
2B22	PLANETARY, TRANSMISSION.....	50 - 14		Q	
5F16	PLATE, CROSS AUGER BEARING, L.H.....	130 - 52	2D18	QUILL, BEARING AND COVER (STEERABLE MOTOR).....	50 - 63
4C3	PLATES, CLOSURE, FEEDER HOUSE - CONTOUR				
	MASTER .....	110 - 22		R	
4C1	PLATES, WEAR, FEEDER HOUSE - CONTOUR				
	MASTE .....	110 - 20	1H9	R.H. MAIN WIRING HARNESS.....	40 - 46
3H20	PLATFORM AND HANDRAILS, PIVOTING .....	90 - 18	2G9	R.H. SIDE STEERING LINES .....	60 - 26
3F13	PLATFORM AND STEP, ENGINE ACCESS .....	80 - 12	1B17	RADIATOR .....	20 - 12
3H22	PLATFORM LADDER AND LATCH, OPERATOR'S .....	90 - 20	1B17	RADIATOR AND HOSES .....	20 - 12
3F9	PLATFORM, ENGINE .....	80 - 8	3F7	RADIATOR DOOR .....	80 - 6
3F11	PLATFORM, ENGINE .....	80 - 10	1B21	RADIATOR SHELL AND SEALS.....	20 - 16
3F15	PLATFORM, REAR LADDER .....	80 - 14	1G18	RADIO, SPEAKERS AND ANTENNA .....	40 - 30
3B25	PLATFORM, 200 SERIES CUTTING, CONVERSION		4K3	RAIL, STRAW CHOPPER HOUSING, KNIFE BANK .....	121 - 82
	PARTS .....	70 - 19	4E4	RASP BAR CONCAVE AND GRATE .....	120 - 14
1H22	PLUGGED AIR FILTER WARNING SWITCH.....	40 - 60	4E6	RASP BAR CONCAVE AND GRATE .....	120 - 16
1H22	PLUGGED ENGINE AIR FILTER WARNING SWITCH ..	40 - 60	4G15	RASP BAR CYLINDER, SEPARATOR CURTAIN .....	120 - 76
1H11	PLUGGING SENSING SWITCH, STRAW WALKER .....	40 - 48	4E1	RASP BAR THRESHING CYLINDER .....	120 - 10
4F13	PRE-CLEANING CHAFFER.....	120 - 50	3H8	REAR AND SIDE CAB SEALS .....	90 - 6
4F15	PRECLEANER CHAFFER FRAME .....	120 - 52	2G21	REAR AXLE SPINDLE HOUSING .....	60 - 40
4F19	PRECLEANER CHAFFER FRAME ARMS .....	120 - 56	2G19	REAR AXLE SPINDLES .....	60 - 38
3B9	PRESSURE GAUGE, ACCUMULATOR .....	70 - 2	2G16	REAR AXLE SUPPORT.....	60 - 34
3E20	PRESSURE HOSE, CHARGE .....	70 - 94	2G14	REAR AXLE TRASH SHIELD .....	60 - 32
3D4	PRESSURE LINES AND HOSES .....	70 - 50	2G18	REAR AXLE, ADJUSTABLE .....	60 - 37
3E15	PRESSURE REGULATOR, ENGINE GEARCASE.....	70 - 88	2G17	REAR AXLE, FIXED .....	60 - 36
3E13	PRESSURE SWITCH, ENGINE GEARCASE OIL		3G7	REAR CORNER SHEET (L.H.).....	80 - 32
	FILTER ASSEMBLY .....	70 - 86	3F19	REAR HOOD .....	80 - 18
3J22	PRESSURIZING FAN AND AIR CONDITIONING/ HEATER FAN .....	90 - 72	3F15	REAR LADDER .....	80 - 14
4H7	PRIMARY COUNTERSHAFT GEARCASE .....	121 - 14	3F7	REAR LADDER LANDING HANDRAILS.....	80 - 6
4H9	PRIMARY COUNTERSHAFT GEARCASE .....	121 - 16	3F17	REAR LADDER LANDING LATCH ARM .....	80 - 16
4H5	PRIMARY COUNTERSHAFT, GEARCASE AND		1J20	REAR LAMP ASSEMBLY - L.H. SIDE .....	40 - 109
	DRIVE SHAFT .....	121 - 12	1J19	REAR LAMP ASSEMBLY - R.H. SIDE.....	40 - 108
4H13	PRIMARY COUNTERSHAFT, SUPPORTS AND VARI- ABLE SHEAVE .....	121 - 20	5D8	REAR LEFT SIDE TAILINGS SHIELD .....	125 - 50
1E18	PULLEY, AIR CONDITIONER COMPRESSOR FAN .....	24 - 59	1H7	REAR LIGHT HARNESS AND SHIELDS .....	40 - 44
1E13	PULLEY, CRANKSHAFT AND DAMPERS .....	24 - 54	1C22	REAR OIL SEAL .....	24 - 14
1E8	PULLEY, FAN, HUB.....	24 - 49	1C22	REAR OIL SEAL GASKET .....	24 - 14
4I7	PULLEY, SECONDARY COUNTERSHAFT DRIVE .....	121 - 38	1C22	REAR OIL SEAL HOUSING .....	24 - 14
4H1	PUMP DRIVE AND SEPARATOR, GEARCASE .....	121 - 8	2G11	REAR STEERING LINES AND HOSES (DUAL CYLINDER) .....	60 - 28
4H3	PUMP DRIVE AND SEPARATOR, GEARCASE .....	121 - 10	4J11	REAR STRAW CHOPPER DRIVES .....	121 - 66
4G24	PUMP DRIVE SHAFT AND SEPARATOR DRIVE		4J13	REAR STRAW CHOPPER DRIVES, FINE CUT .....	121 - 68
	WET-CLUTCH, GEARCASE .....	121 - 6	1B25	REAR SUPPORT .....	20 - 20
4J5	PUMP MOUNTING SHEAVE, REEL / BELT PICKUP		5D8	REAR TAILINGS SHIELD, LEFT SIDE.....	125 - 50
	DRIVE .....	121 - 60	3I1	REAR VIEW MIRROR, LEFT-HAND.....	90 - 24
5C13	PUMP, CHAFF SPREADER .....	125 - 28	5H4	REAR WHEEL DECALS .....	170 - 20
3B17	PUMP, FEEDER HOUSE OIL COOLER.....	70 - 10	2H5	REAR WHEELS (4-WHEEL DRIVE/CAM LODE MOTOR).....	60 - 48
1F1	PUMP, FUEL .....	30 - 4	2H3	REAR WHEELS AND WHEEL WEIGHTS .....	60 - 46
1E3	PUMP, FUEL INJECTION .....	24 - 44	5G14	REEL BELTS .....	170 - 4
1E6	PUMP, FUEL TRANSFER (ROBERT BOSCH) .....	24 - 47	3B13	REEL DRIVE FLOW CONTROL VALVE .....	70 - 6
2D6	PUMP, HYDROSTATIC DRIVE CHARGE (PLANETARY) .....	50 - 50	5C5	REEL DRIVE FLOW CONTROL VALVE .....	125 - 20
2D7	PUMP, HYDROSTATIC DRIVE CHARGE (PLANETARY) .....	50 - 51	3B11	REEL DRIVE HYD. LINES AND HOSES, L.H. SIDE.....	70 - 4
2C17	PUMP, HYDROSTATIC DRIVE CHARGE (RING AND PINION) .....	50 - 36	3C1	REEL DRIVE HYD. LINES AND HOSES, FRONT.....	70 - 20
2C18	PUMP, HYDROSTATIC DRIVE CHARGE (RING AND PINION) .....	50 - 37	3C7	REEL FORE-AND-AFT LINES AND HOSES, FRONT....	70 - 26
3B17	PUMP, LUBE OIL, FEEDER HOUSE OIL COOLER .....	70 - 10	3C9	REEL FORE-AND-AFT LINES, L.H. SIDE .....	70 - 28
3D21	PUMP, MAIN HYDRAULIC .....	70 - 70	3D13	REEL FORE/AFT SOLENOID CONTROL VALVE .....	70 - 60
1D7	PUMP, OIL ENGINE .....	24 - 24			

**ALPHABETICAL INDEX - CONTINUED**

<i>GRID</i>		<i>PAGE</i>	<i>GRID</i>		<i>PAGE</i>
3C5	REEL LIFT LINES AND HOSES .....	70 - 24	5G24	SAFETY DECALS AND LOCATIONS .....	170 - 14
2B10	REEL LIFT/LOWER OR FEEDERHOUSE SPEED CONTROL SWITCH .....	50 - 2	3J9	SAFETY START SWITCH .....	90 - 58
3D11	REEL LIFT, SOLENOID CONTROL VALVE .....	70 - 58	4B22	SAFETY STOP, CONTOUR MASTER FEEDER HOUSE .....	110 - 16
3C3	REEL PUMP LINES AND HOSES .....	70 - 22	4B20	SAFETY STOP, DRIVE SHIELDS, FEEDER HOUSE .....	110 - 14
1J7	REEL SPEED MOTOR AND BRACKET .....	40 - 96	5F24	SAMPLING TROUGH, GRAIN TANK .....	130 - 62
4J6	REEL/BELT PICKUP CHARGE PUMP MOUNTING AND SHEAVE .....	121 - 61	4D1	SCOOP, DUST FAN .....	110 - 46
3D23	REEL, BELT PICKUP DRIVE PUMP .....	70 - 72	4C24	SCOOP, RETURN FLOOR, FEEDER HOUSE .....	110 - 44
3E15	REGULATOR, ENGINE GEARCASE PRESSURE .....	70 - 88	1B9	SCREEN DOOR, ROTARY .....	20 - 4
4B24	REINFORCEMENT, FEEDER HOUSE FRAME .....	110 - 18	1B7	SCREEN DRIVE, ROTARY .....	20 - 2
3F19	REINFORCEMENT, REAR HOOD .....	80 - 18	4F5	SCREENS, CLEANING FAN LEAF (CORN) .....	120 - 42
5B16	REINFORCEMENT, STRAW SPREADER MOUNTING ..	125 - 6	2F9	SEAL AND BRAKE PEDAL, PARKING .....	60 - 2
1110	RELAYS, ENGINE CIRCUIT BREAKER .....	40 - 74	3D23	SEAL KIT, REEL BELT PICKUP DRIVE PUMP .....	70 - 72
3D8	RELIEF VALVE MODULE, SOLENOID CONTROL .....	70 - 54	3D8	SEAL KIT, SOLENOID CONTROL RELIEF VALVE .....	70 - 54
4I3	RELIEF VALVE, DUAL RANGE CYLINDER .....	121 - 34	2F21	SEAL KIT, STEERING PUMP .....	60 - 14
3D1	RESERVOIR UPPER RETURN LINES, HOSES .....	70 - 46	3E7	SEAL KIT, TILT CYLINDER, CONTOUR MASTER .....	70 - 80
2F13	RESERVOIR, BRAKE LINES, MASTER CYLINDER .....	60 - 6	3K3	SEAL, A/C COMPRESSOR .....	90 - 78
3D3	RESERVOIR, HYDRAULIC/HYDROSTATIC .....	70 - 48	3H14	SEAL, CAB DOOR .....	90 - 12
2F5	RESEVOIR, RETURN LINE .....	50 - 100	4D24	SEAL, CYLINDER SHEAR BAR .....	120 - 8
3E1	RETRACT LINES, HOSES, UNLOADING AUGER .....	70 - 74	1C24	SEAL, FRONT OIL .....	24 - 16
3I19	RETROFIT SEAT BELT KIT (MACHINES PRIOR TO 1996 MODEL YEAR) .....	90 - 42	1C22	SEAL, REAR OIL .....	24 - 14
4C24	RETURN FLOOR, FEEDER HOUSE .....	110 - 44	4G9	SEAL, STRAW WALKERS .....	120 - 70
2F5	RETURN LINE TO RESEVOIR .....	50 - 100	1D17	SEAL, TUBE .....	24 - 34
3C24	RETURN LINES, HYDRAULIC .....	70 - 44	5D3	SEAL, UPPER TAILINGS AUGER HOUSING .....	125 - 44
3D1	RETURN LINES, UPPER, RESERVOIR .....	70 - 46	1D17	SEAL, WATER PUMP OIL .....	24 - 34
3I11	REVERSER FOOT CONTROL, FEEDER HOUSE .....	90 - 34	5B24	SEALS AND PAN, CHAFF SPREADER .....	125 - 14
4B13	REVERSER FOOT CONTROL, FEEDER HOUSE .....	110 - 6	1B21	SEALS AND RADIATOR SHELL .....	20 - 16
4B11	REVERSER GEAR BOX .....	110 - 4	3H8	SEALS, CAB SIDE AND REAR .....	90 - 6
4D7	REVERSER) .....	110 - 52	4F5	SEALS, CLEANING FAN LEAF SCREEN (CORN) .....	120 - 42
3G19	RIGHT SIDE FRONT SHIELD ASSEMBLY .....	80 - 44	4C1	SEALS, FEEDER HOUSE - CONTOUR MASTER .....	110 - 20
3G15	RIGHT SIDE SHIELD ASSEMBLY .....	80 - 40	3H6	SEALS, FOAM AND SOUND DEADENING, CAB .....	90 - 4
2B14	RIMS, DRIVE WHEELS .....	50 - 6	3F3	SEALS, SEPARATOR FRAME .....	80 - 2
2B22	RING AND PINION FINAL DR., TRANSMISSION .....	50 - 14	2D13	SEALS, SHAFT, OUTER COVER AND BEARING CAM LOBE MOTOR .....	50 - 58
1D17	RING, WATER PUMP RETAINING .....	24 - 34	3I20	SEAT ADJUST FORE-AND-AFT .....	90 - 44
1C18	RINGS, PISTON .....	24 - 10	3I15	SEAT AND BACKREST, OPERATOR'S .....	90 - 38
4G9	RISER, STRAW WALKERS .....	120 - 70	3I19	SEAT BELT KIT, RETROFIT (MACHINES PRIOR TO 1996 MODEL YEAR) .....	90 - 42
1D4	ROCKER ARM COVER .....	24 - 21	3I22	SEAT HEIGHT ADJUSTER .....	90 - 46
1D4	ROCKER ARM COVER GASKET .....	24 - 21	3I13	SEAT SHROUDS AND PASSENGER SEAT .....	90 - 36
1D3	ROCKER ARM SHAFT .....	24 - 20	3I24	SEAT, AIR SUSPENSION .....	90 - 48
1D3	ROCKER ARMS .....	24 - 20	3J1	SEAT, AIR SUSPENSION KITS .....	90 - 50
3I9	ROD, GEARSHIFT LEVER .....	90 - 32	3J3	SEAT, AIR SUSPENSION KITS .....	90 - 52
1C18	RODS, CONNECTING .....	24 - 10	3J5	SEAT, AIR SUSPENSION KITS .....	90 - 54
1D3	RODS, PUSH .....	24 - 20	3J7	SEAT, AIR SUSPENSION KITS .....	90 - 56
3H18	ROOF, CAB AND SUPPORTS .....	90 - 16	1G9	SEAT, AIR, WIRING HARNESS .....	40 - 20
1F22	ROOF, CAB LIGHTS .....	40 - 8	3I17	SEAT, OPERATOR'S SEATBELT .....	90 - 40
5G13	ROTARY SCREEN BELTS .....	170 - 3	3I18	SEAT, SEATBELT - TRAINING .....	90 - 41
1B9	ROTARY SCREEN DOOR AND SCREEN .....	20 - 4	3I17	SEATBELT, OPERATOR'S SEAT .....	90 - 40
1B7	ROTARY SCREEN DRIVE .....	20 - 2	3I18	SEATBELT, TRAINING SEAT .....	90 - 41
1B7	ROTARY SCREEN DRIVE AND IDLER ARMS .....	20 - 2	4I7	SECONDARY COUNTERSHAFT DRIVE PULLEY .....	121 - 38
1B7	ROTARY SCREEN DRIVE IDLER ARMS .....	20 - 2	1F1	SENDER, FUEL .....	30 - 4
4J23	ROTOR STRAW CHOPPER, FINE CUT (PADDLED WIDE .....	121 - 78	1H11	SENSING SWITCH, STRAW WALKER PLUGGING .....	40 - 48
4J21	ROTOR STRAW CHOPPER, FINE CUT (STRAIGHT WIDE .....	121 - 76	1E17	SENSOR, ENGINE SPEED .....	24 - 58
4K1	ROTOR, SHEAVE AND STRAW CHOPPER .....	121 - 80	1H9	SENSOR, LOW SHAFT CYLINDER SPEED .....	40 - 46
4J19	ROTOR, TRI, STRAW CHOPPER .....	121 - 74	1J11	SENSOR, SPEED, FDR HSE BACKSHAFT .....	40 - 100
			4E18	SENSOR, SPIKE TOOTH INDICATOR .....	120 - 28
	<b>S</b>		1E3	SENSOR, TEMPERATURE (FIP) .....	24 - 44
3G9	SAFETY CHAIN, L.H. FRONT CORNER SHEET .....	80 - 34	1H13	SENSOR, UNLOADING AUGER .....	40 - 50
5G16	SAFETY DECALS AND LOCATIONS .....	170 - 6	1H15	SENSORS AND BRACKETS, LOW SHAFT SPEED .....	40 - 52
5G18	SAFETY DECALS AND LOCATIONS .....	170 - 8	4H1	SEPARATOR AND PUMP DRIVE, GEARCASE .....	121 - 8
5G20	SAFETY DECALS AND LOCATIONS .....	170 - 10	4H3	SEPARATOR AND PUMP DRIVE, GEARCASE .....	121 - 10
5G22	SAFETY DECALS AND LOCATIONS .....	170 - 12	3F3	SEPARATOR CROSS BRACES .....	80 - 2
			4G15	SEPARATOR CURTAIN (RASP BAR CYLINDER) .....	120 - 76
			4G16	SEPARATOR CURTAIN (SPIKE-TOOTH CYLINDER) .....	120 - 77

## ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
4G22	SEPARATOR DRIVE GEAR, UNLOADING DRIVE AND STRAW CHOPPER, ENGINE GEARCASE.....	121 - 4	1B7	SHEAVE, ROTARY SCREEN DRIVE .....	20 - 2
4G20	SEPARATOR DRIVE GEAR, UNLOADING DRIVE AND STRAW CHOPPER- ENGINE GEARCASE .....	121 - 2	4K1	SHEAVE, ROTOR AND STRAW CHOPPER .....	121 - 80
4G24	SEPARATOR DRIVE WET-CLUTCH AND PUMP DRIVE SHAFT, GEARCASE.....	121 - 6	4I7	SHEAVE, SECONDARY COUNTERSHAFT DRIVE.....	121 - 38
4I21	SEPARATOR FAN DRIVE.....	121 - 52	4I21	SHEAVE, SEPARATOR FAN DRIVE .....	121 - 52
1I4	SEPARATOR FAN DRIVE ADJUSTING MOTOR .....	40 - 67	4H17	SHEAVE, SLOW SPEED CYLINDER DRIVE.....	121 - 24
3F3	SEPARATOR FRAME .....	80 - 2	4J11	SHEAVE, STRAW CHOPPER DRIVES (REAR) .....	121 - 66
4D18	SEPARATOR/FEEDER HOUSE SEAL, STONE TRAP AND DOOR.....	120 - 2	5B18	SHEAVE, STRAW SPREADER.....	125 - 8
1F1	SEPARATOR, WATER .....	30 - 4	4I17	SHEAVE, STRAW WALKER DRIVE .....	121 - 48
3G1	SERVICE ACCESS SHIELD (R.H.).....	80 - 26	4I9	SHEAVE, STRAW WALKER DRIVE GEARCASE .....	121 - 40
3G3	SERVICE ACCESS SHIELD, L.H.....	80 - 28	5F21	SHEAVE, UNLOADING AUGER COUNTERSHAFT DRIVE .....	130 - 58
1I20	SERVICE KIT, ELECTRICAL CONNECTORS .....	40 - 84	5E1	SHEAVE, UPPER CLEAN GRAIN ELEVATOR .....	130 - 10
1I22	SERVICE KIT, ELECTRICAL CONNECTORS .....	40 - 86	4I19	SHEAVES, BEATER DRIVE AND TIGHTENER.....	121 - 50
1J2	SERVICE OUTLET, ELECTRICAL .....	40 - 91	4C22	SHEAVES, FEEDER HOUSE, UPPER COUNTERSHAFT, VARIABLE DRIVE .....	110 - 42
2D3	SERVO, HYDROSTATIC PUMP .....	50 - 46	4H13	SHEAVES, PRIMARY COUNTERSHAFT .....	121 - 20
2C15	SERVO, HYDROSTATIC PUMP (RING AND PINION) .....	50 - 34	4C1	SHELL, FEEDER HOUSE-CONTOUR MASTER .....	110 - 20
4E22	SHAFT, BEATER AND DRIVE BELT .....	120 - 32	1B21	SHELL, RADIATOR AND SEALS .....	20 - 16
4H15	SHAFT, CYLINDER DRIVE.....	121 - 22	3G13	SHIELD ASSEMBLY, FRONT, LEFT SIDE .....	80 - 38
4D7	SHAFT, DRIVE, FRONT, SHEAVE AND MOUNTINGS (FIXED SPEED WITH REVERSER) ....	110 - 52	3G19	SHIELD ASSEMBLY, FRONT, RIGHT SIDE .....	80 - 44
4D5	SHAFT, DRIVE, UPPER, SHEAVE AND MOUNTING (FIXED SPEED WITH REVERSER).....	110 - 50	3G17	SHIELD ASSEMBLY, LEFT SIDE .....	80 - 42
2E3	SHAFT, FINAL DRIVE PINION .....	50 - 74	3G15	SHIELD ASSEMBLY, RIGHT SIDE.....	80 - 40
2E5	SHAFT, FINAL DRIVE PINION .....	50 - 76	3F25	SHIELD, DRIVE, R.H. REAR.....	80 - 24
4D7	SHAFT, FRONT DRIVE, FIXED SPEED .....	110 - 52	1D1	SHIELD, EXHAUST VALVE.....	24 - 18
4B9	SHAFT, FRONT VARIABLE DRIVE SHEAVE .....	110 - 2	3F23	SHIELD, FAN DRIVE (L.H.).....	80 - 22
4B15	SHAFT, FRONT WITH REVERSER (VARIABLE) .....	110 - 8	4B20	SHIELD, FEEDER HOUSE DRIVE .....	110 - 14
2D1	SHAFT, HYDROSTATIC PUMP (PLANETARY) .....	50 - 44	1D23	SHIELD, HEAT, EXHAUST MANIFOLD .....	24 - 40
2C12	SHAFT, HYDROSTATIC PUMP (RING AND PINION) .....	50 - 30	4D13	SHIELD, INTAKE .....	110 - 58
5C17	SHAFT, LOWER TAILINGS AUGER.....	125 - 32	5D8	SHIELD, REAR TAILINGS LEFT SIDE.....	125 - 50
2D13	SHAFT, OUTER COVER, BEARING AND SEALS CAM LOBE MOTOR .....	50 - 58	3G3	SHIELD, SERVICE ACCESS (L.H.) .....	80 - 28
4E1	SHAFT, RASP BAR .....	120 - 10	3G1	SHIELD, SERVICE ACCESS (R.H.) .....	80 - 26
1D3	SHAFT, ROCKER ARM.....	24 - 20	5C21	SHIELD, TAILINGS ELEVATOR .....	125 - 36
4E8	SHAFT, SPIKE TOOTH CONCAVE .....	120 - 18	5D10	SHIELD, TAILINGS UPPER REAR.....	125 - 52
4E10	SHAFT, SPIKE TOOTH THRESHING CYLINDER.....	120 - 20	2G14	SHIELD, TRASH, REAR AXLE .....	60 - 32
2G3	SHAFT, STEERING COLUMN (LOWER) .....	60 - 20	5D6	SHIELD, UPPER TAILINGS AUGER DRIVE .....	125 - 48
4G13	SHAFT, STRAW WALKER CRANK .....	120 - 74	5B22	SHIELDS AND HANDLES, CHAFF SPREADER (DUAL MOTOR).....	125 - 12
4I17	SHAFT, STRAW WALKER DRIVE .....	121 - 48	1H7	SHIELDS FOR REAR LIGHT HARNESS .....	40 - 44
2C3	SHAFT, TRANSMISSION PINION.....	50 - 20	3F21	SHIELDS, AUGER DRIVE (R.H.) .....	80 - 20
5E1	SHAFT, UPPER CLEAN GRAIN ELEVATOR.....	130 - 10	4F11	SHIELDS, CLEANING FAN INTAKE.....	120 - 48
4C8	SHAFT, UPPER FEEDER HOUSE .....	110 - 28	4B22	SHIELDS, CONTOUR MASTER FEEDER HOUSE .....	110 - 16
2C5	SHAFTS, DIFFERENTIAL .....	50 - 22	2E23	SHIELDS, FINAL DRIVE SHAFT - PLANETARY FINAL DRIVE.....	50 - 94
2B19	SHAFTS, DRIVE .....	50 - 11	2E22	SHIELDS, FINAL DRIVE SHAFT - SINGLE REDUCTION .....	50 - 93
2B20	SHAFTS, DRIVE .....	50 - 12	2E24	SHIELDS, MUD .....	50 - 95
2C10	SHAFTS, FINAL DRIVE (RING AND PINION) .....	50 - 28	3F23	SHIELDS, MUD (L.H.) .....	80 - 22
4G7	SHAKER PAN .....	120 - 68	3G11	SHIELDS, MUD (R.H.).....	80 - 36
4D24	SHEAR BAR, CYLINDER .....	120 - 8	4J15	SHIELDS, STRAW CHOPPER DRIVE .....	121 - 70
4J1	SHEAVE LINKAGE, FAN DRIVE SPEED CONTROL ....	121 - 56	5E14	SHIELDS, UPPER CLEAN GRAIN ELEVATOR.....	130 - 24
4E22	SHEAVE, BEATER.....	120 - 32	4B11	SHIFT COLLAR, REVERSER GEARBOX .....	110 - 4
5E10	SHEAVE, CLEAN GRAIN ELEVATOR GEARCASE .....	130 - 20	2B23	SHIFTER CAM, TRANSMISSION AND DIFFERENTIAL .....	50 - 15
4I3	SHEAVE, DUAL RANGE CYLINDER DRIVE .....	121 - 34	2B21	SHIFTER FORKS, TRANSMISSION AND DIFFERENTIAL HOUSING .....	50 - 13
4H19	SHEAVE, DUAL-RANGE CYLINDER DRIVE .....	121 - 26	1C18	SHIM, LINER .....	24 - 10
1B11	SHEAVE, ENGINE FAN AND DRIVES.....	20 - 6	1J15	SHOE ADJUSTING LIGHT SWITCH .....	40 - 104
1B15	SHEAVE, ENGINE FAN DRIVES (HI POWER) .....	20 - 10	4E25	SHOE GRAIN SUPPLY AUGER CLEANOUT DOOR, HANDLE AND LATCHES .....	120 - 36
4J13	SHEAVE, FINE CUT STRAW CHOPPER (REAR).....	121 - 68	4F1	SHOE GRAIN SUPPLY AUGERS AND HOUSING .....	120 - 38
4J5	SHEAVE, MOUNTING, PUMP, REEL / BELT PICKUP DRIVE .....	121 - 60	4F3	SHOE GRAIN SUPPLY AUGERS AND HOUSING .....	120 - 40
4B9	SHEAVE, MOUNTINGS, FRONT VARIABLE DRIVE .....	110 - 2	1J17	SHOE, CLEANING, LAMP INSTALLATION .....	40 - 106
			2F17	SHOES, BRAKE.....	60 - 10
			1C14	SHORT BLOCK .....	24 - 6
			1E11	SHORT BLOCK GASKET KIT.....	24 - 52
			3I13	SHROUDS, SEAT .....	90 - 36
			3E15	SHUT OFF VALVE, REGULATOR, PRESSURE .....	70 - 88

## ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
1E3	SHUT-OFF HOUSING SOLENOID (FIP) .....	24 - 44	1E15	STARTER WIRING HARNES .....	24 - 56
3H8	SIDE AND REAR CAB SEALS .....	90 - 6	1F6	STARTING AID, COLD WEATHER.....	30 - 9
1I3	SIDE FINDER LIGHTS .....	40 - 66	1D24	STARTING FITTINGS, ETHER .....	24 - 41
4I15	SIEVE AND CHAFFER DRIVE, CONVEYOR AUGERS AND STRAW WALKER.....	121 - 46	2G1	STARTING SWITCH .....	60 - 18
4G3	SIEVE ELEMENT .....	120 - 64	3J16	STARTING SWITCH .....	90 - 66
4G5	SIEVE FRAME .....	120 - 66	2D23	STEERING ARM, CAM LOBE MOTOR (STEERABLE MOTOR).....	50 - 68
4I17	SIEVE, CHAFFER DRIVE, STRAW WALKER AND CONVEYOR AUGERS .....	121 - 48	2G3	STEERING COLUMN (LOWER) .....	60 - 20
4H15	SINGLE RANGE CYLINDER DRIVE.....	121 - 22	3J18	STEERING COLUMN (LOWER) .....	90 - 68
3D19	SIX STACK SOLENOID CONTROL VALVE MODULE ASSEMBLY & MOUNTINGS.....	70 - 68	2G1	STEERING COLUMN (UPPER) .....	60 - 18
2F19	SLAVE CYLINDER, BRAKE .....	60 - 12	3J16	STEERING COLUMN (UPPER) .....	90 - 66
4C20	SLIP CLUTCH,FEEDER HOUSE .....	110 - 40	1G7	STEERING COLUMN WIRING HARNESS.....	40 - 18
4H17	SLOW SPEED CYLINDER DRIVE .....	121 - 24	2G13	STEERING CYLINDER .....	60 - 30
5B16	SMV (SLOW MOVING VEHICLE).....	125 - 6	2G5	STEERING HOSES AND LINES, FRONT .....	60 - 22
3D8	SOLENOID CONTROL RELIEF VALVE MODULE.....	70 - 54	2G7	STEERING HOSES AND LINES, L.H. SIDE .....	60 - 24
3D18	SOLENOID CONTROL VALVE BRACKETS.....	70 - 66	2F23	STEERING HOSES, UPPER.....	60 - 16
3D19	SOLENOID CONTROL VALVE MODULE, SIX STACK ASSEMBLY & MOUNTINGS.....	70 - 68	2G11	STEERING LINES AND HOSES, REAR (DUAL CYLINDER) .....	60 - 28
3D13	SOLENOID CONTROL VALVE, AUGER SWING.....	70 - 60	2G9	STEERING LINES, R.H. SIDE .....	60 - 26
3D11	SOLENOID CONTROL VALVE, CYLINDER SPEED .....	70 - 58	2F21	STEERING PUMP .....	60 - 14
3E17	SOLENOID CONTROL VALVE, ENGINE GEARCASE (PRESSURE REGULATOR) .....	70 - 90	3J18	STEERING PUMP - STEERING SHAFT .....	90 - 68
3D16	SOLENOID CONTROL VALVE, FIVE STACK .....	70 - 64	2H1	STEERING TIE RODS, ADJUSTABLE REAR AXLE .....	60 - 44
3D9	SOLENOID CONTROL VALVE, HEADER LIFT .....	70 - 56	2G22	STEERING TIE RODS, FIXED REAR AXLE .....	60 - 41
3D13	SOLENOID CONTROL VALVE, REEL FORE/AFT .....	70 - 60	2G23	STEERING TIE RODS, FIXED REAR AXLE, 4-WHEEL DRIVE .....	60 - 42
3D11	SOLENOID CONTROL VALVE, REEL LIFT .....	70 - 58	3J18	STEERING WHEEL ADJUSTER PEDAL .....	90 - 68
3E15	SOLENOID VALVE, REGULATOR, PRESSURE .....	70 - 88	3H16	STEP, CAB SUPPORT .....	90 - 14
2E1	SOLENOID, CONTROL VALVE (FOUR-WHEEL DR.)....	50 - 71	4D18	STONE TRAP, DOOR AND FEEDER HOUSE/ SEPARATOR SEAL.....	120 - 2
1F6	SOLENOID, ETHER START .....	30 - 9	1E19	STRAP, ALTERNATOR ADJUSTING .....	24 - 60
1E3	SOLENOID, FUEL SHUT-OFF (FIP).....	24 - 44	1D5	STRAPS, ENGINE LIFT.....	24 - 22
1E3	SOLENOID, SHUT-OFF HOUSING (FIP) .....	24 - 44	5G14	STRAW CHOPPER BELTS .....	170 - 4
5G7	SOLENOID, VALVE BLOCK DIAL-A-MATIC HEADER HEIGHT CONTROL .....	160 - 3	4J17	STRAW CHOPPER DECK, SUPPORTS AND FINS .....	121 - 72
3H6	SOUND DEADENING, SEALS AND FOAM, CAB .....	90 - 4	5B10	STRAW CHOPPER DOOR .....	125 - 4
2B19	SPACERS, AXLE (RING AND PINION FINAL DRIVE).....	50 - 11	4J15	STRAW CHOPPER DRIVE SHIELDS.....	121 - 70
2B20	SPACERS, AXLE, PLANETARY FINAL DRIVE .....	50 - 12	4K5	STRAW CHOPPER DRIVE SPROCKETS .....	121 - 84
1G18	SPEAKERS, ANTENNA AND RADIO .....	40 - 30	4J7	STRAW CHOPPER DRIVES (FRONT) .....	121 - 62
4I23	SPEED CONTROL LINKAGE, FAN DRIVE .....	121 - 54	4J11	STRAW CHOPPER DRIVES (REAR) .....	121 - 66
4J1	SPEED CONTROL, FAN DRIVE SHEAVE LINKAGE ....	121 - 56	4K3	STRAW CHOPPER HOUSING AND KNIFEBANK.....	121 - 82
1G24	SPEED SENSOR, TRANSMISSION .....	40 - 36	4J23	STRAW CHOPPER ROTOR, FINE CUT (PADDED WIDE .....	121 - 78
1H1	SPEED SENSOR, TRANSMISSION .....	40 - 38	4J21	STRAW CHOPPER ROTOR, FINE CUT (STRAIGHT WIDE .....	121 - 76
1J7	SPEED, REEL, MOTOR AND BRACKET.....	40 - 96	1H7	STRAW CHOPPER SENSOR BRACKET.....	40 - 44
4E14	SPIKE TOOTH CONCAVE .....	120 - 24	4K1	STRAW CHOPPER, ROTOR AND SHEAVE .....	121 - 80
4E18	SPIKE TOOTH INDICATOR .....	120 - 28	4J19	STRAW CHOPPER, TRI ROTOR .....	121 - 74
4E10	SPIKE TOOTH THRESHING CYLINDER .....	120 - 20	4G20	STRAW CHOPPER, UNLOADING DRIVE AND SEPARATOR DRIVE GEAR- ENGINE GEARCASE ..	121 - 2
4E8	SPIKE-TOOTH CONCAVE .....	120 - 18	4G22	STRAW CHOPPER, UNLOADING DRIVE AND SEPARATOR DRIVE GEAR, ENGINE GEARCASE ..	121 - 4
4E12	SPIKE-TOOTH CONCAVE .....	120 - 22	5B18	STRAW SPREADER .....	125 - 8
4G16	SPIKE-TOOTH CYLINDER, SEPARATOR CURTAIN ....	120 - 77	5B16	STRAW SPREADER MOUNTING AND GUARD .....	125 - 6
4E16	SPIKE-TOOTH FINGER GRATE.....	120 - 26	1H11	STRAW WALKER (PLUGGING) SENSING SWITCH ....	40 - 48
2G21	SPINDLE HOUSING, REAR AXLE .....	60 - 40	4G11	STRAW WALKER BEARING KIT .....	120 - 72
2G19	SPINDLES, REAR AXLE .....	60 - 38	4G13	STRAW WALKER CRANKS,STRAW SPREADER DRIVE AND SHIELD .....	120 - 74
5C15	SPREADER CURTAIN.....	125 - 30	4I9	STRAW WALKER DRIVE GEARCASE.....	121 - 40
3B15	SPREADER MOTOR, CHAFF (EATON).....	70 - 8	4I13	STRAW WALKER DRIVE GEARCASE.....	121 - 44
5C11	SPREADER, CHAFF, MOTOR, LINES AND HOSES ....	125 - 26	4I15	STRAW WALKER, CONVEYOR AUGERS, SIEVE AND CHAFFER DRIVE .....	121 - 46
5B18	SPREADER, STRAW.....	125 - 8	4I17	STRAW WALKER, CONVEYOR AUGERS, SIEVE AND CHAFFER DRIVE .....	121 - 48
5G14	SPREADER, STRAW, BELTS .....	170 - 4	4G9	STRAW WALKERS .....	120 - 70
4D20	SPRING, CYLINDER DOOR .....	120 - 4	5F23	STRAWCHOPPER TOP BELT GUIDE (TRAP) .....	130 - 60
5E1	SPROCKET, UPPER CLEAN GRAIN ELEVATOR.....	130 - 10	4D24	STRIPPER, CYLINDER SHEAR BAR.....	120 - 8
4K5	SPROCKETS, DRIVE, STRAW CHOPPER .....	121 - 84	4D1	STRIPPER, DUST FAN .....	110 - 46
5C23	SPROCKETS, TAILINGS ELEVATOR CONVEYOR .....	125 - 38	4C24	STRIPPER, FEEDER HOSUE RETURN FLOOR.....	110 - 44
1E15	STARTER .....	24 - 56			
1C23	STARTER GEAR .....	24 - 15			
1H20	STARTER MOTOR .....	40 - 58			
1E15	STARTER SWITCH .....	24 - 56			



## ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
4J19	TRI ROTOR STRAW CHOPPER .....	121 - 74	5D5	UPPER TAILINGS DRIVE CHAIN TIGHTENER.....	125 - 46
3H10	TRIM PANELS, CAB INTERIOR .....	90 - 8	2E13	UPPER, HYDROSTATIC DRIVE OIL HOSES .....	50 - 84
5C24	TROUGH SUPPORT, LOWER AND TAILINGS DRIVE BRACKET .....	125 - 39	3F5	UPRIGHT KIT, NO. 1.....	80 - 4
4I23	TRUNNION, FAN DRIVE SPEED CONTROL .....	121 - 54	3F6	UPRIGHT KIT, NO. 5.....	80 - 5
1D17	TUBE SEAL .....	24 - 34			
1D15	TUBE, ENGINE OIL DIPSTICK.....	24 - 32		V	
1D19	TUBE, THERMOSTAT HOUSING .....	24 - 36	2C24	VALVE BLOCK.....	50 - 43
1D6	TUBES, OIL COOLER .....	24 - 23	2D11	VALVE BLOCK.....	50 - 55
1D10	TUBES, OIL COOLER BYPASS .....	24 - 27	5G6	VALVE BLOCK AND HYDRAULIC LINE, DIAL-A-MATIC HEADER HEIGHT CONTROL .....	160 - 2
1D21	TURBOCHARGER .....	24 - 38	5G7	VALVE BLOCK SOLENOID DIAL-A-MATIC HEADER HEIGHT CONTROL .....	160 - 3
1D21	TURBOCHARGER GASKET .....	24 - 38	1D1	VALVE SEAT INSERTS.....	24 - 18
1D21	TURBOCHARGER OIL LINES .....	24 - 38	2D25	VALVE, CONTROL .....	50 - 70
1F23	TURN LIGHTS .....	40 - 9	2E1	VALVE, CONTROL, SOLENOID(FOUR-WHEEL DR.)....	50 - 71
2G1	TURN SIGNAL SWITCH .....	60 - 18	3C17	VALVE, DIAL-A-MATIC HEADER HEIGHT.....	70 - 37
3J16	TURN SIGNAL SWITCH .....	90 - 66	1E23	VALVE, DRAIN, FUEL TANK .....	30 - 2
	U		3D16	VALVE, FIVE STACK SOLENOID CONTROL .....	70 - 64
4D9	U-JOINT, DRIVESHAFT, CONTOUR MASTER .....	110 - 54	1E9	VALVE, FUEL CHECK.....	24 - 50
1C20	UNDERSIZE CRANKSHAFT KIT (CONNECTING ROD JOURNAL) .....	24 - 12	2C19	VALVE, HYDRO. DR. DISPLACEMENT CONTOL.....	50 - 38
1E21	UNDERSIZE MAIN BEARING CRANKSHAFT AND BEARING KIT .....	24 - 62	2C24	VALVE, MANIFOLD .....	50 - 43
2G3	UNIVERSAL JOINT WITH SHAFT (STEERING) .....	60 - 20	2D11	VALVE, MANIFOLD .....	50 - 55
4H5	UNIVERSAL JOINT, PRIMARY COUNTERSHAFT .....	121 - 12	1D11	VALVE, OIL FILTER BYPASS.....	24 - 28
5G14	UNLOADING AUGER BELTS .....	170 - 4	1D13	VALVE, OIL PAN DRAIN.....	24 - 30
5F21	UNLOADING AUGER COUNTERSHAFT DRIVE .....	130 - 58	1D6	VALVE, OIL PRESSURE REGULATING .....	24 - 23
5F23	UNLOADING AUGER DRIVE BELT GUIDE.....	130 - 60	1D11	VALVE, OIL PRESSURE REGULATING .....	24 - 28
5F12	UNLOADING AUGER HOUSING, HORIZONTAL (EXPORT) (17 AND 20 FT.) .....	130 - 48	3B13	VALVE, REEL DRIVE FLOW CONTROL .....	70 - 6
5F10	UNLOADING AUGER HOUSING, HORIZONTAL (20 FT.) .....	130 - 46	3D14	VALVE, SOLENOID CONTROL, FOUR STACK .....	70 - 62
111	UNLOADING AUGER LIGHT AND HARNESS.....	40 - 64	3D9	VALVE, SOLENOID CONTROL, HEADER LIFT MODULE .....	70 - 56
111	UNLOADING AUGER LIGHT CLAMPS .....	40 - 64	3D8	VALVE, SOLENOID CONTROL, RELIEF .....	70 - 54
1H24	UNLOADING AUGER LIMIT SWITCH .....	40 - 62	3D19	VALVE, SOLENOID CONTROL, SIX STACK.....	70 - 68
5G3	UNLOADING AUGER LOWER LUBE BANK .....	130 - 66	3K5	VALVES, COMPRESSOR R134A .....	90 - 80
1H13	UNLOADING AUGER SENSOR AND WIRING HARNESS .....	40 - 50	1D1	VALVES, EXHAUST.....	24 - 18
3E5	UNLOADING AUGER SWING CYLINDER .....	70 - 78	1D1	VALVES, INTAKE.....	24 - 18
3E5	UNLOADING AUGER SWING CYLINDER MOUNTING .....	70 - 78	4J17	VANES, STRAW CHOPPER DECK .....	121 - 72
5F3	UNLOADING AUGER SWIVEL, HORIZONTAL .....	130 - 38	3B16	VARIABLE DRIVE HYDRAULIC HOSE, FEEDER HOUSE.....	70 - 9
5G1	UNLOADING AUGER UPPER LUBE BANK.....	130 - 64	4C22	VARIABLE DRIVE, FEEDER HOUSE, UPPER COUNTERSHAFT .....	110 - 42
3E3	UNLOADING DRIVE CYLINDER, GRAIN TANK .....	70 - 76	4B15	VARIABLE FRONT SHAFT WITH REVERSER .....	110 - 8
4G20	UNLOADING DRIVE, STRAW CHOPPER AND SEPARATOR DRIVE GEAR- ENGINE GEARCASE ..	121 - 2	4H13	VARIABLE SHEAVE AND SUPPORTS, PRIMARY COUNTERSHAFT .....	121 - 20
4G22	UNLOADING DRIVE, STRAW CHOPPER AND SEPARATOR DRIVE GEAR, ENGINE GEARCASE ..	121 - 4	4B17	VARIABLE SPEED DRIVE TIGHTENER .....	110 - 10
5G15	UNLOADING SYSTEM BELTS .....	170 - 5	4C22	VARIABLE DRIVE, FEEDER HOUSE, UPPER COUNTERSHAFT SUPPORTS.....	110 - 42
5D24	UPPER CLEAN GRAIN ELEVATOR.....	130 - 8	5E24	VERTICAL AUGER LOWER GEAR CASE.....	130 - 34
5E1	UPPER CLEAN GRAIN ELEVATOR SHAFT, SPROCKET AND SHEAVE.....	130 - 10	1I7	VOLTAGE REGULATOR, ALTERNATOR (95 AMP) BOSCH.....	40 - 70
5E14	UPPER CLEAN GRAIN ELEVATOR SHIELDS .....	130 - 24		W	
5E3	UPPER CLEAN GRAIN LOADING AUGER HOUSING ..	130 - 12	5G12	WALKER BELTS .....	170 - 2
5E5	UPPER CLEAN GRAIN LOADING AUGER HOUSING ..	130 - 14	4G9	WALKERS, STRAW.....	120 - 70
1H18	UPPER HARNESS FOR ENGINE.....	40 - 56	1H22	WARNING SWITCH, AIR FILTER.....	40 - 60
5D10	UPPER REAR TAILINGS SHIELD .....	125 - 52	1C21	WASHER, THRUST .....	24 - 13
3D1	UPPER RETURN LINES, HOSES, RESERVOIR.....	70 - 46	1G16	WASHER, WINDSHIELD .....	40 - 28
4C8	UPPER SHAFT, FEEDER HOUSE .....	110 - 28	1D19	WATER MANIFOLD GASKET .....	24 - 36
2F23	UPPER STEERING HOSES .....	60 - 16	1D19	WATER MANIFOLD, FRONT .....	24 - 36
5G15	UPPER TAILINGS AUGER BELT .....	170 - 5	1D17	WATER PUMP .....	24 - 34
5D6	UPPER TAILINGS AUGER DRIVE .....	125 - 48	1D17	WATER PUMP GASKET .....	24 - 34
5D3	UPPER TAILINGS AUGER HOUSING AND PADDLE ASSEMBLY .....	125 - 44	1D17	WATER PUMP O-RING.....	24 - 34
5D3	UPPER TAILINGS AUGER PADDLE ASSEMBLY.....	125 - 44	1D17	WATER PUMP OIL SEAL .....	24 - 34
5D6	UPPER TAILINGS AUGER, DRIVE AND SHIELD.....	125 - 48	1D17	WATER PUMP RETAINING RING .....	24 - 34

## ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
1D17	WATER PUMP SEAL KIT .....	24 - 34		Y	
1F1	WATER SEPARATOR .....	30 - 4			
4B24	WEAR PLATE, FEEDER HOUSE .....	110 - 18	4D9	YOKE, DRIVESHAFT .....	110 - 54
4C1	WEAR PLATES, FEEDER HOUSE - CONTOUR MASTER .....	110 - 20	2D21	YOKE, PIVOTS, AND CAPS (STEERABLE MOTOR) ....	50 - 66
1118	WEATHERPACK CONNECTORS .....	40 - 82			
1118	WEATHERPACK TERMINALS .....	40 - 82			
3H14	WEATHERSTRIP, CAB DOOR .....	90 - 12			
3H6	WEATHERSTRIP, CAB .....	90 - 4			
3F19	WEATHERSTRIP, REAR HOOD .....	80 - 18			
2H3	WEIGHTS, WHEEL AND REAR WHEELS .....	60 - 46			
3E9	WET CLUTCH OIL COOLER LINES, HOSES .....	70 - 82			
4C14	WHEEL, FEEDER CONVEYOR DRIVE CHAIN .....	110 - 34			
2B15	WHEEL, HIGH FLOATATION DRIVE PLANETARY FINAL DRIVE .....	50 - 7			
4H15	WHEEL, SINGLE RANGE CYLINDER DRIVE .....	121 - 22			
2G1	WHEEL, STEERING .....	60 - 18			
3J16	WHEEL, STEERING .....	90 - 66			
2B14	WHEELS, DRIVE .....	50 - 6			
2H5	WHEELS, REAR (4-WHEEL DRIVE/CAM LODE MOTOR) .....	60 - 48			
2H3	WHEELS, REAR, AND WHEEL WEIGHTS .....	60 - 46			
2B16	WIDE-SPACED DUAL WHEELS (PLANETARY FINAL DRIVE) .....	50 - 8			
5E16	WINDOW, TOP GRAIN TANK .....	130 - 26			
1G16	WINDSHIELD WASHER .....	40 - 28			
1G12	WINDSHIELD WIPER (LONG) .....	40 - 24			
3H14	WINDSHIELD, CAB .....	90 - 12			
5B24	WINGS, CHAFF SPREADER PAN .....	125 - 14			
1G14	WIPER (SHORT) .....	40 - 26			
1G12	WIPER BLADE, WINDSHIELD .....	40 - 24			
1G14	WIPER BLADE, WINDSHIELD .....	40 - 26			
1G14	WIPER, WINDSHEILD (SHORT) .....	40 - 26			
1G12	WIPER, WINDSHIELD (LONG) .....	40 - 24			
1I24	WIRING AND TERMINAL KIT .....	40 - 88			
1I24	WIRING CRIMPING TOOL .....	40 - 88			
1H3	WIRING HARNESS ADAPTER (CONTOUR MASTER) ..	40 - 40			
1H5	WIRING HARNESS ADAPTER (CONTOUR MASTER) ..	40 - 42			
1G9	WIRING HARNESS, A/C, HEATER AND AIR SEAT .....	40 - 20			
3B9	WIRING HARNESS, ACCUMULATOR PRESSURE GAUGE .....	70 - 2			
1G1	WIRING HARNESS, ARMREST .....	40 - 12			
1F16	WIRING HARNESS, CAB .....	40 - 2			
1F15	WIRING HARNESS, CAB DOME LIGHT .....	40 - 1			
1J9	WIRING HARNESS, CONVENIENCE OUTLET .....	40 - 98			
1I1	WIRING HARNESS, DUAL LEVEL MONITOR .....	40 - 64			
1J11	WIRING HARNESS, FEEDER HOUSE BACKSHAFT SPEED SENSOR .....	40 - 100			
1H24	WIRING HARNESS, GRAIN TANK .....	40 - 62			
1H16	WIRING HARNESS, HARVESTRAK MONITOR .....	40 - 54			
5F7	WIRING HARNESS, HORIZONTAL UNLOADING AUGER .....	130 - 42			
1G24	WIRING HARNESS, L.H. MAIN, FRONT .....	40 - 36			
1G20	WIRING HARNESS, LH. MAIN, FRONT (S.N. -680100) .....	40 - 32			
1H3	WIRING HARNESS, MAIN, L.H. CENTER .....	40 - 40			
1H5	WIRING HARNESS, MAIN, L.H. CENTER .....	40 - 42			
1H9	WIRING HARNESS, R.H. MAIN .....	40 - 46			
1E15	WIRING HARNESS, STARTER .....	24 - 56			
1G7	WIRING HARNESS, STEERING COLUMN .....	40 - 18			
1H13	WIRING HARNESS, UNLOADING AUGER .....	40 - 50			
1I1	WIRING HARNESS, UNLOADING AUGER LIGHT .....	40 - 64			
1H1	WIRING HARNESS, L H MAIN, L H FRONT .....	40 - 38			
1B9	WIRING LEAD, ROTARY SCREEN DOOR .....	20 - 4			
1I24	WIRING STRIPPING TOOL .....	40 - 88			
1J1	WIRING, SUPPLEMENTARY TERMINALS AND CONNECTORS .....	40 - 90			

Full Download: <https://www.arepairmanual.com/downloads/john-deere-9610-maximizer-combine-service-repair-parts-manual/>

Sample of manual. Download All 1043 pages at:

<https://www.arepairmanual.com/downloads/john-deere-9610-maximizer-combine-service-repair-parts-manual/>