

Product: 2008 Canon ImagePress C1 Series Printer Service Repair Workshop Manual
Full Download: <https://www.arepairmanual.com/downloads/2008-canon-imagepress-c1-series-printer-service-repair-workshop-manual/>

Service Manual

imagePRESS C1 Series

The Canon logo is displayed in a bold, black, serif font, centered at the bottom of the page.

Sample of manual. Download All 1265 pages at:

<https://www.arepairmanual.com/downloads/2008-canon-imagepress-c1-series-printer-service-repair-workshop-manual/>

Oct 22 2008

Product: 2008 Canon ImagePress C1 Series Printer Service Repair Workshop Manual
Full Download: <https://www.arepairmanual.com/downloads/2008-canon-imagepress-c1-series-printer-service-repair-workshop-manual/>

Sample of manual. Download All 1265 pages at:
<https://www.arepairmanual.com/downloads/2008-canon-imagepress-c1-series-printer-service-repair-workshop-manual/>

Application

This manual has been issued by Canon Inc. for qualified persons to learn technical theory, installation, maintenance, and repair of products. This manual covers all localities where the products are sold. For this reason, there may be information in this manual that does not apply to your locality.

Corrections

This manual may contain technical inaccuracies or typographical errors due to improvements or changes in products. When changes occur in applicable products or in the contents of this manual, Canon will release technical information as the need arises. In the event of major changes in the contents of this manual over a long or short period, Canon will issue a new edition of this manual.

The following paragraph does not apply to any countries where such provisions are inconsistent with local law.

Trademarks

The product names and company names used in this manual are the registered trademarks of the individual companies.

Copyright

This manual is copyrighted with all rights reserved. Under the copyright laws, this manual may not be copied, reproduced or translated into another language, in whole or in part, without the written consent of Canon Inc.

COPYRIGHT © 2001 CANON INC.

Printed in Japan

Caution

Use of this manual should be strictly supervised to avoid disclosure of confidential information.

Symbols Used

This documentation uses the following symbols to indicate special information:

Symbol	Description
	Indicates an item of a non-specific nature, possibly classified as Note, Caution, or Warning.
	Indicates an item requiring care to avoid electric shocks.
	Indicates an item requiring care to avoid combustion (fire).
	Indicates an item prohibiting disassembly to avoid electric shocks or problems.
	Indicates an item requiring disconnection of the power plug from the electric outlet.
 Memo	Indicates an item intended to provide notes assisting the understanding of the topic in question.
 REF.	Indicates an item of reference assisting the understanding of the topic in question.
	Provides a description of a service mode.
	Provides a description of the nature of an error indication.

The following rules apply throughout this Service Manual:

1. Each chapter contains sections explaining the purpose of specific functions and the relationship between electrical and mechanical systems with reference to the timing of operation.

In the diagrams,  represents the path of mechanical drive; where a signal name accompanies the symbol, the arrow  indicates the direction of the electric signal.

The expression "turn on the power" means flipping on the power switch, closing the front door, and closing the delivery unit door, which results in supplying the machine with power.

2. In the digital circuits, '1' is used to indicate that the voltage level of a given signal is "High", while '0' is used to indicate "Low". (The voltage value, however, differs from circuit to circuit.) In addition, the asterisk (*) as in "DRMD*" indicates that the DRMD signal goes on when '0'.

In practically all cases, the internal mechanisms of a microprocessor cannot be checked in the field. Therefore, the operations of the microprocessors used in the machines are not discussed: they are explained in terms of from sensors to the input of the DC controller PCB and from the output of the DC controller PCB to the loads.

The descriptions in this Service Manual are subject to change without notice for product improvement or other purposes, and major changes will be communicated in the form of Service Information bulletins.

All service persons are expected to have a good understanding of the contents of this Service Manual and all relevant Service Information bulletins and be able to identify and isolate faults in the machine."

Contents

Chapter 1 Introduction

1.1 System Construction	1- 1
1.1.1 System Configuration (pickup/delivery accessories)	1- 1
1.1.2 System Configuration (printing/transmission accessories)	1- 1
1.1.3 Functions of Printing/Transmission Accessories	1- 2
1.2 Product Specifications	1- 4
1.2.1 Names of Parts	1- 4
1.2.1.1 External View	1- 4
1.2.1.2 External View	1- 4
1.2.1.3 Cross Section	1- 5
1.2.1.4 Cross Section	1- 7
1.2.2 Using the Machine	1- 8
1.2.2.1 Power Switch	1- 8
1.2.2.2 Points to Note When Turning Off the Main Power Switch	1- 9
1.2.2.3 Control Panel	1- 9
1.2.3 User Mode Items	1- 10
1.2.3.1 Common Settings	1- 10
1.2.3.2 Timer Settings	1- 12
1.2.3.3 Adjustment/Cleaning	1- 12
1.2.3.4 Report Settings	1- 12
1.2.3.5 System Control Settings	1- 13
1.2.3.6 Copy Settings	1- 15
1.2.3.7 Communications Settings	1- 15
1.2.3.8 Mail Box Settings	1- 16
1.2.3.9 Address Book Settings	1- 17
1.2.3.10 User Administrator Mode	1- 18
1.2.3.11 Common Settings	1- 20
1.2.3.12 Timer Settings	1- 22
1.2.3.13 Adjustment/Cleaning	1- 23
1.2.3.14 Report Settings	1- 23
1.2.3.15 System Control Settings	1- 23
1.2.3.16 Copy Settings	1- 26
1.2.3.17 Communications Settings	1- 26
1.2.3.18 Mail Box Settings	1- 27
1.2.3.19 Address Book Settings	1- 27
1.2.3.20 User Administrator Mode	1- 28
1.2.4 User Maintenance	1- 31
1.2.4.1 Cleaning	1- 31
1.2.4.2 Inspection	1- 32
1.2.4.3 Inspection	1- 34
1.2.5 Safety	1- 36
1.2.5.1 Safety of the Machine's Laser Mechanism	1- 36
1.2.5.2 CDRH Regulations	1- 36
1.2.5.3 Handling of the Laser Assembly	1- 36
1.2.5.4 Safety of the Toner	1- 37
1.2.5.5 Notes when handling a lithium battery	1- 37
1.2.6 Product Specifications	1- 37
1.2.6.1 Machine Specifications	1- 37
1.2.6.2 Machine Specifications	1- 38
1.2.7 Function List	1- 40
1.2.7.1 Printing Speed	1- 40
1.2.7.2 Printing Speed	1- 41
1.2.7.3 Paper Types	1- 42

Chapter 2 Installation

2.1 Making Pre-Checks	2- 1
2.1.1 Points to Note About Installation (iR C7000 series).....	2- 1
2.1.2 Unpacking and Checking the Components	2- 1
2.1.3 Selecting the Site of Installation.....	2- 4
2.1.4 Checking the Contents.....	2- 5
2.1.5 Checking the Contents.....	2- 8
2.1.6 Checking the Contents.....	2- 11
2.1.7 Checking the Contents.....	2- 14
2.1.8 Checking the Contents.....	2- 17
2.1.9 Checking the Contents.....	2- 19
2.1.10 Checking the Contents.....	2- 22
2.1.11 Checking the Contents.....	2- 24
2.1.12 Checking the Contents.....	2- 26
2.2 Unpacking and Installation	2- 28
2.2.1 Points to Note Before Starting the Work	2- 28
2.2.2 Unpacking.....	2- 28
2.2.3 Mounting Scanning System	2- 30
2.2.4 Locking the Primary Transfer Roller In Place	2- 31
2.2.5 Decurler points to Note About Installation.....	2- 31
2.2.6 Mounting the Decurler.....	2- 31
2.2.7 Mounting the Delivery Tray	2- 33
2.2.8 Attaching the Outer Delivery Roller Cover.....	2- 33
2.2.9 Decurler Open / Close Angle Adjustment	2- 34
2.2.10 Preparation for Mounting the Developing Assembly	2- 35
2.2.11 Mounting the Balancing Cylinder	2- 38
2.2.12 Mounting the Balancing Cylinder	2- 40
2.2.13 Mounting the Developing Assembly.....	2- 41
2.2.14 Mounting the Developing Assembly.....	2- 44
2.2.15 Mounting the Process Unit	2- 47
2.2.16 Mounting the Process Unit.....	2- 50
2.2.17 Mounting the Fixing Assembly	2- 53
2.2.18 Fitting the Control Panel in Place.....	2- 55
2.2.19 Setting of Environmental Switch	2- 60
2.2.20 Turning the Main Power ON.....	2- 60
2.2.21 Turning the Main Power ON.....	2- 61
2.2.22 Turning the Main Power ON.....	2- 62
2.2.23 Turning the Main Power ON.....	2- 63
2.2.24 Turning the Main Power ON.....	2- 63
2.2.25 Turning the Main Power ON.....	2- 64
2.2.26 Setting of Environmental Switch	2- 64
2.2.27 Turning the Main Power ON.....	2- 65
2.2.28 Points to Note at the Main Power OFF	2- 65
2.2.29 Checking the Drum Temperature Switch	2- 65
2.2.30 Setting the Toner container.....	2- 66
2.2.31 Setting the Toner Container	2- 66
2.2.32 Setting the Toner Container	2- 68
2.2.33 Supplying Toner	2- 68
2.2.34 Supplying Toner	2- 69
2.2.35 Setting the Paper Cassette	2- 69
2.2.36 Setting for K paper	2- 69
2.2.37 Automatic Gradation Correction Setting	2- 69
2.2.38 Automatic Gradation Correction Setting.....	2- 70
2.2.39 Checking a Clear Color Image.....	2- 70
2.2.40 Checking Image / Operation	2- 70

2.2.41 Adjusting Left Margin of Image	2- 70
2.2.42 Adjusting Margin along Leading Edge of Image	2- 71
2.2.43 Cleaning the Charging Assembly	2- 71
2.2.44 Cleaning the Charging Assembly	2- 75
2.2.45 Other Works	2- 79
2.2.46 Putting the Rating Plate.	2- 80
2.3 Unpacking and Installation (imagePRESS C1 Series)	2- 80
2.3.1 Points to Note About Installation (imagePRESS C1 series).....	2- 80
2.3.2 Turning Off the Machine (imagePRESS C1 series)	2- 80
2.3.3 Installation Procedure (imagePRESS C1 series)	2- 80
2.3.4 Setting After the Installation (imagePRESS C1 series).....	2- 83
2.4 Unpacking and Installation (imagePRESS C7000 Series)	2- 83
2.4.1 Points to Note When Turning ON/OFF the power of Host Machine (imagePRESS C7000 series)	2- 83
2.4.2 Installation Procedure (imagePRSS C7000 series).....	2- 84
2.4.3 Setting After the Installation(imagePRESS C7000 Series)	2- 92
2.5 Checking the Connection to the Network	2- 92
2.5.1 Overview	2- 92
2.5.2 Checking the Network Connection	2- 92
2.5.3 Using the PING Command	2- 92
2.5.4 Using the PING Command	2- 92
2.5.5 Making a Check Using the Remote Host Address	2- 92
2.6 Troubleshooting the Network.....	2- 92
2.6.1 Overview	2- 92
2.6.2 Checking the Connection of the Network Cable	2- 92
2.6.3 Making a Check Using a Loopback Address	2- 92
2.6.4 Making a Check Using a Local Host Address	2- 92
2.7 Relocating the Machine	2- 92
2.7.1 Operation for Moving the Machine	2- 92
2.8 Installing the Card Reader	2- 93
2.8.1 Points to Note About Installation	2- 93
2.8.2 Checking the Contents	2- 93
2.8.3 Pre-Settings.....	2- 93
2.8.4 Turning Off the Machine	2- 93
2.8.5 Installation Procedure.....	2- 93
2.8.6 Installation Procedure in the imageWARE Accounting Manager (henceforth: iWAM) environment.....	2- 95
2.8.7 Installation Procedure in the imageWARE Accounting Manager (henceforth: iWAM) Environment	2- 95
2.9 Installing the Original Tray	2- 95
2.9.1 Checking the Contents	2- 95
2.9.2 Checking the Contents	2- 95
2.9.3 Checking the Contents	2- 96
2.9.4 Installing the Document Tray.....	2- 96
2.10 Installing the Platen Cover	2- 96
2.10.1 Checking the Contents	2- 96
2.10.2 Installation Procedure	2- 97
2.11 Installing the Key Switch Unit	2- 97
2.11.1 Checking the Attachments.....	2- 97
2.11.2 Turning Off the Machine	2- 97
2.11.3 Installation Procedure	2- 97
2.11.4 After Installing the Key Switch Unit.....	2- 98
2.12 Installing the Reader Heater	2- 98
2.12.1 Checking the Parts	2- 98
2.12.2 Turning Off the Host Machine.....	2- 98
2.12.3 Installation Procedure	2- 98
2.13 Installing the Deck Heater.....	2- 100
2.13.1 Checking the Contents (Heater PCB-F1)	2- 100

2.13.2 Checking the Parts to Install	2- 101
2.13.3 Installing Procedure	2- 101
2.13.4 Installing Procedure	2- 108
2.14 Installing the Voice Guidance Kit	2- 115
2.14.1 Points to Note at Installation	2- 115
2.14.2 Checking Components	2- 115
2.14.3 Checking Components	2- 116
2.14.4 Turning off the Machine	2- 117
2.14.5 Installation Procedure	2- 117
2.15 Installing the Printer Cover	2- 127
2.15.1 Points to Note About Installation	2- 127
2.15.2 Checking the Contents	2- 127
2.15.3 Turning Off the Machine	2- 128
2.15.4 Installation Procedure	2- 128
2.16 Installing the Serial Interface Kit	2- 132
2.16.1 Points to Note About Installation	2- 132
2.16.2 Checking the Contents	2- 132
2.16.3 Turning Off the Machine	2- 133
2.16.4 Installation Procedure	2- 133

Chapter 3 Basic Operation

3.1 Construction	3- 1
3.1.1 Function Configuration	3- 1
3.1.2 Function Configuration	3- 2
3.1.3 Main PCB Connection	3- 3
3.1.4 DC Controller	3- 4

Chapter 4 Main Controller

4.1 Construction	4- 1
4.1.1 Configuration and Functions	4- 1
4.1.2 Configuration and Functions	4- 2
4.2 Construction of the Electrical Circuitry	4- 4
4.2.1 Main Controller Circuit Board (MAIN)	4- 4
4.2.2 Main Controller Circuit Board (MAIN)	4- 6
4.2.3 SRAM Circuit Board	4- 7
4.3 Start-Up Sequence	4- 7
4.3.1 Overview	4- 7
4.3.2 Startup Sequence	4- 7
4.4 Actions when HDD Error	4- 9
4.4.1 E602 Details	4- 9
4.5 Image Processing	4- 12
4.5.1 Image Flow Overview	4- 12
4.5.2 Reader Input Image Processing	4- 13
4.5.3 Reader Input Image Processing	4- 13
4.5.4 Printer Output Image Processing	4- 14
4.5.5 Block for Compression, Expansion, and Editing Processing	4- 15
4.5.6 Block for Compression, Expansion, and Editing Processing	4- 16
4.6 Flow of Image Data	4- 16
4.6.1 Image Data Flow When Using the Copy Function	4- 16
4.6.2 Image Data Flow When Using the Copy Function	4- 17
4.6.3 Image Data Flow When Using the BOX Function	4- 17
4.6.4 Image Data Flow When Using the BOX Function	4- 18
4.6.5 Image Data Flow When Using the SEND Function	4- 18
4.6.6 Image Data Flow When Using the SEND Function	4- 19

4.6.7 Image Data Flow When Using the FAX Receive Function	4- 19
4.6.8 Image Data Flow When Using the FAX Receive Function	4- 20
4.6.9 Image Data Flow When Using the PDL Function	4- 20
4.6.10 Image Data Flow When Using the PDL Function	4- 22
4.7 Parts Replacement Procedure	4- 23
4.7.1 Controller Box	4- 23
4.7.1.1 Preparation for Removing the Controller Box	4- 23
4.7.1.2 Removing the Controller Box	4- 23
4.7.2 Main Controller PCB (main).....	4- 24
4.7.2.1 Preparation for Removing the Main Controller PCB	4- 24
4.7.2.2 Removing the Main Controller PCB (Main)	4- 24
4.7.2.3 Removing the Main Controller PCB (Main).....	4- 25
4.7.3 HDD	4- 26
4.7.3.1 Preparation for Removing the HDD	4- 26
4.7.3.2 Removing the HDD	4- 26

Chapter 5 Original Exposure System

5.1 Construction	5-1
5.1.1 Specifications, Control Mechanisms, and Functions	5-1
5.1.2 Major Components.....	5-1
5.1.3 Construction of the Control System.....	5-3
5.1.4 Reader Controller PCB	5-3
5.2 Basic Sequence	5-4
5.2.1 Basic Sequence of Operation at Power-On.....	5-4
5.2.2 Basic Sequence of Operation in Response to a Press on the Start Key	5-4
5.3 Various Control Mechanisms.....	5-6
5.3.1 Controlling the Scanner Drive System	5-6
5.3.1.1 Overview	5-6
5.3.1.2 Controlling the Scanner Motor.....	5-6
5.3.2 Enlargement/Reduction.....	5-7
5.3.2.1 Changing the Magnification in Main Scanning Direction	5-7
5.3.2.2 Changing the Magnification in Sub Scanning Direction	5-7
5.3.3 Controlling the Scanning Lamp	5-7
5.3.3.1 Overview	5-7
5.3.3.2 Scanning Lamp.....	5-8
5.3.3.3 Turning On and Off the Scanning Lamp.....	5-8
5.3.4 Detecting the Size of Originals	5-8
5.3.4.1 Identifying the Size of Originals	5-8
5.3.4.2 Points of Measurement Used for Original Size Identification	5-8
5.3.4.3 Overview of Operation.....	5-10
5.3.5 Dirt Sensor Control	5-11
5.3.5.1 Dust Detection Control at Stream Reading	5-11
5.3.5.2 White Plate Dust Detection Control.....	5-12
5.3.6 Image Processing	5-13
5.3.6.1 Overview	5-13
5.3.6.2 CCD Drive	5-14
5.3.6.3 CCD Gain Correction, Offset Correction.....	5-15
5.3.6.4 CCD Output A/D Conversion	5-15
5.3.6.5 Outline of Shading Correction	5-15
5.3.6.6 Shading Adjustment	5-15
5.3.6.7 Shading Correction.....	5-15
5.4 Parts Replacement Procedure.....	5-16
5.4.1 DADF.....	5-16
5.4.1.1 Removing the DADF (imagePRESS C1 Series/imagePRESS C7000 Series).....	5-16
5.4.2 Copyboard Glass	5-16
5.4.2.1 Removing the Copyboard Glass (imagePRESS C1 Series/imagePRESS C7000 Series).....	5-16
5.4.2.2 Scanner Parts Replacement Procedure (imagePRESS C1 Series/imagePRESS C7000 Series).....	5-16
5.4.3 Replacement of Standard White Plate	5-16
5.4.3.1 Removing the Standard White Plate (imagePRESS C1 Series/imagePRESS C7000 Series)	5-16
5.4.3.2 Scanner Parts Replacement Procedure (imagePRESS C1 Series/imagePRESS C7000 Series).....	5-17
5.4.4 Exposure Lamp	5-17
5.4.4.1 Preparation for Removing the Scanner Lamp (imagePRESS C1 Series/imagePRESS C7000 Series)	5-17
5.4.4.2 Removing the Scanner Lamp (imagePRESS C1 Series)	5-17
5.4.4.3 Removing the Scanner Lamp (imagePRESS C1 Series)	5-19
5.4.4.4 Removing the Scanner Lamp (imagePRESS C7000 Series)	5-21
5.4.5 Reader Controller PCB	5-24
5.4.5.1 Preparation for Removing the Reader Controller PCB (imagePRESS C1 Series/imagePRESS C7000 Series)	5-24
5.4.5.2 Removing the Reader Controller PCB (imagePRESS C1 Series)	5-24
5.4.5.3 Removing the Reader Controller PCB (imagePRESS C7000 Series)	5-25
5.4.5.4 Procedure after Replacement of the Reader Controller PCB (imagePRESS C1 Series/imagePRESS C7000 Series)	5-27

5.4.6 Interface PCB.....	5-27
5.4.6.1 Removing the Interface PCB.....	5-27
5.4.7 Inverter PCB.....	5-28
5.4.7.1 Preparation for Removing the Inverter PCB (imagePRESS C1 Series/imagePRESS C7000 Series).....	5-28
5.4.7.2 Removing the Inverter PCB (imagePRESS C1 Series).....	5-28
5.4.7.3 Removing the Inverter PCB (imagePRESS C7000 Series).....	5-29
5.4.8 CCD Unit.....	5-31
5.4.8.1 Preparation for Removing the CCD Unit (imagePRESS C1 Series/imagePRESS C7000 Series).....	5-31
5.4.8.2 Removing the CCD Unit (imagePRESS C1 Series).....	5-31
5.4.8.3 Removing the CCD Unit (imagePRESS C7000 Series).....	5-32
5.4.8.4 Scanner Parts Replacement Procedure (imagePRESS C1 Series/imagePRESS C7000 Series).....	5-34
5.4.9 Scanner Motor.....	5-34
5.4.9.1 Preparation for Removing the Scanner Motor (imagePRESS C1 Series/imagePRESS C7000 Series).....	5-34
5.4.9.2 Removing the Scanner Motor (imagePRESS C1 Series).....	5-34
5.4.9.3 Removing the Scanner Motor (imagePRESS C7000 Series).....	5-35
5.4.9.4 Attaching the Scanner Motor (imagePRESS C1 Series/imagePRESS C7000 Series).....	5-36
5.4.10 ADF Open/Close Sensor.....	5-36
5.4.10.1 Removing the ADF Open/Close Sensor (imagePRESS C1 Series).....	5-36
5.4.10.2 Removing the ADF Open/Close Sensor(imagePRESS C7000 Series).....	5-37
5.4.11 Scanner Home Position Sensor.....	5-38
5.4.11.1 Removing the Scanner Home Position Sensor (imagePRESS C1 Series).....	5-38
5.4.11.2 Removing the Scanner Home Position Sensor (imagePRESS C7000 Series).....	5-39
5.4.12 Original Sensor.....	5-40
5.4.12.1 Preparation for Removing the Original Size Sensor (imagePRESS C1 Series/imagePRESS C7000 Series).....	5-40
5.4.12.2 Removing the Original Size Sensor (imagePRESS C1 Series).....	5-40
5.4.12.3 Removing the Original Size Sensor (imagePRESS C7000 Series).....	5-41
5.4.13 Scanner Drive Cable.....	5-42
5.4.13.1 Preparation for Removing the Scanner Motor Drive Wire (imagePRESS C1 Series/imagePRESS C7000 Series).....	5-42
5.4.13.2 Removing the Scanner Drive Wire (imagePRESS C1 Series).....	5-42
5.4.13.3 Removing the Scanner Drive Wire (imagePRESS C7000 Series).....	5-46
5.4.13.4 Attaching the Scanner Drive Wire (imagePRESS C1 Series/imagePRESS C7000 Series).....	5-50
5.4.13.5 Adjustment of Positions of the Mirror 1, 2 Mount (imagePRESS C1 Series/imagePRESS C7000 Series).....	5-50
5.4.13.6 Points to Note When Attaching the Control Panel (imagePRESS C1 Series).....	5-51

Chapter 6 Laser Exposure

6.1 Construction	6-1
6.1.1 Specifications/Control Mechanisms/Functions	6-1
6.1.2 Major Components	6-1
6.1.3 Control System Configuration	6-2
6.2 Basic Sequence	6-2
6.2.1 Basic Sequence	6-2
6.3 Various Control	6-3
6.3.1 Controlling the Laser Activation Timing	6-3
6.3.1.1 ON/OFF Control	6-3
6.3.1.2 Main Scan Sync Control	6-4
6.3.1.3 Sub Scan Sync Control	6-5
6.3.2 Controlling the Intensity of Laser Light	6-6
6.3.2.1 APC Control	6-6
6.3.2.2 PWM Control	6-6
6.3.3 Controlling the Laser Scanner Motor	6-6
6.3.3.1 Laser Scanner Motor Control	6-6
6.3.4 Controlling the Laser Shutter	6-7
6.3.4.1 Laser Shutter Control	6-7
6.4 Parts Replacement Procedure	6-9
6.4.1 Laser Scanner Unit	6-9
6.4.1.1 Preparation for Removing the Laser Scanner Unit	6-9
6.4.1.2 Removing the Laser Scanner Unit	6-9

Chapter 7 Image Formation

7.1 Construction	7-1
7.1.1 Image Formation Specification List	7-1
7.1.2 Main Components	7-2
7.1.3 Main Components	7-2
7.1.4 Charge Specification	7-3
7.1.5 Charge Specification	7-4
7.2 Image Formation Process	7-5
7.2.1 Image Formation Process	7-5
7.3 Basic Sequence	7-8
7.3.1 When Turning the Power ON	7-8
7.3.2 When Turning the Power ON	7-9
7.3.3 Copy / Print (Normal Speed)	7-9
7.3.4 Copy / Print (Normal Speed)	7-10
7.3.5 Copy / Print (1/3 Speed)	7-12
7.4 Image Stabilization Control	7-12
7.4.1 Overview of Image Stabilization Control	7-12
7.4.2 Overview of Image Stabilization Control	7-13
7.4.3 Image Stabilization Control Timing	7-15
7.4.4 Image Stabilization Control Timing	7-15
7.4.5 Potential Control	7-16
7.4.6 ATVC Control	7-17
7.4.7 ATR Control	7-20
7.4.8 ATR Control	7-21
7.4.9 ACVC Control	7-23
7.4.10 D-max Control	7-24
7.4.11 D-max Control	7-25
7.4.12 D-half Control	7-26
7.4.13 D-half Control	7-28
7.4.14 ARCDAT Control	7-30
7.4.15 ARCDAT Control	7-32
7.4.16 PASCAL Control	7-34
7.4.17 ACR Control (Auto Carrier Refresh Control)	7-37
7.4.18 ACR Control (Auto Carrier Refresh Control)	7-38
7.5 Charging Mechanism	7-39
7.5.1 Primary Charging Bias Control	7-39
7.5.2 Primary Charging Assembly Cleaning Control	7-40
7.5.3 Pre-Transfer Charging Bias Control	7-41
7.5.4 Pre-Transfer Charging Assembly Cleaning Control	7-42
7.5.5 Pre-Exposure LED	7-43
7.6 Developing Rotary	7-43
7.6.1 Overview of Developing Rotary	7-43
7.6.2 Overview of Developing Rotary	7-44
7.6.3 Developing Rotary Control	7-45
7.6.4 Developing Rotary Control	7-47
7.7 Developing Unit	7-49
7.7.1 Developing Unit Configuration	7-49
7.7.2 Developing Unit Configuration	7-49
7.7.3 Developing Assembly Drive Control	7-49
7.7.4 Developing Bias Control	7-50
7.7.5 Developing Bias Control	7-51

7.8 Toner Container.....	7-52
7.8.1 Outline.....	7-52
7.8.2 Outline.....	7-53
7.8.3 Toner Bottle Presence Detection	7-54
7.8.4 Toner Bottle Presence Detection	7-55
7.8.5 Toner Supply.....	7-55
7.8.6 Toner Supply.....	7-57
7.8.7 Toner Level Detection	7-58
7.8.8 Toner Level Detection	7-59
7.9 Transfer Device	7-60
7.9.1 Overview of Transfer Assembly.....	7-60
7.9.2 Transfer Bias Control.....	7-61
7.9.3 Overview of the Primary Transfer Assembly	7-63
7.9.4 ITB Cleaner Attachment/Detachment Control	7-63
7.9.5 ITB Cleaner Attachment/Detachment Detection	7-64
7.9.6 Overview of the Secondary Transfer Assembly	7-65
7.9.7 Secondary Transfer Outside Roller Attachment/Detachment Control	7-66
7.9.8 Secondary Transfer Roller Attachment/Detachment Detection	7-67
7.9.9 Secondary Transfer Roller Cleaning Control	7-68
7.9.10 ITB Home Position Detection.....	7-70
7.9.11 ITB Home Position Detection.....	7-71
7.10 Photosensitive Drum Cleaning.....	7-74
7.10.1 Overview of Drum Cleaning Unit.....	7-74
7.10.2 Drum Cleaning Unit Drive Control	7-74
7.11 Waste Toner Collection Mechanism	7-75
7.11.1 Collecting Waste Toner	7-75
7.11.2 Waste Toner Full Detection	7-76
7.12 Drum Heater	7-79
7.12.1 Drum Heater Control	7-79
7.13 ITB Heater	7-80
7.13.1 ITB Heater Control.....	7-80
7.14 Parts Replacement Procedure	7-83
7.14.1 Process Unit	7-83
7.14.1.1 Preparation for Sliding the Processing Unit	7-83
7.14.1.2 Sliding the Processing Unit.....	7-83
7.14.1.3 Sliding the Processing Unit.....	7-84
7.14.2 Pre-exposure LED Array	7-86
7.14.2.1 Preparation for Removing the Pre-Exposure LED	7-86
7.14.2.2 Removing the Pre-Exposure LED unit	7-86
7.14.3 Preconditioning Exposure LED Unit.....	7-86
7.14.3.1 Preparation for Removing the Drum Cleaning Pre-Exposure LED Unit	7-86
7.14.3.2 Removing the Drum Cleaning Pre-Exposure LED Unit	7-86
7.14.4 Primary Charging Assembly.....	7-86
7.14.4.1 Preparation for Removing the Primary Corona Assembly	7-86
7.14.4.2 Removing the Primary Corona Assembly	7-86
7.14.4.3 After Replacing the Primary Charging Assembly	7-87
7.14.5 Primary Corona Grid Panel.....	7-87
7.14.5.1 Preparation for Removing the Primary Grid Plate.....	7-87
7.14.5.2 Removing the Primary Grid Plate.....	7-87
7.14.6 Primary Corona Pad Holder.....	7-87
7.14.6.1 Preparation for Removing the Primary Corona Pad Holder	7-87
7.14.6.2 Removing the Primary Corona Assembly Pad Holder	7-87
7.14.7 Primary Corona Slider	7-88
7.14.7.1 Preparation for Removing the Primary Corona Assembly Slider.....	7-88
7.14.7.2 Removing the Primary Corona Assembly Slider.....	7-88
7.14.8 Pre-transfer Charging Assembly.....	7-88
7.14.8.1 Preparation for removing the Pre-transfer Corona Assembly	7-88

7.14.8.2 Removing the pre-transfer corona assembly	7-88
7.14.8.3 After Replacing the Pre-transfer Charging Assembly	7-88
7.14.9 Pre-Transfer Corona Pad Holder	7-88
7.14.9.1 Preparation for Removing the Pre-transfer Corona Assembly Pad Holder	7-88
7.14.9.2 Removing the Pre-transfer corona assembly pad folder	7-89
7.14.10 Pre-Transfer Corona Slider	7-89
7.14.10.1 Preparation for Removing the Pre-transfer Corona Assembly Slider	7-89
7.14.10.2 Removing the Pre-transfer Corona Assembly Slider	7-89
7.14.11 Drum Unit	7-89
7.14.11.1 Preparation for Removing the Drum Unit	7-89
7.14.11.2 Removing the Drum Unit	7-89
7.14.12 Photosensitive Drum	7-90
7.14.12.1 Points to Note When Handling the Photosensitive Drum	7-90
7.14.12.2 Preparation for Removing the Photosensitive Drum	7-90
7.14.12.3 Removing the Photosensitive Drum	7-90
7.14.12.4 After Replacing the Photosensitive Drum	7-90
7.14.13 Seal Support Plate (Front)	7-91
7.14.13.1 Preparation for Removing the Seal Support Plate (Front)	7-91
7.14.13.2 Removing the Seal Support Plate (Front)	7-91
7.14.14 Seal Support Plate (Rear)	7-91
7.14.14.1 Preparation for Removing the Seal Support Plate (Rear)	7-91
7.14.14.2 Removing the Seal Support Plate (Rear)	7-91
7.14.15 Scoop-Up Sheet Support Plate	7-92
7.14.15.1 Preparation for Removing the Scoop-Up Sheet Support Plate	7-92
7.14.15.2 Removing the Scoop-Up Sheet Support Plate	7-92
7.14.16 End Seal (Front)	7-92
7.14.16.1 Preparation for Removing the End Seal (Front)	7-92
7.14.16.2 Removing the End Seal (Front)	7-92
7.14.17 End Seal (Rear)	7-92
7.14.17.1 Preparation for Removing the End Seal (Rear)	7-92
7.14.17.2 Removing the End Seal (Rear)	7-93
7.14.18 Drum Cleaner Brush	7-93
7.14.18.1 Preparation for Removing the Drum Cleaner Brush	7-93
7.14.18.2 Removing the Drum Cleaner Brush	7-93
7.14.19 Photosensitive Drum Cleaning Blade	7-93
7.14.19.1 Preparation for Removing the Drum Cleaning Blade	7-93
7.14.19.2 Removing the Drum Cleaning Blade	7-93
7.14.20 Hopper Assembly	7-93
7.14.20.1 Preparation for Removing the Sub Hopper Unit	7-93
7.14.20.2 Removing the Sub Hopper Unit	7-93
7.14.20.3 Removing the Sub Hopper Unit	7-94
7.14.20.4 Procedure after Replacing the Sub Hopper Unit	7-96
7.14.21 Development Unit	7-96
7.14.21.1 Preparation for Removing the Developing Assembly	7-96
7.14.21.2 Removing the Developing Assembly	7-96
7.14.22 Development Clutch	7-97
7.14.22.1 Preparation for Removing the Developing Clutch	7-97
7.14.22.2 Removing the Developing Clutch	7-97
7.14.23 ITB Cleaning Unit	7-99
7.14.23.1 Preparation for Removing the ITB Cleaning Unit	7-99
7.14.23.2 Removing the ITB Cleaning Unit	7-99
7.14.24 Intermediate Transfer Unit	7-100
7.14.24.1 Preparation for Removing the Intermediate Transfer Unit	7-100
7.14.24.2 Removing the Intermediate Transfer Unit	7-100
7.14.25 Secondary Transfer Outside Roller Unit	7-101
7.14.25.1 Preparation for Removing the Secondary Transfer Outer Roller Unit	7-101
7.14.25.2 Removing the Secondary Transfer Outer Roller Unit	7-101
7.14.26 Secondary Transfer Outside Roller Sub Unit	7-102
7.14.26.1 Preparation for Removing the Secondary Transfer Outside Roller Sub-Unit	7-102
7.14.26.2 Removing the Secondary Transfer Outside Roller Sub-Unit	7-102

7.14.27 Intermediate Transfer Belt	7-102
7.14.27.1 Preparation for Removing the ITB	7-102
7.14.27.2 Removing the ITB	7-102
7.14.28 Primary Transfer Roller	7-103
7.14.28.1 Preparation for Removing the Primary Transfer Roller	7-103
7.14.28.2 Removing the Primary Transfer Roller	7-103
7.14.29 Secondary Transfer External Roller.....	7-104
7.14.29.1 Preparation for Removing the Secondary Transfer Outside Roller.....	7-104
7.14.29.2 Removing the Secondary Transfer Outside Roller	7-104
7.14.30 Secondary Transfer Internal Roller.....	7-104
7.14.30.1 Preparation for Removing the Secondary Transfer Inside Roller.....	7-104
7.14.30.2 Removing the Secondary Transfer Inside Roller.....	7-104
7.14.31 Secondary Transfer Bias Roller Cleaning Blade	7-105
7.14.31.1 Preparation for Removing the Secondary Transfer Bias Roller Cleaning Blade	7-105
7.14.31.2 Removing the Secondary Transfer Bias Roller Cleaning Blade.....	7-105
7.14.32 ITB Cleaner Brush (Large)	7-105
7.14.32.1 Preparation for Removing the ITB Cleaner Brush (Large)	7-105
7.14.32.2 Removing the ITB Cleaner Brush (Large)	7-105
7.14.33 ITB Cleaner Brush (Small)	7-106
7.14.33.1 Preparation for Removing the ITB Cleaner Brush (Small)	7-106
7.14.33.2 Removing the ITB Cleaner Brush (Small)	7-106
7.14.34 Secondary Transfer Roller Brush (Upper).....	7-106
7.14.34.1 Preparation for Removing the Secondary Transfer Roller Brush (Upper)	7-106
7.14.34.2 Removing the Secondary Transfer Roller Brush (Upper)	7-106
7.14.35 Secondary Transfer Roller Brush (Lower)	7-107
7.14.35.1 Preparation for Removing the Secondary Transfer Roller Brush (Lower).....	7-107
7.14.35.2 Removing the Secondary Transfer Roller Brush (Lower).....	7-107
7.14.36 ITB Bias Roller Cleaning Blade (Upper).....	7-107
7.14.36.1 Preparation for Removing the ITB Bias Roller Cleaning Blade (Upper).....	7-107
7.14.36.2 Removing the ITB Bias Roller Cleaning Blade (Upper).....	7-107
7.14.37 ITB Bias Roller Cleaning Blade (Lower).....	7-107
7.14.37.1 Preparation for Removing the ITB Bias Roller Cleaning Blade (Lower)	7-107
7.14.37.2 Removing the ITB Bias Roller Cleaning Blade (Lower)	7-107
7.14.38 Potential Sensor Unit	7-108
7.14.38.1 Preparation for Removing the Potential Sensor Unit.....	7-108
7.14.38.2 Removing the Potential Sensor.....	7-108
7.14.38.3 Replacing the Potential Sensor	7-108
7.14.39 ATR Sensor Unit.....	7-109
7.14.39.1 Preparation for Removing the ATR Sensor Unit.....	7-109
7.14.39.2 Removing the ATR Sensor	7-109
7.14.39.3 After Replacing the ATR Sensor	7-110
7.14.40 Drum Thermal Sensor Unit.....	7-110
7.14.40.1 Preparation for Removing the Drum Thermal Sensor Unit.....	7-110
7.14.40.2 Removing the Drum Thermal Sensor Unit	7-110
7.14.41 Patch Image Sensor	7-111
7.14.41.1 Preparation for Removing the Patch Image Sensor Unit.....	7-111
7.14.41.2 Removing the Patch Image Sensor Unit.....	7-111
7.14.41.3 After Replacing the Patch Image Reading Sensor	7-111
7.14.42 Charging Wire.....	7-111
7.14.42.1 Preparation for Setting Up Charging Wire	7-111
7.14.42.2 Setting Up Charging Wire	7-111
7.14.42.3 After Replacing the Primary Charging Wire	7-112

Chapter 8 Pickup/Feeding System

8.1 Construction	8-1
8.1.1 Specification/Control/Function	8-1
8.1.2 Arrangement of Rollers	8-2
8.1.3 Paper Delivery Path	8-3
8.1.4 Arrangement of Sensors	8-4
8.1.5 Distribution of Drives	8-6
8.1.6 Interval Speed	8-8
8.2 Basic Sequence	8-13
8.2.1 Cassette Feeding	8-13
8.2.2 Manual Feeding	8-13
8.3 Detecting Jams	8-15
8.3.1 Jam Detection Outline	8-15
8.3.1.1 Overview	8-15
8.3.1.2 Operation at Jam Occurrence	8-16
8.3.2 Delay Jams	8-16
8.3.2.1 Cassette Pickup Assembly	8-16
8.3.2.2 Other than Cassette Pickup Assembly	8-17
8.3.3 Stationary Jams	8-18
8.3.3.1 Normal Stationary Jam	8-18
8.3.3.2 Stationary Jam (Residual Jam) at the Power ON	8-19
8.3.4 Other Jams	8-19
8.3.4.1 Paper Thickness Detection	8-19
8.4 Cassette	8-20
8.4.1 Overview	8-20
8.4.2 Paper Size Detection	8-21
8.4.3 Setting the Universal Cassette	8-22
8.4.4 Paper Level Sensor	8-22
8.5 Cassette Pick-Up Unit	8-25
8.5.1 Configuration	8-25
8.5.2 Behavior of Lifter	8-25
8.5.3 Behavior of Pickup	8-26
8.5.4 Feeding Control (Cassette 1)	8-27
8.5.5 Pickup Control (Cassette 2 to 4)	8-28
8.6 Manual Feed Pickup Unit	8-29
8.6.1 Configuration	8-29
8.6.2 Feeding Operation	8-29
8.6.3 Paper Size Detection	8-30
8.6.4 Last Paper Detection	8-31
8.7 Registration Unit	8-32
8.7.1 Overview	8-32
8.8 Duplex Feeding Unit	8-33
8.8.1 Overview	8-33
8.8.2 Side Registration Position Detection	8-35
8.8.3 A4 size 5-Sheet-Circulation	8-37
8.8.4 A3 Size 3-Sheet-Circulation	8-43
8.9 Delivery	8-50
8.9.1 Overview	8-50
8.9.2 Face-up Delivery	8-50
8.9.3 Face-down Delivery	8-50
8.9.4 Curl-Removing Operation (Decurler Unit)	8-54

8.10 Parts Replacement Procedure	8-58
8.10.1 Cassette Pickup Unit	8-58
8.10.1.1 Preparation for Removing the Cassette Pickup Unit	8-58
8.10.1.2 Removing the Cassette Pickup Unit	8-58
8.10.2 Cassette Heater	8-59
8.10.2.1 Removing the Cassette Heater	8-59
8.10.3 Cassette Pickup/Feed/Separation Roller	8-60
8.10.3.1 Removing the Cassette Pickup/Feed/Separation Roller	8-60
8.10.4 Manual Feed Roller	8-60
8.10.4.1 Removing the Manual Feed Roller	8-60
8.10.5 Manual Feed Separation Roller	8-61
8.10.5.1 Preparation for Removing the Manual Separation Roller	8-61
8.10.5.2 Removing the Manual Separation Roller	8-61
8.10.6 Horizontal Registration Assembly	8-61
8.10.6.1 Preparation for Removing the Horizontal Registration	8-61
8.10.6.2 Removing the Horizontal Registration	8-61
8.10.7 Pre-Fixing Feeding Unit	8-62
8.10.7.1 Preparation for Removing the Pre-Fixing/Feeding Unit	8-62
8.10.7.2 Removing the Pre-Fixing/Feeding Unit	8-62
8.10.7.3 Removing the Pre-Fixing/Feeding Unit	8-63
8.10.8 Fixing/Feeder Unit	8-63
8.10.8.1 Preparation for Pulling/Removing the Fixing/Feeding Unit	8-63
8.10.8.2 Pulling/Removing the Fixing/Feeding Unit	8-63
8.10.9 Buffer Decurler	8-65
8.10.9.1 Removing the Decurler	8-65
8.10.10 Decurler Adjustment Roller (Upper)	8-66
8.10.10.1 Preparation for Removing the Decurler Sponge Roller (upper)	8-66
8.10.10.2 Removing the Decurler Sponge Roller (upper)	8-66
8.10.11 Decurler Adjustment Roller (Lower)	8-67
8.10.11.1 Preparation for Removing the Decurler Sponge Roller (lower)	8-67
8.10.11.2 Removing the Decurler Sponge Roller (lower)	8-67

Chapter9 Fixing System

9.1 Construction	9-1
9.1.1 Specifications/Control/Function	9-1
9.1.2 Major Components (Section)	9-2
9.1.3 Major Components (Thermistor / Thermal switch)	9-3
9.1.4 Major Components (Sensor/Solenoid)	9-4
9.1.5 Control System Configuration	9-5
9.1.6 Fixing Roller/Belt Drive Control	9-8
9.2 Basic Sequence	9-10
9.2.1 At Power-On	9-10
9.2.2 Print (Constant Speed)	9-11
9.2.3 Print (1/3-Speed)	9-12
9.3 Various Control Mechanisms	9-13
9.3.1 Controlling the Fixing Roller Temperature	9-13
9.3.1.1 Down Sequence	9-13
9.3.1.2 Power Save Mode	9-14
9.3.2 Detecting the Passage of Paper	9-14
9.3.2.1 Detection for Paper Wrapping	9-14
9.3.3 External Heat Roller Drive Control	9-17
9.3.3.1 Detached/Attached Mechanism of the External Heat Roller	9-17
9.3.4 Belting inclined Control	9-19
9.3.4.1 Control for adjusting Fixing Belt Displacement	9-19
9.4 Belt Pressurizing Mechanism	9-22
9.4.1 Locking Mechanism of the Fixing Belt	9-22
9.5 Fixing Cleaning Web Mechanisms	9-24
9.5.1 Control of the Fixing Cleaning Web Drive	9-24
9.5.2 Control of the Fixing Cleaning Web Length Detection	9-25
9.5.3 Detached/Attached Mechanism of the Cleaning Web (Web Roller)	9-26
9.5.4 Refresh Roller Attach/Detach Mechanism	9-28
9.6 Protective Functions	9-29
9.6.1 Protective Circuit	9-29
9.6.2 Related Error Code	9-31
9.7 Parts Replacement Procedure	9-34
9.7.1 Fixing Drive Unit	9-34
9.7.1.1 Preparation for Removing the Fixing Drive Second Gear	9-34
9.7.1.2 Removing the Fixing Drive Second Gear	9-34
9.7.2 Fixing Unit	9-35
9.7.2.1 Preparation for Removing the Fixing Assembly Unit	9-35
9.7.2.2 Removing the Fixing Assembly Unit	9-35
9.7.2.3 Removing the Fixing Assembly Unit	9-36
9.7.3 Fixing Belt Unit	9-38
9.7.3.1 Preparation for Removing the Fixing Belt Unit	9-38
9.7.3.2 Removing the Fixing Belt Unit	9-38
9.7.3.3 Preparation for Removing the Fixing Separation Roller Ball Bearing	9-40
9.7.3.4 Removing the Fixing Separation Roller Ball Bearing	9-40
9.7.4 Fixing Roller	9-40
9.7.4.1 Preparation for Removing the Fixing Roller	9-40
9.7.4.2 Removing the Fixing Roller	9-40
9.7.4.3 After Replacing the Fixing Roller	9-40
9.7.5 Fixing Belt	9-42
9.7.5.1 Preparation for Removing the Fixing Belt	9-42
9.7.5.2 Removing the Fixing Belt	9-42
9.7.5.3 After Replacing the Fixing Belt	9-43

9.7.6 External Heat Roller	9-44
9.7.6.1 Preparation for Removing the External Heat Roller.....	9-44
9.7.6.2 Removing the External Heat Roller.....	9-44
9.7.6.3 When Replacing the External Heat Roller.....	9-44
9.7.7 Oil Applying Roller	9-44
9.7.7.1 Preparation for Removing the Oil Coating Roller.....	9-44
9.7.7.2 Removing the Oil Coating Roller.....	9-44
9.7.8 External Heat Cleaning Roller.....	9-44
9.7.8.1 Preparation for Removing the External Heat Cleaning Roller.....	9-44
9.7.8.2 Removing the External Heat Cleaning Roller.....	9-44
9.7.9 Fixing Web Roller.....	9-45
9.7.9.1 Preparation for Removing the Web Roller.....	9-45
9.7.9.2 Removing the Web Roller.....	9-45
9.7.9.3 Removing the Web Roller.....	9-46
9.7.10 Refresh Roller.....	9-46
9.7.10.1 Preparation for Removing the Refresh Roller.....	9-46
9.7.10.2 Removing the Refresh Roller.....	9-46
9.7.10.3 Removing the Refresh Roller.....	9-48
9.7.11 Steering Roller.....	9-49
9.7.11.1 Preparation for Removing the Steering Roller.....	9-49
9.7.11.2 Removing the Steering Roller.....	9-49
9.7.12 Pressure Pad.....	9-49
9.7.12.1 Preparation for Removing the Pressure Pad.....	9-49
9.7.12.2 Removing the Pressure Pad.....	9-49
9.7.13 Pressure Pad Cover.....	9-49
9.7.13.1 Preparation for Removing the Pressure Pad Cover.....	9-49
9.7.13.2 Removing the Pressure Pad Cover.....	9-49
9.7.13.3 After Replacing the Pressure Pad Cover.....	9-50
9.7.14 Fixing Main Thermistor.....	9-50
9.7.14.1 Preparation for Removing the Fixing Main Thermistor.....	9-50
9.7.14.2 Removing the Fixing Main Thermistor.....	9-50
9.7.15 Fixing Sub Thermistor.....	9-50
9.7.15.1 Preparation for Removing the Fixing Sub Thermistor.....	9-50
9.7.15.2 Removing the Fixing Sub Thermistor.....	9-50
9.7.16 Outside Heating Main Thermistor.....	9-51
9.7.16.1 Preparation for Removing the External Heat Main Thermistor.....	9-51
9.7.16.2 Removing the External Heat Main Thermistor.....	9-51
9.7.17 Outside Heating Sub Thermistor.....	9-51
9.7.17.1 Preparation for Removing the External Heat Sub Thermistor.....	9-51
9.7.17.2 Removing the External Heat Sub Thermistor.....	9-51
9.7.18 Inlet Thermistor.....	9-52
9.7.18.1 Preparation for Removing the Inlet Main Thermistor/Sub Thermistor.....	9-52
9.7.18.2 Removing the Inlet Main Thermistor/Sub Thermistor.....	9-52
9.7.19 Fixing Thermal Switch.....	9-52
9.7.19.1 Preparation for Removing the Fixing Thermal Switch.....	9-52
9.7.19.2 Removing the Fixing Thermal Switch.....	9-52
9.7.20 Thermal Switch.....	9-53
9.7.20.1 Preparation for Removing the External Heat Thermal Switch.....	9-53
9.7.20.2 Removing the External Heat Thermal Switch.....	9-53
9.7.21 Fixing Belt Thermal Switch.....	9-53
9.7.21.1 Preparation for Removing the Belt Thermal Switch.....	9-53
9.7.21.2 Removing the Belt Thermal Switch.....	9-53
9.7.22 Fixing Main Heater/Fixing Sub Heater.....	9-54
9.7.22.1 Preparation for Removing the Fixing Main Heater/the Fixing Sub Heater.....	9-54
9.7.22.2 Removing the Fixing Main Heater/the Fixing Sub Heater.....	9-54
9.7.23 Inlet Heater.....	9-55
9.7.23.1 Preparation for Removing the Fixing Belt Inlet Heater.....	9-55
9.7.23.2 Removing the Fixing Belt Inlet Heater.....	9-55
9.7.24 Fixing Locking Heater.....	9-56
9.7.24.1 Preparation for Removing the External Heater.....	9-56

9.7.24.2 Removing the External Heater	9-56
9.7.25 Fixing Web.....	9-57
9.7.25.1 Preparation for Removing the Fixing Cleaning Web.....	9-57
9.7.25.2 Removing the Fixing Cleaning Web.....	9-57
9.7.25.3 Removing the Fixing Cleaning Web.....	9-58
9.7.25.4 After Replacing the Fixing Cleaning Web.....	9-59
9.7.26 Insulating Bush	9-59
9.7.26.1 Preparation for Removing the Insulating Bush.....	9-59
9.7.26.2 Removing the Insulating Bush.....	9-59
9.7.26.3 After Replacing the Insulating Bush.....	9-59
9.7.27 Outside Heat Insulating Bush	9-59
9.7.27.1 Preparation for Removing the External Heat Insulating Bush.....	9-59
9.7.27.2 Removing the External Heat Insulating Bush.....	9-59
9.7.27.3 When Replacing the External Heat Insulating Bush.....	9-59
9.7.28 Lower Separation Claw.....	9-60
9.7.28.1 Preparation for Removing the Lower Separation Plate.....	9-60
9.7.28.2 Removing the Lower Separation Plate.....	9-60
9.7.29 Delivery Upper Separation Plate	9-61
9.7.29.1 Preparation for Removing the Upper Separation Plate.....	9-61
9.7.29.2 Detaching the Upper Separation Plate	9-61

Chapter 10 Externals and Controls

10.1 Control Panel.....	10-1
10.1.1 Overview.....	10-1
10.1.2 LCD Function.....	10-1
10.1.3 Contrast Adjusting Function.....	10-1
10.1.4 Function of Control Panel CPU.....	10-1
10.2 Counters.....	10-1
10.2.1 Overview.....	10-1
10.2.2 Count increment timing.....	10-3
10.3 Fans.....	10-3
10.3.1 Fan.....	10-3
10.3.2 Sequence of Fan Operation.....	10-5
10.4 Power Supply.....	10-6
10.4.1 Power Supply.....	10-6
10.4.1.1 Overview of Power Supply.....	10-6
10.4.2 Protection Function.....	10-8
10.4.2.1 Protective Functions.....	10-8
10.4.3 Backup Battery.....	10-8
10.4.3.1 Backup Battery.....	10-8
10.4.4 Energy-Saving Function.....	10-8
10.4.4.1 Overview.....	10-8
10.4.4.2 SNMP setup.....	10-10
10.5 Parts Replacement Procedure.....	10-11
10.5.1 External Covers.....	10-11
10.5.1.1 Front Cover.....	10-11
10.5.1.1.1 Front Cover Opening.....	10-11
10.5.1.2 Upper Right Cover.....	10-11
10.5.1.2.1 Removing the Right Upper Cover.....	10-11
10.5.1.3 Right Lower Cover.....	10-12
10.5.1.3.1 Preparation for Removing the Right Lower Cover.....	10-12
10.5.1.3.2 Removing the Right Lower Cover.....	10-12
10.5.1.4 Right Rear Upper Cover.....	10-12
10.5.1.4.1 Removing the Right Rear Upper Cover.....	10-12
10.5.1.5 Right Rear Lower Cover.....	10-12
10.5.1.5.1 Removing the Right Rear Lower Cover.....	10-12
10.5.1.6 Upper Left Cover.....	10-12
10.5.1.6.1 Preparation for Removing the Left Upper Cover.....	10-12
10.5.1.6.2 Removing the Left Upper Cover.....	10-12
10.5.1.7 Left Lower Cover.....	10-12
10.5.1.7.1 Removing the Left Lower Cover.....	10-12
10.5.1.8 Left Middle Cover.....	10-13
10.5.1.8.1 Preparation for Removing the Left Middle Cover.....	10-13
10.5.1.8.2 Removing the Left Middle Cover.....	10-13
10.5.1.9 Left Rear Cover (Upper).....	10-13
10.5.1.9.1 Removing the Left Rear Upper Cover.....	10-13
10.5.1.10 Left Rear Cover (Lower).....	10-14
10.5.1.10.1 Removing the Left Rear Lower Cover.....	10-14
10.5.1.11 Rear Upper Cover.....	10-14
10.5.1.11.1 Removing the Rear Upper Cover.....	10-14
10.5.1.12 Rear Lower Cover.....	10-14
10.5.1.12.1 Removing the Rear Lower Cover.....	10-14
10.5.1.13 Toner Replacement Cover.....	10-15
10.5.1.13.1 Toner Replacement Cover Opening.....	10-15
10.5.1.14 Process Unit Cover.....	10-15

10.5.1.14.1 Preparation for Removing the Process Unit Cover.....	10-15
10.5.1.14.2 Removing the Process Unit Cover.....	10-15
10.5.2 Hopper Drive Unit	10-15
10.5.2.1 Preparation for Pulling Up/Removing the Hopper Unit	10-15
10.5.2.2 Pulling the Hopper Unit Up.....	10-15
10.5.2.3 Pulling the Hopper Unit Up.....	10-17
10.5.2.4 Removing the Hopper Unit.....	10-18
10.5.2.5 Removing the Hopper Unit.....	10-20
10.5.3 DC Power Supply Unit	10-22
10.5.3.1 Preparation for Removing the Power Supply Assembly	10-22
10.5.3.2 Removing the Power Supply Assembly	10-22
10.5.4 Sub DC Power Supply	10-22
10.5.4.1 Preparation for Removing the Sub DC Power Supply	10-22
10.5.4.2 Removing the Sub DC Power Supply.....	10-22
10.5.5 Control Panel	10-23
10.5.5.1 Removing the Control Panel.....	10-23
10.5.6 DC Controller PCB	10-25
10.5.6.1 Preparation for Removing the DC Controller PCB	10-25
10.5.6.2 Removing the DC Controller PCB	10-25
10.5.6.3 After Replacing the DC controller PCB	10-26
10.5.7 Leakage Breaker	10-26
10.5.7.1 Preparation for Removing the Leakage Breaker.....	10-26
10.5.7.2 Removing the Leakage Breaker.....	10-26
10.5.8 DC/DC Converter PCB.....	10-27
10.5.8.1 Preparation for Removing RD-DC-DC PCB.....	10-27
10.5.8.2 Removing the RD-DC-DC PCB.....	10-27
10.5.9 High-Voltage Box Unit.....	10-27
10.5.9.1 Preparation for Removing the High-Voltage Box Unit.....	10-27
10.5.9.2 Removing the High-Voltage Box Unit.....	10-27
10.5.9.3 Removing the High-Voltage Box Unit.....	10-28
10.5.10 HV1 PCB	10-29
10.5.10.1 Preparation for Removing the HV1 PCB Unit	10-29
10.5.10.2 Removing the HV1 PCB Unit	10-29
10.5.11 HV3 PCB	10-30
10.5.11.1 Preparation for Removing the HV3 PCB	10-30
10.5.11.2 Removing the HV3 PCB.....	10-30
10.5.12 HV5 PCB	10-30
10.5.12.1 Preparation for Removing the HV5 PCB	10-30
10.5.12.2 Removing the HV5 PCB.....	10-30
10.5.13 HV8 PCB	10-31
10.5.13.1 Preparation for Removing the HV8 PCB	10-31
10.5.13.2 Removing the HV8 PCB.....	10-31
10.5.14 Fixing Driver PCB	10-31
10.5.14.1 Preparation for Removing the Fixing Driver PCB	10-31
10.5.14.2 Removing the Fixing Driver PCB	10-31
10.5.15 Feeding Driver PCB.....	10-32
10.5.15.1 Preparation for Removing the Feeding Driver PCB.....	10-32
10.5.15.2 Removing the Feeding Driver PCB.....	10-32
10.5.16 AC Driver PCB.....	10-33
10.5.16.1 Preparation for Removing the AC Driver PCB	10-33
10.5.16.2 Removing the AC Driver PCB	10-33
10.5.17 Pickup Driver PCB	10-33
10.5.17.1 Preparation for Removing the Pick-Up Driver PCB	10-33
10.5.17.2 Removing the Pick-Up Driver PCB.....	10-33
10.5.18 Decurler Driver PCB.....	10-34
10.5.18.1 Removing the Decurler Driver PCB.....	10-34
10.5.19 Side Driver PCB	10-34
10.5.19.1 Preparation for Removing the Side Driver PCB.....	10-34
10.5.19.2 Removing the Side Driver PCB.....	10-34
10.5.20 Backside Driver Cover.....	10-35

10.5.20.1 Preparation for Removing the Backside Driver PCB	10-35
10.5.20.2 Removing the Backside Driver PCB.....	10-35
10.5.21 Primary Suction Fan	10-35
10.5.21.1 Removing the Air Filter	10-35
10.5.22 Ozone Filter (Right).....	10-36
10.5.22.1 Removing the Ozone Filter (Right).....	10-36
10.5.23 Ozone Filter (Left)	10-36
10.5.23.1 Preparation for Removing the Ozone Filter (Left).....	10-36
10.5.23.2 Removing the Ozone Filter (Left).....	10-36
10.5.24 Ozone Filter (Upper Left)	10-36
10.5.24.1 Preparation for Removing the Ozone Filter (Left Upper).....	10-36
10.5.24.2 Removing the Ozone Filter (Left Upper).....	10-36
10.5.25 Ozone Filter (Lower Left).....	10-37
10.5.25.1 Removing the Ozone Filter (Left Lower)	10-37
10.5.26 Ozone Filter (Rear)	10-37
10.5.26.1 Removing the Ozone Filter (Rear).....	10-37
10.5.27 Ozone Filter (Lower Rear).....	10-37
10.5.27.1 Removing the Ozone Filter (Rear Lower)	10-37
10.5.28 Toner Filter (Right).....	10-38
10.5.28.1 Removing the Toner Filter (Right)	10-38
10.5.29 Toner Filter (Left)	10-38
10.5.29.1 Preparation for Removing the Toner Filter (Left).....	10-38
10.5.29.2 Removing the Toner Filter (Left).....	10-38
10.5.30 Toner Filter (Rear)	10-39
10.5.30.1 Removing the Toner Filter (Rear).....	10-39

Chapter11 MEAP

11.1 MEAP.....	11-1
11.1.1 Changes.....	11-1
11.1.2 Checking the Operating Environment.....	11-1
11.1.3 Setting Up the Network.....	11-4
11.1.4 Login to SMS.....	11-6
11.1.5 Setting the method to login to SMS.....	11-7
11.1.6 Checking Application List.....	11-11
11.1.7 Starting and Stopping a MEAP Application.....	11-12
11.1.8 Checking the Platform Information.....	11-13
11.1.9 MEAP Specifications.....	11-14
11.1.10 MFID.....	11-16
11.1.11 Checking the System Information of a MEAP Application with SMS.....	11-18
11.1.12 Printing the System Information of a MEAP Application.....	11-19
11.1.13 Reference (Application System Information).....	11-20
11.1.14 Installing an Application.....	11-21
11.1.15 MEAP Enterprise Service Manager.....	11-23
11.1.16 Adding a License File.....	11-24
11.1.17 Disabling a License File (suspending a license).....	11-26
11.1.18 Downloading/Removing an Invalidated License File.....	11-27
11.1.19 Reusable license.....	11-29
11.1.20 License for forwarding.....	11-29
11.1.21 Uninstalling an Application.....	11-32
11.1.22 Login Service.....	11-33
11.1.23 Changing Login Services.....	11-38
11.1.24 Initializing the Password.....	11-39
11.1.25 Creating a Backup for MEAP Application Area, Formatting the Hard Disk, Restoring the MEAP Application Area with the Backup, Using the SST (Service Support Tool).....	11-39
11.1.26 Replacing the Hard Disk Drive.....	11-40
11.1.27 MEAP Safe Mode.....	11-40
11.1.28 Setting HTTP port for MEAP application (level 2).....	11-41
11.1.29 USB keyboard support (iR3245 series only).....	11-44
11.1.30 USB memory related functions(iR3245 series only).....	11-44
11.1.31 Reference material.....	11-46
11.1.32 Option for exclusive individual measure.....	11-48

Chapter 12 Maintenance and Inspection

12.1 Periodically Replaced Parts	12-1
12.1.1 Overview	12-1
12.1.2 Reader Unit	12-1
12.1.3 Printer Unit.....	12-1
12.2 Durables and Consumables	12-4
12.2.1 Overview	12-4
12.2.2 Reader Unit	12-4
12.2.3 Printer Unit.....	12-4
12.3 Scheduled Servicing Basic Procedure.....	12-8
12.3.1 General Procedure for Scheduled Servicing	12-8
12.3.2 Scheduled Servicing List Reader Unit.....	12-8
12.3.3 Scheduled Servicing List Printer Unit	12-9
12.4 Cleaning	12-14
12.4.1 Cleaning for secondary transfer rear guide	12-14
12.4.2 Cleaning of registration roller, registration guide and transparency sensor	12-15
12.4.3 Cleaning for buffer decurler.....	12-16

Chapter 13 Standards and Adjustments

13.1 Image Adjustment Basic Procedure	13-1
13.1.1 Image Adjustment Basic Procedure 1	13-1
13.1.2 Image Adjustment Basic Procedure 2	13-1
13.1.3 Image Adjustment Basic Procedure 3	13-2
13.1.4 Image Adjustment Basic Procedure 4	13-3
13.2 Scanning System	13-5
13.2.1 After Replacing the CCD Unit	13-5
13.2.2 After Replacing the Copyboard Glass	13-5
13.2.3 After Replacing the Reader Control PCB and Clearing the RAM	13-5
13.3 Image Formation System	13-5
13.3.1 After Replacing the Primary Charging Wire	13-5
13.3.2 After Replacing the Primary Charging Assembly	13-5
13.3.3 Replacing the Potential Sensor	13-6
13.3.4 After Replacing the Pre-transfer Charging Assembly	13-7
13.3.5 After Replacing the Waste Toner Box	13-7
13.3.6 After Replacing the Secondary Transfer Roller Waste Toner Case	13-7
13.3.7 After Replacing the Photosensitive Drum	13-7
13.3.8 Replacing the Waste Toner Sensor	13-7
13.3.9 After Replacing the ATR Sensor	13-7
13.3.10 After Replacing the Patch Image Reading Sensor	13-7
13.4 Fixing System	13-7
13.4.1 Checking the Nip Width	13-7
13.4.2 After Replacing the Fixing Roller	13-8
13.4.3 After Replacing the Fixing Belt	13-8
13.4.4 After Replacing the Fixing Cleaning Belt	13-8
13.4.5 After Replacing the Fixing Belt / Pressure Pad Cover	13-8
13.4.6 When replacing pressure belt	13-8
13.4.7 When Replacing Pressure Belt Unit-Related Durable Parts	13-9
13.5 Electrical Components	13-10
13.5.1 Replacing the DC controller PCB	13-10
13.5.2 After Replacing the Main Control PCB (main)	13-10
13.5.3 After Replacing the SRAM PCB	13-10
13.5.4 After Replacing the HDD	13-11
13.5.5 Replacing the HV2, HV4, HV6-1 and HV6-2	13-11
13.5.6 Inputting the Rank Value at Replacing the Paper Thickness Sensor	13-11
13.6 Pickup/Feeding System	13-11
13.6.1 Vertical Registration Adjustment at Cassette Pickup	13-11
13.6.2 Vertical Registration Adjustment at Manual Pickup	13-11
13.6.3 Registering Paper Width Standard Value at Manual Feeder Tray	13-12

Chapter 14 Correcting Faulty Images

14.1 Making Initial Checks	14-1
14.1.1 Installation Environment	14-1
14.1.2 Checking of Paper	14-1
14.1.3 Checking of Paper Setting	14-1
14.1.4 Checking of the Durable Parts	14-1
14.1.5 Checking of the Periodically Replaced Parts	14-1
14.1.6 Checking of Each Unit/Checking Item of Each Function System	14-1
14.1.7 Others	14-2
14.2 Test Print	14-2
14.2.1 Overview	14-2
14.2.2 Test Print TYPE	14-2
14.2.3 Selecting the Test Print TYPE	14-3
14.2.4 16-Gradation (TYPE=4)	14-3
14.2.5 Full Area Half Tone (TYPE=5)	14-3
14.2.6 Grid (TYPE=6)	14-4
14.2.7 MCYBk Horizontal Line (TYPE=10)	14-4
14.2.8 64-Gradation (TYPE=12)	14-5
14.2.9 Full Color 16-gradation (TYPE=14)	14-5
14.3 Troubleshooting	14-6
14.3.1 Image Faults	14-6
14.3.1.1 Light Image / Weak Density	14-6
14.3.1.1.1 When printing on CLC extra heavy paper (209g), light image occurs at solid black areas of output image	14-6
14.3.1.1.2 Uneven density/light image: Developing high-voltage cable has poor contact	14-6
14.3.1.2 Uneven Density	14-7
14.3.1.2.1 When copying thin gray lines in Text/Printed Img. mode, moire-like image appears	14-7
14.3.1.2.2 Uneven density (uneven gross) occurs when copying/printing high-density image with thick coated paper in use	14-7
14.3.1.2.3 Uneven density appears at 4mm intervals in main scanning direction	14-7
14.3.1.3 Image Displacement/Out of Focus	14-8
14.3.1.3.1 Smearred image/hue variation (variation of drum potential) occurs in humidity environment	14-8
14.3.1.3.2 Yellow displaced at trail edge of image upon installation: Screw on ITB connecting shaft is loosened	14-8
14.3.1.3.3 When duplex printing, position of image on both 1st and 2nd sides is displaced in sub scanning direction	14-9
14.3.1.4 Partially Blank/Streaked	14-9
14.3.1.4.1 Void occurs in main scanning direction on halftone area/oval-shaped patterns/E060-0000: J423 connector (11-pin CT connector) on main body side of pre-conditioning unit has poor contact	14-9
14.3.1.4.2 Void occurs in sub scanning direction upon installation: ATR shutter solenoid cable comes into contact with developing cylinder. 14-10	14-10
14.3.1.4.3 Measure against scratches made on Fixing Roller in circumferential direction: Lines appear in sub scanning direction	14-11
14.3.1.4.4 Lines (smearred image): Mylar comes off post duct in P-kit assembly	14-12
14.3.1.4.5 In low temperature environment, void occurs at border between halftone area and solid image area	14-13
14.3.1.4.6 Fingerprint	14-13
14.3.1.5 Smudged/Streaked	14-14
14.3.1.5.1 Yellow vertical stripes on copy images/blank image on PG test chart printouts: PF-A board is faulty	14-14
14.3.1.5.2 Soiled back: Transfer roller B3 in Secondary transfer mount assembly is soiled	14-14
14.3.1.5.3 Soiled back (patch mark) appears: HV8 PCB is faulty	14-14
14.3.1.5.4 Soiled back: A failure in cleaning the secondary transfer roller is caused	14-15
14.3.1.5.5 Dark spots appear on output image	14-15
14.3.1.5.6 The poor picture by the attachment mistake of seal support plate (front, rear)	14-15
14.3.1.6 Ghost / Memory	14-17
14.3.1.6.1 Fixing Gloss Ghost	14-17
14.3.1.7 Faulty Color Reproduction	14-18
14.3.1.7.1 At scanner reading upon installation, faulty image occurs: S-B Board PCB has poor contact	14-18
14.3.1.7.2 Hue variation occurs: OFST value (target value) for PASCAL is changed	14-19
14.3.1.7.3 Faulty gradation occurs with machine equipped with DADF-R1 after auto gradation adjustment (full adjustment)	14-19