

iR1600/iR2000/ iR1610/iR2010 SERIES SERVICE MANUAL

REVISION 0

Canon

MAR. 2002

FY8-13HS-000

Sample manual. Download All pages at:

<https://www.arepairmanual.com/downloads/2002-canon-ir1600ir2000ir1610ir2010-printer-service-repair-workshop-manual/>
COPYRIGHT© 2002 CANON INC. CANON iR1600/iR2000/iR1610/iR2010 SERIES REV.0 MAR. 2002 PRINTED IN JAPAN (IMPRIME AU JAPON)

Application

This manual has been issued by Canon Inc. for qualified persons to learn technical theory, installation, maintenance, and repair of products. This manual covers all localities where the products are sold. For this reason, there may be information in this manual that does not apply to your locality.

Corrections

This manual may contain technical inaccuracies or typographical errors due to improvements or changes in products. When changes occur in applicable products or in the contents of this manual, Canon will release technical information as the need arises. In the event of major changes in the contents of this manual over a long or short period, Canon will issue a new edition of this manual.

The following paragraph does not apply to any countries where such provisions are inconsistent with local law.

Trademarks

The product names and company names used in this manual are the registered trademarks of the individual companies.

Copyright

This manual is copyrighted with all rights reserved. Under the copyright laws, this manual may not be copied, reproduced or translated into another language, in whole or in part, without the written consent of Canon Inc.

COPYRIGHT © 2002 CANON INC.

Printed in Japan

Imprimé au Japon








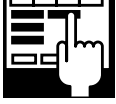 


Caution

Use of this manual should be strictly supervised to avoid disclosure of confidential information.

Sample manual. Download All pages at:

1 Symbols Used

This documentation uses the following symbols to indicate special information:

Symbol	Description
	Indicates an item of a non-specific nature, possibly classified as Note, Caution, or Warning.
	Indicates an item requiring care to avoid electric shocks.
	Indicates an item requiring care to avoid combustion (fire).
	Indicates an item prohibiting disassembly to avoid electric shocks or problems.
	Indicates an item requiring disconnection of the power plug from the electric outlet.
 Memo	Indicates an item intended to provide notes assisting the understanding of the topic in question.
 REF.	Indicates an item of reference assisting the understanding of the topic in question.
	Provides a description of a service mode.
	Provides a description of the nature of an error indication.
	Refers to the Copier Basics Series for a better understanding of the contents.

2 Outline of the Manual

This Service Manual provides basic facts and figures needed to service the iR1600/iR2000. Of the machine's accessories, this manual covers the cassette unit and inner 2-way tray; for other accessories including the ADF, see its own Service Manual.

In this manual, the 1-Cassette Unit-F1, 2-Cassette Unit-G1 and 3-Cassette Unit-H1 are collectively called "cassette unit," and the Inner 2-Way Tray-B1 is referred to as the inner 2-way tray.

This Service Manual consists of the following chapters:



Chapter 1 Introduction:	features, specifications, operation, system construction, routine maintenance by the user, safety, reproduction processes
Chapter 2 Basic Operation:	basic operation, outline of electrical circuitry, basic sequence
Chapter 3 Image Reading/ Processing System:	principles of operation of the exposure system, principles of operation of the image processing system, timing of operation; disassembly/assembly and adjustment
Chapter 4 Laser Exposure System:	principles of operation of the image formation system, timing of operation; disassembly/assembly
Chapter 5 Image formation system:	standards, adjustments, troubleshooting tables
Chapter 6 Pickup/Feeding System:	principles of operation of the pickup/feeding system, timing of operation; disassembly/assembly and adjustment
Chapter 7 Fixing System:	principles of operation of the fixing system, timing of operation; disassembly/assembly and adjustment
Chapter 8 Externals and Auxiliary Control System:	principles of operation of the externals/auxiliary control system, timing of operation; disassembly/assembly and adjustment
Chapter 9 Cassette Unit:	principles of operation of the pickup system; disassembly/assembly and adjustments
Chapter 10 Inner 2-Way Tray:	principles of operation; disassembly/assembly and adjustment
Chapter 11 Installation:	site requirements and installation procedure
Chapter 12 Maintenance and Inspection:	table of periodically replaced parts, table of durables, scheduled servicing chart
Chapter 13 Troubleshooting:	maintenance and inspection, standards/adjustment, troubleshooting image faults/malfunctions; service mode, self diagnosis
Chapter 14 Version up:	version up
Appendix:	general timing chart, general circuit diagram

The descriptions are subject to change for product improvement, and major changes will be communicated in the form of Service Information bulletins.

All service persons are expected to go through the contents of this Service Manual and Service Information bulletins and have a good understanding of the machine, readying themselves to promptly respond to the needs of the field (i.e., identifying and correcting faults).

The descriptions in this Service Manual are based on the following rules:

1. In each chapter, the uses of the function in question and its relationship to electrical and mechanical systems are discussed and the timing of operation of its associated parts is explained by means of outlines and diagrams.

In the diagrams, the symbol  represents a mechanical path, while the symbol  with a name next to it indicates the flow of an electric signal.

The expression ‘turn on the power’ means turning on the power switch, closing the front door, and closing the delivery door so that the machine will be supplied with power.

2. In circuit diagrams (digital), a signal whose level is High is expressed as being ‘1’, while a signal whose level is Low is expressed as being ‘0’; the level of voltage, however, varies from circuit to circuit.

The machine uses CPUs, whose internal mechanisms cannot be checked in the field, and, therefore, are not explained. In addition, the machine’s PCBs are not intended for repairs at the user’s and, therefore, are explained by means of block diagrams: two types are used, i.e., between sensors and inputs of PCBs equipped with a control or drive function and between outputs equipped with a control or drive function and loads; in addition, functional block diagrams are used at times.

Changes made to the machine for product improvement are communicated in the form of a Service Information bulletin as needed. All service persons are expected to go through all service documentation including the bulletins and be equipped to respond to the needs of the field (as by being able to identify possible causes of problems).

This service manual covers the models shown in the following table. Be sure to have a good understanding of the difference from model to model before referring to this manual.


Model	ADF function	Fax function	Printer function	Cassette Type	Copying speed (cpm) at Direct
iR1600		*1		1-cassette	16cpm/LTR
iR2000		*1		2-cassette	20cpm/LTR
iR1610F	√	√		1-cassette	16cpm/LTR
iR2010F	√	√		2-cassette	20cpm/LTR

The notation “√” indicates that the item in question is available.

*1 : Fax function not supported.

System Configuration

 
1. The machine may be configured as follows with its accessories (except the printer/fax device):

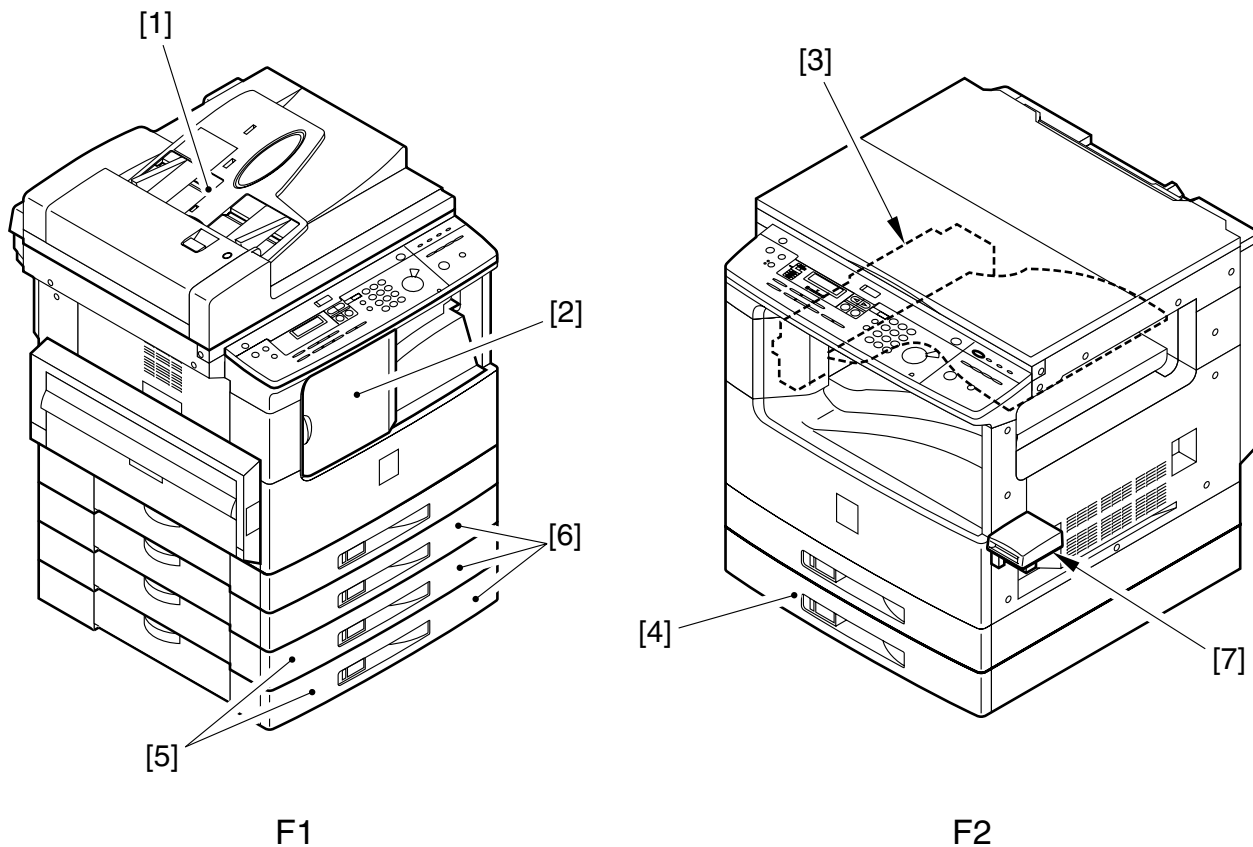

- [1] ADF-J1 (iR1600/iR2000 only)
- [2] Finisher-L1 (if PDL output, requires hard disk.)
- [3] Inner 2-Way Tray-B1
- [4] 1-Cassette Unit-F1 (16cpm model only)
- [5] 2-Cassette Unit-G1 (20cpm model only)
- [6] 3-Cassette Unit-H1 (16cpm model only)
- [7] Card Reader-E1

2. The machine may be configured with the following accessory boards:

 
- Printer accessories

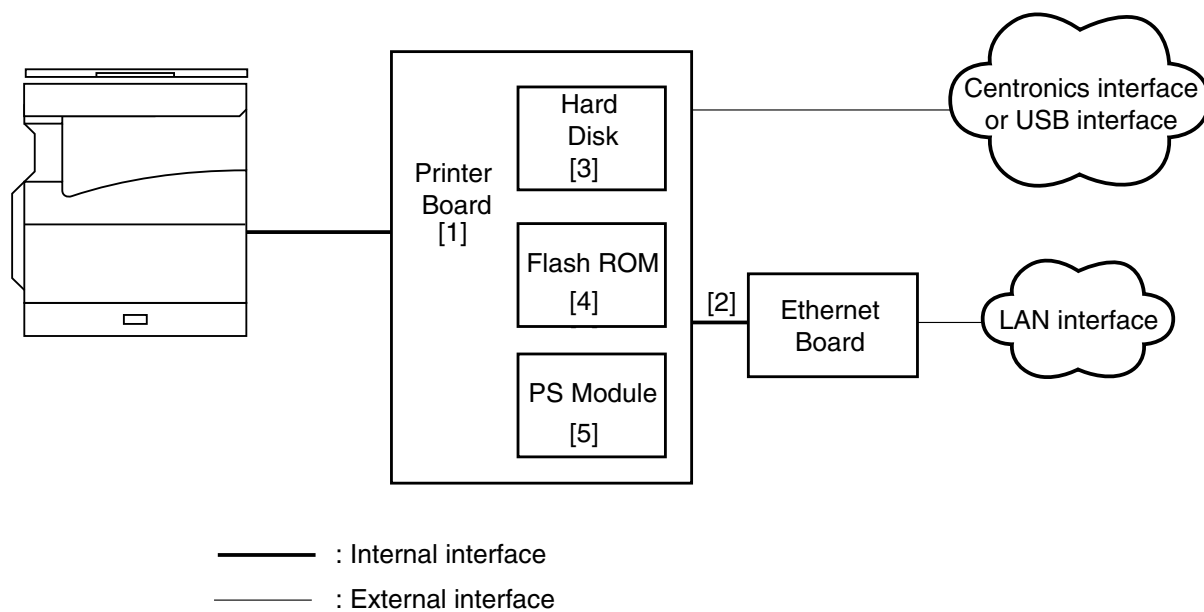

F3

- [1] Printer Board-N1
- [2] Ethernet Network Interface Adapter iN-E5
- [3] Hard Disk HD-65
- [4] Flash ROM Module FR-65
- [5] PS Module-B1

 - Fax accessories (iR1610F/iR2010F only)

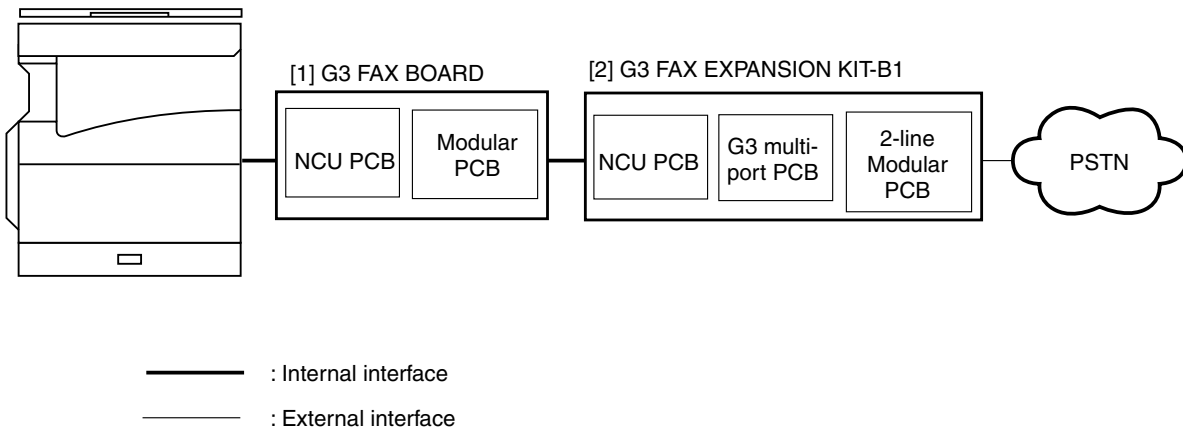

F4

[1] G3 FAX BOARD*¹

[2] G3 FAX EXPANSION KIT-B1*²

 
*1 : Standard (iR1610F/iR2010F)

*2 : iR1610F/iR2010F 120V only

<Points to Note When Turning Off the Power Switch>

Be sure to turn off the power switch and disconnect the power plug before starting dis-assembly/assembly work; further, keep the following in mind:

1. If you turn off the main power switch while a printer function is in use, the data being processed can be lost. Check to be sure that the online indicator in the control panel is OFF before operating the power switch.
2. Do not turn off the power switch while downloading is taking place; otherwise, the machine may fail to operate.
3. Remember that not all power will be removed in response to the opening of the front cover as long as the power switch remains ON.
4. Be sure to use SHUT DOWN MENU to shut down the printer if the Hard Disk HD-65 (accessory) has been installed.

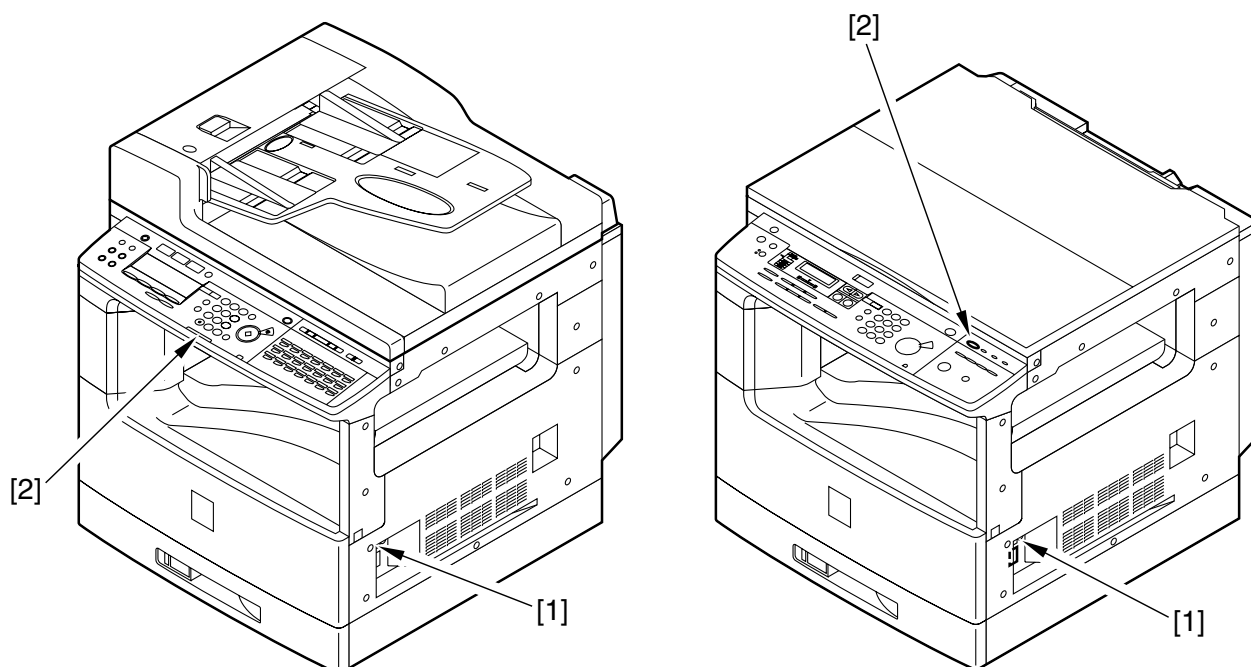

F5

- [1] Power switch
- [2] Online indicator

Contents

CHAPTER 1 INTRODUCTION

1 Features	1-1	4.2.2 Basic Operation for a Fax Model	1-26
1.1 Features	1-1	4.3 Extended Operation	1-27
2 Specifications	1-3	4.3.1 Extended Operation for a Non-Fax Model	1-27
2.1 Copier	1-3	4.3.2 Extended Operation for a Fax Model	1-27
2.1.1 Type	1-3	4.4 User Mode	1-28
2.1.2 System	1-3	4.4.1 User Mode for a Non-Fax Model	1-28
2.1.3 Functions	1-4	4.4.2 User Mode for a Fax Model	1-36
2.1.4 Others	1-6	5 Cleaning by the User	1-59
2.2 Cassette Unit	1-8	5.1 Cleaning by the User	1-59
2.3 Inner 2-Way Tray	1-9	5.1.1 Cleaning the Fixing Roller	1-59
3 Names of Parts	1-10	5.1.2 Cleaning the Copyboard Glass, Reading Glass, and Copyboard Cover White Plate	1-61
3.1 External View	1-10	5.1.3 Cleaning the ADF Roller/ Guide Assembly	1-62
3.1.1 Copier	1-10	6 Safety and Warnings	1-64
3.1.2 Cassette Unit	1-12	6.1 Safety of Laser Light	1-64
3.1.3 Inner 2-Way Tray	1-13	6.2 CDRH Requirements	1-64
3.2 Cross Section	1-14	6.3 Handling the Laser Unit	1-65
3.2.1 Copier	1-14	6.4 Safety of the Toner	1-66
3.2.2 Cassette Unit	1-16	7 Reproduction Processes	1-67
3.2.3 Inner 2-Way Tray	1-17	7.1 Outline	1-67
4 Control Panel	1-18		
4.1 Control Panel	1-18		
4.1.1 Control Panel for a Non-Fax Model	1-18		
4.1.2 Control Panel for a Fax Model	1-21		
4.1.3 Master Password	1-25		
4.2 Basic Operation	1-26		
4.2.1 Basic Operation for a Non-Fax Model	1-26		

CHAPTER 2 BASIC OPERATION

1 Basic Operation	2-1	1.2.4 Analog Processor PCB	2-5
1.1 Functional Construction	2-1	1.3 Inputs to and Outputs from Electrical Components	2-6
1.2 Outline of Electrical Circuitry ..	2-2	1.3.1 Wiring Diagram of the Major PCBs	2-6
1.2.1 Image Processor PCB	2-2		
1.2.2 DC Controller PCB	2-3		
1.2.3 Power Supply PCB	2-5		

1.3.2	Wiring Diagram of the Electrical Components (1/2)	2-7	1.4.3	Basic Sequence of Operation (printing)	2-11
1.3.3	Wiring Diagram of Electrical Components (2/2).....	2-8	1.5	Controlling the Main Motor (M101)	2-13
1.4	Basic Sequence of Operation	2-9	1.5.1	Outline	2-13
1.4.1	Outline	2-9			
1.4.2	Basic Sequence of Operation (power-on)	2-10			

CHAPTER 3 IMAGE READING/PROCESSING SYSTEM

1	Outline of Operation	3-1	4.7	LED Intensity Adjustment	3-14
1.1	Outline	3-1	4.8	Enlargement/Reduction	3-14
2	Reader Drive System	3-2	4.8.1	Enlargement/Reduction in Main Scanning Direction ..	3-14
2.1	Outline	3-2	4.8.2	Changing the Reproduction Ratio in Sub Scanning Direction	3-16
2.2	Controlling the Reader Motor ...	3-3	4.9	Edge Emphasis	3-17
2.2.1	Moving the Carriage in Reverse After an Image Scan	3-3	4.10	Editing	3-17
3	Detecting the Size of Originals	3-4	4.11	Density Conversion (LUT, i.e., look-up table processing)	3-17
3.1	Outline	3-4	4.11.1	Density Adjustment (F-value conversion)	3-17
3.2	Detection by the Original Size Sensors	3-4	4.11.2	Density Correction (γ correction)	3-17
3.3	Detecting the Size of Originals	3-6	4.12	Binary Processing	3-18
3.4	Detection by the ADF	3-7	4.12.1	Error Diffusion	3-18
4	Image Processing	3-8	4.13	Image Memory Control	3-18
4.1	Outline	3-8	4.13.1	Compression/Expansion, Rotation, and Enlargement/Reduction	3-18
4.2	Contact Sensor	3-9	4.13.2	SDRAM	3-18
4.2.1	Outline of the Contact Sensor	3-9	4.14	Output Image Processing	3-19
4.2.2	Construction of the Contact Sensor (CS)	3-10	4.14.1	Smoothing	3-19
4.3	A/D Conversion	3-11	5	Disassembly and Assembly	3-20
4.4	Shading Correction	3-11	5.1	Copyboard Glass	3-21
4.4.1	Black Shading Correction	3-12	5.1.1	Removing the Copyboard Glass	3-21
4.4.2	White Shading Correction	3-12	5.1.2	After Replacing the Copyboard Glass	3-22
4.5	Re-Ordering	3-12			
4.6	ABC (auto background control)	3-13			

5.2 CS Unit 3-23	5.2.4 Points to Note When Handling the CS Unit 3-29
5.2.1 Removing the CS Unit 3-23	
5.2.2 Points to Note When Mounting the CS Unit 3-26	5.3 Reader Motor 3-30
5.2.3 After Replacing the CS Unit 3-28	5.3.1 Removing the Reader Motor 3-30
	5.3.2 Points to Note When Mounting the Reader Motor 3-31

CHAPTER 4 LASER EXPOSURE SYSTEM

1 Outline of Operation 4-1	4 Controlling the Scanner Motor 4-8
1.1 Outline 4-1	4.1 Outline 4-8
1.2 Basic Sequence of Operation (laser exposure system) 4-3	4.2 Controlling the Scanner Motor 4-8
2 Generating the Horizontal Signal 4-4	4.3 Scanner Pre-Rotation 4-9
2.1 Outline 4-4	5 Disassembly and Assembly 4-10
2.2 Signals Used 4-4	5.1 Removing the Laser/ Scanner Unit 4-11
3 Laser Driver Circuit 4-6	
3.1 Laser Control 4-6	

CHAPTER 5 IMAGE FORMATION SYSTEM

1 Outline of Processes 5-1	3.3 Controlling the Bias to a Constant Voltage Level 5-7
1.1 Sequence of Operation (image formation system) 5-3	3.3.1 Controlling the Developing DC Bias to a Constant Level 5-7
2 Controlling the Primary Charging Roller Bias 5-4	3.3.2 Controlling the Developing AC Bias to a Constant Voltage Level 5-7
2.1 Outline 5-4	3.4 Controlling the Voltage Level of the Developing DC Bias 5-7
2.2 Turning On and Off the Bias 5-5	4 Controlling the Transfer Charging Roller Bias 5-8
2.2.1 DC Bias 5-5	4.1 Outline 5-8
2.2.2 AC Bias 5-5	4.2 Turning On and Off the Bias 5-9
2.3 Bias Constant Voltage/ Constant Current Control 5-5	4.2.1 Turning On and Off the Positive DC Bias 5-9
2.3.1 DC Bias Constant Voltage Control 5-5	4.2.2 Turning On and Off the Negative DC Bias 5-9
2.3.2 AC Bias Constant Current Control 5-5	4.3 Controlling the Bias to a Constant Current /Voltage Level 5-9
3 Controlling the Developing Bias 5-6	
3.1 Outline 5-6	
3.2 Turning On/Off the Bias 5-7	
3.2.1 DC Bias 5-7	
3.2.2 AC Bias 5-7	

4.3.1	Controlling the DC Bias to a Constant Current Level	5-9	6	Monitoring the Waste Toner Case ...	5-14
4.3.2	Controlling the DC Bias to a Constant Level	5-9	6.1	Outline	5-14
4.4	Correcting the Voltage Level (ATVC control).....	5-10	6.2	Sequence of Operation	5-15
4.5	Controlling the Output According to Operation Mode	5-10	7	Disassembly and Assembly	5-16
4.5.1	Type of Mode	5-10	7.1	Photosensitive Drum	5-17
5	Detecting the Presence/Absence of a Cartridge and the Level of Toner	5-11	7.1.1	Removing the Drum Unit	5-17
5.1	Outline	5-11	7.1.2	Cleaning the Photosensitive Drum	5-17
5.2	Sequence of Detection (level of toner)	5-12	7.2	Developing Assembly	5-18
			7.2.1	Removing the Developing Assembly	5-18
			7.3	Transfer Roller	5-20
			7.3.1	Removing the Transfer Roller	5-20

CHAPTER 6 PICKUP/FEEDING SYSTEM

1	Outline	6-1	3.1	Detecting the Leading Edge of Paper	6-12
1.1	Specifications and Constructions	6-1	4	Detecting Jams	6-13
1.2	Arrangement of Major Rollers and Sensors	6-2	4.1	Outline	6-13
2	Controlling the Pickup Assembly	6-3	4.2	Sequence of Jam Detection	6-14
2.1	Controlling the Pickup from the Cassette	6-3	4.2.1	Delay Jam	6-14
2.1.1	Outline	6-3	4.2.2	Stationary Jams	6-16
2.1.2	Pickup from the Cassette ...	6-4	4.2.3	Cover Open Jam	6-17
2.1.3	Pickup Retry	6-6	4.2.4	Jam History	6-17
2.1.4	Detecting the Size of Paper in the Cassette	6-7	5	Disassembly and Assembly	6-18
2.2	Controlling the Pickup from the Multifeder Tray	6-8	5.1	Cassette Pickup Assembly	6-19
2.2.1	Outline	6-8	5.1.1	Remove the Cassette Pickup Assembly	6-19
2.2.2	Pickup from the Multifeder Tray	6-9	5.1.2	Removing the Cassette Pickup Roller	6-21
2.2.3	Multifeder Retry Operation	6-11	5.1.3	Removing the Feeding/ Separation Roller	6-22
2.2.4	Setting the Paper Size for the Multifeder Tray (user mode)	6-11	5.1.4	Removing the Cassette Pickup Solenoid	6-22
3	Controlling the Registration Roller	6-12	5.1.5	Removing the Paper Size Detecting Switch	6-22
			5.1.6	Removing the Cassette Paper Sensor	6-23
			5.1.7	Removing the Retry Sensor	6-23

5.1.8	Removing the Pickup Motor (20 cpm model only)	6-23	5.3	Drive Assembly	6-27
5.2	Multifeeder Tray Assembly	6-24	5.3.1	Removing the Drive Assembly	6-27
5.2.1	Removing the Multifeeder Tray	6-24	5.4	Registration Roller Assembly	6-31
5.2.2	Removing the Multifeeder Pickup Roller	6-25	5.4.1	Removing the Registration Roller	6-31
5.2.3	Removing the Separation Pad	6-26	5.4.2	Removing the Registration Paper Sensor	6-32
5.2.4	Removing the Multifeeder Paper Sensor	6-26	5.4.3	Removing the Registration Clutch	6-33
5.2.5	Removing the Multifeeder Pickup Solenoid	6-27			

CHAPTER 7 FIXING SYSTEM

1	Outline of Operation	7-1	2.3.3	Conditions for Error Detection	7-8
1.1	Outline	7-1	2.4	Protective Mechanism	7-10
2	Controlling the Fixing Temperature ..	7-3	3	Disassembly and Assembly	7-11
2.1	Outline	7-3	3.1	Removing the Fixing Assembly	7-12
2.2	Controlling the Temperature	7-4	3.2	Cleaning the Inside of the Fixing Assembly or Replacing Its Parts	7-15
2.2.1	Control at Time of Power-On	7-5	3.3	Removing the Delivery Sensor	7-15
2.2.2	Control According to the Type of Paper	7-6	3.4	Removing the Pressure Roller	7-16
2.2.3	Control at Time of Down Sequence	7-6	3.5	Removing the Fixing Roller/ Fixing Heater/Separation Claw	7-22
2.2.4	Control in ESS (energy save mode)	7-7	3.6	Mounting the Fixing Roller/ Fixing Heater/Separation Claw	7-24
2.3	Detecting an Error	7-8			
2.3.1	Outline	7-8			
2.3.2	Control in Response to an Error	7-8			

CHAPTER 8 EXTERNALS AND AUXILIARY CONTROL SYSTEM

1	Control Panel	8-1	2.1	Power Supply	8-2
1.1	The machine's control panel has the following construction	8-1	2.1.1	Outline	8-2
2	Power supply	8-2	2.1.2	Rated Outputs from the Power Supply PCB	8-4

2.2	Protective Mechanisms	8-5	6.3	Main Motor	8-24
2.3	High-Voltage Power Supply Circuit	8-5	6.3.1	Removing the Main Motor	8-24
3	Control at Time of Energy Save Mode	8-6	6.4	Fan	8-25
3.1	Outline	8-6	6.4.1	Removing the Heat Discharge fan	8-25
3.2	Control	8-6	6.5	PCBs	8-26
3.3	Operation	8-8	6.5.1	Removing the DC Controller PCB	8-26
4	Fan	8-9	6.5.2	After Replacing the DC controller PCB	8-26
4.1	Outline	8-9	6.5.3	Removing the Image Processor PCB	8-27
4.2	Control	8-10	6.5.4	When Replacing the Image Processor PCB	8-27
4.2.1	Controlling the Speed	8-10	6.5.5	Removing the RAM DIMM	8-27
4.2.2	Error Detection	8-11	6.5.6	Removing the ROM DIMM	8-28
4.2.3	Sequence of Operation (fan drive)	8-11	6.5.7	Removing the Analog Processor PCB	8-28
5	Back-Up Battery	8-12	6.5.8	After Replacing the Analog Processor PCB	8-31
5.1	Back-Up Mechanism	8-12	6.5.9	Removing the Power Supply PCB	8-31
5.1.1	Outline	8-12	6.5.10	Removing the Original Detec- tion/Reader Motor PCB ...	8-32
5.1.2	Vanadium Lithium Secondary Battery (BAT2)	8-12	6.5.11	Removing the Printer Board Unit (if equipped with printer functions)	8-32
5.1.3	Lithium Battery (BAT1) ...	8-13	6.5.12	Removing the Cassette controller PCB (20 cpm model only)	8-32
5.2	Back-Up Data	8-16			
5.2.1	Types of Data	8-16			
5.2.2	Printing Out the Back-Up Data List	8-18			
6	Disassembly and Assembly	8-19			
6.1	External Covers	8-20			
6.1.1	Removing the Front Cover	8-22			
6.1.2	Removing the Control Panel Lower Cover	8-22			
6.2	Control Panel	8-23			
6.2.1	Removing the Control Panel	8-23			

CHAPTER 9 CASSETTE UNIT

1	Outline	9-1	2	Pickup Assembly	9-4
1.1	Outline	9-1	2.1	Pickup Control System	9-4
1.2	Specifications and Construction	9-1	2.2	Pickup Control	9-7
1.3	Arrangement of Major Rollers and Sensors	9-2	2.3	Cassette Pickup Operation	9-7
			2.4	Pickup Re-Try Operation	9-7
			2.5	Cassette Paper Size Detection ..	9-7

3	Detecting Jams	9-8	4.2.3	Removing the Cassette Pickup Solenoid	9-12
3.1	Outline	9-8	4.2.4	Removing the Paper Size Switch	9-12
3.2	Sequence of Jam Detection	9-8	4.2.5	Removing the Cassette Paper Sensor	9-12
3.2.1	Delay Jam	9-8	4.2.6	Removing the Re-Try Sensor	9-12
3.2.2	Stationary Jam	9-8	4.3	PCBs	9-13
3.2.3	Jam History	9-8	4.3.1	Removing the Cassette Unit Controller PCB	9-13
4	Disassembly and Assembly	9-9	4.4	Drive-Related Parts	9-13
4.1	Removing the Cassette Unit ..	9-10	4.4.1	Removing the Pickup Motor	9-13
4.2	Cassette Pickup Assembly	9-12			
4.2.1	Removing the Cassette Pickup Assembly	9-12			
4.2.2	Removing the Cassette Pickup Roller	9-12			

CHAPTER 10 INNER 2-WAY TRAY

1	Specifications	10-1	3	Detecting Jams	10-4
1.1	System	10-1	3.1	Outline	10-4
1.2	Arrangement of Rollers and Sensors	10-2	3.2	Sequence of Jam Detection	10-4
2	Controlling Delivery Operation	10-3	3.2.1	Delay Jam	10-4
2.1	Controlling Delivery Operation	10-3	3.2.2	Stationary Jam	10-4
2.2	Selecting a Delivery Slot (user mode)	10-3	3.2.3	Jam History	10-4
			4	Disassembly and Assembly	10-5
			4.1	Removing the Inner 2-Way Unit	10-6

CHAPTER 11 INSTALLATION

1	Selecting the Site of Installation	11-1	2.7	Putting Paper in the Cassette	11-14
2	Unpacking and Installing the Machine	11-3	2.8	Placing Paper in the Multifeder Tray	11-18
2.1	Points to Note Before Starting the Work	11-3	2.9	Checking the Copy Images ..	11-20
2.2	Installing the Machine	11-4	2.10	Selecting the Country/Region through Service Operation ..	11-21
2.3	Unpacking and Removing the Fixing Members	11-5	2.11	Setting the Date/Time (user mode)	11-22
2.4	Removing the Dummy Drum ..	11-7	2.12	Storing the Specifications Report	11-23
2.5	Mounting the Drum Unit	11-9			
2.6	Mounting the Toner Cartridge	11-11			

2.13 Setting the Fax Functions (if equipped with fax functions)	11-24	5.2 Installation	11-29
2.13.1 Connecting the Line	11-24	5.3 Setting and Checking After Installation	11-33
2.13.2 Setting the Dialing Method	11-24	6 Installing the Image RAM (accessory)	11-34
2.13.3 Communications Test	11-24	6.1 Non-Fax Model	11-34
2.14 Checking the Printer Functions (if equipped with printer functions)	11-25	6.1.1 Installation	11-34
3 Relocating the Machine	11-26	6.2 FAX Model	11-36
4 Flow of accessory installation	11-27	6.2.1 Before Starting the Work	11-36
(if equipped with a fax function)	11-27	6.2.2 Mounting the RAM	11-36
5 Installing the Card Reader-E1 (accessory)	11-28	7 Installing the Remote Diagnostic Device II (accessory)	11-39
5.1 Points to Note for Installation	11-28	7.1 Parts to Procure	11-39
		7.2 Unpacking	11-39
		7.3 Installation to the Copier	11-40

CHAPTER 12 MAINTENANCE AND INSPECTION

1 Periodically Replaced Parts	12-1	3.1 Basic Service Work	12-3
1.1 Copier	12-1	4 Cleaning During a Visit	12-4
1.2 Cassette Unit	12-1	5 Points to Note When Storing/Handling the Drum Unit	12-7
1.3 Inner 2-Way Tray	12-1	5.1 Outline	12-7
2 Guide to Durables	12-2	5.2 Storage and Handling After Remov- ing the Packaging Seal	12-7
2.1 Checking the Timing of Replacement	12-2	5.2.1 Storage After Removing the Packaging Seal	12-7
2.2 Copier	12-2	5.2.2 Points to Note When Handling the Drum Unit	12-8
2.3 Cassette Unit	12-2		
2.4 Inner 2-Way Tray	12-2		
3 Basic Service Work	12-3		

CHAPTER 13 TROUBLESHOOTING

1 Image Adjustment Basic Procedure	13-1	2.1.2 Adjusting the Image Position	13-4
1.1 Image Adjustment Basic Procedure	13-1	2.1.3 Adjusting the Leading Edge Margin for the Printer Unit (if equipped printer functions)	13-5
2 Standards and Adjustments	13-3	2.1.4 Adjusting the Image Position for Copying	13-7
2.1 Image Adjustments	13-3		
2.1.1 Standards for Image Position	13-3		

2.1.5	Adjusting the Image Position for ADF Copying	13-9	3.3.4	The copy has uneven density. (darker along front)	13-26
2.2	Fixing System	13-11	3.3.5	The copy has uneven density. (lighter along front)	13-26
2.2.1	Checking the Fixing Roller Pressure (nip)	13-11	3.3.6	The copy is foggy. (entire copy)	13-27
2.3	Electrical Parts	13-12	3.3.7	The copy is foggy. (feeding direction)	13-28
2.3.1	When Replacing the Major Parts	13-12	3.3.8	The copy has black lines. (feeding direction, fuzzy, thick)	13-28
2.3.2	Gain Auto Adjustment ...	13-12	3.3.9	The copy has black lines. (feed- ing direction, fine)	13-28
2.3.3	When Replacing the Contact Sensor	13-12	3.3.10	The copy has white strips. (feeding direction)	13-29
2.3.4	When Replacing the Image Processor PCB	13-13	3.3.11	The copy has white lines. (feeding direction)	13-29
2.3.5	When Replacing the DC Controller PCB	13-15	3.3.12	The output has white strips. (cross-feeding direction) .	13-30
2.3.6	When Replacing the Analog Processor PCB ...	13-15	3.3.13	The back of the copy is soiled	13-31
2.4	Checking the Sensors	13-16	3.3.14	The copy has a poor fixing	13-32
2.4.1	Checking the Sensors	13-16	3.3.15	The copy has displaced registra- tion. (leading edge extremely excessive margin)	13-33
3	Troubleshooting Image/ Operation Faults	13-19	3.3.16	The copy has displaced registra- tion. (leading edge, excessive margin)	13-33
3.1	Making Initial Checks on Image Faults	13-19	3.3.17	The copy has displaced regis- tration. (leading edge, no margin)	13-33
3.1.1	Site of Installation	13-19	3.3.18	The copy has blurred images	13-34
3.1.2	Checking the Originals ...	13-19	3.3.19	The copy is foggy. (cross-feeding direction) .	13-35
3.1.3	Copyboard Cover and Copyboard Glass (standard white plate)	13-19	3.3.20	The copy has poor sharpness.	13-36
3.1.4	Checking the Transfer Charging Roller/ Static Eliminator	13-20	3.3.21	The copy is blank.	13-37
3.1.5	Checking the Drum Unit ..	13-20	3.3.22	The copy is solid black.	13-38
3.1.6	Checking the Paper	13-20	3.3.23	The copy has a black line (stream reading).	13-39
3.1.7	Image Adjustment Basic Procedure	13-20	3.4	Troubleshooting Malfunctions	13-40
3.1.8	Others	13-20	3.4.1	AC power is absent.	13-40
3.2	Image Fault Samples	13-22			
3.3	Troubleshooting Image Faults	13-23			
3.3.1	The copy is too light. (halftone only)	13-23			
3.3.2	The copy is too light. (both half- tone and solid black)	13-23			
3.3.3	The copy is too light. (entire copy, appreciably)	13-23			

3.4.2	DC power is absent.	13-41	4	Arrangement and Functions of Electrical Parts	13-57
3.4.3	Pickup operation fails. (cassette)	13-42	4.1	Outline	13-57
3.4.4	Pickup operation fails. (multifeeder tray)	13-43	4.1.1	Outline	13-57
3.4.5	Pickup operation fails. (cassette unit)	13-44	4.1.2	Checking the Sensors	13-57
3.4.6	The vertical path roller fails to rotate.	13-45	4.2	Clutches, Solenoids, Motors, and Fans	13-58
3.4.7	The registration roller fails to rotate.	13-45	4.3	Sensors	13-59
3.4.8	The contact sensor fails to go ON.	13-46	4.4	PCBs	13-60
3.4.9	The speaker fails to operate.	13-46	4.5	Switches, Others	13-62
3.4.10	The 'Add Toner' message fails to go OFF.	13-47	4.6	Cassette Unit	13-64
3.4.11	The 'Add Paper' message fails to go OFF. (machine and cassette unit)	13-48	4.7	Inner 2-Way Tray	13-66
3.4.12	The 'Add Paper' message fails to go OFF. (multifeeder tray)	13-49	4.8	Variable Resistors (VR), Light-Emitting Diodes (LED), and Check Pins	13-67
3.4.13	The 'Jam' message fails to go OFF.	13-49	4.8.1	Image Processor PCB	13-68
3.4.14	The 'Waste Toner Full' message does not go OFF.	13-50	4.8.2	DC Controller PCB	13-69
3.4.15	The 'Controller Card Set' mes- sage does not go ON.	13-50	4.8.3	Power Supply PCB	13-70
3.4.16	The 'Control Card Set' mes- sage does not go OFF.	13-50	4.8.4	Analog Processor PCB	13-71
3.5	Troubleshooting Feeding		4.8.5	1-Cassette Unit Controller PCB	13-72
	Faults	13-51	4.8.6	2/3-Cassette Unit Controller PCB	13-72
3.5.1	Outline	13-51	5	Service Mode	13-73
3.5.2	Pickup Assembly	13-52	5.1	Outline	13-73
3.5.3	Transfer/ Feeding Assembly	13-53	5.2	Using the Mode	13-75
3.5.4	Fixing/ Delivery Assembly	13-54	5.3	Service Mode Menus	13-76
3.5.5	Feeding Fault (double feeding)	13-55	5.4	Setting the parameters	13-84
3.5.6	Feeding Faults (wrinkling)	13-56	5.4.1	Registering the Bit Switch (#1 SSSW)	13-84
			5.4.2	Menu Switch Setting (#2 MENU)	13-111
			5.4.3	Setting Numeric Parameters (#3 NUMERIC Param.) .	13-113
			5.4.4	SPECIAL Setting (#4A SPECIAL)	13-120
			5.4.5	NCU Setting (#4B NCU)	13-120
			5.4.6	ISDN Setting (#4C ISDN)	13-120
			5.4.7	Selecting the Country/ Region of Installation (#5 TYPE)	13-121

5.4.8	Setting Original Read Functions (#6 SCANNER)	13-121	5.5.6	MODEM NCU Test (4: MODEM NCU)	13-147
5.4.9	Setting the Printer Parameters (#7 PRINTER)	13-126	5.5.7	Faculty Test (6: FACULTY TEST)	13-150
5.4.10	PDL (#8 PDL)	13-129	5.5.8	Book Read Test (8: BOOK TEST)	13-160
5.4.11	Counters (#9 COUNTER)	13-130	5.6	Report	13-161
5.4.12	Generating a Report (#10 REPORT)	13-133	5.6.1	User Report	13-161
5.4.13	Downloading (#11 DOWNLOAD)	13-134	5.6.2	Service Report	13-164
5.4.14	Clear (#12 CLEAR)	13-135	6	Self Diagnosis	13-176
5.4.15	ROM Indication (#13 ROM)	13-136	6.1	Outline	13-176
5.4.16	Resetting the CS Unit Position (#14 CS SET) ..	13-136	6.2	Error Codes	13-177
5.5	Test Mode (TEST MODE) ..	13-137	6.2.1	Error Codes Used for the Machine	13-177
5.5.1	Outline	13-137	6.2.2	Finisher Error Codes	13-183
5.5.2	Test Mode Menu	13-138	6.3	Fax Error Code	13-190
5.5.3	D-RAM Test (1: D-RAM)	13-143	6.3.1	Service Error Code Output	13-190
5.5.4	CCD Test (2: CCD TEST)	13-145	6.3.2	Error Codes	13-190
5.5.5	PRINT Test (3: PRINT)	13-146	6.3.3	Causes and Remedies for User Error Codes	13-194
			6.3.4	Causes and Remedies for Service Error Codes	13-201

CHAPTER 14 VERSION UP

1	Upgrading	14-1	2.6.1	Outline	14-21
1.1	Outline	14-1	2.6.2	Downloading	14-22
2	Upgrading by Downloading	14-3	3	Back Up Data	14-27
2.1	Before Starting the Work	14-3	3.1	Outline	14-27
2.2	Installing the USB Driver (only if Windows 98 or Windows 98SE)	14-4	3.2	Backing Up Data	14-27
2.3	Installing the Firmware	14-10	3.2.1	Making Preparations	14-27
2.4	Downloading the System Software	14-13	3.2.2	Making Connections	14-28
2.5	Downloading for G3 FAX	14-20	3.2.3	Backing Up Data	14-29
2.6	Downloading for the Finisher-L1	14-21	3.2.4	Downloading Backup Data	14-34
			3.2.5	Managing Backup Data	14-38

APPENDIX

A General Timing Charts	A-1	E Inner 2-way tray	A-7
B General Circuit Diagram	A-3	F Special Tools	A-9
C 1-cassette unit	A-5	G Solvents and Oils	A-11
D 2/3-cassette unit	A-6		

CHAPTER 1

INTRODUCTION

1 Features

1.1 Features

1. High-Speed, High Image Quality

Copying speed	16 copies/min (iR1600/iR1610F ; 1-to-N, from cassette)
	20 copies/min (iR2000/iR2010F ; 1-to-No: from cassette)
Reading resolution	: 600 dpi x 600 dpi
Printing resolution	
	Copying : 1,200 (equivalent) x 600 dpi
	PDL output : 2,400 (equivalent) x 600 dpi

2. Large Paper Source

With the addition of accessories, as many as 1,100 sheets (80 g/m²) may be accommodated.

Multifeeder : 100 sheets (A4R, A4, B5, B5R, A5, A5R; 80 g/m²)

- 16cpm model Cassette

Cassette 1 : 250 sheets

1-cassette unit (accessory) : 250 sheets

3-cassette unit (accessory) : 250 sheets x 3

- 20cpm model Cassette

Cassette 1 : 250 sheets

Cassette 2 : 250 sheets

2-cassette unit (accessory) : 250 sheets x 2

3. Mixed Paper Sizes (of same configuration)

Installation of an ADF will enable mixing of different paper sizes (of the same configuration).

4. Networking

Mounting of a printer board and network interface board will enable the use of the machine as a network printer in an Ethernet environment.

5. Hard Disk

Installation of a hard disk (accessory) will enable storage of image data on the hard disk. Since the images will be read from the hard disk, multiple sets of copies may be obtained faster (RIP-once function).

6. Selection of a Delivery Tray

Installation of an inner 2-way tray (accessory) will enable the selection of trays separately for copier and printer output (in user mode).

7. Auto Start/Interrupt Copying

The existing models retains no more than one job. The machine, however, keeps jobs on queue, thus enabling auto-start/interrupt copying.

2 Specifications

2.1 Copier

2.1.1 Type

Item	Description
Body	Desktop
Copyboard	Fixed
Light source	LED
Lens	Rod lens array
Photosensitive medium	OPC (30-mm dia.)

T01-201-01

2.1.2 System

Item	Description
Copying	Indirect photoelectric reproduction
Charging	Roller charging
Exposure	Semiconductor laser
Copy density adjustment	Auto or manual
Development	Dry, 1-component toner projection
Pickup	Auto Cassette
	Manual Manual feed tray
Transfer	Roller charging
Separation	Curvature + static (static eliminator)
Cleaning	Rubber blade
Fixing	Heat roller (800 W for 120/230V)

T01-201-02

2.1.3 Functions

Item	Description
Original type	Sheet, book, 3-D (2 kg max.)
Maximum original size	A3/279.4 x 431.8mm (11" x 17")
Reproduction ratio	Direct (1:1)
4R4E	Reduce I (1:0.500), Reduce II (1:0.707) Reduce III (1:0.816), Reduce IV (1:0.865) Enlarge I (1:1.154), Enlarge II (1:1.224), Enlarge III (1:1.414) Enlarge IV (1:2.000)
4R3E	Reduce I (1:0.500), Reduce II (1:0.647), Reduce III (1:0.733) Reduce IV (1:0.786) Enlarge I (1:1.214), Enlarge II (1:1.294), Enlarge III (1:2.000)
4R2E	Reduce I (1:0.500), Reduce II (1:0.707) Enlarge I (1:1.414), Enlarge II (1:2.000) Zoom (1:0.500 to 2.00; 50% to 200%; 1%-increment)
Wait time	30 sec or less from power-on (at 20°C room temperature)
First copy time	Less than 8.2 sec (from copier cassette; Direct, A4/LTR, non-AE)
Continuous copying	99 copies max.
Copy size	
Cassette	AB : A3 max. A5 min. Inch : 11x17 (279.4 x 431.8 mm) max. STMT min.
Multifeeder pickup	AB : A3 max. Postcard min. Inch : 11x17 (279.4 x 431.8 mm) max. STMT min.

T01-201-03