

Product: 2002 Canon iR1200/iR1300 Printer Service Repair Workshop Manual
Full Download: <https://www.arepairmanual.com/downloads/2002-canon-ir1200ir1300-printer-service-repair-workshop-manual/>

iR1200/iR1300 Series

SERVICE MANUAL

REVISION 0

Canon

AUG. 2002

FY8-13HU-000

Sample of manual. Download All 424 pages at:

<https://www.arepairmanual.com/downloads/2002-canon-ir1200ir1300-printer-service-repair-workshop-manual/>

COPYRIGHT © 2002 CANON INC.

CANON iR1200/iR1300 Series REV. 0 AUG. 2002

Application

This manual has been issued by Canon Inc. for qualified persons to learn technical theory, installation, maintenance, and repair of products. This manual covers all localities where the products are sold. For this reason, there may be information in this manual that does not apply to your locality.

Corrections

This manual may contain technical inaccuracies or typographical errors due to improvements or changes in products. When changes occur in applicable products or in the contents of this manual, Canon will release technical information as the need arises. In the event of major changes in the contents of this manual over a long or short period, Canon will issue a new edition of this manual.

The following paragraph does not apply to any countries where such provisions are inconsistent with local law.

Trademarks

The product names and company names used in this manual are the registered trademarks of the individual companies.

Copyright

This manual is copyrighted with all rights reserved. Under the copyright laws, this manual may not be copied, reproduced or translated into another language, in whole or in part, without the written consent of Canon Inc.








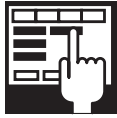 


COPYRIGHT © 2002 CANON INC.

Caution

Use of this manual should be strictly supervised to avoid disclosure of confidential information.

1 Symbols Used

This documentation uses the following symbols to indicate special information:

Symbol	Description
	Indicates an item of a non-specific nature, possibly classified as Note, Caution, or Warning.
	Indicates an item requiring care to avoid electric shocks.
	Indicates an item requiring care to avoid combustion (fire).
	Indicates an item prohibiting disassembly to avoid electric shocks or problems.
	Indicates an item requiring disconnection of the power plug from the electric outlet.
 Memo	Indicates an item intended to provide notes assisting the understanding of the topic in question.
 REF.	Indicates an item of reference assisting the understanding of the topic in question.
	Provides a description of a service mode.
	Provides a description of the nature of an error indication.
	Refers to the Copier Basics Series for a better understanding of the contents.



2 Outline of the Manual

This Service Manual provides basic facts and figures needed to service the iR1200 Series/iR1300 Series products in the field, and it consists of the following chapters:

Chapter 1	Product Outline:	specifications, names of parts, safety and warnings
Chapter 2	Using the Machine:	control panel, user mode, service mode
Chapter 3	Installation:	site requirements, installation procedure, work for relocation
Chapter 4	Operation:	mechanical system by function, principles of operation of electrical systems
Chapter 5	Mechanical System:	mechanical construction, disassembly/assembly
Chapter 6	Maintenance and Inspection:	periodically replaced parts, durables (life), basic servicing chart, cleaning
Chapter 7	Troubleshooting:	standards/adjustments, troubleshooting image faults, troubleshooting malfunctions
Appendix:		general timing chart, general circuit diagrams

The descriptions in this Service Manual are based on the following rules:

1. In each chapter, the uses of the function in question and its relationship to electrical and mechanical systems are discussed and the timing of operation of its associated parts is explained by means of outlines and diagrams.

In the diagrams, the symbol  represents a mechanical path, while the symbol  with a name next to it indicates the flow of an electric signal.

The expression “turn on the power” means turning on the power switch, closing the front cover, and closing the delivery cover so that the machine will be supplied with power.

2. In circuit diagrams (digital), a signal whose level is High is expressed as being ‘1’, while a signal whose level is Low is expressed as being ‘0’; the level of voltage, however, varies from circuit to circuit.

The machine uses CPUs, whose internal mechanisms cannot be checked in the field, and, therefore, are not explained. In addition, the machine’s PCBs are not intended for repairs at the user’s and, therefore, are explained by means of block diagrams: two types are used, i.e., between sensors and inputs of PCBs equipped with a control or drive function and between outputs equipped with a control or drive function and loads; in addition, functional block diagrams are used at times.

Changes made to the machine for product improvement are communicated in the form of a Service Information bulletin as needed. All service persons are expected to go through all service documentation including the bulletins and be equipped to respond to the needs of the field (as by being able to identify possible causes of problems).

INTRODUCTION


This service manual covers the models shown in the following table. Be sure to have a good understanding of the difference from model to model before referring to this manual.

Model	Type code	ADF function	Printer function	Fax function	Cassette	Default Ratio	Power supply
iR1210	MTC		√		500 sheet (A4)	4R3E	230V
	PVZ		√		500 sheet (A4)	4R3E	230V
	QTL		√		250 sheet (A4)	2R2E	230V
	UMA		√		250 sheet (A4)	2R2E	230V
	UVB		√		250 sheet (A4)	2R2E	230V
	UVC		√		250 sheet (A4)	2R2E	230V
	UVD		√		250 sheet (A4)	2R2E	230V
	UVE		√		250 sheet (A4)	2R2E	230V
ZTY			√		250 sheet (Universal)	2R2E	127V
iR1230	MTD	√	√		500 sheet (A4)	4R3E	230V
	MTE	√	√		500 sheet (A4)	4R3E	230V
	QTM	√	√		250 sheet (A4)	2R2E	230V
	UNA	√	√		250 sheet (A4)	2R2E	230V
	UVF	√	√		250 sheet (A4)	2R2E	230V
	UVG	√	√		250 sheet (A4)	2R2E	230V
	UVH	√	√		250 sheet (A4)	2R2E	230V
	UVJ	√	√		250 sheet (A4)	2R2E	230V
iR1270F	MTF	√	√	√	250 sheet (A4)	4R3E	230V
	MTG	√	√	√	500 sheet (A4)	2R2E	230V
	UPA	√	√	√	250 sheet (A4)	4R3E	230V
iR1310	ZTW		√		500 sheet (LTR/LGL)	3R2E	120V
iR1330	ZTZ	√	√		500 sheet (LTR/LGL)	3R2E	120V
iR1370F	ZUB	√	√	√	500 sheet (LTR/LGL)	3R2E	120V

The notation “√” indicates that the item in question is available.

Contents

CHAPTER 1 PRODUCT OUTLINE

1 Specifications	1-1	2.1.3 ADF (if equipped with ADF functions)	1-18
1.1 Type	1-1	2.2 Cross Section	1-19
1.2 Mechanisms	1-1	2.2.1 Body	1-19
1.3 Functions	1-2	2.2.2 ADF (if equipped with ADF functions)	1-20
1.4 Others	1-4	3 Safety and Warnings	1-21
1.5 Reproduction Ratio	1-5	3.1  Safety of Laser Light	1-21
1.6 Copying Speed	1-6	3.1.1 Safety of the Laser Scanner Unit	1-21
1.6.1 Copying Speed (AB type, A type)	1-6	3.1.2 CDRH Requirements	1-21
1.6.2 Copying Speed (Inch type) ..	1-7	3.1.3 Handling the Laser Scanner Unit	1-22
1.7 ADF (if equipped with ADF functions)	1-8	3.2 Safety of the Toner	1-23
1.8 FAX (if equipped fax functions) 1-9		3.3 Storing and Handling the Cartridge (Drum Unit and Developing Unit)	1-23
1.8.1 Communications specifications	1-9	3.3.1 Storing a Drum Unit Before Unpacking	1-23
1.8.2 Scanner section specifications	1-10	3.3.2 Storing or Handling the Cartridge After Unpacking .	1-24
1.8.3 Printer section specifications	1-10	3.3.2.1 Storing After Unpacking	1-24
1.8.4 Functions	1-11	3.3.2.2 Points to Note When Handling the Cartridge .	1-25
2 Names of Parts	1-15		
2.1 External View	1-15		
2.1.1 Body (ADF type)	1-15		
2.1.2 Body (copyboard type)	1-16		

CHAPTER 2 USING THE MACHINE

1 Using the Machine	2-1	3 Service Mode	2-21
1.1 Control Panel	2-1	3.1 Outline	2-21
2 User Mode	2-5	3.2 Using Service Mode	2-23
2.1 User Mode Menu	2-5	3.3 List of Service Mode Menus ...	2-24
2.2 User Report	2-18	3.4 Bit Switch Settings (#1 SSSW)	2-32
2.2.1 Manually Generating a Report	2-18	3.5 Menu Switch Settings (#2 MENU)	2-48
2.2.2 Automatically Generating Reports (if equipped with fax functions)	2-19	3.6 Numeric Parameter Setting (#3 NUMERIC Param.)	2-50
2.2.2.1 Memory Clear List	2-20	3.7 SPECIAL Setting (#4A SPECIAL)	2-55

3.8	NCU Setting (#4B NCU)	2-55	3.21.6	MODEM NCU Test	
3.9	ISDN Setting (#4C ISDN)	2-55		(4: MODEM NCU)	2-84
3.10	Country/Region of Installation		3.21.6.1	Relay Test	2-84
	(#5 TYPE)	2-55	3.21.6.2	Frequency Test	2-85
3.11	Setting the Original Reading		3.21.6.3	G3 Signal Transmission	
	Functions (#6 SCANNER)	2-56		Test	2-85
3.12	Setting the Printer Parameters		3.21.6.4	DTMF Signal Transmission	
	(#7 PRINTER)	2-57		Test	2-86
3.12.1	#1 SSSW Setting	2-57	3.21.6.5	Tonal/DTMF Signal	
3.12.2	#2 NUMERIC Param.			Reception Test	2-86
	Setting	2-59	3.21.6.6	V.34 G3 signal transmission	
3.12.3	#3 PRINT COUNT	2-59		test	2-87
3.12.4	#4 PRINT RESET	2-59	3.21.7	AGING Test	
3.12.5	#5 MLT CLEANING	2-59		(5: AGING TEST)	2-88
3.13	PDL (#8 PDL)	2-59	3.21.8	FACULTY (function) Test	
3.14	Counter (#9 COUNTER)	2-60		(6: FACULTY TEST)	2-88
3.14.1	Counter	2-60	3.21.9	BOOK Read Test	
3.14.2	Clearing the Counter			(8: BOOK TEST)	2-94
	Readings	2-61	3.22	Service Report	2-95
3.15	Generating a Report		3.22.1	Manually Generating	
	(#10 REPORT)	2-61		Reports	2-95
3.16	Downloading		3.22.1.1	SYSTEM (SERVICE)	
	(#11 DOWNLOAD)	2-61		DATA LIST	2-95
3.17	Clearing (#12 CLEAR)	2-62	3.22.1.2	SYSTEM DUMP LIST	2-96
3.18	ROM Indication (#13 ROM) ...	2-62	3.22.1.3	KEY HISTORY	
3.19	Resetting the Contact Sensor			REPORT	2-98
	Position (#14 CS SET)	2-62	3.22.1.4	COUNTER REPORT ...	2-99
3.20	Service Mode Default Setting ..	2-63	3.22.1.5	PRINT SPEC	
3.21	Test Mode (TEST MODE)	2-73		REPORT	2-100
3.21.1	Outline	2-73	3.22.2	Automatically Generated	
3.21.2	List of Test Mode Items	2-74		Reports	2-100
3.21.3	D-RAM Test (1: D-RAM) .	2-81	3.22.2.1	Error TX Report	
3.21.4	CCD Test (2: CCD TEST) .	2-82		(for service)	2-101
3.21.5	PRINT Test (3: PRINT)	-83	3.22.2.2	RX Report	
				(for service)	2-102

CHAPTER 3 INSTALLATION

1	Selecting the Site	3-1	2.4	Fitting the Cartridge	3-5
2	Unpacking and Installing the		2.5	Fitting the Toner bottle	3-6
	Machine	3-2	2.6	Putting Paper in the Cassette	3-8
2.1	Before Starting	3-2	2.7	Putting Paper in the Manual	
2.2	Installation Procedure	3-2		Feed Tray	3-9
2.3	Unpacking	3-3	2.8	Connecting the Interface Cable	
				3-10

2.9	Connecting the Modular Cable (if equipped with fax functions)	3-10	2.14	Setting Fax Functions (if equipped with fax functions)	3-13
2.10	Connecting the Power Cord	3-11	2.14.1	Setting the Date/Time (user mode)	3-13
2.11	Fitting the Delivery Tray	3-11	2.14.2	Setting the Dial Type	3-14
2.12	Checking the Copy Images	3-11	2.14.3	Executing Communications Testing	3-14
2.13	Setting the Printer Functions	3-12	3	When Relocating the Machine	3-15

CHAPTER 4 OPERATION

1	Basic Operation	4-1	5	Pickup/Feeding/Delivery System	4-17
1.1	Reproduction Processes	4-1	5.1	Outline	4-17
1.1.1	Outline	4-1	5.2	Pickup Operation	4-18
1.2	Functional Construction	4-4	5.2.1	Pickup from the Cassette ...	4-18
1.3	Outline of the Electrical Circuitry	4-5	5.2.1.1	Outline	4-18
1.3.1	Functional Block Diagram ..	4-5	5.2.1.2	Retry Pickup	4-19
1.3.2	Outlines of Functions	4-6	5.2.1.3	Detecting the Size of Paper	4-19
1.3.2.1	Image Processor PCB	4-6	5.2.2	Pickup from the Manual Feed Tray	4-20
1.3.2.2	DC Controller PCB	4-7	5.2.2.1	Outline	4-20
1.3.2.3	Control Panel PCB	4-8	5.2.2.2	Retry Pickup	4-21
1.3.2.4	Power Supply PCB	4-8	5.2.2.3	Detecting the Size of Paper	4-21
1.3.2.5	Analog Processor PCB ...	4-9	5.3	Feeding Operation/Delivery Operation	4-22
1.3.2.6	Sensor PCB	4-9	5.3.1	Outline	4-22
1.3.2.7	Laser Driver/BD PCB	4-9	5.3.2	Auto Delivery Control	4-22
1.3.2.8	Main Motor/Scanner Motor Driver	4-9	5.4	Reducing the Copying Speed ..	4-23
1.3.2.9	Printer Controller PCB ...	4-9	5.4.1	Outline	4-23
1.3.2.10	NCU PCB (if equipped with fax functions)	4-10	5.5	Detecting Jams	4-24
1.3.2.11	Modular Jack PCB (if equipped with fax functions)	4-10	5.5.1	Outline	4-24
1.3.2.12	Sensor Relay PCB	4-10	5.5.2	Types of Jams	4-24
1.4	Power-On Sequence	4-11	6	Fixing System	4-26
1.5	Controlling the Main Motor ...	4-12	6.1	Outline	4-26
1.5.1	Outline	4-12	6.2	Controlling the Fixing Operation	4-27
2	Image Reading/Processing System ...	4-13	6.2.1	Controlling the Fixing Temperature	4-27
2.1	Outline	4-13	6.2.2	Controlling the Fixing Film Bias	4-29
3	Laser Exposure System	4-14	6.2.3	Fixing Heater Safety Mechanism	4-29
3.1	Outline	4-14			
4	Image Formation System	4-16			
4.1	Outline	4-16			

6.2.4	Detecting a Fault in the Fixing Assembly	4-29	8.2.1.2	Lithium Battery (BAT1) ...	4-35
7	Power Supply System	4-31	8.2.1.3	Vanadium Lithium Secondary Battery (BAT2)	4-37
7.1	Low Voltage Circuit	4-31	8.2.2	Back-Up Data	4-38
7.1.1	Low Voltage Power Supply Circuit	4-31	8.2.2.1	Types of Data	4-38
7.1.2	Protective Functions	4-33	8.2.2.2	Printing the Backup Data List	4-40
7.2	High-Voltage Power Supply Circuit	4-33	9	ADF (if equipped with ADF functions)	4-41
7.3	Controlling the ESS Mechanism	4-33	9.1	Outline	4-41
7.3.1	Outline	4-33	9.2	Picking Up and Moving Originals	4-42
7.3.2	Operation	4-33	9.2.1	Outline	4-42
8	Others	4-34	9.2.2	Moving Down the Original Pickup Roller and Moving Up the Original Stopper	4-43
8.1	Fan	4-34	9.3	Detecting an Original Jam	4-44
8.1.1	Outline	4-34	9.3.1	Outline	4-44
8.2	Back-Up Batteries	4-35	9.3.2	Types of Jams	4-44
8.2.1	Back-Up Function	4-35			
8.2.1.1	Outline	4-35			

CHAPTER 5 MECHANICAL SYSTEM

1	Points to Note When Disassembling/Assembling the Machine	5-1	2.1.2	Removing the Control Panel	5-11
2	Disassembly	5-4	2.1.3	Removing the Copyboard Glass	5-13
2.1	Externals/Auxiliary System	5-4	2.1.4	Removing the Main Motor Unit	5-14
2.1.1	External Covers	5-4	2.1.5	Remove the Fan	5-17
2.1.1.1	Removing the Left Cover/Rear Cover	5-5	2.1.6	Removing the Reader Unit Slide Detecting Switch	5-19
2.1.1.2	Removing the Right Cover	5-5	2.1.7	Removing the Toner Supply Cover Switch	5-20
2.1.1.3	Removing the Toner Supply Cover	5-6	2.1.8	Removing the Humidity Sensor	5-20
2.1.1.4	Removing the Front Cover	5-7	2.1.9	Removing the Toner Bottle Sensor	5-21
2.1.1.5	Removing the Delivery Cover	5-7	2.1.10	Removing the Waste Toner Full Sensor	5-21
2.1.1.6	Removing the Delivery Upper Cover/Delivery Rear Cover	5-8	2.2	PCBs	5-22
2.1.1.7	Removing the Cartridge Cover	5-8	2.2.1	Removing the Image Processor PCB	5-22
2.1.1.8	Removing the Upper Cover	5-9	2.2.2	Removing the Analog Processor PCB	5-23
2.1.1.9	Removing the Right Door	5-11	2.2.3	Removing the Sensor PCB	5-25

2.2.4	Removing the DC Controller PCB/Power Supply PCB ...	5-26	2.6.9	Removing the Registration Roller Unit	5-54
2.2.5	Removing the Printer Controller PCB	5-30	2.7	Fixing System	5-55
2.2.6	Removing the NCU PCB (if equipped with fax functions)	5-31	2.7.1	Removing the Fixing Assembly	5-55
2.2.7	Removing the Modular Jack PCB	5-31	2.7.2	Removing the Fixing Film Unit/Fixing Pressure Roller	5-57
2.2.8	Removing the Sensor Relay PCB	5-31	2.7.3	Removing the Delivery Sensor	5-58
2.3	Original Reading/Processing System	5-32	2.8	ADF System (if equipped with ADF functions)	5-59
2.3.1	Removing the Contact Sensor	5-32	2.8.1	Externals/Auxiliary Control System	5-59
2.3.2	Removing the Reader Motor Drive Unit	5-33	2.8.1.1	Removing the ADF	5-59
2.3.3	Removing the Reader Unit	5-35	2.8.1.2	Removing the ADF Drive Unit	5-61
2.4	Laser Exposure System	5-37	2.8.1.3	Removing the ADF Motor Unit	5-62
2.4.1	Removing the Laser Scanner Unit	5-37	2.8.1.4	Removing the Slide Guide (front, rear)	5-63
2.5	Image Formation System	5-39	2.8.1.5	Mounting the Slide Guide (front, rear)	5-64
2.5.1	Removing the Transfer Charging Roller	5-39	2.8.2	Pickup System	5-65
2.5.2	Removing the Developing Cylinder/Developing Blade	5-40	2.8.2.1	Removing the Separation Roller Unit	5-65
2.5.3	Notes on replacing the Developing Cylinder/Developing Blade	5-43	2.8.2.2	Removing the Original Pickup roller/Original Separation roller	5-67
2.6	Pickup/Feeding System	5-44	2.8.2.3	Removing the Original Sensor/Registration Sensor	5-67
2.6.1	Removing the Cassette Pickup Roller	5-44	2.8.2.4	Removing the Original Separation Pad	5-68
2.6.2	Removing the Cassette Pickup Solenoid	5-46	2.8.2.5	Removing the ADF Registration Roller	5-69
2.6.3	Removing the Manual Feed Tray (upper)	5-48	2.8.3	Feeding System	5-71
2.6.4	Removing the Manual Feed Tray (lower)	5-48	2.8.3.1	Removing the White Roller	5-71
2.6.5	Removing the Manual Feed Pickup Roller	5-49	2.8.3.2	Removing the Feeding Outside Guide	5-72
2.6.6	Removing the Separation Pad	5-50	2.8.3.3	Removing the Feed Roll	5-73
2.6.7	Removing the Manual Feed Pickup Solenoid/Manual Feed Tray Paper Sensor	5-50	2.8.3.4	Removing the Original Feed Roller	5-74
2.6.8	Removing the Vertical Path Roller	5-51	2.8.4	Delivery System	5-75
			2.8.4.1	Removing the Delivery Stacking Tray/Original Delivery Roller	5-75
			2.8.4.2	Removing the Original Delivery Sensor	5-76

CHAPTER 6 MAINTENANCE AND INSPECTION

1	Periodically Replaced Parts	6-1	4.3.6	Transfer Guide	6-5
2	Durables	6-1	4.3.7	Transfer Charging Roller	6-5
3	Scheduled Servicing Chart	6-1	4.3.8	Separation Static Eliminator	6-5
4	Cleaning	6-2	4.3.9	Paper Path	6-5
4.1	Cleaning by the User (machine)	6-2	4.3.10	Fixing Inlet Guide	6-5
4.1.1	Cleaning the Fixing Pressure Roller	6-2	4.3.11	Fixing Pressure Roller	6-5
4.1.2	Other Cleaning	6-2	4.3.12	Delivery Roller	6-6
4.2	Cleaning by the User (ADF)	6-3	4.3.13	Back of Copyboard Glass (Back of Shading Plate)	6-6
4.2.1	Cleaning the White Roller	6-3	4.4	Cleaning at Time of a Service Visit (ADF)	6-7
4.2.2	Other Cleaning	6-3	4.4.1	Original Pickup Roller	6-7
4.3	Cleaning at Time of a Service Visit (machine)	6-4	4.4.2	Original Separation Roller	6-7
4.3.1	Selfoc Lens Array of the Contact Sensor	6-4	4.4.3	Original Separation Pad	6-7
4.3.2	Cassette Pickup Roller	6-5	4.4.4	ADF Registration Roller	6-7
4.3.3	Manual Feed Pickup Roller	6-5	4.4.5	Original Feed Roller	6-7
4.3.4	Separation Pad	6-5	4.4.6	Original Delivery Roller	6-7
4.3.5	Registration Roller	6-5	4.4.7	Copyboard Glass (Original Reading Area)	6-8

CHAPTER 7 TROUBLESHOOTING

1	Standards and Adjustments	7-1	1.2.4.3	Left/Right Edge Read Start Position Adjustment	7-7
1.1	Checking Against the Standards	7-1	1.3	Making Adjustments (ADF)	7-8
1.1.1	Checking the Pressure (nip) of the Fixing Pressure Roller	7-1	1.3.1	Items of Adjustment and Sequence of Work	7-8
1.2	Making Adjustments	7-3	1.3.2	Preparing a Test Sheet for Adjustment	7-8
1.2.1	Making Adjustments When Replacing Major Parts	7-3	1.3.3	Adjusting the Mechanical Systems	7-9
1.2.2	Preparing a Test Sheet for Adjustment	7-4	1.3.3.1	Removing the Skew	7-9
1.2.3	Adjusting the Mechanical Systems	7-5	1.3.3.2	Left/Right Registration Adjustment	7-10
1.2.4	Adjusting the Electrical Systems	7-5	1.3.4	Adjusting the Electrical Systems	7-12
1.2.4.1	Contact Sensor LED Intensity Auto Adjustment	7-5	1.3.4.1	Registration Arch Auto Adjustment	7-12
1.2.4.2	Leading Edge Read Start Position Adjustment	7-6	1.3.4.2	Original Read Position Adjustment	7-12

1.3.4.3	Original Speed Adjustment	7-13	3.1.11	The output has white spots (horizontal).	7-29
1.3.4.4	Leading Edge Read Start Position Adjustment	7-14	3.1.12	The output has white lines (horizontal).	7-29
1.3.4.5	Trailing Edge Read End Position Adjustment	7-15	3.1.13	The output is soiled.	7-30
1.4	When Replacing a Component	7-16	3.1.14	The back of the output is soiled.	7-31
1.4.1	When Replacing the Image Processor PCB	7-16	3.1.15	The output has a fixing fault	7-32
1.4.1.1	Before Starting the Work	7-16	3.1.16	The output has left/right displacement.	7-33
1.4.1.2	After Finishing the Work	7-17	3.1.17	The output has a blurry image.	7-33
2	Troubleshooting	7-18	3.1.18	The output has poor sharpness (out of focus).	7-34
2.1	Making Initial Checks	7-18	3.1.19	The output is blank.	7-35
2.1.1	Site Environment	7-18	3.1.20	The output is solid black. ..	7-37
2.1.2	Checking the Drum Unit ...	7-18	4	Troubleshooting Malfunctions	7-38
2.1.3	Checking the Paper	7-18	4.1	Troubleshooting Malfunctions (service error)	7-38
2.1.4	Others	7-18	4.2	Troubleshooting Malfunctions (other than service error)	7-42
2.2	Troubleshooting Flow Chart	7-19	4.2.1	Power is absent.	7-42
2.3	Making Checks in Response to an Image Fault	7-20	4.2.2	The LCD fails to operate. ..	7-42
2.3.1	Checking the Originals Against the Symptom	7-20	4.2.3	The contact sensor fails to move.	7-43
2.3.2	Copyboard Glass and White Sheet	7-20	4.2.4	The contact sensor LED fails to go ON.	7-43
3	Troubleshooting Image Faults	7-21	4.2.5	The speaker fails to generate sound.	7-44
3.1	Troubleshooting Procedure for Image Faults	7-21	4.2.6	The message ‘CHECK TONER/DRUM CRG’ fails to go OFF	7-44
3.1.1	The output is too light.	7-22	4.2.7	The message ‘SUPPLY REC. PAPER DRAWER:’ fails to go OFF. (cassette)	7-45
3.1.2	The output is too dark.	7-25	4.2.8	The message ‘SUPPLY REC. PAPER S.B.:’ fails to go OFF. (manual feed tray)	7-45
3.1.3	The output is foggy vertically	7-26	4.2.9	The message ‘REC. PAPER JAM SLIDE PLATEN LEFT’ fails to go OFF.	7-46
3.1.4	The output has fuzzy, black vertical lines.	7-26	4.2.10	The message ‘PLATEN/COVER IS OPEN CLOSE PLATEN/COVER’ fails to go OFF. ..	7-47
3.1.5	The output is foggy horizontally.	7-27			
3.1.6	The output has fuzzy, black horizontal lines.	7-27			
3.1.7	The output has black lines (vertical).	7-28			
3.1.8	The output has black lines (horizontal).	7-28			
3.1.9	The output has white spots (vertical).	7-28			
3.1.10	The output has white lines (vertical).	7-28			

4.3	Troubleshooting Malfunctions (if equipped with ADF functions)	7-48	4.5.3.12	Signals	7-55
4.3.1	Original pickup fails.	7-48	4.5.3.13	Timer	7-56
4.4	Troubleshooting Malfunctions (printer functions)	7-49	4.5.4	How to Record the Protocol	7-57
4.4.1	Printing fails to start.	7-49	4.5.5	Causes and Remedies for User Error Codes	7-58
4.4.2	Printing stops in the middle	7-49	4.5.6	Causes and Remedies for Service Error Codes	7-63
4.5	Troubleshooting (faults unique to models equipped with fax functions)	7-51	4.5.7	Common Faults	7-85
4.5.1	Troubleshooting Communication Faults	7-51	5	Troubleshooting Feeding Faults	7-86
4.5.2	Service Error Code Output	7-53	5.1	Outline	7-86
4.5.3	Error Codes	7-53	5.2	Paper Jams	7-87
4.5.3.1	Transmission Level (ATT): No.07 of Service Soft Switch #2 MENU	7-53	5.2.1	Pickup Assembly (cassette)	7-87
4.5.3.2	NL Equalizer: No.05 of Service Soft Switch #2 MENU	7-53	5.2.2	Pickup Assembly (manual feed tray)	7-89
4.5.3.3	Transmission Page Timer: SW12 of Service Soft Switch #1 SSSW	7-53	5.2.3	Feeding Assembly	7-91
4.5.3.4	T0 Timer: No.10 of Service Soft Switch #3 NUMERIC param.	7-53	5.2.4	Fixing Delivery Assembly .	7-93
4.5.3.5	T1 Timer: No.11 of Service Soft Switch #3 NUMERIC param.	7-54	5.2.5	Checking the Rotation of the Rollers and Gears	7-94
4.5.3.6	RTN Signal Transmission Condition: No. 02, 03, and 04 of Service Soft Switch #3 NUMERIC param. ...	7-54	5.2.5.1	Checking the Rotation of the Cassette Pickup Roller and the Vertical Path Roller .	7-94
4.5.3.7	Echo Remedy	7-54	5.2.5.2	Checking the Rotation of the Registration Roller and the Gear for the Photosensitive Drum	7-94
4.5.3.8	Echo Protect Tone: SW03 bit 1 of Service Soft Switch #1 SSSW	7-54	5.3	Original Jams (if equipped with ADF functions)	7-95
4.5.3.9	Number of Final Flag Sequences: SW04 bit 2 of Service Soft Switch #1 SSSW	7-54	5.4	Feeding Faults	7-96
4.5.3.10	Subaddress	7-55	5.4.1	Double Feeding	7-96
4.5.3.11	Password	7-55	5.4.2	Wrinkles	7-97
			5.5	Faulty Feeding of Originals (if equipped with ADF functions)	7-98
			5.5.1	Double Feeding	7-98
			5.5.2	Skew	7-98
			6	Arrangement of the Electrical Parts ..	7-99
			6.1	Checking the Photointerrupters	7-99
			6.2	Arrangement and Functions of Electrical Components	7-101
			6.2.1	Solenoids, Motors, Fans ..	7-101
			6.2.1.1	Body	7-101
			6.2.1.2	ADF (if equipped with ADF functions)	7-102

<p>6.2.2 Sensors 7-103</p> <p style="padding-left: 20px;">6.2.2.1 Body 7-103</p> <p style="padding-left: 20px;">6.2.2.2 ADF (if equipped with ADF functions) 7-104</p> <p>6.2.3 Others 7-105</p> <p>6.2.4 PCBs 7-107</p>	<p>6.3 Variable Resistors, Light Emitting Diodes (LED), and Check Pins by PCB 7-109</p> <p>6.3.1 Image Processor PCB 7-109</p> <p>6.3.2 DC Controller PCB 7-110</p>
--	---

APPENDIX

<p>1 General Timing Chart A-1</p> <p>2 General Circuit Diagram A-3</p>	<p>3 List of Special Tools A-5</p> <p>4 List of Solvents and Oils A-6</p>
--	---

CHAPTER 1

PRODUCT OUTLINE

1 Specifications

1.1 Type

Item	Specifications
Body	Desk top (ADF standard type, copyboard standard type)
Copyboard glass	Fixed
Light source	LED
Lens	CIS (contact sensor)
Photosensitive medium	OPC drum (30-mm dia.) : Drum unit

1.2 Mechanisms

Item	Specifications
Reproduction	Indirect electrostatic
Charging	Roller contact
Exposure	Semiconductor laser
Copy density adjustment	Auto or manual
Development	Dry, 1-component toner projection
Pickup	Cassette: 1 cassette Multifeeder: 1 feeder
Transfer	Roller transfer
Separate	Static (static eliminator) + curvature
Cleaning	Rubber blade
Fixing	SURF (on-demand)

1.3 Functions

Item	Specifications
Resolution	
printer engine	600 x 600 dpi
copy	1200 equivalent x 600 dpi
print	2400 equivalent x 600 dpi
Original type	Sheet, book, 3-D object (2 kg max.)
Maximum original size	A4 (297 ×210 mm / 11.7" ×8.3"), LGL (356 ×216 mm / 14.0" ×8.5")
Reproduction ratio	AB:4R3E, A:2R2E, Inch:3R2E
Zoom	50% to 200% (1% increments)
Wait time	8.5 sec (after plug in) / 1.0 sec (after pressing Energy Saver key)
First copy time	13 sec or less 21.5 sec (after plug in) 18 sec (after pressing Energy Saver key)
Continuous reproduction	99 pages max.
Reproduction size	
250-sheet cassette (Fixed to A4 size)	A4
250-sheet cassette (Universal)	LGL, LTR, A4, B5
500-sheet cassette	LGL, LTR, A4
Manual feed tray	Width: 76.2 to 216 mm (3.0" to 8.5") Length: 127 to 356 mm (5.0" to 14.0") Weight: 56 to 128 g/m ²
Paper type	
250-sheet cassette	Plain paper (64 to 80 g/m ²), recycled paper (64 to 80 g/m ²), colored paper (64 to 80 g/m ²)
500-sheet cassette	Plain paper (64 to 80 g/m ²), recycled paper (64 to 80 g/m ²), colored paper (64 to 80 g/m ²)
Manual feed tray	Plain paper (64 to 80 g/m ²), recycled paper (64 to 80 g/m ²), colored paper (64 to 80 g/m ²), transparency, tracing paper, label, postcard, thick paper (56 to 128 g/m ²), envelope
Cassette	Claw separation, front loading
Manual feed tray capacity	10 mm deep, (about 100 sheets of 80 g/m ² paper)
Delivery tray capacity	100 sheets max.
Non-image width	Leading edge: 3.0 ± 2.0 mm (0.12" ± 0.08"), left/right edge: 2.5 ± 2.0 mm (0.10" ± 0.08")

Item	Specifications
AE	Yes
Image mode	Yes (text, text/photo, photo)
Toner save mode	Yes
Special mode	Yes: Tracing paper mode, transparency mode, special paper 1 mode* ¹ , special paper 2 mode* ²
Auto power-off	No
Power save mode	Yes (manually ON/OFF, auto OFF after specific time, auto ON after fax reception/print data reception)
N-on-1	Yes (in some functions, 2-on-1)
1-on-N memory copy	Yes
Auto copy start	Yes
Jam recovery	Yes
Auto clear	Yes
Date/time set	Yes
Weekly timer	Yes
Toner level detection* ³	Yes
Cassette paper level detection	Yes
LGL size detection	Yes
Toner supply cover open/closed detection	Yes
Toner bottle position detection	Yes
Humidity sensor	Yes
Waste toner full detection	Yes
e-Maintenance	Yes

*1: Thick paper mode; including paper of 105 to 128 g/m² and Bond paper with poor surface characteristics.

*2: Thick paper H mode; envelope, etc.

*3: At this time, the copier/printer is capable of printing only so many prints, suspending operation thereafter.

In the case of fax, select 'Print' or 'Remain the image data in the memory' at the user mode display in advance. Follow the action selected at the user mode.

1.4 Others

Item	Specifications
Operating environment	
Temperature range	0° to 35°C / 32° to 95°F
Humidity range	35% to 85%
Atmospheric pressure range	0.61 to 1.01 hPa (0.6 to 1 atm)
Power supply	120V (50/60Hz), 230V (50/60Hz)
Serial number	MTCxxxx MTDxxxx MTExxxx MTFxxxx MTGxxxx PVZxxxx QTLxxxx TMxxxx UMAxxxx UNAXxxx UPAxxxx UVBxxxx UVCxxxx UVDxxxx UVExxxx UVFxxxx UVGxxxx UVHxxxx UVJxxxx ZTWxxxx ZTYxxxx ZTZxxxx ZUBxxxx
Power consumption	
Maximum	780 W or less
Standby	16 W (approx.; reference only)
Operation	280 W (approx.; reference only)
Energy save stanby	2 W or less (approx.; reference only)
Noise	
Standby	Copyboard type: 40 dB or less (impulse mode) ADF type: 40 dB or less (impulse mode: reference)
Copying	Copyboard type: 66 dB or less (fast mode) ADF type: 69 dB or less (fast mode: reference)
Ozone (after 50000 pages)	0.05 ppm (Ave.)
Dimensions	
Width	Copyboard type: 475 mm (18.7"), ADF type: 475 mm (18.7")
Depth	Copyboard type: 442 mm (17.4"), ADF type: 442 mm (17.4")
Height	
250-Sheet cassette	Copyboard type: 295 mm (11.6"), ADF type: 352 mm (13.9")
500-Sheet cassette	Copyboard type: 327 mm (12.9"), ADF type: 384 mm (15.1")
Weight	
250-Sheet cassette	Copyboard type: 20.5 kg, ADF type: 22.6 kg
500-Sheet cassette	Copyboard type: 21.9 kg, ADF type: 24.0 kg
Consumables storage	
Paper	Keep wrapped to avoid humidity.
Toner	Avoid direct sunshine, and store between 0° and 35°C / 32° and 95°F, between 35% and 85%.

1.5 Reproduction Ratio

Item	4R3E (AB configuraiton)	2R2E (A configuration)	3R2E (Inch configuration)
Direct	1 : 1.000	1 : 1.000	1 : 1.000
Reduce I	1 : 0.500	1 : 0.500	1 : 0.500
Reduce II			1 : 0.647
Reduce III	1 : 0.707	1 : 0.707	
Reduce IV			1 : 0.786
Reduce V	1 : 0.816		
Reduce VI	1 : 0.865		
Enlarge I	1 : 1.154		
Enlarge II			1 : 1.294
Enlarge III	1 : 1.414	1 : 1.414	
Enlarge IV	1 : 2.000	1 : 2.000	1 : 2.000

1.6 Copying Speed

1.6.1 Copying Speed (AB type, A type)

Ratio	Size	Paper size	copies/min	
			Cassette	Manual feed tray ^{*1}
Direct	A4 (210 ×297mm / 8.3" ×11.7")	A4	12	12
	B5 (182 ×257mm / 7.2" ×10.1")	B5	13	13
	A5 (149 ×210mm / 5.9" ×8.3")	A5	-	13
Reduce I (50.0%)	A4R → postcard	postcard	-	6 ^{*3}
	III (70.7%) A4R → A5R	A5	-	13
	V ^{*2} (81.6%) B5R → A5R	A5	-	13
	VI ^{*2} (86.5%) A4R → B5R	B5	13	13
EnlargeI ^{*2} (115.4%)	B5R → A4R	A4	12	12
	III (141.4%) A5R → A4R	A4	12	12
	IV (200.0%) postcard → A4R	A4	12	12

*1: If the manual feed tray is in use, the copying speed is indicated assuming that the paper size setting is correct.

*2: AB-configured paper only.

*3: In the case of 'Special paper 2 mode' selected at the user menu.

The machine performs 3-step copying speed reduction control designed to prevent cracking of the fixing heater, otherwise possibly occurring as a result overheating of the ends of the fixing assembly. (See 5.4 of Chapter 4.)

1.6.2 Copying Speed (Inch type)

Ratio	Size	Paper size	copies/min	
			Cassette	Manual feed tray**1
Direct	LTR (216 ×279mm / 8.5" × 11.0")	LTR	13	13
	LGL (216 ×356mm / 8.5" ×14.0")	LGL	10	10
	STMTR (139 ×216mm / 5.5" ×8.5")	STMT	-	13
Reduce I (50.0%)	MIN	STMT	-	13
	II (64.7%) LGL → STMT	STMT	-	13
	IV (78.6%) LGL → LTR	LTR	13	13
Enlarge II (129.4%)	STMTR → LTRR	LTR	13	13
	IV (200.0%) MAX (LTR)	LTR	13	13

*1: If the manual feed tray is in use, the copying speed is indicated assuming that the paper size setting is correct.

The machine performs 3-step copying speed reduction control designed to prevent cracking of the fixing heater, otherwise possibly occurring as a result of overheating of the ends of the fixing assembly. (See 5.4 of Chapter 4.)

1.7 ADF (if equipped with ADF functions)

Items	Specifications
Pickup	Auto pickup/delivery (top separation by double-pad)
Original type	Single-sided sheet (50 to 128 g/m ²)
Original size	A4R, B5R, A5R, B6, LGL, LTRR, STMTR Length: 128 to 356 mm (5" to 14"), width: 139 to 216 mm (5.5" to 8.5")
Original orientation	Face-down
Original position	Center reference
Original processing mode	From single-sided to single-sided
Original reading	Stream reading
Stack	30 sheets or less (if A4/LTR or smaller) 15 sheets or less (if LGL)
Mixed original sizes	Yes (only if of the same paper configuration)
Original AE detection	No
Original size recognition	No
Stamp	No
Power supply	From host (5 VDC and 24 V)
Operating environment	Same as host

The machine may not be able to handle the following types of originals:

- original with a carbon back
- original made of multiple layers (pasted, bound)
- original with a cut-off, 5 or more holes, or tear
- original with a clip, adhesive tape, or glue
- original with curling, wrinkling, or appreciable bending
- transparency

Advise the user to remove as much curling as possible, if any, and place the original in the original tray so that the side with the curling is the trailing edge.

1.8 FAX (if equipped fax functions)

1.8.1 Communications specifications

Applicable lines

Analog line (one line)

- PSTN (Public Switched Telephone Network)

Transmission method

Half-duplex

Transmission control protocol

ITU-T T.30 binary protocol/ECM protocol

Modulation method

G3 image signals	ITU-T V.27ter (2.4kbps, 4.8kbps)
	ITU-T V.29 (7.2kbps, 9.6kbps)
	ITU-T V.17 (14.4kbps, 12kbps, TC9.6kbps, TC7.2kbps)
	ITU-T V.34 (2.4Kbps, 4.8Kbps, 7.2Kbps, 9.6Kbps, 12Kbps, 14.4Kbps, 16.8Kbps, 19.2Kbps, 21.6Kbps, 24Kbps, 26.4Kbps, 28.8Kbps, 31.2Kbps, 33.6Kbps)
G3 procedure signals	ITU-T V.21 (No.2) 300bps
	ITU-T V.8, V34 (300bps, 600bps, 1200bps)

Transmission speed

33.6Kbps, 31.2Kbps, 28.8Kbps, 26.4Kbps, 24Kbps, 21.6Kbps, 19.2Kbps, 16.8Kbps, 14.4Kbps, 12Kbps, TC9.6Kbps, TC7.2Kbps, 9.6Kbps, 7.2Kbps, 4.8Kbps, 2.4Kbps
With automatic fallback function

Coding

MH, MR, MMR, JBIG

Error correction

ITU-T ECM

Canon express protocol

None

Transmission output level

from 0 to -15 dBm

Minimum receive input level

-43 dBm (at. V.17)

Modem IC

CONEXANT FM336

1.8.2 Scanner section specifications

Scanning method

Contact sensor scanning method

Scanning line density

Horizontal:

Standard/Fine/Superfine 203.2 dpi (8 dots/mm)

Ultrafine 406.4 dpi (16 dots/mm) (Interpolated)

Vertical:

Standard 97.79 dpi (3.85 lines/mm)

Fine 195.58 dpi (7.7 lines/mm)

Superfine/Ultrafine 391.16 dpi (15.4 lines/mm)

Scanning density adjustment

Light, Standard, Dark: The density level of each mode can be selected by the user mode menu.

Half tone

64-gradation error diffusion system

1.8.3 Printer section specifications

Printing resolution

600dpi x600dpi

Reduction for reception

Fixed reduction (75%, 90%, 95%, 97%)

Auto reduction (70~100%)

1.8.4 Functions

STAMP

None

FAX/TEL switching

Method CNG detection

Message None

Pseudo CI None

Answering machine connection

Yes (Telephone answering priority type)

CNG detection

DPRD

Yes

Polling

Polling transmission

None

Polling reception

Receives from a fax in automatic transmission mode

One touch locations Max. 12

Confidential reception

None

Confidential transmission

None

Remote reception

Method

ID call# (ID input method)

Remote ID (with ID call#)

2 digits (Default : 25)

Memory reception

Yes

Auto dialing

Telephone number digits	Average 39 digits
One-touch dial	Max. 12
Coded speed dial	Max. 100
Group dial	Max. 111 (One-touch : 11, Coded speed dial : 100)
Redial	Numeric button redial function (max. 120 digits)

Delayed transmission

Locations	Max. 122 (One-touch : 12, Coded speed dial : 100) Numeric button: 10)
No. of reservation	Max. 20

Broadcast transmission

Locations	Max. 122 (One-touch : 12, Coded speed dial : 100) Numeric button: 10)
Group button addresses	Max. 111 (One-touch : 11, Coded speed dial : 100)

Relay broadcasting originating

None

Relay broadcasting

None

Closed network

None

Direct mail prevention

None

Dual access

File No. of reservation	Max. 21 files
-------------------------	---------------