

Product: 2004 Canon iR1200 Series/iR 1510 Printer Service Repair Workshop Manual
Full Download: <https://www.arepairmanual.com/downloads/2004-canon-ir1200-seriesir-1510-printer-service-repair-workshop-manual/>

Service Manual

iR1200 Series

iR 1510

The Canon logo is displayed in a bold, black, serif font. The letter 'C' is significantly larger than the other letters, and the 'o' is a solid black circle. The 'n' has a distinctive shape with a small gap at the top.

Sample of manual. Download All 484 pages at:

<https://www.arepairmanual.com/downloads/2004-canon-ir1200-seriesir-1510-printer-service-repair-workshop-manual/>

May 18 2004

Product: 2004 Canon iR1200 Series/iR 1510 Printer Service Repair Workshop Manual
Full Download: <https://www.arepairmanual.com/downloads/2004-canon-ir1200-seriesir-1510-printer-service-repair-workshop-manual/>

Sample of manual. Download All 484 pages at:
<https://www.arepairmanual.com/downloads/2004-canon-ir1200-seriesir-1510-printer-service-repair-workshop-manual/>

Application

This manual has been issued by Canon Inc. for qualified persons to learn technical theory, installation, maintenance, and repair of products. This manual covers all localities where the products are sold. For this reason, there may be information in this manual that does not apply to your locality.

Corrections

This manual may contain technical inaccuracies or typographical errors due to improvements or changes in products. When changes occur in applicable products or in the contents of this manual, Canon will release technical information as the need arises. In the event of major changes in the contents of this manual over a long or short period, Canon will issue a new edition of this manual.

The following paragraph does not apply to any countries where such provisions are inconsistent with local law.

Trademarks

The product names and company names used in this manual are the registered trademarks of the individual companies.

Copyright

This manual is copyrighted with all rights reserved. Under the copyright laws, this manual may not be copied, reproduced or translated into another language, in whole or in part, without the written consent of Canon Inc.

COPYRIGHT © 2001 CANON INC.

Printed in Japan

Caution

Use of this manual should be strictly supervised to avoid disclosure of confidential information.

Symbols Used

This documentation uses the following symbols to indicate special information:

Symbol	Description
	Indicates an item of a non-specific nature, possibly classified as Note, Caution, or Warning.
	Indicates an item requiring care to avoid electric shocks.
	Indicates an item requiring care to avoid combustion (fire).
	Indicates an item prohibiting disassembly to avoid electric shocks or problems.
	Indicates an item requiring disconnection of the power plug from the electric outlet.
 Memo	Indicates an item intended to provide notes assisting the understanding of the topic in question.
 REF.	Indicates an item of reference assisting the understanding of the topic in question.
	Provides a description of a service mode.
	Provides a description of the nature of an error indication.

The following rules apply throughout this Service Manual:

1. Each chapter contains sections explaining the purpose of specific functions and the relationship between electrical and mechanical systems with reference to the timing of operation.

In the diagrams,  represents the path of mechanical drive; where a signal name accompanies the symbol, the arrow  indicates the direction of the electric signal.

The expression "turn on the power" means flipping on the power switch, closing the front door, and closing the delivery unit door, which results in supplying the machine with power.

2. In the digital circuits, '1' is used to indicate that the voltage level of a given signal is "High", while '0' is used to indicate "Low". (The voltage value, however, differs from circuit to circuit.) In addition, the asterisk (*) as in "DRMD*" indicates that the DRMD signal goes on when '0'.

In practically all cases, the internal mechanisms of a microprocessor cannot be checked in the field. Therefore, the operations of the microprocessors used in the machines are not discussed: they are explained in terms of from sensors to the input of the DC controller PCB and from the output of the DC controller PCB to the loads.

The descriptions in this Service Manual are subject to change without notice for product improvement or other purposes, and major changes will be communicated in the form of Service Information bulletins.

All service persons are expected to have a good understanding of the contents of this Service Manual and all relevant Service Information bulletins and be able to identify and isolate faults in the machine."

Contents

Chapter 1 Introduction

1.1 Product Specifications	1- 1
1.1.1 Names of Parts	1- 1
1.1.2 Using the Machine	1- 5
1.1.3 User Mode Items	1- 10
1.1.4 Maintenance by the User.....	1- 37
1.1.5 Safety	1- 39
1.1.6 Product Specifications	1- 41
1.1.7 Function List	1- 47

Chapter 2 Installation

2.1 Making Pre-Checks	2- 1
2.1.1 Selecting the Site	2- 1
2.2 Unpacking and Installation.....	2- 2
2.2.1 Before Starting	2- 2
2.2.2 Installation Procedure	2- 2
2.2.3 Unpacking	2- 2
2.2.4 Fitting the Cartridge	2- 3
2.2.5 Fitting the Toner bottle.....	2- 3
2.2.6 Putting Paper in the Cassette	2- 4
2.2.7 Putting Paper in the Manual Feed Tray.....	2- 5
2.2.8 Connecting the Interface Cable	2- 5
2.2.9 Connect the power cord.....	2- 6
2.2.10 Fitting the Delivery Tray	2- 6
2.2.11 Setting the Printer Functions	2- 6
2.3 Connection to Telephone Line	2- 7
2.3.1 Connecting the Modular Cable (if equipped with fax functions).....	2- 7
2.3.2 Setting the Date/Time (user mode)	2- 7
2.3.3 Setting the Dial Type.....	2- 7
2.3.4 Executing Communications Testing	2- 7
2.4 Checking the Images/Operations.....	2- 9
2.4.1 Checking the Copy Images.....	2- 9
2.5 Relocating the Machine.....	2- 10
2.5.1 When Relocating the Machine	2- 10

Chapter 3 Basic Operation

3.1 Construction	3- 1
3.1.1 Functional Construction	3- 1
3.1.2 Functional Block Diagram	3- 2
3.1.3 Image Processor PCB	3- 2
3.1.4 DC Controller PCB	3- 3

3.1.5Control Panel PCB.....	3- 5
3.1.6Power Supply PCB	3- 5
3.1.7Analog Processor PCB	3- 5
3.1.8Sensor PCB	3- 5
3.1.9Laser Driver/BD PCB.....	3- 5
3.1.10Main Motor/Scanner Motor Driver	3- 5
3.1.11Printer Controller PCB	3- 5
3.1.12NCU PCB (if equipped with fax functions)	3- 6
3.1.13Modular Jack PCB (if equipped with fax functions)	3- 6
3.1.14Sensor Relay PCB.....	3- 6
3.1.15Controlling the Main Motor.....	3- 7
3.2 Basic Sequence	3- 8
3.2.1Basic Sequence of Operations at Power-On	3- 8

Chapter 4 Original Exposure System

4.1 Construction.....	4- 1
4.1.1Major Components	4- 1
4.2 Parts Replacement Procedure	4- 2
4.2.1 Reader Unit	4- 2
4.2.2 Copyboard glass	4- 5
4.2.3 Sensor PCB	4- 5
4.2.4 Scanner Motor	4- 7
4.2.5 Contact sensor	4- 8

Chapter 5 Laser Exposure

5.1 Construction.....	5- 1
5.1.1Outline	5- 1
5.2 Parts Replacement Procedure	5- 2
5.2.1 Laser Scanner Unit.....	5- 2

Chapter 6 Image Formation

6.1 Construction.....	6- 1
6.1.1Outline	6- 1
6.2 Parts Replacement Procedure	6- 2
6.2.1 Developing Cylinder	6- 2
6.2.2 Developing Blade.....	6- 3
6.2.3 Transfer Charging Roller	6- 5
6.2.4 Toner Bottle Sensor.....	6- 6
6.2.5 Waste Toner Full Sensor	6- 8

Chapter 7 Pickup/Feeding System

7.1 Construction.....	7- 1
7.1.1Outline	7- 1
7.2 Detecting Jams.....	7- 3
7.2.1 Jam Detection Outline.....	7- 3

7.2.2 Delivery Jams.....	7- 3
7.2.3 Stationary Jams	7- 3
7.2.4 Other Jams	7- 4
7.3 Cassette Pick-Up Unit	7- 5
7.3.1 Outline	7- 5
7.3.2 Retry Pickup	7- 5
7.3.3 Detecting the Size of Paper	7- 6
7.4 Manual Feed Pickup Unit.....	7- 7
7.4.1 Outline	7- 7
7.4.2 Retry Pickup	7- 7
7.4.3 Detecting the Size of Paper	7- 8
7.5 Delivery	7- 9
7.5.1 Outline	7- 9
7.5.2 Auto Delivery Control.....	7- 9
7.5.3 Reducing the Copying Speed	7- 10
7.6 Parts Replacement Procedure	7- 11
7.6.1 Pickup Roller	7- 11
7.6.2 Separation Pad	7- 12
7.6.3 Cassette Pickup Solenoid.....	7- 12
7.6.4 Manual Feed (Upper).....	7- 14
7.6.5 Manual Feed (Lower).....	7- 15
7.6.6 Manual Pickup Roller	7- 15
7.6.7 Manual Feed Tray sensor.....	7- 16
7.6.8 Manual Feed Pickup Solenoid	7- 21
7.6.9 Registration Roller Unit.....	7- 27
7.6.10 Vertical Path Roller.....	7- 28

Chapter 8 Fixing System

8.1 Construction	8- 1
8.1.1 Outline	8- 1
8.2 Various Control Mechanisms.....	8- 2
8.2.1 Controlling the Fixing Roller Temperature	8- 2
8.2.2 Controlling the Fixing File Bias Temperature	8- 3
8.3 Protective Functions	8- 4
8.3.1 Outline	8- 4
8.3.2 Detecting a Fault in the Fixing Assembly	8- 4
8.4 Parts Replacement Procedure.....	8- 6
8.4.1 Fixing Unit.....	8- 6
8.4.2 Pressure Roller	8- 8
8.4.3 Fixing Film.....	8- 12
8.4.4 Fixing Delivery Sensor	8- 15

Chapter 9 External and Controls

9.1 Fans	9- 1
9.1.1 Outline	9- 1
9.2 Power Supply System.....	9- 2
9.2.1 Power Supply	9- 2

9.2.2 Protection Function	9- 4
9.2.3 Backup Battery	9- 4
9.2.4 Energy-Saving Function	9- 8
9.3 Parts Replacement Procedure	9- 10
9.3.1 Control Panel	9- 10
9.3.2 Analog Processor PCB	9- 10
9.3.3 Removing the DC Controller PCB	9- 12
9.3.4 Image Processor PCB	9- 16
9.3.5 Printer Controller PCB	9- 17
9.3.6 NCU PCB	9- 17
9.3.7 Modular Jack PCB	9- 18
9.3.8 Removing the Printer Power Supply PCB	9- 18
9.3.9 Relay PCB	9- 23
9.3.10 Humidity Sensor	9- 25
9.3.11 Reader Unit Slide Detecting Switch	9- 27
9.3.12 Toner Supply Cover Switch	9- 30
9.3.13 Fans	9- 32
9.3.14 Motor of Main Drive Assembly	9- 36
9.3.15 Right Door	9- 41

Chapter 10 Original Feeding System

10.1 Basic Construcion	10- 1
10.1.1Outline	10- 1
10.2 Basic Operation	10- 2
10.2.1Picking Up and Moving Originals	10- 2
10.2.2Moving Down the Original Pickup Roller and Moving Up the Original Stopper	10- 2
10.3 Detection Jams	10- 4
10.3.1Outline	10- 4
10.3.2Types of Jams	10- 4
10.4 Parts Replacement Procedure	10- 6
10.4.1 ADF	10- 6
10.4.2 ADF Drive Unit	10- 7
10.4.3 ADF Motor Unit	10- 9
10.4.4 Feeding Outside Guide	10- 12
10.4.5 Separation Roller Unit	10- 14
10.4.6 Separation Roller	10- 17
10.4.7 Pickup Roller	10- 21
10.4.8 Original Separation Pad	10- 24
10.4.9 Registration Roller	10- 25
10.4.10 White Roller	10- 28
10.4.11 Feed Roller	10- 30
10.4.12 Original Feed Roller	10- 32
10.4.13 Original Delivery Roller	10- 36
10.4.14 Original Sensor	10- 39
10.4.15 Registration Sensor	10- 42
10.4.16 Original Delivery Sensor	10- 44
10.4.17 Slide Guide	10- 47
10.4.18 Delivery Stacking Tray	10- 48

Chapter 11 Maintenance and Inspection

11.1 Periodically Replaced Parts.....	11- 1
11.1.1Periodically Replaced Parts.....	11- 1
11.2 Durables and Consumables	11- 2
11.2.1Durables.....	11- 2
11.3 Scheduled Servicing Basic Procedure.....	11- 3
11.3.1Scheduled Servicing Chart	11- 3
11.4 Cleaning.....	11- 4
11.4.1Outline	11- 4
11.4.2Selfoc Lens Array of the Contact Sensor	11- 4
11.4.3Cassette Pickup Roller.....	11- 5
11.4.4Manual Feed Pickup Roller	11- 5
11.4.5Separation Pad	11- 5
11.4.6Registration Roller	11- 5
11.4.7Transfer Guide.....	11- 5
11.4.8Transfer Charging Roller.....	11- 5
11.4.9Separation Static Eliminator.....	11- 5
11.4.10Paper Path.....	11- 5
11.4.11Fixing Inlet Guide	11- 5
11.4.12Fixing Pressure Roller	11- 6
11.4.13Delivery Roller	11- 6
11.4.14Back of Copyboard Glass (Back of Shading Plate)	11- 6
11.4.15Original Pickup Roller (ADF).....	11- 6
11.4.16Original Separation Roller (ADF).....	11- 6
11.4.17Original Separation Pad (ADF).....	11- 6
11.4.18ADF Registration Roller (ADF).....	11- 7
11.4.19Original Feed Roller (ADF)	11- 7
11.4.20Original Delivery Roller (ADF).....	11- 7
11.4.21Copyboard Glass (Original Reading Area) (ADF).....	11- 7

Chapter 12 Standards and Adjustments

12.1 Image Adjustments.....	12- 1
12.1.1Leading Edge Read Start Position Adjustment	12- 1
12.1.2Left/Right Edge Read Start Position Adjustment.....	12- 1
12.2 Scanning System	12- 3
12.2.1Preparing a Test Sheet for Adjustment.....	12- 3
12.2.2Contact Sensor LED Intensity Auto Adjustment	12- 3
12.3 Fixing System.....	12- 4
12.3.1Nip Adjustment	12- 4
12.4 Electrical Components	12- 5
12.4.1Outline	12- 5
12.4.2When Replacing the Image Processor PCB	12- 5
12.5 ADF	12- 6
12.5.1 Outline.....	12- 6
12.5.2 Adjusting the Mechanical System	12- 6
12.5.3 Adjusting the Ellectrical System.....	12- 7

Chapter 13 Correcting Faulty Images

13.1 Making Initial Checks.....	13- 1
13.1.1Outline	13- 1
13.1.2Making Initial Checks.....	13- 1
13.1.3Site Environment	13- 1
13.1.4Checking the Drum Unit.....	13- 1
13.1.5Checking the Paper	13- 1
13.1.6Others.....	13- 1
13.1.7Troubleshooting Flow Chart.....	13- 2
13.1.8Making Checks in Response to an Image Fault.....	13- 3
13.2 Outline of Electrical Components	13- 4
13.2.1 Clutch/Solenoid.....	13- 4
13.2.2 Sensor	13- 5
13.2.3 Lamps, Heaters, and Others	13- 7
13.2.4 PCBs.....	13- 8
13.2.5 Variable Resistors(VR), Light-Emitting Diodes(LED),and Check Pins by PCB	13- 10

Chapter 14 Self Diagnosis

14.1 Error Code Table	14- 1
14.1.1Troubleshooting Malfunctions (service error).....	14- 1
14.2 FAX Error Codes.....	14- 6
14.2.1 Outline	14- 6
14.2.2 User Error Code	14- 9
14.2.3 Service Error Code	14- 16

Chapter 15 Service Mode

15.1 Outline	15- 1
15.1.1Outline	15- 1
15.1.2Using Service Mode	15- 3
15.1.3List of Menus.....	15- 4
15.2 Service Mode Table.....	15- 12
15.2.1Bit Switch Settings	15- 12
15.2.2Menu Switch Settings.....	15- 24
15.2.3Numeric Parameter Setting.....	15- 26
15.2.4SPECIAL Setting.....	15- 30
15.2.5NCU Setting.....	15- 30
15.2.6ISDN Setting.....	15- 31
15.2.7Country/Region of Installation	15- 31
15.2.8Setting the Original Reading Functions.....	15- 31
15.2.9Setting the Printer Parameters	15- 32
15.2.10PDL.....	15- 35
15.2.11Counter	15- 35
15.2.12Generating a Report.....	15- 37
15.2.13Downloading.....	15- 37
15.2.14Clearing.....	15- 38
15.2.15ROM Indication.....	15- 38

15.2.16Resetting the Contact Sensor Position.....	15- 39
15.2.17Service Mode Default Setting	15- 39
15.2.18Test Mode.....	15- 55
15.2.19Service Report	15- 72

Chapter 16 Service Tools

16.1 List of Special Tools.....	16-1
16.2 List of Solvents and Oils	16-2

Chapter 1 Introduction

Contents

1.1 Product Specifications.....	1-1
1.1.1 Names of Parts.....	1-1
1.1.1.1 External View (ADF type).....	1-1
1.1.1.2 External View (copyboard type).....	1-2
1.1.1.3 External View (ADF).....	1-3
1.1.1.4 Cross Section (Body).....	1-4
1.1.1.5 Cross Section (ADF).....	1-5
1.1.2 Using the Machine.....	1-5
1.1.2.1 Control Panel.....	1-5
1.1.3 User Mode Items.....	1-10
1.1.3.1 Outline.....	1-10
1.1.3.2 COMMON SETTINGS.....	1-10
1.1.3.3 COPY SETTINGS.....	1-15
1.1.3.4 FAX SETTINGS*1.....	1-16
1.1.3.5 FAX SETTINGS*1.....	1-24
1.1.3.6 ADD. REGISTRATION*1.....	1-32
1.1.3.7 TIMER SETTINGS.....	1-33
1.1.3.8 ADJUST./CLEAN.....	1-34
1.1.3.9 PRINT LISTS.....	1-34
1.1.3.10 COUNT CHECK.....	1-35
1.1.3.11 Report Generating.....	1-35
1.1.3.12 Reports Generating (Automatically Generating Reports: if equipped with fax functions).....	1-36
1.1.4 Maintenance by the User.....	1-37
1.1.4.1 Outline.....	1-37
1.1.4.2 Cleaning the Fixing Pressure Roller.....	1-37
1.1.4.3 Other Cleaning.....	1-38
1.1.4.4 Cleaning the White Roller (ADF).....	1-38
1.1.4.5 Other Cleaning.....	1-39
1.1.5 Safety.....	1-39
1.1.5.1 Safety of the Laser Scanner Unit.....	1-39
1.1.5.2 CDRH Requirements.....	1-39
1.1.5.3 Handling the Laser Scanner Unit.....	1-40
1.1.5.4 Safety of the Toner.....	1-40
1.1.6 Product Specifications.....	1-41
1.1.6.1 Mechanisms/Functions.....	1-41
1.1.6.2 Others.....	1-43
1.1.6.3 Reproduction Ratio.....	1-43
1.1.6.4 Mechanisms/Functions (ADF).....	1-44
1.1.6.5 Mechanisms/Functions (FAX).....	1-44
1.1.7 Function List.....	1-47
1.1.7.1 Printing Speed (AB type, A type).....	1-47
1.1.7.2 Printing Speed (Inch type).....	1-48
1.1.7.3 Printing Speed (Inch type).....	1-49
1.1.7.4 Mechanisms/Functions (ADF).....	1-49


1.1.7.5 Mechanisms/Functions (FAX).....	1-50
1.1.7.6 Mechanisms/Functions (FAX).....	1-56

1.1 Product Specifications

1.1.1 Names of Parts

1.1.1.1 External View (ADF type)

0006-2706

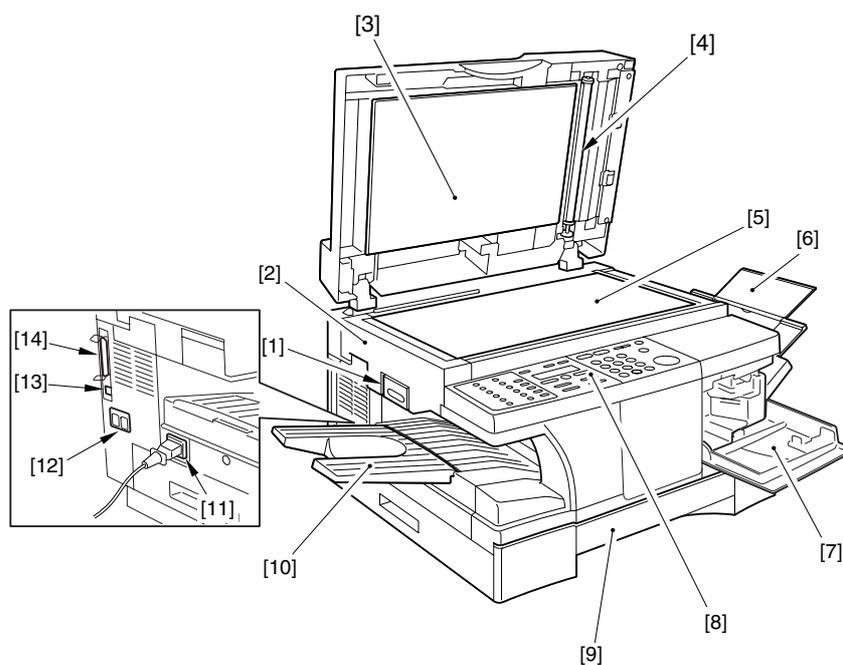

F-1-1


T-1-1

[1] Reader unit slide lever	[8] Control panel
[2] Reader unit	[9] Cassette
[3] White sheet	[10] Delivery tray
[4] White roller	[11] Power cord connector assembly
[5] Copyboard glass	[12] Modular cable connector assembly*1
[6] Manual feed tray	[13] USB cable connector assembly
[7] Toner supply cover	[14] Parallel interface cable connector assembly

*1: If equipped with fax functions.

1.1.1.2 External View (copyboard type)


0006-2715

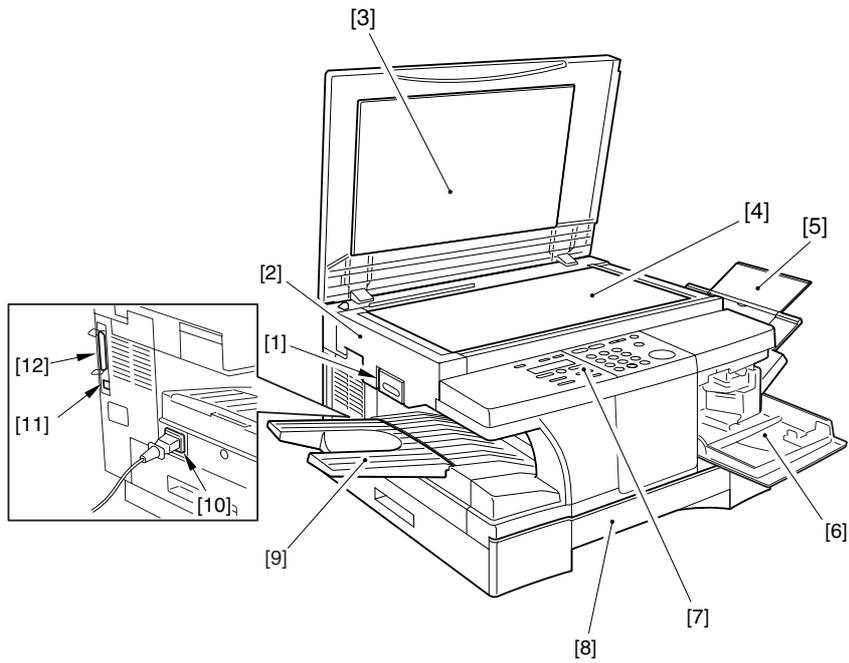

F-1-2

T-1-2

- | | |
|-----------------------------|--|
| [1] Reader unit slide lever | [7] Control panel |
| [2] Reader unit | [8] Cassette |
| [3] Copyboard cover | [9] Delivery tray |
| [4] Copyboard glass | [10] Power cord connector assembly |
| [5] Manual feed tray | [11] USB cable connector assembly |
| [6] Toner supply cover | [12] Parallel interface cable connector assembly |

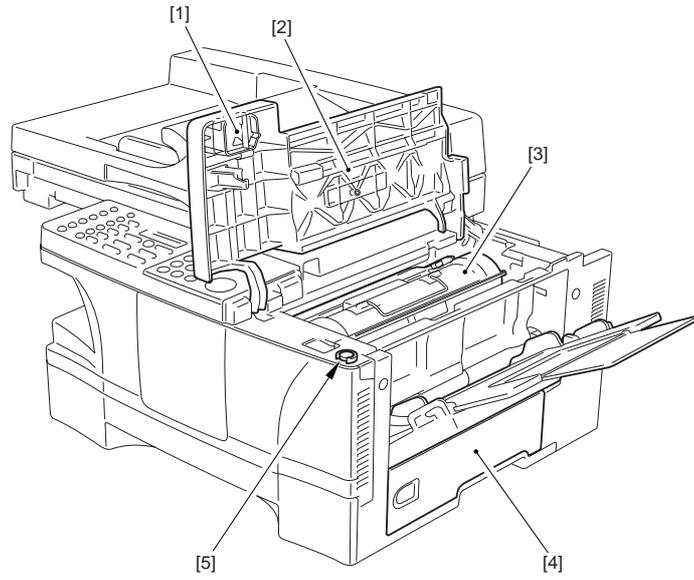


F-1-3

T-1-3

- [1] Drum shutter stopper
- [2] Cartridge cover
- [3] Cartridge
- [4] Right door
- [5] Shipping screw slot

1.1.1.3 External View (ADF)

0006-2722

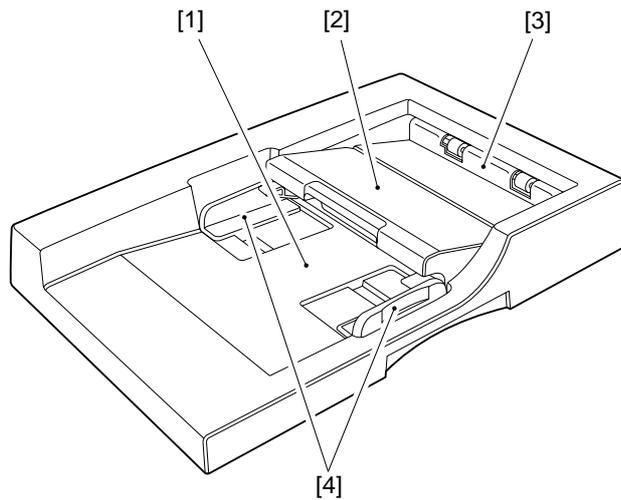


F-1-4

T-1-4

- | | |
|-----------------------------|-------------------|
| [1] Original placement area | [3] Delivery slot |
| [2] Open/close cover | [4] Slide guide |

1.1.1.4 Cross Section (Body)

0006-2724

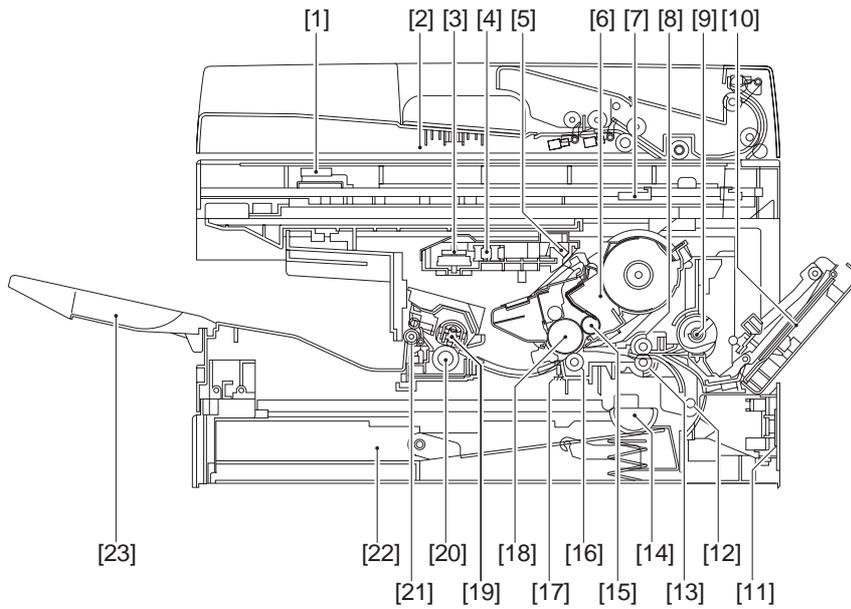


F-1-5

T-1-5

- | | |
|-------------------------------|-----------------------------------|
| [1] Contact sensor | [13] Registration roller |
| [2] Copyboard | [14] Cassette pickup roller |
| [3] Laser scanner motor unit | [15] Developing cylinder |
| [4] Laser unit | [16] Transfer charging roller |
| [5] Reflecting mirror | [17] Separation static eliminator |
| [6] Cartridge | [18] Photopositive drum |
| [7] Reader unit | [19] Fixing film unit |
| [8] Registration shutter | [20] Fixing pressure roller |
| [9] Manual feed pickup roller | [21] Delivery roller |
| [10] Manual feed tray | [22] Cassette |
| [11] Right door | [23] Delivery tray |
| [12] Vertical path roller | |

1.1.1.5 Cross Section (ADF)

0006-2770

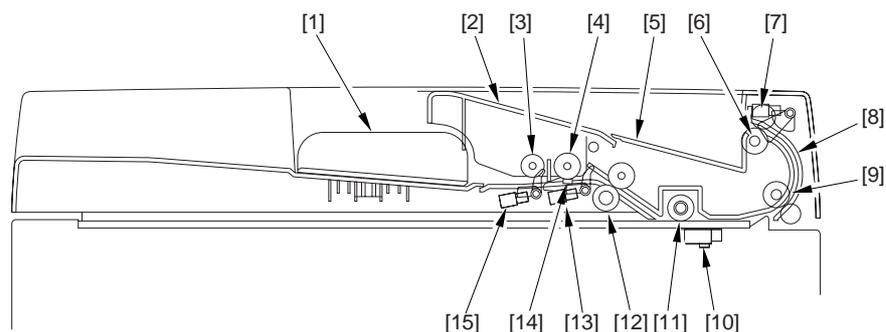

F-1-6


T-1-6

- | | |
|-------------------------------------|------------------------------|
| [1] Slide guide | [9] Original feed roller |
| [2] Open/close cover | [10] Contact sensor (body) |
| [3] Original pickup roller | [11] White roller |
| [4] Original feed/separation roller | [12] ADF registration roller |
| [5] Original delivery tray | [13] Registration sensor |
| [6] Original delivery roller | [14] Original separation pad |
| [7] Original delivery sensor | [15] Original sensor |
| [8] Delivery external guide | |

1.1.2 Using the Machine

1.1.2.1 Control Panel

0006-2629

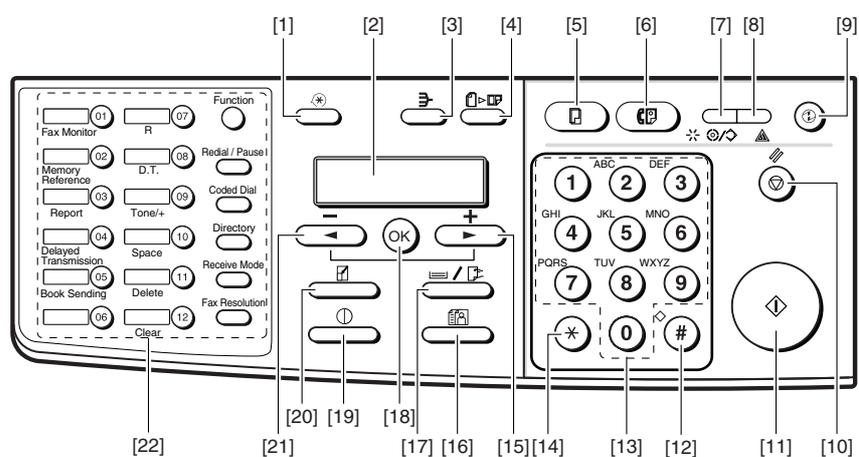

F-1-7


T-1-7

- [1] Additional Functions Key
Press it to bring up the user mode menu for making various settings and registering items. The key flashes when the machine is in user mode menu, and goes OFF in response to a press.
 - [2] LCD
Use it to refer to the Copy/Fax basic screen, various Settings screens, and error messages.
 - [3] Collate Key
Press it to select sorting. The key remains ON when the machine is in sort mode, and goes OFF in response to a press.
 - [4] 2 on 1 Key
Press it to reduce 2 originals automatically and on a single sheet.
 - [5] Copy Key*1
Press it when using a copier function. The key remains ON when the machine is in copier mode.
 - [6] Fax Key*1
Press it when using a fax function. The key remains ON when the machine is in fax mode.
- *1: If equipped with fax functions.
- [7] In Use/Memory Lamp*1
It goes ON when an original has been read, a delayed fax transmission has been selected, or memory reception has been used. Further, it flashes while fax transmission is under way.
 - [8] Alarm Lamp
It flashes when a fault has occurred in the machine (e.g., paper jam).
 - [9] Energy Saver Key
Press it to manually select or deselect energy save mode. It remains ON when the machine is in energy save mode, and goes OFF when the machine leaves the mode.
 - [10] Stop/Reset Key
Press it to stop making copies or transmitting a fax. Or, press it to reset the machine while making mode settings (i.e., to return copier/fax mode to standard mode).

-
- [11] Start Key
Press it to start making a copy or sending a fax.
- [12] # Key
Press it to enter a "symbol" when registering fax/telephone number or when entering a fax telephone number.
- [13] Keypad
Use it to enter a copy count or a value for Zoom, or when entering a fax telephone number.
- [14] * Key
Press it to generate a tone signal from a dial (pulse) circuit when using a fax function.
- [15] Right Arrow/+ Key
Press it to add a value when making various settings or to indicate the next setting or an item.
- [16] Image Quality Key
Press it to select a copy image quality type (text, text/photo, photo).
- [17] Paper Select Key
Press it to select a source of paper (drawer (cassette), stack bypass (manual feed)).
- [18] OK Key (Set Key*2)
Press it to store various selections or settings.
- [19] Exposure Key
Press it to change the copy density. (auto, or manual from 9 steps)
- [20] Enlarge/Reduce Key
Press it to select a default Enlarge/Reduce ratio or Zoom.
- [21] Left Arrow/- Key
Press it to subtract a value when making various settings or to indicate the previous setting or an item.
- [22] One-Touch/Fax Function Key (after a press on the Function key)*1
Press it to dial a pre-registered telephone number. A press on the Function key will cause it to serve as the Fax Function key.

*1: If equipped with fax functions.

*2: Only for the iR1310/1330/1370F models.

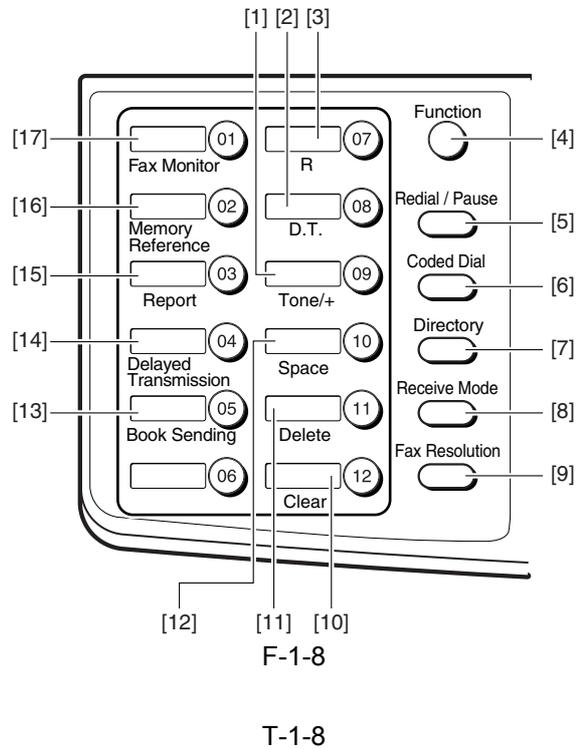

[1] Tone/+ Key*1

Press it to generate a tone from a dial circuit. Press it to enter a + symbol when registering a telephone number.

[2] D.T. Key*1

Press it to use a D.T. function.

[3] R Key*1

Press it to use an R function.

[4] Function Key*2

Press it to use the function key. A press on the Function key will cause the key to go ON, and another press will cause it to go OFF.

[5] Redial/Pause Key*2

Press it to redial a number that has been dialed using the keypad (as in fax wait). When entering a telephone number, it services as a Pause key.

*1: Function key is ON.

*2: If equipped with fax functions.

[6] Coded Dial Key*1

Press it to use speed dialing.

[7] Directly Key*1

Use it to search for a one-touch or speed number using a name.

[8] Receive Mode Key*1

Press it to change the reception mode (faxtel, faxonly, DPRD*3, manual, ansmode).

[9] FAX Resolution Key*1

Use it to change the transmission resolution (standard, fine, photo, super fine, ultra fine).

[10] Clear Key*2

Press it to clear various settings that have been registered or made. Also, press it to delete all telephone number/text input.

[11] Delete Key*2

Use it to delete a single character input.

[12] Space Key*2

Press it to put a space in a telephone number or a string of characters.

[13] Book Send Key*2

Press it to transmit multiple originals using the copyboard glass.

[14] Delayed Transmission Key*2

Press it to set a transmission time.

[15] Report Key*2

Press it to print out a communication-related report, dial list, user data list, or document memory list.

[16] Memory Reference Key*2

Press it to check the file that has been processed by memory transmission or memory reception.

[17] Fax Monitor Key*2

Press it to check the state of a fax communication.

*1: If equipped with fax functions.

*2: Function key is ON.

*3: Only for the iR1370F model.

1.1.3 User Mode Items

1.1.3.1 Outline

0006-2653

A press on the Additional Functions key in the control panel brings up the user mode menu. On the user mode menu, press the left/right arrow key to make menu settings or increase/decrease a value; press the OK key to store the selected input.

The user mode menu is constructed as follows:

(The factory default setting is in bold face.)

1.1.3.2 COMMON SETTINGS

0007-1172

1. DEFAULT SETTINGS*1

T-1-9

COPY

FAX

2. SW AFTER AUTO CLR*1

T-1-10

DEFAULT MODE

CURRENT MODE

3. VOLUME CONTROL*1

T-1-11

1. KEYPAD

VOLUME

ON

VOLUME1 to 3 **(1)**

OFF

2.ALARM
VOLUME*1

ON

VOLUME1 to 3 (1)

OFF

3.TX DONE TONE

ON

VOLUME1 to 3 (1)

ERROR ONLY

VOLUME1 to 3 (1)

OFF

4.RX DONE TONE

ON

VOLUME1 to 3 (1)

ERROR ONLY

VOLUME1 to 3 (1)

OFF

*1: Only if equipped with fax functions.

T-1-12

5.PRINTING END TONE

ON

VOLUME1 to 3 (1)

ERROR ONLY

VOLUME1 to 3 (1)

OFF

6.SCANNING END TONE

ON

VOLUME1 to 3 (1)

ERROR ONLY

		VOLUME1 to 3 (1)
	OFF	
7.CALLING VOLUME		
	1 to 3 (2)	
8.LINE MONITOR VOL.		
	ON	
		VOLUME1 to 3 (2)
	OFF	
4. STACK BYPASS SIZE		
		T-1-13
OFF		
	BYPASS PAPER SIZE	
		FREE SIZE
		SET ON LOADING
ON		
	BYPASS PAPER SIZE	
		A4*2
		B5
		A5
		LGL
		LTR*3
		STMT
		CUSTOM PAER SIZE
		1.VERTICAL SIZE 76 to 216mm (216)
		2.HORIZONTAL SIZE 127 to 356mm (356)