


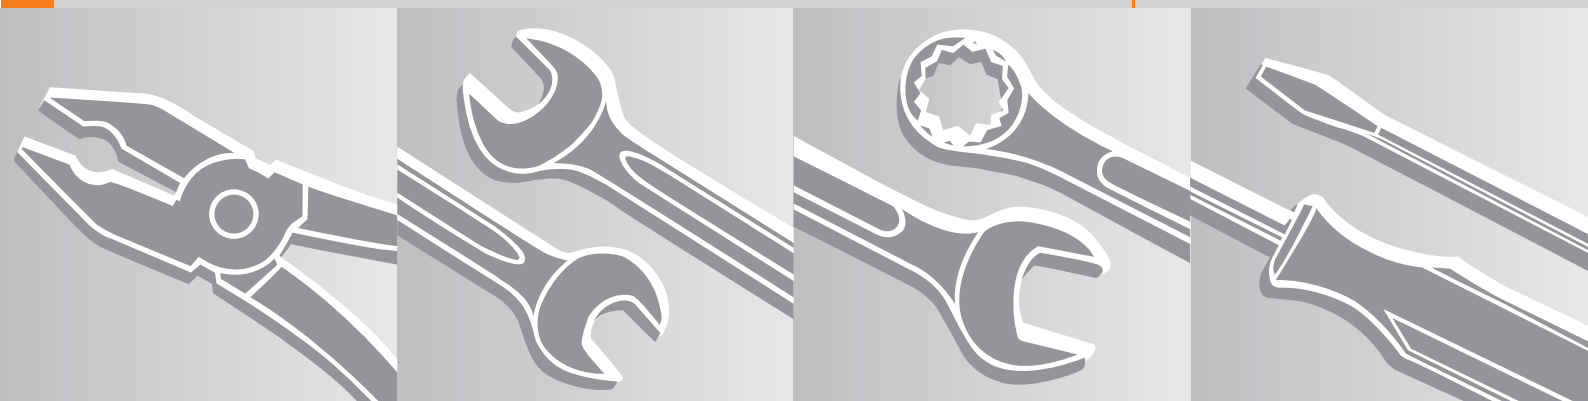

STIHL MS 261

2010-05



1.	Introduction and Safety Precautions	3	6.	Engine	35	9.	Servicing the AV System	76
1.1	Introduction	3	6.1	Muffler	35	9.1	Buffer on Oil Tank	76
1.2	Safety Precautions	4	6.2	Leakage Test	36	9.2	AV Spring on Oil Tank	76
2.	Specifications	5	6.2.1	Preparations	36	9.2.1	AV Spring on Oil Tank - Machines with Heating	76
2.1	Engine	5	6.2.2	Vacuum Test	37	9.3	AV Spring on Fuel Tank	77
2.2	Fuel System	5	6.2.3	Pressure Test	37	9.4	AV Spring on Handlebar	78
2.3	Ignition System	5	6.3	Oil Seals	38	9.4.1	Models with Heating	79
2.4	Chain Lubrication	5	6.4	Shroud	39	9.5	Stop Buffer at Clutch Side	79
2.5	Tightening Torques	6	6.5	Cylinder	40	9.5.1	Stop Buffer at Ignition Side	80
3.	Troubleshooting	8	6.6	Crankshaft	42	9.5.2	Buffers on Filter Base	80
3.1	Clutch	8	6.6.1	Bearings / Crankcase	47	9.6	Handlebar	81
3.2	Chain Drive, Chain Brake, Chain Tensioner	9	6.7	Piston	48	9.6.1	Handlebar with Heating	82
3.3	Chain Lubrication	11	6.8	Piston Rings	50	10.	Control Levers	87
3.4	Rewind Starter	12	6.9	Decompression Valve	51	10.1	Master Control Lever	87
3.5	Ignition System	14	7.	Ignition System	52	10.1.1	Removing and Installing	87
3.6	Carburetor	15	7.1	Ignition Timing	52	10.2	Throttle Trigger/ Lockout Lever	87
3.7	Engine	18	7.2	Preseparator	52	10.3	Throttle Trigger/ Lockout Lever – QuickStop Super	89
4.	Clutch	19	7.3	Install new Ignition Module	52	10.3.1	Switch Lever – QuickStop Super	91
4.1	Clutch Drum	20	7.4	Testing the Ignition Module	54	10.3.2	Lockout Lever – QuickStop Super	91
5.	Chain Brake	21	7.5	Spark Plug Boot / Ignition Lead	56	10.3.3	Choke Rod	92
5.1	Checking Operation	21	7.6	Flywheel	57	10.3.4	Throttle Rod	93
5.2	Brake Band	21	7.7	Short Circuit Wire	58	11.	Chain Lubrication	95
5.3	Brake Lever	23	7.7.1	Testing	58	11.1	Pickup Body	95
5.4	Brake lever on machines with QuickStop Super	25	7.7.2	Removing and Installing	58	11.2	Oil Suction Hose	95
5.4.1	Adjusting the brake cable	27	7.7.3	Ground Wire	62	11.3	Oil Pump	96
5.4.2	Brake cable	28	7.7.4	Contact Spring	62	11.4	Valve	97
5.5	Cam Lever	29	7.8	Ignition System Troubleshooting	64			
5.6	Pins	30	8.	Rewind Starter	67			
5.7	Chain Tensioner	32	8.1	General	67			
5.7.1	Quick chain tensioner	32	8.2	Fan housing	67			
5.8	Bar Mounting Studs	33	8.3	Pawls	68			
5.9	Collar Nuts for Sprocket Cover	34	8.4	ErgoStart	69			
			8.5	Rope Rotor	70			
			8.6	Starter Rope / Grip	71			
			8.7	Tensioning the Rewind Spring	73			
			8.8	Replacing the Rewind Spring	73			

RA_573_0_01_02

Contents

12. Fuel System	98	13. Heating System	130
12.1 Air Filter	98	13.1 Carburetor Heating	130
12.2 Baffle	98	13.1.1 Testing the Complete System	130
12.3 Filter Base	98	13.1.2 Testing the Heating Element	130
12.4 Air Guide Shrouds	100	13.1.3 Thermostatic Switch	131
12.4.1 Air Guide Shrouds – Models with Manual Fuel Pump	101	13.2 Carburetor Heating System Troubleshooting Chart	132
12.4.2 Air Guide Shrouds – Models with Heating	104	13.3 Handle Heating System Troubleshooting	133
12.5 Carburetor	109	13.3.1 Troubleshooting	133
12.5.1 Leakage Test	111	13.4 Heater Switch	133
12.6 Servicing the Carburetor	112	13.5 Heating Element in Rear Handle	135
12.6.1 Metering Diaphragm	112	13.6 Heating Element in Handlebar	136
12.6.2 Inlet Needle	113	13.7 Generator	137
12.6.3 Pump Diaphragm	114	13.7.1 Handle Heating and Generator Troubleshooting Chart	139
12.6.4 Levers on Throttle Shaft	115	13.7.2 Test Connections and Test Values	141
12.6.5 Adjusting Screws	116	13.8 Wiring Harness	143
12.7 Adjusting the Carburetor	118	14. Special Servicing Tools	147
12.7.1 Basic Setting	118		
12.7.2 Standard setting	119	15. Servicing Aids	149
12.8 Carburetor Carrier	120		
12.9 Intake Manifold	121		
12.10 Tank Vent	122		
12.10.1 Testing	122		
12.10.2 Removing and Installing	123		
12.11 Fuel Intake	123		
12.11.1 Pickup Body	123		
12.11.2 Fuel Hose	124		
12.11.3 Fuel Hose – Models with Manual Fuel Pump	125		
12.11.4 Manual Fuel Pump	127		
12.11.5 Tank Housing	128		

1. Introduction and Safety Precautions

1.1 Introduction

This service manual contains detailed descriptions of all the repair and servicing procedures specific to this power tool.

You should make use of the illustrated parts lists while carrying out repair work. They show the installed positions of the individual components and assemblies.

Refer to the latest edition of the relevant parts list to check the part numbers of any replacement parts.

A fault on the machine may have several causes. To help locate the fault, consult the troubleshooting charts for all assemblies and systems in this manual and the "STIHL Service Training System".

Refer to the "Technical Information" bulletins for engineering changes which have been introduced since publication of this service manual. Technical information bulletins also supplement the parts list until a revised edition is issued.

The special tools mentioned in the descriptions are listed in the chapter on "Special Servicing Tools" in this manual. Use the part numbers to identify the tools in the "STIHL Special Tools" manual. The manual lists all special servicing tools currently available from STIHL.

Symbols are included in the text and pictures for greater clarity. The meanings are as follows:


In the descriptions:

- Action to be taken as shown in the illustration above the text
- Action to be taken that is not shown in the illustration above the text

In the illustrations:

- ➔ Pointer
- ➔ Direction of movement
- 📖 4.2 =Reference to another chapter, i.e. chapter 4.2 in this example.


Service manuals and all technical information bulletins are intended exclusively for the use of properly equipped repair shops. They must not be passed to third parties.

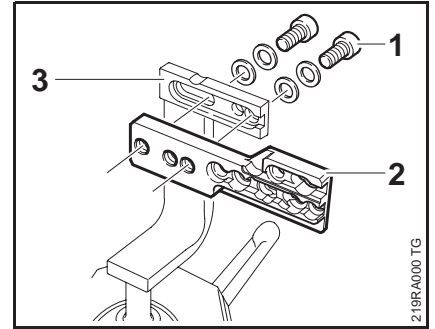

Servicing and repairs are made considerably easier if the machine is mounted to assembly stand (3) 5910 890 3100. To do this, secure the mounting plate (2) 5910 850 1650 to the assembly stand with two screws (1) and washers.


The screws must not project since they, depending on the machine, may damage housings when the machine is clamped in position.

The above operation is not necessary with the new assembly stand 5910 890 3101 since the mounting plate is already fitted.

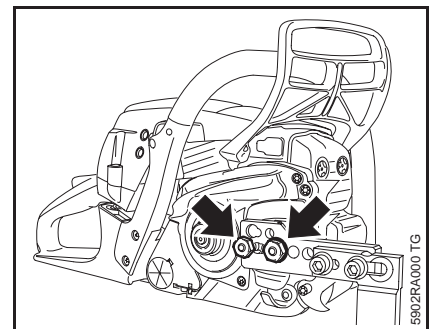

Engage the bar mounting studs in the outer bores in the mounting plate and secure the machine in position with the M 8 nuts (arrows).

Machines with Quick Chain Tensioner

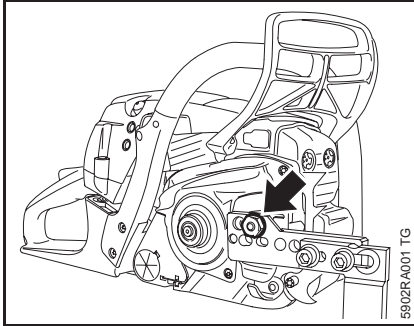

Engage the bar mounting stud in the outer bore in the mounting plate and secure the machine in position with the M 8 nut (arrow).

The machine is held in position on the mounting plate by the screw heads on the engine housing.

Preparations for servicing

Remove the chain sprocket cover, saw chain and guide bar before carrying out repairs or mounting the machine to the assembly stand.

Always use original STIHL replacement parts.

They can be identified by the STIHL part number, the **STIHL** logo and the STIHL parts symbol .

This symbol may appear alone on small parts.

Storing and disposing of oils and fuels

Collect fuel or lubricating oil in a clean container and dispose of it properly in accordance with local environmental regulations.

1.2 Safety Precautions

If the machine is started up in the course of repairs or maintenance work, observe all local and country-specific safety regulations as well as the safety precautions and warnings in the instruction manual.

Gasoline is an extremely flammable fuel and can be explosive in certain conditions.

Exercise extreme caution while carrying out maintenance and repair work on the ignition system. The high voltages which occur can cause serious or fatal accidents.

Always wear suitable protective gloves for operations in which components are heated for assembly or disassembly.

Improper handling may result in burns or other serious injuries.

Do not smoke or bring any fire, flame or other source of heat near the fuel. All work with fuel must be performed outdoors only. Spilled fuel must be wiped away immediately.

Always perform leakage test after working on the fuel system and the engine.

Always replace damaged parts. Check disassembled parts for wear or damage before re-installing – replace as necessary.

Run the machine only with the shroud mounted in position – there is otherwise a risk of injury from the fanwheel and a risk of engine damage due to overheating.


The chapter on tightening torques lists all machine components that have to be tightened to a specific torque or coated with threadlocking adhesive. The specifications must be maintained when tightening down screws, nuts and other fasteners in all the procedures described in this service manual.

Fuel system – hose barb connectors


Pull off or push on fuel hoses in line with the connector, preferably by hand, to ensure the tightness of the fuel system.

Avoid damaging the hose barb – do not use sharp-edged pliers, screwdrivers, etc. Do not cut open fuel hoses with a knife or similar tool.

Do not re-use fuel hoses after removal. Always install new hoses – fuel hoses can be overstretched during removal.

Install new fuel hoses either dry or with the aid of STIHL press fluid,  15.

Other press fluids are not approved and may result in damage to the fuel hoses.

Coat the ends of the hoses and the connectors with STIHL press fluid and then push the new hoses on to the hose barbs,  15.

2. Specifications

2.1 Engine

	MS 261
Displacement:	50.2 cm ³
Bore:	44.7 mm
Stroke:	32.0 mm
Engine power to ISO 7293:	2.8 kW (3.8 bhp) at 9,500 rpm
Maximum permissible engine speed with bar and chain:	14,000 rpm
Idle speed:	2,800 rpm
Clutch:	Centrifugal clutch without linings
Clutch engages at:	3,600 rpm
Crankcase leakage test at gauge pressure:	0.5 bar
under vacuum:	0.5 bar

2.2 Fuel System

Carburetor leakage test at gauge pressure:	0.8 bar
Operation of tank vent at gauge pressure:	0.5 bar
Fuel:	as specified in instruction manual

2.3 Ignition System

Air gap between ignition module and fanwheel:	0.20 (+ 0.1/- 0.05) mm
Spark plug (resistor type):	NGK BPMR 7 A BOSCH WSR6F
Electrode gap:	0.5 mm

2.4 Chain Lubrication

Speed-controlled oil pump with reciprocating piston and manual flow control

Settings for oil delivery rate:

min.:	4.5 (+/2.0) cm ³ /min at 10,000 rpm
Ematic	8.5 (+/3.0) cm ³ /min at 10,000 rpm
max.:	11.5 (+/3.0) cm ³ /min at 10,000 rpm

2.5 Tightening Torques

DG and P (Plastoform) screws are used in polymer and light metal components. These screws form a permanent thread when they are installed for the first time. They can be removed and installed as often as necessary without impairing the strength of the screwed assembly, providing the specified tightening torque is observed.

For this reason it is **essential to use a torque wrench**.

Fastener	Thread size	For component	Torque Nm	Remarks
Screw	P 4x12	Cover plate/sprocket cover (quick chain tensioner)	2.5	
Screw	M 4x8	Chain tensioner cover plate/crankcase	2.0	
Screw	P 5x16	Antivibration spring / handle housing	3.0	
Screw	M 4x16	Antivibration spring / crankcase	3.5	4)
Screw	M 4x12	Brake band/crankcase	3.0	1), 4)
Screw	P 4x10	Brake cable retainer/ tank housing (Q)	1.7	
Collar screw	M 8	Collar stud for bar	23.0	1)
Collar screw	M 8/M 10	Collar stud for bar (BE)	30.0	2)
Screw	M 4x12	Cover, chain brake/crankcase	3.0	4)
	M 10x1	Decompression valve	14.0	
Screw	M 4x9.6	Spark arresting screen/muffler	1.0	
Screw	M 12x0.75	Housing / switch (VW)	3.0	
Screw	M 4x12	Generator / crankcase (VW)	3.0	3)
Screw	P 6x32.5	Handlebar/tank housing	7.0	
Screw	P 6x30	Handlebar / tank housing (VW)	8.0	4)
Screw	M 6x26	Handlebar / bushing(VW)	8.0	2)
Screw	M 5x16	Handlebar / plug, antivibration spring (VW)	6.0	3), 4)
Screw	M 5x20	Hand guard/fan housing/crankcase	6.0	4)
Screw	P 6x30	Chain catcher/crankcase/bearing plug	8.0	
Screw	M 5x16	Spiked bumper / crankcase / upper locknut	8.0	3), 4)
Lock nut	M 5	Spiked bumper / crankcase / upper locknut	8.0	
Screw	M 5x16	Spiked bumper/crankcase, bottom	8.0	3), 4)
Screw	M 4x12	Manifold/cylinder	3.0	4)
Screw	M 5x25	Crankcase, sprocket side/fan side	10.0	4)
Screw	M 5x16	Bearing plug/cylinder	10.0	3), 4)
Screw	M 5x16	Fan housing/crankcase	6.0	4)
Screw	M 4x12	Air baffle/crankcase	1.5	4)
Carrier	M 12x1 L	Carrier / crankshaft	50.0	

Fastener	Thread size	For component	Torque Nm	Remarks
Screw	M 4x12	Oil pump/crankcase	3.0	4)
Screw	M 5x16	Muffler/crankcase	10.0	3), 4)
Screw	M 5x16	Muffler / cylinder	10.0	3), 4)
Nut	M 8x1	Flywheel/crankshaft	28.0	5)
Screw	M 4x12	Thermostatic switch / carburetor (VW)	2.0	
Collar nut	M 5	Carburetor / collar screw, 1st stage, fan side	2.0	
Collar nut	M 5	Carburetor / collar screw, 2nd stage, sprocket side	3.5	
Collar nut	M 5	Carburetor / collar screw, 3rd stage, fan side	3.5	
Screw	M 5x16	Preseparator/crankcase	3.0	4)
	M 14x1.25	Spark plug	25.0	
Screw	M 4x20	Ignition module/crankcase	4.0	3)
Screw	M 5x20	Cylinder/crankcase, 1st stage	4.0	4)
Screw	M 5x20	Cylinder/crankcase, 2nd stage	10.0	4)

Remarks:

- 1) Loctite 242 or 243, medium strength
- 2) Loctite 270, high strength
- 3) Micro-encapsulated screws
- 4) Screws with binding head
- 5) Degrease crankshaft/flywheel and mount oil-free
- VW) Carburetor and handle heating system
- Q) QuickStop Super
- BE) Quick chain tensioner/ErgoStart

Use the following procedure when refitting a DG or P screw in an existing thread:

Place the screw in the hole and rotate it counterclockwise until it drops down slightly.
Tighten the screw clockwise to the specified torque.

This procedure ensures that the screw engages properly in the existing thread and does not form a new thread and weaken the assembly.

Coat micro-encapsulated screws with medium strength Loctite 242 or 243 before reinstalling.

Power screwdriver setting for polymer: DG and P screws max. 500 rpm
Do not use an impact wrench for releasing or tightening screws.

Do not mix up screws with and without binding heads.

3. Troubleshooting

3.1 Clutch

Condition	Cause	Remedy
Saw chain stops under full load	Clutch shoes badly worn	Install new clutch
	Clutch drum badly worn	Install new clutch drum
Saw chain rotates at idle speed	Engine idle speed too high	Readjust idle speed screw LA
	Clutch springs stretched	Replace the clutch springs or install new clutch
	Clutch springs broken	Replace the clutch springs
Loud noises	Clutch springs stretched	Replace all clutch springs
	Needle cage damaged	Fit new needle cage
	Clutch shoe retainer broken	Install new retainer or clutch
	Clutch shoes and carrier worn	Install new clutch

3.2 Chain Drive, Chain Brake, Chain Tensioner

Condition	Cause	Remedy
Chain sprocket wears rapidly	Chain not properly tensioned	Tension chain as specified
	Wrong chain pitch	Fit chain of correct pitch
	Insufficient chain lubrication	Check chain lubrication
Saw chain stops under full load	Clutch shoes badly worn	Install new clutch
	Clutch drum badly worn	Install new clutch drum
	Brake band blocked	Check freedom of movement and operation of brake band
Saw chain rotates at idle speed	Engine idle speed too high	Readjust idle speed screw LA
	Clutch springs stretched	Replace the clutch springs or install new clutch
	Clutch springs broken	Replace the clutch springs
Saw chain does not stop immediately when brake is activated	Brake spring stretched or broken	Fit new brake spring
	Brake band stretched or worn	Fit new brake band
	Clutch drum worn	Install new clutch drum

Condition	Cause	Remedy
QuickStop Super Coasting brake does not disengage even though interlock lever is depressed	Brake cable stretched	Readjust brake cable
	Brake cable disconnected or broken	Reconnect or replace brake cable
QuickStop Super Coasting brake does not disengage properly even though interlock lever is depressed	Too much free travel on interlock lever	Adjust brake cable
QuickStop Super Braking action of coasting brake inadequate – interlock lever not depressed	Brake cable overtensioned	Adjust brake cable

3.3 Chain Lubrication

In the event of trouble with the chain lubrication system, check and rectify other sources of faults before disassembling the oil pump.

Condition	Cause	Remedy
Chain receives no oil	Oil inlet hole in guide bar is blocked	Clean oil inlet hole
	Intake hose or pickup body clogged or intake hose ruptured	Fit new intake hose and pickup body
	Valve in oil tank blocked	Clean or replace valve
	Teeth on worm worn	Install new worm
	Oil pump damaged or worn	Install new oil pump
Machine losing chain oil	Oil pump damaged or worn	Install new oil pump
	Oil suction hose connection damaged	Install new oil intake hose
	Gasket between two halves of crankcase faulty or crankcase cracked	Install new gasket, inspect both halves of crankcase and replace if necessary
Oil pump delivers insufficient oil	Oil pump damaged or worn	Install new oil pump
	Oil pump delivery rate set too low	Adjust oil pump (only on version with adjustable oil pump)
	Worm driver is loose	Install new worm

3.4 Rewind Starter

Condition	Cause	Remedy
Starter rope broken	Rope pulled out too vigorously as far as stop or over edge, i.e. not vertically	Fit new starter rope
	Normal wear	Fit new starter rope
Starter rope does not rewind	Rewind spring very dirty or corroded	Clean or replace rewind spring
	Insufficient spring tension	Check rewind spring and increase tension
	Rewind spring broken	Fit new rewind spring
Starter rope cannot be pulled out far enough	Spring overtensioned	Check rewind spring and reduce tension
Starter rope can be pulled out almost without resistance (crankshaft does not turn)	Guide pegs on pawls or pawls themselves are worn	Fit new pawls
	Spring clip on pawl fatigued	Fit new spring clip
	Spring clip installed wrong	Install spring clip correctly
...Models with ErgoStart	Torsion springs on flywheel fatigued, pawls worn or sticking	Clean seats on pawls or replace pawls and torsion springs if necessary
	Lugs on carrier worn	Install new carrier
	Spring loop in spring housing not attached to carrier	Attach spring loop to carrier
Starter rope is difficult to pull – models with ErgoStart	Spring in spring housing fatigued	Install new spring housing

Condition	Cause	Remedy
Starter rope is difficult to pull or rewinds very slowly	Starter mechanism is very dirty	Thoroughly clean complete starter mechanism
	At very low outside temperatures: Lubricating oil on rewind spring becomes viscous (spring windings stick together) or moisture has got onto the rewind spring (spring windings frozen together)	Coat rewind spring with a small amount of standard solvent-based degreasant (containing no chlorinated or halogenated hydrocarbons), then pull rope carefully several times until normal action is restored

3.5 Ignition System

Condition	Cause	Remedy
Engine runs roughly, misfires, temporary loss of power	Spark plug boot is loose	Press boot firmly onto spark plug and fit new spring if necessary
	Spark plug sooted, smeared with oil	Clean the spark plug or replace if necessary. If sooting keeps recurring, check air filter
	Ignition lead loose in ignition module	Install new ignition lead
	Fuel/oil mixture – too much oil	Use correct mixture of fuel and oil
	Incorrect air gap between ignition module and flywheel	Set air gap correctly
	Flywheel cracked or damaged or pole shoes have turned blue	Install new flywheel
	Ignition timing wrong, flywheel out of adjustment – key in flywheel has sheared off	Install new flywheel
	Weak magnetization in flywheel	Install new flywheel
Irregular spark	Check operation of switch shaft/contact spring and ignition module Faulty insulation or break in ignition lead or short circuit wire. Check ignition lead/ignition module and replace ignition module if necessary. Check operation of spark plug. Clean the spark plug or replace if necessary.	

3.6 Carburetor

Condition	Cause	Remedy
Carburetor floods; engine stalls	Inlet needle not sealing – foreign matter in valve seat or cone	Remove and clean the inlet needle, clean the carburetor
	Inlet needle worn	Replace the inlet needle
	Inlet control lever sticking on spindle	Check the inlet control lever and replace if necessary.
	Helical spring not located on nipple of inlet control lever	Remove the inlet control lever and refit it correctly
	Perforated disc on diaphragm is deformed and presses constantly against the inlet control lever	Fit a new metering diaphragm
	Metered diaphragm deformed	Fit a new metering diaphragm
Poor acceleration	Setting of low speed screw too lean	Check basic carburetor setting, correct if necessary
	Setting of high speed screw too lean	Check basic carburetor setting, correct if necessary
	Inlet needle sticking to valve seat	Remove inlet needle, clean and refit
	Diaphragm gasket leaking	Fit new diaphragm gasket
	Metering diaphragm damaged or shrunk	Fit a new metering diaphragm
	Tank vent faulty	Replace tank vent
	Leak on fuel hose from tank to carburetor	Seal connections or install new fuel hose
Engine loses power during acceleration	Sealing ring or spring in accelerator pump worn or damaged	Install new carburetor

Condition	Cause	Remedy
Engine will not idle, idle speed too high	Throttle shutter opened too wide by idle speed screw (LA)	Reset idle speed screw (LA) correctly
	Oil seals/crankcase leaking	Seal or replace oil seals/crankcase
	Throttle shutter does not close	Install new carburetor
Engine stops while idling	Idle jet bores or ports blocked	Clean the carburetor
	Low speed screw too rich or too lean	Reset low speed screw (L) correctly
	Setting of idle speed screw LA incorrect – throttle shutter completely closed	Reset idle speed screw (LA) correctly
	Tank vent faulty	Replace tank vent
	Leak on fuel hose from tank to carburetor	Seal connections or install new fuel hose
Saw chain rotates at idle speed	Engine idle speed too high	Readjust with idle speed screw LA (counterclockwise)
	Clutch springs stretched or fatigued	Replace the clutch springs or install new clutch
	Clutch spring hooks broken	Replace the clutch springs

Condition	Cause	Remedy
Engine speed drops quickly under load – low power	Air filter dirty	Clean air filter or replace if necessary
	Throttle shutter not opened fully	Check throttle cable and rod
	Tank vent faulty	Replace tank vent
	Fuel pickup body dirty	Install new pickup body
	Fuel strainer dirty	Clean fuel strainer in carburetor, replace if necessary
	Leak on fuel hose from tank to carburetor	Seal connections or install new fuel hose
	Setting of high speed screw H too rich	Check basic carburetor setting, correct if necessary
	Main jet bores or ports blocked	Clean the carburetor
	Pump diaphragm damaged or fatigued	Fit new pump diaphragm
Engine running extremely rich, has no power and a very low maximum speed	Ignition timing wrong, flywheel out of adjustment – key in flywheel has sheared off	Install new flywheel
	Choke shutter does not open	Check carburetor and choke shaft, service or replace if necessary




3.7 Engine


Always check and, if necessary, repair the following parts before looking for faults on the engine:

- Air filter
- Fuel system
- Carburetor
- Ignition system


Condition	Cause	Remedy
Engine does not start easily, stalls at idle speed, but operates normally at full throttle	Oil seals in crankcase damaged	Replace the oil seals
	Crankcase leaking or damaged (cracks)	Seal or replace the crankcase
Engine does not deliver full power or runs erratically	Piston rings worn or broken	Fit new piston rings
	Muffler / spark arresting screen carbonized	Clean the muffler (inlet and exhaust), replace spark arresting screen, replace muffler if necessary
	Air filter dirty	Clean or replace air filter
	Fuel hose kinked or torn	Fit new hose or position it free from kinks
	Decompression valve is not closed	Close, check and replace decompression valve if necessary
Engine overheating	Insufficient cylinder cooling. Air inlets in fan housing blocked or cooling fins on cylinder very dirty	Thoroughly clean all cooling air openings and the cylinder fins
	Air flow path into fan housing dirty	Clean air flow path into fan housing

4. Clutch


- Troubleshooting,  3
- Remove the clutch drum,  4.1
- Remove the shroud,  6.4.

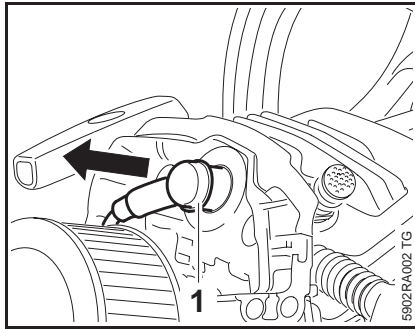


- Pull boot (1) off the spark plug.
- Unscrew the spark plug.

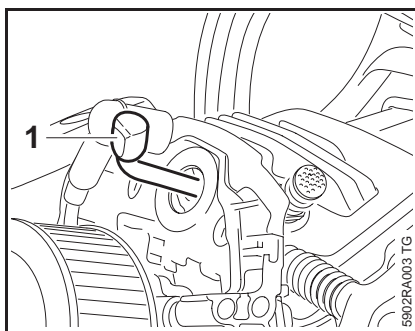

- Push the locking strip (1) 0000 893 5903 into the spark plug hole, wide end first, so that "OBEN-TOP" faces up.

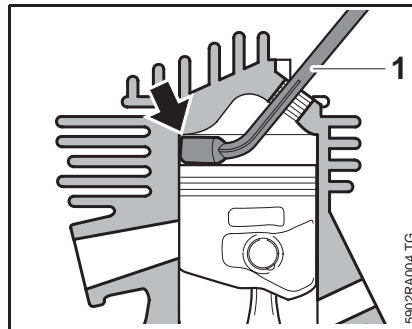


- The locking strip (1) 0000 893 5903 must butt against the cylinder wall (arrow) as shown.

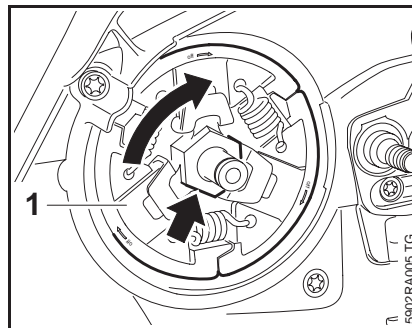

- Apply wrench to hexagon (arrow) and unscrew the clutch (1).


Note that the clutch has a left-hand thread.

Disassembling

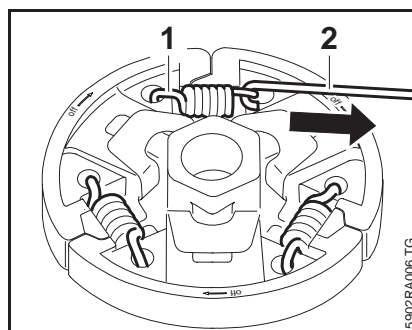


- Use hook (2) 5910 890 2800 to remove the clutch springs (1).


If the clutch is noticeably worn, replace all three clutch shoes at the same time – not individual shoes – since runout may otherwise affect correct operation of the clutch.

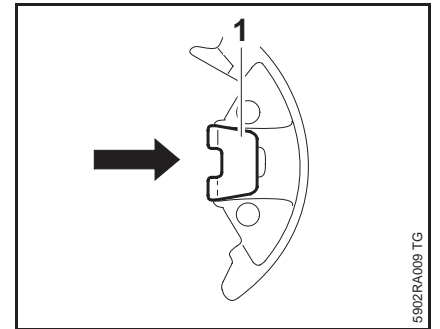


- Fit the retainers (1).

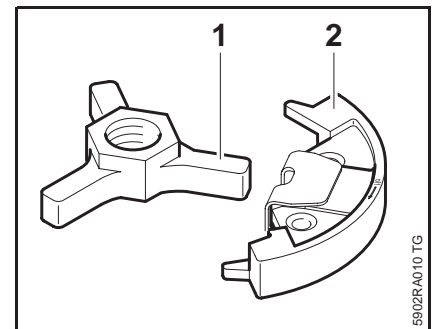

- Fit the clutch shoes (2) over the arms (1).

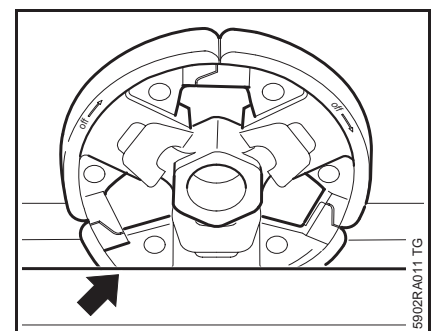


- Clamp the clutch in a vise (arrow).

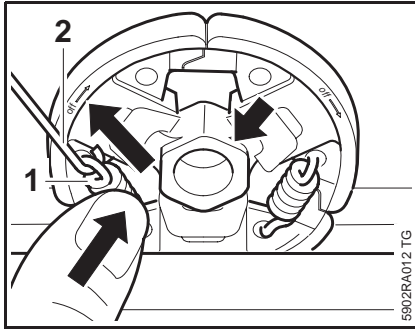


Attach the springs on the side with the raised hexagon (arrow).

- Attach one end of each spring (1) to the clutch shoes.
- Use the hook (2) 5910 890 2800 to attach the other ends of the springs and press them firmly into the clutch shoes.

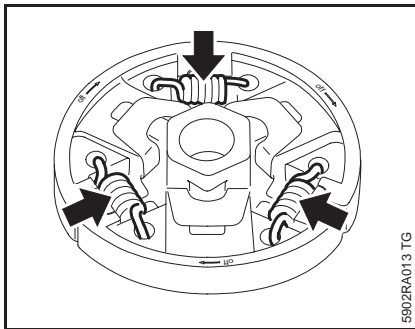


- Check the clutch – all springs (arrows) must be properly attached.

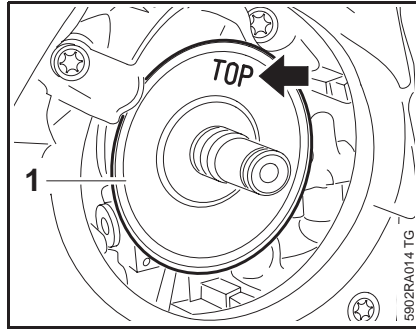

Make sure the washer (1) is in place.


Installed position is correct when "TOP" (arrow) faces outwards.

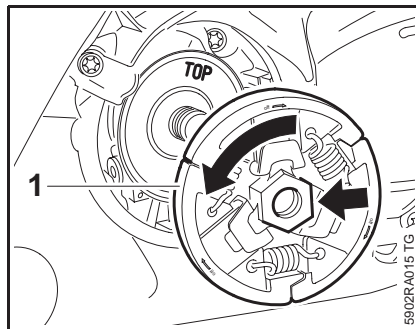

- Position the clutch on the crankshaft stub so that the raised hexagon (arrow) faces outwards.
- Fit the clutch (1) and tighten it down firmly – left-hand thread.
- Remove the locking strip from the cylinder.
- Reassemble all other parts in the reverse sequence.


4.1 Clutch Drum

- Remove and install the clutch drum, see instruction manual.

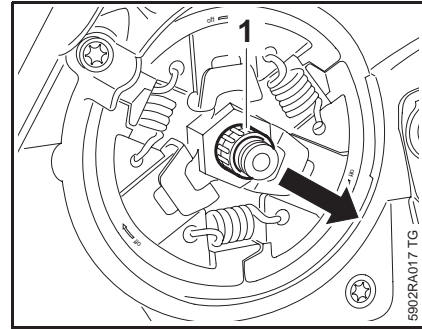

- Pull off the needle cage (1).

- Clean the needle cage and crankshaft stub, 15
- Lubricate the needle cage and crankshaft stub, 15

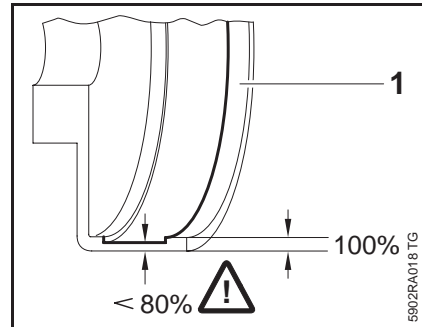

- Inspect the clutch drum (1) for signs of wear.

If there are signs of serious wear on the inside diameter of the clutch drum (1), check the remaining wall thickness. If it is less than about 80% of the original thickness, install a new clutch drum.

- Install the clutch drum.

5. Chain Brake

5.1 Checking Operation

The chain brake is one of the most important safety devices on the chain saw. Its efficiency is measured in terms of the chain braking time, i.e. the time that elapses between activating the brake and the saw chain coming to a complete standstill.

Contamination (with chain oil, chips, fine particles of abrasion, etc.) and smoothing of the friction surfaces of the brake band and clutch drum impair the coefficient of friction, which prolongs the braking time. A fatigued or stretched brake spring has the same negative effect.

- Starting the engine
- With the chain brake activated (locked), open the throttle wide for a brief period (max. 3 seconds) – the chain must not rotate.
- With the chain brake released, open the throttle wide and activate the brake manually – the chain must come to an abrupt stop.


Machines with QuickStop Super

The clutch drum must rotate freely when the interlock lever is depressed.



With the coasting brake disengaged, open the throttle wide and let go of the interlock lever on the rear handle – the chain must come to an abrupt stop.


All models

The braking time is in order if deceleration of the saw chain (less than a second) is imperceptible to the eye.

If the chain brake does not operate properly, refer to troubleshooting,  3.2.


5.2 Brake Band

- Remove the clutch drum,  4.1
- Troubleshooting,  3.2

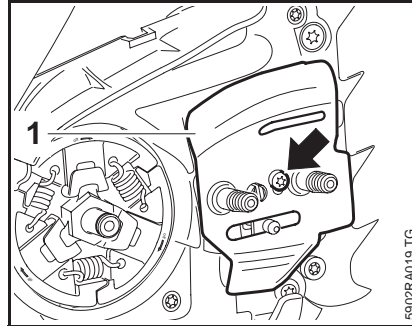


- Take out the screw (arrow) and remove the side plate (1).

Machines with Quick Chain Tensioner

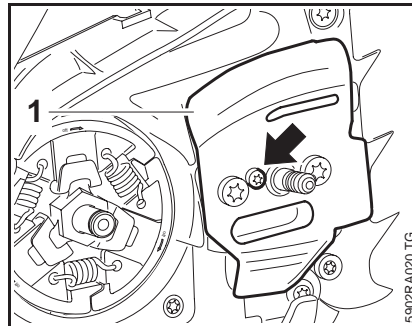


- Take out the screw (arrow) and remove the side plate (1).

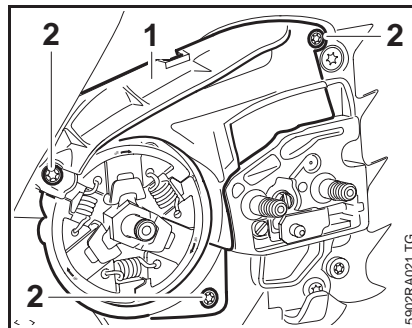


- Take out the screws (2).

- Remove the cover (1).

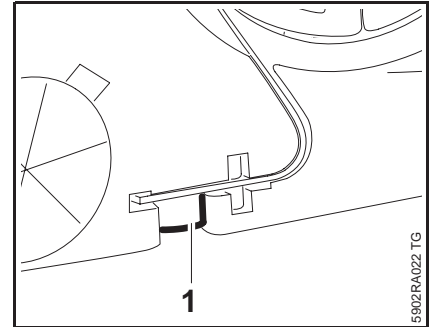

- Engage the chain brake.
 - Brake band no longer tensioned in its seat.

- Remove the screw (1) from the underside of the machine.

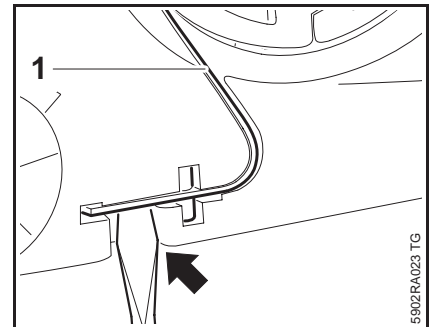


- Pry the brake band (1) out of its seat (arrow).


- Remove the brake band (1).

Do not overstretch the brake band.


- Disengage the chain brake
 - the brake band can be disconnected when the brake lever is in this position.

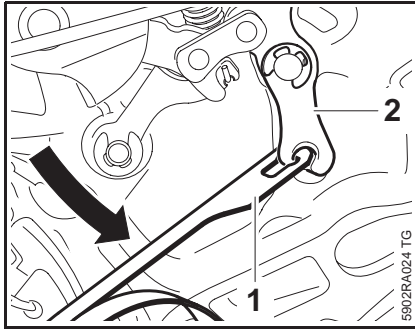


- Turn the brake band (1) to one side and disconnect it from the brake lever (2).

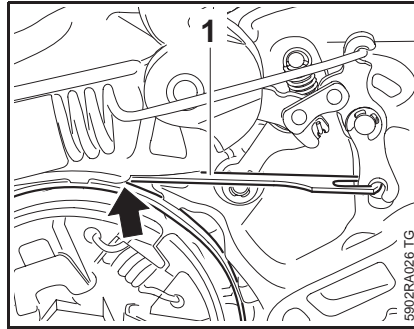


- Position the brake band (1) in the guide (arrow).
- Engage the chain brake.

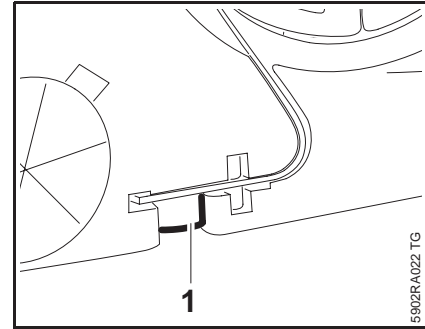


- Fit the screw (1) on the underside of the machine and tighten it down firmly.

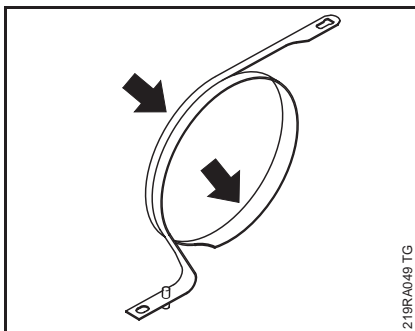

Install a new brake band if there are noticeable signs of wear (large areas on inside diameter and/or parts of outside diameter – arrows) and its remaining thickness is less than 0.6 mm.

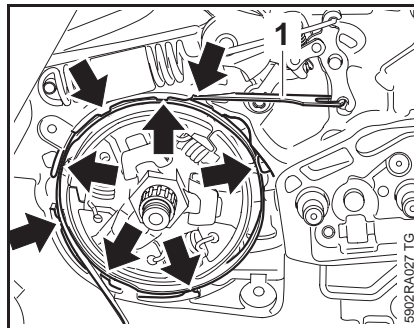


- Push the brake band (1) over the guide lugs (arrows) and into its seat.

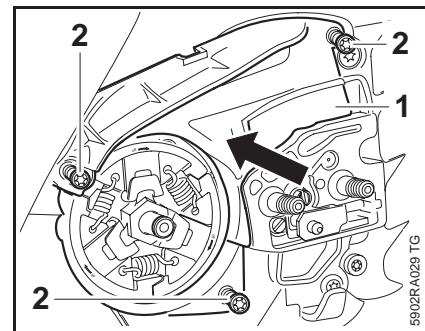


- Place the cover (1) in position.
- Insert and tighten down the screws (2) firmly.
- Install the clutch drum, [4.1](#)
- Check operation, [5.1](#)
- Reassemble all other parts in the reverse sequence.

Installing

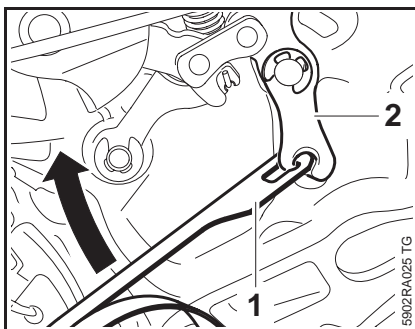



– Disengage the chain brake

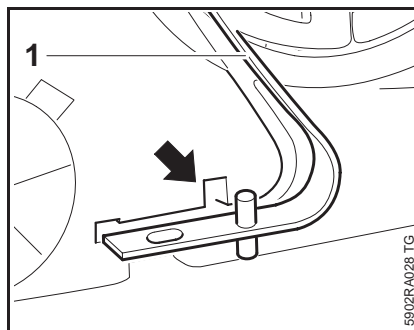
- Hold the brake band (1) sideways, attach it to the brake lever (2) and then swing it in the direction of its seat.



- Push the brake band (1) into its seat (arrow) as far as stop.


5.3 Brake Lever


- Troubleshooting,  3.2
- Remove the brake band,  5.2

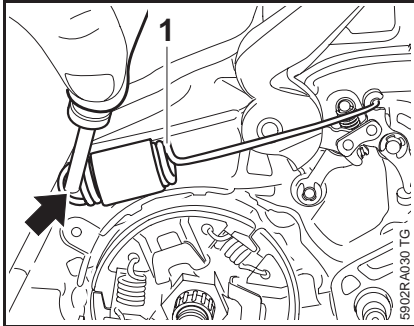


- Engage the chain brake.

The brake spring is now relaxed.


- Use the assembly tool 1117 890 0900 to disconnect the brake spring (1) from the anchor pin (arrow).
- Remove the brake spring from the brake lever.
- Remove the shroud,  6.4

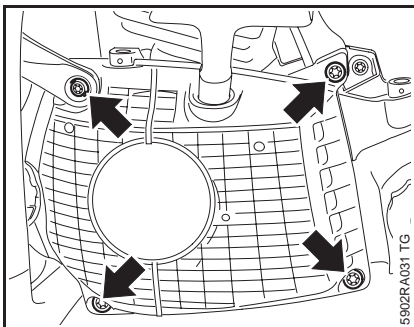


- Take out the screws (arrows).
- Lift the hand guard a little and remove the fan housing.

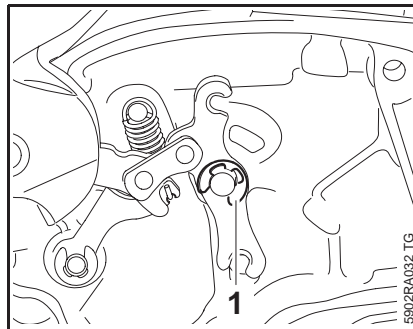

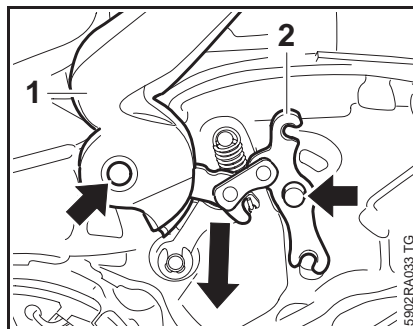

- Remove the E-clip (1).



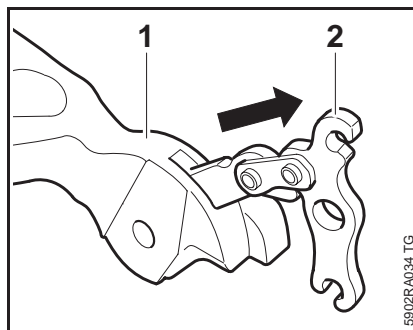

- Pull the hand guard (1) and brake lever (2) off the pivot pins (arrows) together.
- Remove the hand guard and brake lever.




- Take the brake lever (2) out of the hand guard (1).


- Inspect the pivot pins and replace if necessary,  5.6
- Inspect the cam lever and replace if necessary,  5.5

Installing


- Clean the pivot pins and disassembled parts,  15
- Lubricate the pivot pins,  15

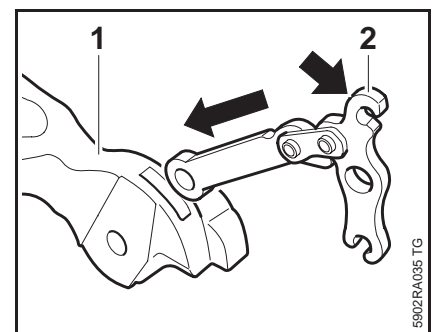


- Hold the brake lever (2) so that the brake spring attachment point (arrow) is at the top.
- Push the brake lever (2) into the recess in the hand guard (1) and line up the holes.

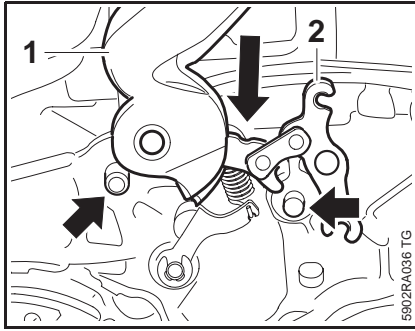

- Push the hand guard (1) with brake lever (2) over the machine until they are positioned against the pivot pins (arrows).

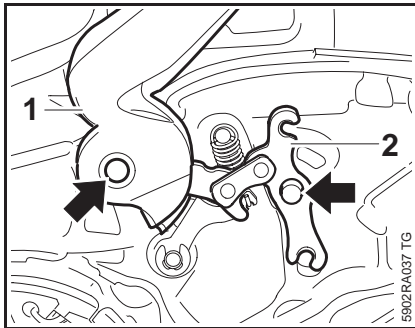


- Lift the bearing boss of the hand guard (1) and the brake lever (2) a little and position them over the pivot pins (arrows).

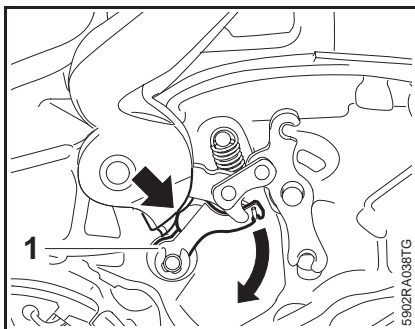


- Turn the cam lever (1) to one side until the cam of the hand guard (arrow) slips past it.

- Push the hand guard bearing boss and the brake lever on to the pivot pins.

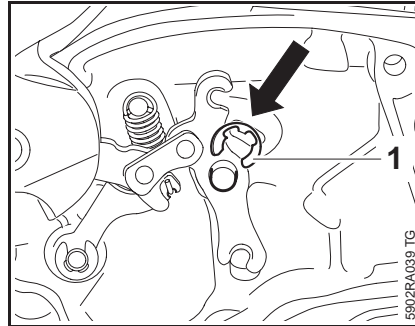


- Fit the E-clip (1).

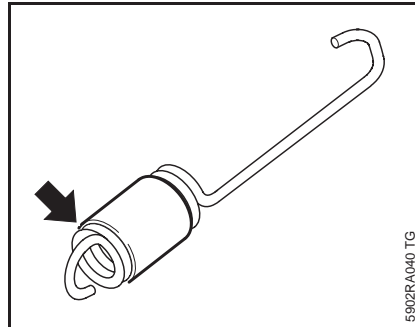


The turns of brake spring must be tightly against one another in the relaxed condition. If this is not the case, replace the brake spring.

- Position the protective tube so that it leaves the first turn (arrow) free.
- If the groove in the spring's anchor pin is worn, install a new pin, 5.6

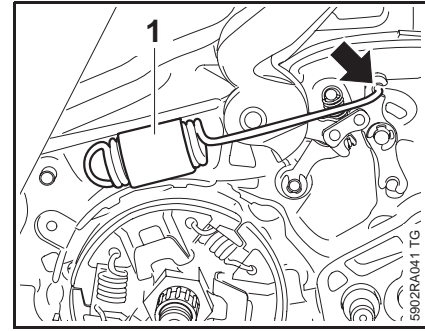

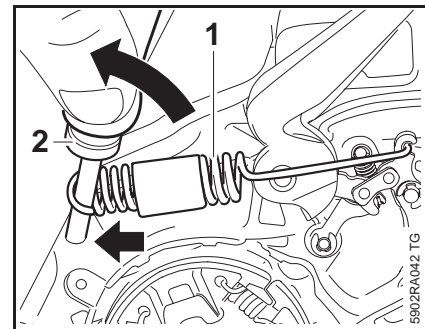

- Attach the brake spring (1) to the brake lever (arrow).




- Use the assembly tool (2) 1117 890 0900 to attach the brake spring (1) to the anchor pin (arrow).

- Lubricate the brake lever, cam lever and slot in hand guard, 15
- Reassemble all other parts in the reverse sequence.


5.4 Brake lever on machines with QuickStop Super


- Troubleshooting,  3.2
- Remove the brake band,  5.2

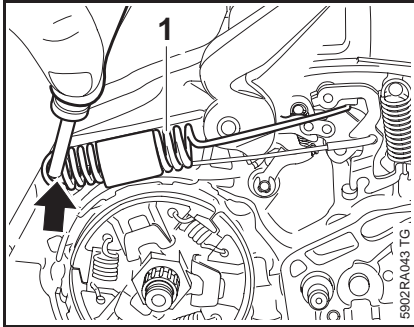


- Engage the chain brake.

The brake spring is now relaxed.


- Use the assembly tool 1117 890 0900 to disconnect the brake spring (1) from the anchor pin (arrow).
- Remove the brake spring from the brake lever.
- Remove the shroud,  6.4

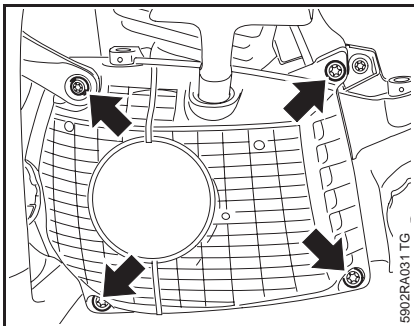


- Take out the screws (arrows).
- Lift the hand guard a little and remove the fan housing.

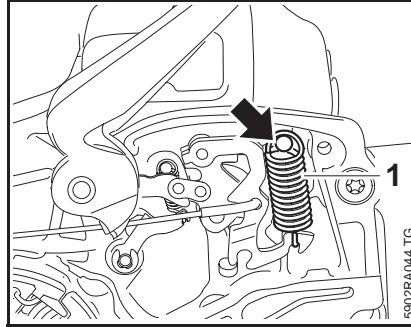


- Disconnect the spring (1) from the anchor pin (arrow).
- Remove the brake spring (1) from the brake lever.

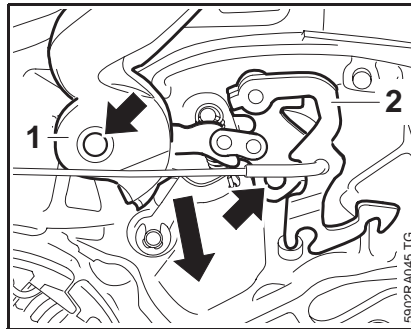

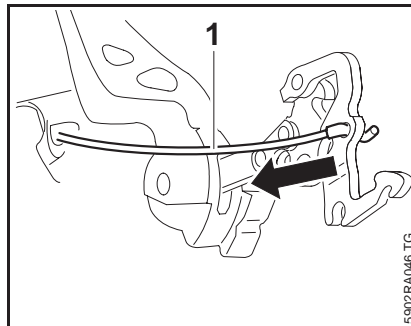

- Pull the hand guard (1) and brake lever (2) off the pivot pins (arrows) together.
- Remove the hand guard and brake lever.



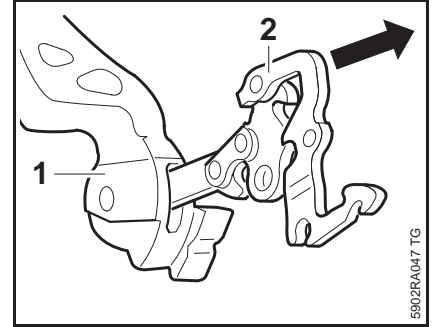


- Disconnect the brake cable (1).




- Take the brake lever (2) out of the hand guard (1).
- Inspect all pivot pins and replace if necessary,  5.6
- Inspect the cam lever and replace if necessary,  5.5

Installing


- Clean the pivot pins and disassembled parts,  15
- Lubricate the pivot pins,  15

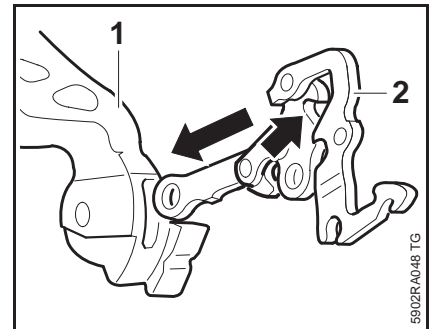


- Hold the brake lever (2) so that the brake spring attachment point (arrow) is at the top.
- Push the brake lever (2) into the recess in the hand guard (1) and line up the holes.

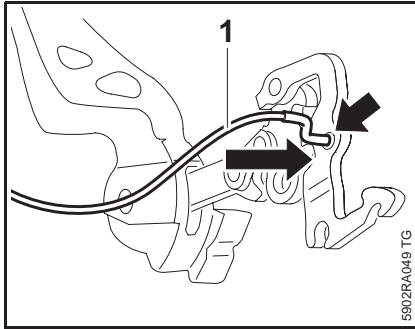

- Fit the brake cable (1) in the hole (arrow).

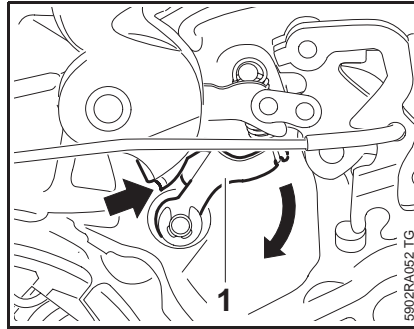


- Turn the cam lever (1) to one side until the cam of the hand guard (arrow) slips passed it.
- Push the hand guard bearing boss and the brake lever on to the pivot pins.

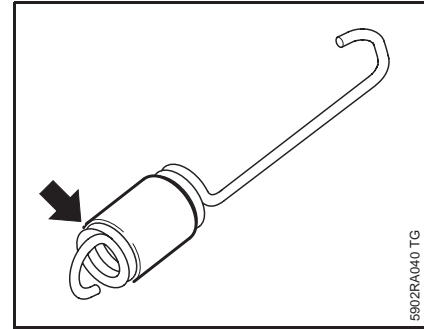


The turns of brake spring must be tightly against one another in the relaxed condition. If this is not the case, replace the brake spring.


- Position the protective tube so that it leaves the first turn (arrow) free.

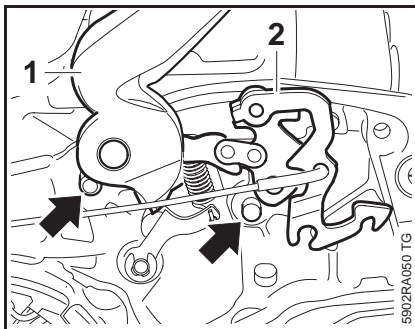


- Push the hand guard (1) with brake lever (2) over the machine until they are positioned against the pivot pins (arrows).

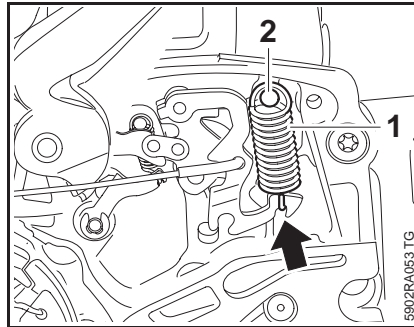


- Attach the spring (1) to the brake lever (arrow) so that the open side of the spring hook (arrow) is visible.
- Attach the spring (1) to the anchor pin (2).

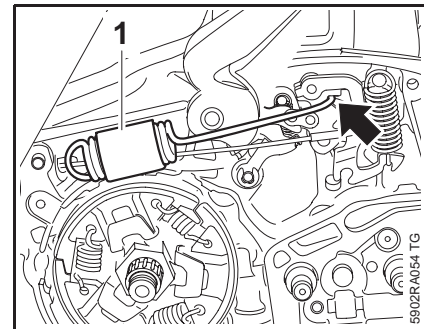

- Attach the spring (1) to the brake lever (arrow).

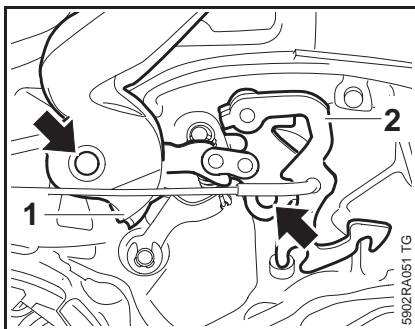

- Lift the bearing boss of the hand guard (1) and the brake lever (2) a little and position them over the pivot pins (arrows).

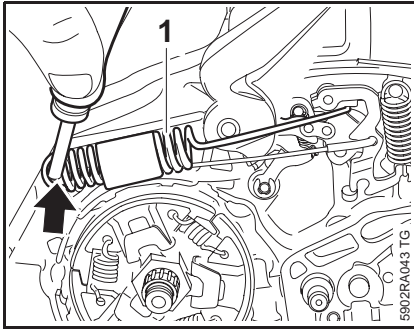

- Use the assembly tool 1117 890 0900 to disconnect the brake spring (1) from the anchor pin (arrow).

- Lubricate the brake lever, cam lever and slot in hand guard, 15
- Adjust the brake cable, 5.4.1
- Reassemble all other parts in the reverse sequence.


5.4.1 Adjusting the brake cable

If problems occur on the coasting brake even though the brake band is in order, the reason may be the adjustment of the brake cable.


- Troubleshooting, 3.2

Checking the brake cable

- Remove the chain brake cover, 5.2

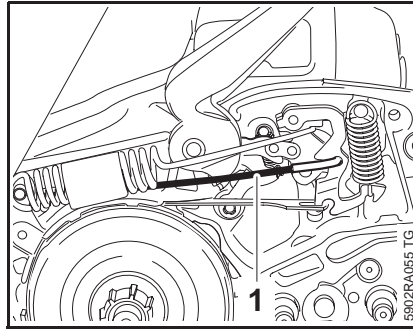


The brake cable (1) must be relaxed when the interlock lever is released.

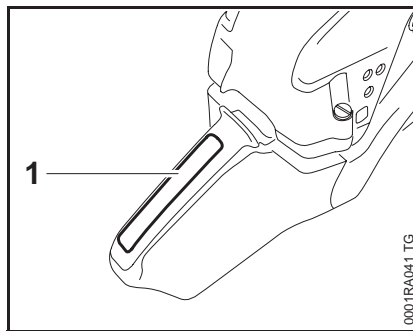


- Disengage the coasting brake.

- Press down the interlock lever (1) and hold it in that position.

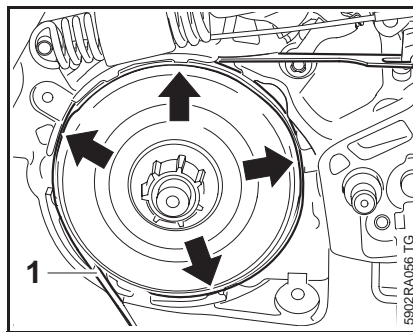

The brake band (1) must locate against the crankcase (arrows) without any play
– the clutch drum must rotate freely.

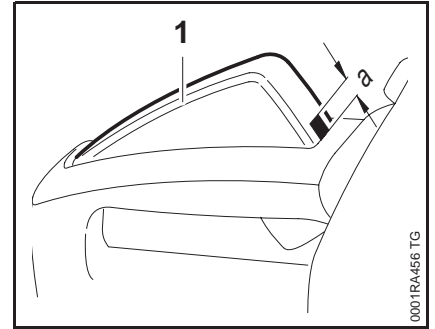

- Release the interlock lever (1).
- Carefully press the interlock lever (1) to check free travel.

- Free travel must be within the mark (a).


Free travel is the distance the interlock lever (1) can be depressed without the brake lever moving.

A certain free travel is necessary to guarantee correct operation of the coasting brake.


- Troubleshooting, 3.2

Adjust brake cable


- Remove the throttle rod, 10.3.4
- Fit the handle molding, 10.3

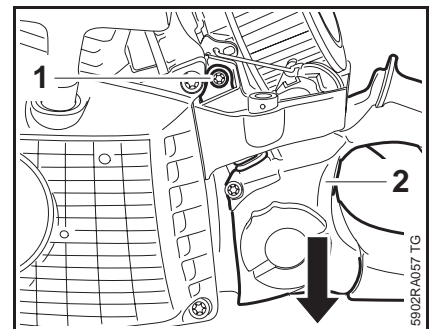

- Take out the screw (1).
- Lower the tank housing (2).

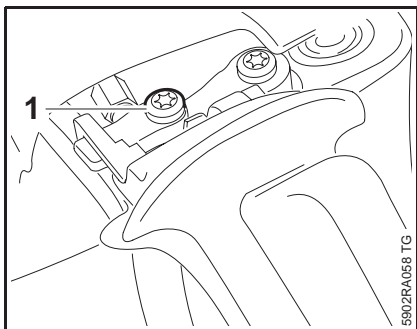


- Loosen the clamp screw (1) on the brake cable retainer.

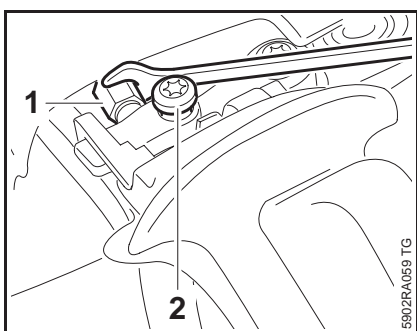


- Use 6mm open end wrench the set free travel on the adjusting screw (1).
- Turn adjusting screw clockwise to increase free travel.
- Turn adjusting screw counterclockwise to reduce free travel.
- When the setting is correct, tighten down the clamp screw (2) firmly.
- Install the throttle rod, 10.3.4
- Fit the handle molding, 10.3
- Reassemble all other parts in the reverse sequence.

5.4.2 Brake cable


- Disconnect the brake spring, 5.3
- Remove the carburetor carrier, 12.8
- Remove the air guide shrouds, 12.4
- Remove the throttle trigger, 10.3
- Remove the switch lever, 10.3.1

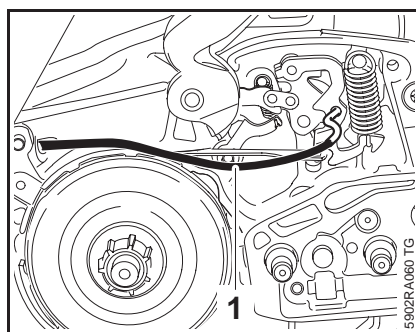

- Pull out the brake cable (1) a little and disconnect it.

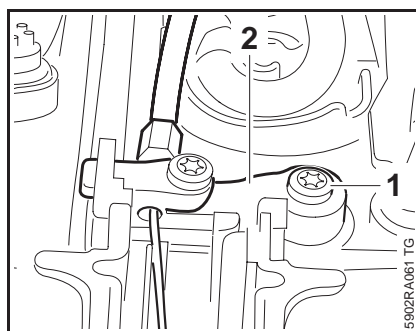


- Take out the screw (1).
- Remove the brake cable retainer (2) with brake cable.
- Pull the brake cable out of the crankcase.

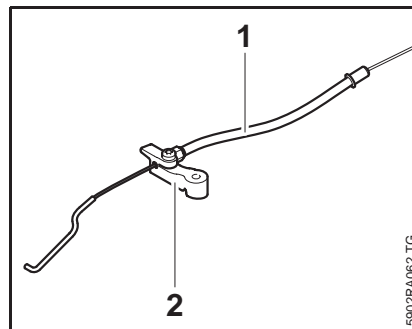


- Check the brake cable (1) and retainer (2), replace if necessary

Disassembling the brake cable and retainer

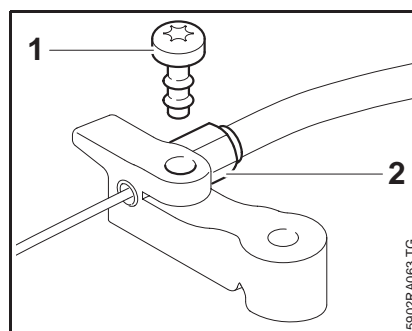


- Loosen the clamp screw (1) and take out the adjusting screw (2).

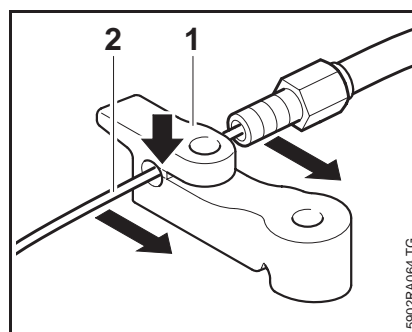


- Saw through the web (arrow) on the brake cable retainer (1).
- Pull out the brake cable (2).


Installing

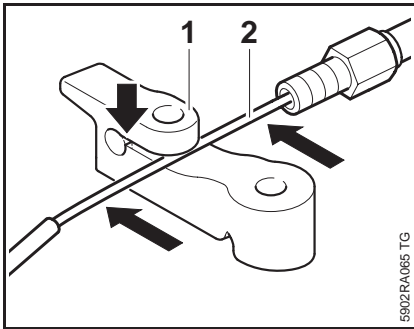


- Saw through the web (arrow) on the new brake cable retainer (1).
- Position brake cable (2) in bore of the brake cable retainer (1).

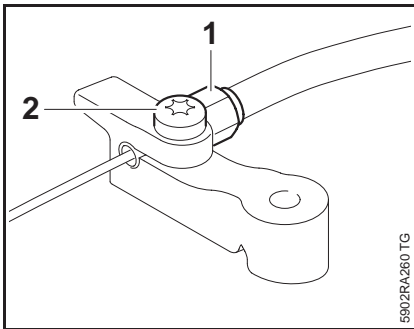


- Screw home the adjusting screw (1) as far as stop.
- Fit the clamp screw (2) and tighten it down firmly.

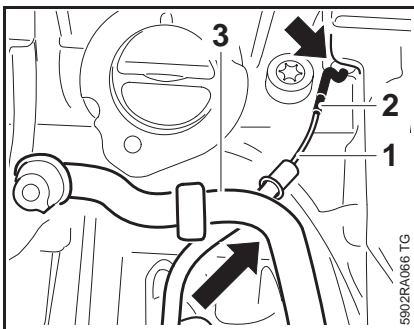


- Push the brake cable (1), short hook (2) first, under the hose (3) and through the housing bore (arrow).

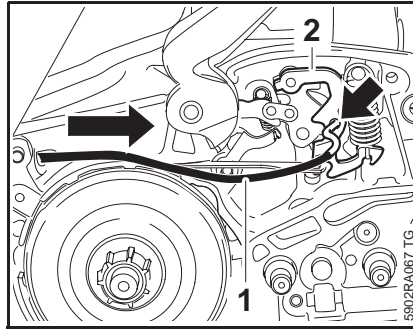


- Attach the brake cable (1) to the bore (arrow) in the brake lever (2).

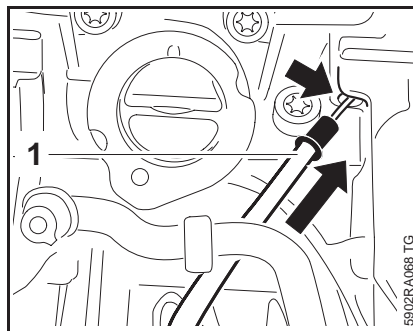

- Push grommet of brake cable (1) into the housing bore (arrow) until it is properly seated.

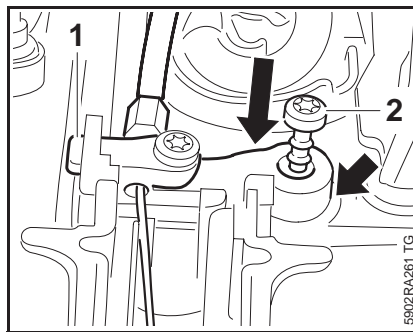

- Slide the brake cable retainer with lug (1) through the opening and press it into its seat (arrow).
- Insert and tighten down the screw (2) firmly.

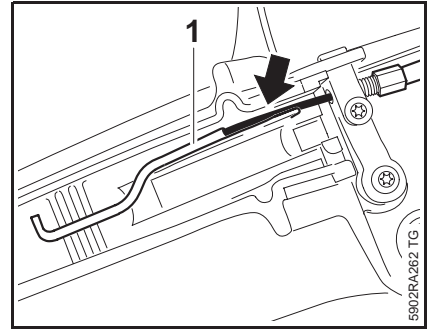


- Position the brake cable (1) in the guide (arrow).
- Install the switch lever, [10.3.1](#)
- Check operation and adjust the brake cable, [5.4.1](#)
- Reassemble all other parts in the reverse sequence.

5.5 Cam Lever

The cam lever defines the locked position of the hand guard.

- Remove the brake lever, [5.3](#)

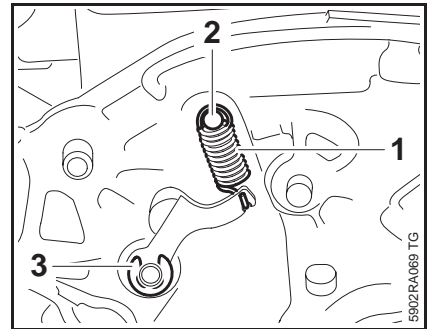

- Disconnect the spring (1) from the anchor pin (2).
- Disconnect the spring (1) from the cam lever and remove it.
- Remove the E-clip (3).
- Pull off the cam lever.