

Product: Bobcat 873 Skid Steer Loader Service Repair Workshop Manual 514114999-514212999

Full Download: <https://www.arepairmanual.com/downloads/bobcat-873-skid-steer-loader-service-repair-workshop-manual-514114999-514212999/>




8

7

3

Service Manual

**(S/N 514114999 & Below)
(S/N 514212999 & Below)**

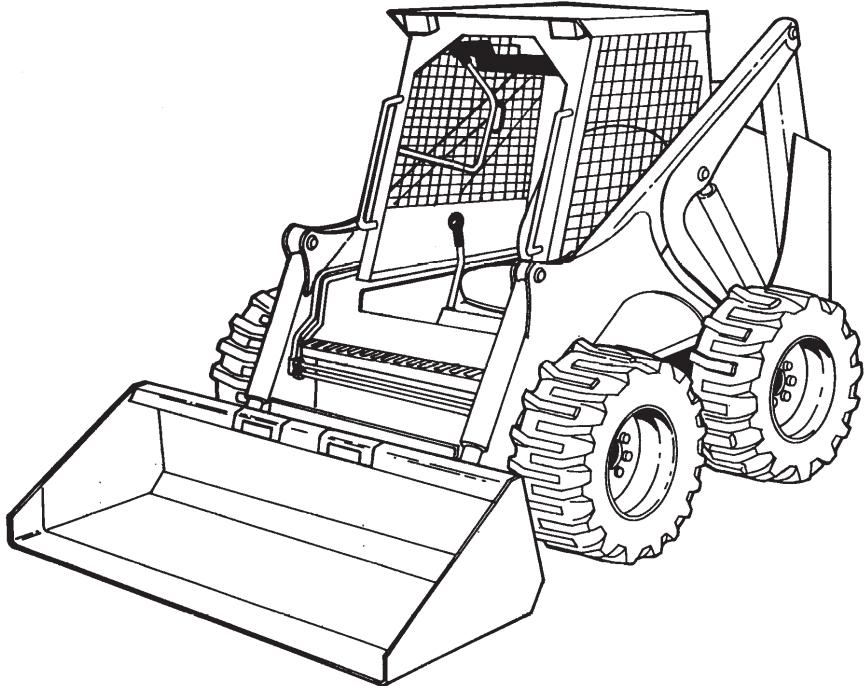

EQUIPPED WITH
**BOBCAT INTELLIGENT
CONTROL SYSTEM (iCIS™)**
<https://www.arepairmanual.com/downloads/bobcat-873-skid-steer-loader-service-repair-workshop-manual-514114999-514212999/>

MELROE
INGERSOLL-RAND
6724280 (9-96)

Printed in U.S.A.

 **bobcat**
© Melroe Company 1996

Product: Bobcat 873 Skid Steer Loader Service Repair Workshop Manual 514114999-514212999

Full Download: <https://www.arepairmanual.com/downloads/bobcat-873-skid-steer-loader-service-repair-workshop-manual-514114999-514212999/>

Sample of manual. Download All 479 pages at:

<https://www.arepairmanual.com/downloads/bobcat-873-skid-steer-loader-service-repair-workshop-manual-514114999-514212999/>

MAINTENANCE SAFETY



WARNING


Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903



Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

CORRECT

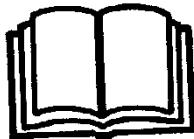

B-10731a

CORRECT



B-13573


CORRECT



B-13561

⚠ Never service the Bobcat Skid-Steer Loader without instructions.


WRONG

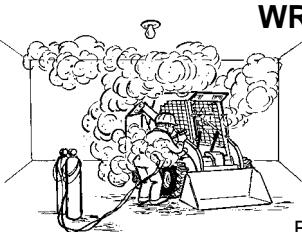

B-13574

⚠ Have good ventilation when welding or grinding painted parts.
⚠ Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.
⚠ Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.


WRONG

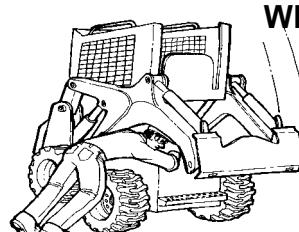

B-15232

⚠ Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause lift arms to drop. Do not go under lift arms when raised unless supported by an approved lift arm support device. Replace it if damaged.


WRONG

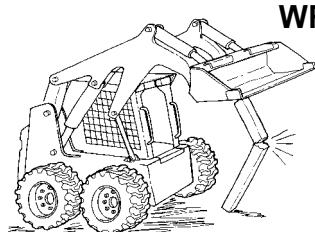

B-15281

⚠ Never work on loader with lift arms up unless lift arms are held by an approved lift arm support device. Replace if damaged.
⚠ Never modify equipment or add attachments not approved by Bobcat Company.

WRONG

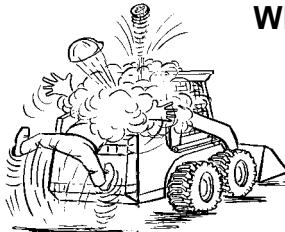

B-13576

⚠ Stop, cool and clean engine of flammable materials before checking fluids.
⚠ Never service or adjust loader with the engine running unless instructed to do so in the manual.
⚠ Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
⚠ Never fill fuel tank with engine running, while smoking or when near open flame.

WRONG



B-13577

⚠ Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
⚠ Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
⚠ Keep rear door closed except for service. Close and latch door before operating the loader.

WRONG



B-6589

⚠ Lead-acid batteries produce flammable and explosive gases.
⚠ Keep arcs, sparks, flames and lighted tobacco away from batteries.
⚠ Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.

MSW03-0805



Bobcat®

ALPHABETICAL INDEX

AIR CLEANER HOUSING	7-1	HYD./HYDRO. FILTER HOUSING BRACKET	2-1
AIR CLEANER SERVICE	1-1	HYDRAULIC/HYDROSTATIC SYSTEM	1-1
ALTERNATOR	6-1	HYDROSTATIC FILTER HOUSING	2-1
ALTERNATOR BELT	1-1	HYDROSTATIC MOTOR	3-1
AXLE SEAL	4-1	HYDROSTATIC PUMP	3-1
AXLE, BEARINGS AND SPROCKET	4-1	HYDROSTATIC SYSTEM INFORMATION	3-1
 BATTERY	6-1	 LIFT ARM BY-PASS CONTROL VALVE	8-1
BICS™ SYSTEM CONTROLLER	8-1	LIFT ARMS	5-1
BLOWER FAN	7-1	LIFT ARM LINK	5-1
BLOWER HOUSING/FAN GEARBOX	7-1	LIFT ARM STABILIZER BAR	5-1
BOBCAT INTERLOCK CONTROL SYSTEM (BICS™)	8-1	LIFT ARM SUPPORT DEVICE	1-1
BOB-TACH	5-1	LIFT CYLINDER(S)	2-1
BOSS® DIAGNOSTIC TOOL	8-1	LIFT LOCK BY-PASS VALVE	8-1
BOSS® INSTRUMENT PANEL	8-1	LIFTING AND BLOCKING THE LOADER	1-1
BRAKE DISC	4-1	LUBRICATING THE LOADER	1-1
 CAMSHAFT BEARINGS	7-1	 MAIN RELIEF VALVE	2-1
CHAINCASE FLUID	4-1	MONITOR SERVICE CODE	8-1
CONNECTING ROD	7-1	MOTOR CARRIER	3-1
CONTROL PEDALS	2-1	 OIL COOLER	3-1
CONTROL ROD GUIDE BUSHING	7-1	OPERATION SENSING SYSTEM UNIT	8-1
CRANKSHAFT	7-1	OPERATOR CAB	1-1 & 5-1
CYLINDER HEAD	7-1	OPERATOR CAB GAS CYLINDER	5-1
CYLINDER LINERS	7-1	OPERATOR SEAT	5-1
 DEUTZ ENGINE TOOLS	7-1	 PARKING BRAKE PEDAL	4-1
DRIVE BELT	3-1	PEDAL INTERLOCK LINKAGE	2-1
DRIVE BELT SHIELD	3-1	PISTON AND PISTON PIN	7-1
DRIVE BELT TENSIONER PULLEY	3-1	PWM CONTROL HANDLE	8-1
DRIVE CHAIN	4-1	PWM ELECTRIC SOLENOID	8-1
 ELEC./HYD. CONTROLS REFERENCE	8-1	PWM MODULE	8-1
ELECTRICAL SYSTEM INFORMATION	6-1	PWM TROUBLESHOOTING	8-1
ENGINE	7-1	 REAR CHAINCASE COVER	4-1
ENGINE COOLING SYSTEM	1-1	REAR COVER SEAL	7-1
ENGINE LUBRICATION SYSTEM	1-1	REAR DOOR	5-1
ENGINE MUFFLER	7-1	REAR GRILL	5-1
ENGINE SPEED CONTROL	7-1	RECONDITIONING THE ENGINE	7-1
 FAN DRIVE TENSION PULLEY	7-1	RELAY SWITCHES	6-1
FAN GEARBOX	1-1 & 7-1	REMOTE START SWITCH	1-1
FINAL DRIVE TRANSMISSION (CHAINCASE)	1-1	ROCKER ARM AND BRACKET	7-1
FLYWHEEL	7-1	RPM SENSOR	8-1
FLYWHEEL HOUSING	7-1	 SEAT BAR	5-1
FRONT CHAINCASE COVER	4-1	SEAT BAR RESTRAINT SYSTEM	1-1
FRONT COVER	7-1	SEAT BAR SENSOR	8-1
FRONT LIGHTS	6-1	SEAT SENSOR	8-1
FRONT PANEL	3-1	SENDER AND SENSOR	8-1
FRONT SIDE PANEL	2-1	SERVICE SCHEDULE	1-1
FUEL INJECTOR	7-1	STANDARD INSTRUMENT PANEL	6-1
FUEL INJECTION PUMP	7-1	STARTER	6-1
FUEL SYSTEM	1-1	STEERING LEVERS	3-1
FUEL TANK	5-1	STOPPING THE BOBCAT LOADER	1-1
 GLOW PLUGS	7-1	 TILT CYLINDER(S)	2-1
 HYDRAULIC CONTROL VALVE	2-1	TILT LOCK VALVE	8-1
HYDRAULIC CYLINDER	2-1	TIMING BELT	7-1
HYDRAULIC FILTER HOUSING	2-1	TIRE MAINTENANCE	1-1
HYDRAULIC FLUID RESERVOIR	2-1	TRACTION LOCK	8-1
HYDRAULIC PUMP	2-1	TRACTION LOCK CONTROL SYSTEM	8-1
HYDRAULIC SYSTEM INFORMATION	2-1	TOWING THE LOADER	1-1
 VALVE CLEARANCE	7-1	TRANSPORTING THE LOADER	1-1
 TROUBLESHOOTING	2-1, 3-1, 6-1 & 7-1	TROUBLESHOOTING THE BOSS® & L.C.D. DISPLAY	8-1
 TURBOCHARGER	7-1	 TURBOCHARGER	7-1



CONTENTS

FOREWORD	ii
SAFETY INSTRUCTIONS	v
SERIAL NUMBER LOCATIONS	vii
DELIVERY REPORT	vii
BOBCAT LOADER IDENTIFICATION	viii
PREVENTIVE MAINTENANCE	1-1
HYDRAULIC SYSTEM	2-1
HYDROSTATIC SYSTEM	3-1
DRIVE SYSTEM	4-1
MAIN FRAME	5-1
ELECTRICAL SYSTEM	6-1
ENGINE SERVICE	7-1
SYSTEM ANALYSIS	8-1
SPECIFICATIONS	9-1

PREVENTIVE MAINTENANCE

HYDRAULIC SYSTEM

HYDROSTATIC SYSTEM

DRIVE SYSTEM

MAIN FRAME

ELECTRICAL SYSTEM

ENGINE SERVICE

SYSTEM ANALYSIS

SPECIFICATIONS


**CALIFORNIA
PROPOSITION 65 WARNING**
Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects and other reproductive harm.

FOREWORD

This manual is for the Bobcat loader mechanic. It provides necessary servicing and adjustment procedures for the Bobcat loader and its component parts and systems. Refer to the Operation & Maintenance Manual for operating instructions, starting procedure, daily checks, etc.

A general inspection of the following items must be made after the loader has had service or repair:


1. Check that the ROPS/FOPS (Including sidescreens) is in good condition and is not modified.

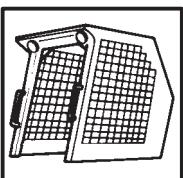


2. Check that ROPS mounting hardware is tightened and is Melroe approved.




3. The seat belt must be correctly installed, functional and in good condition.

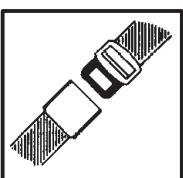


4. The seat bar and pedal interlocks must be correctly adjusted, clean and lubricated.

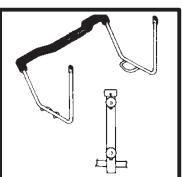

5. Machine signs must be legible and in the correct location.

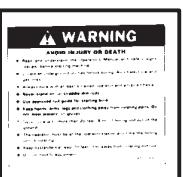


6. Steering levers and foot pedals must return to neutral.

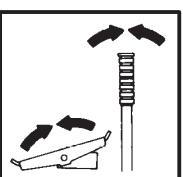


7. Check for correct function of the work lights.




8. The parking brake must function correctly.

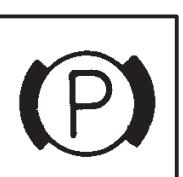


9. Enclosure door latches must open and close freely.

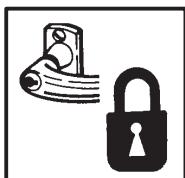


10. Bob-Tach wedges and linkages must function correctly and be in good condition.

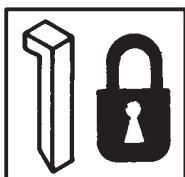


11. Safety treads must be in good condition.

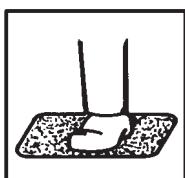


12. Check for correct function of indicator lamps (Optional on some models).

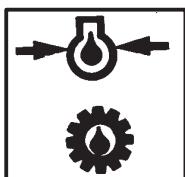

13. Check hydraulic fluid level, engine oil level and fuel supply.

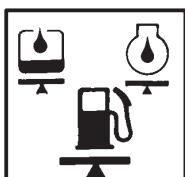


14. Inspect for fuel, oil or hydraulic fluid leaks.

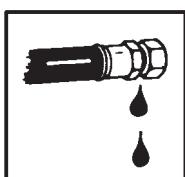


15. Lubricate the loader.




16. Check the condition of the battery and cables.

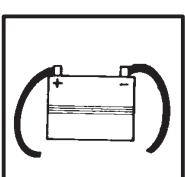

17. Inspect the air cleaner for damage or leaks. Check the condition of the element.

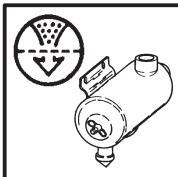


18. Check the electrical charging system.

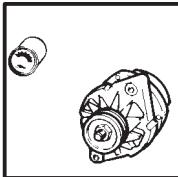


19. Check tires for wear and pressure.




20. Inspect for loose or broken parts or connections.

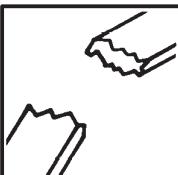


21. Operate the loader and check all functions.

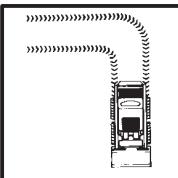


22. Check for any field modification not completed.

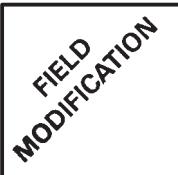

23. Check for correct function of the Bobcat Interlock Control System (BICS™) before the machine is returned to the customer.

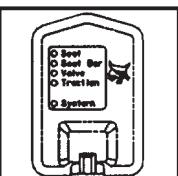

Recommend to the owner that all necessary corrections be made before the machine is returned to service.

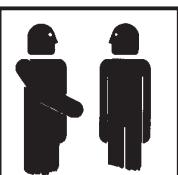



SAFETY INSTRUCTIONS

⚠ WARNING

Instructions are necessary before operating or servicing machine. Read Operation & Maintenance Manual, Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Failure to follow instructions can cause injury or death.

W-2003-1289

The following publications provide information on the safe use and maintenance of the loader and attachments:

- The Delivery Report is used to assure that complete instructions have been given to the new owner and that the machine is in safe operating condition.
- The Operation & Maintenance Manual delivered with the loader gives operating information as well as routine maintenance and service procedures. It is a part of the loader and must stay with the machine when it is sold. Replacement Operation & Maintenance Manuals can be ordered from your Bobcat loader dealer.
- The loader has machine signs (decals) which instruct on the safe operation and care. The signs and their locations are shown in the Operation & Maintenance Manual. Replacement signs are available from your Bobcat loader dealer.
- The loader has a plastic Operator's Handbook fastened to the operator cab. Its brief instructions are convenient to the operator. The handbook is available from your dealer in an English edition or one of the following languages: French, German, Italian, Dutch, Spanish, Portuguese, Finnish, Danish & Swedish.
- The EMI Safety Manual (available in Spanish) delivered with the loader gives general safety information.
- The Service Manual and Parts Manual are available from your dealer for use by mechanics to do shop-type service and repair work.
- The Skid-Steer Loader Operator Training Course is available through your local dealer. This course is intended to provide rules and practices for correct operation of the Bobcat loader. The course is available in English and Spanish versions.

⚠ WARNING

Warnings on the machine and in the manuals are for your safety. Failure to obey warnings can cause injury or death.

W-2044-1285

IMPORTANT

This notice identifies procedures which must be followed to avoid damage to the machine.

I-2019-0284



Safety Alert Symbol: This Safety Symbol is used for important safety messages. When you see this symbol follow the safety message to avoid personal injury or death.

SAFETY INSTRUCTIONS (Cont'd)

- Wear tight fitting clothing. Always wear safety glasses when maintaining or servicing loader. Safety glasses, hearing protection or loader special applications kit are required for some work. See your dealer for Melroe Safety equipment.
- Know where fire extinguishers and first aid kits are located and how to use them.
- Do not use the Bobcat loader where exhaust, arcs, sparks or hot components can contact flammable material, explosive dust or gases.
- The engine compartment and engine cooling system must be inspected every day and cleaned if necessary to prevent fire hazard and overheating.
- Check all electrical wiring and connections for damage. Keep the battery terminals clean and tight. Repair or replace any damaged part.
- Check fuel and hydraulic tubes, hoses and fittings for damage and leakage. Never use open flame or bare skin to check for leaks. Tighten or replace any parts that show leakage. Always clean fluid spills. Do not use gasoline or diesel fuel for cleaning parts. Use commercial nonflammable solvents.
- Follow any environmental safety regulations when disposing of used fluids such as engine oil, grease or anti-freeze.
- Do not use ether or starting fluids on this engine. It has glow plugs. These starting aids can cause explosion and injure you or bystanders.
- Always clean the loader and disconnect the battery before doing any welding. Cover rubber hoses, battery and all other flammable parts. Keep a fire extinguisher near the loader when welding. Have good ventilation when grinding or welding painted parts. Wear dust mask when grinding painted parts. Toxic dust or gas can be produced.
- Stop the engine and let it cool before adding fuel. No smoking!
- Use the procedure in the Operation & Maintenance or Service Manuals for connecting the battery.

A fire extinguisher is available from your local dealer. The fire extinguisher can be installed in the location shown [A].



SERIAL NUMBER LOCATIONS

Always use the serial number of the loader when requesting service information or when ordering parts. Early or later models (identification made by serial number) may use different parts, or it may be necessary to use a different procedure in doing a specific service operation.

LOADER SERIAL NUMBER

The loader serial number plate is located on the outside of the loader frame **[A]**.

Explanation of loader Serial Number:



XXXX	XXXXX
Module 2. – Production Sequence (Series)	
Module 1. – Model/Engine Combination	

The four digit Model/Engine Combination module number identifies the model number and engine combination. This number (in parenthesis beside the model number) is used in the Service Manual to more easily identify the standard, optional and field accessory equipment included or available for each specific model.

The five digit Production Sequence Number identifies the order which the loader is produced.


ENGINE SERIAL NUMBER

The serial number is located on the valve cover at the right side of the engine **[B]**.

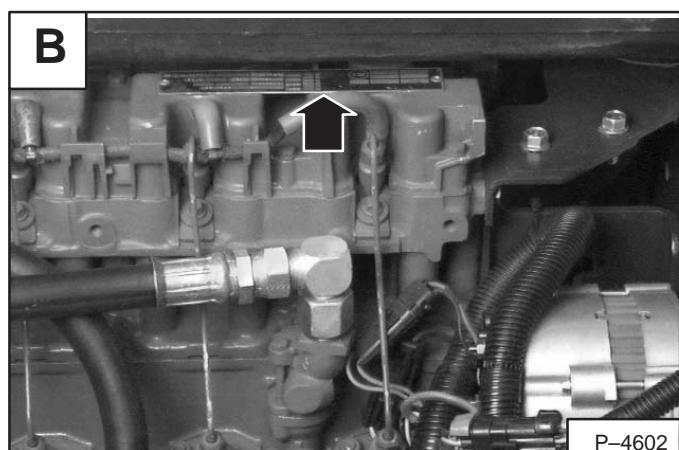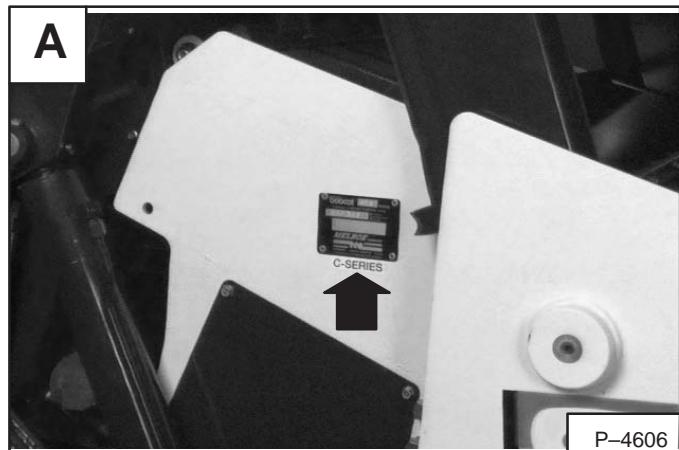


DELIVERY REPORT

The Delivery Report must be filled out by the dealer and signed by the owner or operator when the Bobcat loader is delivered. An explanation of the form must be given to the owner. Make sure it is filled out completely **[C]**.

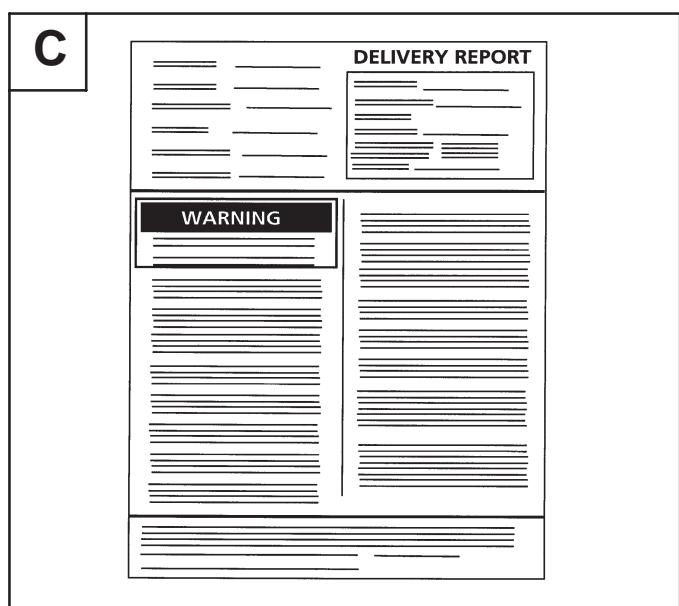

BOBCAT LOADER IDENTIFICATION

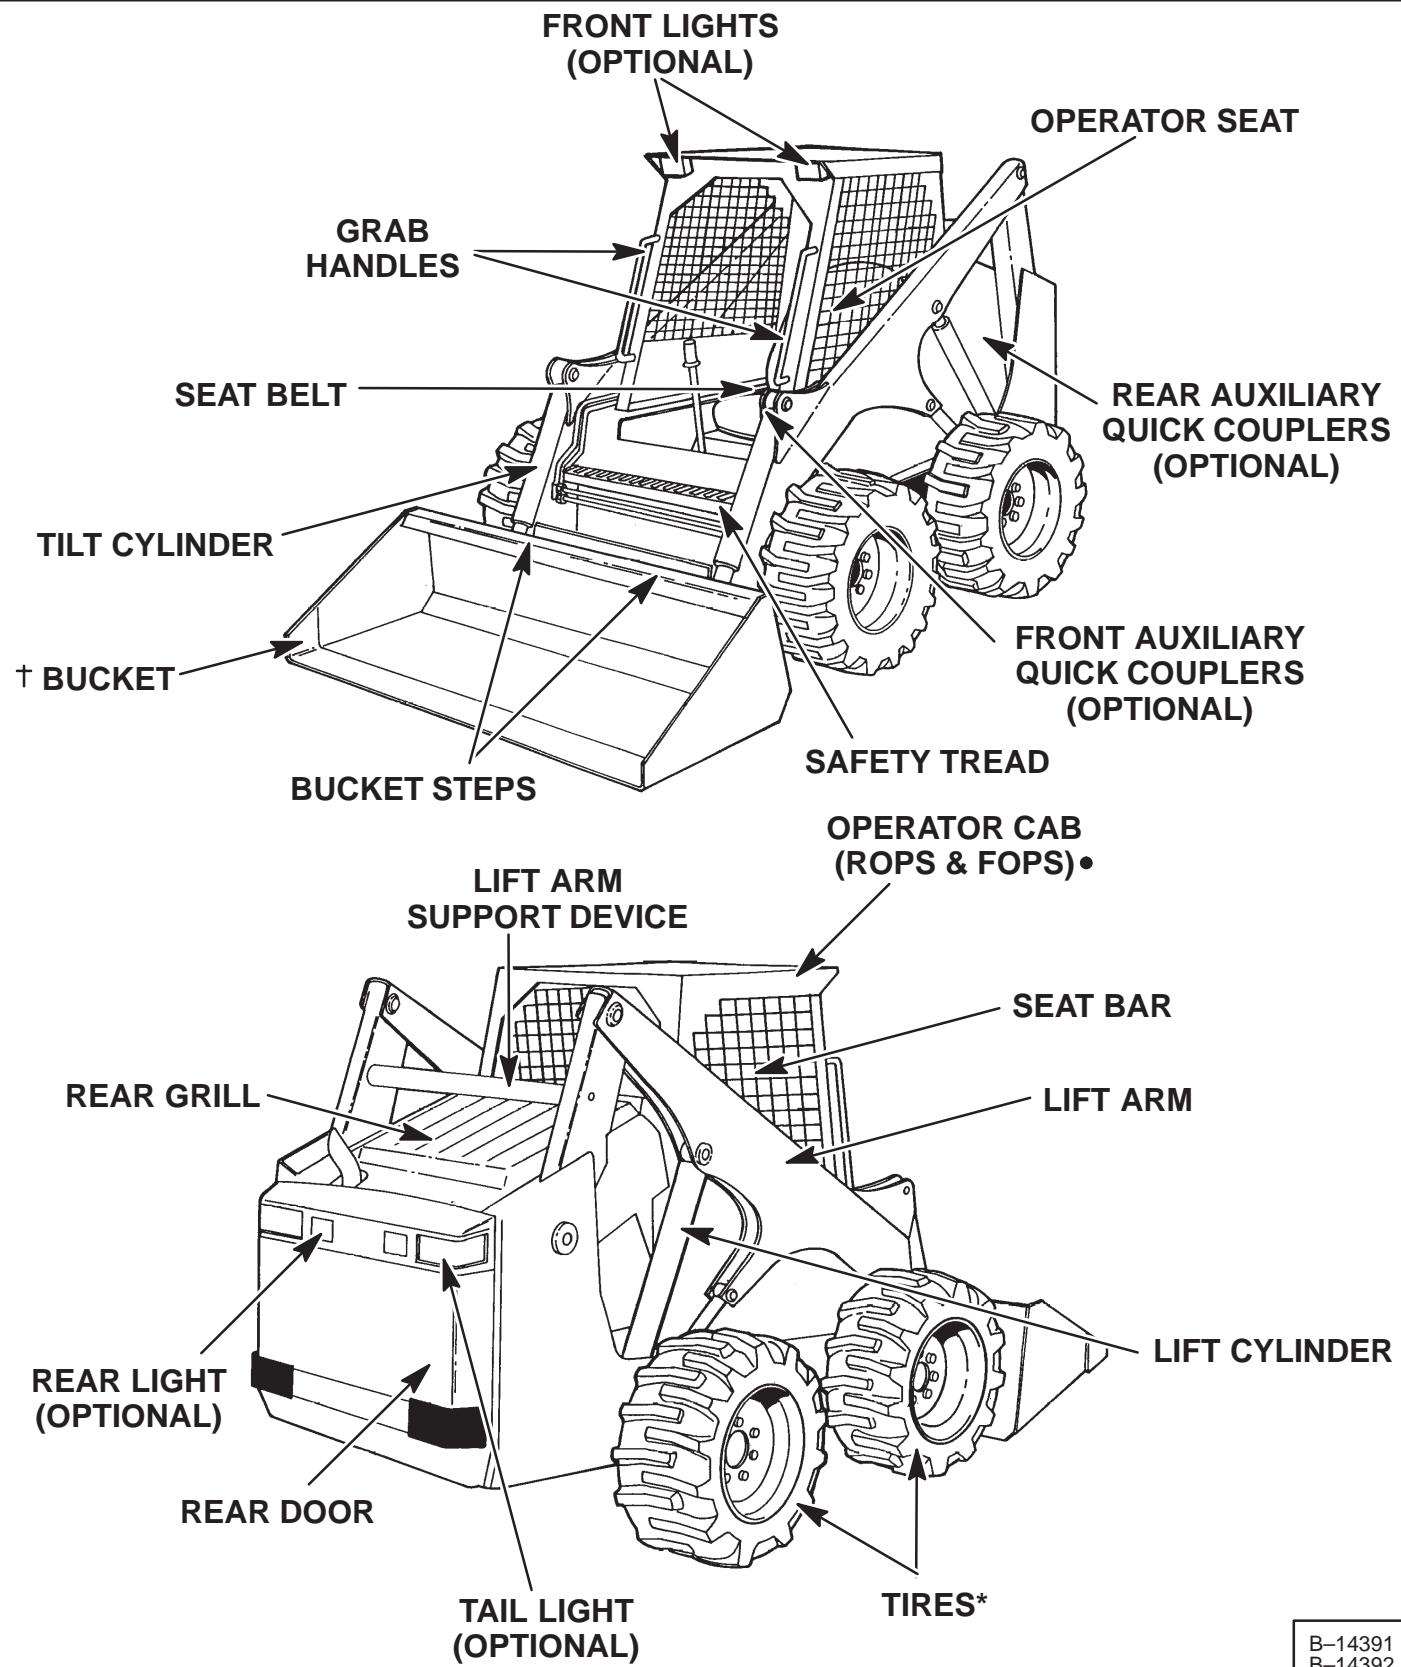

B-14391
B-14392

* TIRES – Flotation tires are shown. Optional tires are available.

† BUCKET – Several different buckets and other attachments are available for the Bobcat loader.

• ROPS, FOPS – Roll Over Protective Structure, per SAE J1040 and ISO 3471 and Falling Object Protective Structure per SAE J1043 and ISO 3449 Level I. Level II FOPS is available for protection from heavy falling objects. The Bobcat loader is base-equipped with a standard operator cab as shown. Extra insulated cab is available as an option (Reduced noise level).

OPTIONS AND ACCESSORIES

All 873 Bobcat loaders are equipped with the following standard items:

Bob-Tach	Seat Belt
Servo Assist Steering	Seat Bar
Spark Arrestor Exhaust System	Parking Brake
Lift Arm Support Device	Gauges/Warning Lights
Operator Cab (W/ROPS & FOPS Approval)	Bobcat Interlock Control System (BICS™)
Adjustable Cushion Seat	Push Button Activated Glow Plug

Below is a listing of the optional equipment which is available through your Bobcat loader dealer.

873

Tires

12-16.5, 10 PR Bobcat Heavy Duty Flotation .	Std.
8.25-15, 6 PR	Opt.
12.00-16.5, Segmented	Opt.
12.00-16.5, 6 PR Flotation	Opt.
8.00-16 Solid	Opt.
10.00-33 Solid	Opt.
31-15.5 x 18, 8 PR Terra Grip Flotation	Opt.

Operator Cab

Sound Cab (85 dBA)	Opt. (Std. in Europe)
Deluxe Cab	Opt.
Suspension Seat	Opt. & FA (Std. in Europe)
Operating Lights (Front & Rear)	Opt. & FA (Std. in Europe)
Horn	FA
Backup Alarm	Opt. & FA
Heated Enclosed Cab	Opt. & FA
Top Window	Opt. & FA (Std. in Europe)
Rear Window	Opt. & FA (Std. in Europe)
Cab Enclosure Panels	FA
Vinyl Cab Enclosure	FA
Cover Kit (Pedals Area)	FA
Cover Kit (Hydraulic Reservoir Area)	FA (Std. in Europe)
Fire Extinguisher	FA
Flasher Lights	FA
Strobe or Rotating Beacon Light	FA
3" Seat Belt	FA
Special Applications Kit (Includes Front Door, Top & Rear Windows)	FA

Hydraulics

Front Auxiliary Hydraulics	Opt. & FA
Rear Auxiliary Hydraulics	Opt. & FA
Hydraulic Bucket Positioning (Includes On/Off Switch)	Opt. & FA

Other

Counterweight Kit (2400 ROC)	Opt. & FA
Single Point Lift	FA
Locking Fuel Cap	FA
Rear Door Bumpers	FA
Tailgate Lock	FA
Tool Box	FA

Instrumentation

Gauges and Warning Lights	Std.
Bobcat Operating Sensing System (BOSS®)	Opt.

Std. = Standard Equipment

Opt. = Factory Installed Option

FA = Field Accessory

Specifications subject to change without notice.



PREVENTIVE MAINTENANCE

PREVENTIVE MAINTENANCE

	Page Number
AIR CLEANER SERVICE Replacing Filter Element	1-11
ALTERNATOR BELT Adjusting The Alternator Belt	1-17
ENGINE COOLING SYSTEM Cleaning The Cooling System (S/N 514111516 – 514114999)	1-15
Cleaning The Cooling System (S/N 514111515 & Below)	1-16
ENGINE LUBRICATION SYSTEM Checking Engine Oil	1-14
Replacing Oil And Filter	1-14
FAN GEARBOX Checking And Maintaining	1-21
FINAL DRIVE TRANSMISSION (CHAINCASE) Checking And Adding Oil	1-21
FUEL SYSTEM Filling The Fuel Tank	1-13
Fuel Filter	1-13
Fuel Specifications	1-13
Removing Air From The Fuel System	1-13
HYDRAULIC/HYDROSTATIC SYSTEM Checking And Adding Fluid	1-18
Hydraulic/Hydrostatic Filter Replacement	1-18
Replacing Hydraulic Fluid	1-19
LIFT ARM SUPPORT DEVICE To Install The Lift Arm Support Device	1-6
To Remove The Lift Arm Support Device	1-6
LIFTING AND BLOCKING THE LOADER Procedure	1-4
LUBRICATING THE LOADER Procedure	1-22
OPERATOR CAB Description	1-7
Lowering The Operator Cab	1-8
Raising The Operator Cab	1-7
Emergency Exit	1-9
REMOTE START SWITCH Procedure	1-25
SEAT BAR RESTRAINT SYSTEM Description	1-10
Seat Bar Inspection	1-10
Seat Bar Maintenance	1-10
SERVICE SCHEDULE Chart	1-3

Continued On Next Page

PREVENTIVE MAINTENANCE (Cont'd)

	Page Number
STOPPING THE BOBCAT LOADER	
Procedure	1-5
TIRE MAINTENANCE	
Tire Mounting	1-20
Tire Rotation	1-20
Wheel Nuts	1-20
TOWING THE LOADER	
Procedure	1-5
TRANSPORTING THE LOADER	
Procedure	1-5

SERVICE SCHEDULE

Maintenance work must be done at regular intervals. Failure to do so will result in excessive wear and early failures. The service schedule is a guide for correct maintenance of the Bobcat loader.

! WARNING

Instructions are necessary before operating or servicing machine. Read Operation & Maintenance Manual, Handbook and signs (decals) on machine. Follow warnings and instructions in the manual when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Failure to follow instructions can cause injury or death.

W-2003-1289

ITEM	SERVICE REQUIRED	HOURS					
		8-10	50	250	500	■ 1000	◊ 3000
Engine Oil	Check the oil level and add oil as needed.						
Engine Air Cleaner	Check condition indicator or display panel. Service only when required.						
Engine Cooling System	Clean debris from oil cooler and grill.						
Lift Arms, Cyl., Bob-Tach Pivot Pins and Wedges	Lubricate with multi-purpose lithium based grease (12 places).						
Engine Air System	Check for leaks and damaged components.						
Tires	Check for damaged tires and correct air pressure.						
Seat Belt, Seat Bar and Pedal Interlocks	Check the condition of seat belt. Check the seat bar and foot pedal interlocks for correct operation. Clean dirt and debris from moving parts.						
Bobcat Interlock Control System (BICSTM)	Check BICSTM functions. Clean dirt, debris or objects from under or behind seat and around brake pedal as required.						
Safety Signs and Safety Treads	Check for damaged signs (decals) and safety treads. Replace any signs or safety treads that are damaged or worn.						
Operator Cab	Check the fastening bolts, washers and nuts. Check the condition of cab.						
Fuel Filter	Remove the trapped water.						
Traction Lock Control Sys.	Check operation and correct as needed.						
Hyd. Fluid, Hoses and Tubelines	Check fluid level and add as needed. Check for damage and leaks. Repair or replace as needed.						
Final Drive Trans.(Chaincase)	Check oil level.						
Battery	Check battery for damage, hold downs, cables, connections and electrolyte level. Add distilled water as needed.						
Foot Pedals and Steering	Check for correct operation. Repair or adjust as needed.						
Wheel Nuts	□ Check for loose wheel nuts and tighten to 105–115 ft.-lbs. (142–156 Nm) torque.						
Parking Brake	Check operation of the brake.						
Alternator Belt	Check tension and adjust as needed.						
Engine/Hydro. Drive Belt	* Check for wear or damage. Check idler arm stop.						
Fuel Filter	Replace filter element.						
Steering Shaft	Grease three fittings.						
Hydraulic Reservoir Breather Cap	Replace the reservoir breather cap.						
Hyd./Hydro. Filters	● Replace the filter elements.						
Engine Oil and Filter	† Replace oil and filter. Use CD or better grade oil and Melroe filter.						
Final Drive Trans.	Replace the oil in the chaincase.						
Hydraulic Reservoir	Clean or replace the fluid.						
Hydraulic Motors	Clean or replace the case drain filters.						
Bobcat Interlock Control System (BICSTM)	Check lift arm by-pass control.						
Fan Drive Gearbox	Check gear lube level.						
Engine Valves	∞ Adjust the engine valves.						
Engine Timing Belt	◊ Replace the timing belt and belt tensioner assy.						

- Check wheel nut torque every 8 hours for the first 24 hours.
- Also replace hydraulic/hydrostatic filter element when the transmission warning light comes ON.
- Or every 12 months.
- * Inspect the new belt after first 50 hours.
- † After the first 50 hours.
- ∞ After the first 500 hours on new engine, adjust engine valves; 1000 hours thereafter.
- ◊ Or every 5 years.



WARNING

Instructions are necessary before operating or servicing machine. Read Operation & Maintenance Manuals, Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Failure to follow instructions can cause injury or death.

W-2003-1289

Read the Removal & Installation, Disassembly & Assembly, etc. completely to become familiar with the procedure before beginning [A].

LIFTING AND BLOCKING THE LOADER

Procedure

Always park the loader on a level surface.



WARNING

Put jackstands under the front axles and rear corners of the frame before running the engine for service. Failure to use jackstands can allow the machine to fall or move and cause injury or death.

W-2017-0286

Put floor jack under the rear of the loader [B].

Lift the rear of the loader and install jackstands [B].

A




B-07023

B



P-05325

C

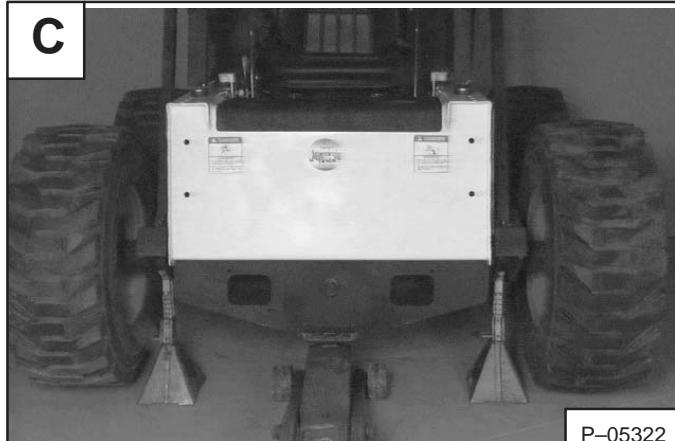

P-05322

TRANSPORTING THE LOADER


Procedure



WARNING

Adequately designed ramps of sufficient strength are needed to support the weight of the machine when loading onto a transport vehicle. Wood ramps can break and cause personal injury.

W-2058-0494

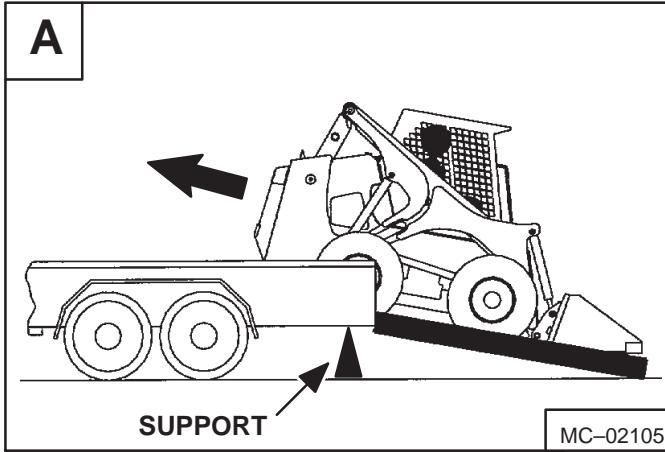

A loader with an empty bucket or no attachment must be loaded backward onto the transport vehicle [A].


The rear of the trailer must be blocked or supported [A] when loading or unloading the loader to prevent the front end of the trailer from raising up.

Be sure the transport and towing vehicles are of adequate size and capacity.

Use the following procedure to fasten the Bobcat loader to the transport vehicle to prevent the loader from moving during sudden stops or when going up or down slopes [B].

Lower the bucket or attachment to the floor. Stop the engine. Engage the parking brake. Install chains at the front and rear loader tie down positions (Inset) [B]. Fasten each end of the chain to the transport vehicle and tighten the chain with a chain tightener.

The Inset [B] shows the decal with attachment points for towing and tie down.

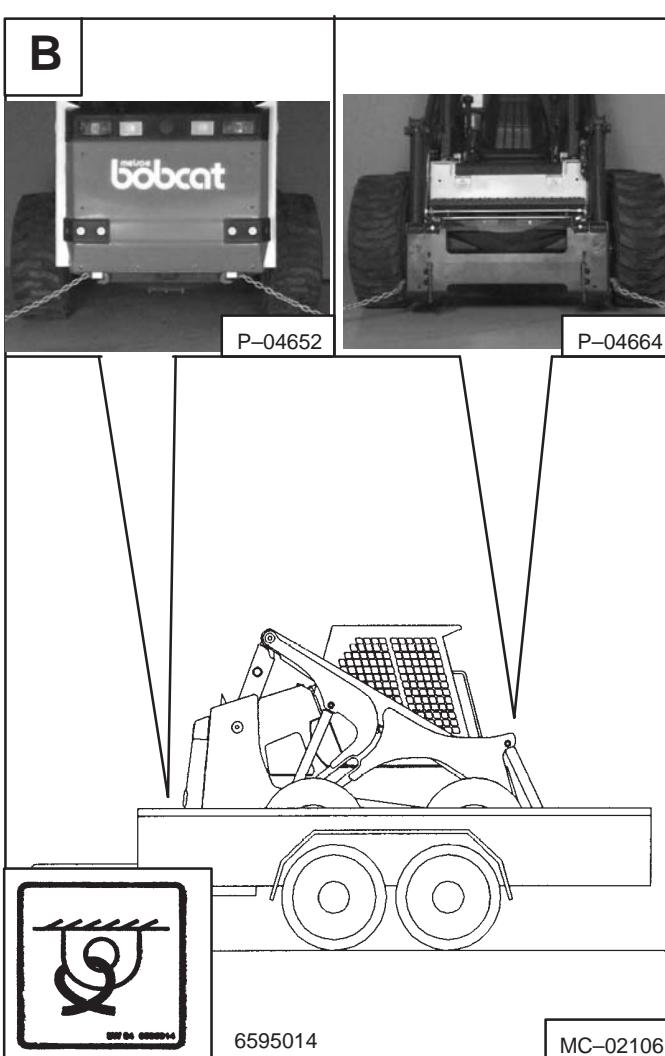

IMPORTANT

Do not push or pull the machine at more than 2 MPH (3,2 km/h) or for a distance of more than 25 feet (7,6 meters) with the towing tool in place.

I-2017-0389

LIFT ARM SUPPORT DEVICE

WARNING


Never work on a machine with the lift arms up unless the lift arms are secured by a lift arm support device. Failure to use an approved lift arm support device can allow the lift arms or attachment to fall and cause injury or death.

W-2059-0991


To Install The Lift Arm Support Device

Remove the retainer knobs (Item 1) [A] or [B].

Remove the lift arm support device from the crossmember.

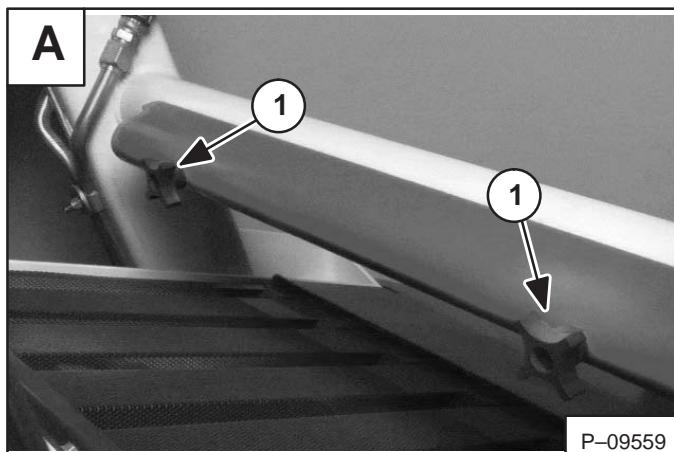

P-09559

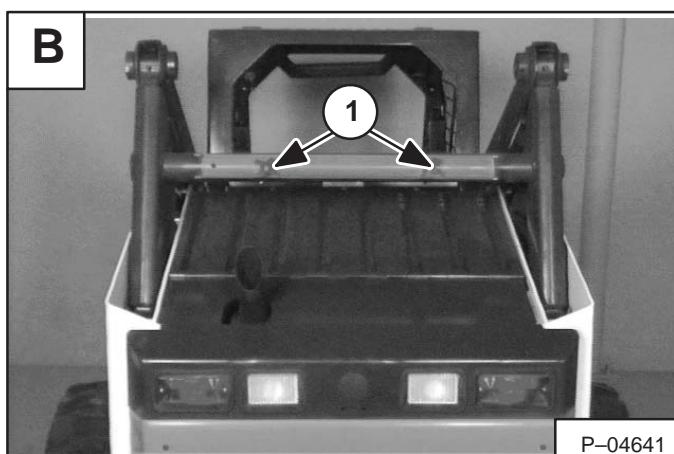


P-04641

One person must stay in the operator seat [C] with the seat belt fastened and the seat bar lowered, while second person installs the lift arm support device.

Start the engine and raise the lift arms.

Have a second person install the lift arm support device over the rod of one of the lift cylinders [C].

The 90° notch should be installed against the outer case of the lift cylinder [C]. (See Inset.)

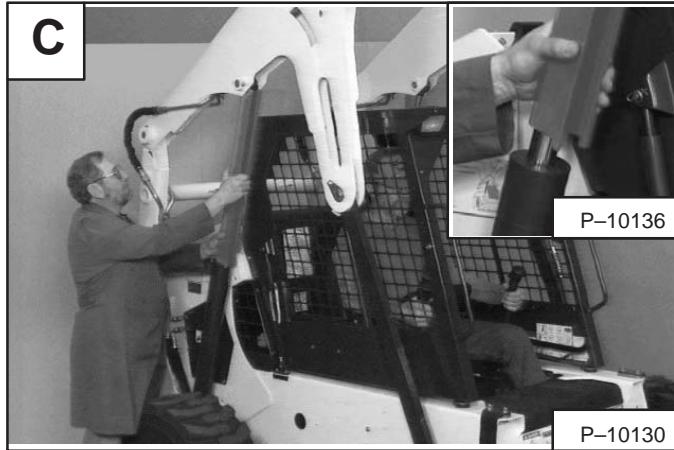

P-10136

P-10130

Lower the lift arms slowly until the support device is held between the lift arms and lift cylinder [D].

To Remove The Lift Arm Support Device

Raise the lift arms while a second person removes the lift arm support device [C].

Stay in the seat until the lift arms are lowered all the way.

Return the lift arm support device to the storage position and secure the retainer knobs (Item 1) [A] or [B].



P-10132

OPERATOR CAB

Description

The Bobcat loader has an operator cab (ROPS and FOPS) as standard equipment to protect the operator from rollover and falling objects. Check with your dealer if the operator cab has been damaged.



WARNING

Never modify operator cab by welding, grinding, drilling holes or adding attachments unless instructed to do so by Melroe Company. Changes to the cab can cause loss of operator protection from rollover and falling objects, and result in injury or death.

W-2069-1285

ROPS/FOPS – Roll-Over Protection Structure per SAE J1040 and ISO 3471, and Falling Object Protective Structure per SAE J1043 and ISO 3449, Level I. Level II is available.

Level I – Protection from falling bricks, small concrete blocks, and hand tools encountered in operations such as highway maintenance, landscaping, and other construction site services.

Level II – Protection from falling trees, rocks; for machines involved in site clearing, overhead demolition or forestry.

Raising The Operator Cab

Stop the loader on a level surface. Lower the lift arms. If the lift arms must be up while raising the operator cab, install the lift arm support device. (See Page 1-6.)

Loosen the nut (both sides) at the front corner of the operator cab **[A]**.

Remove the nut and plate (both sides) **[B]**.

Lift on the grab handle and bottom of the operator cab. Raise slowly until the cab latching mechanism engages and the cab is all the way up **[C]**.



OPERATOR CAB (Cont'd)


Lowering The Operator Cab

NOTE: Make sure the seat bar is fully raised or lowered when lowering the cab.

Pull down on the bottom of the operator cab until it stops at the latching mechanism [A].



Release the latching mechanism (Item 1) [B] and pull the cab all the way down.

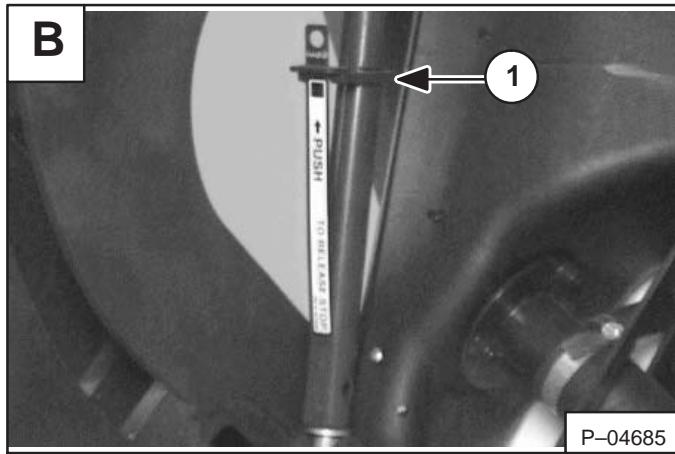

Install the plate and nut (both sides). Tighten the nuts to 40–50 ft.–lbs. (54–68 Nm) torque [C].



OPERATOR CAB (Cont'd)

Emergency Exit

The front opening on the operator cab and rear window provide exits.

To exit through the rear window, use the following procedure:

Pull on the tag on the top of the rear window to remove the rubber cord [A].



P-00660

Push the rear window out of the rear of the operator cab.

Exit through the rear of the operator cab [B].



P-04668

NOTE: When the Operator Cab Enclosure Kit is installed, the window of the front door can be used as an emergency exit.

Pull the plastic loop at the top of the window in the front door to remove the rubber cord [C].



P-09216

Push the window out with your foot [D].

Exit through the front door.



P-09217

SEAT BAR RESTRAINT SYSTEM

Description

The seat bar restraint system has a pivoting seat bar with arm rests and has spring loaded interlocks for the lift and tilt control pedals. The operator controls the use of the seat bar. The seat bar in the down position helps to keep the operator in the seat. The interlocks require the operator to lower the seat bar in order to operate the foot pedal controls. When the seat bar is up, the lift and tilt pedals are locked when returned to the neutral position.



WARNING

AVOID INJURY OR DEATH

The seat bar system must lock the lift and tilt control pedals in neutral when the seat bar is up. Service the system if pedals do not lock correctly.

W-2105-1285

Seat Bar Inspection

Sit in the seat and fasten the seat belt. Engage the parking brake. Pull the seat bar all the way down. Start the engine. Operate each foot pedal to check both the lift and tilt functions. Raise the lift arms until the bucket is about 2 feet (600 mm) off the ground.

Raise the seat bar. Try to move each foot pedal. Pedals must be firmly locked in neutral position. There must be no motion of the lift arms or tilt (bucket) when the pedals are pushed.

Pull the seat bar down, lower the lift arms. Operate the lift pedals. While the lift arms are going up, raise the seat bar and the lift arms should stop.

Lower the seat bar, lower the lift arms and place the bucket flat on the ground. Stop the engine. Raise the seat bar and operate the foot pedals to be sure that the pedals are firmly locked in the neutral position. Unbuckle the seat belt.



WARNING

AVOID INJURY OR DEATH



Never operate loader without pedal lock shield 6705474 on both interlocks. Shields prevent foot from unlocking interlocks when leaving loader seat.

Seat Bar Maintenance

See the Service Schedule Page 1-3 or on the loader for correct service interval.

Clean any debris or dirt from the moving parts **[A]** & **[B]**. Inspect the linkage bolts and nuts for tightness. The correct torque is 25-28 ft.-lbs. (34-38 Nm).

If the seat bar system does not function correctly, check for free movement of each linkage part. Check for excessive wear. Adjust pedal control linkage. Replace parts that are worn or damaged. Use only genuine Melroe replacement parts.

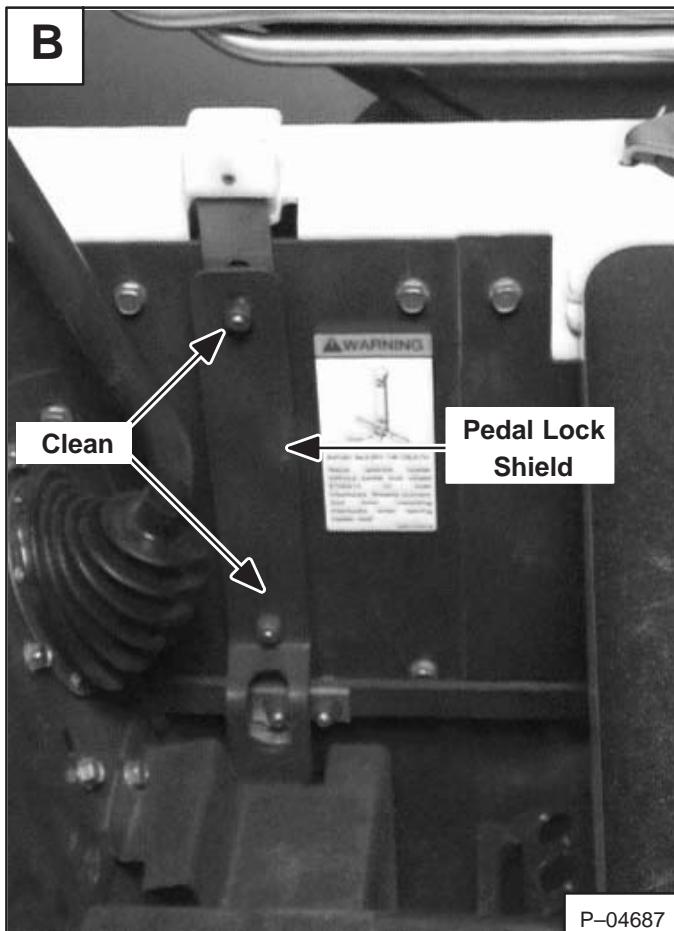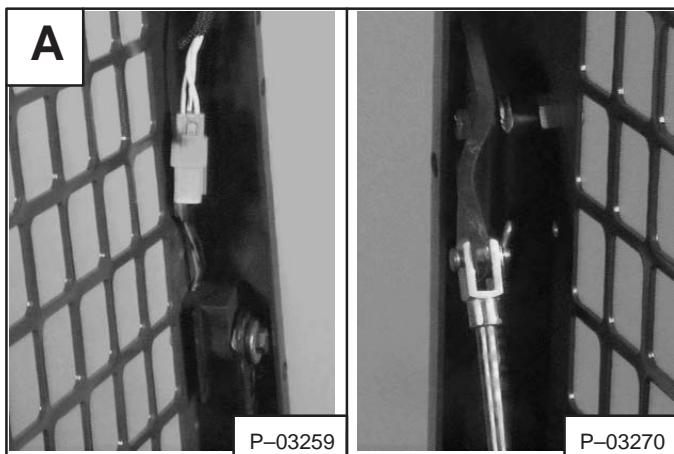


AIR CLEANER SERVICE

Replacing Filter Element


WITH CONDITION INDICATOR: Replace the large (outer) filter element only when the red ring shows in the window of the condition indicator (Item 1) [A].

NOTE: Before replacing the filter element, push the button on the condition indicator. Start the engine. If the red ring does not show, do not replace the filter element.

Replace the inner filter every third time the outer filter is replaced or when the red ring still shows in the indicator window after the outer filter has been replaced.

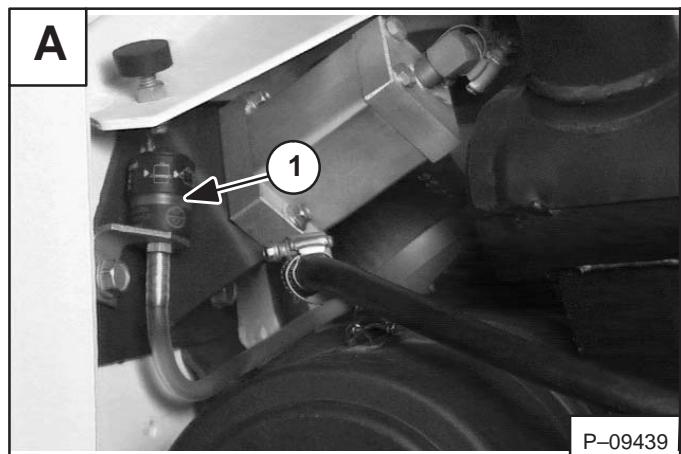


WITH BOSS® OPTION: It is important to change the air filter element only when the service codes (on the optional instrument panel) shows the symbols [AF.2] [B].

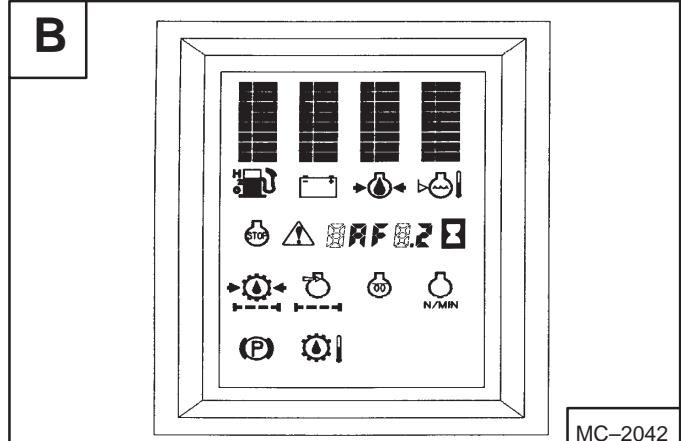

Service the air cleaner as follows:

Remove the dust cover clips (Item 1) [C].

Remove the dust cover.

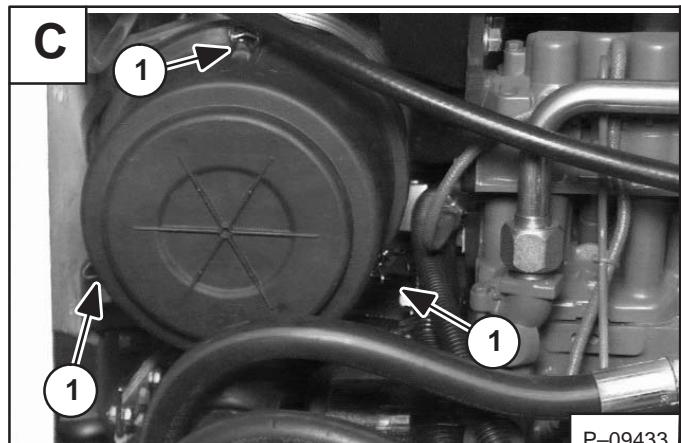


Remove the large filter element [D].

NOTE: Make sure all sealing surfaces are free of dirt and debris.

Install the new filter element.

Install dust cover.

Check the air intake hose for damage. Check the air cleaner housing for damage. Check to make sure all connections are tight.

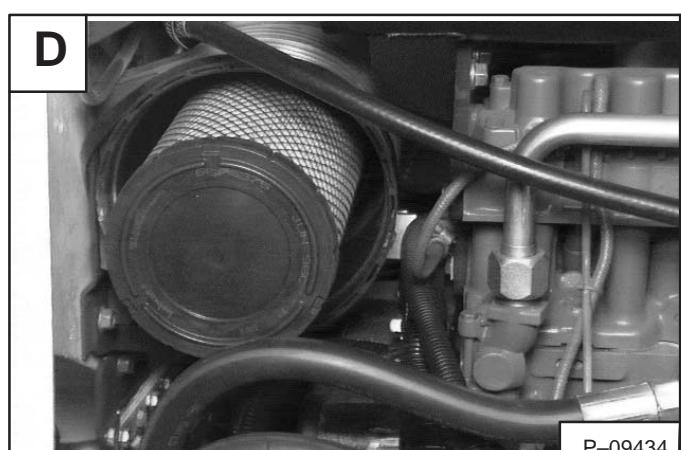

AIR CLEANER SERVICE (Cont'd)

Replacing Filter Element (Cont'd)

Only replace the inner filter element under the following conditions **[A]**:

1. Replace the inner filter element every third time the outer filter is replaced.
2. When the service codes show symbols (Page 1-11 **[B]**) during full engine speed, replace the inner filter element only after the outer filter element has been changed.

A



P-09441

FUEL SYSTEM

Fuel Specifications

Use only clean, high quality diesel fuel, Grade No. 1 or Grade No. 2.

The following is one suggested blending guideline which should prevent fuel gelling problems:

Temp. F° (C°)	No. 2	No. 1
+15°(9°)	100%	0%
Down to -20° (-29°)	50%	50%
Below -20° (29°)	0%	100%

We recommend an operator contact their fuel supplier for local recommendations.

Filling The Fuel Tank

WARNING

Stop and cool the engine before adding fuel.
NO SMOKING! Failure to obey warnings can cause an explosion or fire.

W-2063-0887

Remove the fuel fill cap (Item 1) [A].

Use a clean, approved safety container to add fuel of the correct specifications. Add fuel only in an area that has free movement of air and no open flames or sparks. NO SMOKING! [B].

Install and tighten the fuel fill cap [A].

Fuel Filter

See the Service Schedule Page 1-3 for the recommended service interval when to remove the water from the fuel filter.

Loosen the drain (Item 1) [C] at the bottom of the filter element to drain any water from the filter.

See the Service Schedule Page 1-3 for the recommended service interval when to replace the fuel filter.

To replace the fuel filter element, use a filter wrench to remove the filter element [C].

Clean the area around the filter housing. Put oil on the seal of the new filter element. Install the fuel filter, and hand tighten. Remove the air from the fuel system.




Removing Air From The Fuel System

After replacing the fuel filter element or when the fuel tank has run out of fuel, the air must be removed from the fuel system prior to starting the engine.

Loosen the air vent plug (Item 2) [C] at the top of the fuel filter.

Crank the engine until fuel flows from the vent.

Tighten the air vent plug.

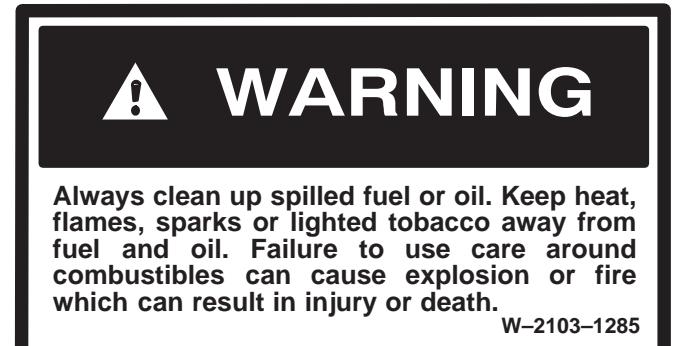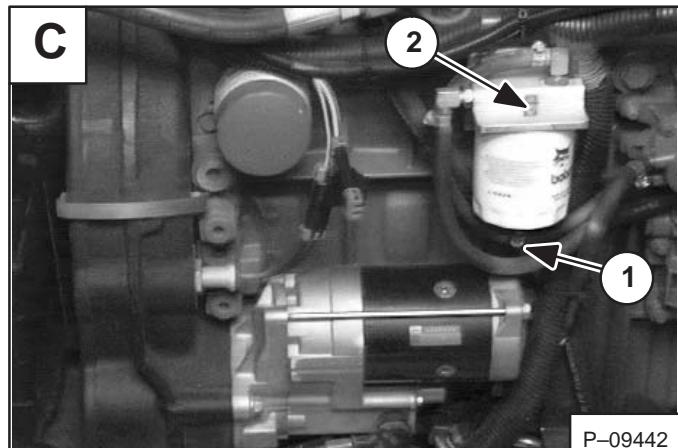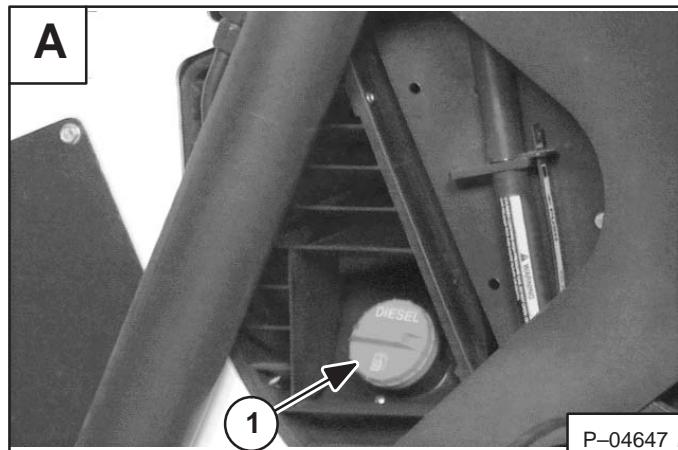

Checking Engine Oil


Check the engine oil level every day.

Before starting the engine for the work shift, open the rear door. Remove the dipstick (Item 1) [A].

Keep the oil level between the marks on the dipstick.

Use a good quality motor oil that meets API Service Classification of CD, CE or better. (See Oil Chart below.)

RECOMMENDED SAE VISCOSITY NUMBER (LUBRICATION OILS FOR ENGINE CRANKCASE)

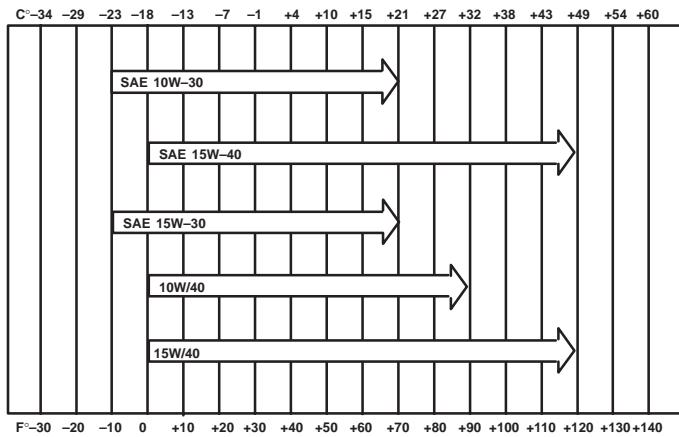

TEMPERATURE RANGE ANTICIPATED BEFORE NEXT OIL CHANGE

Replacing Oil And Filter

See the Service Schedule Page 1-3 for the service interval for replacing the engine oil and filter.

Run the engine until it is at operating temperature. Stop the engine.

Open the rear door. Remove the drain plug (Item 1) [B]. Drain the oil into container.

Remove the oil filter (Item 1) [C].


Clean the filter housing surface. Put clean oil on the new oil filter gasket. Install the filter and hand tighten only.

Install and tighten the drain plug.


Remove the filler cap (Item 2) [A].

Put 10 qts. (9,5 L) of oil in the engine.


Start the engine and let it run for several minutes. Stop the engine. Check for leaks and check the oil level. Add oil as needed if it is not at the top mark on the dipstick.

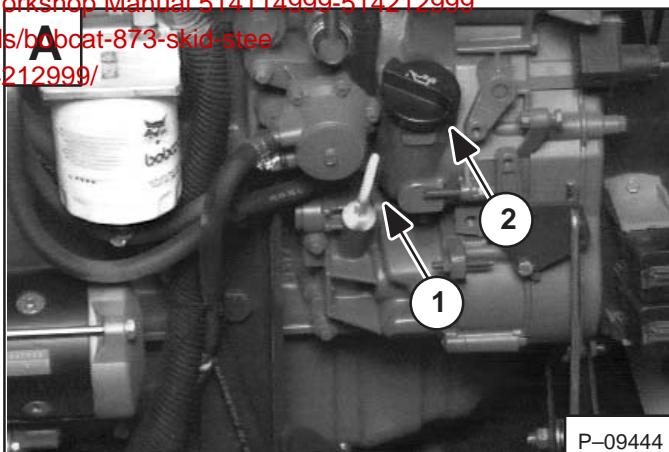

P-09444

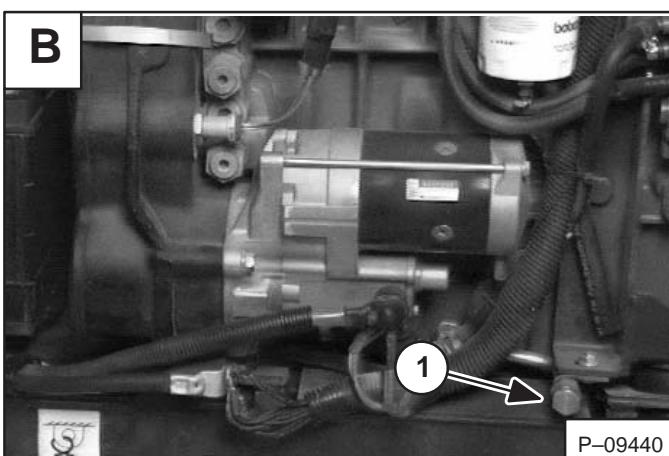

P-09440

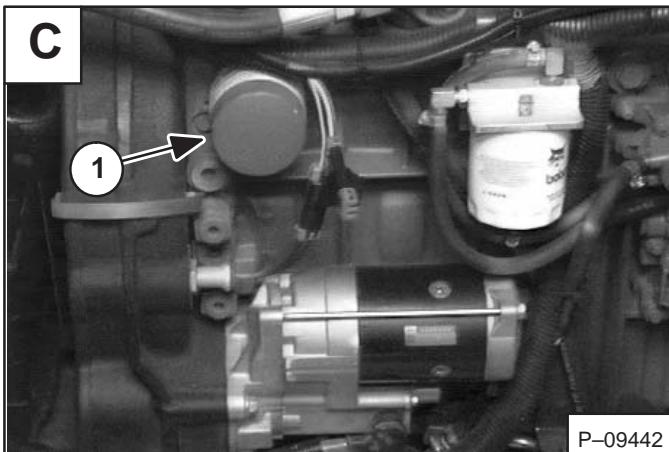

P-09442

WARNING

Always clean up spilled fuel or oil. Keep heat, flames, sparks or lighted tobacco away from fuel and oil. Failure to use care around combustibles can cause explosion or fire which can result in injury or death.

W-2103-1285

Sample of manual. Download All 479 pages at:

<https://www.arepairmanual.com/downloads/bobcat-873-skid-steer-loader-service-repair-workshop-manual-514114999-514212999/>