

Product: 2010 Bobcat 435 Compact Excavator Service Repair Workshop Manual(S/N AACB11001 & Above,S/N AACD11001 & Above)
Full Download: <https://www.aresairmanual.com/downloads/2010-bobcat-435-compact-excavator-service-repair-workshop-manuals-n-aacb11001-aboves-n-aacd11001-aboves-n-aa8911001-aboves-n-aa8a11001-above/>




Bobcat®

Service Manual

435 Compact Excavator

S/N AACB11001 & Above
S/N AACD11001 & Above
S/N AA8911001 & Above
S/N AA8A11001 & Above

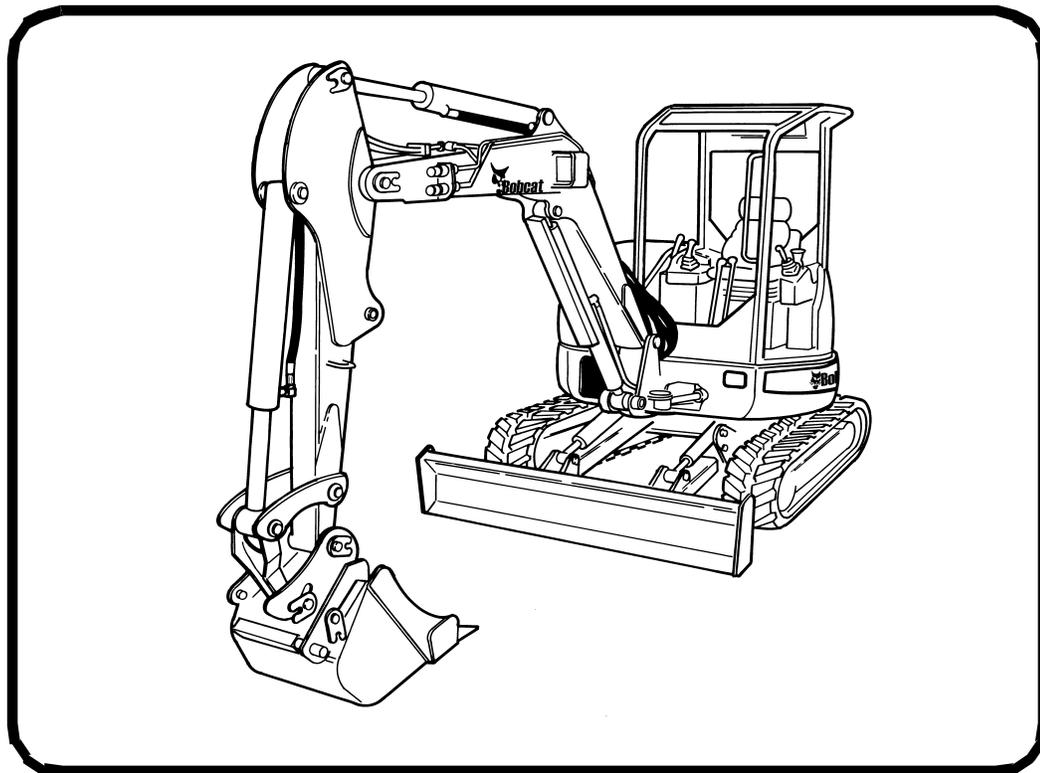

Sample of manual. Download All 1192 pages at:

<https://www.aresairmanual.com/downloads/2010-bobcat-435-compact-excavator-service-repair-workshop-manuals-n-aacb11001-aboves-n-aacd11001-aboves-n-aa8911001-aboves-n-aa8a11001-above/>

6986749 (5-10)

Printed in U.S.A.



© Bobcat Company 2010

Product: 2010 Bobcat 435 Compact Excavator Service Repair Workshop Manual(S/N AACB11001 & Above,S/N AACD11001 & Above)
Full Download: <https://www.arepairmanual.com/downloads/2010-bobcat-435-compact-excavator-service-repair-workshop-manuals-n-aacb11001-above-n-aacd11001-above-n-aa8911001-above-n-aa8a11001-above>
/

Sample of manual. Download All 1192 pages at:
<https://www.arepairmanual.com/downloads/2010-bobcat-435-compact-excavator-service-repair-workshop-manuals-n-aacb11001-above-n-aacd11001-above-n-aa8911001-above-n-aa8a11001-above>

MAINTENANCE SAFETY




WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0807




Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

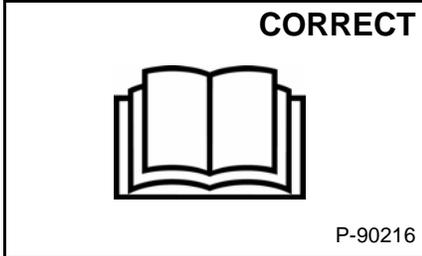


P-90216

- ⚠ Never service the Bobcat Hydraulic Excavator without instructions.

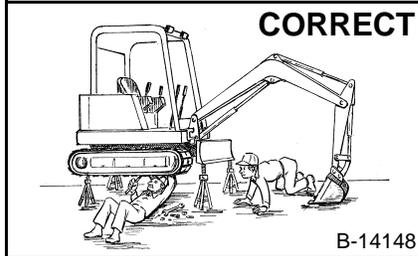


B-14148

- ⚠ Use the correct procedure to lift and support the excavator.
- ⚠ Always lift the blade fully before installing jackstands.

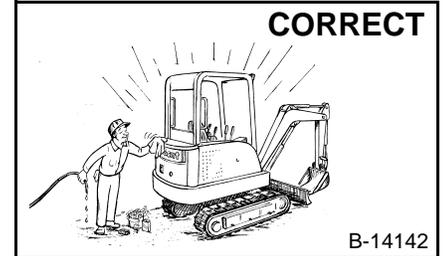


B-14142

- ⚠ Cleaning and maintenance are required daily.

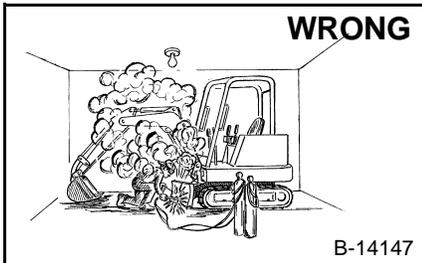


B-14147

- ⚠ Have good ventilation when welding or grinding painted parts.
- ⚠ Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.

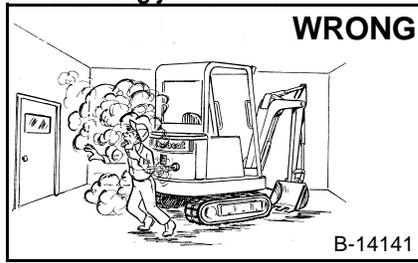


B-14141

- ⚠ Vent exhaust to outside when engine must be run for service.
- ⚠ Exhaust system must be tightly sealed. Exhaust Fumes can kill without warning.

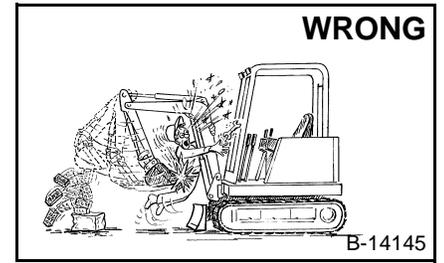


B-14145

- ⚠ Always lower the bucket and blade to the ground before doing any maintenance.
- ⚠ Never modify equipment or add attachments not approved by Bobcat Company.

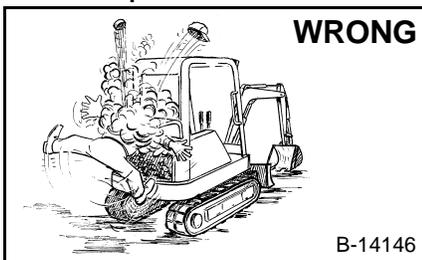

B-14146

- ⚠ Stop, cool and clean engine of flammable materials before checking fluids.
- ⚠ Never service or adjust machine with the engine running unless instructed to do so in the manual.
- ⚠ Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- ⚠ Never fill fuel tank with engine running, while smoking or when near open flame.

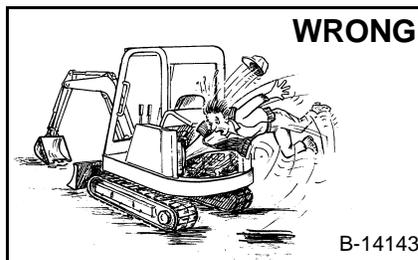

B-14143

- ⚠ Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- ⚠ Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
- ⚠ Keep rear door closed except for service. Close and latch door before operating the excavator.



B-6589

- ⚠ Lead-acid batteries produce flammable and explosive gases.
- ⚠ Keep arcs, sparks, flames and lighted tobacco away from batteries.
- ⚠ Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.



Bobcat®

ALPHABETICAL INDEX

AIR CLEANER	10-01, 70-01	FAN/CHARGE PUMP	30-01
AIR CONDITIONING SERVICE	80-01	FLOORMAT AND FLOOR PLATES	50-01
AIR CONDITIONING SYSTEM FLOW	80-01	FUEL, COOLANT AND LUBRICANTS	SPEC-01
ALTERNATOR	60-01	FUEL LEVEL SENDER	60-01
ANGLE BLADE	40-01	FUEL SYSTEM.....	10-01
ANGLE BLADE ASSEMBLY	40-01	FUEL TANK	50-01
ANGLE BLADE CUTTING EDGE	40-01		
ANGLE BLADE CYLINDER.....	20-01	GENERAL AIR CONDITIONING SERVICE	
ANGLE BLADE VALVE	20-01	GUIDELINES	80-01
ARM	50-01		
ARM CYLINDER	20-01	HEATER A/C FAN	80-01
		HEATER AIR FILTER	
BASIC TROUBLESHOOTING	80-01	(WITH CAB OPTION ONLY)	10-01
BATTERY	60-01	HEATER COIL	80-01
BLADE	40-01	HEATER VALVE	80-01
BLADE CONTROL.....	50-01	HORN	50-01
BLADE CYLINDER.....	20-01	HOSES	20-01
BOOM	50-01	HYDRAULIC CONTROL VALVE	20-01
BOOM CYLINDER.....	20-01	HYDRAULIC CONNECTION SPECS	SPEC-01
BOOM SWING CYLINDER.....	20-01	HYDRAULIC FLUID SPECIFICATIONS.....	SPEC-01
BOOM SWING LOCK VALVE	20-01	HYDRAULIC FILTER MOUNT.....	20-01
BUCKET	50-01	HYDRAULIC PUMP	20-01
BUCKET CYLINDER	20-01	HYDRAULIC RESERVOIR.....	20-01
BUILD UP VALVE	20-01	HYDRAULIC SYSTEM	10-01
		HYDRAULIC SYSTEM INFORMATION	20-01
CAB.....	50-01	HYDRAULIC X-CHANGE VALVE.....	50-01
CLAMP.....	50-01	HYDROSTATIC PUMP	30-01
CLAMP CYLINDER	20-01	HYDROSTATIC SYSTEM INFORMATION.....	30-01
COMPONENTS	80-01		
COMPRESSOR	80-01	LEFT CONTROL LEVER (JOYSTICK)	20-01
CONDENSOR	80-01	LEFT CONSOLE	50-01
CONVERSIONS	SPEC-01	LIFTING AND BLOCKING THE EXCAVATOR	10-01
CONTROL LINKAGE ASSEMBLY	50-01	LIFTING THE EXCAVATOR	10-01
CONTROL PATTERN SELECTOR VALVE	20-01	LIGHTS.....	60-01
COOLING FAN	20-01	LOWER TRACK ROLLER.....	40-01
COOLING SYSTEM.....	10-01	LUBRICATION OF THE HYDRAULIC	
CROSSPORT RELIEF VALVE	20-01	EXCAVATOR	10-01
DELUXE INSTRUMENT PANEL SETUP.....	60-01	MAIN RELIEF VALVES.....	20-01
DIAGNOSTICS SERVICE CODE	60-01	MANIFOLD ASSEMBLY/ACCUMULATOR	20-01
DIRECT TO TANK VALVE	20-01	MUFFLER.....	70-01
DRIVE BELT	30-01		
DRIVE BELT SHIELD	30-01	OIL COOLER.....	20-01
DUAL SEQUENCE VALVE	20-01	OPERATOR CAB (ROPS/TOPS)	10-01
ELECTRICAL SYSTEM INFORMATION	60-01	PORT RELIEF VALVES.....	20-01
ENGINE	70-01	PRESSURE REDUCING VALVE.....	20-01
ENGINE ACCESSORY DRIVE BELT	10-01	PRESSURE RELIEF VALVE	80-01
ENGINE COMPONENTS AND TESTING	70-01	PRESSURE SWITCH	80-01
ENGINE FLYWHEEL	70-01		
ENGINE LUBRICATION SYSTEM.....	10-01		
ENGINE SPECIFICATIONS.....	SPEC-01		
ENGINE SPEED CONTROL	50-01		
EVAPORATOR.....	80-01		
EVAPORATOR/HEATER UNIT	80-01		
EXPANSION VALVE	80-01		

ALPHABETICAL INDEX (CONT'D)

RADIATOR	70-01
RECEIVER/DRIER	80-01
RECONDITIONING THE ENGINE	70-01
REGULAR MAINTENANCE	80-01
REMOVING AIR FROM HYDRAULIC SYSTEM	20-01
RIGHT CONTROL LEVER (JOYSTICK)	20-01
RIGHT CONSOLE	50-01
RIGHT PEDAL AND LINKAGE.....	50-01
RIGHT SIDE COVER	10-01, 50-01
ROPS CANOPY.....	50-01
SAFETY	80-01
SEAT AND SEAT MOUNT.....	50-01
SERVICE SCHEDULE	10-01
SPARK ARRESTOR MUFFLER.....	10-01
SPECIFICATIONS	SPEC-01
STARTER	60-01
SWING CIRCLE GEAR	40-01
SWING FRAME	50-01
SWING MOTOR	20-01
SWING MOTOR DRIVE CARRIER	20-01
SWIVEL JOINT.....	20-01
SYSTEM CHARGING AND RECLAMATION	80-01
SYSTEM TROUBLESHOOTING CHART	80-01
TAILGATE.....	10-01, 50-01
TEMPERATURE/PRESSURE	80-01
THERMOSTAT.....	80-01
TORQUE SPECIFICATIONS	SPEC-01
TRACK DAMAGE IDENTIFICATION.....	40-01
TRACK FRAME	40-01
TRACK IDLER	40-01
TRACKS	40-01
TRANSPORTING THE EXCAVATOR.....	10-01
TRAVEL CONTROL VALVE	20-01
TRAVEL CONTROLS	50-01
TRAVEL MOTOR.....	10-01, 20-01
TRAVEL PILOT PRESSURE.....	30-01
TROUBLESHOOTING.....	70-01
TWO SPEED SWITCH	60-01
UPPERSTRUCTURE	50-01
UPPERSTRUCTURE SLEW LOCK	10-01
UPPER TRACK ROLLER.....	40-01
X-CHANGE	50-01
X-CHANGE (HYDRAULIC).....	50-01
X-CHANGE (PIN ON)	50-01

CONTENTS

FOREWORD.....	III
SAFETY INSTRUCTIONS	V
FIRE PREVENTION	VII
SERIAL NUMBER LOCATIONS	IX
DELIVERY REPORT.....	X
BOBCAT EXCAVATOR IDENTIFICATION	XI
SAFETY AND MAINTENANCE.....	10-01
HYDRAULIC SYSTEM	20-01
HYDROSTATIC SYSTEM.....	30-01
UNDERCARRIAGE.....	40-01
UPPERSTRUCTURE & SWING SECTION	50-01
ELECTRICAL SYSTEM AND ANALYSIS	60-01
ENGINE SERVICE	70-01
HEATING, VENTILATION, AIR CONDITIONING	80-01
SPECIFICATIONS.....	SPEC-01

**SAFETY AND
MAINTENANCE**

**HYDRAULIC
SYSTEM**

**HYDROSTATIC
SYSTEM**

UNDERCARRIAGE

**UPPERSTRUCTURE
& SWING
SECTION**

**ELECTRICAL
SYSTEM AND
ANALYSIS**

**ENGINE
SERVICE**

HVAC

SPECIFICATIONS




Bobcat®

FOREWORD


This manual is for the Bobcat excavator mechanic. It provides necessary servicing and adjustment procedures for the Bobcat excavator and its component parts and systems. Refer to the Operation & Maintenance Manual for operating instructions, starting procedure, daily checks, etc.

A general inspection of the following items must be made after the excavator has had service or repair:


1. Check that the ROPS/TOPS/FOPS is in good condition and is not modified.

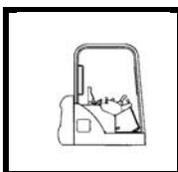

2. Check that ROPS/TOPS mounting hardware is tightened and is Bobcat approved.

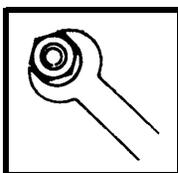


3. The seat belt must be correctly installed, functional and in good condition.

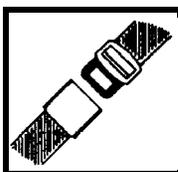

4. Machine signs (decals) must be legible and in the correct location.




5. Travel levers, control levers and foot pedals must return to neutral. Check that the pedal locks are in working order.

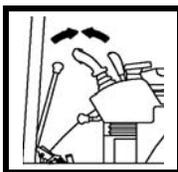


6. Check for correct function of the work lights.




7. Enclosure door latches must open and close freely.

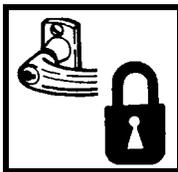


8. Attachment locking pins must function correctly and be in good condition.

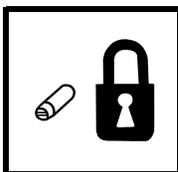


9. Safety treads must be in good condition.

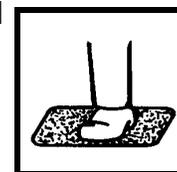


10. Check for correct function of indicator lamps.

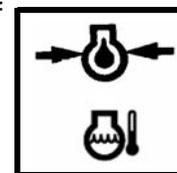


11. Check hydraulic fluid level, engine oil level and fuel supply.

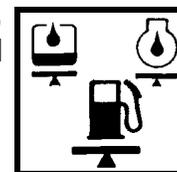


12. Inspect for fuel, oil or hydraulic fluid leaks.

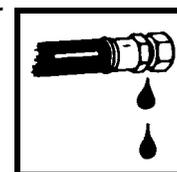


13. Lubricate the excavator.

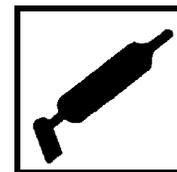


14. Check the condition of the battery and cables.

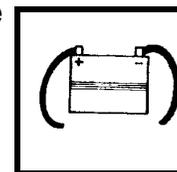

15. Inspect the air cleaner for damage or leaks. Check the condition of the element.

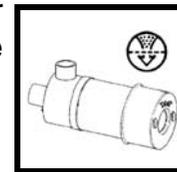


16. Check the electrical charging system.

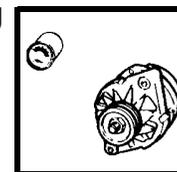


FW EXC-0509 SM

17. Check tracks for wear and tension. Use only approved tracks.

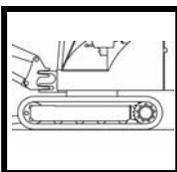


18. Inspect for loose or broken parts or connections.

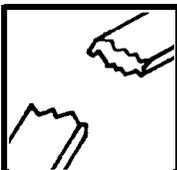


19. Check for any field modification not completed.




20. Operate the machine and check all functions.

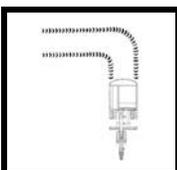

21. Check the control console interlocks for correct function.

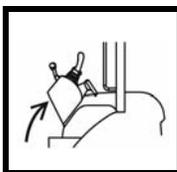


22. Inspect the X-Change™ for wear or damage. Repair or replace damaged parts.

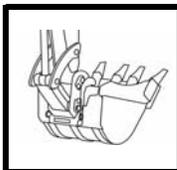

23. Check function or condition of all equipped options and accessories (examples: special applications kit, motion alarm, etc.).



24. Recommend to the owner that all necessary corrections be made before the machine is returned to service.

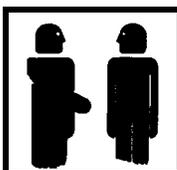

**CALIFORNIA
PROPOSITION 65 WARNING**
Diesel engine exhaust and some of its constituents are known to the state of California to cause cancer, birth defects and other reproductive harm.

SAFETY INSTRUCTIONS



Safety Alert Symbol

This symbol with a warning statement means: **“Warning, be alert! Your safety is involved!”**
Carefully read the message that follows.



WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903

IMPORTANT

This notice identifies procedures which must be followed to avoid damage to the machine.

I-2019-0284



DANGER

The signal word **DANGER** on the machine and in the manuals indicates a hazardous situation which, if not avoided, will result in death or serious injury.

D-1002-1107



WARNING

The signal word **WARNING** on the machine and in the manuals indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

W-2044-1107

The following publications provide information on the safe use and maintenance of the Bobcat machine and attachments:

- The Delivery Report is used to assure that complete instructions have been given to the new owner and that the machine is in safe operating condition.
- The Operation & Maintenance Manual delivered with the machine or attachment contains operating information as well as routine maintenance and service procedures. It is a part of the machine and can be stored in a container provided on the machine. Replacement Operation & Maintenance Manuals can be ordered from your Bobcat dealer.
- Machine signs (decals) instruct on the safe operation and care of your Bobcat machine or attachment. The signs and their locations are shown in the Operation & Maintenance Manual. Replacement signs are available from your Bobcat dealer.
- An Operator's Handbook fastened to the operator cab. It's brief instructions are convenient to the operator. The handbook is available from your dealer in an English edition or one of many other languages. See your Bobcat dealer for more information on translated versions.
- The AEM Safety Manual delivered with the machine gives general safety information.
- The Service Manual and Parts Manual are available from your dealer for use by mechanics to do shop-type service and repair work.
- The Compact Excavator Operator Training Course is available through your local dealer or at www.training.bobcat.com or www.bobcat.com. This course is intended to provide rules and practices of correct operation of the Bobcat excavator. The course is available in English and Spanish versions.
- Service Safety Training Courses are available from your Bobcat dealer or at www.training.bobcat.com or www.bobcat.com. They provide information for safe and correct service procedures.
- The Bobcat compact excavator Safety Video is available from your Bobcat dealer or at www.training.bobcat.com or www.bobcat.com.

SI EXC-0308 SM

SAFETY INSTRUCTIONS (CONT'D)

The dealer and owner / operator review the recommended uses of the product when delivered. If the owner / operator will be using the machine for a different application(s) he or she must ask the dealer for recommendations on the new use.



Cutting or drilling concrete containing sand or rock containing quartz may result in exposure to silica dust. Do not exceed Permissible Exposure Limits (PEL) to silica dust as determined by OSHA or other job site Rules and Regulations. Use a respirator, water spray or other means to control dust. Silica dust can cause lung disease and is known to the state of California to cause cancer.

Call Before You Dig
Dial 811 (USA Only)
1-888-258-0808 (USA & Canada)

When you call, you will be directed to a location in your state / province, or city for information about buried lines (telephone, cable TV, water, sewer, gas, etc.).

FIRE PREVENTION



Maintenance

The machine and some attachments have components that are at high temperatures under normal operating conditions. The primary source of high temperatures is the engine and exhaust system. The electrical system, if damaged or incorrectly maintained, can be a source of arcs or sparks.

Flammable debris (leaves, straw, etc.) must be removed regularly. If flammable debris is allowed to accumulate, it can cause a fire hazard. Clean often to avoid this accumulation. Flammable debris in the engine compartment is a potential fire hazard.

The operator's area, engine compartment and engine cooling system must be inspected every day and cleaned if necessary to prevent fire hazards and overheating.

All fuels, most lubricants and some coolants mixtures are flammable. Flammable fluids that are leaking or spilled onto hot surfaces or onto electrical components can cause a fire.

Operation

Do not use the machine where exhaust, arcs, sparks or hot components can contact flammable material, explosive dust or gases.

Electrical



Check all electrical wiring and connections for damage. Keep the battery terminals clean and tight. Repair or replace any damaged part or wires that are loose or frayed.

Battery gas can explode and cause serious injury. Use the procedure in the Operation & Maintenance Manual for connecting the battery and for jump starting. Do not jump start or charge a frozen or damaged battery. Keep any open flames or sparks away from batteries. Do not smoke in battery charging area.

Hydraulic System

Check hydraulic tubes, hoses and fittings for damage and leakage. Never use open flame or bare skin to check for leaks. Hydraulic tubes and hoses must be properly routed and have adequate support and secure clamps. Tighten or replace any parts that show leakage.

Always clean fluid spills. Do not use gasoline or diesel fuel for cleaning parts. Use commercial nonflammable solvents.

Fueling



Stop the engine and let it cool before adding fuel. No smoking! Do not refuel a machine near open flames or sparks. Fill the fuel tank outdoors.

Starting

Do not use ether or starting fluids on any engine that has glow plugs. These starting aids can cause explosion and injure you or bystanders.

Use the procedure in the Operation & Maintenance Manual for connecting the battery and for jump starting.

Spark Arrestor Exhaust System

The spark arrestor exhaust system is designed to control the emission of hot particles from the engine and exhaust system, but the muffler and the exhaust gases are still hot.

Check the spark arrestor exhaust system regularly to make sure it is maintained and working properly. Use the procedure in the Operation & Maintenance Manual for cleaning the spark arrestor muffler (if equipped).

FIRE PREVENTION (CONT'D)

Welding And Grinding

Always clean the machine and attachment, disconnect the battery, and disconnect the wiring from the Bobcat controllers before welding. Cover rubber hoses, battery and all other flammable parts. Keep a fire extinguisher near the machine when welding.

Have good ventilation when grinding or welding painted parts. Wear dust mask when grinding painted parts. Toxic dust or gas can be produced.

Dust generated from repairing nonmetallic parts such as hoods, fenders or covers can be flammable or explosive. Repair such components in a well ventilated area away from open flames or sparks.

Fire Extinguishers



Know where fire extinguishers and first aid kits are located and how to use them. Inspect the fire extinguisher and service the fire extinguisher regularly. Obey the recommendations on the instructions plate.


DELIVERY REPORT

Figure 3

The diagram shows a form titled "DELIVERY REPORT". The form is divided into several sections. At the top, there is a header section with the title "DELIVERY REPORT". Below this, there are two columns of horizontal lines representing text input fields. On the left side, there is a section with a dark header containing the word "WARNING" in white capital letters, followed by several lines of text. At the bottom right of the form, there is a small rectangular box containing the alphanumeric code "B-16315".

The delivery report must be filled out by the dealer and signed by the owner or operator when the Bobcat Excavator is delivered. An explanation of the form must be given to the owner. Make sure it is filled out completely **[Figure 3]**.

BOBCAT EXCAVATOR IDENTIFICATION

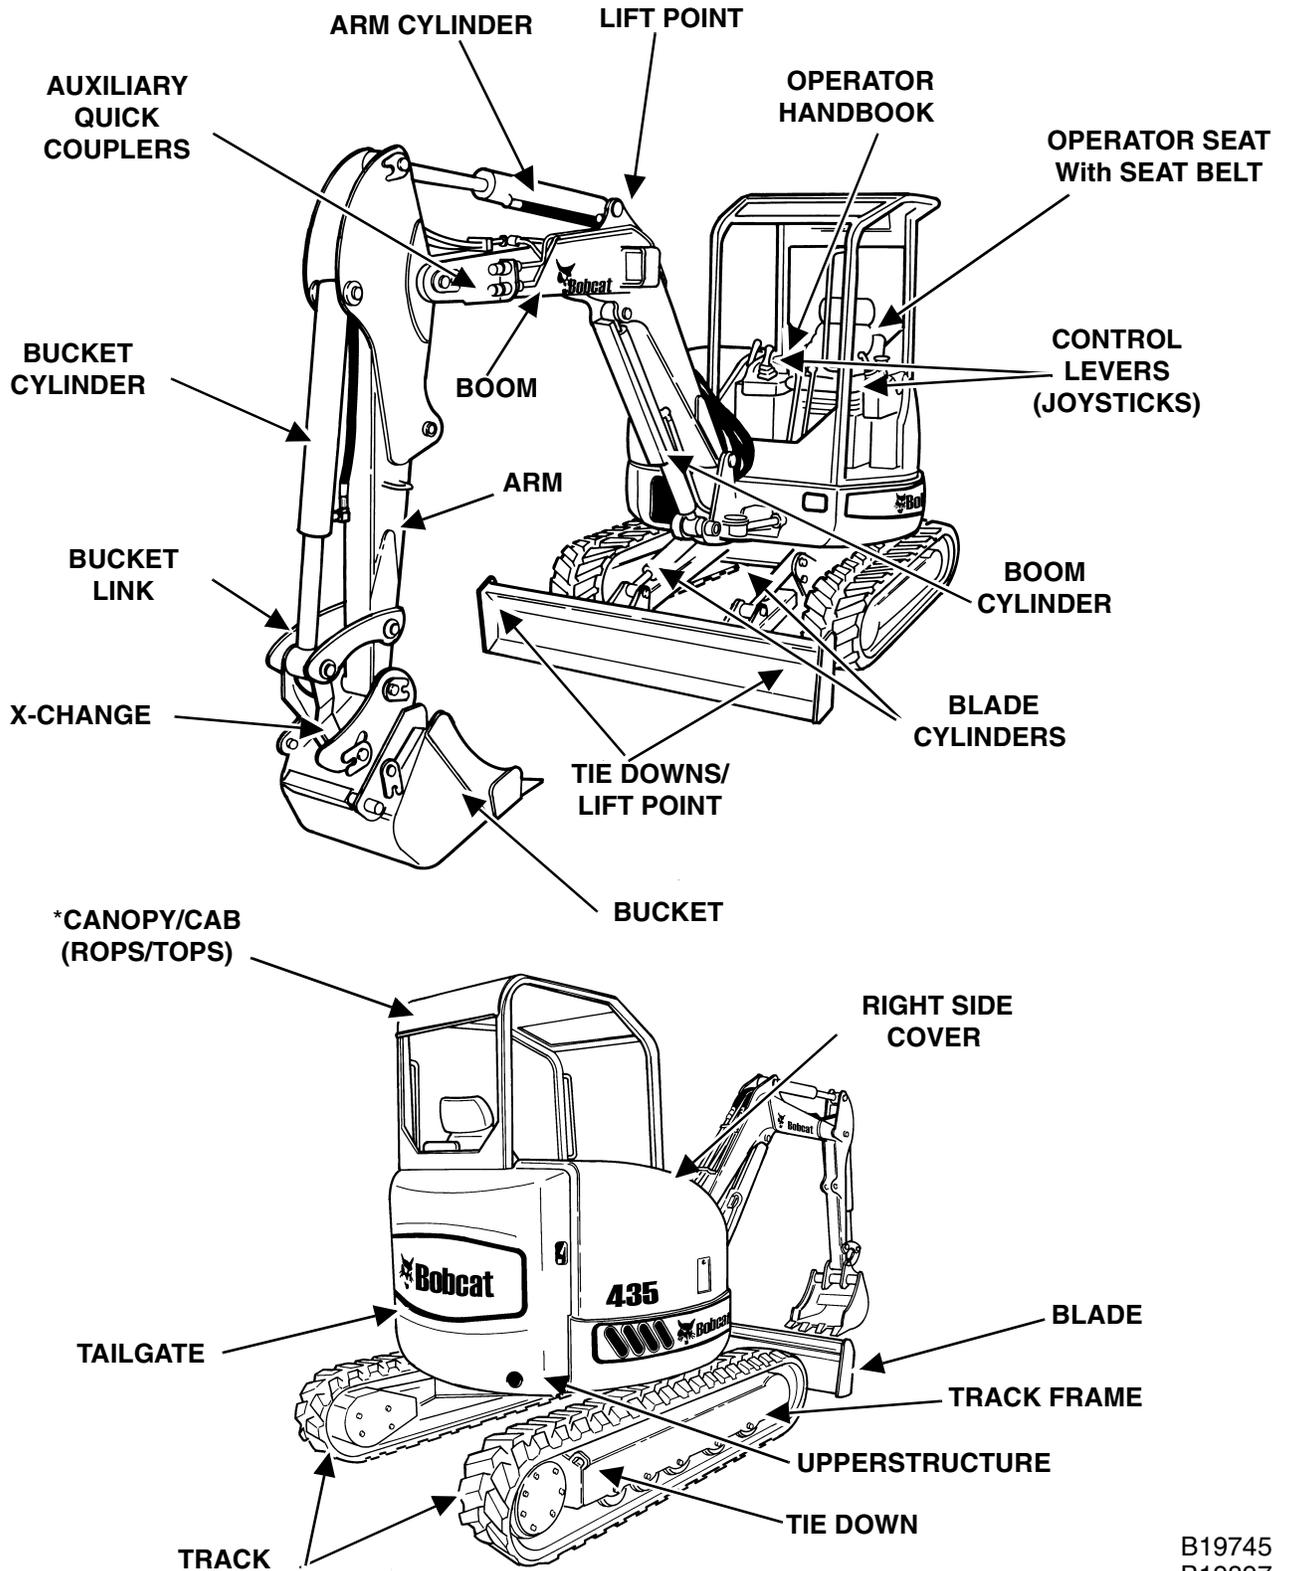

B19745
B19897

* FOGS (Falling Object Guards) is available from your Bobcat Excavator dealer.



Bobcat®

SAFETY AND MAINTENANCE

SAFETY & MAINTENANCE

AIR CLEANER	10-60-1
Daily Check	10-60-1
Replacing The Filters	10-60-1
COOLING SYSTEM	10-70-1
Checking Coolant Level	10-70-1
Cleaning The Cooling System	10-70-1
Replacing The Coolant	10-70-2
ENGINE ACCESSORY DRIVE BELT	10-140-1
Belt Adjustment	10-140-1
Belt Tension	10-140-1
ENGINE LUBRICATION SYSTEM	10-90-1
Checking Engine Oil	10-90-1
Replacing Oil And Filter	10-90-1
FUEL SYSTEM	10-80-1
Draining The Fuel Tank	10-80-2
Filling The Fuel Tank	10-80-1
Fuel Specifications	10-80-1
Inline Fuel Filter	10-80-3
Spin On Fuel Filter	10-80-3
Removing Water From The Fuel Filter	10-80-2
HEATER AIR FILTER (WITH CAB OPTION ONLY)	10-61-1
Removal And Installation	10-61-1
HYDRAULIC SYSTEM	10-100-1
Checking And Adding Hydraulic Oil	10-100-1
Diagnostic Couplers	10-100-5
Replacing The Fan Filter	10-100-4
Replacing The Case Drain Filter	10-100-3
Replacing The Hydraulic Filter	10-100-3
Replacing The Hydraulic Oil	10-100-2
LIFTING AND BLOCKING THE EXCAVATOR	10-10-1
Procedure	10-10-1
LIFTING THE EXCAVATOR	10-12-1
LUBRICATION OF THE HYDRAULIC EXCAVATOR	10-110-1

Continued On Next Page

SAFETY AND MAINTENANCE (CONT'D)

OPERATOR CAB (ROPS/TOPS)	10-20-1
Cab Door	10-20-2
Emergency Exit	10-20-1
Front Window	10-20-3
Right Side Windows	10-20-5
RIGHT SIDE COVER	10-41-1
Opening And Closing The Right Side Cover	10-41-1
SERVICE SCHEDULE	10-50-1
Chart	10-50-1
SPARK ARRESTOR MUFFLER	10-130-1
TAILGATE	10-40-1
Adjusting The Latch	10-40-1
Opening And Closing The Tailgate	10-40-1
TRANSPORTING THE EXCAVATOR	10-30-1
Procedure	10-30-1
TRAVEL MOTOR	10-120-1
Checking Oil Level	10-120-1
Draining The Travel Motor	10-120-1
UPPERSTRUCTURE SLEW LOCK	10-11-1
Operation	10-11-1


TIGHTEN ALL HARDWARE PER SIZE TO GRADE 5 TORQUE (SEE STANDARD BOLT TORQUE SPECIFICATIONS ON SPEC-30-1.) UNLESS OTHERWISE SPECIFIED.

SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE AND STANDARD ITEMS MAY VARY.

LIFTING AND BLOCKING THE EXCAVATOR

Procedure

Figure 10-10-1

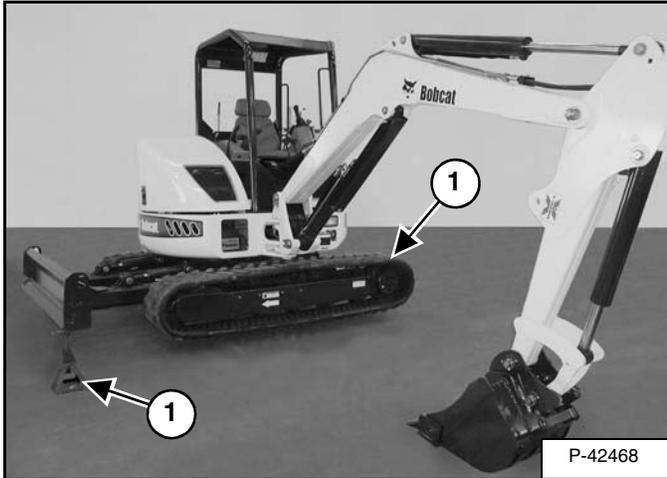

Raise one side of the machine (approximately 4 in.) using the boom and arm [Figure 10-10-1].

Raise the blade fully and install jack stands under the blade and track frame (Item 1) [Figure 10-10-1]. Lower the boom until all machine weight is on the jack stands.

Repeat the procedure for the other side.

Stop the engine.

WARNING

AVOID INJURY

Keep fingers and hands out of pinch points when checking the track tension.

W-2142-0903

WARNING

Put jackstands under the blade and rear corners of the undercarriage before working under the machine. Failure to block up the machine may allow it to move or fall and result in injury or death.

W-2218-1195



Bobcat®

UPPERSTRUCTURE SLEW LOCK

Operation

There is not a mechanical upperstructure slew lock to engage or disengage.

This excavator is equipped with an automatically applied slew brake integrated into the slew motor.

When the upperstructure slew circuit is engaged, hydraulic pressure unlocks the slew motor.


When the upperstructure slew circuit is disengaged, spring pressure applies the internal slew motor brake.



Bobcat®

LIFTING THE EXCAVATOR

Figure 10-12-1

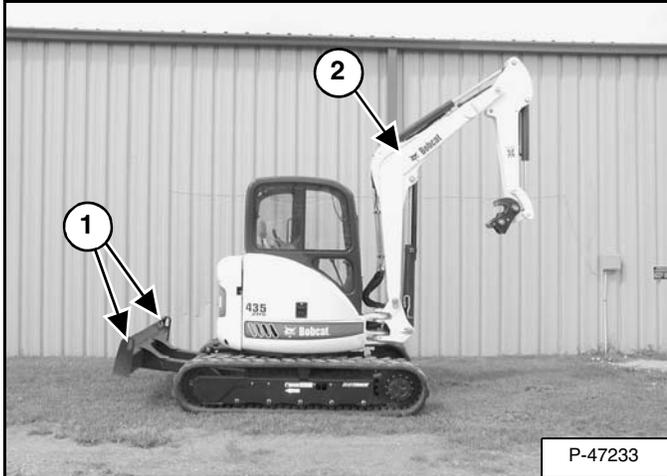

Fully extend the cylinders of the bucket, arm, and boom so that the excavator is in the position as shown [Figure 10-12-1].

Raise the blade all the way.

Put all the control levers in neutral.




AVOID INJURY OR DEATH

- Use a lifting fixture with sufficient capacity for the weight of the excavator plus any added attachments.
- Maintain center of gravity and balance when lifting.
- Do not swing boom or upperstructure. Engage the upperstructure slew lock.
- Never lift with operator on machine.

W-2202-0607

Figure 10-12-2

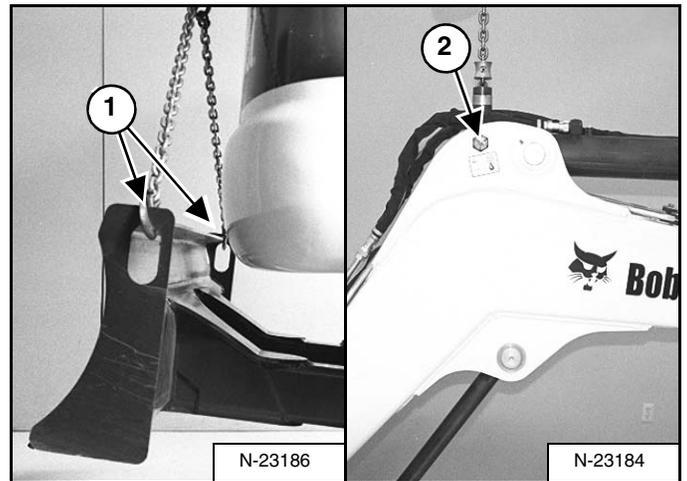

Fasten chains to the ends of the blade (Item 1) [Figure 10-12-1] and [Figure 10-12-2] and up to a lifting fixture above the canopy/cab. The lifting fixture must extend over the sides of the canopy/cab to prevent the chains from hitting the ROPS/TOPS.

Install a 1 in. (25 mm) bolt and nut (Grade 5 or 8) through the holes at the boom (Item 2) [Figure 10-12-1] and [Figure 10-12-2]. Fasten a chain from the bolt to the lift fixture.




Bobcat®

OPERATOR CAB (ROPS/TOPS)

Emergency Exit


The left door, front window, and right rear window provide exits.

Figure 10-20-1

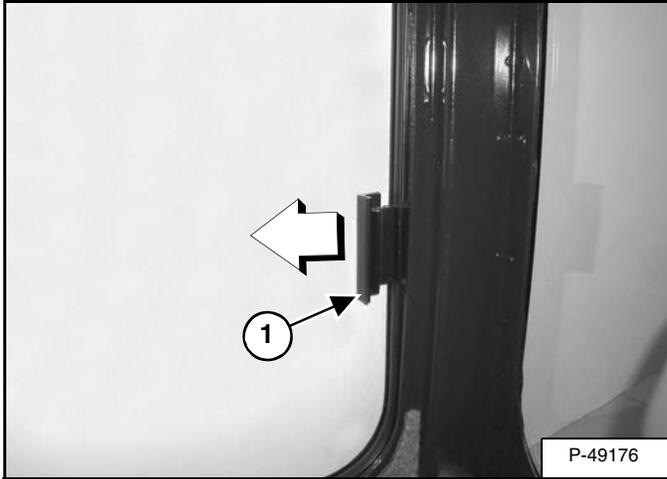

Pull forward on the latch (Item 1) [Figure 10-20-1].

Figure 10-20-2

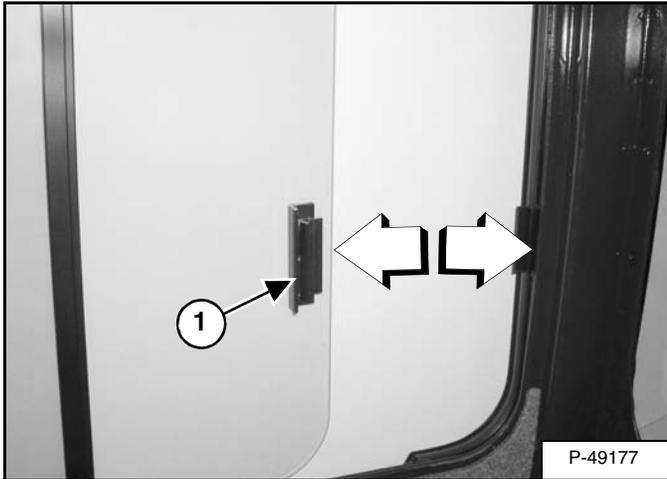

Pull the latch/handle (Item 1) [Figure 10-20-2] forward to open the window.

Push the handle back to close the window.

Figure 10-20-3



Exit through the window [Figure 10-20-3].

Figure 10-20-4




Raise the front window and exit through the window [Figure 10-20-4].

OPERATOR CAB (ROPS/TOPS) (CONT'D)

Cab Door


Figure 10-20-5

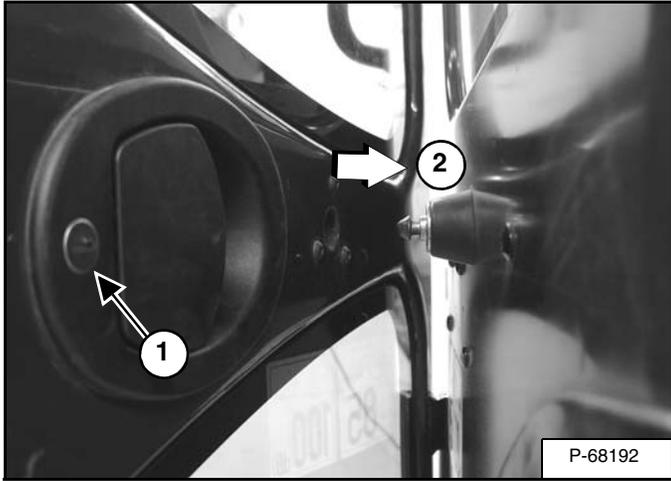

The cab door (Item 1) [Figure 10-20-5] can be locked with the same key as the starter switch (if equipped).

Push the door all the way open (Item 2) [Figure 10-20-5] until the latch engages to hold the door in the open position.

Figure 10-20-6

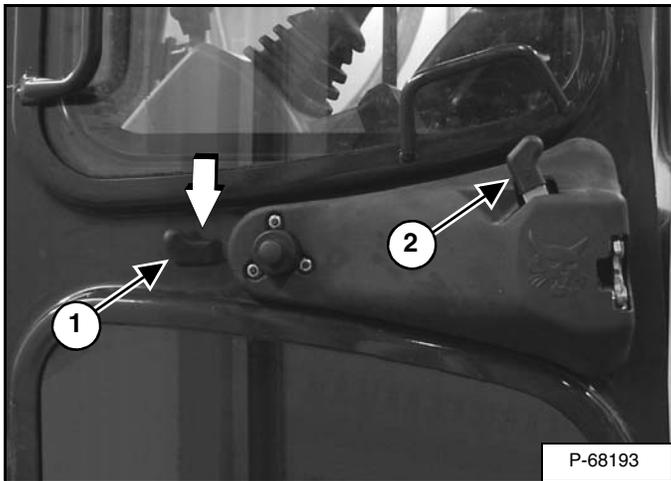


When the door is in the open position, push down on the latch (Item 1) [Figure 10-20-6] and close the door.

From inside the cab, open the door using handle (Item 2) [Figure 10-20-6].

OPERATOR CAB (ROPS/TOPS) (CONT'D)

Front Window


Figure 10-20-7

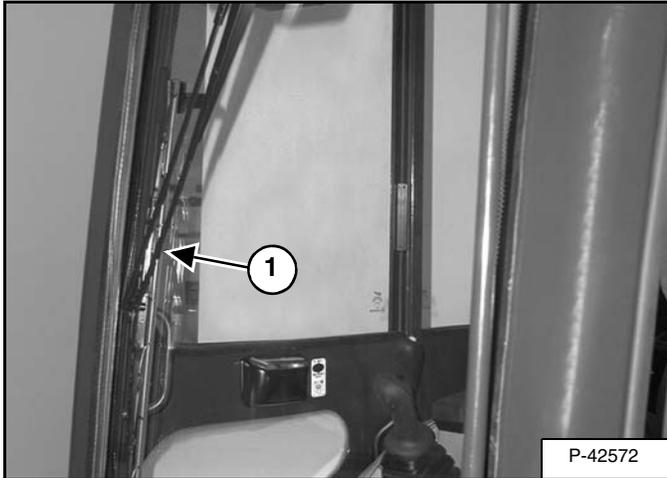

The front window is equipped with a wiper (Item 1) [Figure 10-20-7] and washer.


Opening The Front Window

Figure 10-20-8

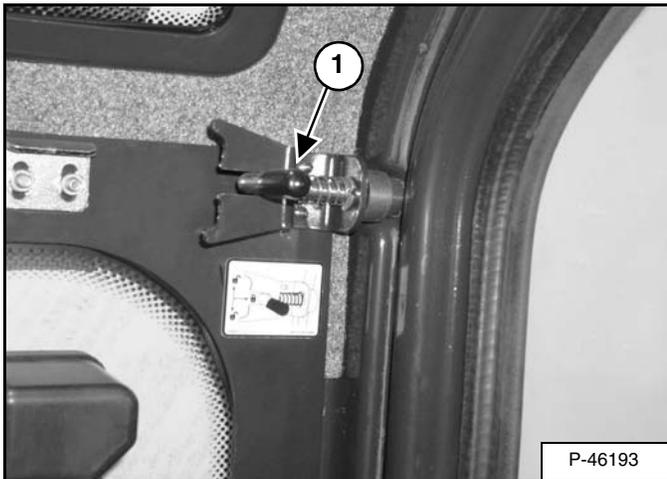

Retract the two top window latch pins (Item 1) [Figure 10-20-8].

Figure 10-20-9

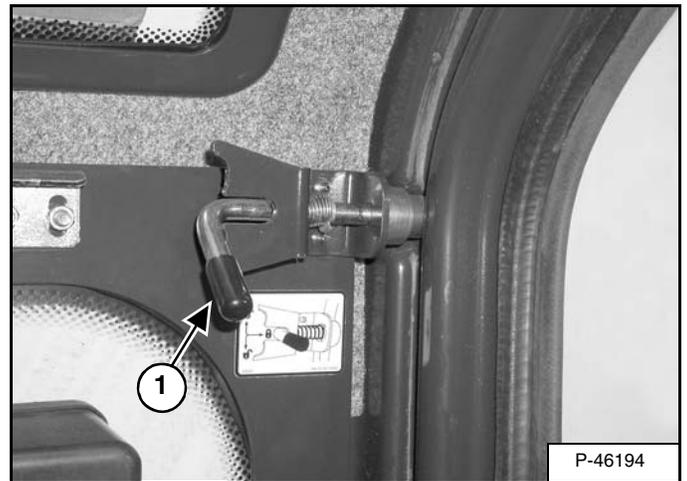

Turn the two top latches (Item 1) [Figure 10-20-9] to the unlocked position.

Figure 10-20-10



Use both window grab handles to pull the top of the window in [Figure 10-20-10].

Continue moving the window in and up over the operator's head until the window is fully raised.

OPERATOR CAB (ROPS/TOPS) (CONT'D)

Product: 2010 Bobcat 435 Compact Excavator Service Repair Workshop Manual(S/N AACB11001 & Above,S/N AACD11001 &


Full Download: <https://www.arepairmanual.com/downloads/2010-bobcat-435-comp>

Front Window (Cont'd)

act-excavator-service-repair-workshop-manuals-n-aacb11001-ab

oves-n-aacd11001-aboves-n-aa8911001-aboves-n-aa8a11001-above

Figure 10-20-11

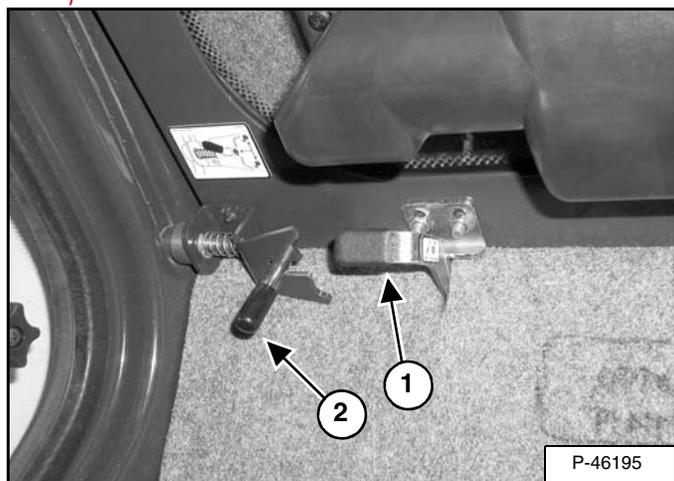

When the window is fully raised, the latch (Item 1) will close on the bracket. Turn the two top latches (Item 2) [Figure 10-20-11] to the locked position.

Closing The Front Window

Support the window while releasing both window latch pins and placing the pins in the unlocked position [Figure 10-20-11].

Support the window using the left grab handle and pull down on the latch (Item 1) [Figure 10-20-11] to release the window.

Use both window grab handles to pull the window down [Figure 10-20-10].

Rotate the top latches (Item 1) [Figure 10-20-9 on Page 3] to the locked position (Item 1) [Figure 10-20-8 on Page 3].

Sample of manual. Download All 1192 pages at:

<https://www.arepairmanual.com/downloads/2010-bobcat-435-compact-excavator-service-repair-workshop-manuals-n-aacb11001>