



# Bobcat®


---

## Service Manual

# E60 Compact Excavator

---

**S/N AGSZ11001 & Above**  
**S/N AET811001 & Above**

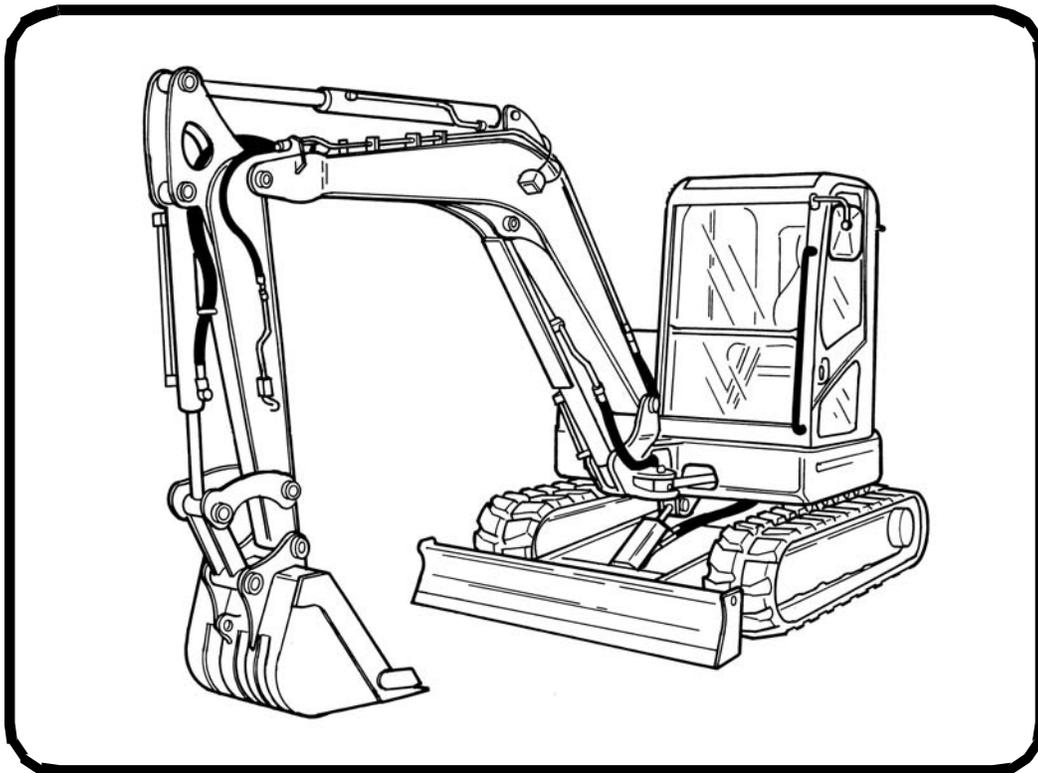

Product: Bobcat E60 Compact Excavator Service Repair Workshop Manual  
Full Download: <https://www.arepairmanual.com/downloads/bobcat-e60-compact-excavator-service-repair-workshop-manual/>

Sample of manual. Download All 753 pages at:  
<https://www.arepairmanual.com/downloads/bobcat-e60-compact-excavator-service-repair-workshop-manual/>

# MAINTENANCE SAFETY



## WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0807



**Safety Alert Symbol:** This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

### CORRECT



P-90216

- ⚠ Never service the Bobcat Excavator without instructions.

### CORRECT



B-19964

- ⚠ Use the correct procedure to lift and support the excavator.

### CORRECT



B-19959

- ⚠ Cleaning and maintenance are required daily.


### WRONG



B-19965

- ⚠ Have good ventilation when welding or grinding painted parts.
- ⚠ Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.


### WRONG

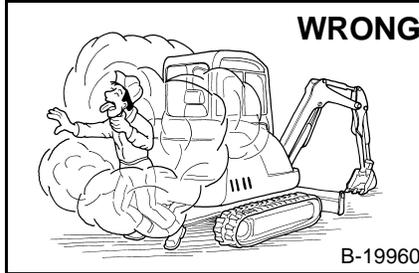

B-19960

- ⚠ Vent exhaust to outside when engine must be run for service.
- ⚠ Exhaust system must be tightly sealed. Exhaust fumes can kill without warning.


### WRONG

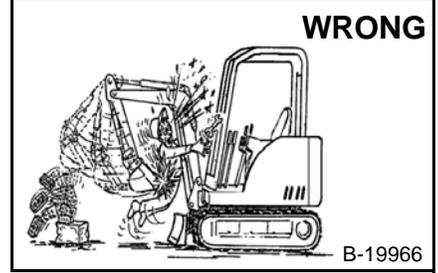

B-19966

- ⚠ Always lower the bucket and blade to the ground before doing any maintenance.
- ⚠ Never modify equipment or add attachments not approved by Bobcat Company.


### WRONG

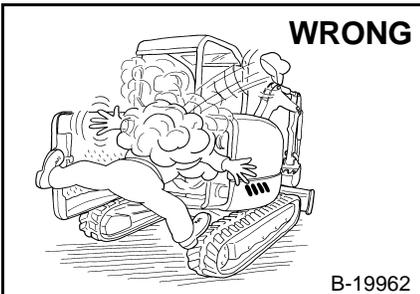

B-19962

- ⚠ Stop, cool and clean engine of flammable materials before checking fluids.
- ⚠ Never service or adjust machine with the engine running unless instructed to do so in the manual.
- ⚠ Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- ⚠ Never fill fuel tank with engine running, while smoking, or when near open flame.


### WRONG

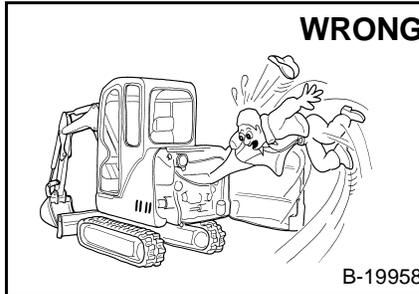

B-19958

- ⚠ Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- ⚠ Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protections approved for type of welding.
- ⚠ Keep tailgate closed except for service. Close and latch tailgate before operating the excavator.

### WRONG

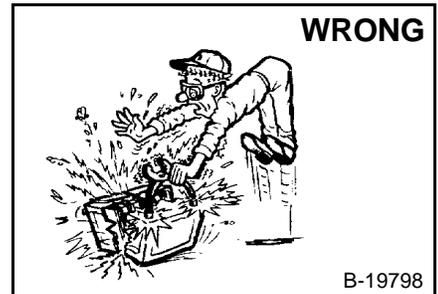

B-19798

- ⚠ Lead-acid batteries produce flammable and explosive gases.
- ⚠ Keep arcs, sparks, flames and lighted tobacco away from batteries.
- ⚠ Batteries contain acid which burns eyes or skin on contact.
- ⚠ Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.

MSW28-0409



**Bobcat®**

## ALPHABETICAL INDEX

ACCUMULATOR.....	20-01	EVAPORATOR/HEATER UNIT.....	70-01
AIR CLEANER .....	60-01	EXPANSION VALVE .....	70-01
AIR CLEANER SERVICE .....	10-01	FLOORMAT .....	40-01
AIR CONDITIONING BELT .....	10-01	FUEL COOLER .....	60-01
AIR CONDITIONING SERVICE.....	70-01	FUEL LEVEL SENDER .....	50-01
AIR CONDITIONING SYSTEM FLOW .....	70-01	FUEL SYSTEM.....	10-01
ALTERNATOR .....	50-01	FUEL TANK .....	40-01
ALTERNATOR BELT .....	10-01	FUEL TRANSFER PUMP.....	50-01
ARM .....	40-01	GENERAL AIR CONDITIONING SERVICE	
ARM CYLINDER .....	20-01	GUIDELINES.....	70-01
ATTACHMENTS.....	40-01	HEATER / AC FAN .....	70-01
AUXILIARY BREAKER VALVE .....	20-01	HEATER VALVE .....	70-01
AUXILIARY HYDRAULIC VALVE .....	20-01	HORN .....	40-01
BASIC TROUBLESHOOTING .....	70-01	HYDRAULIC CONTROL VALVE .....	20-01
BATTERY .....	50-01	HYDRAULIC CONNECTION SPECIFICATIONS	
BLADE .....	30-01	.....	SPEC-01
BLADE CONTROL VALVE.....	20-01	HYDRAULIC FLUID SPECIFICATIONS.....	SPEC-01
BLADE CYLINDER .....	20-01	HYDRAULIC PUMP .....	20-01
BOOM .....	40-01	HYDRAULIC RESERVOIR.....	20-01
BOOM CYLINDER .....	20-01	HYDRAULIC SYSTEM .....	10-01
BOOM SWING CYLINDER.....	20-01	HYDRAULIC SYSTEM INFORMATION .....	20-01
BOOM SWING VALVE .....	20-01	HVAC CONTROLLER .....	70-01
BUCKET .....	40-01	INSTRUMENT PANEL.....	50-01
BUCKET CYLINDER .....	20-01	KEY SWITCH .....	50-01
CAB.....	40-01	LEFT CONTROL LEVER (JOYSTICK) .....	20-01
CAB FILTER.....	10-01	LEFT CONSOLE .....	40-01
CAB TILT PROCEDURE.....	10-01	LEFT UPPERSTRUCTURE SIDE COVER .....	40-01
COMPONENTS .....	70-01	LIFTING AND BLOCKING THE EXCAVATOR .....	10-01
COMPRESSOR .....	70-01	LIFTING THE EXCAVATOR .....	10-01
CONDENSOR .....	70-01	LIGHTS.....	50-01
CONSOLE LOCKOUT SWITCH.....	50-01	LUBRICATING THE EXCAVATOR .....	10-01
CONVERSIONS .....	SPEC-01	MAIN RELIEF VALVES.....	20-01
CONTROL PATTERN SELECTOR VALVE .....	20-01	MUFFLER.....	60-01
COUNTER WEIGHT .....	40-01	OIL COOLER.....	20-01
DIAGNOSTICS SERVICE CODE .....	50-01	OPERATOR CAB (ROPS/TOPS) .....	10-01
DIRECT TO TANK VALVE .....	20-01	PIVOT PINS .....	10-01
DIAGNOSTIC TOOL .....	50-01	PORT RELIEF VALVES.....	20-01
ELECTRICAL SYSTEM INFORMATION .....	50-01	PRESSURE REDUCING VALVE.....	20-01
ENGINE .....	60-01	PRESSURE SWITCH .....	70-01
ENGINE COMPONENTS AND TESTING .....	60-01		
ENGINE COOLING SYSTEM .....	10-01		
ENGINE FLYWHEEL .....	60-01		
ENGINE LUBRICATION SYSTEM.....	10-01		
ENGINE SPECIFICATIONS.....	SPEC-01		
EVAPORATOR/HEATER COIL .....	70-01		

Continued On Next Page

## ALPHABETICAL INDEX (CONT'D)

RADIATOR / OIL COOLER.....	60-01
REAR COVER .....	10-01, 40-01
RECEIVER/DRIER .....	70-01
RECONDITIONING THE ENGINE .....	60-01
REGULAR MAINTENANCE .....	70-01
RIGHT CONTROL LEVER (JOYSTICK) .....	20-01
RIGHT CONSOLE .....	40-01
RIGHT CONSOLE SWITCH COVER .....	50-01
RIGHT SIDE COVER .....	10-01, 40-01
RIGHT UPPERSTRUCTURE SIDE COVER.....	40-01
SAFETY .....	70-01
SEAT BELT .....	10-01
SEAT AND SEAT MOUNT.....	40-01
SERVICE SCHEDULE .....	10-01
SPARK ARRESTOR MUFFLER.....	10-01
SPECIFICATIONS .....	SPEC-01
STARTER .....	50-01
SWING FRAME .....	40-01
SWING MOTOR .....	20-01
SWING MOTOR DRIVE CARRIER .....	20-01
SWIVEL JOINT.....	20-01
SYSTEM CHARGING AND RECLAMATION .....	70-01
SYSTEM TROUBLESHOOTING CHART .....	70-01
TEMPERATURE/PRESSURE .....	70-01
THERMOSTAT.....	70-01
TORQUE SPECIFICATIONS FOR BOLTS .....	SPEC-01
TRACK DAMAGE IDENTIFICATION.....	30-01
TRACK FRAME .....	30-01
TRACK IDLER .....	30-01
TRACK ROLLER .....	30-01
TRACKS .....	30-01
TRANSPORTING THE EXCAVATOR.....	10-01
TRAVEL CONTROL VALVE .....	20-01
TRAVEL MOTOR.....	10-01, 20-01
TROUBLESHOOTING.....	60-01
UPPERSTRUCTURE .....	40-01
WIPER MOTOR .....	50-01

## CONTENTS

SAFETY INSTRUCTIONS .....	VI
FOREWORD.....	III
SERIAL NUMBER LOCATIONS .....	XI
DELIVERY REPORT.....	XI
BOBCAT EXCAVATOR IDENTIFICATION .....	XII
SAFETY AND MAINTENANCE.....	10-01
HYDRAULIC SYSTEM .....	20-01
UNDERCARRIAGE.....	30-01
UPPERSTRUCTURE & SWING SECTION .....	40-01
ELECTRICAL SYSTEM AND ANALYSIS .....	50-01
ENGINE SERVICE .....	60-01
HEATING, VENTILATION, AIR CONDITIONING .....	70-01
SPECIFICATIONS.....	SPEC-01

**SAFETY &  
MAINTENANCE**

**HYDRAULIC  
SYSTEM**

**UNDER-  
CARRIAGE**

**UPPER-  
STRUCTURE &  
SWING SECTION**

**ELECTRICAL  
SYSTEM &  
ANALYSIS**

**ENGINE  
SERVICE**

**HVAC**

**SPECIFICATIONS**















**Bobcat®**

# FOREWORD


This manual is for the Bobcat excavator mechanic. It provides necessary servicing and adjustment procedures for the Bobcat excavator and its component parts and systems. Refer to the Operation & Maintenance Manual for operating instructions, starting procedure, daily checks, etc.

A general inspection of the following items must be made after the excavator has had service or repair:

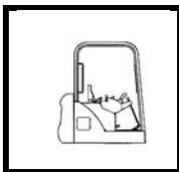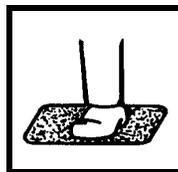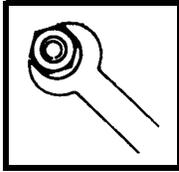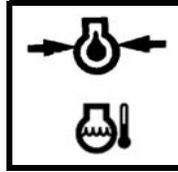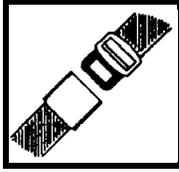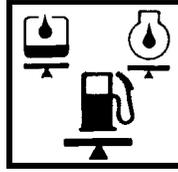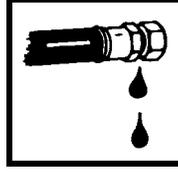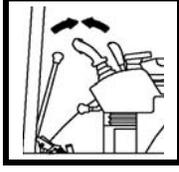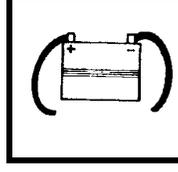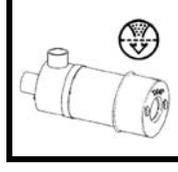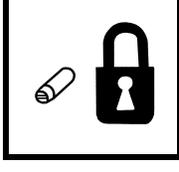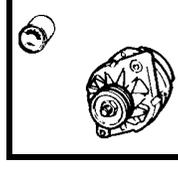
- |   |   |  |   |
|---|---|--|---|
| 1. Check that the ROPS/TOPS/FOPS is in good condition and is not modified.  |    | 9. Safety treads must be in good condition.  |    |
| 2. Check that ROPS/TOPS mounting hardware is tightened and is Bobcat approved.  |    | 10. Check for correct function of indicator lamps.                                   |    |
| 3. The seat belt must be correctly installed, functional and in good condition.   |    | 11. Check hydraulic fluid level, engine oil level and fuel supply.                   |    |
| 4. Machine signs (decals) must be legible and in the correct location.  |   | 12. Inspect for fuel, oil or hydraulic fluid leaks.                                  |   |
| 5. Travel levers, control levers and foot pedals must return to neutral. Check that the pedal locks are in working order. |  | 13. Lubricate the excavator.   |  |
| 6. Check for correct function of the work lights.   |  | 14. Check the condition of the battery and cables.                                   |  |
| 7. Enclosure door latches must open and close freely.   |  | 15. Inspect the air cleaner for damage or leaks. Check the condition of the element. |  |
| 8. Attachment locking pins must function correctly and be in good condition.  |  | 16. Check the electrical charging system.  |  |

FW EXC DSN E60 NA-1208 SM


20. Check tracks for wear and tension. Use only approved tracks.

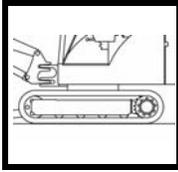


24. Check the control console interlocks for correct function.

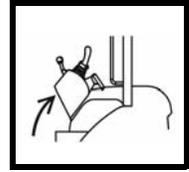

21. Inspect for loose or broken parts or connections.

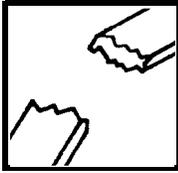

25. Inspect the attachment quick coupler for wear or damage. Repair or replace damaged parts.

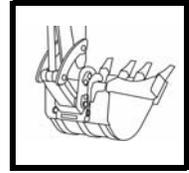


22. Check for any field modification not completed.



26. Check function or condition of all equipped options and accessories (examples: special applications kit, motion alarm, etc.).



23. Operate the machine and check all functions.

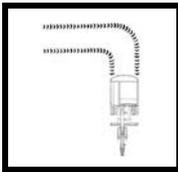

27. Recommend to the owner that all necessary corrections be made before the machine is returned to service.



**CALIFORNIA**  
**PROPOSITION 65 WARNING**  
Diesel engine exhaust and some of its constituents are known to the state of California to cause cancer, birth defects and other reproductive harm.



**Bobcat®**

## SAFETY INSTRUCTIONS



### Safety Alert Symbol

This symbol with a warning statement means:  
“Warning, be alert! Your safety is involved!”  
Carefully read the message that follows.



## WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903

## IMPORTANT

This notice identifies procedures which must be followed to avoid damage to the machine.

I-2019-0284



## DANGER

The signal word DANGER on the machine and in the manuals indicates a hazardous situation which, if not avoided, will result in death or serious injury.

D-1002-1107



## WARNING

The signal word WARNING on the machine and in the manuals indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

W-2044-1107

The following publications provide information on the safe use and maintenance of the Bobcat machine and attachments:

- The Delivery Report is used to assure that complete instructions have been given to the new owner and that the machine is in safe operating condition.
- The Operation & Maintenance Manual delivered with the machine or attachment contains operating information as well as routine maintenance and service procedures. It is a part of the machine and can be stored in a container provided on the machine. Replacement Operation & Maintenance Manuals can be ordered from your Bobcat dealer.
- Machine signs (decals) instruct on the safe operation and care of your Bobcat machine or attachment. The signs and their locations are shown in the Operation & Maintenance Manual. Replacement signs are available from your Bobcat dealer.
- An Operator's Handbook fastened to the operator cab. It's brief instructions are convenient to the operator. The handbook is available from your dealer in an English edition or one of many other languages. See your Bobcat dealer for more information on translated versions.
- The AEM Safety Manual delivered with the machine gives general safety information.
- The Service Manual and Parts Manual are available from your dealer for use by mechanics to do shop-type service and repair work.
- The Compact Excavator Operator Training Course is available through your local dealer or at [www.training.bobcat.com](http://www.training.bobcat.com) or [www.bobcat.com](http://www.bobcat.com). This course is intended to provide rules and practices of correct operation of the Bobcat excavator. The course is available in English and Spanish versions.
- Service Safety Training Courses are available from your Bobcat dealer or at [www.training.bobcat.com](http://www.training.bobcat.com) or [www.bobcat.com](http://www.bobcat.com). They provide information for safe and correct service procedures.
- The Bobcat compact excavator Safety Video is available from your Bobcat dealer or at [www.training.bobcat.com](http://www.training.bobcat.com) or [www.bobcat.com](http://www.bobcat.com).

SI EXC DSN NA-1208 SM

## SAFETY INSTRUCTIONS (CONT'D)

The dealer and owner / operator review the recommended uses of the product when delivered. If the owner / operator will be using the machine for a different application(s) he or she must ask the dealer for recommendations on the new use.



Cutting or drilling concrete containing sand or rock containing quartz may result in exposure to silica dust. Do not exceed Permissible Exposure Limits (PEL) to silica dust as determined by OSHA or other job site Rules and Regulations. Use a respirator, water spray or other means to control dust. Silica dust can cause lung disease and is known to the state of California to cause cancer.

**Call Before You Dig**  
**Dial 811 (USA Only)**  
**1-888-258-0808 (USA & Canada)**

When you call, you will be directed to a location in your state / province, or city for information about buried lines (telephone, cable TV, water, sewer, gas, etc.).

## FIRE PREVENTION



### Maintenance

The machine and some attachments have components that are at high temperatures under normal operating conditions. The primary source of high temperatures is the engine and exhaust system. The electrical system, if damaged or incorrectly maintained, can be a source of arcs or sparks.

Flammable debris (leaves, straw, etc.) must be removed regularly. If flammable debris is allowed to accumulate, it can cause a fire hazard. Clean often to avoid this accumulation. Flammable debris in the engine compartment is a potential fire hazard.

The operator's area, engine compartment and engine cooling system must be inspected every day and cleaned if necessary to prevent fire hazards and overheating.

All fuels, most lubricants and some coolants mixtures are flammable. Flammable fluids that are leaking or spilled onto hot surfaces or onto electrical components can cause a fire.

### Operation

Do not use the machine where exhaust, arcs, sparks or hot components can contact flammable material, explosive dust or gases.

### Electrical



Check all electrical wiring and connections for damage. Keep the battery terminals clean and tight. Repair or replace any damaged part or wires that are loose or frayed.

Battery gas can explode and cause serious injury. Use the procedure in the Operation & Maintenance Manual for connecting the battery and for jump starting. Do not jump start or charge a frozen or damaged battery. Keep any open flames or sparks away from batteries. Do not smoke in battery charging area.

## Hydraulic System

Check hydraulic tubes, hoses and fittings for damage and leakage. Never use open flame or bare skin to check for leaks. Hydraulic tubes and hoses must be properly routed and have adequate support and secure clamps. Tighten or replace any parts that show leakage.

Always clean fluid spills. Do not use gasoline or diesel fuel for cleaning parts. Use commercial nonflammable solvents.

### Fueling



Stop the engine and let it cool before adding fuel. No smoking! Do not refuel a machine near open flames or sparks. Fill the fuel tank outdoors.

### Starting

Do not use ether or starting fluids on any engine that has glow plugs or air intake heater. These starting aids can cause explosion and injure you or bystanders.

Use the procedure in the Operation & Maintenance Manual for connecting the battery and for jump starting.

## Spark Arrestor Exhaust System

The spark arrestor exhaust system is designed to control the emission of hot particles from the engine and exhaust system, but the muffler and the exhaust gases are still hot.

Check the spark arrestor exhaust system regularly to make sure it is maintained and working properly. Use the procedure in the Operation & Maintenance Manual for cleaning the spark arrestor muffler (if equipped).

## **FIRE PREVENTION (CONT'D)**


### **Welding And Grinding**

Always clean the machine and attachment, disconnect the battery, and disconnect the wiring from the Bobcat controllers before welding. Cover rubber hoses, battery and all other flammable parts. Keep a fire extinguisher near the machine when welding.

Have good ventilation when grinding or welding painted parts. Wear dust mask when grinding painted parts. Toxic dust or gas can be produced.

Dust generated from repairing nonmetallic parts such as hoods, fenders or covers can be flammable or explosive. Repair such components in a well ventilated area away from open flames or sparks.

### **Fire Extinguishers**

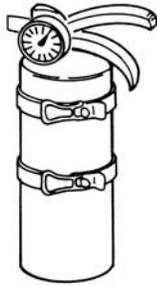

Know where fire extinguishers and first aid kits are located and how to use them. Inspect the fire extinguisher and service the fire extinguisher regularly. Obey the recommendations on the instructions plate.



**Bobcat®**

## SERIAL NUMBER LOCATIONS

Always use the serial number of the excavator when requesting service information or when ordering parts. Early or later models (identification made by serial number) may use different parts, or it may be necessary to use a different procedure in doing a specific service operation.


**Figure 1**



### Excavator Serial Number

The excavator serial number plate (Item 1) [Figure 1] is located on the frame of the machine in the location shown.

Explanation of Excavator Serial Number:

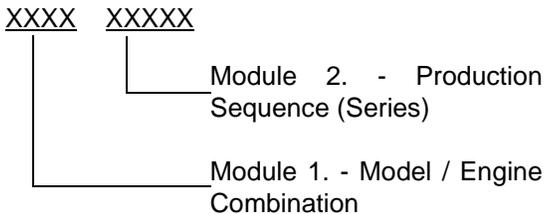


1. The four digit Model/Engine Combination Module number identifies the model number and engine combination.

2. The five digit Production Sequence Number identifies the order which the excavator is produced.

## Engine Serial Number

**Figure 2**

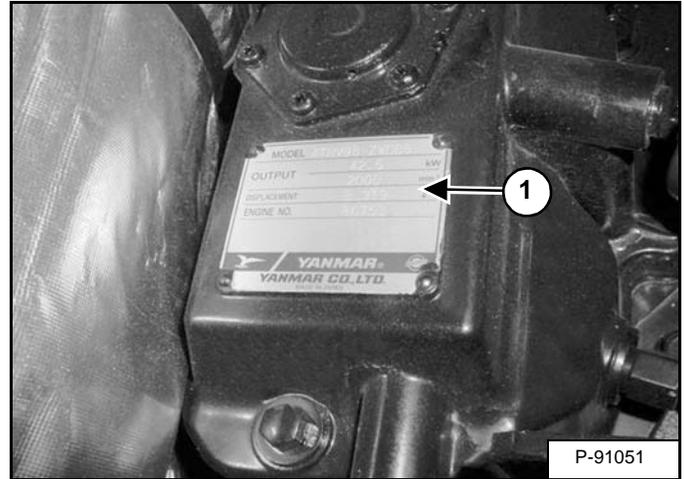



The engine serial number (Item 1) [Figure 2] is located on the top cover.

## DELIVERY REPORT

**Figure 3**

The delivery report must be filled out by the dealer and signed by the owner or operator when the Bobcat Excavator is delivered. An explanation of the form must be given to the owner. Make sure it is filled out completely [Figure 3].

**BOBCAT EXCAVATOR IDENTIFICATION**

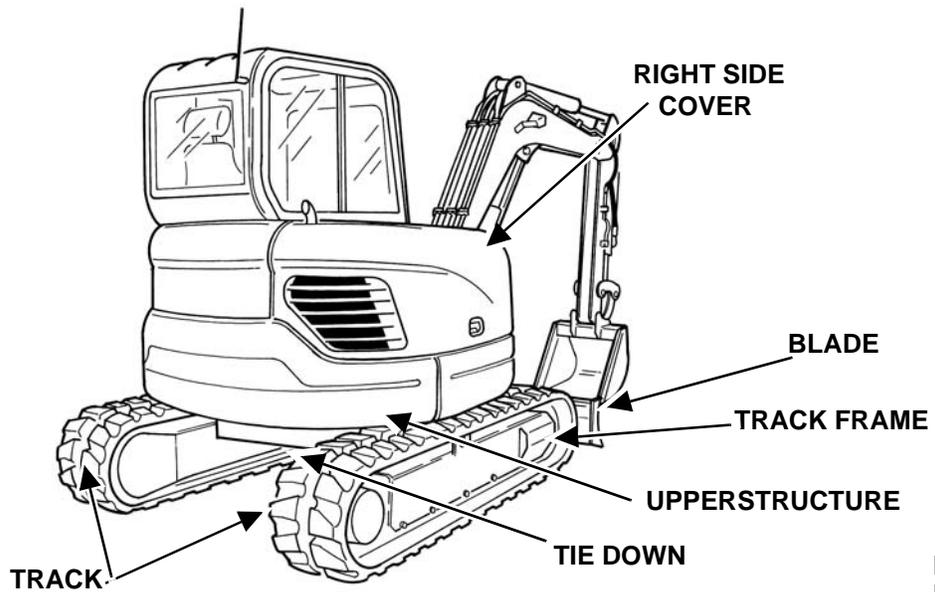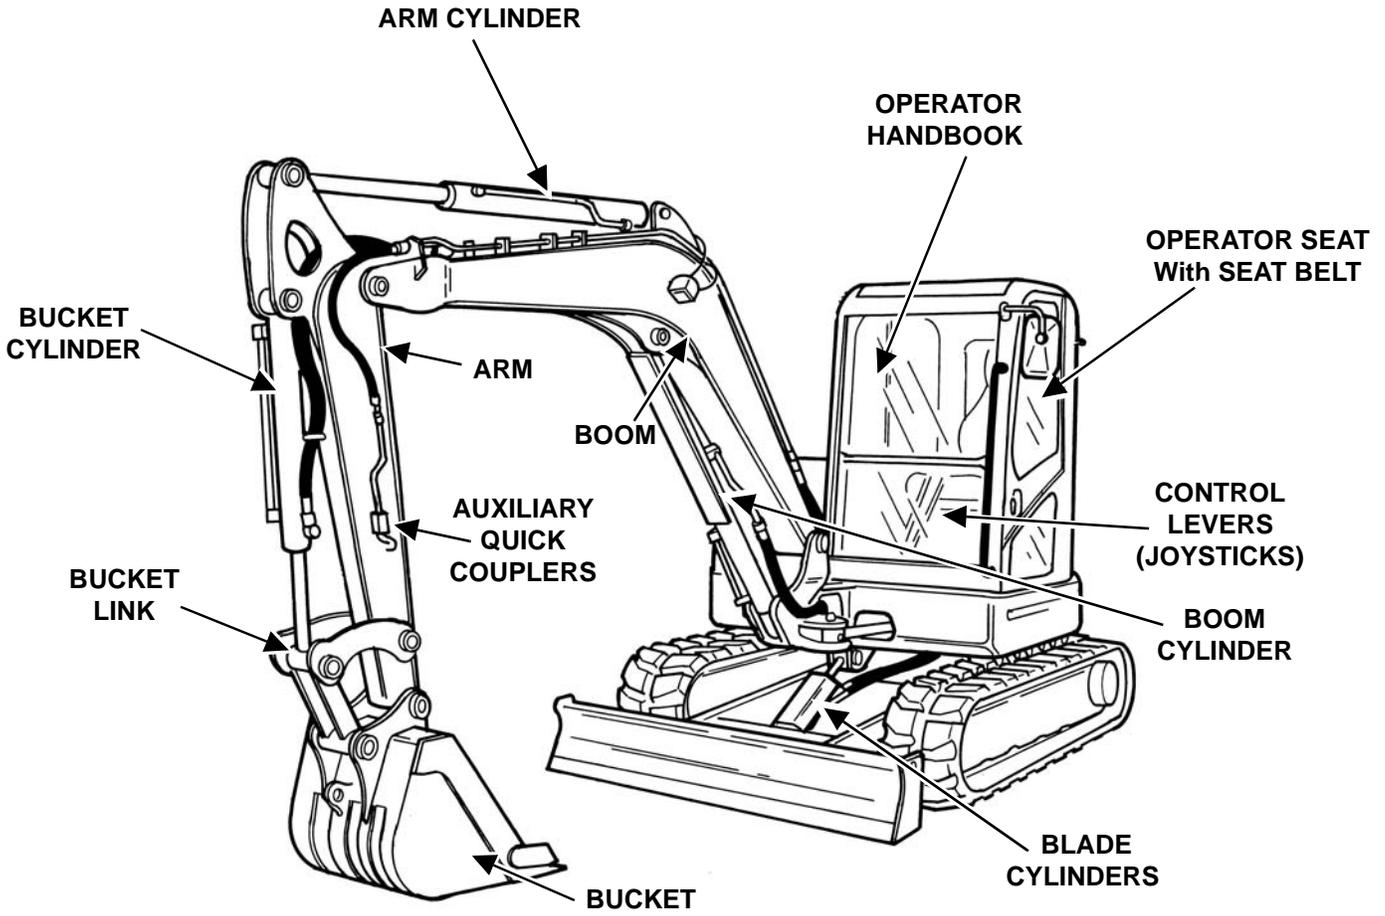

B23930  
B23931

\* FOGS (Falling Object Guards) is available from your Bobcat Excavator dealer.

ALTERNATOR BELT . . . . .10-140-1  
 Belt Adjustment . . . . .10-140-1  
 Belt Replacement. . . . .10-140-1

AIR CLEANER SERVICE . . . . .10-60-1  
 Daily Check . . . . .10-60-1  
 Replacing The Filters. . . . .10-60-1

AIR CONDITIONING BELT . . . . .10-141-1  
 Belt Adjustment . . . . .10-141-1  
 Belt Replacement. . . . .10-141-2

CAB FILTER . . . . .10-61-1  
 Cleaning And Maintenance . . . . .10-61-1

CAB TILT PROCEDURE. . . . .10-170-1  
 Tilting The Cab. . . . .10-170-1

ENGINE COOLING SYSTEM . . . . .10-70-1  
 Checking Level . . . . .10-70-1  
 Cleaning. . . . .10-70-1  
 Removing And Replacing Coolant. . . . .10-70-2

ENGINE LUBRICATION SYSTEM . . . . .10-90-1  
 Checking And Adding Engine Oil. . . . .10-90-1  
 Engine Oil Chart. . . . .10-90-1  
 Removing And Replacing Oil And Filter. . . . .10-90-2

FUEL SYSTEM . . . . .10-80-1  
 Biodiesel Blend Fuel . . . . .10-80-1  
 Draining The Fuel Tank . . . . .10-80-4  
 Filling The Fuel Tank . . . . .10-80-2  
 Fuel Filters. . . . .10-80-3  
 Fuel Specifications. . . . .10-80-1  
 Removing Air From The Fuel System . . . . .10-80-4

HYDRAULIC SYSTEM . . . . .10-100-1  
 Checking And Adding Fluid . . . . .10-100-1  
 Hydraulic Fluid Chart . . . . .10-100-2  
 Removing Air From Hydraulic Pump . . . . .10-100-7  
 Removing And Replacing Hydraulic Filters . . . . .10-100-2  
 Removing And Replacing Hydraulic Fluid . . . . .10-100-6

**Continued On Next Page**


## SAFETY AND MAINTENANCE (CONT'D)

LIFTING AND BLOCKING THE EXCAVATOR .....	10-10-1
Procedure .....	10-10-1
LIFTING THE EXCAVATOR .....	10-11-1
Procedure .....	10-11-1
LUBRICATING THE EXCAVATOR .....	10-110-1
Lubrication Locations .....	10-110-1
OPERATOR CAB (ROPS / TOPS) .....	10-20-1
Cab Door .....	10-20-1
Description .....	10-20-1
Front Window .....	10-20-2
Front Wiper .....	10-20-3
Heating, Ventilation And Air Conditioning Duct .....	10-20-5
Right Side Window .....	10-20-4
Window Washer Reservoir .....	10-20-3
PIVOT PINS .....	10-160-1
Inspection And Maintenance .....	10-160-1
REAR COVER .....	10-41-1
Opening And Closing .....	10-41-1
RIGHT SIDE COVER .....	10-40-1
Adjusting The Latch .....	10-40-1
Opening And Closing .....	10-40-1
SEAT BELT .....	10-150-1
Inspection And Maintenance .....	10-150-1
SERVICE SCHEDULE .....	10-50-1
Chart .....	10-50-1
SPARK ARRESTOR MUFFLER .....	10-130-1
Cleaning Procedure .....	10-130-1
TRANSPORTING THE EXCAVATOR .....	10-30-1
Fastening .....	10-30-2
Loading And Unloading .....	10-30-1
TRAVEL MOTOR .....	10-120-1
Checking And Adding Oil .....	10-120-1
Removing And Replacing Oil .....	10-120-1

## LIFTING AND BLOCKING THE EXCAVATOR


### Procedure

Figure 10-10-1

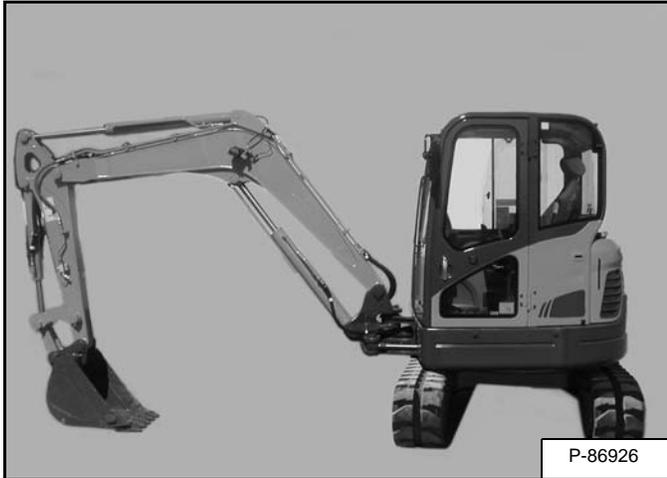

Raise one side of the machine (approximately four inches) using the boom and arm [Figure 10-10-1].

Figure 10-10-2

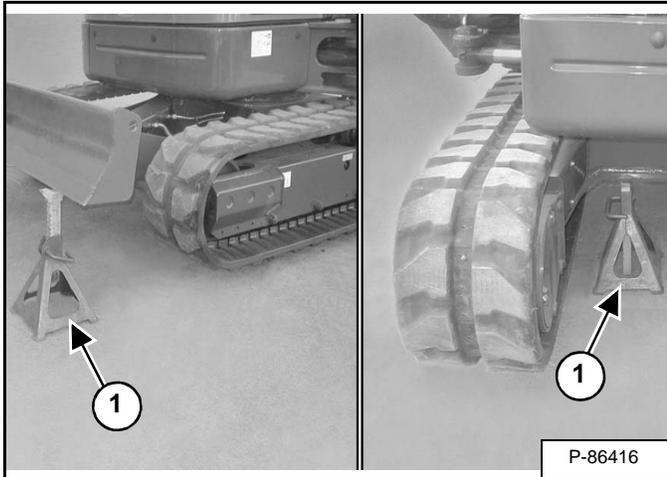

Raise the blade fully and install jack stands under the blade and track frame (Item 1) [Figure 10-10-2]. Lower the boom until all machine weight is on the jack stands.

Stop the engine.

## WARNING

### AVOID INJURY

Keep fingers and hands out of pinch points when checking the track tension.

W-2142-0903

## WARNING

Put jackstands under the blade and rear corners of the undercarriage before working under the machine. Failure to block up the machine may allow it to move or fall and result in injury or death.

W-2218-1195




**Bobcat®**

## LIFTING THE EXCAVATOR

### Procedure

Figure 10-11-1

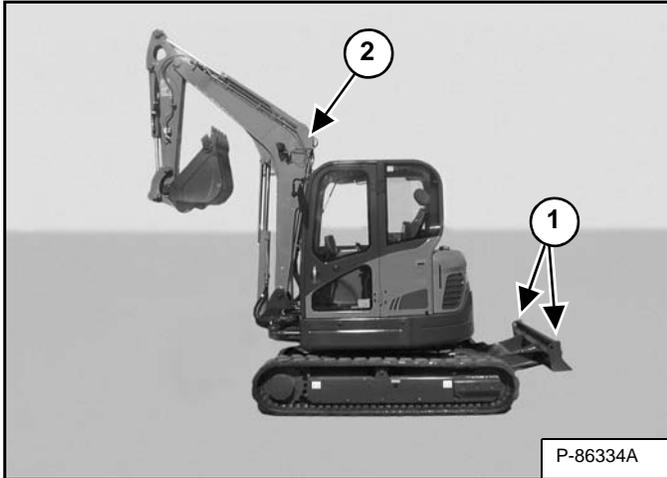

Fully extend the cylinders of the bucket, arm, and boom so that the excavator is in the position as shown [Figure 10-11-1].

Raise the blade fully.

Put all the control levers in neutral.


## WARNING

### AVOID INJURY OR DEATH

- Use a lifting fixture with sufficient capacity for the weight of the excavator plus any added attachments.
- Maintain center of gravity and balance when lifting.
- Do not swing boom or upperstructure. Engage the upperstructure slew lock.
- Never lift with operator on machine.

W-2202-0607


Figure 10-11-2

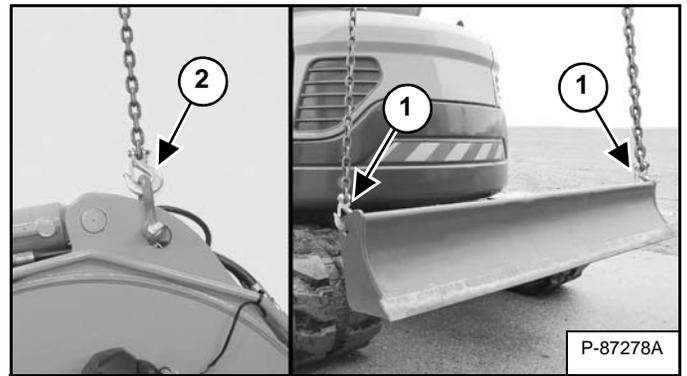

Fasten chains to the ends of the blade (Item 1) [Figure 10-11-1] and [Figure 10-11-2] and up to a lifting device above the cab. Place protective material between the chains and the cab and the upperstructure to prevent damage.

Fasten chains to the boom (Item 2) [Figure 10-11-1] and [Figure 10-11-2] and up to a lifting device above the cab. Place protective material between the chains and the cab and the upperstructure to prevent damage.

Figure 10-11-3

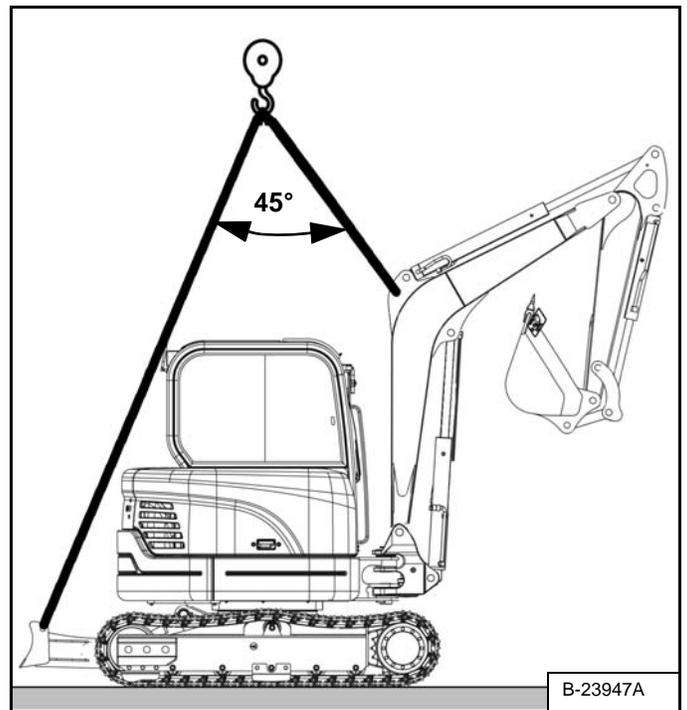

The maximum angle between the front and rear chains must not exceed 45° [Figure 10-11-3].



**Bobcat®**

## OPERATOR CAB (ROPS / TOPS)

### Description

The excavator has an operator cab equipped with heater, air conditioning and optional heated seat.


# WARNING

Never modify operator cab by welding, grinding, drilling holes or adding attachments unless instructed to do so by Bobcat Company. Changes to the cab can cause loss of operator protection from rollover and falling objects, and result in injury or death.

W-2069-0200

## Cab Door


Figure 10-20-1

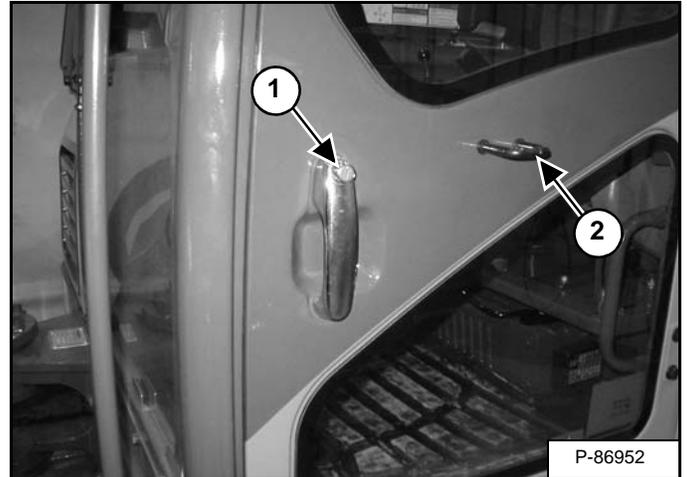

The cab door can be locked (Item 1) [Figure 10-20-1] with the same key as the starter switch.

The door can be held in the open position. Push the door all the way open until the latch (Item 2) [Figure 10-20-1] engages to hold the door in the open position.

Figure 10-20-2

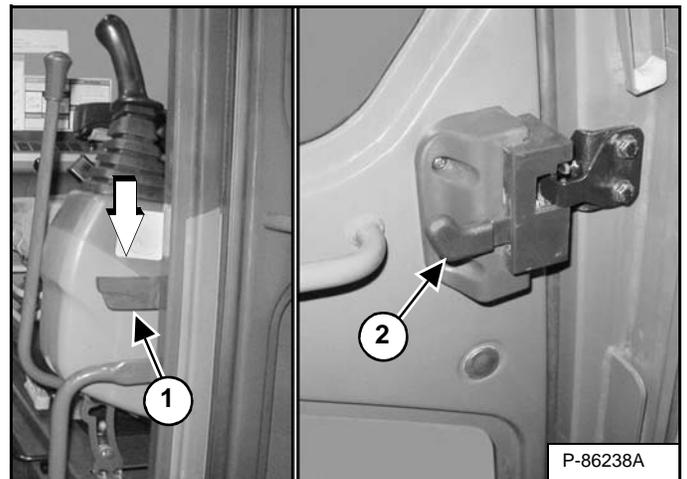

When the door is in the open position, push down on the latch (Item 1) [Figure 10-20-2] and close the door.


From inside the cab, open the door using handle (Item 2) [Figure 10-20-2].

## OPERATOR CAB (ROPS / TOPS) (CONT'D)

### Front Window

#### Opening The Front Window

Figure 10-20-3

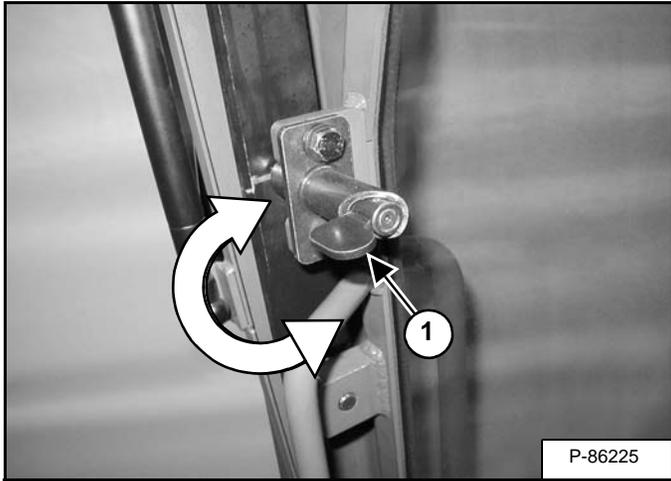

Rotate the front window latch pins (Item 1) [Figure 10-20-3] (both sides).


Figure 10-20-4



Use both window grab handles to pull the top of the window in [Figure 10-20-4].

Continue moving the window in and up over the operator's head until the window is fully raised.

Figure 10-20-5

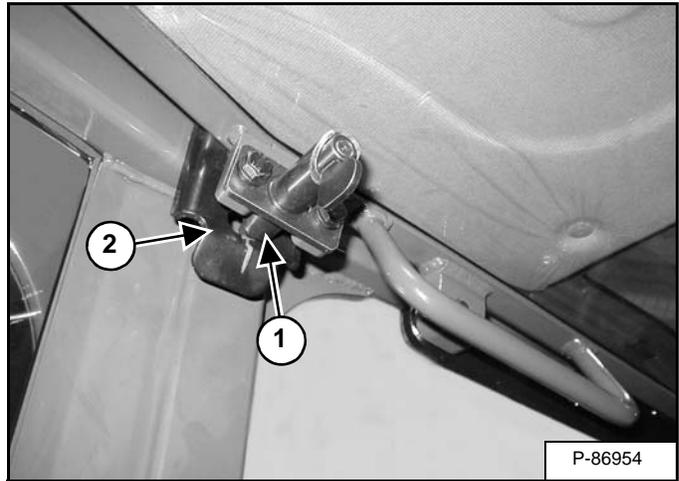

When the window is fully raised, push up on the window slightly until the two latch pins (Item 1) (both sides) engage into the bracket (Item 2) [Figure 10-20-5] to lock the window in the open position. Pull down slightly on the window to make sure the latch pins are properly seated to hold the window securely in the open position.

#### Closing The Front Window

Support the window while rotating both window latch pins (Item 1) [Figure 10-20-5] to the unlocked position.

Using both window grab handles, pull the window forward and down to the closed position [Figure 10-20-4].

When the window is fully lowered, push in on the window slightly until the two latch pins (Item 1) [Figure 10-20-3] (both sides) engage into the bracket to lock the window in the closed position.

## OPERATOR CAB (ROPS / TOPS) (CONT'D)


### Front Wiper

Figure 10-20-6



The front window is equipped with a wiper (Item 1) [Figure 10-20-6] and washer.

Figure 10-20-7

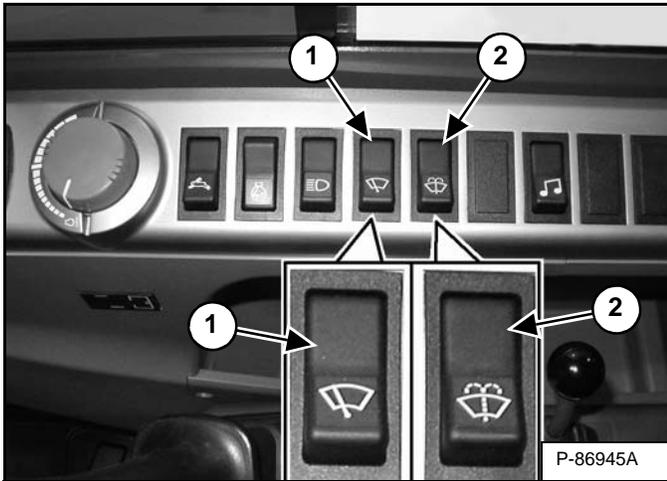


The wiper switch (Item 1) [Figure 10-20-7] has three positions, OFF, intermittent wiper mode and full speed.

The window washer switch (Item 2) activates the front window washer. (The wiper switch (Item 1) must be activated before the washer switch (Item 2) [Figure 10-20-7] will allow washer fluid to be sprayed on the front window.)

### Window Washer Reservoir

Figure 10-20-8

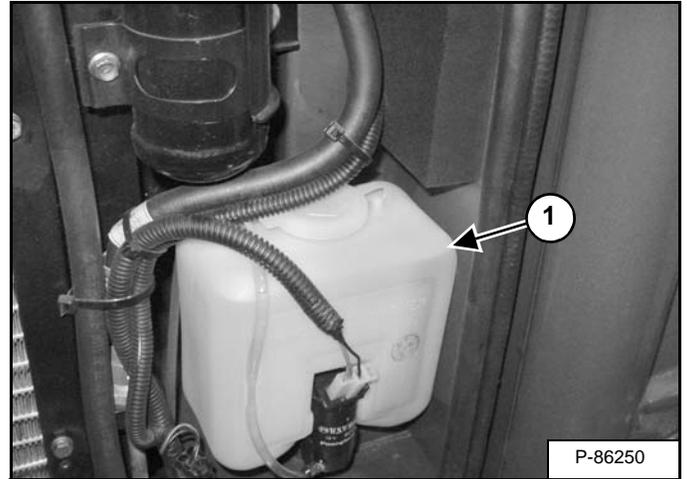


The window washer reservoir (Item 1) [Figure 10-20-8] is located under the right side cover and to the front of the radiator. (When the temperature is 32° F. (0° C) or lower, fill the washer reservoir with washer fluid specified for freezing conditions. If the washer bottle is filled with water, it will freeze and damage the washer reservoir.)

## OPERATOR CAB (ROPS / TOPS) (CONT'D)

### Right Side Window

#### *Opening The Right Front Window*

**Figure 10-20-9**

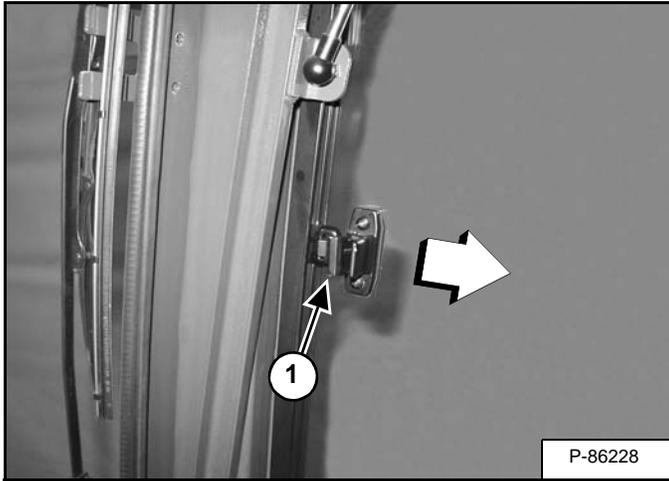

Press the latch / handle (Item 1) **[Figure 10-20-9]** together and pull back on the latch / handle to open the right side window.

#### *Closing The Right Front Window*

Push the latch / handle (Item 1) **[Figure 10-20-9]** forward until the latch / handle lock the window in the closed position.

OPERATOR CAB (ROPS / TOPS) (CONT'D)  
Heating, Ventilation And Air Conditioning Duct

Figure 10-20-10

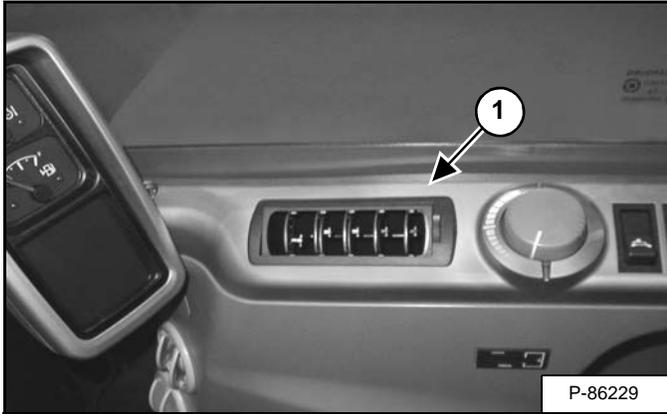


Figure 10-20-11



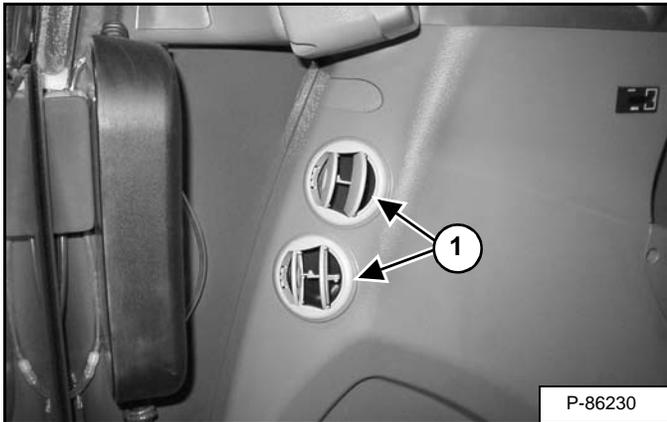


Figure 10-20-12

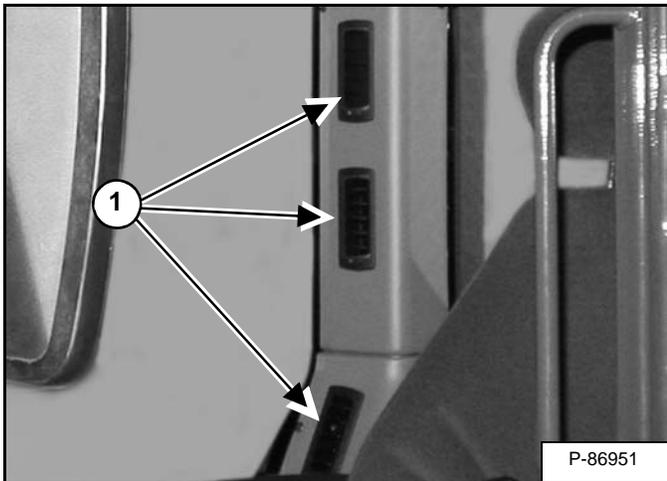

The excavator is equipped with seven air vents (Item 1) [Figure 10-20-10], [Figure 10-20-11], [Figure 10-20-12] that can be adjusted to deflect air flow to the desired area of the cab.

Figure 10-20-13

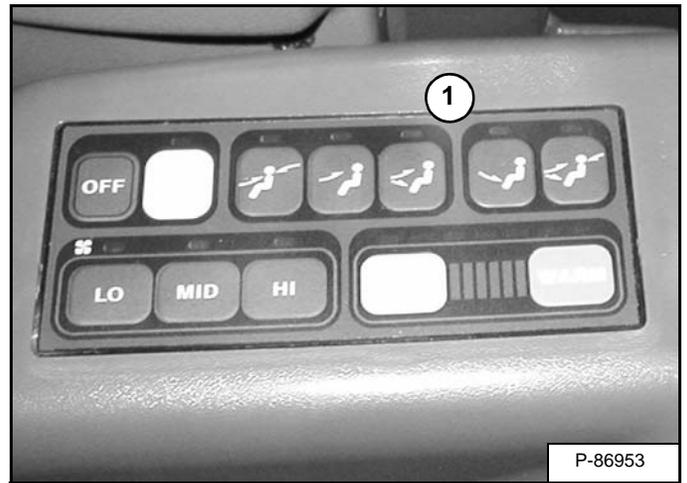

Use the one of the five buttons (Item 1) [Figure 10-20-13] located in the left console to control which air ducts are active.

Product: Bobcat E60 Compact Excavator Service Repair Workshop Manual  
Full Download: <https://www.arepairmanual.com/downloads/bobcat-e60-compact-excavator-service-repair-workshop-manual/>



Sample of manual. Download All 753 pages at:  
<https://www.arepairmanual.com/downloads/bobcat-e60-compact-excavator-service-repair-workshop-manual/>