

Product: Bobcat E80 Compact Excavator Service Repair Workshop Manual
Full Download: <https://www.arepairmanual.com/downloads/bobcat-e80-compact-excavator-service-repair-workshop-manual/>




Bobcat®

Service Manual

E80 Excavator

S/N AETB11001 & Above
S/N AET311001 & Above

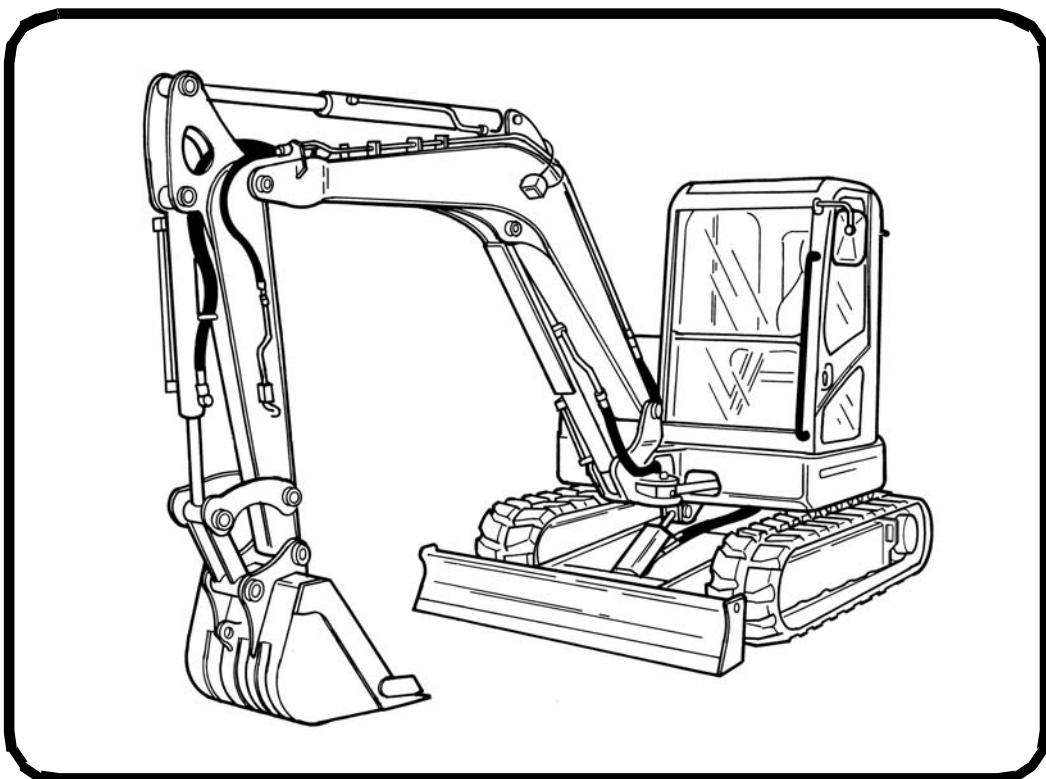

Sample of manual. Download All 879 pages at:

<https://www.arepairmanual.com/downloads/bobcat-e80-compact-excavator-service-repair-workshop-manual/>
6987194 (2-11)

Printed in U.S.A.



© Bobcat Company 2011

Product: Bobcat E80 Compact Excavator Service Repair Workshop Manual

Full Download: <https://www.arepairmanual.com/downloads/bobcat-e80-compact-excavator-service-repair-workshop-manual/>

Sample of manual. Download All 879 pages at:

<https://www.arepairmanual.com/downloads/bobcat-e80-compact-excavator-service-repair-workshop-manual/>

MAINTENANCE SAFETY



WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0807



Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

CORRECT



P-90216

⚠ Never service the Bobcat Excavator without instructions.

CORRECT



B-19964

⚠ Use the correct procedure to lift and support the excavator.

CORRECT



B-19959

⚠ Cleaning and maintenance are required daily.

WRONG



B-19965

⚠ Have good ventilation when welding or grinding painted parts.
⚠ Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.


WRONG



B-19960

⚠ Vent exhaust to outside when engine must be run for service.
⚠ Exhaust system must be tightly sealed. Exhaust fumes can kill without warning.

WRONG

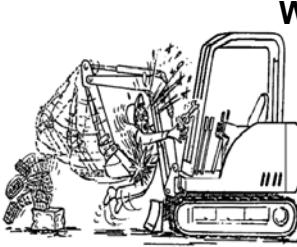

B-19966

⚠ Always lower the bucket and blade to the ground before doing any maintenance.
⚠ Never modify equipment or add attachments not approved by Bobcat Company.

WRONG



B-19962

⚠ Stop, cool and clean engine of flammable materials before checking fluids.
⚠ Never service or adjust machine with the engine running unless instructed to do so in the manual.
⚠ Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
⚠ Never fill fuel tank with engine running, while smoking, or when near open flame.

WRONG



B-19958

⚠ Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
⚠ Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protections approved for type of welding.
⚠ Keep tailgate closed except for service. Close and latch tailgate before operating the excavator.

WRONG



B-19798

⚠ Lead-acid batteries produce flammable and explosive gases.
⚠ Keep arcs, sparks, flames and lighted tobacco away from batteries.
⚠ Batteries contain acid which burns eyes or skin on contact.
⚠ Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.

MSW28-0409



Bobcat®

CONTENTS

SAFETY & MAINTENANCE	10-01
HYDRAULIC SYSTEM	20-01
UNDERCARRIAGE	30-01
UPPERSTRUCTURE & SWING SECTION	40-01
ELECTRICAL SYSTEM & ANALYSIS	50-01
ENGINE SERVICE	60-01
HEATING, VENTILATION AND AIR CONDITIONING (HVAC)	70-01
SPECIFICATIONS	SPEC-01
ALPHABETICAL INDEX	INDEX-01



Bobcat®

FOREWORD

FOREWORD	1-7
SAFETY INSTRUCTIONS	1-10
FIRE PREVENTION	1-12
Maintenance	1-12
Operation	1-12
Electrical	1-12
Hydraulic System	1-12
Fueling	1-12
Starting	1-12
Spark Arrestor Exhaust System	1-12
Welding And Grinding	1-13
Fire Extinguishers	1-13
SERIAL NUMBER LOCATIONS	1-14
Excavator Serial Number	1-14
Engine Serial Number	1-14
DELIVERY REPORT	1-15
BOBCAT EXCAVATOR IDENTIFICATION	1-16




Bobcat®

FOREWORD


This manual is for the Bobcat excavator mechanic. It provides necessary servicing and adjustment procedures for the Bobcat excavator and its component parts and systems. Refer to the Operation & Maintenance Manual for operating instructions, starting procedure, daily checks, etc.

A general inspection of the following items must be made after the excavator has had service or repair:


1. Check that the ROPS/TOPS/ FOPS is in good condition and is not modified.

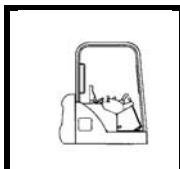


2. Check that ROPS/TOPS mounting hardware is tightened and is Bobcat approved.

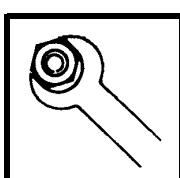


3. The seat belt must be correctly installed, functional and in good condition.

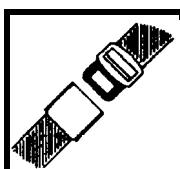

4. Machine signs (decals) must be legible and in the correct location.

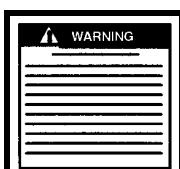


5. Travel levers, control levers and foot pedals must return to neutral. Check that the pedal locks are in working order.

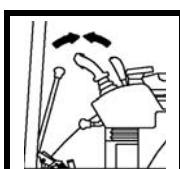


6. Check for correct function of the work lights.




7. Enclosure door latches must open and close freely.

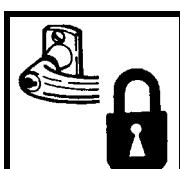


8. Attachment locking pins must function correctly and be in good condition.

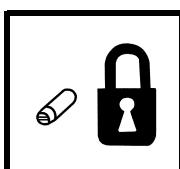


9. Safety treads must be in good condition.

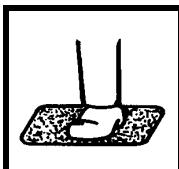


10. Check for correct function of indicator lamps.

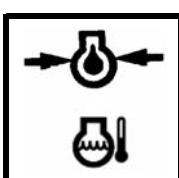

11. Check hydraulic fluid level, engine oil level and fuel supply.

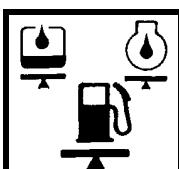


12. Inspect for fuel, oil or hydraulic fluid leaks.

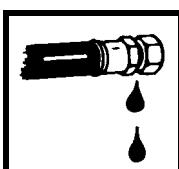


13. Lubricate the excavator.




14. Check the condition of the battery and cables.

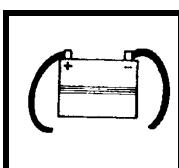


15. Inspect the air cleaner for damage or leaks. Check the condition of the element.

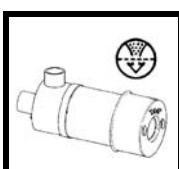


16. Check the electrical charging system.

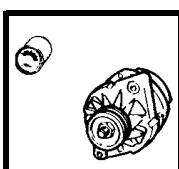

17. Check tracks for wear and tension. Use only approved tracks.

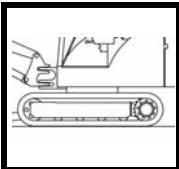


18. Inspect for loose or broken parts or connections.

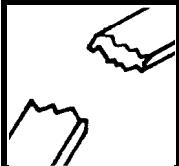


19. Check for any field modification not completed.




20. Operate the machine and check all functions.

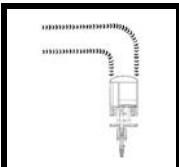

21. Check the control console interlocks for correct function.

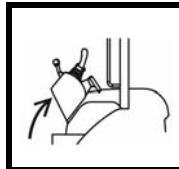


22. Inspect the X-Change™ for wear or damage. Repair or replace damaged parts.

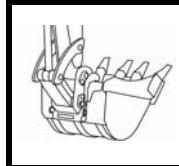

23. Check function or condition of all equipped options and accessories (examples: special applications kit, motion alarm, etc.).



24. Recommend to the owner that all necessary corrections be made before the machine is returned to service.

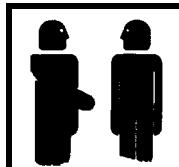

**CALIFORNIA
PROPOSITION 65 WARNING**

Diesel engine exhaust and some of its constituents are known to the state of California to cause cancer, birth defects and other reproductive harm.



Bobcat®

SAFETY INSTRUCTIONS



Safety Alert Symbol

This symbol with a warning statement means:
"Warning, be alert! Your safety is involved!"
Carefully read the message that follows.



WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903

IMPORTANT

This notice identifies procedures which must be followed to avoid damage to the machine.

I-2019-0284



DANGER

The signal word DANGER on the machine and in the manuals indicates a hazardous situation which, if not avoided, will result in death or serious injury.

D-1002-1107



WARNING

The signal word WARNING on the machine and in the manuals indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

W-2044-1107

The following publications provide information on the safe use and maintenance of the Bobcat machine and attachments:

- The Delivery Report is used to assure that complete instructions have been given to the new owner and that the machine is in safe operating condition.
- The Operation & Maintenance Manual delivered with the machine or attachment contains operating information as well as routine maintenance and service procedures. It is a part of the machine and can be stored in a container provided on the machine. Replacement Operation & Maintenance Manuals can be ordered from your Bobcat dealer.
- Machine signs (decals) instruct on the safe operation and care of your Bobcat machine or attachment. The signs and their locations are shown in the Operation & Maintenance Manual. Replacement signs are available from your Bobcat dealer.
- An Operator's Handbook fastened to the operator cab. Its brief instructions are convenient to the operator. The handbook is available from your dealer in an English edition or one of many other languages. See your Bobcat dealer for more information on translated versions.
- The AEM Safety Manual delivered with the machine gives general safety information.
- The Service Manual and Parts Manual are available from your dealer for use by mechanics to do shop-type service and repair work.
- The Compact Excavator Operator Training Course is available through your local dealer or at www.training.bobcat.com or www.bobcat.com. This course is intended to provide rules and practices of correct operation of the Bobcat excavator. The course is available in English and Spanish versions.
- Service Safety Training Courses are available from your Bobcat dealer or at www.training.bobcat.com or www.bobcat.com. They provide information for safe and correct service procedures.
- The Bobcat compact excavator Safety Video is available from your Bobcat dealer or at www.training.bobcat.com or www.bobcat.com.

SI EXC-0308 SM

SAFETY INSTRUCTIONS (CONT'D)

The dealer and owner / operator review the recommended uses of the product when delivered. If the owner / operator will be using the machine for a different application(s) he or she must ask the dealer for recommendations on the new use.



Cutting or drilling concrete containing sand or rock containing quartz may result in exposure to silica dust. Do not exceed Permissible Exposure Limits (PEL) to silica dust as determined by OSHA or other job site Rules and Regulations. Use a respirator, water spray or other means to control dust. Silica dust can cause lung disease and is known to the state of California to cause cancer.

Call Before You Dig
Dial 811 (USA Only)
1-888-258-0808 (USA & Canada)

When you call, you will be directed to a location in your state / province, or city for information about buried lines (telephone, cable TV, water, sewer, gas, etc.).

FIRE PREVENTION



Maintenance

The machine and some attachments have components that are at high temperatures under normal operating conditions. The primary source of high temperatures is the engine and exhaust system. The electrical system, if damaged or incorrectly maintained, can be a source of arcs or sparks.

Flammable debris (leaves, straw, etc.) must be removed regularly. If flammable debris is allowed to accumulate, it can cause a fire hazard. Clean often to avoid this accumulation. Flammable debris in the engine compartment is a potential fire hazard.

The operator's area, engine compartment and engine cooling system must be inspected every day and cleaned if necessary to prevent fire hazards and overheating.

All fuels, most lubricants and some coolants mixtures are flammable. Flammable fluids that are leaking or spilled onto hot surfaces or onto electrical components can cause a fire.

Operation

Do not use the machine where exhaust, arcs, sparks or hot components can contact flammable material, explosive dust or gases.

Electrical



Check all electrical wiring and connections for damage. Keep the battery terminals clean and tight. Repair or replace any damaged part or wires that are loose or frayed.

Battery gas can explode and cause serious injury. Use the procedure in the Operation & Maintenance Manual for connecting the battery and for jump starting. Do not jump start or charge a frozen or damaged battery. Keep any open flames or sparks away from batteries. Do not smoke in battery charging area.

Hydraulic System

Check hydraulic tubes, hoses and fittings for damage and leakage. Never use open flame or bare skin to check for leaks. Hydraulic tubes and hoses must be properly routed and have adequate support and secure clamps. Tighten or replace any parts that show leakage.

Always clean fluid spills. Do not use gasoline or diesel fuel for cleaning parts. Use commercial nonflammable solvents.

Fueling



Stop the engine and let it cool before adding fuel. No smoking! Do not refuel a machine near open flames or sparks. Fill the fuel tank outdoors.

Starting

Do not use ether or starting fluids on any engine that has glow plugs. These starting aids can cause explosion and injure you or bystanders.

Use the procedure in the Operation & Maintenance Manual for connecting the battery and for jump starting.

Spark Arrestor Exhaust System

The spark arrestor exhaust system is designed to control the emission of hot particles from the engine and exhaust system, but the muffler and the exhaust gases are still hot.

Check the spark arrestor exhaust system regularly to make sure it is maintained and working properly. Use the procedure in the Operation & Maintenance Manual for cleaning the spark arrestor muffler (if equipped).

FIRE PREVENTION (CONT'D)


Welding And Grinding

Always clean the machine and attachment, disconnect the battery, and disconnect the wiring from the Bobcat controllers before welding. Cover rubber hoses, battery and all other flammable parts. Keep a fire extinguisher near the machine when welding.

Have good ventilation when grinding or welding painted parts. Wear dust mask when grinding painted parts. Toxic dust or gas can be produced.

Dust generated from repairing nonmetallic parts such as hoods, fenders or covers can be flammable or explosive. Repair such components in a well ventilated area away from open flames or sparks.

Fire Extinguishers

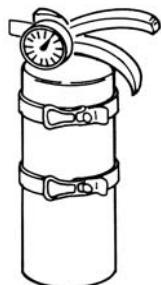


Know where fire extinguishers and first aid kits are located and how to use them. Inspect the fire extinguisher and service the fire extinguisher regularly. Obey the recommendations on the instructions plate.

SERIAL NUMBER LOCATIONS

Always use the serial number of the excavator when requesting service information or when ordering parts. Early or later models (identification made by serial number) may use different parts, or it may be necessary to use a different procedure in doing a specific service operation.

Excavator Serial Number

Figure 10-141-1

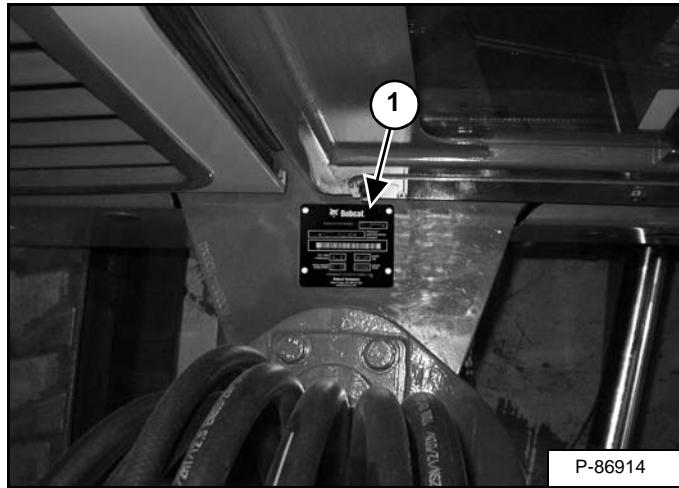

The excavator serial number plate (Item 1) [Figure 10-141-1] is located on the swing frame on the front of the upperstructure.

Explanation of Excavator Serial Number:

XXXX XXXX


Module 2. - Production Sequence (Series)

Module 1. - Model / Engine Combination

1. The four digit Model / Engine Combination Module number identifies the model number and engine combination.
2. The five digit Production Sequence Number identifies the order which the excavator is produced.

Engine Serial Number


Figure 2

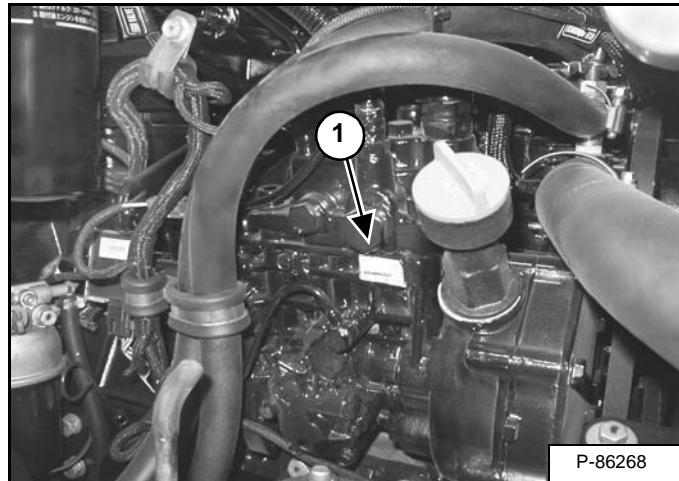

The engine serial number (Item 1) [Figure 2] is located on the top cover.

DELIVERY REPORT


Figure 3

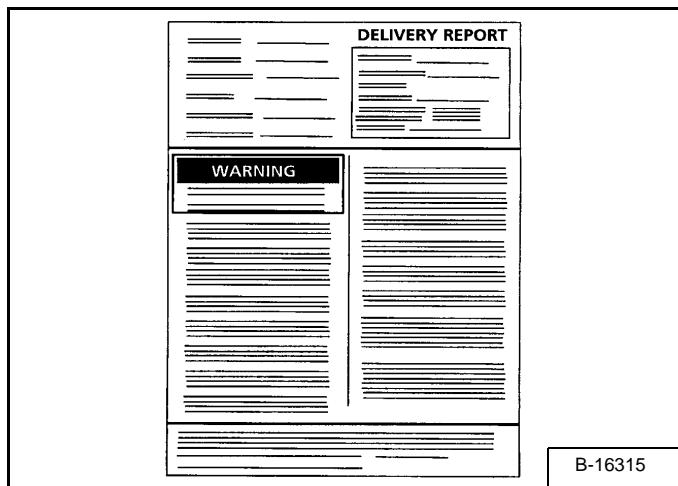

The diagram shows a 'DELIVERY REPORT' form. At the top, there are two sets of horizontal lines for signatures. Below these is a 'WARNING' section with a box containing the word 'WARNING' and several lines for text. The main body of the form contains two columns of horizontal lines for signatures or entries. In the bottom right corner of the form, there is a small box containing the code 'B-16315'.

The delivery report **[Figure 3]** must be completed by the dealer and signed by the owner or operator when the Bobcat excavator is delivered. An explanation of the form must be given to the owner.

BOBCAT EXCAVATOR IDENTIFICATION

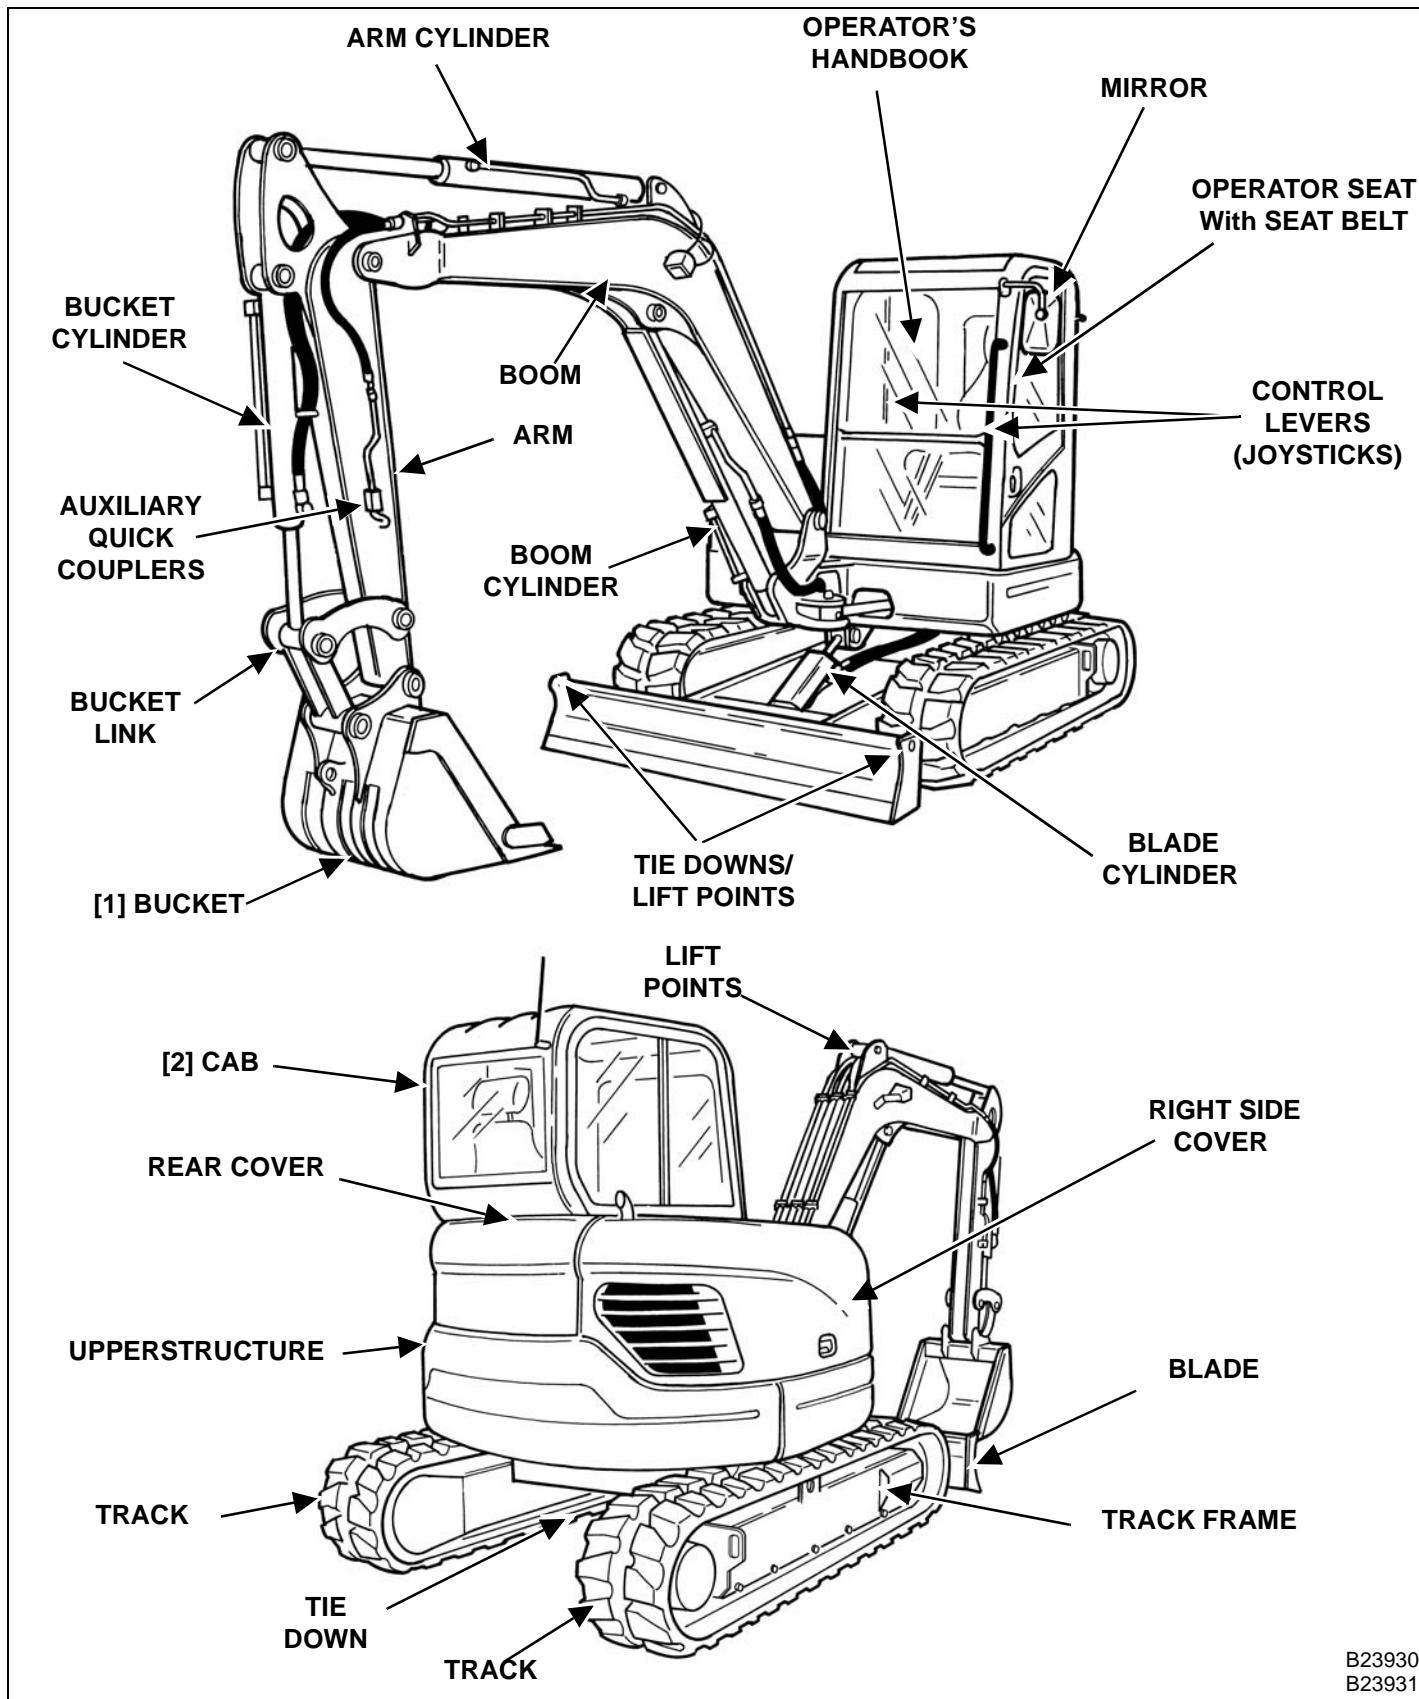

[1] BUCKET - Several different buckets and other attachments are available for the Bobcat Excavator.

[2] Model E80 S/N AETB11235 & Above has a ROPS / TOPS as standard equipment. (ROPS / TOPS - Roll Over Protective Structure per ISO 12117-2: 2008, and Tip Over Protective Structure per ISO 12117: 2000.)

SAFETY & MAINTENANCE


LIFTING AND BLOCKING THE EXCAVATOR	10-10-1
Procedure	10-10-1
LIFTING THE EXCAVATOR	10-20-1
Procedure	10-20-1
OPERATOR CAB	10-30-1
Description	10-30-1
Cab Door	10-30-1
Front Window	10-30-2
Front Wiper	10-30-3
Window Washer Reservoir	10-30-3
Right Side Window	10-30-4
Heating, Ventilation And Air Conditioning Duct	10-30-5
TRANSPORTING THE EXCAVATOR ON A TRAILER	10-40-1
Loading And Unloading	10-40-1
Fastening	10-40-1
RIGHT SIDE COVER	10-50-1
Opening And Closing	10-50-1
Adjusting The Latch	10-50-1
REAR COVER	10-60-1
Opening And Closing	10-60-1
CENTER COVER	10-70-1
Opening And Closing	10-70-1
SERVICE SCHEDULE	10-80-1
Chart	10-80-1
AIR CLEANER SERVICE	10-90-1
Daily Check	10-90-1
Replacing The Filters	10-90-1
CAB FILTER	10-100-1
Cleaning And Maintenance	10-100-1
ENGINE COOLING SYSTEM	10-110-1
Cleaning	10-110-1
Checking Level	10-110-1
Removing And Replacing Coolant	10-110-2

FUEL SYSTEM	10-120-1
Fuel Specifications	10-120-1
Biodiesel Blend Fuel	10-120-1
Filling The Fuel Tank	10-120-2
Fuel Filters	10-120-3
Draining The Fuel Tank	10-120-4
Removing Air From The Fuel System	10-120-4
ENGINE LUBRICATION SYSTEM	10-130-1
Checking And Adding Engine Oil	10-130-1
Engine Oil Chart	10-130-1
Removing And Replacing Oil And Filter	10-130-2
HYDRAULIC SYSTEM	10-140-1
Checking And Adding Fluid	10-140-1
Hydraulic Fluid Chart	10-140-2
Removing And Replacing Hydraulic Filters	10-140-2
Removing And Replacing Hydraulic Fluid	10-140-6
Checking Swing Motor Gear Box Fluid Level	10-140-7
Removing And Replacing Swing Motor Gear Box Fluid	10-140-8
LUBRICATING THE EXCAVATOR	10-150-1
Lubrication Locations	10-150-1
PIVOT PINS	10-160-1
Inspection And Maintenance	10-160-1
TRAVEL MOTOR	10-170-1
Checking And Adding Oil	10-170-1
Removing And Replacing Oil	10-170-1
SPARK ARRESTER MUFFLER	10-180-1
Cleaning Procedure	10-180-1
EMERGENCY EXIT	10-190-1
Right Rear Side Window	10-190-1
Front Window	10-190-1
SEAT BELT	10-200-1
Inspection And Maintenance	10-200-1
CAB TILT PROCEDURE	10-210-1
Tilting The Cab	10-210-1
CONTROL CONSOLE LOCKOUTS	10-220-1
Inspection And Maintenance	10-220-1
TOWING THE EXCAVATOR	10-230-1
Procedure	10-230-1

LIFTING AND BLOCKING THE EXCAVATOR


Procedure

Figure 10-10-1

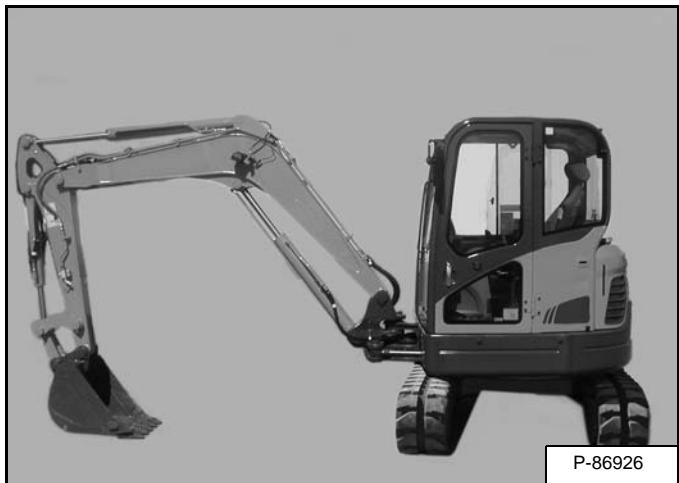

Raise one side of the machine (approximately 101,6 mm [4 in]) using the boom and arm **[Figure 10-10-1]**.

Figure 10-10-2

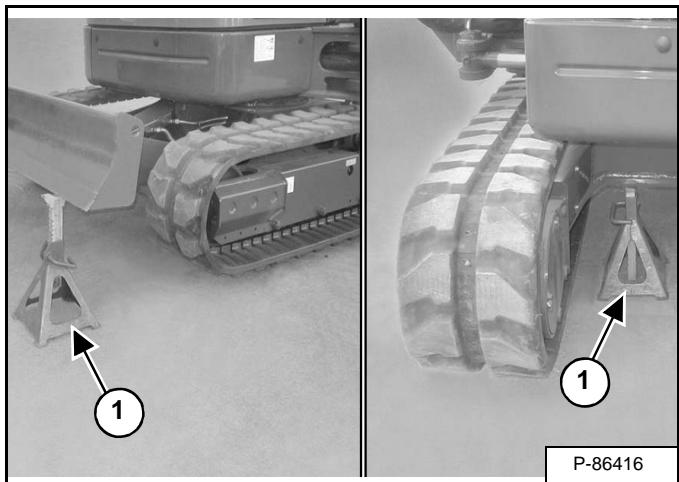

Fully raise the blade and install jackstands (Item 1) **[Figure 10-10-2]** under the blade and track frame. Lower the boom until all machine weight is on the jackstands.

Stop the engine.

WARNING

AVOID INJURY

Keep fingers and hands out of pinch points when checking the track tension.

W-2142-0903

WARNING

Put jackstands under the blade and rear corners of the undercarriage before working under the machine. Failure to block up the machine may allow it to move or fall and result in injury or death.

W-2218-1195




Bobcat®

LIFTING THE EXCAVATOR

Procedure

Figure 10-20-1

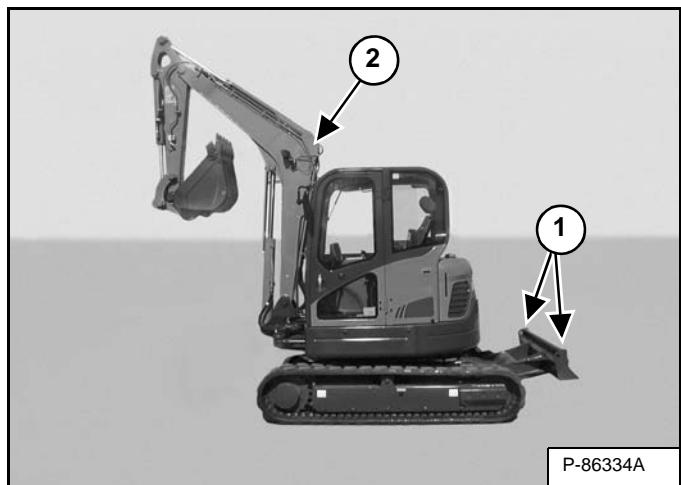

Fully extend the cylinders of the bucket, arm, and boom so that the excavator is in the position as shown [Figure 10-20-1].

Raise the blade fully.

Put all the control levers in neutral.




WARNING

AVOID INJURY OR DEATH

- Use a lifting fixture with sufficient capacity for the weight of the excavator plus any added attachments.
- Maintain center of gravity and balance when lifting.
- Do not swing boom or upperstructure.
- Never lift with operator on machine.

W-2434-0502


Figure 10-20-2

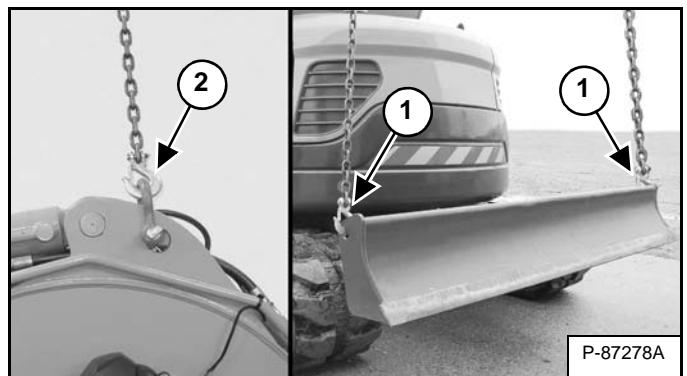

Fasten chains to the ends of the blade (Item 1) [Figure 10-20-1] and [Figure 10-20-2] and up to a lifting device above the cab. Place protective material between the chains and the cab and the upperstructure to prevent damage.

Fasten chains to the boom (Item 2) [Figure 10-20-1] and [Figure 10-20-2] and up to a lifting device above the cab. Place protective material between the chains and the cab and the upperstructure to prevent damage.

Figure 10-20-3

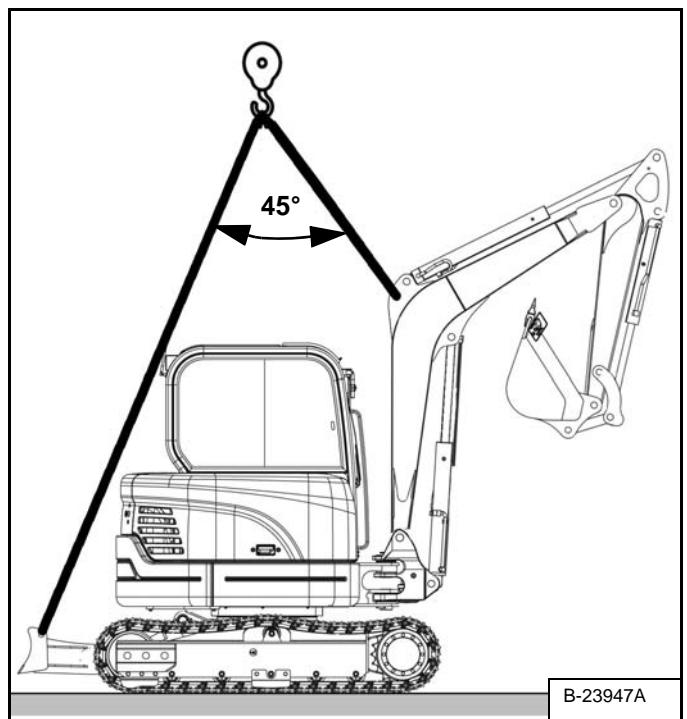

The maximum angle between the front and rear chains must not exceed 45° [Figure 10-20-3].



Bobcat®

OPERATOR CAB

Description

S/N AETB11235 & Above And AE7311235 & Above

The Bobcat excavator has an operator cab (ROPS / TOPS) as standard equipment to provide protection if the excavator is tipped over. The seat belt must be worn for ROPS / TOPS protection.

Check the ROPS / TOPS cab, mounting and hardware for damage. Never modify the ROPS / TOPS cab. Replace the cab and hardware if damaged.

ROPS / TOPS - Roll Over Protective Structure per ISO 12117-2: 2008, and Tip Over Protective Structure per ISO 12117: 2000.

S/N AETB11001 - AETB11234 And AET311001 - AET311234

The Bobcat excavator has an operator cab as standard equipment.




WARNING

Never modify operator cab by welding, grinding, drilling holes or adding attachments unless instructed to do so by Bobcat Company. Changes to the cab can cause loss of operator protection from rollover and falling objects, and result in injury or death.

W-2069-0200

Cab Door

Figure 10-30-1

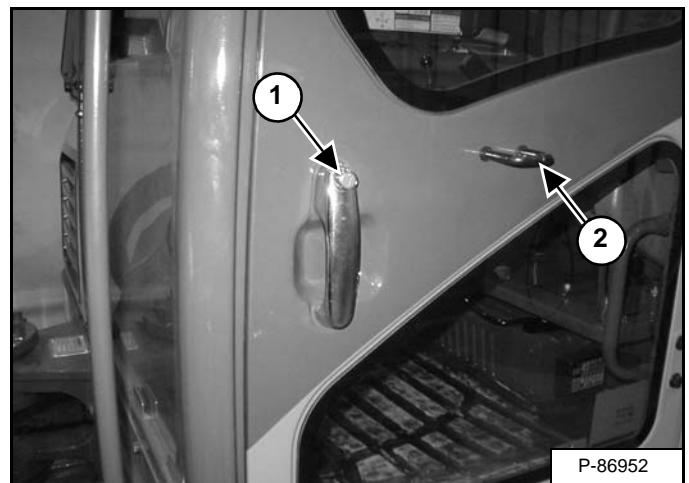


P-86952

The cab door can be locked (Item 1) [Figure 10-30-1] with the same key as the starter switch.

The door can be held in the open position. Push the door all the way open until the latch (Item 2) [Figure 10-30-1] engages to hold the door in the open position.

Figure 10-30-2

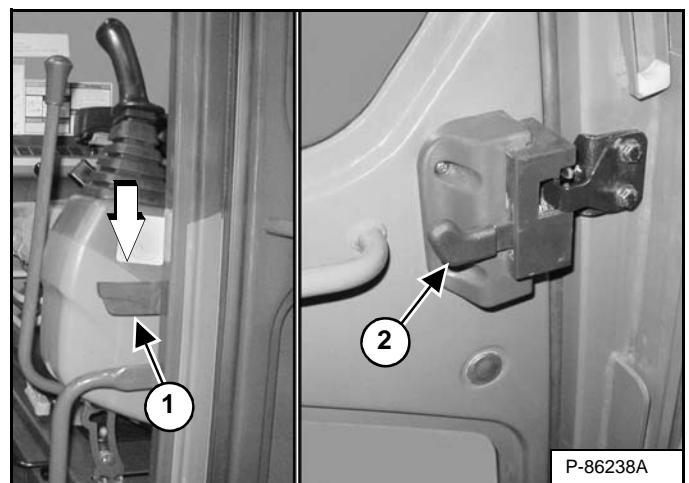

P-86238A

When the door is in the open position, push down on the latch (Item 1) [Figure 10-30-2] and close the door.


From inside the cab, open the door using the handle (Item 2) [Figure 10-30-2].

OPERATOR CAB (CONT'D)

Front Window

Opening The Front Window

Figure 10-30-3

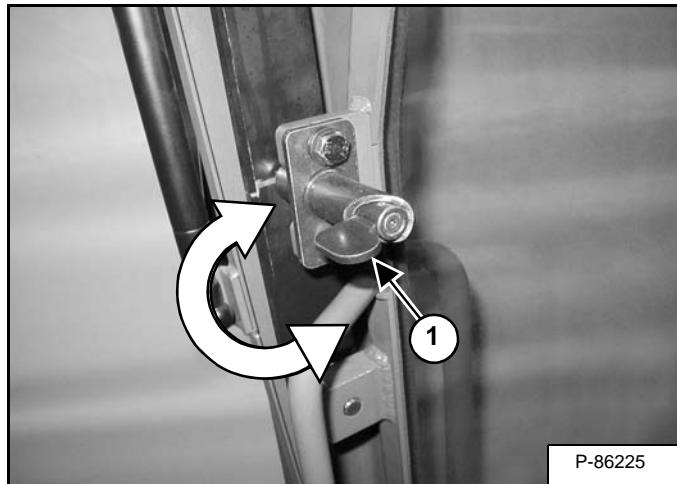

Rotate the front window latch pins (Item 1) [Figure 10-30-3] (Both sides).


Figure 10-30-4



Use both window grab handles to pull the top of the window in [Figure 10-30-4].

Continue moving the window in and up over the operator's head until the window is fully raised.

Figure 10-30-5

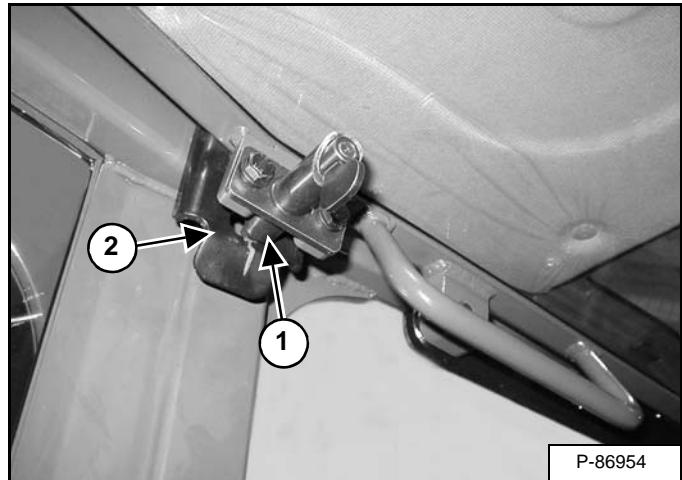

When the window is fully raised, push up on the window slightly until the two latch pins (Item 1) (both sides) engage into the bracket (Item 2) [Figure 10-30-5] to lock the window in the open position. Pull down slightly on the window to make sure the latch pins are properly seated to hold the window securely in the open position.

Closing The Front Window

Support the window while rotating both window latch pins (Item 1) [Figure 10-30-5] to the unlocked position.

Using both window grab handles, pull the window forward and down to the closed position [Figure 10-30-4].

When the window is fully lowered, push in on the window slightly until the two latch pins (Item 1) [Figure 10-30-3] (both sides) engage into the bracket to lock the window in the closed position.

OPERATOR CAB (CONT'D)


Front Wiper

Figure 10-30-6



The front window is equipped with a wiper (Item 1) [Figure 10-30-6] and washer.

Figure 10-30-7

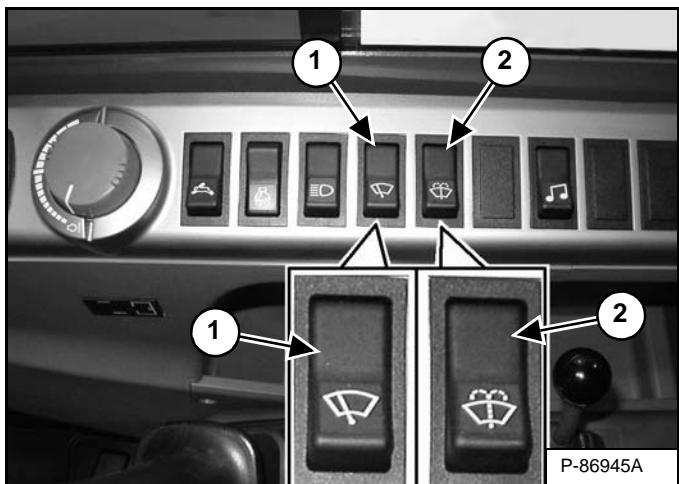


The wiper switch (Item 1) [Figure 10-30-7] has three positions, OFF, intermittent wiper mode and full speed.

The window washer switch (Item 2) activates the front window washer. (The wiper switch (Item 1) must be activated before the washer switch (Item 2) [Figure 10-30-7] will allow washer fluid to be sprayed on the front window.)

Window Washer Reservoir

Figure 10-30-8

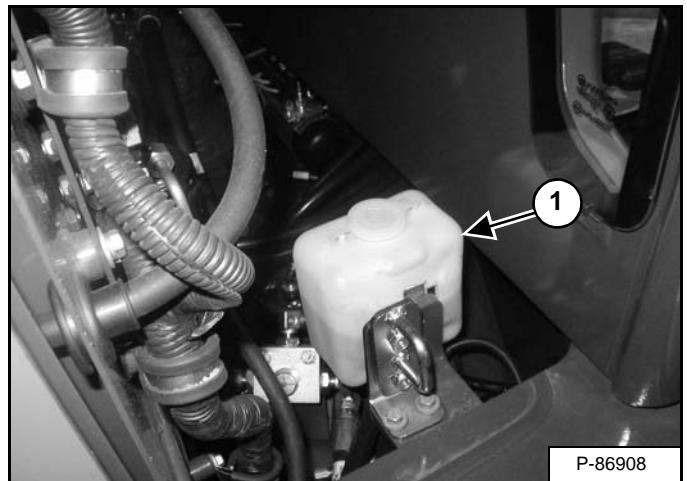


The window washer reservoir (Item 1) [Figure 10-30-8] is located under the right side cover and to the front of the radiator. (When the temperature is 0°C (32°F) or lower, fill the washer reservoir with washer fluid specified for freezing conditions. If the washer bottle is filled with water, it will freeze and damage the washer reservoir.)

OPERATOR CAB (CONT'D)

Right Side Window

Opening The Right Front Window

Figure 10-30-9

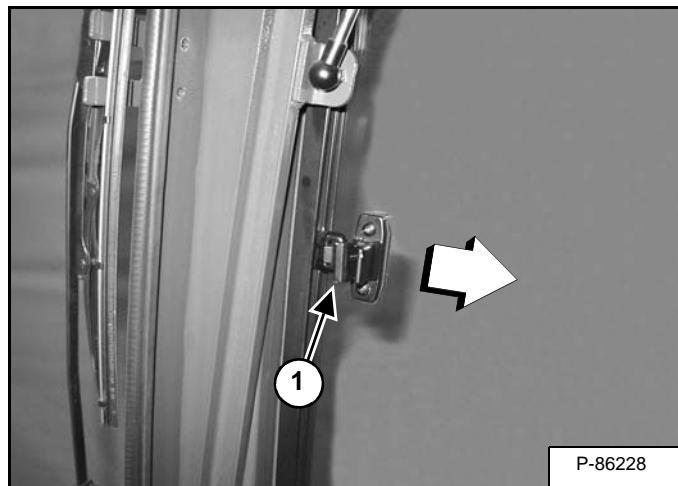

Press the latch / handle (Item 1) **[Figure 10-30-9]** together and pull back on the latch / handle to open the right side window.

Closing The Right Front Window

Push the latch / handle (Item 1) **[Figure 10-30-9]** forward until the latch / handle lock the window in the closed position.

OPERATOR CAB (CONT'D)

Heating, Ventilation And Air Conditioning Duct

Figure 10-30-10

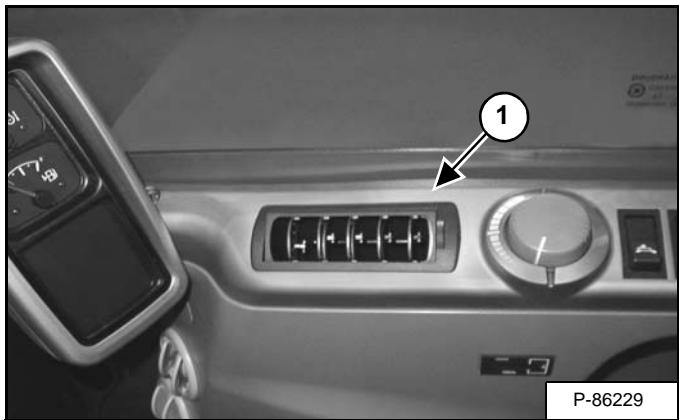


Figure 10-30-11



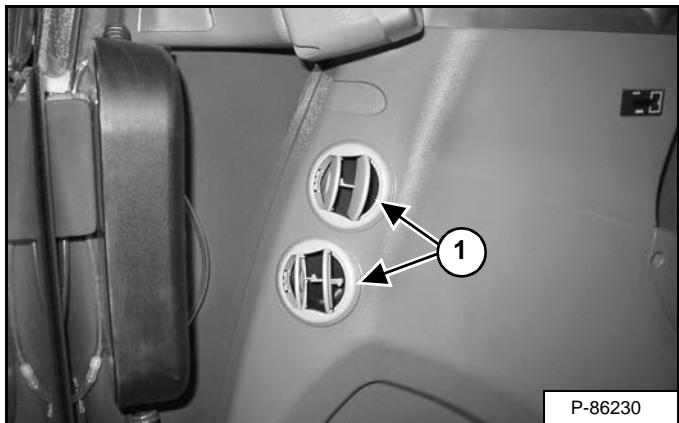


Figure 10-30-12

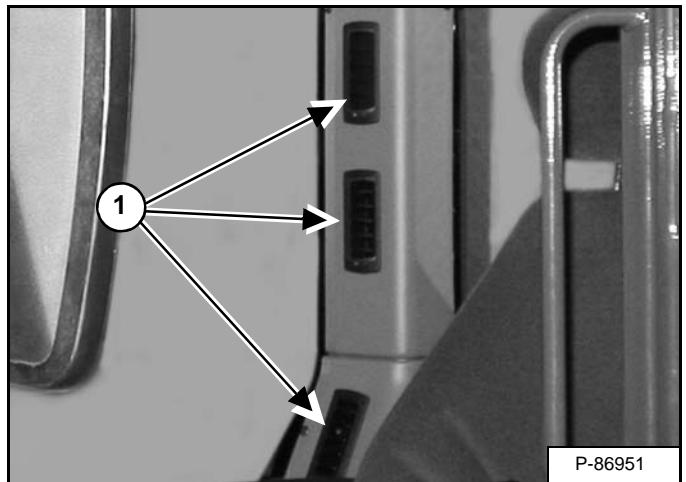

The excavator is equipped with seven air vents (Item 1) [Figure 10-30-10], [Figure 10-30-11] and [Figure 10-30-12] that can be adjusted to deflect air flow to the desired area of the cab.

Figure 10-30-13

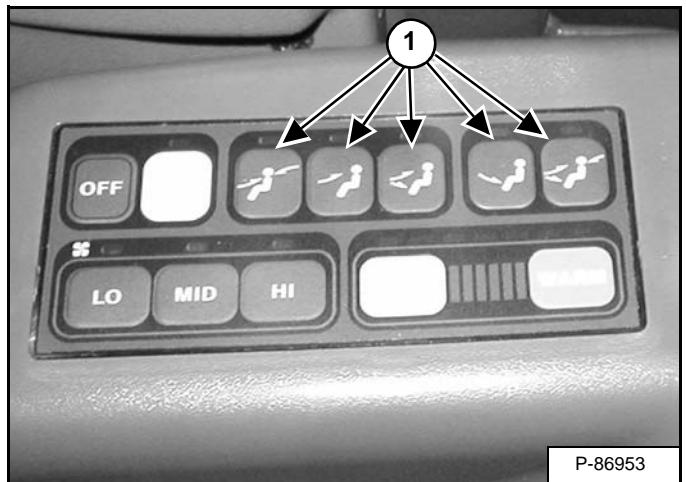

Use the one of the five buttons (Item 1) [Figure 10-30-13] located in the left console to control which air ducts are active.

Product: Bobcat E80 Compact Excavator Service Repair Workshop Manual
Full Download: <https://www.arepairmanual.com/downloads/bobcat-e80-compact-excavator-service-repair-workshop-manual/>



Sample of manual. Download All 879 pages at:
<https://www.arepairmanual.com/downloads/bobcat-e80-compact-excavator-service-repair-workshop-manual/>