



# Bobcat®

---

## Service Manual

 
# CT225, CT230 & CT235 Compact Tractor

---

**S/N ABFJ11001 & Above**

**S/N ABFP11001 & Above**

**S/N A9JY11001 & Above**

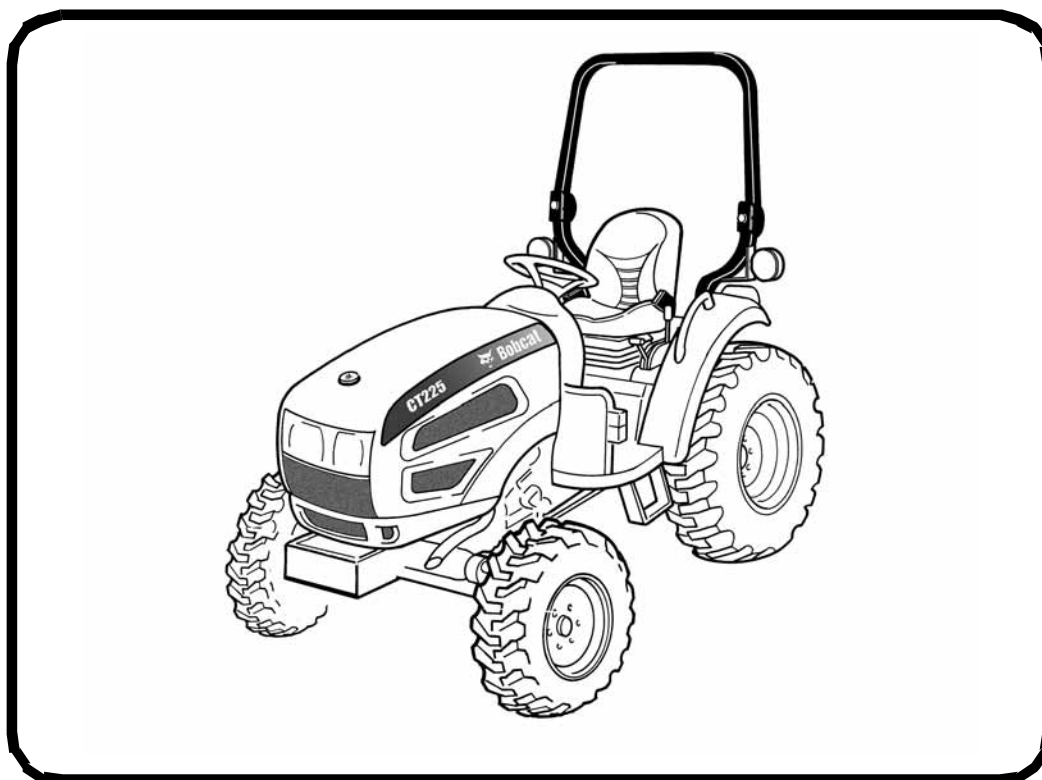

Product: Bobcat CT225,CT230 & CT235 Compact Tractor Service Repair Workshop Manual

Full Download: <https://www.arepairmanual.com/downloads/bobcat-ct225ct230-ct>

[235-compact-tractor-service-repair-workshop-manual/](https://www.arepairmanual.com/downloads/bobcat-ct225ct230-ct235-compact-tractor-service-repair-workshop-manual/)

Sample of manual. Download All 701 pages at:

<https://www.arepairmanual.com/downloads/bobcat-ct225ct230-ct235-compact-tractor-service-repair-workshop-manual/>

# MAINTENANCE SAFETY



## WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0807



**Safety Alert Symbol:** This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

### CORRECT



P-90216

⚠ Never service the machine without instructions.

### CORRECT



B-23NEW

⚠ Before exiting machine, engage parking brake. Chock wheels before servicing

### CORRECT



B-23552

⚠ Cleaning and maintenance are required daily.

### WRONG



B-23556

- ⚠ Have good ventilation when welding or grinding painted parts.
- ⚠ Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.
- ⚠ Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.

### WRONG



B-23525

- ⚠ Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause loader arms to drop.
- ⚠ Lower loader arms, attachments, and implements (if equipped) before servicing.
- ⚠ DO NOT service the compact tractor or implement with the PTO system engaged.

### WRONG



B-23590

- ⚠ Never start the machine if not properly seated in the operator's seat.
- ⚠ Never work on the machine with loader arms raised.
- ⚠ Never modify equipment or add attachments not approved by Bobcat Company.

 
### WRONG



B-23551

- ⚠ Stop, cool and clean engine of flammable materials before checking fluids.
- ⚠ Never service or adjust machine with the engine running unless instructed to do so in the manual.
- ⚠ Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- ⚠ Never fill fuel tank with engine running, while smoking or when near open flame.

### WRONG

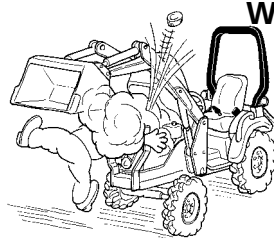

B-23564

- ⚠ Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- ⚠ Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
- ⚠ Keep engine cover and side access panels closed except for service.

### WRONG



B-6589

- ⚠ Lead-acid batteries produce flammable and explosive gases.
- ⚠ Keep arcs, sparks, flames and lighted tobacco away from batteries.
- ⚠ Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact, flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts.



**Bobcat®**

## ALPHABETICAL INDEX

|                                                        |              |                                                      |              |
|--------------------------------------------------------|--------------|------------------------------------------------------|--------------|
| AIR CLEANER .....                                      | 70-01        | HYDRAULIC FILTER.....                                | 20-01        |
| AIR CLEANER SERVICE .....                              | 10-01        | HYDRAULIC FLUID .....                                | SPEC-01      |
| ALTERNATOR .....                                       | 60-01        | HYDRAULIC PUMP .....                                 | 20-01        |
| ALTERNATOR BELT .....                                  | 10-01        | HYDRAULIC SYSTEM INFORMATION .....                   | 20-01        |
| AUXILIARY CONTROL VALVE .....                          | 20-01        | HYDRAULIC /HYDROSTATIC/<br>TRANSMISSION SYSTEM ..... | 10-01        |
| AXLE AND DIFFERENTIAL .....                            | 40-01        | HYDROSTATIC PUMP .....                               | 30-01        |
| AXLE CASE .....                                        | 40-01        | HYDROSTATIC PUMP TESTING .....                       | 30-01        |
| AXLE TOE IN .....                                      | 10-01        | HYDROSTATIC SYSTEM INFORMATION .....                 | 30-01        |
| BATTERY.....                                           | 60-01        | HYDROSTATIC TRANSMISSION CASE .....                  | 50-01        |
| BRAKE CASE .....                                       | 40-01        | HOOD LIGHTS.....                                     | 60-01        |
| BRAKE PEDAL ASSEMBLY .....                             | 40-01        | HORN .....                                           | 60-01        |
| BRAKE SYSTEM .....                                     | 10-01        |                                                      |              |
| CAMSHAFT AND TIMING GEARS.....                         | 70-01        | INSTRUMENT PANEL.....                                | 60-01        |
| CLUTCH ASSEMBLY .....                                  | 70-01        | LUBRICATING THE COMPACT TRACTOR .....                | 10-01        |
| CLUTCH HOUSING.....                                    | 70-01        | LUBRICATION SYSTEM .....                             | 70-01        |
| CLUTCH SYSTEM .....                                    | 10-01        |                                                      |              |
| COMPACT TRACTOR STORAGE AND RETURN<br>TO SERVICE ..... | 10-01        | MAIN RELIEF VALVE .....                              | 20-01        |
| CONSOLE COVER .....                                    | 50-01        | MID PTO CONTROL .....                                | 50-01        |
| CONVERSIONS .....                                      | SPEC-01      | MLS VALVE .....                                      | 20-01        |
| CRANKSHAFT AND PISTONS .....                           | 70-01        |                                                      |              |
| CRUISE CONTROL .....                                   | 60-01        | OIL COOLER.....                                      | 20-01        |
| CYLINDER HEAD.....                                     | 70-01        | OPERATOR SEAT.....                                   | 50-01        |
| DRIVE SHAFT .....                                      | 50-01        | PARKING BRAKE SYSTEM.....                            | 10-01        |
| DRAW BAR.....                                          | 50-01        | PIVOT PINS .....                                     | 10-01        |
| DRAW BAR ASSEMBLY .....                                | 50-01        | PTO SAFETY SHIELD .....                              | 50-01        |
| ELECTRICAL SYSTEM INFORMATION .....                    | 60-01        | PTO SWITCHES .....                                   | 60-01        |
| ENGINE COOLING SYSTEM.....                             | 10-01, 70-01 | REAR LIGHTS.....                                     | 60-01        |
| ENGINE COVER .....                                     | 10-01, 50-01 | REAR PTO CONTROL.....                                | 50-01        |
| ENGINE INFORMATION .....                               | 70-01        | RIGHT JOYSTICK (IF EQUIPPED).....                    | 20-01        |
| ENGINE LUBRICATION SYSTEM.....                         | 10-01        | RIGHT JOYSTICK VALVE (IF EQUIPPED).....              | 20-01        |
| ENGINE SIDE COVER .....                                | 50-01        | ROPS .....                                           | 50-01        |
| ENGINE SPEED CONTROL .....                             | 70-01        | ROCK SHAFT .....                                     | 20-01        |
| FAN.....                                               | 70-01        |                                                      |              |
| FENDER .....                                           | 50-01        | SAFETY INTERLOCK SYSTEM -<br>NEUTRAL START .....     | 10-01        |
| FENDER ASSEMBLY .....                                  | 50-01        | SAFETY INTERLOCK SYSTEM -<br>OPERATING.....          | 10-01        |
| FIREWALL .....                                         | 50-01        | SEAT BELT.....                                       | 10-01        |
| FLOOR PLATE.....                                       | 50-01        | SEAT SENSOR .....                                    | 60-01        |
| FLOORMAT .....                                         | 50-01        | SEPERATING THE TRACTOR .....                         | 40-01        |
| FLYWHEEL AND HOUSING.....                              | 70-01        | SERVICE BRAKE .....                                  | 40-01        |
| FUEL, COOLANT AND LUBRICANTS<br>(ALL MODELS).....      | SPEC-01      | SERVICE SCHEDULE .....                               | 10-01        |
| FUEL LEVEL SENDER.....                                 | 60-01        | SPARK ARRESTOR MUFFLER.....                          | 10-01, 70-01 |
| FUEL SYSTEM .....                                      | 10-01, 70-01 | SPECIFICATIONS .....                                 | SPEC-01      |
| FUEL TANK.....                                         | 50-01        | SPLASH BOARD.....                                    | 50-01        |
| FRONT AXLE .....                                       | 10-01, 40-01 | STARTER .....                                        | 60-01        |

Continued On Next Page

## ALPHABETICAL INDEX (CONT'D)

|                                       |         |
|---------------------------------------|---------|
| STEERING AXLE ADJUSTMENT .....        | 40-01   |
| STEERING CYLINDER .....               | 20-01   |
| STEERING VALVE .....                  | 20-01   |
| SUPPORTING THE COMPACT TRACTOR        |         |
| ON JACKSTANDS .....                   | 10-01   |
| THREE POINT CYLINDER .....            | 20-01   |
| THREE POINT CYLINDER CONTROL .....    | 20-01   |
| THREE POINT HITCH HOUSING .....       | 20-01   |
| THREE POINT HITCH LOWER LINKS .....   | 50-01   |
| TIRE MAINTENANCE .....                | 10-01   |
| TORQUE SPECIFICATIONS FOR BOLTS ..... | SPEC-01 |
| TOWING THE COMPACT TRACTOR .....      | 10-01   |
| TRANSMISSION .....                    | 40-01   |
| TRANSPORTING THE COMPACT TRACTOR ON A |         |
| TRAILER .....                         | 10-01   |
| TRAVEL CONTROL PEDAL .....            | 10-01   |
| TRAVEL PEDAL .....                    | 30-01   |
| TROUBLESHOOTING .....                 | 40-01   |

## CONTENTS

|                                                                                                  |         |
|--------------------------------------------------------------------------------------------------|---------|
| FOREWORD.....                                                                                    | II      |
| SAFETY INSTRUCTIONS .....                                                                        | V       |
| FIRE PREVENTION .....                                                                            | VIII    |
| SERIAL NUMBER LOCATIONS .....                                                                    | X       |
| DELIVERY REPORT.....                                                                             | XI      |
| COMPACT TRACTOR IDENTIFICATION.....                                                              | XII     |
| COMPACT TRACTOR IDENTIFICATION (WITH OPTIONAL<br>LOADER AND REAR BALLAST) .....                  | XIII    |
| COMPACT TRACTOR IDENTIFICATION (WITH OPTIONAL THREE-<br>POINT IMPLEMENT AND FRONT BALLAST) ..... | XIV     |
| SAFETY AND MAINTENANCE.....                                                                      | 10-01   |
| HYDRAULIC SYSTEM .....                                                                           | 20-01   |
| HYDROSTATIC SYSTEM .....                                                                         | 30-01   |
| DRIVE SYSTEM .....                                                                               | 40-01   |
| MAINFRAME.....                                                                                   | 50-01   |
| ELECTRICAL SYSTEM .....                                                                          | 60-01   |
| ENGINE SERVICE .....                                                                             | 70-01   |
| SPECIFICATIONS.....                                                                              | SPEC-01 |

**SAFETY AND  
MAINTENANCE**

**HYDRAULIC  
SYSTEM**

**HYDROSTATIC  
SYSTEM**

**DRIVE SYSTEM**

**MAINFRAME**

**ELECTRICAL  
SYSTEM**

**ENGINE SERVICE**

**SPECIFICATIONS**

# FOREWORD

 
This manual is for the Bobcat compact tractor mechanic. It provides necessary servicing and adjustment procedures for the Bobcat compact tractor and its component parts and systems. Refer to the Operation & Maintenance Manual for operating instructions, starting procedure, daily checks, etc.

A general inspection of the following items must be made after the compact tractor has had service or repair:


1. Check that the ROPS is in good condition and is not modified.




8. Enclosure door latches must open and close freely.

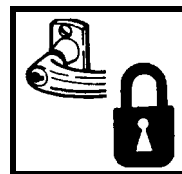

 
2. Check that ROPS mounting hardware is tightened and is Bobcat approved.

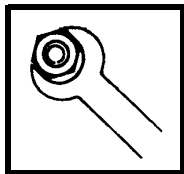


9. Attachment locking pins must function correctly and be in good condition. Bob-Tach wedges and linkages (if equipped) must function correctly and be in good condition.

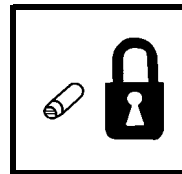 

 3. The seat belt must be correctly installed, functional and in good condition.

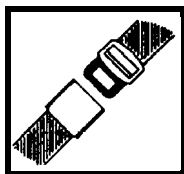

 
10. Safety treads must be in good condition.

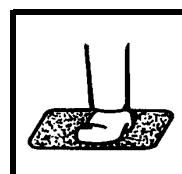

4. Machine signs (decals) must be legible and in the correct location.



 
11. Check for correct function of indicator lamps.

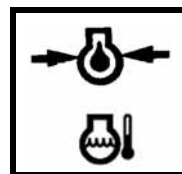


5. Travel control pedal(s) and loader joystick control lever must return to neutral.



 
12. Check hydraulic fluid level, engine oil level and fuel supply.

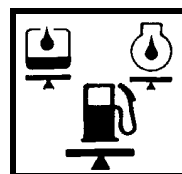

 
6. Check for correct function of the work lights.

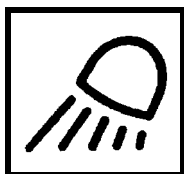

 
13. Inspect for fuel, oil or hydraulic fluid leaks.

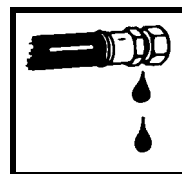

 
7. The parking brake must function correctly.

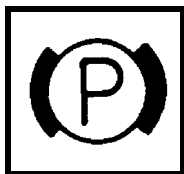

 14. Lubricate the compact tractor.

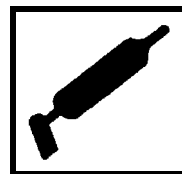

 
15. Check the condition of the battery and cables.

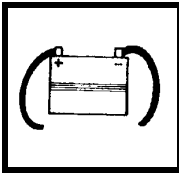


20. Check for any field modification not completed.



 
16. Inspect the air cleaner for damage or leaks. Check the condition of the element.

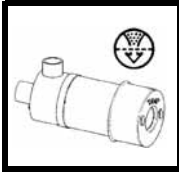

 21. Operate the machine and check all functions.

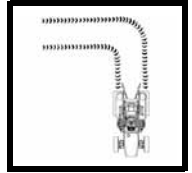

 
17. Check the electrical charging system.

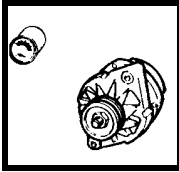

22. Check Safety Interlock System (Neutral Start and Operating) for correct function before the machine is returned to the customer.



 
18. Check tires for wear and pressure. Use only approved tires.

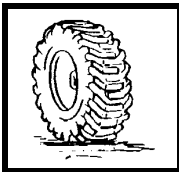


23. Check function or condition of all equipped options and accessories (examples: back-up alarm, front-end loader, etc.).



 19. Inspect for loose or broken parts or connections.

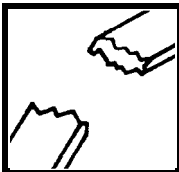

 24. Recommend to the owner that all necessary corrections be made before the machine is returned to service.

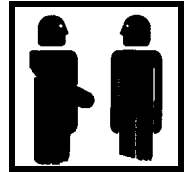

### CALIFORNIA PROPOSITION 65 WARNING

Diesel engine exhaust and some of its constituents are known to the state of California to cause cancer, birth defects and other reproductive harm.



## SAFETY INSTRUCTIONS



### Safety Alert Symbol

This symbol with a warning statement means:  
"Warning, be alert! Your safety is involved!"  
Carefully read the message that follows.



## WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903

## IMPORTANT

This notice identifies procedures which must be followed to avoid damage to the machine.

I-2019-0284



## DANGER

The signal word DANGER on the machine and in the manuals indicates a hazardous situation which, if not avoided, will result in death or serious injury.

D-1002-1107



## WARNING

The signal word WARNING on the machine and in the manuals indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

W-2044-1107

The following publications provide information on the safe use and maintenance of the Bobcat machine and attachments:

- The Delivery Report is used to assure that complete instructions have been given to the new owner and that the machine is in safe operating condition.
- The Operation & Maintenance Manual delivered with the machine or attachment / implement contains operating information as well as routine maintenance and service procedures. It is a part of the machine and can be stored in a container provided on the machine. Replacement Operation & Maintenance Manuals can be ordered from your Bobcat dealer.
- Machine signs (decals) instruct on the safe operation and care of your Bobcat machine or attachment / implement. The signs and their locations are shown in the Operation & Maintenance Manual. Replacement signs are available from your Bobcat dealer.
- An Operator's Handbook fastened below the instrument panel. It's brief instructions are convenient to the operator. The handbook is available from your dealer in an English edition or one of many other languages. See your Bobcat dealer for more information on translated versions.
- The AEM Safety Manual delivered with the machine gives general safety information.
- The Service Manual and Parts Manual are available from your dealer for use by mechanics to do shop-type service and repair work.

## SAFETY INSTRUCTIONS (CONT'D)

### Use Safety Rules

- Read and follow instructions in the machine and the attachment's / implement's Operation & Maintenance Manual before operating.
- Check for underground lines before operating attachment / implement (if applicable).
- In addition to the design and configuration of equipment, hazard control and accident prevention are dependent upon the awareness, concern, prudence and proper training of personnel involved in the operation, transport, maintenance and storage of equipment.
- Check that the attachment mounting pins and hardware are installed correctly and securely fastened (if equipped).
- Check that the loader is securely installed to the compact tractor using the correct pins and hardware.
- Check that the Bob-Tach levers are in the locked position and the wedges are fully engaged into the mounting holes of the attachment (if applicable).
- Check that the implement is securely fastened to the machine.
- Depress brake pedals (or make sure parking brake is engaged) and make sure all the machine controls are in the NEUTRAL position before starting the machine.
- Always start the machine from the operator's seat.
- Operate the attachment / implement according to the Operation & Maintenance Manual.
- When learning to operate the attachment / implement, do it at a slow rate in an area clear of bystanders.
- DO NOT permit personnel to be in the work area when operating the machine and attachment / implement.
- The attachment / implement must be used ONLY on approved machines. See your Bobcat dealer for updated list of approved attachments / implements for each machine model.
- DO NOT modify equipment or add attachments / implements that exceed manufacturer's specifications.
- DO NOT make any adjustments or repairs on the machine or attachment / implement while the engine is running.
- Keep shields and guards in place. Replace if damaged.



## Call Before You Dig Dial 811 (USA Only) 1-888-258-0808 (USA & Canada)

When you call, you will be directed to a location in your state / province, or city for information about buried lines (telephone, cable TV, water, sewer, gas, etc.).



Cutting or drilling concrete containing sand or rock containing quartz may result in exposure to silica dust. Do not exceed Permissible Exposure Limits (PEL) to silica dust as determined by OSHA or other job site Rules and Regulations. Use a respirator, water spray or other means to control dust. Silica dust can cause lung disease and is known to the state of California to cause cancer.

SI CT-1008 SM

## **SAFETY INSTRUCTIONS (CONT'D)**

### **Safety Rules For Power Take-Off (PTO) Driven Implements**

- Keep PTO shields and all guards in place. Replace damaged or missing shields and guards before operating.
- Follow warnings and instructions on machine signs (decals). Replace damaged or missing decals.
- Do not wear loose or bulky clothing around the PTO or other moving parts.
- Keep bystanders away from PTO driven equipment, and never allow children near machines.
- Read and understand the manuals for the PTO driven equipment and be aware of safe operating procedures and hazards that may not be readily apparent.
- Always walk around equipment to avoid coming near a turning PTO driveline. Stepping over, leaning across or crawling under a turning PTO driveline can cause entanglement.
- Position the machine and implement hitch correctly to prevent driveline stress and separation.
- Use caution when turning. Turning too sharp can cause driveline damage.
- Use caution when raising PTO driven implement. Excessive driveline angle can cause driveline damage. Use stops if needed.

### **Compact Tractor Requirements and Capabilities**

- Fasten seat belt securely when Roll-Over Protective Structure (ROPS) is up and locked. DO NOT wear seat belt if ROPS is down.
- Compact tractor must be equipped with sway bars or chains.
- Stop the compact tractor and engage the parking brakes. Install blocks in front of and behind the rear tires of the compact tractor. Install blocks underneath and support the implement securely before working under raised implements.
- Keep bystanders clear of moving parts and the work area. Keep children away.
- Use increased caution on slopes and near banks and ditches to prevent overturn.

- Make certain that the Slow Moving Vehicle (SMV) emblem is installed so that it is visible and legible. When transporting the equipment, use the compact tractor flashing warning lights and follow all local regulations.
- Operate this equipment with a compact tractor equipped with an approved Roll-Over Protective Structure (ROPS). Always wear seat belt when the ROPS is up. Serious injury or death could result from falling off the compact tractor.
- Before leaving the compact tractor operator's seat:
  1. Park on flat level ground.
  2. Fully lower the loader arms and put the attachment flat on the ground (if equipped).
  3. Fully lower the three-point hitch or mid-mount implements (if equipped).
  4. Lock brake pedals together and engage the parking brake.
  5. Place all controls in neutral.
  6. Stop engine, unfasten seat belt and remove the key.
- Never allow riders on the compact tractor or implement. Falling off can result in serious injury or death.
- Start the compact tractor only when properly seated in the operator's seat. Starting a compact tractor in gear can result in serious injury or death.
- Operate the compact tractor and attachments / implements from the operator's position only.
- Add the correct front ballast for rear three-point hitch implements and pull type implements. Add the correct rear ballast when using the loader and attachments. Front and rear ballast can be purchased from your compact tractor dealer.
- Do not handle large objects (such as round bales or posts) unless the loader is equipped with the proper attachment and the load is secured.
- The parking brake must be engaged before leaving the compact tractor operator's seat. Rollaway can occur because the transmission may not prevent machine movement. Lock the brake pedals together before activating the parking brake.

SI CT-1008 SM

## FIRE PREVENTION



### Maintenance

The machine and some attachments / implements have components that are at high temperatures under normal operating conditions. The primary source of high temperatures is the engine and exhaust system. The electrical system, if damaged or incorrectly maintained, can be a source of arcs or sparks.

Flammable debris (leaves, straw, etc.) must be removed regularly. If flammable debris is allowed to accumulate, it can cause a fire hazard. Clean often to avoid this accumulation. Flammable debris in the engine compartment is a potential fire hazard.

The operator's area, engine compartment and engine cooling system must be inspected every day and cleaned if necessary to prevent fire hazards and overheating.

All fuels, most lubricants and some coolants mixtures are flammable. Flammable fluids that are leaking or spilled onto hot surfaces or onto electrical components can cause a fire.

### Operation

Do not use the machine where exhaust, arcs, sparks or hot components can contact flammable material, explosive dust or gases.

### Electrical



Check all electrical wiring and connections for damage. Keep the battery terminals clean and tight. Repair or replace any damaged part or wires that are loose or frayed.

Battery gas can explode and cause serious injury. Use the procedure in the Operation & Maintenance Manual for connecting the battery and for jump starting. Do not jump start or charge a frozen or damaged battery. Keep any open flames or sparks away from batteries. Do not smoke in battery charging area.

## Hydraulic System

Check hydraulic tubes, hoses and fittings for damage and leakage. Never use open flame or bare skin to check for leaks. Hydraulic tubes and hoses must be properly routed and have adequate support and secure clamps. Tighten or replace any parts that show leakage.

Always clean fluid spills. Do not use gasoline or diesel fuel for cleaning parts. Use commercial nonflammable solvents.

### Fueling



Stop the engine and let it cool before adding fuel. No smoking! Do not refuel a machine near open flames or sparks. Fill the fuel tank outdoors.

### Starting

Do not use ether or starting fluids on any engine that has glow plugs. These starting aids can cause explosion and injure you or bystanders.

Use the procedure in the Operation & Maintenance Manual for connecting the battery and for jump starting.

## Spark Arrestor Exhaust System

The spark arrestor exhaust system is designed to control the emission of hot particles from the engine and exhaust system, but the muffler and the exhaust gases are still hot.

Check the spark arrestor exhaust system regularly to make sure it is maintained and working properly. Use the procedure in the Operation & Maintenance Manual for cleaning the spark arrestor muffler (if equipped).

## **FIRE PREVENTION (CONT'D)**

 
### **Welding And Grinding**

Always clean the machine and attachment / implement, disconnect the battery, and disconnect the wiring from the Bobcat controllers before welding. Cover rubber hoses, battery and all other flammable parts. Keep a fire extinguisher near the machine when welding.

Have good ventilation when grinding or welding painted parts. Wear dust mask when grinding painted parts. Toxic dust or gas can be produced.

Dust generated from repairing nonmetallic parts such as hoods, fenders or covers can be flammable or explosive. Repair such components in a well ventilated area away from open flames or sparks.

### **Fire Extinguishers**

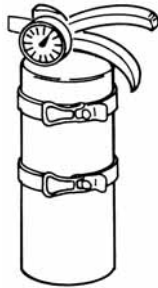


Know where fire extinguishers and first aid kits are located and how to use them. Inspect the fire extinguisher and service the fire extinguisher regularly. Obey the recommendations on the instructions plate.

SERIAL NUMBER LOCATIONS

Always use the serial number of the compact tractor when requesting service information or when ordering parts. Early or later models (identification made by serial number) may use different parts, or it may be necessary to use a different procedure in doing a specific service operation.

 
Figure 1

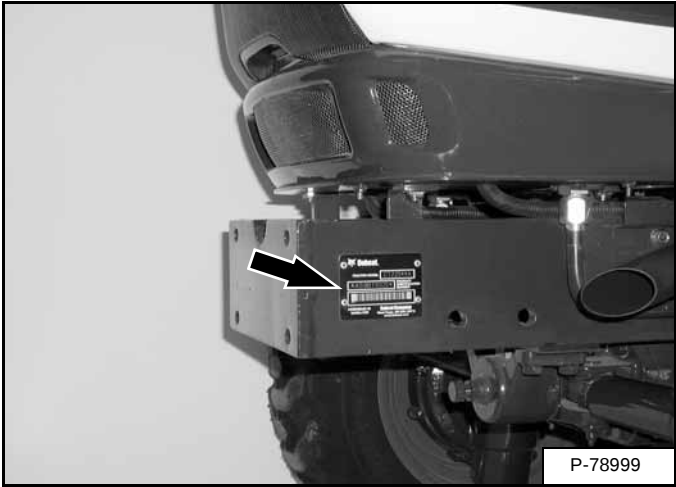

Compact Tractor Serial Number

The compact tractor serial number plate is located on the left front corner of the frame [Figure 1].

 
Explanation of machine Serial Number:

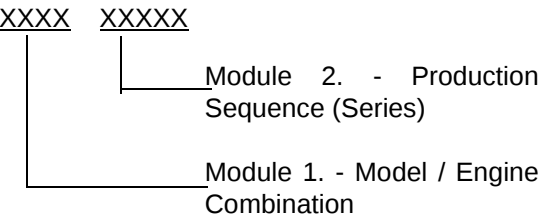

- 1. The four digit Model/Engine Combination Module number identifies the model number and engine combination.
- 2. The five digit Production Sequence Number identifies the order which the compact tractor is produced.

Engine Serial Number

 
Figure 2

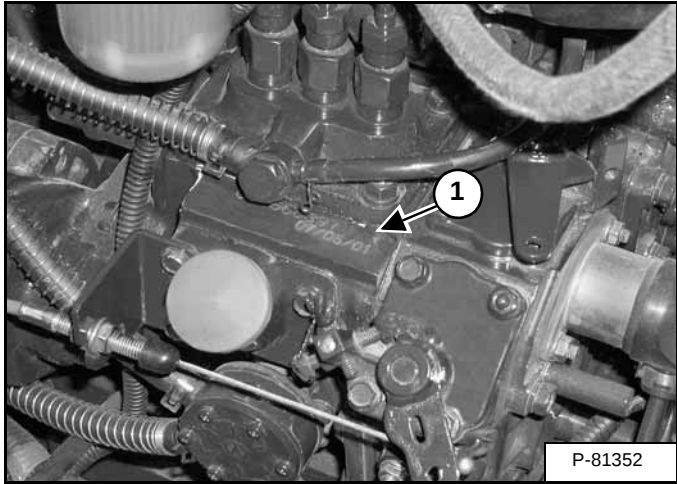

The engine serial number is located on the top of the injection pump (Item 1) [Figure 2].

Loader Serial Number (Optional)

 Figure 3

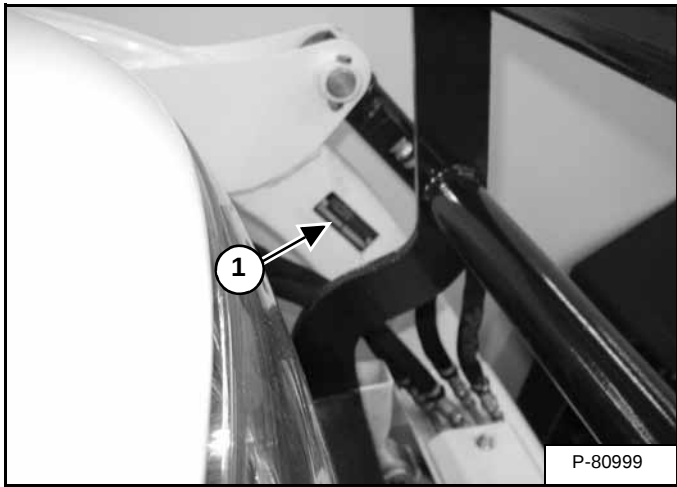

The loader serial number is located on the right loader arm (Item 1) [Figure 3].

## DELIVERY REPORT



Figure 4

The diagram shows a 'DELIVERY REPORT' form with the following layout:

- Top Right:** A box titled 'DELIVERY REPORT' containing several lines of text.
- Top Left:** A section with several lines of text.
- Middle Left:** A box titled 'WARNING' with a thick black header and several lines of text.
- Middle Right:** A large section with many horizontal lines for text.
- Bottom Left:** A section with lines of text.
- Bottom Right:** A small box labeled 'B-16315'.

The delivery report must be filled out by the dealer and signed by the owner or operator when the compact tractor is delivered. An explanation of the form must be given to the owner. Make sure it is filled out completely **[Figure 4]**.
  
## COMPACT TRACTOR IDENTIFICATION

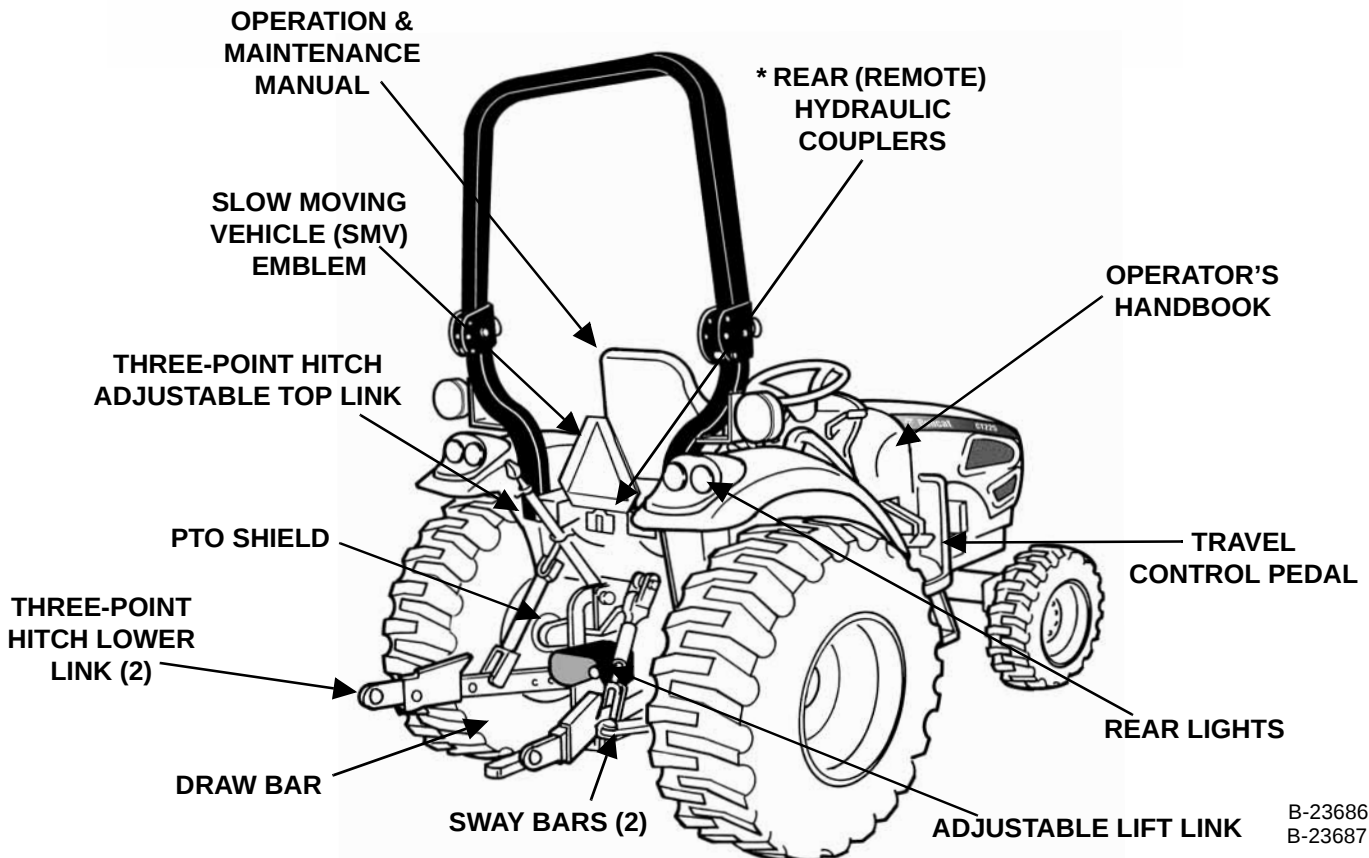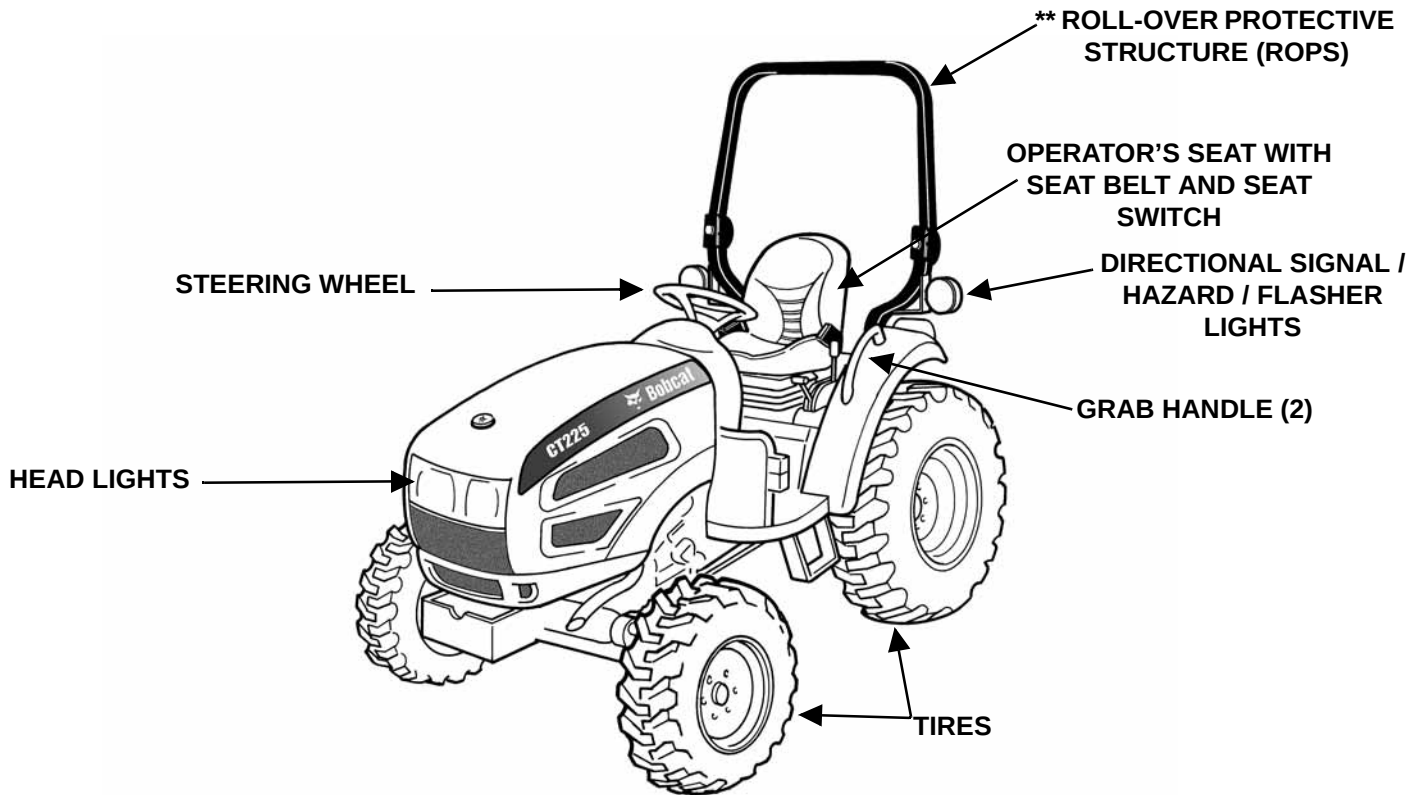


B-23686  
B-23687

\*\*\* ATTACHMENTS AND IMPLEMENTS - Attachments and implements are available for the compact tractor.

\*\* ROPS - Roll Over Protective Structure per ASABE S478 and OSHA 29 CFR PART 1928 Subpart C

\* OPTIONAL OR FIELD ACCESSORIES (Not standard equipment)

## COMPACT TRACTOR IDENTIFICATION (WITH OPTIONAL LOADER AND REAR BALLAST)

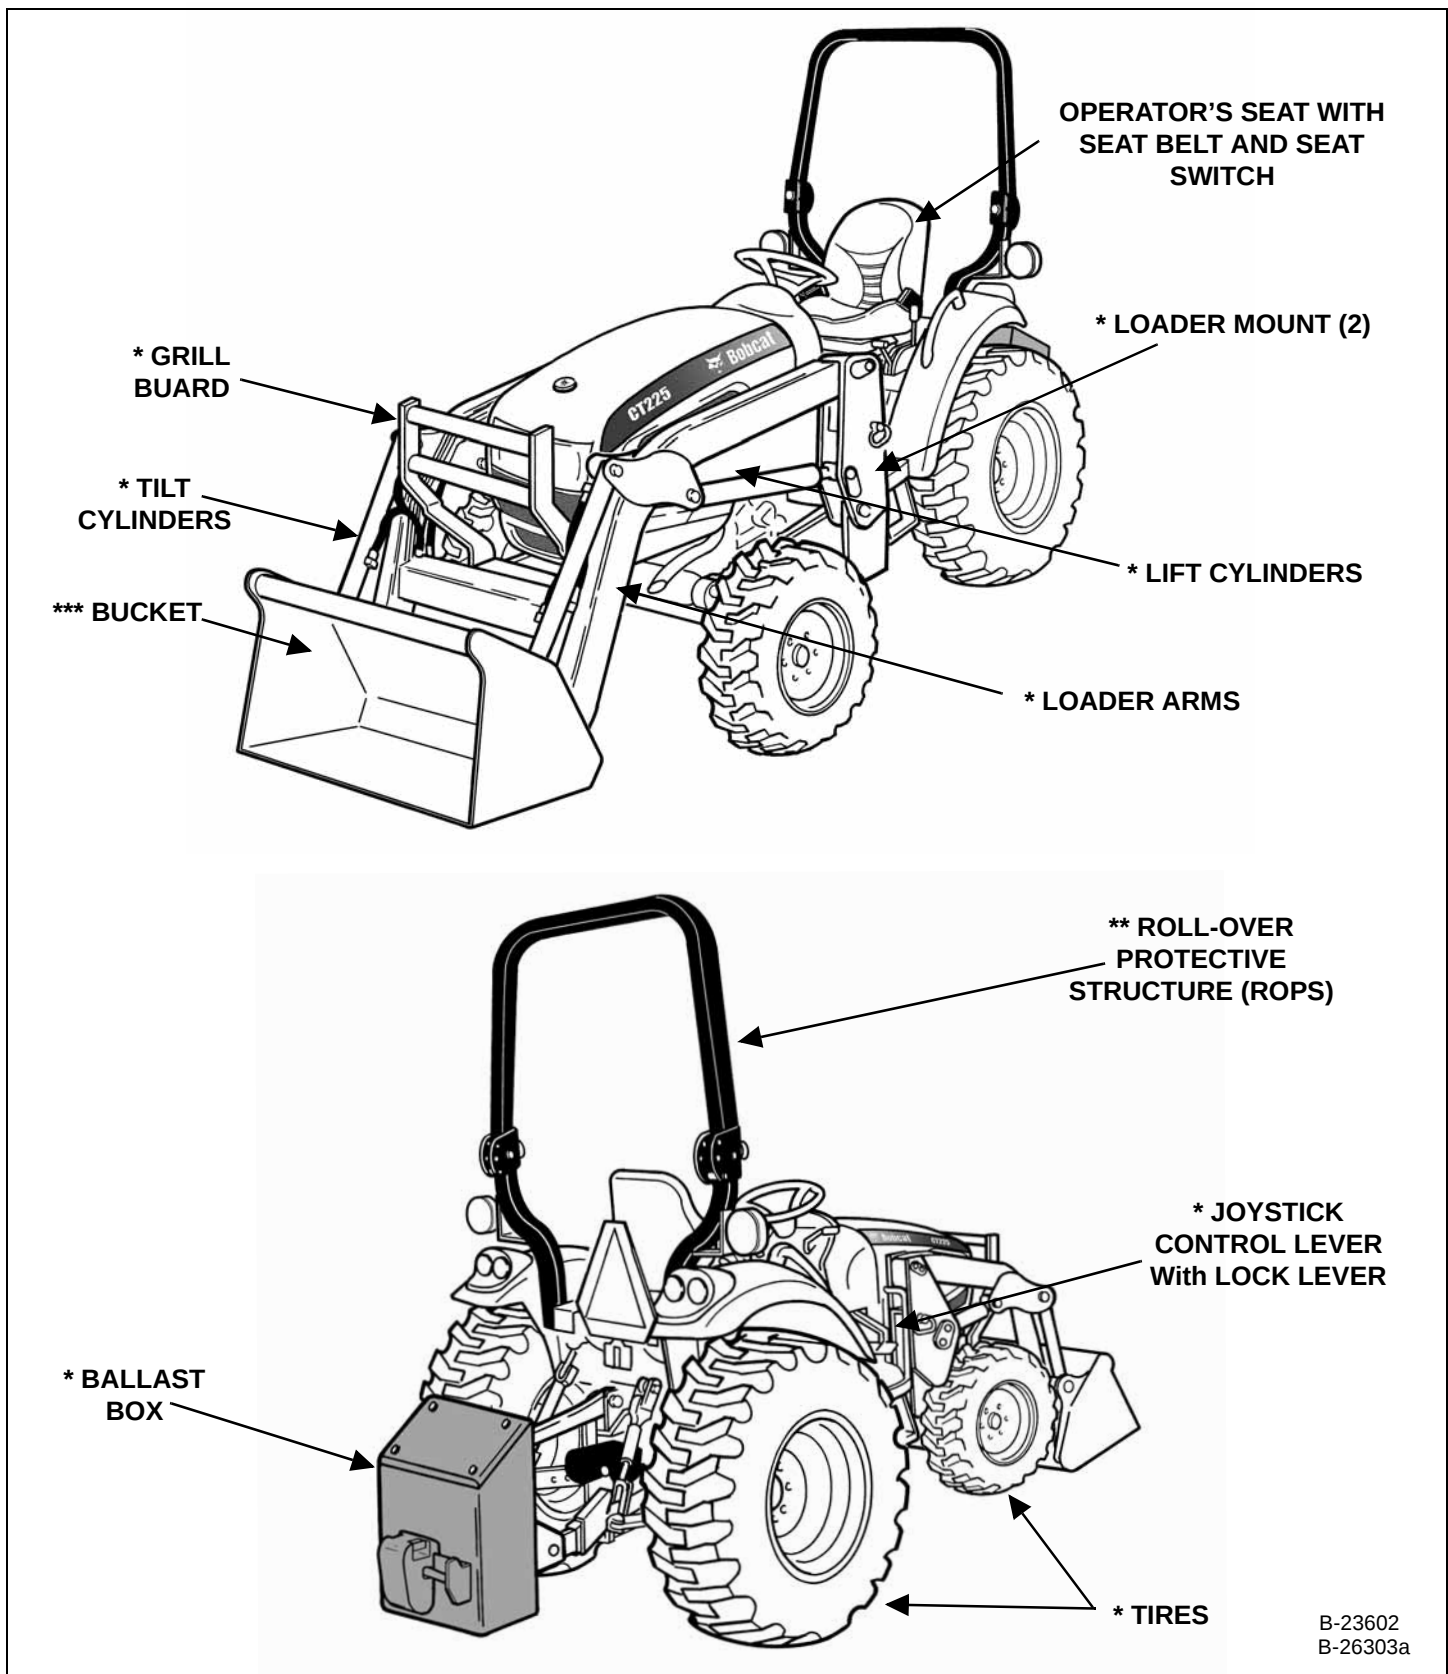 


B-23602  
B-26303a

\*\*\* ATTACHMENTS AND IMPLEMENTS - Attachments and implements are available for the compact tractor.

\*\* ROPS - Roll Over Protective Structure per ASABE S478 and OSHA 29 CFR PART 1928 Subpart C

\* OPTIONAL OR FIELD ACCESSORIES (Not standard equipment)

## COMPACT TRACTOR IDENTIFICATION (WITH OPTIONAL THREE-POINT IMPLEMENT AND FRONT BALLAST)

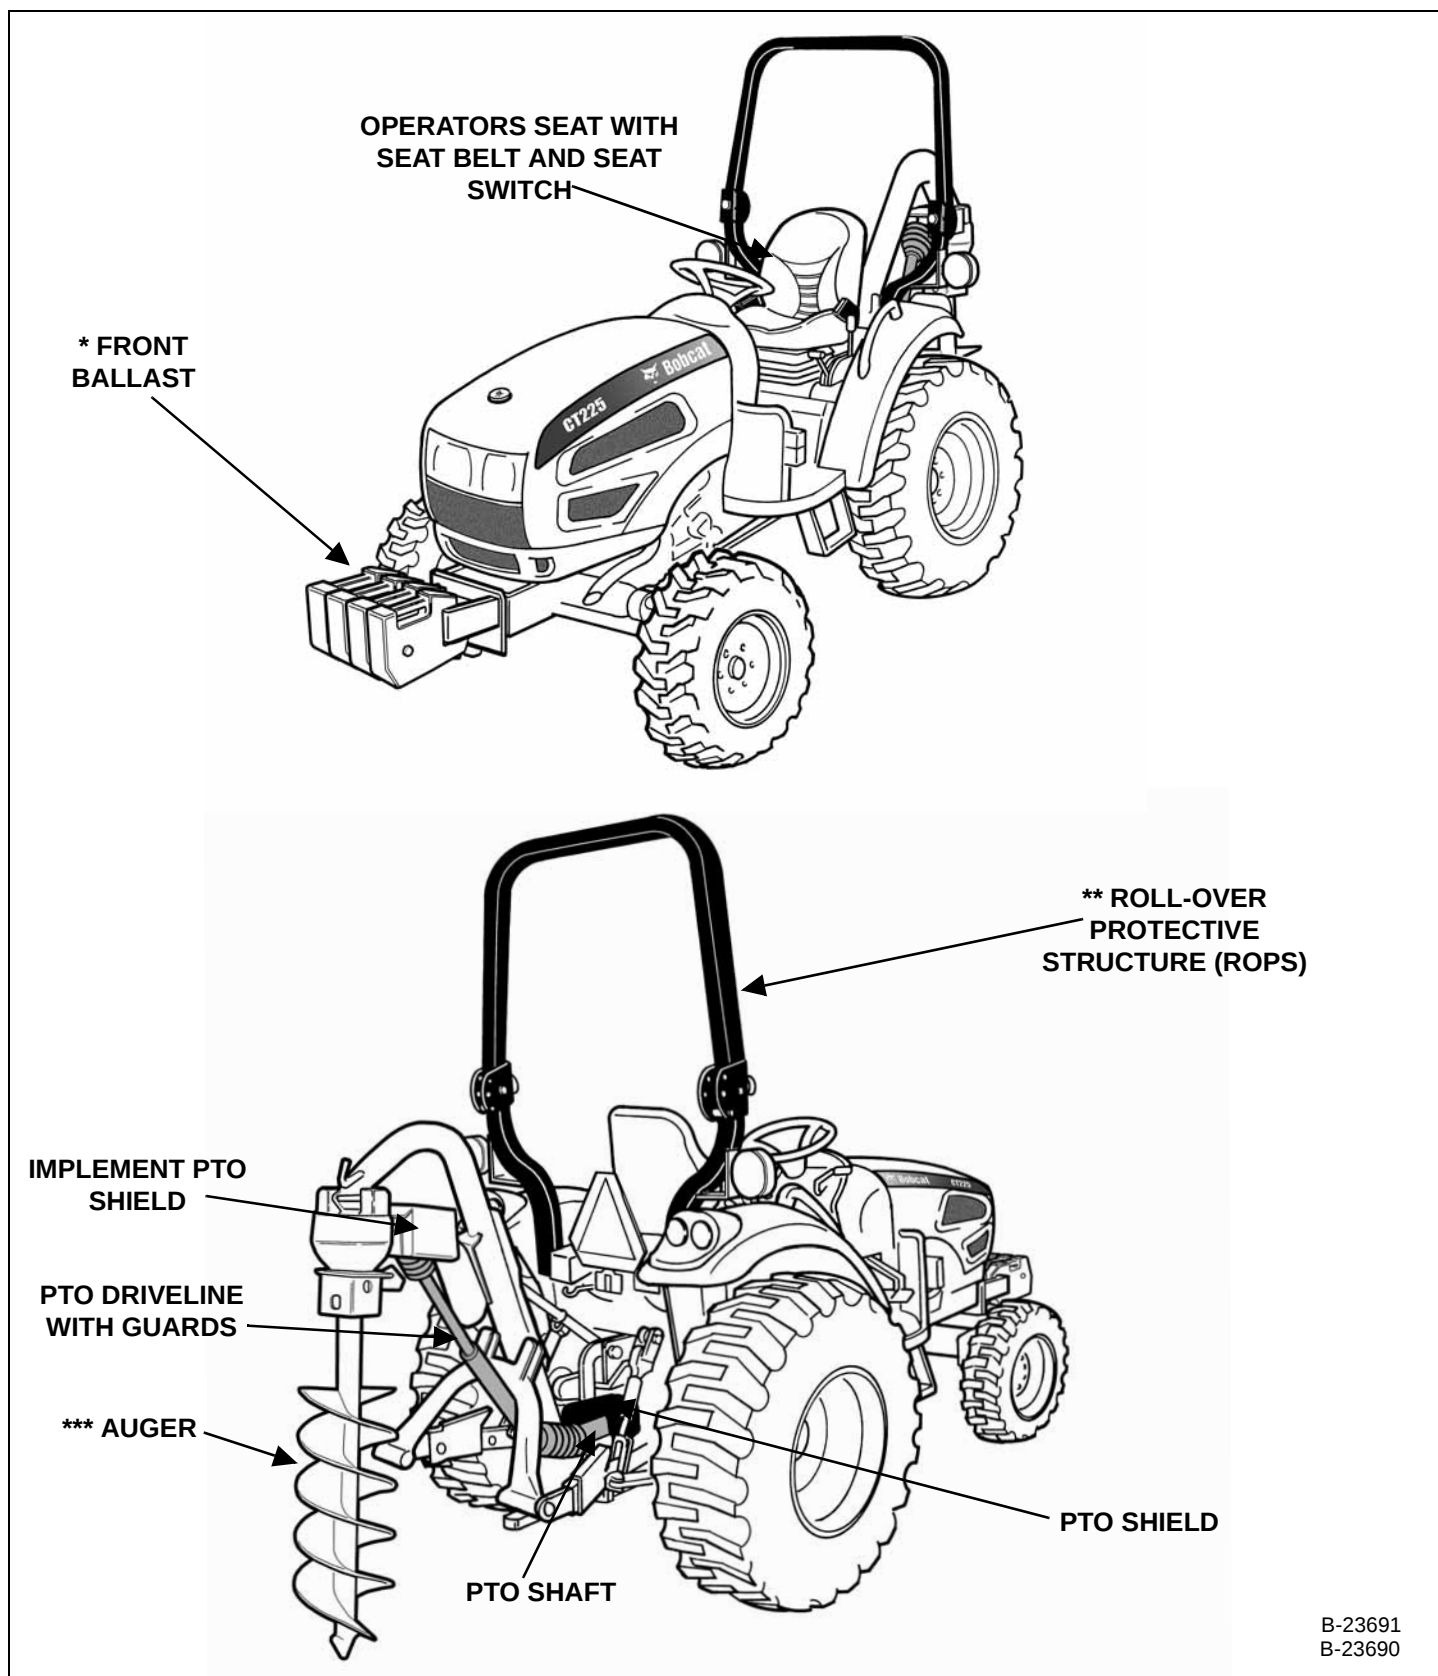 

\*\*\* ATTACHMENTS AND IMPLEMENTS - Attachments and implements are available for the compact tractor.

\*\* ROPS - Roll Over Protective Structure per ASABE S478 and OSHA 29 CFR PART 1928 Subpart C

\* OPTIONAL OR FIELD ACCESSORIES (Not standard equipment)

|                                                     |          |
|-----------------------------------------------------|----------|
| AIR CLEANER SERVICE .....                           | 10-80-1  |
| Replacing Filter Element .....                      | 10-80-1  |
| ALTERNATOR BELT .....                               | 10-160-1 |
| Belt Adjustment .....                               | 10-160-1 |
| Belt Replacement .....                              | 10-160-1 |
| AXLE TOE IN .....                                   | 10-60-1  |
| Inspection And Maintenance .....                    | 10-60-1  |
| BRAKE SYSTEM .....                                  | 10-230-1 |
| Adjusting .....                                     | 10-230-2 |
| Inspection And Maintenance .....                    | 10-230-1 |
| CLUTCH SYSTEM .....                                 | 10-250-1 |
| Adjusting .....                                     | 10-250-1 |
| Draining Water From Clutch Housing .....            | 10-250-2 |
| Inspection And Maintenance .....                    | 10-250-1 |
| COMPACT TRACTOR STORAGE AND RETURN TO SERVICE. .... | 10-150-1 |
| Return To Service .....                             | 10-150-1 |
| Storage .....                                       | 10-150-1 |
| ENGINE COOLING SYSTEM .....                         | 10-90-1  |
| Checking Level .....                                | 10-90-1  |
| Cleaning .....                                      | 10-90-2  |
| Hoses And Clamps .....                              | 10-90-3  |
| Removing And Replacing Coolant .....                | 10-90-3  |
| ENGINE COVER .....                                  | 10-20-1  |
| Opening And Closing .....                           | 10-20-1  |
| ENGINE LUBRICATION SYSTEM .....                     | 10-110-1 |
| Checking And Adding Engine Oil .....                | 10-110-1 |
| Engine Oil Chart .....                              | 10-110-1 |
| Removing And Replacing Oil And Filter .....         | 10-110-1 |
| FRONT AXLE .....                                    | 10-130-1 |
| Axle Pivot .....                                    | 10-130-2 |
| Checking And Adding Lubricant .....                 | 10-130-1 |
| Removing And Replacing Lubricant .....              | 10-130-2 |

Continued On Next Page

## **SAFETY AND MAINTENANCE (CONT'D)**

|                                                                             |          |
|-----------------------------------------------------------------------------|----------|
| FUEL SYSTEM .....                                                           | 10-100-1 |
| Biodiesel Blend Fuel .....                                                  | 10-100-1 |
| Filling A Portable Fuel Container .....                                     | 10-100-4 |
| Filling The Fuel Tank .....                                                 | 10-100-2 |
| Fuel Filter .....                                                           | 10-100-3 |
| Fuel Specifications .....                                                   | 10-100-1 |
| Removing Air From The Fuel System .....                                     | 10-100-4 |
| HYDRAULIC / HYDROSTATIC / TRANSMISSION SYSTEM .....                         | 10-120-1 |
| Checking And Adding Fluid .....                                             | 10-120-1 |
| Hoses And Clamps .....                                                      | 10-120-3 |
| Removing And Replacing Hydraulic / Hydrostatic / Transmission Filters ..... | 10-120-2 |
| Removing And Replacing Hydraulic / Transmission Fluid .....                 | 10-120-3 |
| Transmission / Differential Fluid Chart .....                               | 10-120-1 |
| LUBRICATING THE COMPACT TRACTOR .....                                       | 10-170-1 |
| Lubrication Locations .....                                                 | 10-170-1 |
| PARKING BRAKE SYSTEM .....                                                  | 10-220-1 |
| Inspection And Maintenance .....                                            | 10-220-1 |
| PIVOT PINS .....                                                            | 10-190-1 |
| Inspection And Maintenance .....                                            | 10-190-1 |
| SAFETY INTERLOCK SYSTEM - NEUTRAL START .....                               | 10-200-1 |
| Inspection And Maintenance .....                                            | 10-200-1 |
| SAFETY INTERLOCK SYSTEM - OPERATING .....                                   | 10-210-1 |
| Inspection And Maintenance .....                                            | 10-210-1 |
| SEAT BELT .....                                                             | 10-30-1  |
| Inspection And Maintenance .....                                            | 10-30-1  |
| SERVICE SCHEDULE .....                                                      | 10-70-1  |
| Chart .....                                                                 | 10-70-1  |
| SPARK ARRESTOR MUFFLER .....                                                | 10-140-1 |
| Cleaning Procedure .....                                                    | 10-140-1 |
| SUPPORTING THE COMPACT TRACTOR ON JACKSTANDS .....                          | 10-10-1  |
| Procedure .....                                                             | 10-10-1  |

**Continued On Next Page**

## **SAFETY AND MAINTENANCE (CONT'D)**

|                                                         |          |
|---------------------------------------------------------|----------|
| TIRE MAINTENANCE .....                                  | 10-180-1 |
| Front Wheel Nuts / Bolts .....                          | 10-180-1 |
| Mounting .....                                          | 10-180-1 |
| Rear Wheel Nuts .....                                   | 10-180-1 |
| <br>TOWING THE COMPACT TRACTOR .....                    | 10-50-1  |
| Procedure .....                                         | 10-50-1  |
| <br>TRANSPORTING THE COMPACT TRACTOR ON A TRAILER. .... | 10-40-1  |
| Fastening .....                                         | 10-40-2  |
| Loading And Unloading .....                             | 10-40-1  |
| <br>TRAVEL CONTROL PEDAL .....                          | 10-240-1 |
| .....                                                   | 10-240-1 |
| Inspection And Maintenance .....                        | 10-240-1 |



**Bobcat®**


## SUPPORTING THE COMPACT TRACTOR ON JACKSTANDS

### Procedure


For service work under the compact tractor, or to remove the wheels, always support the compact tractor with jackstands or blocks of adequate capacity for weight of compact tractor.

Park the compact tractor on a flat level surface.

**Figure 10-10-1**

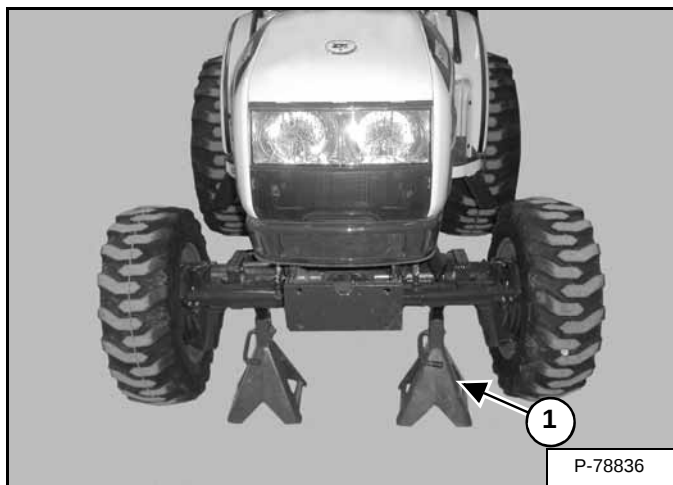 

**Figure 10-10-2**

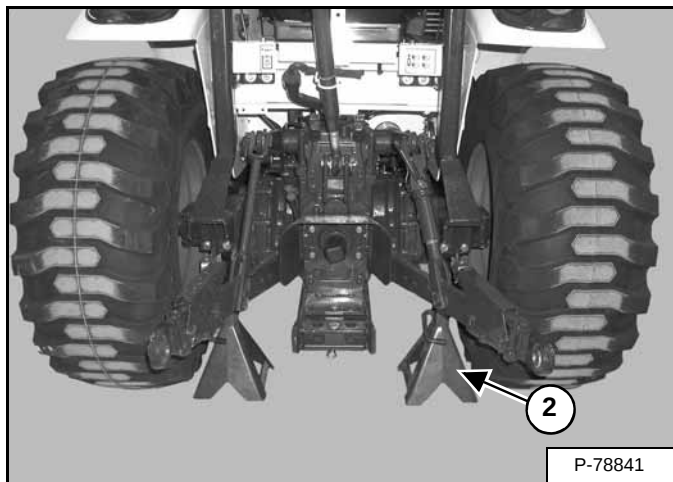 

Put jackstands under the front and rear axles (Item 1) [Figure 10-10-1] and (Item 2) [Figure 10-10-2].




**Bobcat®**

## ENGINE COVER

### Opening And Closing

#### Opening

 Figure 10-20-1

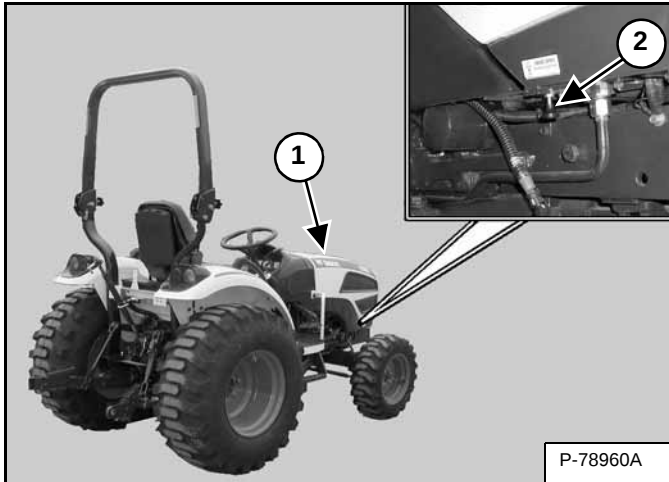


Then engine cover (Item 1) is opened by pulling down on the knob (Item 2) [Figure 10-20-1] that is located on the lower right side of the frame.

Raise the front of the engine cover.

#### Closing

 Figure 10-20-2

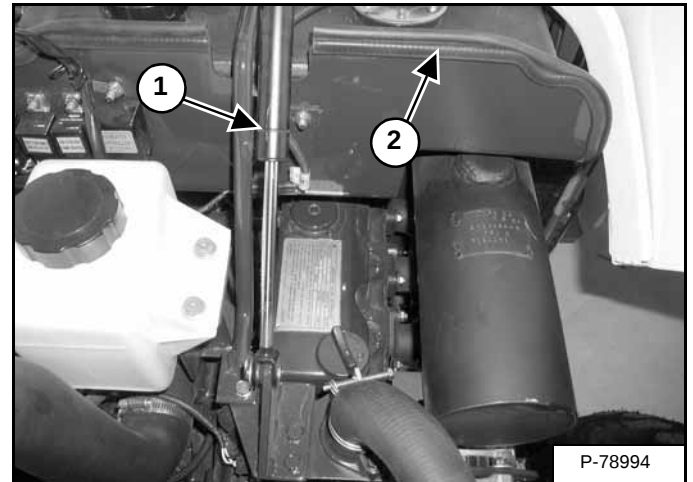

The engine cover is held open by a gas cylinder (Item 1) [Figure 10-20-2].

To lower the engine cover, push down on the front of the engine cover until it locks in the closed position [Figure 10-20-1].

**NOTE:** If hood rattles during operation, inspect the rubber moulding (Item 2) [Figure 10-20-2]. The moulding will need to be replaced if damaged or if the hood rattles during operation.



## SEAT BELT

### Inspection And Maintenance

# WARNING

Failure to properly inspect and maintain the seat belt can cause lack of operator restraint resulting in serious injury or death.


W-2466-0703

Check the seat belt daily for correct function.

Inspect the seat belt system thoroughly yearly or more often if the machine is exposed to severe environmental conditions or applications.

The seat belt system should be repaired or replaced if it shows cuts, fraying, extreme or unusual wear, significant discolorations due to ultraviolet (UV) rays from the sun, dusty/dirty conditions, abrasion to the seat belt webbing, or damage to the buckle, latch plate, retractor (if equipped), or hardware.

 Figure 10-30-1

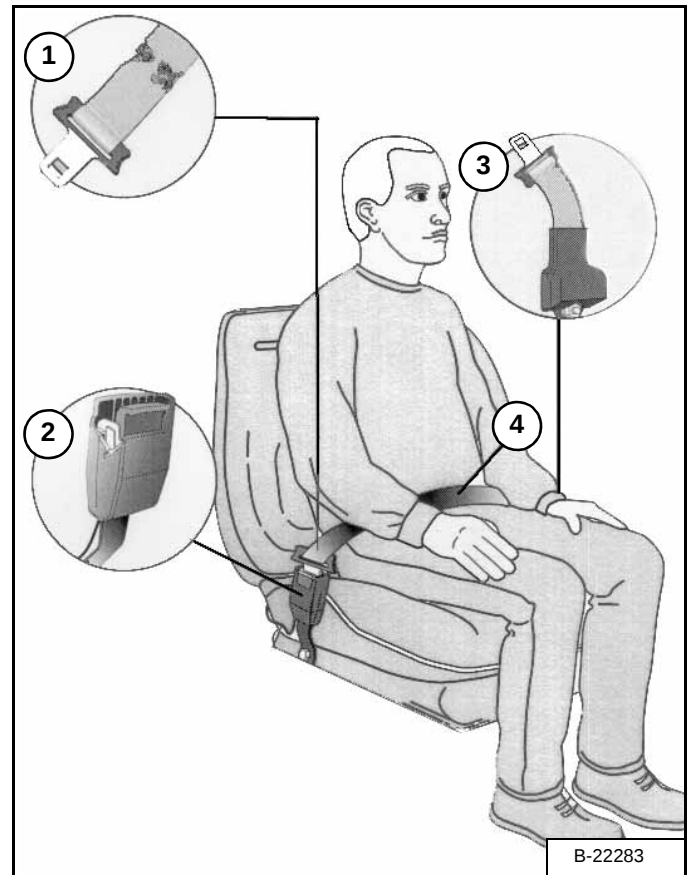

The items below are referenced in [Figure 10-30-1].

1. Check the seat belt webbing. If the system is equipped with a retractor, pull the webbing completely out and inspect the full length of the webbing. Look for cuts, wear, fraying, dirt and stiffness.
2. Check the buckle and latch for proper function. Make sure latch plate is not excessively worn, deformed or buckle is not damaged.
3. Check the retractor web storage device (if equipped) by extending the seat belt webbing to determine if it extends and retracts the webbing correctly.
4. Check webbing in areas exposed to ultraviolet (UV) rays from the sun or extreme dust or dirt. If the original color of the webbing in these areas is extremely faded and / or the webbing is packed with dirt, the webbing strength may have weakened.

See your Bobcat dealer for approved seat belt system replacement parts for your compact tractor.

Product: Bobcat CT225,CT230 & CT235 Compact Tractor Service Repair Workshop Manual  
Full Download: <https://www.arepairmanual.com/downloads/bobcat-ct225ct230-ct235-compact-tractor-service-repair-workshop-manual/>



Sample of manual. Download All 701 pages at:  
<https://www.arepairmanual.com/downloads/bobcat-ct225ct230-ct235-compact-tractor-service-repair-workshop-manual/>