




Bobcat®

Service Manual

CT335 Compact Tractor

HST - S/N ABH811001 & Above
SST - S/N AK9G11001 & Above

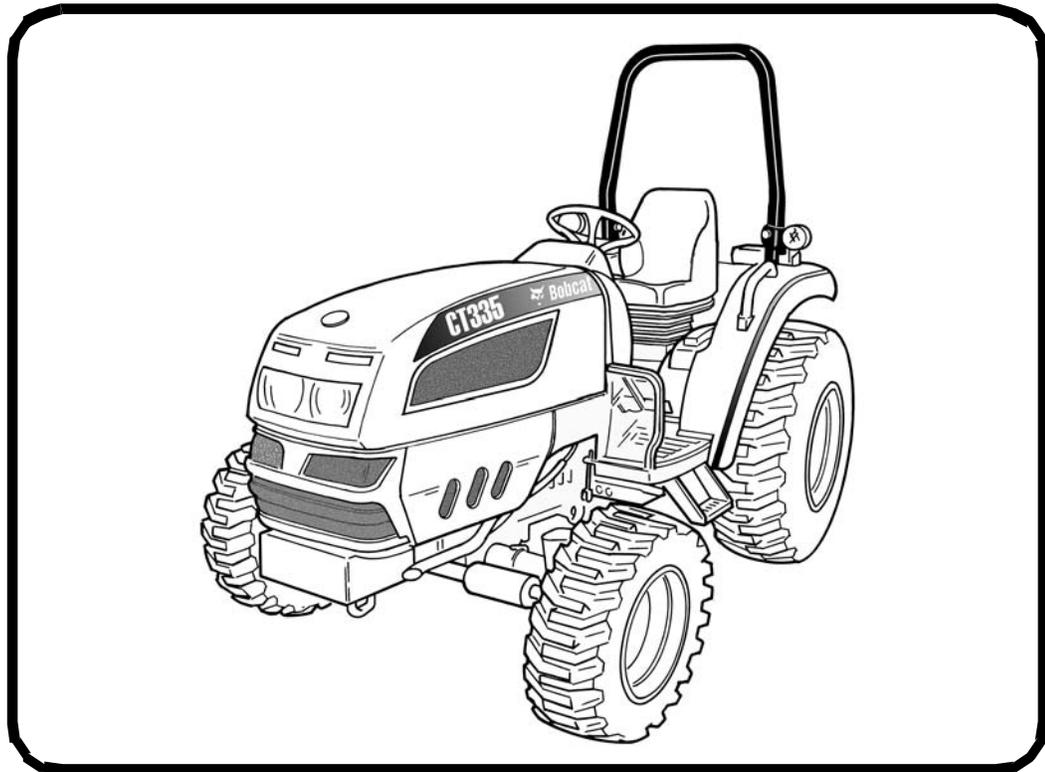

Product: Bobcat CT335 Compact Tractor Service Repair Workshop Manual
Full Download: <https://www.arepairmanual.com/downloads/bobcat-ct335-compact-tractor-service-repair-workshop-manual/>

Sample of manual. Download All 1161 pages at:
<https://www.arepairmanual.com/downloads/bobcat-ct335-compact-tractor-service-repair-workshop-manual/>

MAINTENANCE SAFETY




WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0807




Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

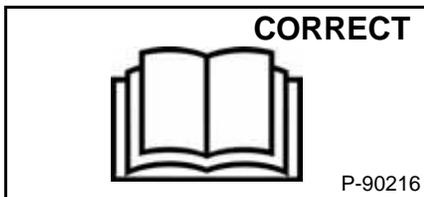


P-90216

⚠ Never service the machine without instructions.

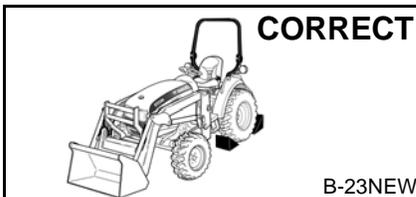


B-23NEW

⚠ Before exiting machine, engage parking brake. Chock wheels before servicing

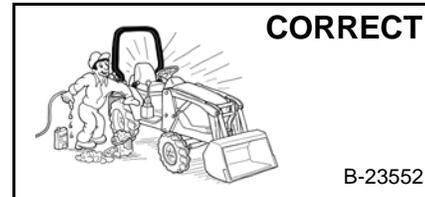


B-23552

⚠ Cleaning and maintenance are required daily.

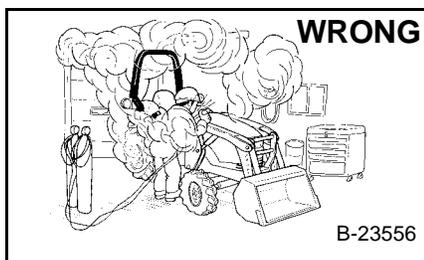


B-23556

⚠ Have good ventilation when welding or grinding painted parts.
 ⚠ Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.
 ⚠ Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.

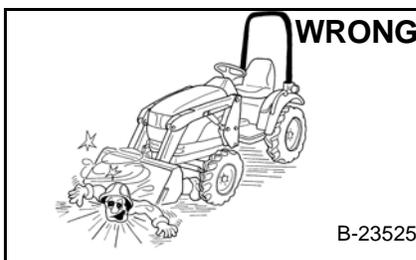


B-23525

⚠ Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause loader arms to drop.
 ⚠ Lower loader arms, attachments, and implements (if equipped) before servicing.
 ⚠ DO NOT service the compact tractor or implement with the PTO system engaged.

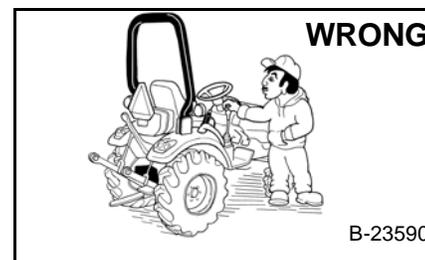


B-23590

⚠ Never start the machine if not properly seated in the operator's seat.
 ⚠ Never work on the machine with loader arms raised.
 ⚠ Never modify equipment or add attachments not approved by Bobcat Company.

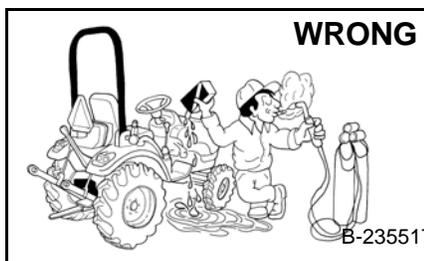

B-23551

⚠ Stop, cool and clean engine of flammable materials before checking fluids.
 ⚠ Never service or adjust machine with the engine running unless instructed to do so in the manual.
 ⚠ Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
 ⚠ Never fill fuel tank with engine running, while smoking or when near open flame.

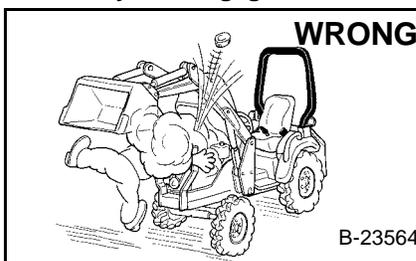

B-23564

⚠ Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
 ⚠ Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
 ⚠ Keep engine cover and side access panels closed except for service.



B-6589

⚠ Lead-acid batteries produce flammable and explosive gases.
 ⚠ Keep arcs, sparks, flames and lighted tobacco away from batteries.
 ⚠ Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact, flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts.



Bobcat®

ALPHABETICAL INDEX

AIR CLEANER	70-01	ENGINE SPEED CONTROL PEDAL (SST MODELS)	70-01
AIR CLEANER SERVICE	10-01	EVAPORATOR	80-01
AIR CONDITIONING BELT	10-01	EVAPORATOR / HEATER UNIT	80-01
AIR CONDITIONING SERVICE	80-01	EVAPORATOR / HEATER UNIT COVER	80-01
AIR CONDITIONING SYSTEM FLOW	80-01	EXPANSION VALVE	80-01
ALTERNATOR	60-01		
ALTERNATOR BELT	10-01	FAN	70-01
AUXILIARY CONTROL VALVE	20-01	FENDER (WITH CAB)	50-01
AXLE AND DIFFERENTIAL	40-01	FENDER (WITHOUT CAB)	50-01
AXLE AND DIFFERENTIAL (SST MODELS)	40-01	FENDER ASSEMBLY (WITHOUT CAB) (HST MODELS)	50-01
AXLE CASE	40-01	FENDER ASSEMBLY (WITHOUT CAB) (SST MODELS)	50-01
AXLE TOE IN (HST MODELS)	10-01	FIREWALL (WITH CAB) (HST MODELS)	50-01
AXLE TOE IN (SST MODELS)	10-01	FIREWALL (WITHOUT CAB) (HST MODELS)	50-01
		FIREWALL (SST MODELS)	50-01
BATTERY	60-01	FLOORMAT (HST MODELS)	50-01
BLOWER FAN	80-01	FLOORMAT (SST MODELS)	50-01
BOB-TACH HAND LEVER	10-01	FLOOR PLATE	50-01
BRAKE CASE	40-01	FLYWHEEL AND HOUSING (HST MODELS)	70-01
BRAKE PEDAL ASSEMBLY	40-01	FLYWHEEL AND HOUSING (SST MODELS)	70-01
BRAKE/CLUTCH PEDAL ASSEMBLY (SST MODELS)	40-01	F-N-R LEVER (SST ONLY)	60-01
BRAKE SYSTEM	10-01	FRESH AIR FILTERS (WITH CAB)	10-01
		FRONT AIR DUCT	80-01
CAB (HST MODELS)	50-01	FRONT AXLE	10-01, 40-01
CAB COVER	50-01	FRONT AXLE (SST MODELS)	10-01, 40-01
CAB POST COVER	50-01	FRONT LIGHTS (WITH CAB)	60-01
CAMSHAFT AND TIMING GEARS	70-01	FRONT WORK LIGHT (WITH CAB)	60-01
CLUTCH PEDAL AND HOUSING (SST ONLY)	10-01	FRONT WORK LIGHT MOUNT (WITH CAB)	50-01
CLUTCH PEDAL (SST ONLY)	10-01	FRONT WHEEL DRIVE	20-01
CLUTCH ASSEMBLY (SST MODELS)	70-01	FUEL, COOLANT AND LUBRICANTS (ALL MODELS)	SPEC-01
CLUTCH LEVER (SST MODELS)	70-01	FUEL LEVEL SENDER	60-01
COMPACT TRACTOR STORAGE AND RETURN TO SERVICE	10-01	FUEL SYSTEM	10-01, 70-01
COMPONENTS	80-01	FUEL TANK	50-01
COMPRESSOR	80-01		
CONDENSOR	80-01	GENERAL AIR CONDITIONING SERVICE GUIDELINES	80-01
CONSOLE COVER (WITH CAB)	50-01	GRILL	50-01
CONSOLE COVER (WITHOUT CAB)	50-01		
CONVERSIONS	SPEC-01	HEADLINER	50-01
CRANKSHAFT AND PISTONS	70-01	HEATER COIL	80-01
CRUISE CONTROL (HST ONLY)	60-01	HEATER VALVE	80-01
CYLINDER HEAD	70-01	HOOD LIGHTS	60-01
		HORN	60-01
DIFFERENTIAL LOCK	10-01	HVAC CONTROL PANEL	80-01
DRAW BAR	50-01	HYDRAULIC PUMP	20-01
DRAW BAR ASSEMBLY	50-01	HYDRAULIC FLUID SPECIFICATIONS	SPEC-01
DRIVE SHAFT (EARLY MODELS)	40-01	HYDRAULIC SYSTEM INFORMATION	20-01
DRIVE SHAFT (LATER MODELS)	40-01	HYDRAULIC /HYDROSTATIC/ TRANSMISSION SYSTEM	10-01
		HYDROSTATIC PUMP (HST MODELS)	30-01
ELECTRICAL SYSTEM INFORMATION	60-01		
ENGINE COOLING SYSTEM	10-01, 70-01		
ENGINE COVER	10-01, 50-01		
ENGINE INFORMATION	70-01		
ENGINE LUBRICATION SYSTEM	10-01		
ENGINE SIDE COVER	50-01		
ENGINE SPEED CONTROL	70-01		

ALPHABETICAL INDEX (CONT'D)

HYDROSTATIC PUMP TESTING (HST MODELS)	30-01	STEERING CYLINDER	20-01
HYDROSTATIC SYSTEM INFORMATION (HST MODELS)	30-01	STEERING CYLINDER (SST MODELS)	20-01
INNER FENDER ACCESS COVER (WITH CAB) ...	50-01	STEERING COLUMN COVER	60-01
INSTRUMENT PANEL	60-01	STEERING VALVE	20-01
LUBRICATING THE COMPACT TRACTOR	10-01	STEERING VALVE TESTING	20-01
LUBRICATION SYSTEM	70-01	SUPPORTING THE COMPACT TRACTOR ON JACKSTANDS	10-01
MAIN RELIEF VALVE	20-01	SYSTEM CHARGING AND RECLAMATION	80-01
MID MOUNT PTO SWITCH	60-01	SYSTEM TROUBLESHOOTING CHART	80-01
MID PTO CONTROL	50-01	TEMPERATURE / PRESSURE	80-01
MLS VALVE	20-01	THERMOSTAT	80-01
MODULATOR VALVE	20-01	THREE POINT CYLINDER	20-01
OIL COOLER (HST MODELS)	20-01	THREE POINT CYLINDER CONTROL	20-01
OPERATOR SEAT	50-01	THREE POINT HITCH HOUSING	20-01
PARKING BRAKE SYSTEM	10-01	THREE POINT HITCH LOWER LINKS	50-01
PIVOT PINS	10-01	TIRE MAINTENANCE	10-01
PRESSURE SWITCH	80-01	TORQUE SPECIFICATIONS FOR BOLTS	SPEC-01
PTO LEVER (MID) (IF EQUIPPED)	60-01	TOWING THE COMPACT TRACTOR	10-01
PTO SAFETY SHIELD	50-01	TRANSMISSION (HST MODELS)	40-01
PTO SWITCH (REAR)	60-01	TRANSMISSION (SST MODELS)	40-01
REAR LIGHTS	60-01	TRANSMISSION CASE (HST MODELS)	50-01
REAR PTO	20-01	TRANSMISSION CASE (SST MODELS)	50-01
REAR WORKLIGHT (WITH CAB)	60-01	TRANSPORTING THE COMPACT TRACTOR ON A TRAILER	10-01
RECEIVER / DRIER	80-01	TROUBLESHOOTING	70-01
REGULAR MAINTENANCE	80-01	TRAVEL CONTROL PEDAL (HST ONLY)	10-01
RESISTOR	80-01	TRAVEL CONTROL PEDAL LINKAGE (HST MODELS)	30-01
RIGHT JOYSTICK (WITH CAB)	20-01	TRAVEL CONTROL PEDAL PIVOT ARMS (HST MODELS)	30-01
RIGHT JOYSTICK (WITHOUT CAB)	20-01	TRAVEL CONTROL PEDALS (HST MODELS)	30-01
RIGHT JOYSTICK VALVE (IF EQUIPPED)	20-01		
ROPS	50-01		
ROCK SHAFT	20-01		
SAFETY	80-01		
SAFETY INTERLOCK SYSTEM - NEUTRAL START	10-01		
SAFETY INTERLOCK SYSTEM - OPERATING	10-01		
SEAT BELT	10-01		
SEAT SENSOR	60-01		
SEPERATING THE TRACTOR (HST MODELS)	40-01		
SEPERATING THE TRACTOR (SST MODELS)	40-01		
SERVICE BRAKE	40-01		
SERVICE SCHEDULE	10-01		
SIDE AIR DUCT	80-01		
SPARK ARRESTOR MUFFLER	10-01, 70-01		
SPEED RANGE LEVER (HST MODELS)	10-01, 60-01		
SPLASH BOARD	50-01		
STARTER	60-01		
STEERING AXLE ADJUSTMENT (HST MODELS)	40-01		
STEERING AXLE ADJUSTMENT (SST MODELS)	40-01		

CONTENTS

FOREWORD.....	II
SAFETY INSTRUCTIONS	V
FIRE PREVENTION	VIII
SERIAL NUMBER LOCATIONS	X
DELIVERY REPORT.....	XI
COMPACT TRACTOR IDENTIFICATION.....	XII
COMPACT TRACTOR IDENTIFICATION (WITH OPTIONAL LOADER AND REAR BALLAST)	XIII
COMPACT TRACTOR IDENTIFICATION (WITH OPTIONAL THREE- POINT IMPLEMENT AND FRONT BALLAST)	XIV
COMPACT TRACTOR IDENTIFICATION (WITH OPTIONAL CAB)..	XV
SAFETY AND MAINTENANCE.....	10-01
HYDRAULIC SYSTEM	20-01
HYDROSTATIC SYSTEM.....	30-01
DRIVE SYSTEM	40-01
MAINFRAME	50-01
ELECTRICAL SYSTEM	60-01
ENGINE SERVICE	70-01
HEATING, VENTILATION, AIR CONDITIONING	80-01
SPECIFICATIONS.....	SPEC-01

**SAFETY AND
MAINTENANCE**

**HYDRAULIC
SYSTEM**

**HYDROSTATIC
SYSTEM**

DRIVE SYSTEM

MAINFRAME

**ELECTRICAL
SYSTEM**

ENGINE SERVICE

HVAC

SPECIFICATIONS

FOREWORD


This manual is for the Bobcat compact tractor mechanic. It provides necessary servicing and adjustment procedures for the Bobcat compact tractor and its component parts and systems. Refer to the Operation & Maintenance Manual for operating instructions, starting procedure, daily checks, etc.

A general inspection of the following items must be made after the compact tractor has had service or repair:


1. Check that the ROPS is in good condition and is not modified.



2. Check that ROPS mounting hardware is tightened and is Bobcat approved.

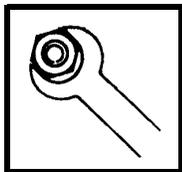


3. The seat belt must be correctly installed, functional and in good condition.

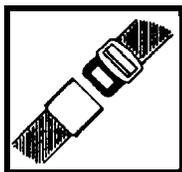

4. Machine signs (decals) must be legible and in the correct location.




5. Travel control pedal(s) and loader joystick control lever must return to neutral.

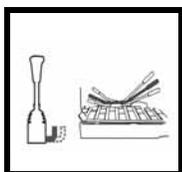


6. Check for correct function of the work lights.




7. The parking brake must function correctly.

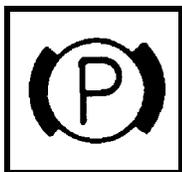


8. Enclosure door latches must open and close freely.

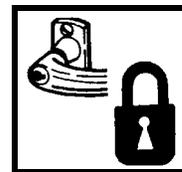


9. Attachment locking pins must function correctly and be in good condition. Bob-Tach wedges and linkages (if equipped) must function correctly and be in good condition.

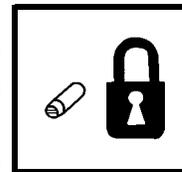


10. Safety treads must be in good condition.

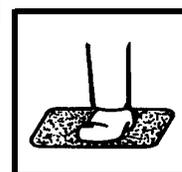


11. Check for correct function of indicator lamps.

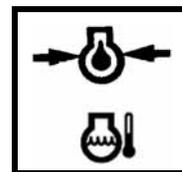


12. Check hydraulic fluid level, engine oil level and fuel supply.

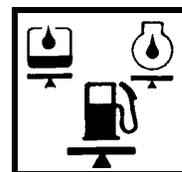


13. Inspect for fuel, oil or hydraulic fluid leaks.

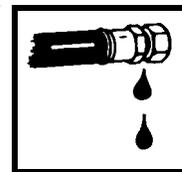

14. Lubricate the compact tractor.

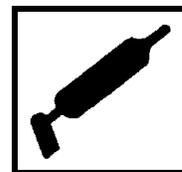


15. Check the condition of the battery and cables.

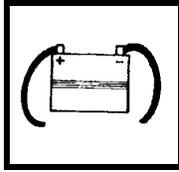


20. Check for any field modification not completed.




16. Inspect the air cleaner for damage or leaks. Check the condition of the element.

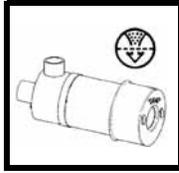

21. Operate the machine and check all functions.

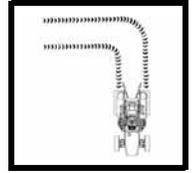


17. Check the electrical charging system.

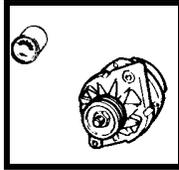

22. Check Safety Interlock System (Neutral Start and Operating) for correct function before the machine is returned to the customer.




18. Check tires for wear and pressure. Use only approved tires.

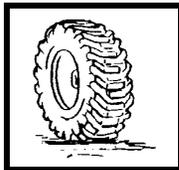

23. Check function or condition of all equipped options and accessories (examples: back-up alarm, front-end loader, etc.).



19. Inspect for loose or broken parts or connections.

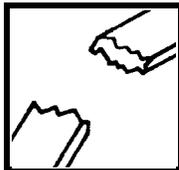

24. Recommend to the owner that all necessary corrections be made before the machine is returned to service.



**CALIFORNIA
PROPOSITION 65 WARNING**
Diesel engine exhaust and some of its constituents are known to the state of California to cause cancer, birth defects and other reproductive harm.



Bobcat®

SAFETY INSTRUCTIONS



Safety Alert Symbol

This symbol with a warning statement means:
“Warning, be alert! Your safety is involved!”
Carefully read the message that follows.



WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903

IMPORTANT

This notice identifies procedures which must be followed to avoid damage to the machine.

I-2019-0284



DANGER

The signal word DANGER on the machine and in the manuals indicates a hazardous situation which, if not avoided, will result in death or serious injury.

D-1002-1107



WARNING

The signal word WARNING on the machine and in the manuals indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

W-2044-1107

The following publications provide information on the safe use and maintenance of the Bobcat machine and attachments:

- The Delivery Report is used to assure that complete instructions have been given to the new owner and that the machine is in safe operating condition.
- The Operation & Maintenance Manual delivered with the machine or attachment / implement contains operating information as well as routine maintenance and service procedures. It is a part of the machine and can be stored in a container provided on the machine. Replacement Operation & Maintenance Manuals can be ordered from your Bobcat dealer.
- Machine signs (decals) instruct on the safe operation and care of your Bobcat machine or attachment / implement. The signs and their locations are shown in the Operation & Maintenance Manual. Replacement signs are available from your Bobcat dealer.
- An Operator's Handbook fastened below the instrument panel. It's brief instructions are convenient to the operator. The handbook is available from your dealer in an English edition or one of many other languages. See your Bobcat dealer for more information on translated versions.
- The AEM Safety Manual delivered with the machine gives general safety information.
- The Service Manual and Parts Manual are available from your dealer for use by mechanics to do shop-type service and repair work.

SAFETY INSTRUCTIONS (CONT'D)

Use Safety Rules

- Read and follow instructions in the machine and the attachment's / implement's Operation & Maintenance Manual before operating.
- Check for underground lines before operating attachment / implement (if applicable).
- In addition to the design and configuration of equipment, hazard control and accident prevention are dependent upon the awareness, concern, prudence and proper training of personnel involved in the operation, transport, maintenance and storage of equipment.
- Check that the attachment mounting pins and hardware are installed correctly and securely fastened (if equipped).
- Check that the loader is securely installed to the compact tractor using the correct pins and hardware.
- Check that the Bob-Tach levers are in the locked position and the wedges are fully engaged into the mounting holes of the attachment (if applicable).
- Check that the implement is securely fastened to the machine.
- Depress brake pedals (or make sure parking brake is engaged) and make sure all the machine controls are in the NEUTRAL position before starting the machine.
- Always start the machine from the operator's seat.
- Operate the attachment / implement according to the Operation & Maintenance Manual.
- When learning to operate the attachment / implement, do it at a slow rate in an area clear of bystanders.
- DO NOT permit personnel to be in the work area when operating the machine and attachment / implement.
- The attachment / implement must be used ONLY on approved machines. See your Bobcat dealer for updated list of approved attachments / implements for each machine model.
- DO NOT modify equipment or add attachments / implements that exceed manufacturer's specifications.
- DO NOT make any adjustments or repairs on the machine or attachment / implement while the engine is running.
- Keep shields and guards in place. Replace if damaged.



Call Before You Dig Dial 811 (USA Only) 1-888-258-0808 (USA & Canada)

When you call, you will be directed to a location in your state / province, or city for information about buried lines (telephone, cable TV, water, sewer, gas, etc.).



Cutting or drilling concrete containing sand or rock containing quartz may result in exposure to silica dust. Do not exceed Permissible Exposure Limits (PEL) to silica dust as determined by OSHA or other job site Rules and Regulations. Use a respirator, water spray or other means to control dust. Silica dust can cause lung disease and is known to the state of California to cause cancer.

SI CT-1008 SM

SAFETY INSTRUCTIONS (CONT'D)

Safety Rules For Power Take-Off (PTO) Driven Implements

- Keep PTO shields and all guards in place. Replace damaged or missing shields and guards before operating.
- Follow warnings and instructions on machine signs (decals). Replace damaged or missing decals.
- Do not wear loose or bulky clothing around the PTO or other moving parts.
- Keep bystanders away from PTO driven equipment, and never allow children near machines.
- Read and understand the manuals for the PTO driven equipment and be aware of safe operating procedures and hazards that may not be readily apparent.
- Always walk around equipment to avoid coming near a turning PTO driveline. Stepping over, leaning across or crawling under a turning PTO driveline can cause entanglement.
- Position the machine and implement hitch correctly to prevent driveline stress and separation.
- Use caution when turning. Turning too sharp can cause driveline damage.
- Use caution when raising PTO driven implement. Excessive driveline angle can cause driveline damage. Use stops if needed.

Compact Tractor Requirements and Capabilities

- Fasten seat belt securely when Roll-Over Protective Structure (ROPS) is up and locked. DO NOT wear seat belt if ROPS is down.
- Compact tractor must be equipped with sway bars or chains.
- Stop the compact tractor and engage the parking brakes. Install blocks in front of and behind the rear tires of the compact tractor. Install blocks underneath and support the implement securely before working under raised implements.
- Keep bystanders clear of moving parts and the work area. Keep children away.
- Use increased caution on slopes and near banks and ditches to prevent overturn.

- Make certain that the Slow Moving Vehicle (SMV) emblem is installed so that it is visible and legible. When transporting the equipment, use the compact tractor flashing warning lights and follow all local regulations.
- Operate this equipment with a compact tractor equipped with an approved Roll-Over Protective Structure (ROPS). Always wear seat belt when the ROPS is up. Serious injury or death could result from falling off the compact tractor.
- Before leaving the compact tractor operator's seat:
 1. Park on flat level ground.
 2. Fully lower the loader arms and put the attachment flat on the ground (if equipped).
 3. Fully lower the three-point hitch or mid-mount implements (if equipped).
 4. Lock brake pedals together and engage the parking brake.
 5. Place all controls in neutral.
 6. Stop engine, unfasten seat belt and remove the key.
- Never allow riders on the compact tractor or implement. Falling off can result in serious injury or death.
- Start the compact tractor only when properly seated in the operator's seat. Starting a compact tractor in gear can result in serious injury or death.
- Operate the compact tractor and attachments / implements from the operator's position only.
- Add the correct front ballast for rear three-point hitch implements and pull type implements. Add the correct rear ballast when using the loader and attachments. Front and rear ballast can be purchased from your compact tractor dealer.
- Do not handle large objects (such as round bales or posts) unless the loader is equipped with the proper attachment and the load is secured.
- The parking brake must be engaged before leaving the compact tractor operator's seat. Rollaway can occur because the transmission may not prevent machine movement. Lock the brake pedals together before activating the parking brake.

FIRE PREVENTION



Maintenance

The machine and some attachments / implements have components that are at high temperatures under normal operating conditions. The primary source of high temperatures is the engine and exhaust system. The electrical system, if damaged or incorrectly maintained, can be a source of arcs or sparks.

Flammable debris (leaves, straw, etc.) must be removed regularly. If flammable debris is allowed to accumulate, it can cause a fire hazard. Clean often to avoid this accumulation. Flammable debris in the engine compartment is a potential fire hazard.

The operator's area, engine compartment and engine cooling system must be inspected every day and cleaned if necessary to prevent fire hazards and overheating.

All fuels, most lubricants and some coolants mixtures are flammable. Flammable fluids that are leaking or spilled onto hot surfaces or onto electrical components can cause a fire.

Operation

Do not use the machine where exhaust, arcs, sparks or hot components can contact flammable material, explosive dust or gases.

Electrical



Check all electrical wiring and connections for damage. Keep the battery terminals clean and tight. Repair or replace any damaged part or wires that are loose or frayed.

Battery gas can explode and cause serious injury. Use the procedure in the Operation & Maintenance Manual for connecting the battery and for jump starting. Do not jump start or charge a frozen or damaged battery. Keep any open flames or sparks away from batteries. Do not smoke in battery charging area.

Hydraulic System

Check hydraulic tubes, hoses and fittings for damage and leakage. Never use open flame or bare skin to check for leaks. Hydraulic tubes and hoses must be properly routed and have adequate support and secure clamps. Tighten or replace any parts that show leakage.

Always clean fluid spills. Do not use gasoline or diesel fuel for cleaning parts. Use commercial nonflammable solvents.

Fueling



Stop the engine and let it cool before adding fuel. No smoking! Do not refuel a machine near open flames or sparks. Fill the fuel tank outdoors.

Starting

Do not use ether or starting fluids on any engine that has glow plugs. These starting aids can cause explosion and injure you or bystanders.

Use the procedure in the Operation & Maintenance Manual for connecting the battery and for jump starting.

Spark Arrestor Exhaust System

The spark arrestor exhaust system is designed to control the emission of hot particles from the engine and exhaust system, but the muffler and the exhaust gases are still hot.

Check the spark arrestor exhaust system regularly to make sure it is maintained and working properly. Use the procedure in the Operation & Maintenance Manual for cleaning the spark arrestor muffler (if equipped).

FIRE PREVENTION (CONT'D)


Welding And Grinding

Always clean the machine and attachment / implement, disconnect the battery, and disconnect the wiring from the Bobcat controllers before welding. Cover rubber hoses, battery and all other flammable parts. Keep a fire extinguisher near the machine when welding.

Have good ventilation when grinding or welding painted parts. Wear dust mask when grinding painted parts. Toxic dust or gas can be produced.

Dust generated from repairing nonmetallic parts such as hoods, fenders or covers can be flammable or explosive. Repair such components in a well ventilated area away from open flames or sparks.

Fire Extinguishers

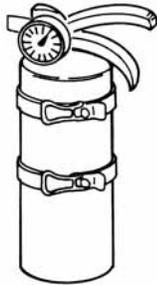


Know where fire extinguishers and first aid kits are located and how to use them. Inspect the fire extinguisher and service the fire extinguisher regularly. Obey the recommendations on the instructions plate.

SERIAL NUMBER LOCATIONS

Always use the serial number of the compact tractor when requesting service information or when ordering parts. Early or later models (identification made by serial number) may use different parts, or it may be necessary to use a different procedure in doing a specific service operation.

Figure 1

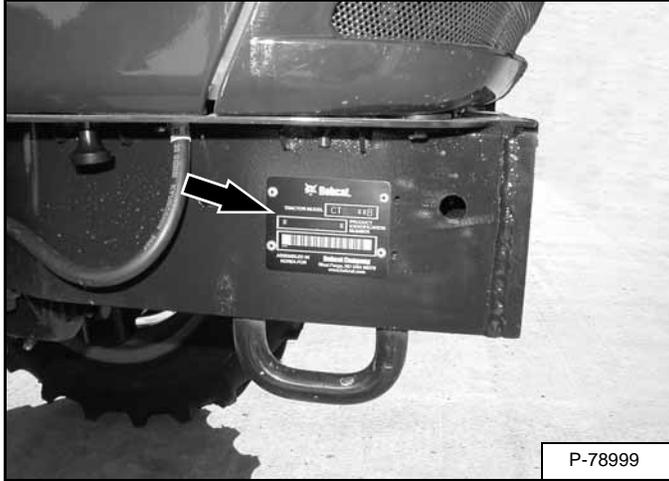


Compact Tractor Serial Number

The compact tractor serial number plate is located on the right front corner of the frame [Figure 1].

Explanation of machine Serial Number:

XXXX XXXXX

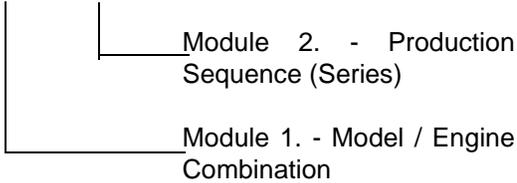


1. The four digit Model/Engine Combination Module number identifies the model number and engine combination.

2. The five digit Production Sequence Number identifies the order which the compact tractor is produced.

Engine Serial Number

Figure 2

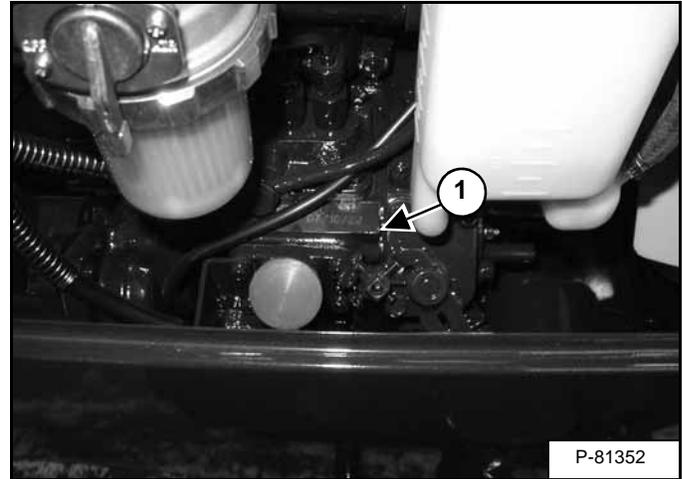

The engine serial number is located on the top of the injection pump (Item 1) [Figure 2].

Loader Serial Number (Optional)

Figure 3



The loader serial number is located on the right loader arm (Item 1) [Figure 3].



DELIVERY REPORT

Figure 4

The diagram shows a form titled "DELIVERY REPORT" with a "WARNING" section and a reference code "B-16315".

The delivery report must be filled out by the dealer and signed by the owner or operator when the compact tractor is delivered. An explanation of the form must be given to the owner. Make sure it is filled out completely **[Figure 4]**.

COMPACT TRACTOR IDENTIFICATION

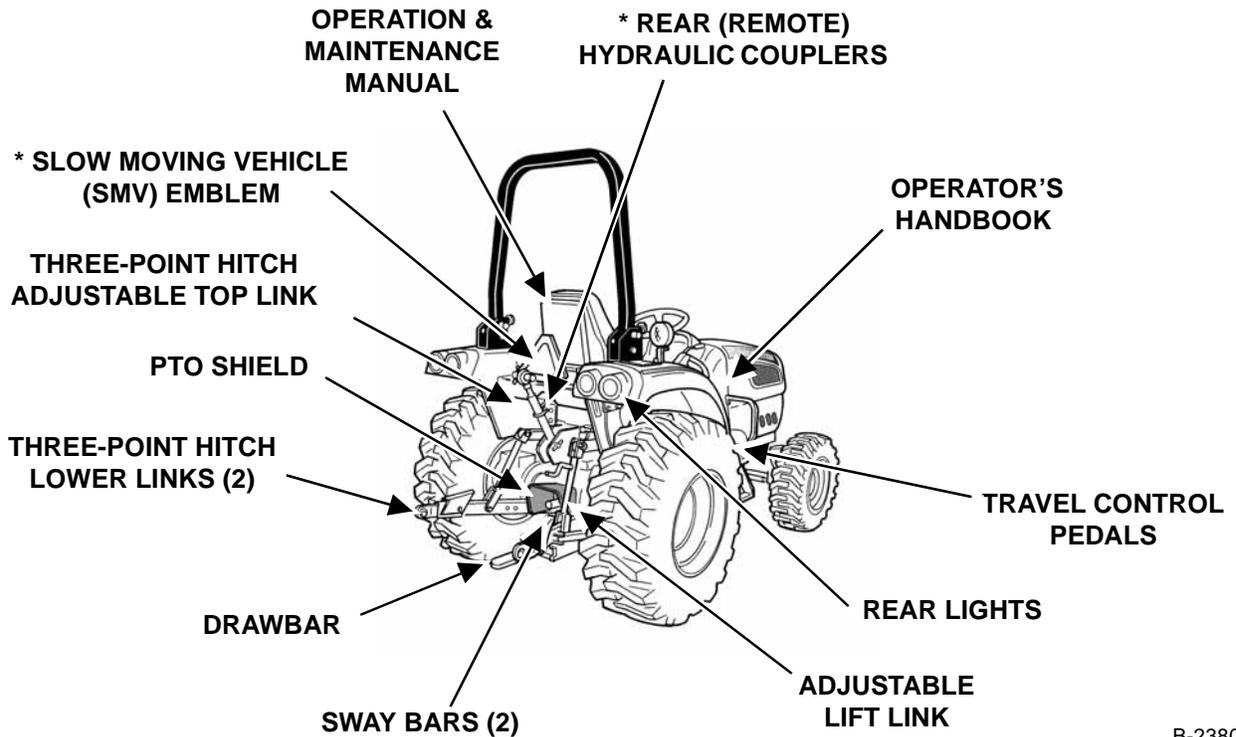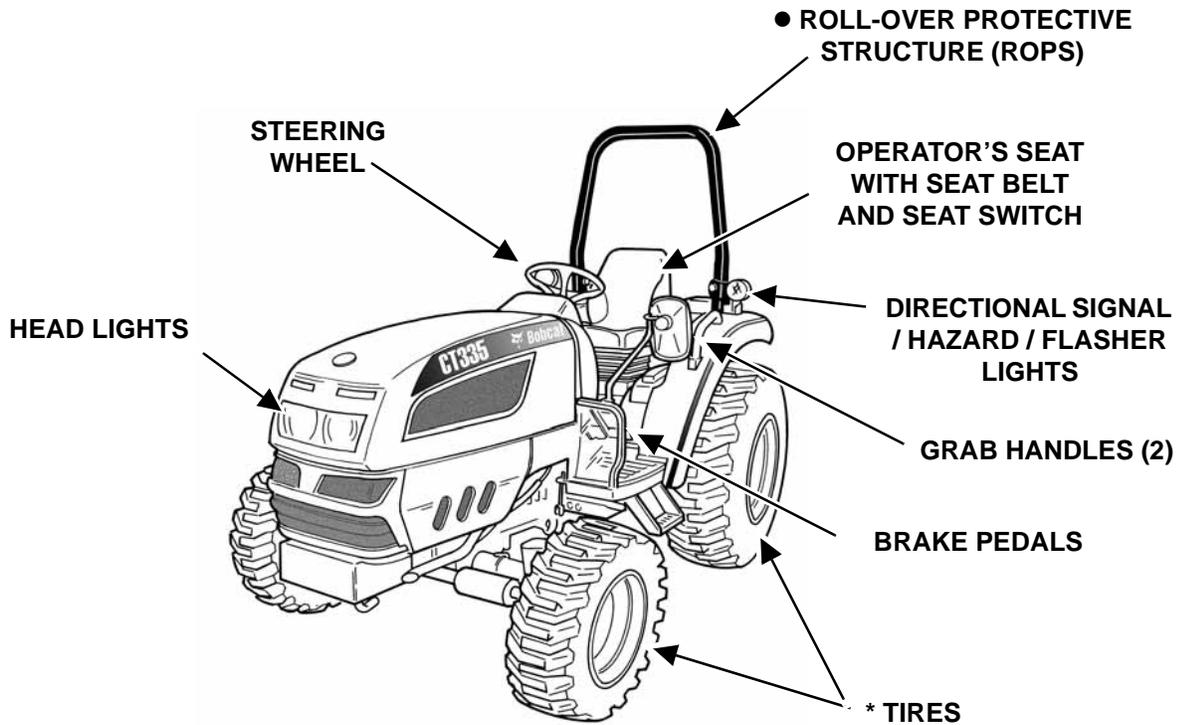


B-23805
B-23806

† ATTACHMENTS AND IMPLEMENTS - Attachments and implements are available for the compact tractor.

● ROPS - Roll-Over Protective Structure, per ASABE S478 and OSHA 29 CFR PART 1928 Subpart C.

* OPTIONAL OR FIELD ACCESSORIES (Not Standard Equipment).


COMPACT TRACTOR IDENTIFICATION (WITH OPTIONAL LOADER AND REAR BALLAST)

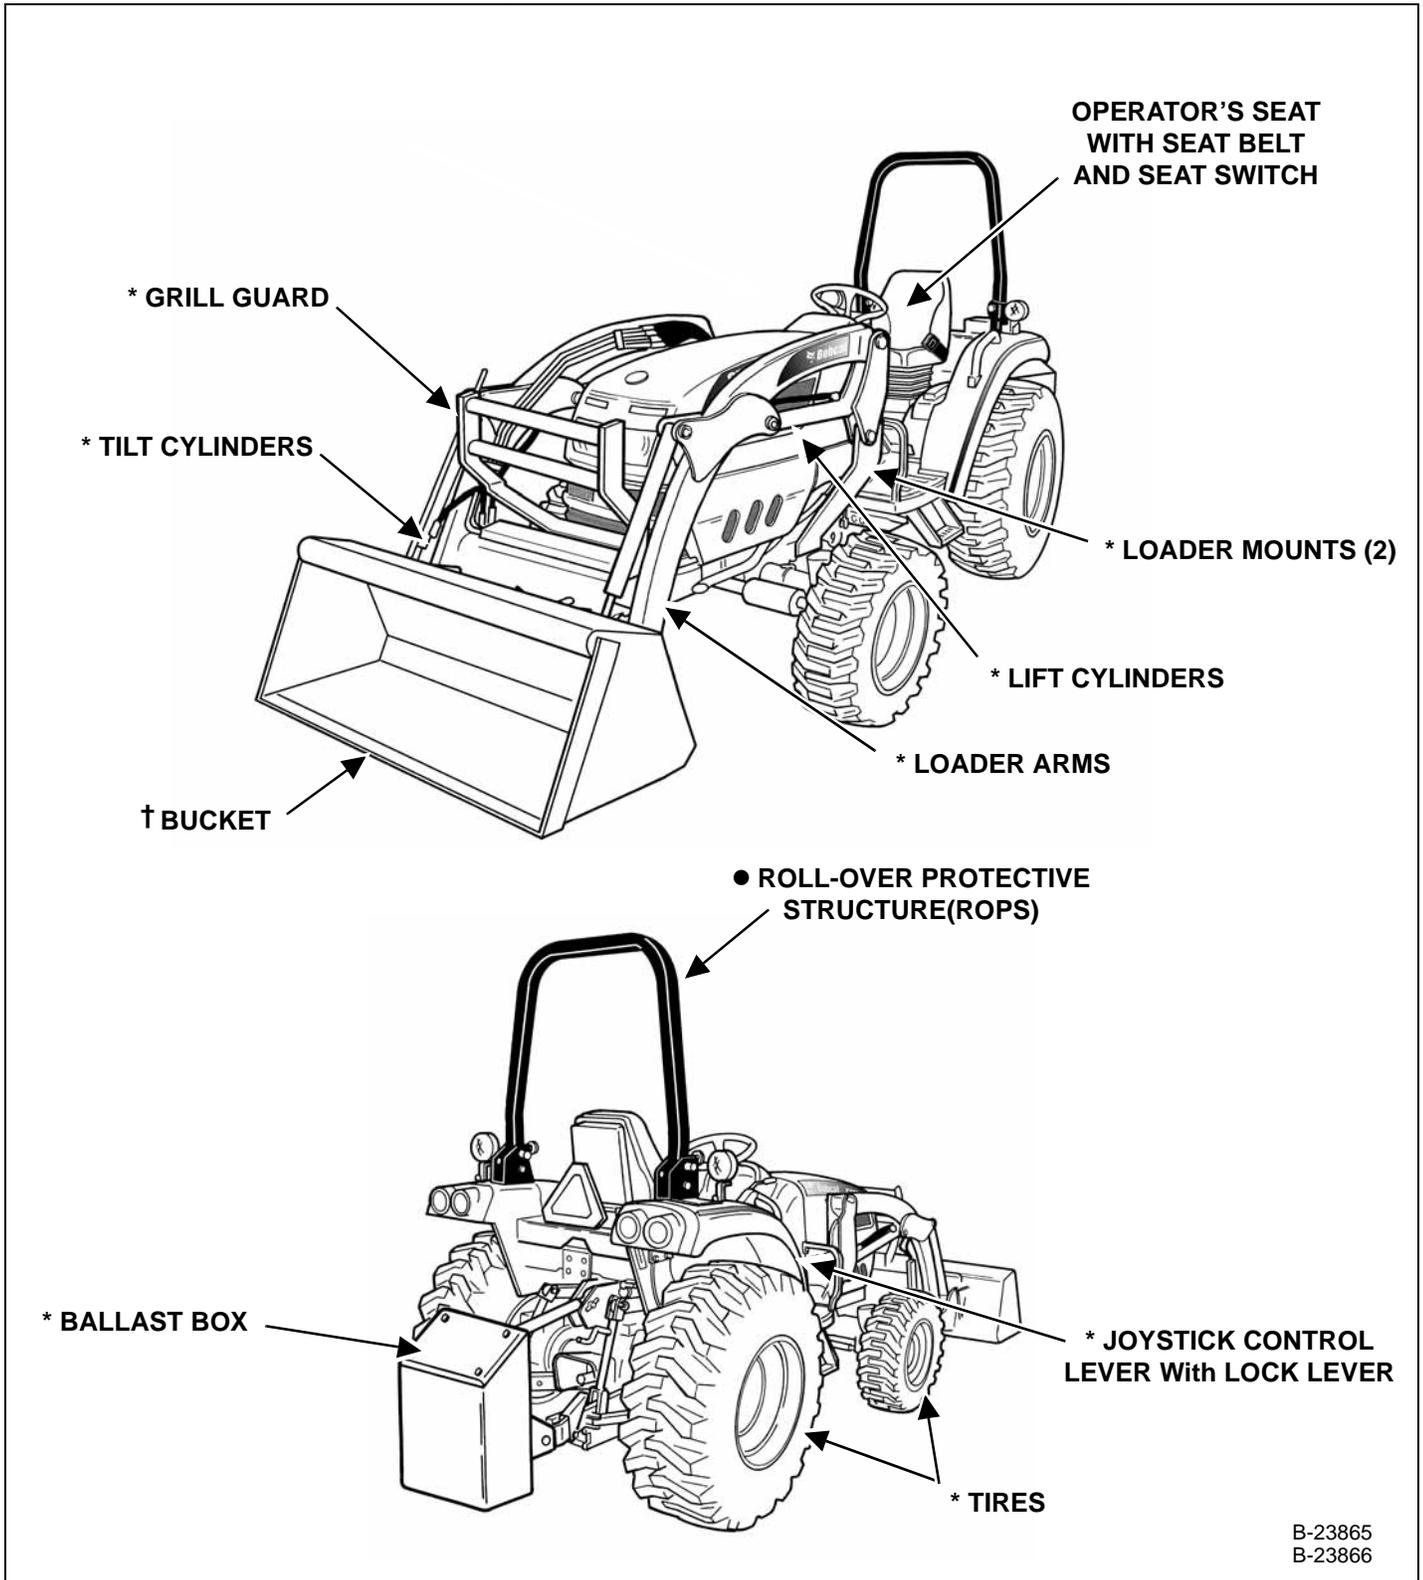

B-23865
B-23866

- † ATTACHMENTS AND IMPLEMENTS - Attachments and implements are available for the compact tractor.
- ROPS - Roll-Over Protective Structure, per ASABE S478 and OSHA 29 CFR PART 1928 Subpart C.
- * OPTIONAL OR FIELD ACCESSORIES (Not Standard Equipment) See Specification Page for tires with correct load rating.

COMPACT TRACTOR IDENTIFICATION (WITH OPTIONAL THREE-POINT IMPLEMENT AND FRONT BALLAST)

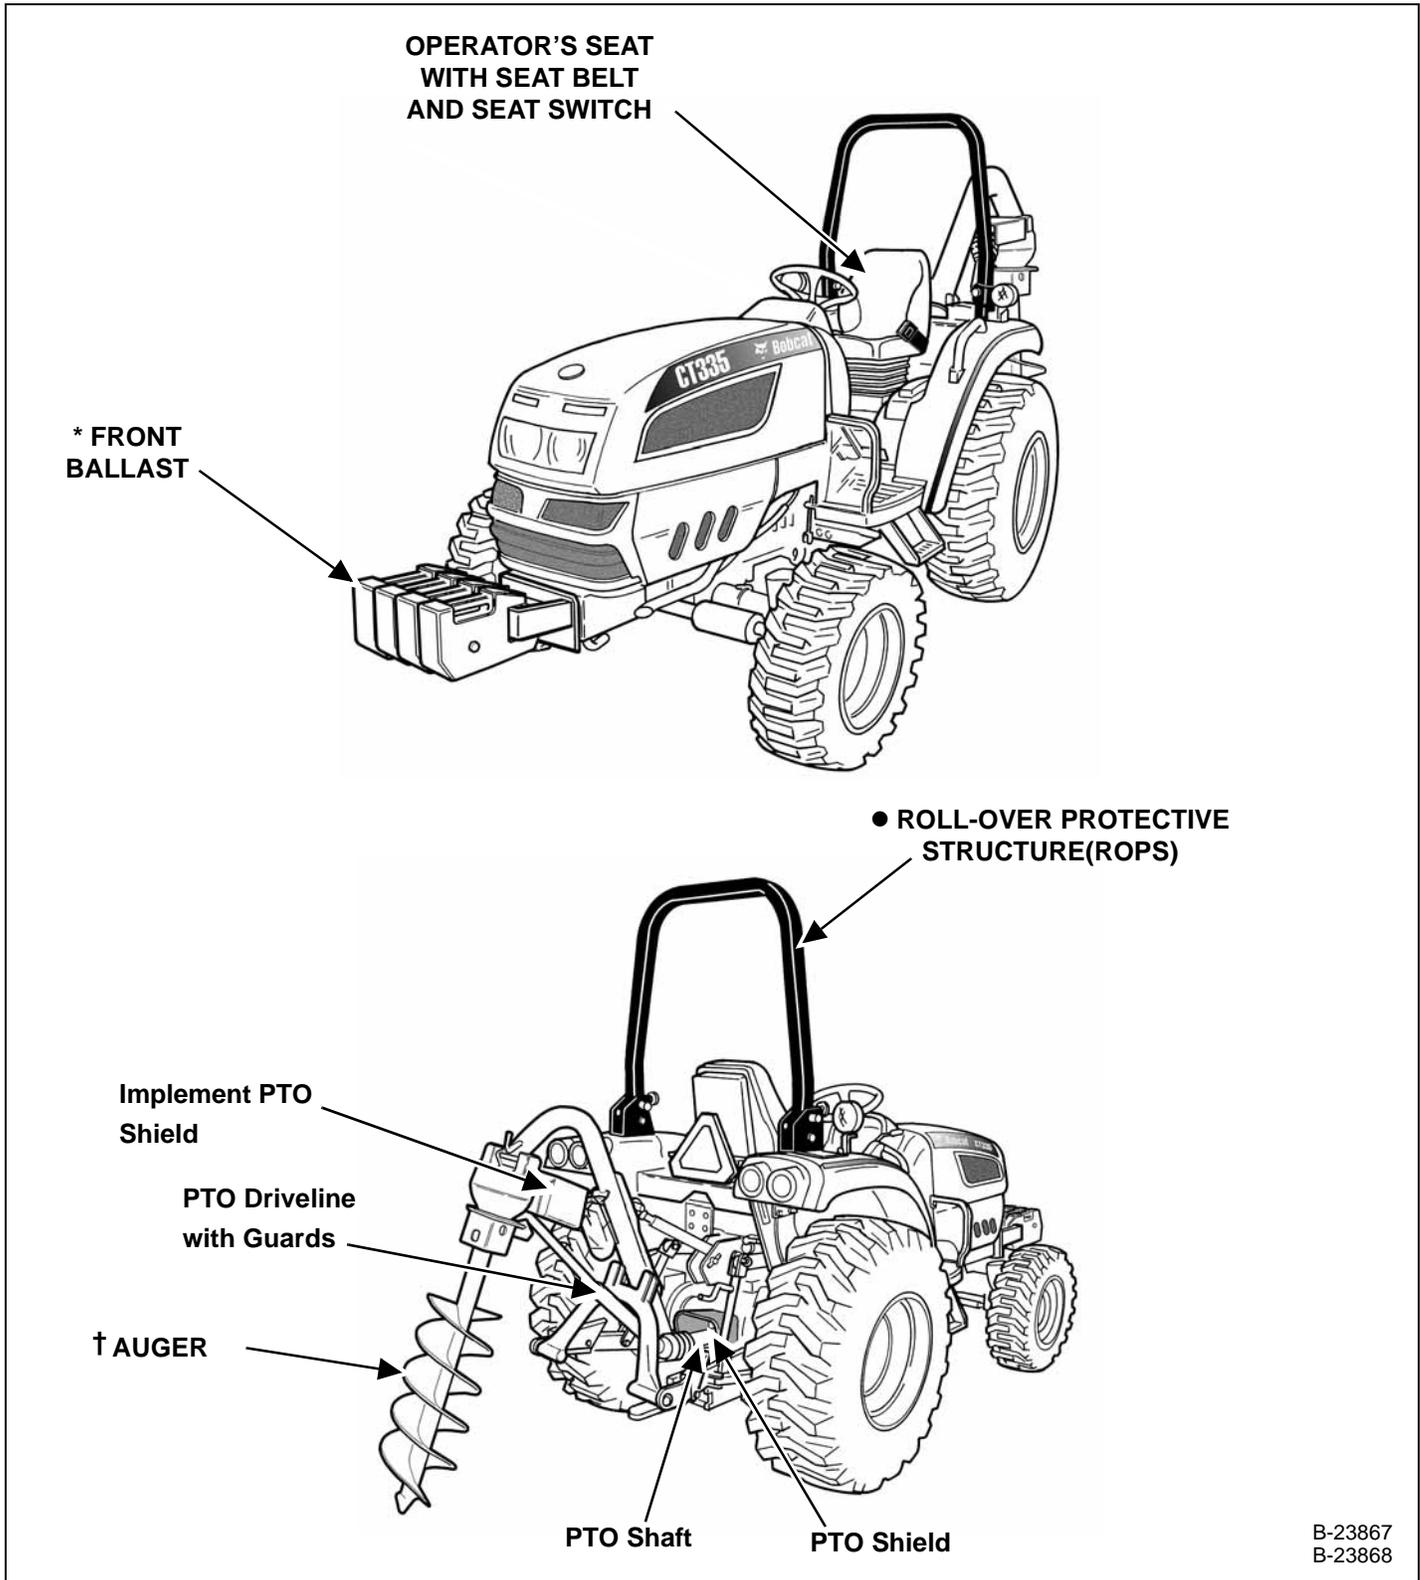


† ATTACHMENTS AND IMPLEMENTS - Attachments and implements are available for the compact tractor.

● ROPS - Roll-Over Protective Structure, per ASABE S478 and OSHA 29 CFR PART 1928 Subpart C.

* OPTIONAL OR FIELD ACCESSORIES (Not Standard Equipment).

COMPACT TRACTOR IDENTIFICATION (WITH OPTIONAL CAB)

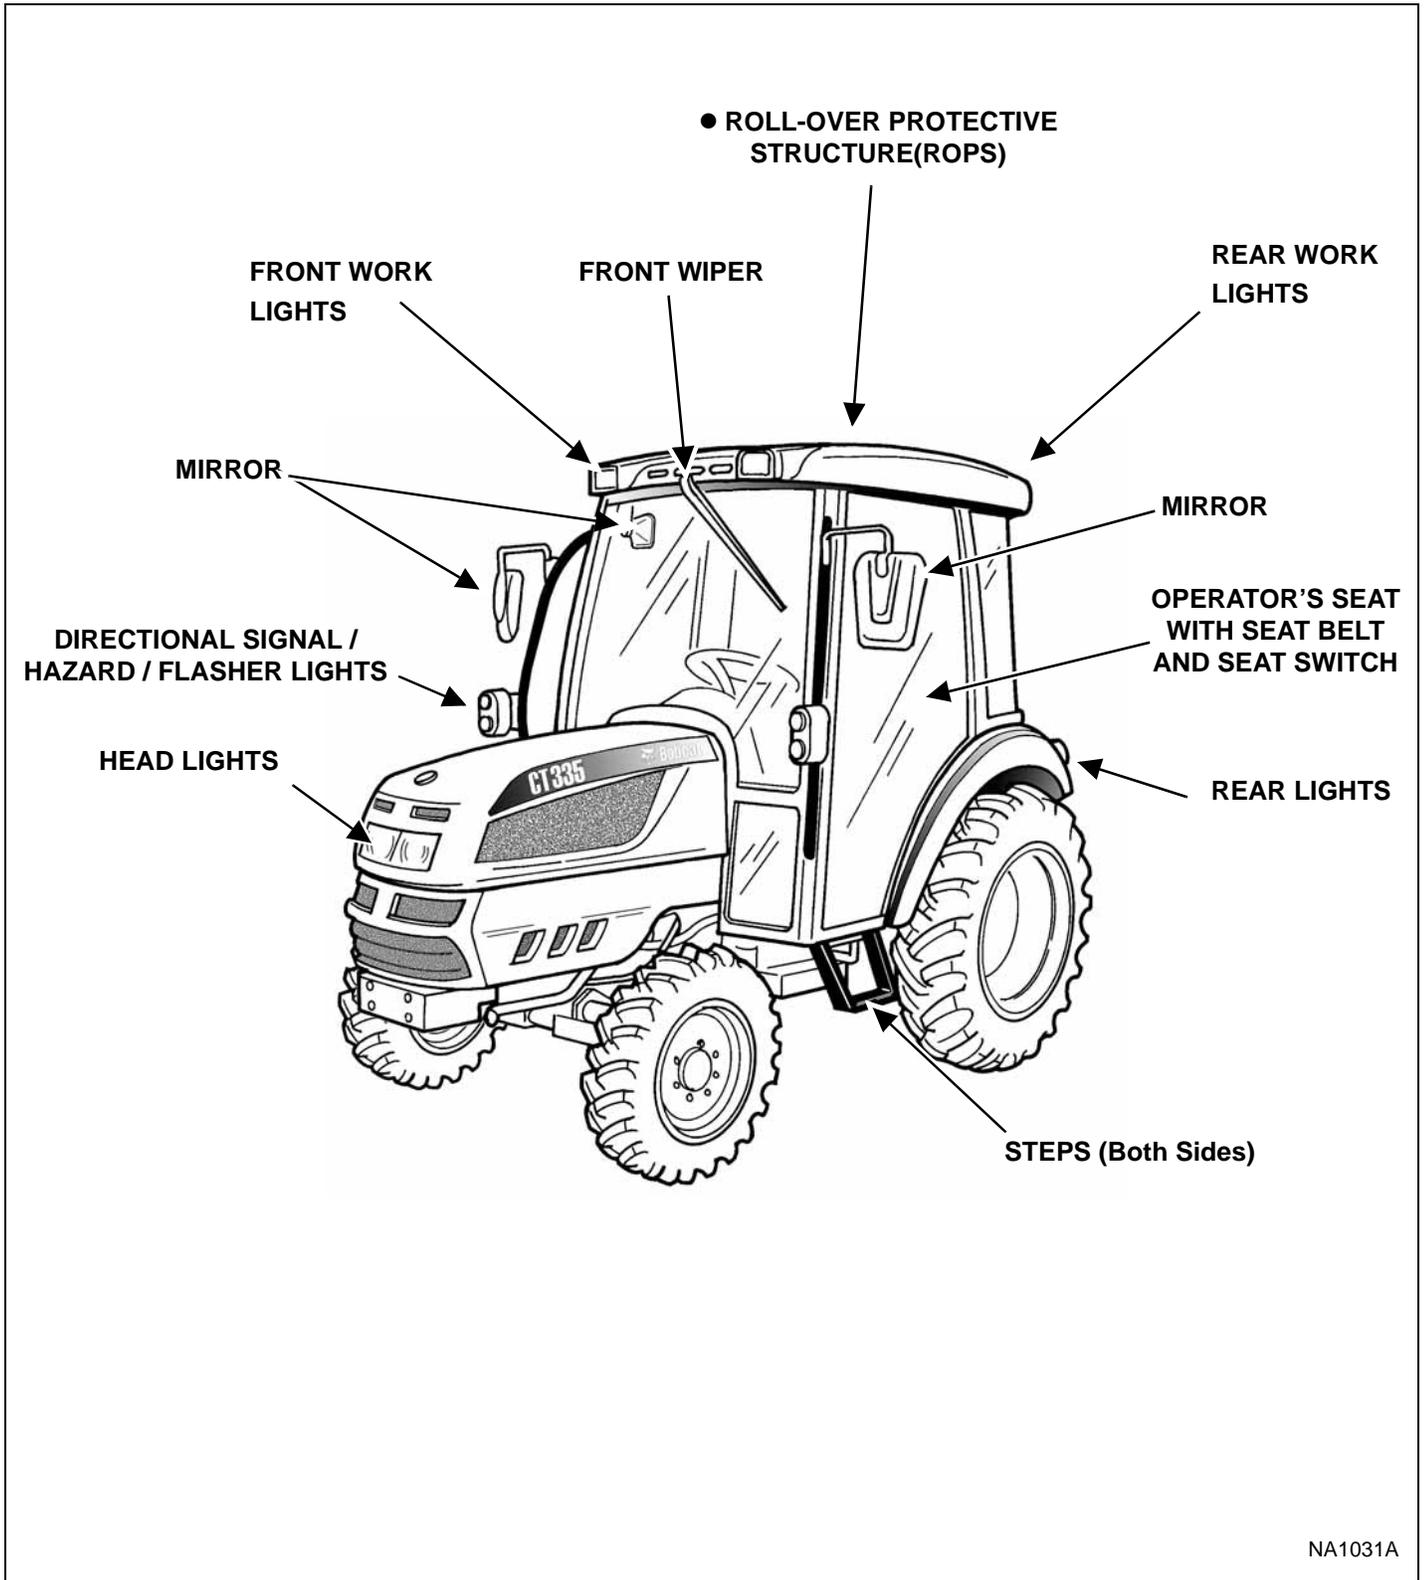

† ATTACHMENTS AND IMPLEMENTS - Attachments and implements are available for the compact tractor.

● ROPS - Roll-Over Protective Structure, per ASABE S478 and OSHA 29 CFR PART 1928 Subpart C.

* OPTIONAL OR FIELD ACCESSORIES (Not Standard Equipment).



Bobcat®

SAFETY AND MAINTENANCE

SAFETY & MAINTENANCE

AIR CLEANER SERVICE	10-80-1
Replacing Filter Element	10-80-1
AIR CONDITIONING BELT	10-161-1
Belt Adjustment	10-161-1
Belt Replacement	10-161-1
ALTERNATOR BELT	10-160-1
Belt Adjustment	10-160-1
Belt Replacement	10-160-1
AXLE TOE IN (HST MODELS)	10-60-1
Inspection And Maintenance	10-60-1
AXLE TOE IN (SST MODELS)	10-61-1
Adjustment	10-61-1
BOB-TACH (HAND LEVER)	10-270-1
Inspection And Maintenance	10-270-1
BRAKE SYSTEM	10-230-1
Adjusting	10-230-2
Inspection And Maintenance	10-230-1
CLUTCH PEDAL AND HOUSING (SST ONLY)	10-280-1
Draining Water	10-280-1
Storage Position	10-280-1
CLUTCH PEDAL (SST ONLY)	10-251-1
Inspection And Maintenance	10-251-1
COMPACT TRACTOR STORAGE AND RETURN TO SERVICE	10-150-1
Return To Service	10-150-1
Storage	10-150-1
CRUISE CONTROL (HST ONLY)	10-250-1
Inspection And Maintenance	10-250-1
DIFFERENTIAL LOCK	10-290-1
Inspection And Maintenance	10-290-1

Continued On Next Page

SAFETY AND MAINTENANCE (CONT'D)

ENGINE COOLING SYSTEM	10-90-1
Checking Level	10-90-1
Cleaning	10-90-2
Hoses And Clamps	10-90-2
Removing And Replacing Coolant	10-90-3
ENGINE COVER	10-20-1
Opening And Closing	10-20-1
ENGINE LUBRICATION SYSTEM	10-110-1
Checking And Adding Engine Oil	10-110-1
Engine Oil Chart	10-110-1
Removing And Replacing Oil And Filter	10-110-2
F-N-R LEVER (SST ONLY)	10-241-1
Inspection And Maintenance	10-241-1
FRESH AIR FILTERS (WITH CAB)	10-81-1
Removal And Installation	10-81-1
FRONT AXLE	10-130-1
Axle Pivot	10-130-2
Checking And Adding Lubricant	10-130-1
Removing And Replacing Lubricant	10-130-2
FUEL SYSTEM	10-100-1
Biodiesel Blend Fuel	10-100-1
Filling A Portable Fuel Container	10-100-4
Filling The Fuel Tank	10-100-2
Fuel Filter	10-100-3
Fuel Specifications	10-100-1
Removing Air From The Fuel System	10-100-4
HYDRAULIC / HYDROSTATIC / TRANSMISSION SYSTEM	10-120-1
Checking And Adding Fluid	10-120-1
Hoses And Clamps	10-120-3
Removing And Replacing Hydraulic / Hydrostatic / Transmission Filters	10-120-2
Removing And Replacing Hydraulic / Transmission Fluid	10-120-3
Transmission / Differential Fluid Chart	10-120-1
LUBRICATING THE COMPACT TRACTOR	10-170-1
Lubrication Locations	10-170-1

Continued On Next Page

SAFETY AND MAINTENANCE (CONT'D)

PARKING BRAKE SYSTEM	10-220-1
Inspection And Maintenance	10-220-1
PIVOT PINS	10-190-1
Inspection And Maintenance	10-190-1
SAFETY INTERLOCK SYSTEM - NEUTRAL START	10-200-1
Inspection And Maintenance (HST)	10-200-1
Inspection And Maintenance (SST)	10-200-2
SAFETY INTERLOCK SYSTEM - OPERATING	10-210-1
Inspection And Maintenance (HST)	10-210-1
Inspection And Maintenance (SST)	10-210-2
SEAT BELT	10-30-1
Inspection And Maintenance	10-30-1
SERVICE SCHEDULE	10-70-1
Chart	10-70-1
SPARK ARRESTOR MUFFLER	10-140-1
Cleaning Procedure	10-140-1
SPEED RANGE LEVER (HST ONLY)	10-260-1
Calibration	10-260-1
SUPPORTING THE COMPACT TRACTOR ON JACKSTANDS	10-10-1
Procedure	10-10-1
TIRE MAINTENANCE	10-180-1
Front Wheel Nuts / Bolts	10-180-1
Mounting	10-180-1
Rear Wheel Nuts / Bolts	10-180-1
Wheel Spacing (AG And Industrial Tires Only)	10-180-2
TOWING THE COMPACT TRACTOR	10-50-1
Procedure	10-50-1
TRANSPORTING THE COMPACT TRACTOR ON A TRAILER	10-40-1
Fastening	10-40-2
Loading And Unloading	10-40-1
TRAVEL CONTROL PEDAL (HST ONLY)	10-240-1
Inspection And Maintenance	10-240-1



Bobcat®

SUPPORTING THE COMPACT TRACTOR ON JACKSTANDS

Procedure

For service work under the compact tractor, or to remove the rims and tires, always support the compact tractor with jackstands or blocks of adequate capacity for the weight of compact tractor. (See Performance on Page SPEC-10-5.)

Park the compact tractor on a flat level surface.

Figure 10-10-1


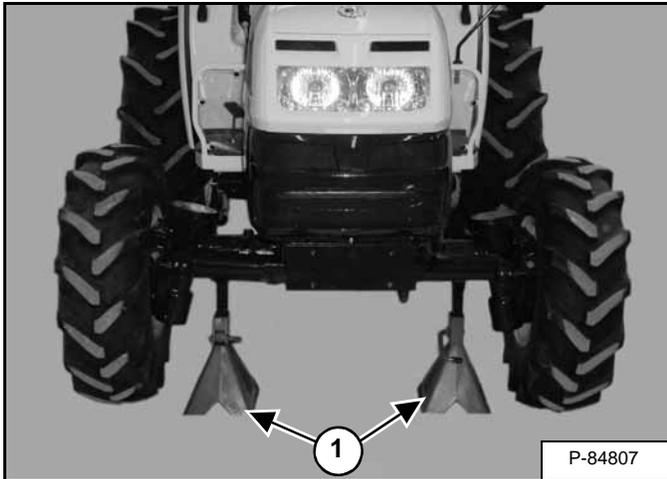


Figure 10-10-2

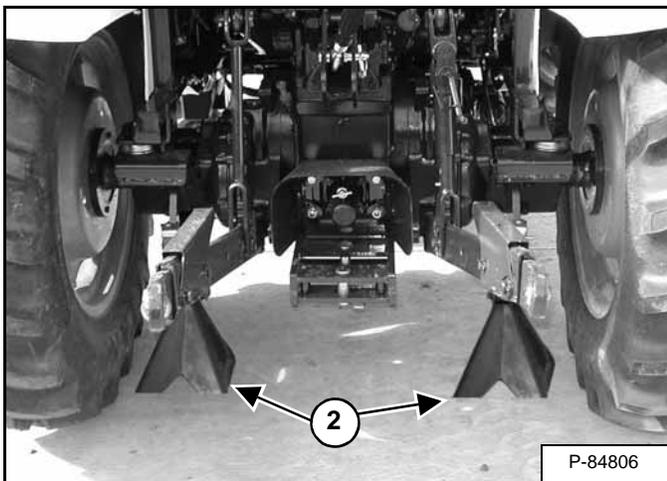

Put jackstands under the front and rear axles (Item 1) [Figure 10-10-1] and (Item 2) [Figure 10-10-2].

WARNING

AVOID INJURY OR DEATH

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0807

WARNING

AVOID INJURY OR DEATH

Put jackstands under the front and rear axles of the frame of the compact tractor before running the engine for service. Failure to use jackstands can allow the machine to fall or move.

W-2677-0907




Bobcat®

ENGINE COVER

Opening And Closing

Opening

Figure 10-20-1

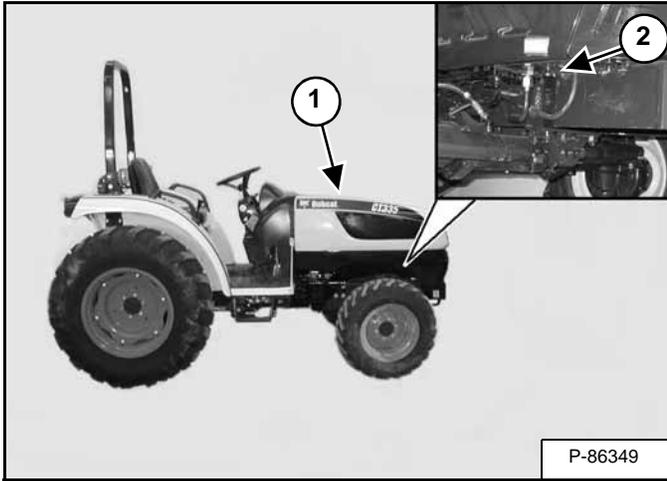


Then engine cover (Item 1) is opened by pulling down on the knob (Item 2) [Figure 10-20-1] and pushing down on the front of the engine cover. (The knob is located on the lower right side of the frame.)

Raise the front of the engine cover.

Closing

Figure 10-20-2

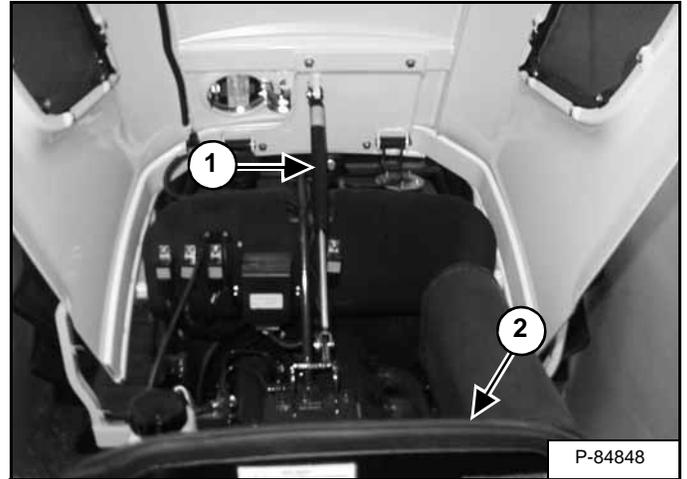

The engine cover is held open by a gas cylinder (Item 1) [Figure 10-20-2].

To lower the engine cover, push down on the front of the engine cover until it locks in the closed position [Figure 10-20-1].

NOTE: If hood rattles during operation, inspect the rubber moulding (Item 2) [Figure 10-20-2]. The moulding will need to be replaced if damaged or if the hood rattles during operation.

Product: Bobcat CT335 Compact Tractor Service Repair Workshop Manual
Full Download: <https://www.arepairmanual.com/downloads/bobcat-ct335-compact-tractor-service-repair-workshop-manual/>



Sample of manual. Download All 1161 pages at:
<https://www.arepairmanual.com/downloads/bobcat-ct335-compact-tractor-service-repair-workshop-manual/>