

Product: 2010 Bobcat T140 Compact Track Loader Service Repair Workshop Manual(S/N A3L711001 - A3L719999,S/N A3L811001 - A3L819999)
Full Download: <https://www.arepairmanual.com/downloads/2010-bobcat-t140-compact-track-loader-service-repair-workshop-manuals-n-a3l711001-a3l719999s-n-a3l811001-a3l819999/>




Bobcat[®]

Service Manual

T140 Compact Track Loader

S/N A3L711001 - A3L719999
S/N A3L811001 - A3L819999

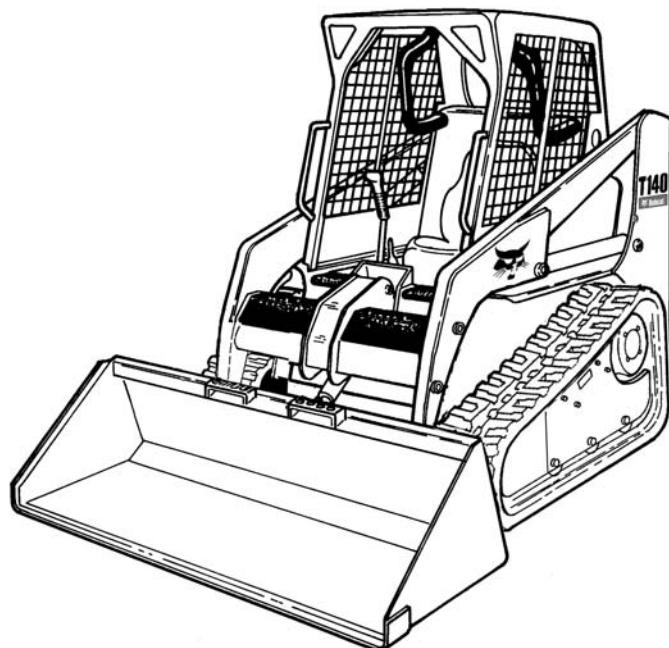

EQUIPPED WITH
BOBCAT INTERLOCK

CONTROL SYSTEM (RIGST™) 747 pages at:

<https://www.arepairmanual.com/downloads/2010-bobcat-t140-compact-track-loader-service-repair-workshop-manuals-n-a3l711001-a3l719999s-n-a3l811001-a3l819999/>

6986569 (11-10)

Printed in U.S.A.



© Bobcat Company 2010

Product: 2010 Bobcat T140 Compact Track Loader Service Repair Workshop Manual(S/N A3L711001 - A3L719999,S/N A3L81

Full Download: <https://www.arepairmanual.com/downloads/2010-bobcat-t140-compact-track-loader-service-repair-workshop-manuals-n-a3l711001-a3l719999s-n-a3l811001-a3l819999/>

pact-track-loader-service-repair-workshop-manuals-n-a3l71100

1-a3l719999s-n-a3l811001-a3l819999/

Sample of manual. Download All 747 pages at:

<https://www.arepairmanual.com/downloads/2010-bobcat-t140-compact-track-loader-service-repair-workshop-manuals-n-a3l711001-a3l719999s-n-a3l811001-a3l819999/>

MAINTENANCE SAFETY



WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0807



Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

CORRECT



P-90216

CORRECT



B-15659

CORRECT



B-15660

⚠ Never service the Bobcat Compact Track Loader without instructions.


WRONG



B-15664

⚠ Have good ventilation when welding or grinding painted parts.
⚠ Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.
⚠ Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.


WRONG

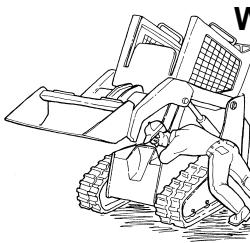

B-15661

⚠ Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause lift arms to drop. Do not go under lift arms when raised unless supported by an approved lift arm support device. Replace it if damaged.

WRONG

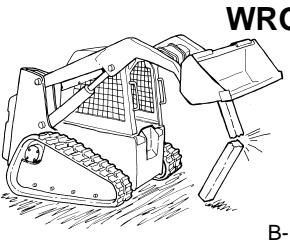

B-15662

⚠ Never work on loader with lift arms up unless lift arms are held by an approved lift arm support device. Replace if damaged.
⚠ Never modify equipment or add attachments not approved by Bobcat Company.


WRONG



B-15665

⚠ Stop, cool and clean engine of flammable materials before checking fluids.
⚠ Never service or adjust loader with the engine running unless instructed to do so in the manual.
⚠ Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
⚠ Never fill fuel tank with engine running, while smoking or when near open flame.

WRONG

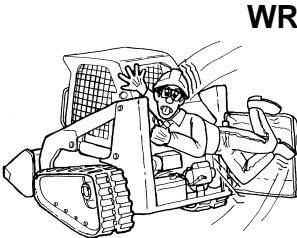

B-15663

⚠ Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
⚠ Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
⚠ Keep rear door closed except for service. Close and latch door before operating the loader.

WRONG



B-6589

⚠ Lead-acid batteries produce flammable and explosive gases.
⚠ Keep arcs, sparks, flames and lighted tobacco away from batteries.
⚠ Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.

MSW09-0409



Bobcat®

ALPHABETICAL INDEX

| | | | |
|--------------------------------------------------------|--------------|----------------------------------------------------------|--------------|
| ALTERNATOR | 60-01 | FUEL TANK | 50-01 |
| AIR CLEANER | 70-01 | HEATER COIL | 80-01 |
| AIR CLEANER SERVICE | 10-01 | HEATER FAN | 80-01 |
| BACK-UP ALARM SYSTEM..... | 60-01 | HEATING SYSTEM | 80-01 |
| BATTERY..... | 60-01 | HEATER UNIT | 80-01 |
| BOBCAT INTERLOCK CONTROL SYSTEM (BICS) | 60-01 | HEATER VALVE | 80-01 |
| BOBCAT CONTROLLER (ACS) | 60-01 | HYDRAULIC CONNECTION SPECIFICATIONS | SPEC-01 |
| BOBCAT CONTROLLER (MAIN)..... | 60-01 | HYDRAULIC CONTROL VALVE (ACS) OR (SJC) | 20-01 |
| BOBCAT CONTROLLER (SJC) (DRIVE) | 60-01 | HYDRAULIC CONTROL VALVE (STANDARD) | 20-01 |
| BOB-TACH (HAND LEVER) | 10-01, 50-01 | HYDRAULIC FLUID RESERVOIR | 20-01 |
| BOB-TACH (POWER)..... | 10-01, 50-01 | HYDRAULIC/HYDROSTATIC FILTERS | 20-01 |
| BOB-TACH (POWER) BLOCK..... | 20-01 | HYDRAULIC / HYDROSTATIC FLUID SPECIFICATIONS | SPEC-01 |
| BRAKE | 40-01 | HYDRAULIC/HYDROSTATIC SYSTEM | 10-01 |
| BUCKET POSITION VALVE..... | 20-01 | HYDRAULIC PUMP (SJC) | 20-01 |
| CAMSHAFT AND TIMING GEARS..... | 70-01 | HYDRAULIC PUMP (STANDARD) | 20-01 |
| CASE DRAIN FILTER | 30-01 | HYDRAULIC SYSTEM INFORMATION | 20-01 |
| CALIBRATION | 60-01 | HYDROSTATIC MOTOR | 30-01 |
| CHARGE PRESSURE | 30-01 | HYDROSTATIC PUMP | 30-01 |
| CONTROL HANDLE / LEVER | 50-01 | HYDROSTATIC PUMP (SJC) | 30-01 |
| CONTROL HANDLE / LEVER (ACS) | 50-01 | HYDROSTATIC SYSTEM INFORMATION | 30-01 |
| CONTROL HANDLE / LEVER (SJC) | 50-01 | INSTRUMENT PANELS | 60-01 |
| CONTROL PANEL | 50-01 | LIFT ARMS | 50-01 |
| CONTROL PANEL (SJC) | 50-01 | LIFT ARM BYPASS CONTROL VALVE | 20-01 |
| CONTROL PANEL SETUP | 60-01 | LIFT ARM SUPPORT DEVICE | 10-01 |
| CONTROL PEDALS AND LINKAGES | 50-01 | LIFTING AND BLOCKING THE LOADER | 10-01 |
| CONTROL PEDALS (ACS) | 50-01 | LIGHTS | 60-01 |
| CONTROL SYSTEM (ACS) | 60-01 | T140 LOADER SPECIFICATIONS | SPEC-01 |
| CONVERSIONS | SPEC-01 | LOADER STORAGE AND RETURN TO SERVICE | 10-01 |
| CRANKSHAFT AND PISTONS | 70-01 | LUBRICATING THE LOADER | 10-01 |
| CYLINDER (BOB-TACH) | 20-01 | LUBRICATION SYSTEM | 70-01 |
| CYLINDER (LIFT) | 20-01 | MAIN RELIEF VALVE | 20-01 |
| CYLINDER (TILT) | 20-01 | MAINTENANCE CLOCK | 60-01 |
| CYLINDER HEAD | 70-01 | MUFFLER | 70-01 |
| DIAGNOSTICS SERVICE CODES | 60-01 | OIL COOLER | 20-01 |
| DRIVE BELT | 30-01 | OPERATOR CAB | 10-01, 50-01 |
| ELECTRICAL/HYD. CONTROLS | 60-01 | OPERATOR SEAT (SUSPENSION) | 50-01 |
| ELECTRICAL/HYDRAULIC CONTROLS REFERENCE (SJC) | 60-01 | PASSWORD SETUP (IF EQUIPPED WITH KEYLESS START) | 60-01 |
| ELECTRICAL SYSTEM INFORMATION | 60-01 | PIVOT PINS | 10-01 |
| ENGINE COOLING SYSTEM | 10-01, 70-01 | REAR AUXILIARY DEVERTER | 20-01 |
| ENGINE INFORMATION | 70-01 | REAR DOOR | 50-01 |
| ENGINE LUBRICATION SYSTEM | 10-01 | REAR GRILL | 50-01 |
| ENGINE SPECIFICATIONS | SPEC-01 | REGULAR MAINTENANCE | 80-01 |
| ENGINE SPEED CONTROL | 70-01 | REMOTE START TOOL KIT-MEL1563 | 10-01 |
| ENGINE SPEED CONTROL (SJC) | 70-01 | REMOTE START TOOL (SERVICE TOOL) KIT-6689779 | 10-01 |
| FLYWHEEL AND HOUSING | 70-01 | | |
| FLYWHEEL RPM SENSOR | 60-01 | | |
| FRONT AUXILIARY HYDRAULIC COUPLER BLOCK | 20-01 | | |
| FUEL SYSTEM | 10-01, 70-01 | | |

ALPHABETICAL INDEX (CONT'D)

| | |
|----------------------------------------------------|---------|
| SEAT BAR | 50-01 |
| SEAT BAR SENSOR..... | 60-01 |
| SERVICE PC (LAPTOP COMPUTER) | 60-01 |
| SERVICE SCHEDULE..... | 10-01 |
| SPARK ARRESTOR MUFFLER..... | 10-01 |
| SPEED SENSORS (SJC) | 60-01 |
| STARTER | 60-01 |
| STEERING DRIFT COMPENSATION | 60-01 |
| STOPPING THE ENGINE AND LEAVING THE LOADER..... | 10-01 |
| TORQUE SPECIFICATIONS FOR BOLTS..... | SPEC-01 |
| TOWING THE LOADER | 10-01 |
| TRACK CARRIAGE COMPONENTS | 40-01 |
| TRACTION LOCK..... | 60-01 |
| TRANSPORTING THE LOADER ON A TRAILER .. | 10-01 |
| TROUBLESHOOTING..... | 80-01 |
| WINDOW FRONT DOOR)..... | 50-01 |
| WINDOW (SIDE) | 50-01 |
| WINDOW (REAR)..... | 50-01 |
| WINDOW (TOP) | 50-01 |

CONTENTS

| | |
|-----------------------------------|---------|
| FOREWORD..... | II |
| SAFETY INSTRUCTIONS | V |
| FIRE PREVENTION | VII |
| SERIAL NUMBER LOCATIONS | IX |
| DELIVERY REPORT..... | X |
| LOADER IDENTIFICATION | XI |
| SAFETY AND MAINTENANCE..... | 10-01 |
| HYDRAULIC SYSTEM | 20-01 |
| HYDROSTATIC SYSTEM..... | 30-01 |
| DRIVE SYSTEM..... | 40-01 |
| MAIN FRAME | 50-01 |
| ELECTRICAL SYSTEM & ANALYSIS..... | 60-01 |
| ENGINE SERVICE | 70-01 |
| HEATING SYSTEM..... | 80-01 |
| SPECIFICATIONS..... | SPEC-01 |

**SAFETY &
MAINTENANCE**

**HYDRAULIC
SYSTEM**

**HYDROSTATIC
SYSTEM**

**DRIVE
SYSTEM**

MAIN FRAME

**ELECTRICAL
SYSTEM &
ANALYSIS**

**ENGINE
SERVICE**














**HEATING
SYSTEM**

SPECIFICATIONS


FOREWORD

This manual is for the Bobcat loader mechanic. It provides necessary servicing and adjustment procedures for the Bobcat loader and its component parts and systems. Refer to the Operation & Maintenance Manual for operating instructions, starting procedure, daily checks, etc.


A general inspection of the following items must be made after the loader has had service or repair:
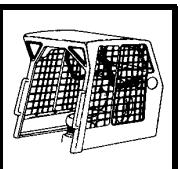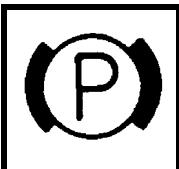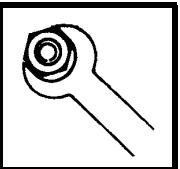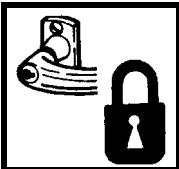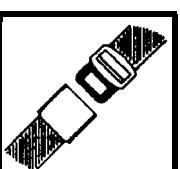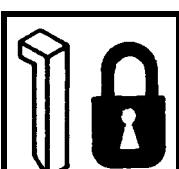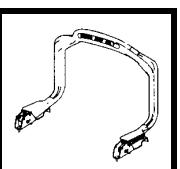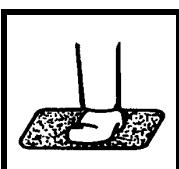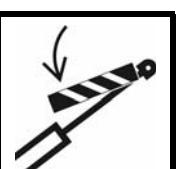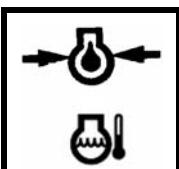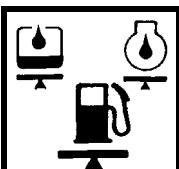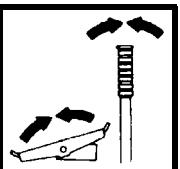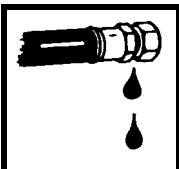
| | | | |
|------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
| 1. Check that the ROPS/FOPS (Including side screens) is in good condition and is not modified. |  | 9. The parking brake must function correctly. |  |
| 2. Check that ROPS mounting hardware is tightened and is Bobcat approved. |  | 10. Enclosure door latches must open and close freely. |  |
| 3. The seat belt must be correctly installed, functional and in good condition. |  | 11. Bob-Tach wedges and linkages must function correctly and be in good condition. |  |
| 4. The seat bar must be correctly adjusted, clean and lubricated. |  | 12. Safety treads must be in good condition. |  |
| 5. Check lift arm support device, replace if damaged. |  | 13. Check for correct function of indicator lamps. |  |
| 6. Machine signs (decals) must be legible and in the correct location. |  | 14. Check hydraulic fluid level, engine oil level and fuel supply. |  |
| 7. Steering levers, hand controls and foot pedals must return to neutral (as applicable). |  | 15. Inspect for fuel, oil or hydraulic fluid leaks. |  |
| 8. Check for correct function of the work lights. |  | 16. Lubricate the loader. |  |


17. Check the condition of the battery and cables.

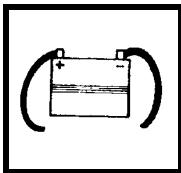


18. Inspect the air cleaner for damage or leaks. Check the condition of the element.

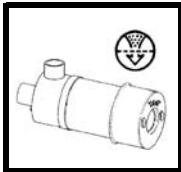


19. Check the electrical charging system.

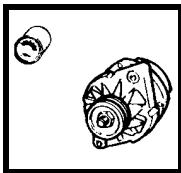

20. Check tires for wear and pressure. Check tracks for wear and tension. Use only approved tires or tracks.

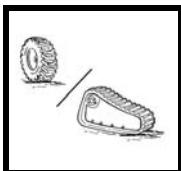


21. Inspect for loose or broken parts or connections.

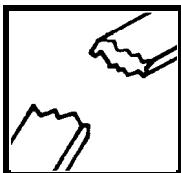


22. Check for any field modification not completed.




23. Operate the machine and check all functions.

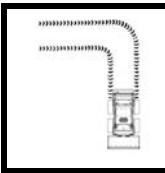

24. Check for correct function of the Bobcat Interlock Control System (BICS™) before the machine is returned to the customer.

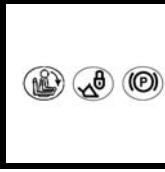


25. Check for proper function of front horn and back-up alarm (if equipped).

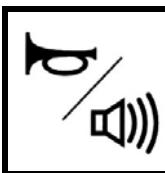

26. Check function or condition of all equipped options and accessories (examples: fire extinguisher, rotating beacon, lift kits, etc.).



27. Recommend to the owner that all necessary corrections be made before the machine is returned to service.

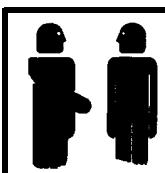

**CALIFORNIA
PROPOSITION 65 WARNING**

Diesel engine exhaust and some of its constituents are known to the state of California to cause cancer, birth defects and other reproductive harm.



Bobcat®

FW SSL-1008 SM

SAFETY INSTRUCTIONS



Safety Alert Symbol

**This symbol with a warning statement means:
"Warning, be alert! Your safety is involved!"
Carefully read the message that follows.**



WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903

IMPORTANT

This notice identifies procedures which must be followed to avoid damage to the machine.

I-2019-0284



DANGER

The signal word DANGER on the machine and in the manuals indicates a hazardous situation which, if not avoided, will result in death or serious injury.

D-1002-1107



WARNING

The signal word WARNING on the machine and in the manuals indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

W-2044-1107

The following publications provide information on the safe use and maintenance of the Bobcat machine and attachments:

- The Delivery Report is used to assure that complete instructions have been given to the new owner and that the machine is in safe operating condition.
- The Operation & Maintenance Manual delivered with the machine or attachment contains operating information as well as routine maintenance and service procedures. It is a part of the machine and can be stored in a container provided on the machine. Replacement Operation & Maintenance Manuals can be ordered from your Bobcat dealer.
- Machine signs (decals) instruct on the safe operation and care of your Bobcat machine or attachment. The signs and their locations are shown in the Operation & Maintenance Manual. Replacement signs are available from your Bobcat dealer.
- An Operator's Handbook fastened to the operator cab. It's brief instructions are convenient to the operator. The handbook is available from your dealer in an English edition or one of many other languages. See your Bobcat dealer for more information on translated versions.
- The AEM Safety Manual delivered with the machine gives general safety information.
- The Service Manual and Parts Manual are available from your dealer for use by mechanics to do shop-type service and repair work.
- The Skid-Steer Loader Operator Training Course is available through your local dealer or at www.training.bobcat.com or www.bobcat.com. This course is intended to provide rules and practices of correct operation of the Skid-Steer Loader. The course is available in English and Spanish versions.
- Service Safety Training Courses are available from your Bobcat dealer or at www.training.bobcat.com or www.bobcat.com. They provide information for safe and correct service procedures.
- The Skid-Steer Loader Safety Video is available from your Bobcat dealer or at www.training.bobcat.com or www.bobcat.com.

SAFETY INSTRUCTIONS (CONT'D)

The dealer and owner / operator review the recommended uses of the product when delivered. If the owner / operator will be using the machine for a different application(s) he or she must ask the dealer for recommendations on the new use.



Cutting or drilling concrete containing sand or rock containing quartz may result in exposure to silica dust. Do not exceed Permissible Exposure Limits (PEL) to silica dust as determined by OSHA or other job site Rules and Regulations. Use a respirator, water spray or other means to control dust. Silica dust can cause lung disease and is known to the state of California to cause cancer.

Call Before You Dig

Dial 811 (USA Only)
1-888-258-0808 (USA & Canada)

When you call, you will be directed to a location in your state / province, or city for information about buried lines (telephone, cable TV, water, sewer, gas, etc.).

FIRE PREVENTION



Maintenance

The machine and some attachments have components that are at high temperatures under normal operating conditions. The primary source of high temperatures is the engine and exhaust system. The electrical system, if damaged or incorrectly maintained, can be a source of arcs or sparks.

Flammable debris (leaves, straw, etc.) must be removed regularly. If flammable debris is allowed to accumulate, it can cause a fire hazard. Clean often to avoid this accumulation. Flammable debris in the engine compartment is a potential fire hazard.

The operator's area, engine compartment and engine cooling system must be inspected every day and cleaned if necessary to prevent fire hazards and overheating.

All fuels, most lubricants and some coolants mixtures are flammable. Flammable fluids that are leaking or spilled onto hot surfaces or onto electrical components can cause a fire.

Operation

Do not use the machine where exhaust, arcs, sparks or hot components can contact flammable material, explosive dust or gases.

Electrical



Check all electrical wiring and connections for damage. Keep the battery terminals clean and tight. Repair or replace any damaged part or wires that are loose or frayed.

Battery gas can explode and cause serious injury. Use the procedure in the Operation & Maintenance Manual for connecting the battery and for jump starting. Do not jump start or charge a frozen or damaged battery. Keep any open flames or sparks away from batteries. Do not smoke in battery charging area.

Hydraulic System

Check hydraulic tubes, hoses and fittings for damage and leakage. Never use open flame or bare skin to check for leaks. Hydraulic tubes and hoses must be properly routed and have adequate support and secure clamps. Tighten or replace any parts that show leakage.

Always clean fluid spills. Do not use gasoline or diesel fuel for cleaning parts. Use commercial nonflammable solvents.

Fueling



Stop the engine and let it cool before adding fuel. No smoking! Do not refuel a machine near open flames or sparks. Fill the fuel tank outdoors.

Starting

Do not use ether or starting fluids on any engine that has glow plugs or air intake heater. These starting aids can cause explosion and injure you or bystanders.

Use the procedure in the Operation & Maintenance Manual for connecting the battery and for jump starting.

Spark Arrestor Exhaust System

The spark arrestor exhaust system is designed to control the emission of hot particles from the engine and exhaust system, but the muffler and the exhaust gases are still hot.

Check the spark arrestor exhaust system regularly to make sure it is maintained and working properly. Use the procedure in the Operation & Maintenance Manual for cleaning the spark arrestor muffler (if equipped).

FIRE PREVENTION (CONT'D)


Welding And Grinding

Always clean the machine and attachment, disconnect the battery, and disconnect the wiring from the Bobcat controllers before welding. Cover rubber hoses, battery and all other flammable parts. Keep a fire extinguisher near the machine when welding.

Have good ventilation when grinding or welding painted parts. Wear dust mask when grinding painted parts. Toxic dust or gas can be produced.

Dust generated from repairing nonmetallic parts such as hoods, fenders or covers can be flammable or explosive. Repair such components in a well ventilated area away from open flames or sparks.

Fire Extinguishers

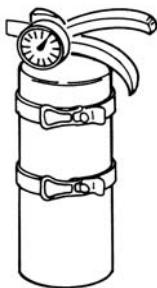


Know where fire extinguishers and first aid kits are located and how to use them. Inspect the fire extinguisher and service the fire extinguisher regularly. Obey the recommendations on the instructions plate.

SERIAL NUMBER LOCATIONS

Always use the serial number of the loader when requesting service information or when ordering parts. Early or later models (identification made by serial number) may use different parts, or it may be necessary to use a different procedure in doing a specific service operation.

Loader Serial Number

Figure 1

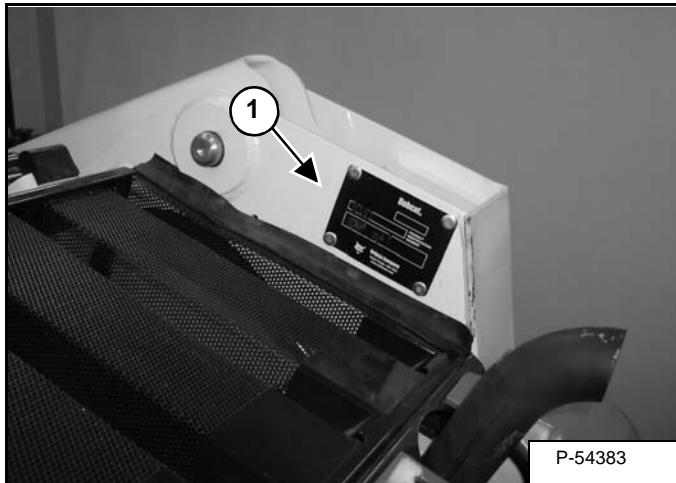

The loader serial number plate is located on the outside of the loader frame **[Figure 1]**.


Explanation of loader Serial Number:

| XXXX | XXXXXX |
|------------------------------------|---------------------------------------|
| Model 1.-Model/ Engine Combination | Model 2.-Production Sequence (Series) |

1. The four digit Model/Engine Combination Module number identifies the model number and engine combination.
2. The five digit Production Sequence Number identifies the order which the loader is produced.

Engine Serial Number

Figure 2

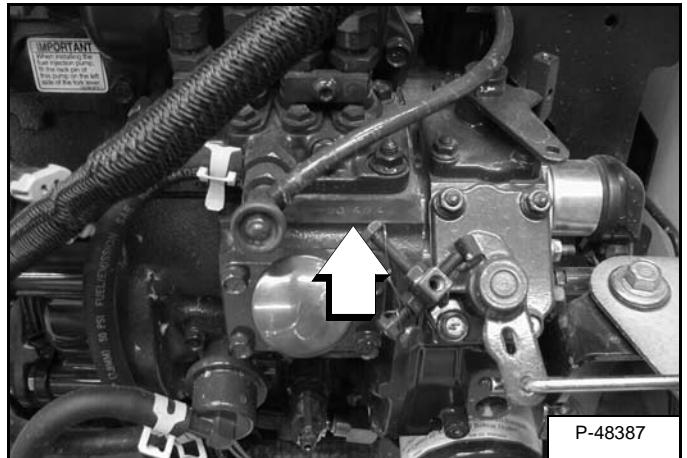

The engine serial number is in the location shown **[Figure 2]**.


DELIVERY REPORT

Figure 3


The image shows a 'DELIVERY REPORT' form. At the top left, there is a 'WARNING' section enclosed in a box. The main body of the form contains several horizontal lines for signatures or entries. In the bottom right corner of the form area, the code 'B-16315' is printed. The entire form is enclosed in a large rectangular border.

The Delivery Report must be filled out by the dealer and signed by the owner or operator when the Bobcat loader is delivered. An explanation of the form must be given to the owner. Make sure it is filled out completely [Figure 3].

LOADER IDENTIFICATION

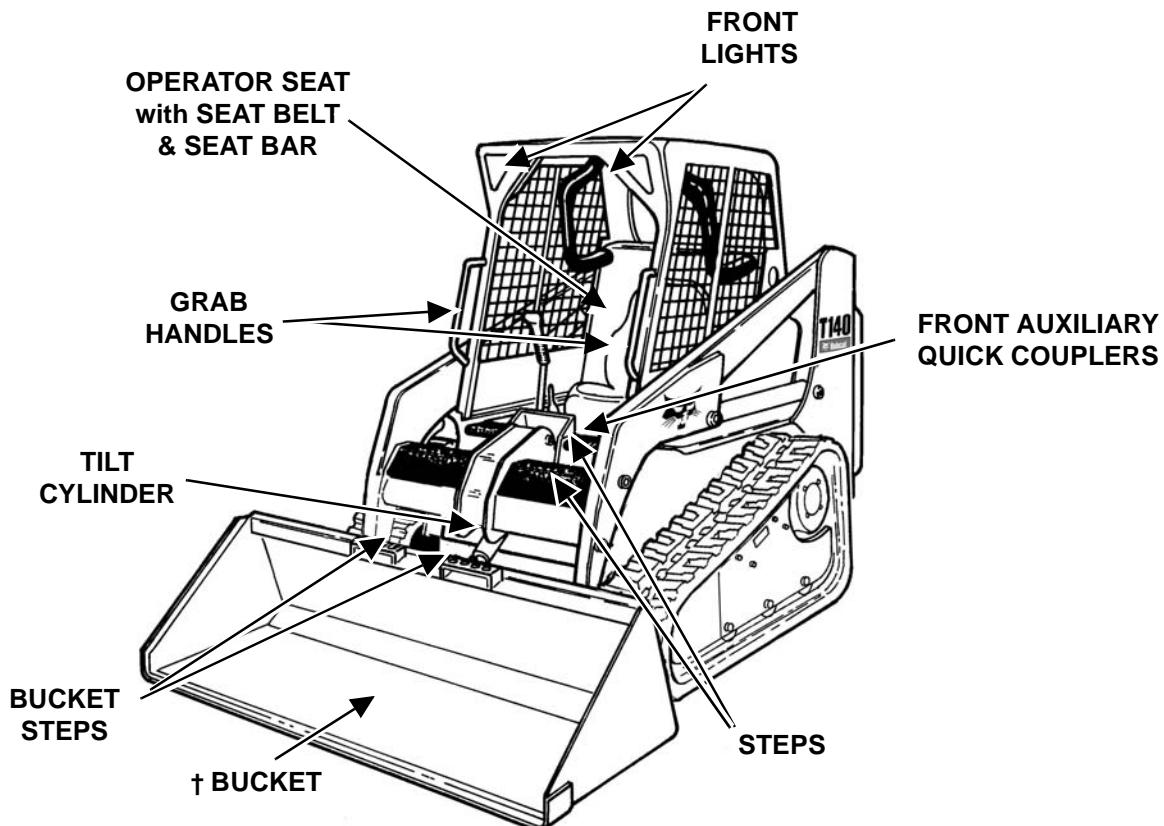

B-24239B

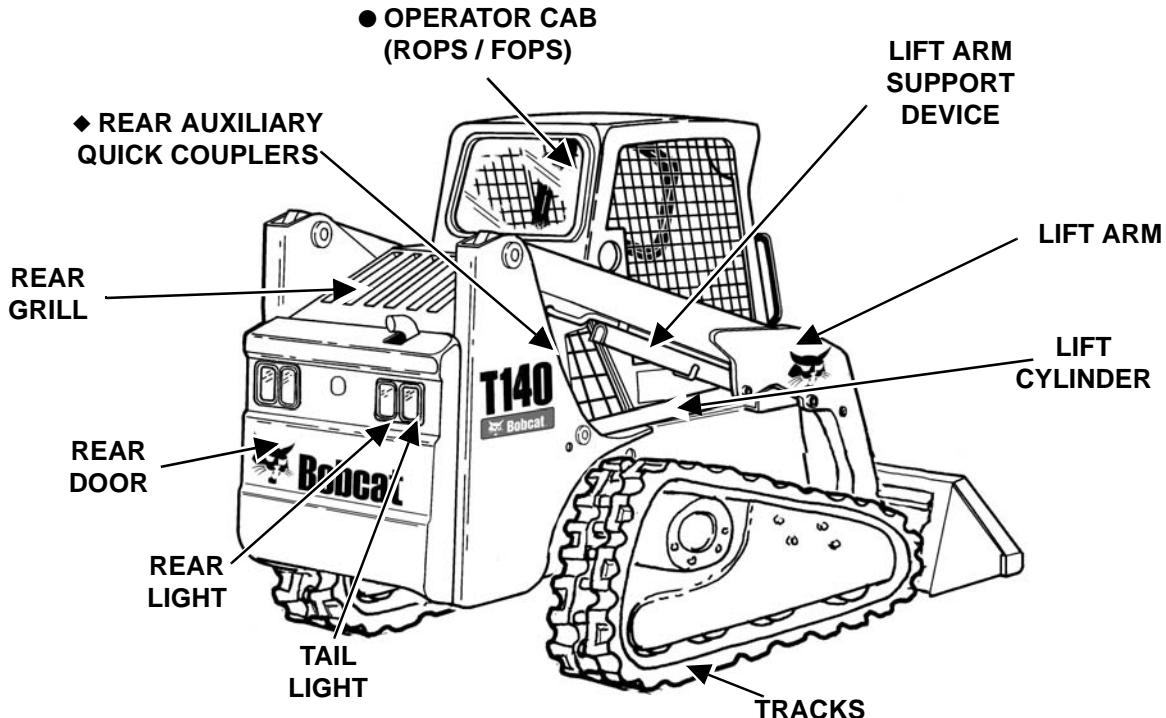

B-24240A

♦ Optional or Field Accessory (Not Standard Equipment)

† Bucket - Several different buckets and other attachments are available for this machine.

● ROPS, FOPS - Roll Over Protective Structure, per ISO 3471, and Falling Object Protective Structure per ISO 3449, Level I. Level II is available.



Bobcat®

| | |
|-------------------------------------------------------------|----------|
| AIR CLEANER SERVICE | 10-80-1 |
| Replacing Filter Elements | 10-80-1 |
| BOB-TACH (HAND LEVER) | 10-130-1 |
| Inspection And Maintenance | 10-130-1 |
| BOB-TACH (POWER) | 10-131-1 |
| Inspection And Maintenance | 10-131-1 |
| ENGINE COOLING SYSTEM | 10-90-1 |
| Checking Level | 10-90-2 |
| Cleaning | 10-90-1 |
| Removing And Replacing The Coolant | 10-90-3 |
| ENGINE LUBRICATION SYSTEM | 10-110-1 |
| Checking And Adding Engine Oil | 10-110-1 |
| Engine Oil Chart | 10-110-1 |
| Removing And Replacing Oil And Filter | 10-110-2 |
| FUEL SYSTEM | 10-100-1 |
| Filling The Fuel Tank | 10-100-2 |
| Fuel Filter | 10-100-3 |
| Fuel Specifications | 10-100-1 |
| Removing Air From The Fuel System | 10-100-3 |
| HYDRAULIC / HYDROSTATIC SYSTEM | 10-120-1 |
| Breather Cap | 10-120-5 |
| Checking And Adding Fluid | 10-120-1 |
| Hydraulic / Hydrostatic Fluid Chart | 10-120-1 |
| Removing And Replacing Case Drain Filters | 10-120-4 |
| Removing And Replacing Hydraulic Charge Filter | 10-120-5 |
| Removing And Replacing Hydraulic Fluid | 10-120-2 |
| Removing And Replacing Hydraulic / Hydrostatic Filter | 10-120-3 |
| LIFT ARM SUPPORT DEVICE | 10-20-1 |
| Installing | 10-20-1 |
| Removing | 10-20-2 |
| LIFTING AND BLOCKING THE LOADER | 10-10-1 |
| Procedure | 10-10-1 |
| LOADER STORAGE AND RETURN TO SERVICE | 10-170-1 |
| Return to Service | 10-170-1 |
| Storage | 10-170-1 |

Continued On Next Page

SAFETY AND MAINTENANCE (CONT'D)

| | |
|-----------------------------------------------------------|----------|
| LUBRICATING THE LOADER | 10-140-1 |
| Lubrication Locations | 10-140-1 |
| OPERATOR CAB | 10-30-1 |
| Cab Door Sensor | 10-30-4 |
| Description | 10-30-1 |
| Lowering | 10-30-3 |
| Raising | 10-30-2 |
| Special Applications Kit | 10-30-4 |
| Special Applications Kit Inspection And Maintenance | 10-30-4 |
| PIVOT PINS | 10-160-1 |
| Inspection And Maintenance | 10-160-1 |
| REMOTE START TOOL KIT-MEL1563 | 10-60-1 |
| Remote Start Tool - MEL1563 | 10-60-1 |
| Service Tool Harness Control - MEL1565 | 10-60-2 |
| Service Tool Harness Communicator - MEL1566 | 10-60-3 |
| Remote Start Procedure | 10-60-4 |
| REMOTE START TOOL (SERVICE TOOL) KIT - 6689779 | 10-61-1 |
| Description | 10-61-1 |
| Remote Start Tool (Service Tool) - 6689778 | 10-61-2 |
| Loader Service Tool Harness - 6689747 | 10-61-3 |
| Computer Service Tool Harness - 6689746 | 10-61-4 |
| Remote Start Procedure | 10-61-5 |
| SERVICE SCHEDULE | 10-70-1 |
| Chart | 10-70-1 |
| SPARK ARRESTOR MUFFLER | 10-150-1 |
| Cleaning Procedure | 10-150-1 |
| STOPPING THE ENGINE AND LEAVING THE LOADER | 10-180-1 |
| Emergency Exit | 10-180-2 |
| Procedure | 10-180-1 |
| TOWING THE LOADER | 10-50-1 |
| Procedure | 10-50-1 |
| TRANSPORTING THE LOADER ON A TRAILER | 10-40-1 |
| Fastening | 10-40-1 |
| Loading And Unloading | 10-40-1 |

TIGHTEN ALL HARDWARE PER SIZE TO GRADE 5 TORQUE (SEE STANDARD TORQUE SPECIFICATIONS FOR BOLTS, SECTION SPEC-01) UNLESS OTHERWISE SPECIFIED.

SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE AND STANDARD ITEMS MAY VARY.

LIFTING AND BLOCKING THE LOADER

Procedure

Figure 10-10-1

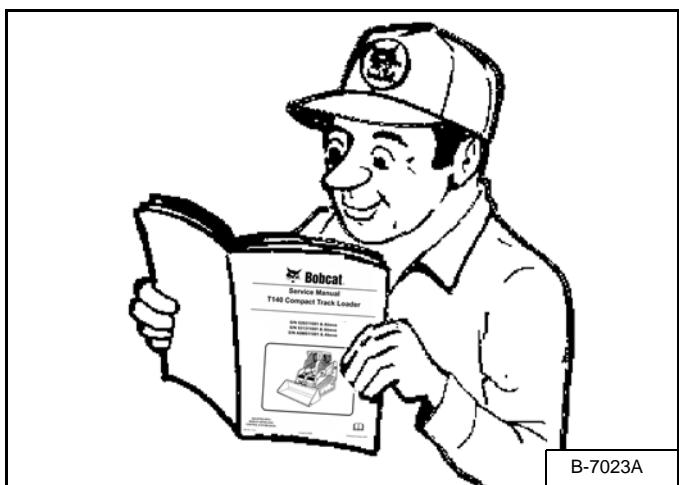



Figure 10-10-2



Put floor jack under the rear of the loader.

Lift the rear of the loader and install jack stands [Figure 10-10-2].

Figure 10-10-3

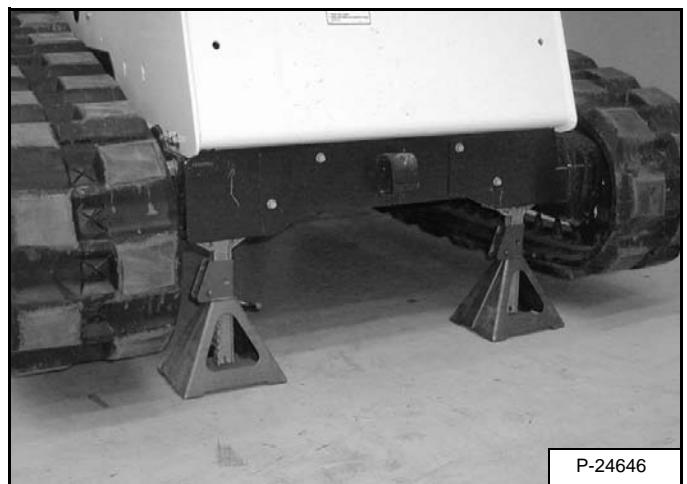

AVOID INJURY OR DEATH

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0807

Always park the loader on a level surface.



WARNING

Put jackstands under the front axles and rear corners of the frame before running the engine for service. Failure to use jackstands can allow the machine to fall or move and cause injury or death.

W-2017-0286

Put the floor jack under the front of the loader [Figure 10-10-3].

Lift the front of the loader and put jack stands under the axle tubes [Figure 10-10-3].

NOTE: Make sure the jack stands do not touch the tracks. Make sure tracks clear floor or any obstacles.



Bobcat®

LIFT ARM SUPPORT DEVICE

Installing

Maintenance and service work can be done with the lift arms lowered. If the lift arms are raised, use the following procedures to engage and disengage an approved lift arm support device.




WARNING

Never work on a machine with the lift arms up unless the lift arms are secured by an approved lift arm support device. Failure to use an approved lift arm support device can allow the lift arms or attachment to fall and cause injury or death.

Service lift arm support device if damaged or if parts are missing. Using a damaged lift arm support or with missing parts can cause lift arms to drop causing injury or death.

W-2572-0407

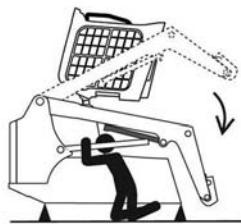

P-90328


AVOID DEATH

- Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause lift arms to drop.
- Keep out of this area when lift arms are raised unless supported by an approved lift arm support. Replace if damaged.

D-1009-0409

Remove attachment from the loader. (See BOB-TACH (HAND LEVER) on Page 50-40-1.) **OR** (See BOB-TACH (POWER - OPTION) on Page 50-41-1.)

Figure 10-20-1

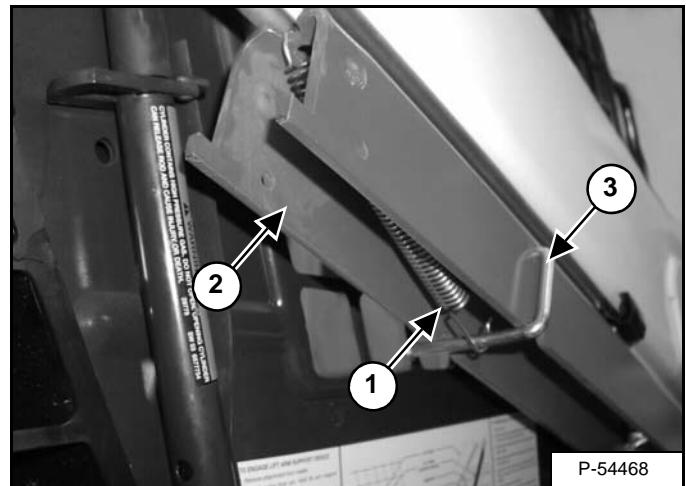


P-54468

Put jackstands under the rear corners of the loader frame.

Disconnect the spring (Item 1) from the lift arm support device retaining pin. Support the lift arm support device (Item 2) with your hand and remove the retaining pin (Item 3) [Figure 10-20-1].

Figure 10-20-2

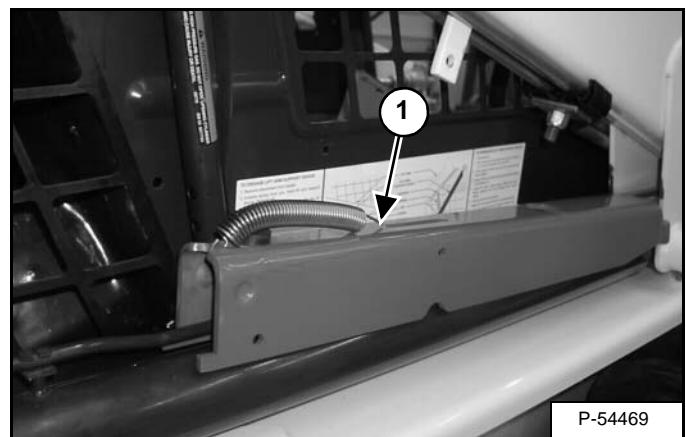

P-54469


Lower the lift arm support device to the top of the lift cylinder. Hook the free end of the spring (Item 1) [Figure 10-20-2] to the lift arm support device so the spring does not interfere with the support device engagement.

Sit in the operator's seat, fasten the seat belt and lower the seat bar. Start the engine.

LIFT ARM SUPPORT DEVICE (CONT'D)

Installing (Cont'd)

Figure 10-20-3

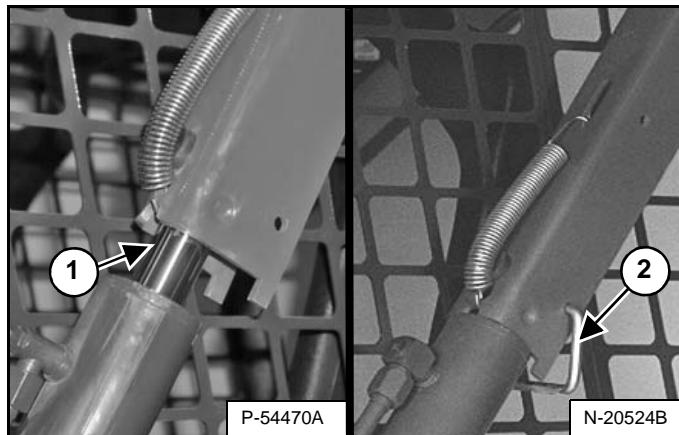

Raise the lift arms until the lift arm support device drops onto the lift cylinder rod (Item 1) [Figure 10-20-3].


Lower the lift arms slowly until the support device is held between the lift arm and the lift cylinder. Stop the engine. Raise the seat bar and move both pedals until both pedals lock.

Install pin (Item 2) [Figure 10-20-3] into the rear of the lift arm support device below the cylinder rod.

Removing

Remove the pin from the lift arm support device.

Figure 10-20-4

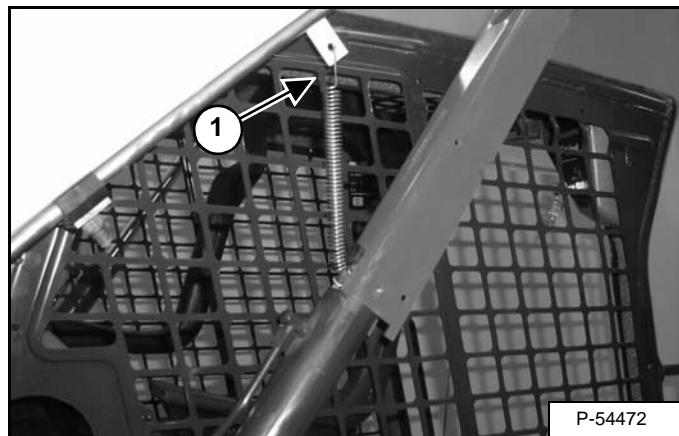


Connect the spring (Item 1) [Figure 10-20-4] from the lift arm support device to the bracket below the lift arms.

Sit in the operator's seat fasten the seat belt and lower the seat bar.

Start the engine.

Figure 10-20-5

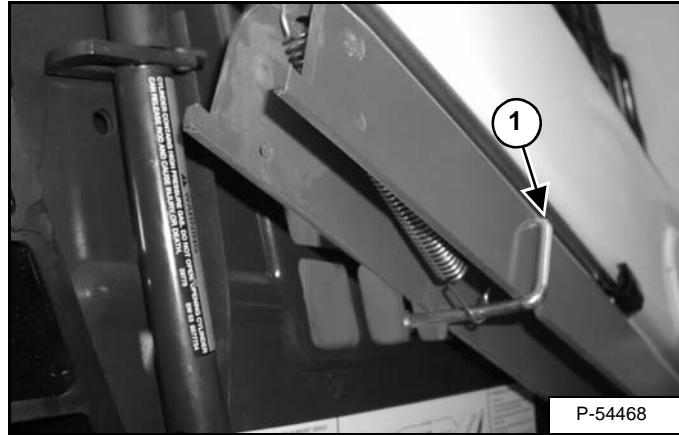

Raise the lift arms a small amount. The spring will lift the support device off the lift cylinder rod. Lower the lift arms. Stop the engine.

Raise the seat bar, disconnect the seat belt, move pedals until both pedals lock and exit the cab.

Disconnect the spring from the bracket.

Raise the support device into storage position and insert pin (Item 1) [Figure 10-20-5] through lift arm support device and bracket. Connect the spring to the pin.

Remove the jackstands.

OPERATOR CAB

Description

The Bobcat Loader has an operator cab (ROPS and FOPS) as standard equipment to protect the operator from rollover and falling objects. Check with your dealer if the operator cab has been damaged. The seat belt must be worn for rollover protection.

ROPS / FOPS - Roll Over protective Structure per ISO 3471, and Falling Object Protective Structure per SAE J1043 and ISO 3449, Level I. Level II is available.

Level I - Protection from falling bricks, small concrete blocks, and hand tools encountered in operations such as highway maintenance, landscaping, and other construction sites.

Level II - Protection from falling trees, rocks: for machines involved in site clearing, overhead demolition or forestry.



WARNING

Never modify operator cab by welding, grinding, drilling holes or adding attachments unless instructed to do so by Bobcat Company. Changes to the cab can cause loss of operator protection from rollover and falling objects, and result in injury or death.

W-2069-0200


OPERATOR CAB (CONT'D)

Raising

Always stop the engine before raising or lowering the cab.


Stop the loader on a level surface. Lower the lift arms. If the lift arms must be up while raising the operator cab, install the lift arm support device. (See LIFT ARM SUPPORT DEVICE on Page 10-20-1.)

Figure 10-30-1

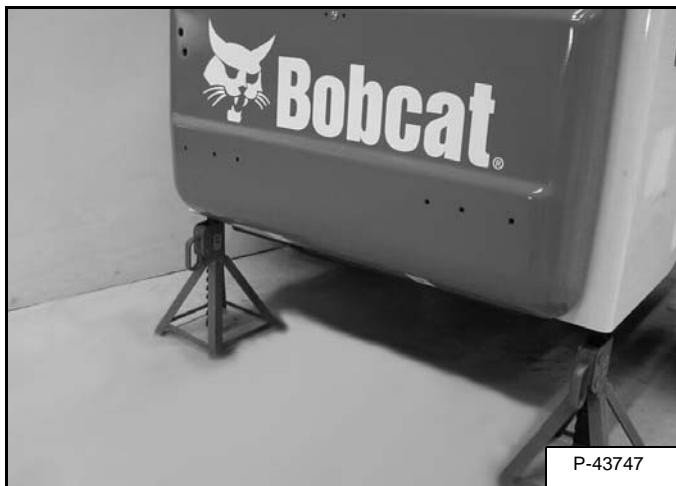

Install jackstands under the rear of the loader frame [Figure 10-30-1].

Figure 10-30-2

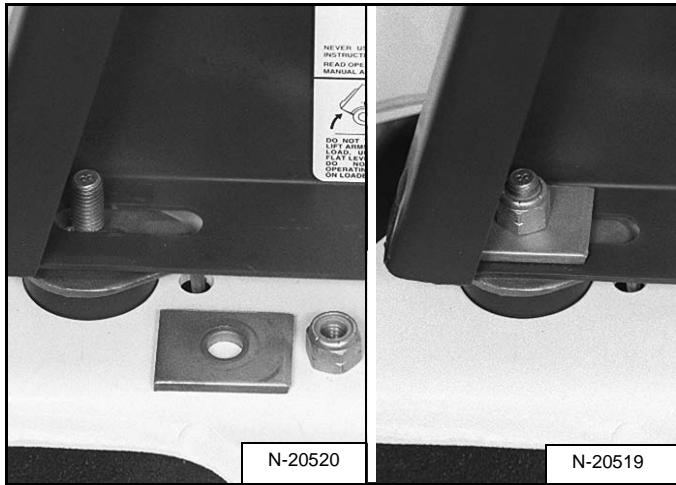

Remove the nuts and plates [Figure 10-30-2] (both sides) at the front corners of the cab.

WARNING

UNEXPECTED LOADER, LIFT ARM OR ATTACHMENT
MOVEMENT CAUSED BY CAB CONTACT WITH
CONTROLS CAN CAUSE SERIOUS
INJURY OR DEATH

- STOP ENGINE before raising or lowering cab.

W-2758-0908

NOTE: On Advanced Control System (ACS) equipped machines, the steering levers could contact the cab frame while raising or lowering the operator cab. The engine MUST be stopped before raising or lowering the cab.

Figure 10-30-3



Lift on the grab handles and bottom of the operator cab [Figure 10-30-3] slowly until the cab is all the way up and the latching mechanism engages.


OPERATOR CAB (CONT'D)

Lowering

Always stop the engine before raising or lowering the cab.

NOTE: Always use the grab handles to lower the cab.

Figure 10-30-4

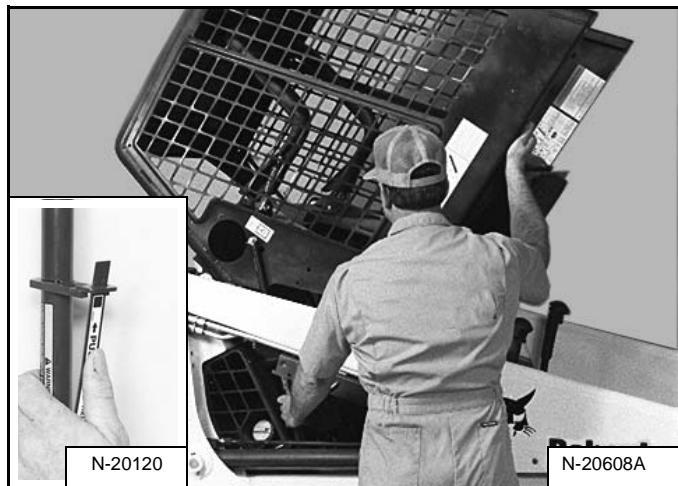

Pull down on the bottom of the operator cab until it stops at the latching mechanism [Figure 10-30-4].

NOTE: The weight of the cab increases when equipped with options and accessories such as cab door, heater, air conditioning, etc. In these cases, the cab may need to be raised slightly from the latch to be able to release the latch.

latching mechanism when the cab is past the latch stop. Use both hands to lower the cab all the way.


! WARNING

PINCH POINT CAN CAUSE INJURY

Remove your hand from the latching mechanism when the cab is past the latch stop.

W-2469-0803

Figure 10-30-5

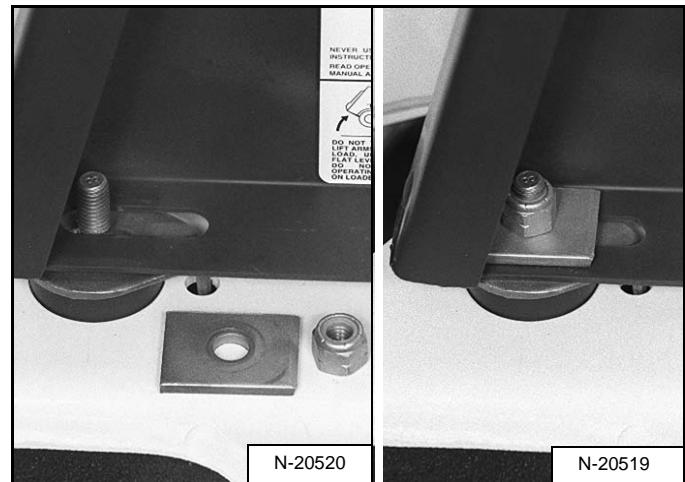

Install the plates and nuts (both sides) [Figure 10-30-5].

Tighten the nuts to 40 - 45 ft.-lb. (54 - 61 N•m) torque.

! WARNING

**UNEXPECTED LOADER, LIFT ARM OR ATTACHMENT
MOVEMENT CAUSED BY CAB CONTACT WITH
CONTROLS CAN CAUSE SERIOUS
INJURY OR DEATH**

- **STOP ENGINE before raising or lowering cab.**

W-2758-0908

NOTE: On Advanced Control System (ACS) equipped machines, the steering levers could contact the cab frame while raising or lowering the operator cab. The engine **MUST be stopped before raising or lowering the cab.**


Support the cab and release the latching mechanism (Inset) [Figure 10-30-4]. Remove your hand from

OPERATOR CAB (CONT'D)

Cab Door Sensor

This machine may be equipped with a Cab Door Sensor.

Figure 10-30-6

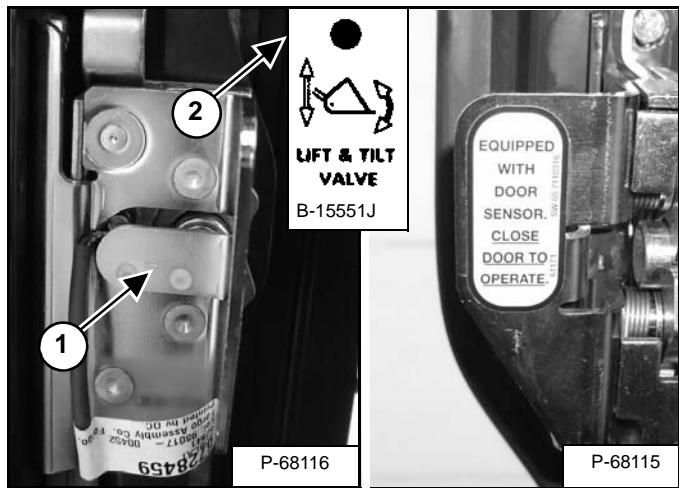


The cab door (option) has a sensor (Item 1) [Figure 10-30-6] installed which deactivates the lift and tilt valves when the door is open.

CLOSE DOOR TO OPERATE lift and tilt valves.

The LIFT & TILT VALVE light (Item 2) [Figure 10-30-6] will be ON when the door is closed and the PRESS TO OPERATE LOADER BUTTON is pressed.

Special Applications Kit

Figure 10-30-7

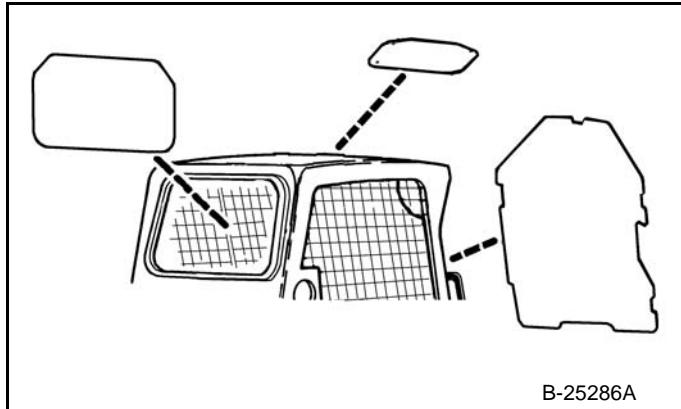

Available for special applications to restrict material from entering cab openings. Kit includes 1/2 in. Lexan® front door, top and rear windows [Figure 10-30-7].

See your Bobcat dealer for availability.

Special Applications Kit Inspection And Maintenance

- Inspect for cracks or damage. Replace if required.
- Pre-rinse with water to remove gritty materials.
- Wash with a mild household detergent and warm water.
- Use a sponge or soft cloth. Rinse well with water and dry with a clean soft cloth or rubber squeegee.
- Do not use abrasive or highly alkaline cleaners.
- Do not operate windshield wipers on a dry surface.
- Do not clean with metal blades or scrapers.

TRANSPORTING THE LOADER ON A TRAILER

Loading And Unloading



WARNING


AVOID SERIOUS INJURY OR DEATH

Adequately designed ramps of sufficient strength are needed to support the weight of the machine when loading onto a transport vehicle. Wood ramps can break and cause personal injury.

W-2058-0807

Be sure the transport and towing vehicles are of adequate size and capacity for the weight of the loader. (See Performance on Page SPEC-10-2.)

Figure 10-40-1

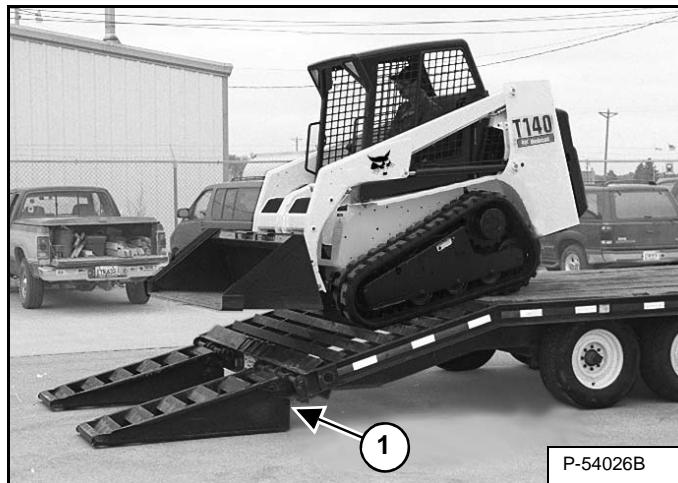


A loader with an empty bucket or no attachment must be loaded backward onto the transport vehicle [Figure 10-40-1].

The rear of the trailer must be blocked or supported (Item 1) [Figure 10-40-1] when loading or unloading the loader to prevent the front end of the trailer from raising up.

Fastening

Figure 10-40-2

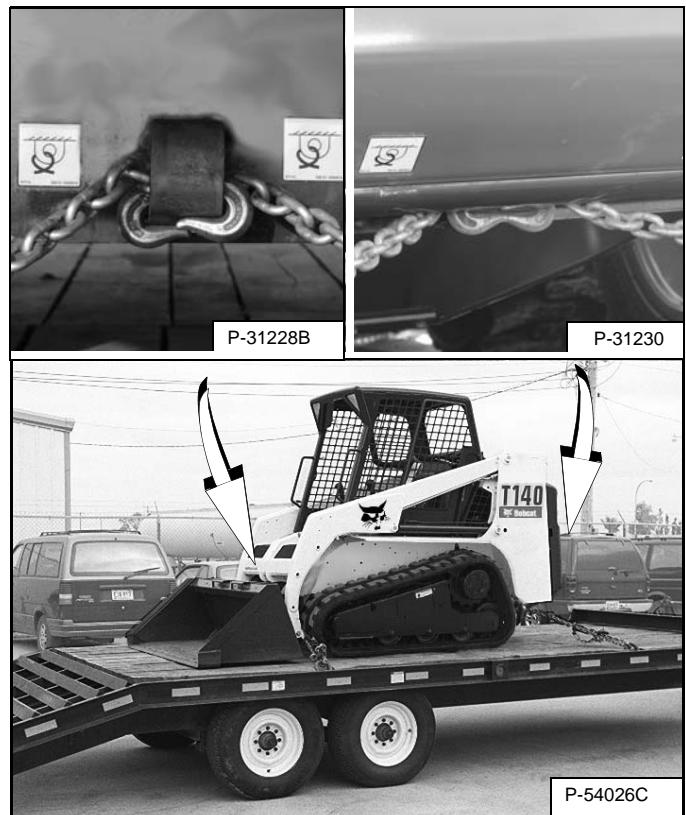

Use the following procedure to fasten the Bobcat Loader to the transport vehicle to prevent the loader from moving during sudden stops or when going up or down slopes [Figure 10-40-2].

- Lower the bucket or attachment to the floor.
- Stop the engine.
- Engage the parking brake.
- Install chains at the front and rear loader tie down positions [Figure 10-40-2]
- Fasten each end of the chain to the transport vehicle.

Product: 2010 Bobcat T140 Compact Track Loader Service Repair Workshop Manual(S/N A3L711001 - A3L719999,S/N A3L811001-a3L719999s-n-a3L811001-a3L819999/



Sample of manual. Download All 747 pages at:

<https://www.arepairmanual.com/downloads/2010-bobcat-t140-compact-track-loader-service-repair-workshop-manuals-n-a3l711001-a3l719999s-n-a3l811001-a3l819999/>