

Product: 2010 Bobcat V417 VersaHANDLER Service Repair Workshop Manual
Full Download: <https://www.arepairmanual.com/downloads/2010-bobcat-v417-versahandler-service-repair-workshop-manual/>




Bobcat®

Service Manual

V417 VersaHANDLER®


**S/N AC1C11001 & Above (with Cab)
S/N AC1D11001 & Above (with Canopy)**

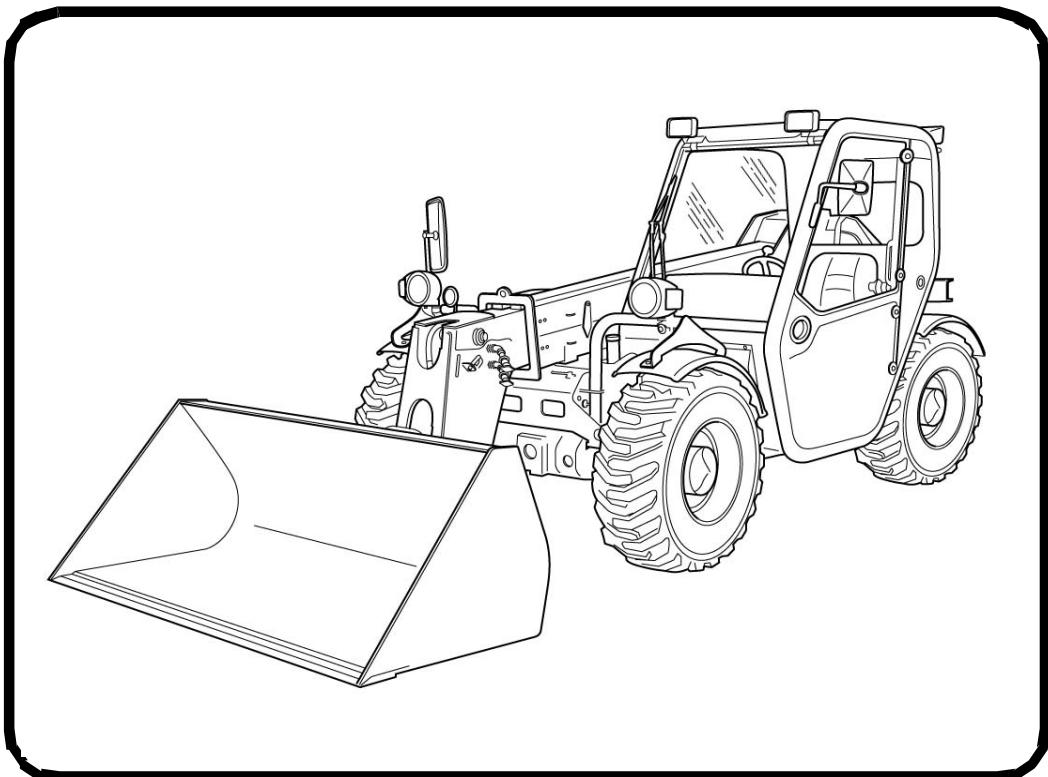

Sample of manual. Download All 868 pages at:

<https://www.arepairmanual.com/downloads/2010-bobcat-v417-versahandler-service-repair-workshop-manual/>
6987144 (4-10)

Printed in U.S.A.

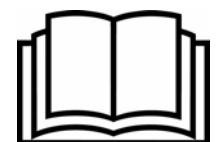

© Bobcat Company 2010

Product: 2010 Bobcat V417 VersaHANDLER Service Repair Workshop Manual

Full Download: <https://www.arepairmanual.com/downloads/2010-bobcat-v417-versahandler-service-repair-workshop-manual/>

Sample of manual. Download All 868 pages at:

<https://www.arepairmanual.com/downloads/2010-bobcat-v417-versahandler-service-repair-workshop-manual/>

MAINTENANCE SAFETY



WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0807

CORRECT



P-90216

⚠ Never service the Bobcat VersaHANDLER without instructions.




Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

CORRECT




B-16082

WRONG

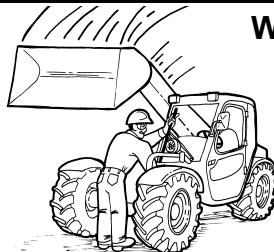

B-16080

WRONG

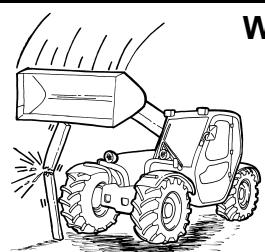

B-16079


⚠ Cleaning and maintenance are required daily.

⚠ Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause boom to drop. Do not go under boom when raised unless supported by an approved boom stop. Replace if damaged.

⚠ Never work on VersaHANDLER with boom up unless boom is held by an approved boom stop. Replace if damaged.

⚠ Never modify equipment or add attachments not approved by Bobcat Company.

WRONG

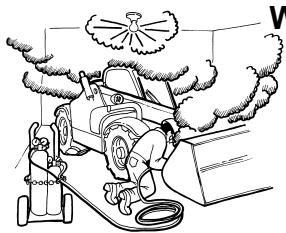

B-16081

⚠ Have good ventilation when welding or grinding painted parts.
⚠ Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.
⚠ Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.

WRONG



B-16078

⚠ Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
⚠ Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.

⚠ Lead-acid batteries produce flammable and explosive gases.
⚠ Keep arcs, sparks, flames and lighted tobacco away from batteries.
⚠ Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts.

MSW12-0409



Bobcat®

CONTENTS

SAFETY & MAINTENANCE	10-01
HYDRAULIC SYSTEM	20-01
HYDROSTATIC SYSTEM	30-01
DRIVE SYSTEM	40-01
MAINFRAME	50-01
ELECTRICAL SYSTEM & ANALYSIS	60-01
ENGINE SERVICE	70-01
HEATING, VENTILATION AND AIR CONDITIONING (HVAC)	80-01
SPECIFICATIONS	SPEC-01
ALPHABETICAL INDEX	INDEX-01



Bobcat®

FOREWORD

FOREWORD	1-7
SAFETY INSTRUCTIONS	1-9
FIRE PREVENTION	1-10
Maintenance	1-10
Operation	1-10
Electrical	1-10
Hydraulic System	1-11
Fueling	1-11
Starting	1-11
Spark Arrestor Exhaust System	1-11
Welding And Grinding	1-11
Fire Extinguishers	1-11
SERIAL NUMBER LOCATION	1-12
VersaHANDLER Serial Number	1-12
Engine Serial Number	1-12
Other Serial Numbers	1-12
DELIVERY REPORT	1-13
BOBCAT VERSAHANDLER IDENTIFICATION	1-14




Bobcat®

FOREWORD


This manual is for the Bobcat VersaHANDLER mechanic. It provides necessary servicing and adjustment procedures for the Bobcat VersaHANDLER and its component parts and systems. Refer to the Operation & Maintenance Manual for operating instructions, starting procedure, daily checks, etc.

A general inspection of the following items must be made after the VersaHANDLER has had service or repair:


1. Check that ROPS/FOPS (including right side window) is in good condition and is not modified.

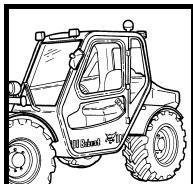


2. Check that ROPS mounting hardware is tightened and is Bobcat approved.

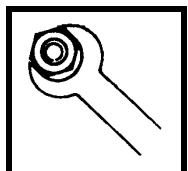

3. The seat belt must be correctly installed, functional and in good condition.

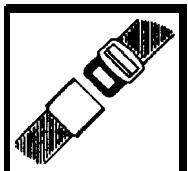


4. Check boom stop, replace if damaged.

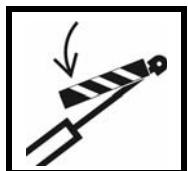


5. Machine signs (decals) must be legible and in the correct location.



6. Joystick control lever and foot pedals must return to neutral.

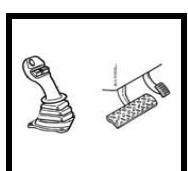


7. Check for correct function of the work lights.

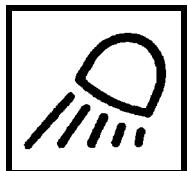


8. The parking brake must function correctly.




9. Enclosure door latches must open and close freely.

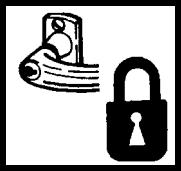


10. Attachment locking pins must function correctly and be in good condition. Bob-Tach wedges and linkages (if equipped) must function correctly and be in good condition.

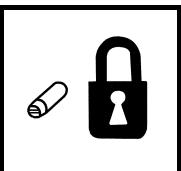


11. Safety treads must be in good condition.

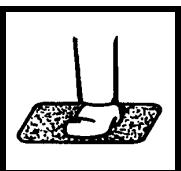

12. Check for correct function of indicator lamps and gauges.

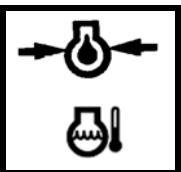

13. Check hydraulic fluid level, engine oil level and fuel supply.

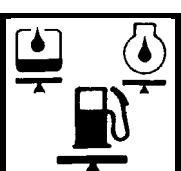

14. Inspect for fuel, oil or hydraulic fluid leaks.




15. Lubricate the VersaHANDLER.



20. Check for any field modification not completed.




16. Check the condition of the battery and cables.

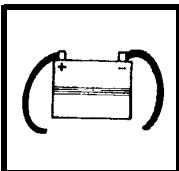


20. Operate the machine and check all functions.




17. Inspect the air cleaner for damage or leaks. Check the condition of the element.

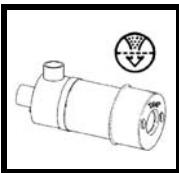

21. Check for correct function of the Lateral Operator Restraint System (LORS) if equipped.

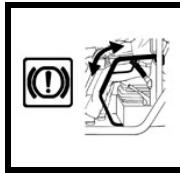


18. Check the electrical charging system.

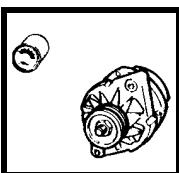


22. Check function or condition of all equipped options and accessories (examples: back-up alarm, fire extinguisher, rotating beacon, front stabilizers, etc.).




19. Check tires for wear and pressure. Use only approved tires.

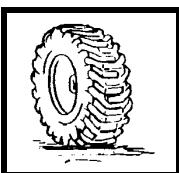

23. Recommend to the owner that all necessary corrections be made before the machine is returned to service.

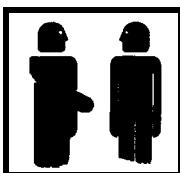

20. Inspect for loose or broken parts or connections.

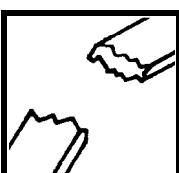

CALIFORNIA PROPOSITION 65 WARNING

Diesel engine exhaust and some of its constituents are known to the state of California to cause cancer, birth defects and other reproductive harm.

SAFETY INSTRUCTIONS



Safety Alert Symbol

**This symbol with a warning statement means:
"Warning, be alert! Your safety is involved!"
Carefully read the message that follows.**



WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903

IMPORTANT

This notice identifies procedures which must be followed to avoid damage to the machine.

I-2019-0284



DANGER

The signal word DANGER on the machine and in the manuals indicates a hazardous situation which, if not avoided, will result in death or serious injury.

D-1002-1107



WARNING

The signal word WARNING on the machine and in the manuals indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

W-2044-1107

The following publications provide information on the safe use and maintenance of the Bobcat machine and attachments:

- The Delivery Report is used to assure that complete instructions have been given to the new owner and that the machine is in safe operating condition.
- The Operation & Maintenance Manual delivered with the machine or attachment contains operating information as well as routine maintenance and service procedures. It is a part of the machine and can be stored in a container provided on the machine. Replacement Operation & Maintenance Manuals can be ordered from your Bobcat dealer.
- Machine signs (decals) instruct on the safe operation and care of your Bobcat machine or attachment. The signs and their locations are shown in the Operation & Maintenance Manual. Replacement signs are available from your Bobcat dealer.
- An Operator's Handbook fastened to the operator cab. It's brief instructions are convenient to the operator. The handbook is available from your dealer in an English edition or one of many other languages. See your Bobcat dealer for more information on translated versions.
- The AEM Safety Manual delivered with the machine gives general safety information.
- The Service Manual and Parts Manual are available from your dealer for use by mechanics to do shop-type service and repair work.
- The VersaHANDLER Operator Training Course is available through your local dealer or at www.training.bobcat.com or www.bobcat.com. This course is intended to provide rules and practices of correct operation of the VersaHANDLER.
- The VersaHANDLER Safety Video is available from your Bobcat dealer or at www.training.bobcat.com or www.bobcat.com.

SI VH-0308 SM

SAFETY INSTRUCTIONS (CONT'D)

The dealer and owner / operator review the recommended uses of the product when delivered. If the owner / operator will be using the machine for a different application(s) he or she must ask the dealer for recommendations on the new use.



Cutting or drilling concrete containing sand or rock containing quartz may result in exposure to silica dust. Do not exceed Permissible Exposure Limits (PEL) to silica dust as determined by OSHA or other job site Rules and Regulations. Use a respirator, water spray or other means to control dust. Silica dust can cause lung disease and is known to the state of California to cause cancer.

Call Before You Dig Dial 811 (USA Only) 1-888-258-0808 (USA & Canada)

When you call, you will be directed to a location in your state / province, or city for information about buried lines (telephone, cable TV, water, sewer, gas, etc.).

SI VH-0308 SM

FIRE PREVENTION



Maintenance

The machine and some attachments have components that are at high temperatures under normal operating conditions. The primary source of high temperatures is the engine and exhaust system. The electrical system, if damaged or incorrectly maintained, can be a source of arcs or sparks.

Flammable debris (leaves, straw, etc.) must be removed regularly. If flammable debris is allowed to accumulate, it can cause a fire hazard. Clean often to avoid this accumulation. Flammable debris in the engine compartment is a potential fire hazard.

The operator's area, engine compartment and engine cooling system must be inspected every day and cleaned if necessary to prevent fire hazards and overheating.

All fuels, most lubricants and some coolants mixtures are flammable. Flammable fluids that are leaking or spilled onto hot surfaces or onto electrical components can cause a fire.

Operation

Do not use the machine where exhaust, arcs, sparks or hot components can contact flammable material, explosive dust or gases.

Electrical



Check all electrical wiring and connections for damage. Keep the battery terminals clean and tight. Repair or replace any damaged part or wires that are loose or frayed.

Battery gas can explode and cause serious injury. Use the procedure in the Operation & Maintenance Manual for connecting the battery and for jump starting. Do not jump start or charge a frozen or damaged battery. Keep any open flames or sparks away from batteries. Do not smoke in battery charging area.

Hydraulic System

Check hydraulic tubes, hoses and fittings for damage and leakage. Never use open flame or bare skin to check for leaks. Hydraulic tubes and hoses must be properly routed and have adequate support and secure clamps. Tighten or replace any parts that show leakage.

Always clean fluid spills. Do not use gasoline or diesel fuel for cleaning parts. Use commercial nonflammable solvents.

Fueling



Stop the engine and let it cool before adding fuel. No smoking! Do not refuel a machine near open flames or sparks. Fill the fuel tank outdoors.

Starting

Do not use ether or starting fluids on any engine that has glow plugs. These starting aids can cause explosion and injure you or bystanders.

Use the procedure in the Operation & Maintenance Manual for connecting the battery and for jump starting.

Spark Arrestor Exhaust System

The spark arrestor exhaust system is designed to control the emission of hot particles from the engine and exhaust system, but the muffler and the exhaust gases are still hot.

Check the spark arrestor exhaust system regularly to make sure it is maintained and working properly. Use the procedure in the Operation & Maintenance Manual for cleaning the spark arrestor muffler (if equipped).

FIRE PREVENTION (CONT'D)


Welding And Grinding

Always clean the machine and attachment, disconnect the battery, and disconnect the wiring from the Bobcat controllers before welding. Cover rubber hoses, battery and all other flammable parts. Keep a fire extinguisher near the machine when welding.

Have good ventilation when grinding or welding painted parts. Wear dust mask when grinding painted parts. Toxic dust or gas can be produced.

Dust generated from repairing nonmetallic parts such as hoods, fenders or covers can be flammable or explosive. Repair such components in a well ventilated area away from open flames or sparks.

Fire Extinguishers

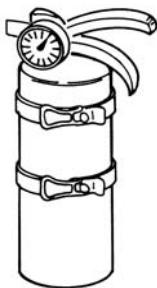


Know where fire extinguishers and first aid kits are located and how to use them. Inspect the fire extinguisher and service the fire extinguisher regularly. Obey the recommendations on the instructions plate.

SERIAL NUMBER LOCATION

Always use the serial number of the VersaHANDLER when requesting service information or when ordering parts. Early or later models (identification made by serial number) may use different parts, or it may be necessary to use a different procedure in doing a specific service operation.


VersaHANDLER Serial Number

Figure 1

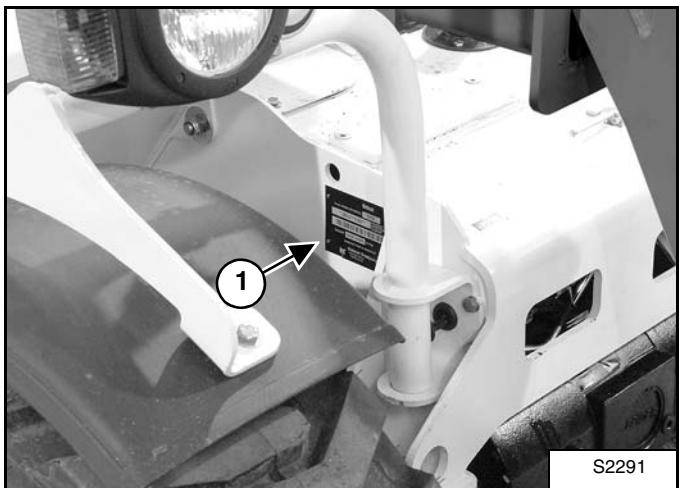

The VersaHANDLER serial number plate is located on the right front side of the chassis (Item 1) [Figure 1].

Figure 2

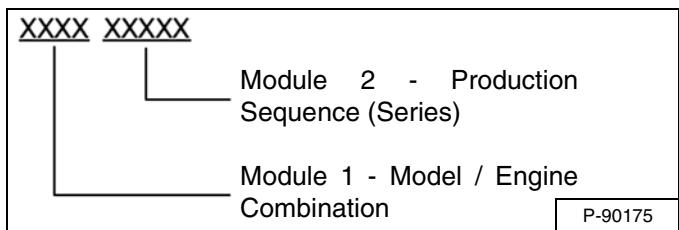


Explanation of VersaHANDLER Serial Number [Figure 2]:

1. The four digit Model / Engine Combination Module number identifies the model number and engine combination.
2. The five digit Production Sequence Number identifies the order which the VersaHANDLER is produced.

Engine Serial Number

Figure 3

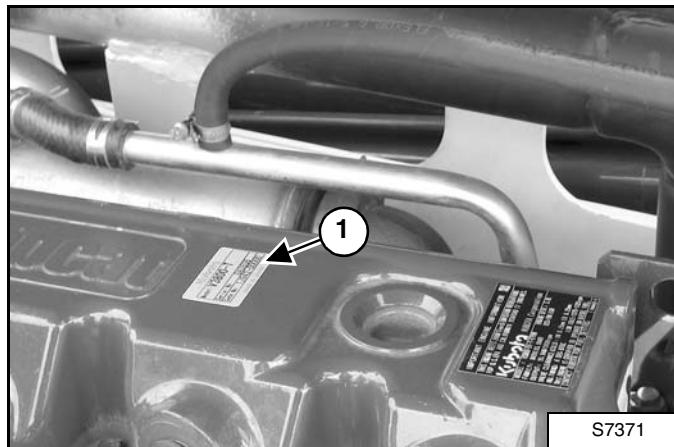


The engine serial number can be found on top of the valve cover (Item 1) [Figure 3]. Always use the full number when ordering replacement parts.

Other Serial Numbers

Other components may also have serial numbers and an identification plate. Always use these serial numbers when ordering parts.

DELIVERY REPORT


Figure 4

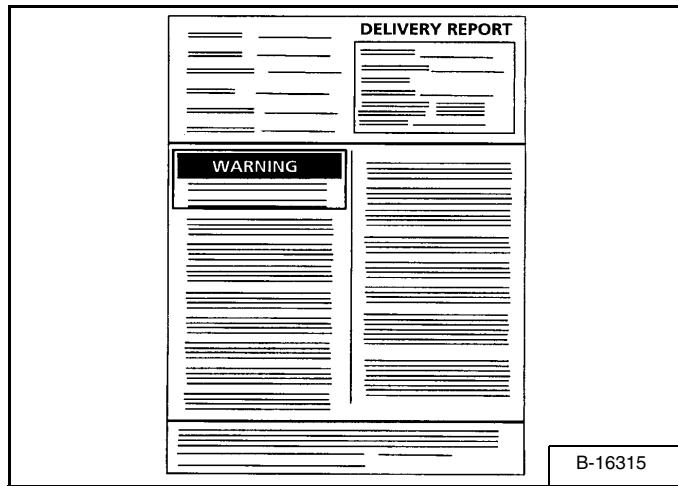

The diagram shows a 'DELIVERY REPORT' form. At the top left, there is a section with several horizontal lines for signatures or initials. To its right is a box labeled 'DELIVERY REPORT' containing more horizontal lines. Below these sections is a box labeled 'WARNING' containing several horizontal lines. To the right of the 'WARNING' box is a large area with many horizontal lines for signatures or initials. At the bottom right of the form is a small box containing the code 'B-16315'.

The Delivery Report must be filled out by the dealer and signed by the owner or operator when the VersaHANDLER is delivered. An explanation of the form must be given to the owner. Make sure it is filled out completely [Figure 4].

VERSAHANDLER IDENTIFICATION

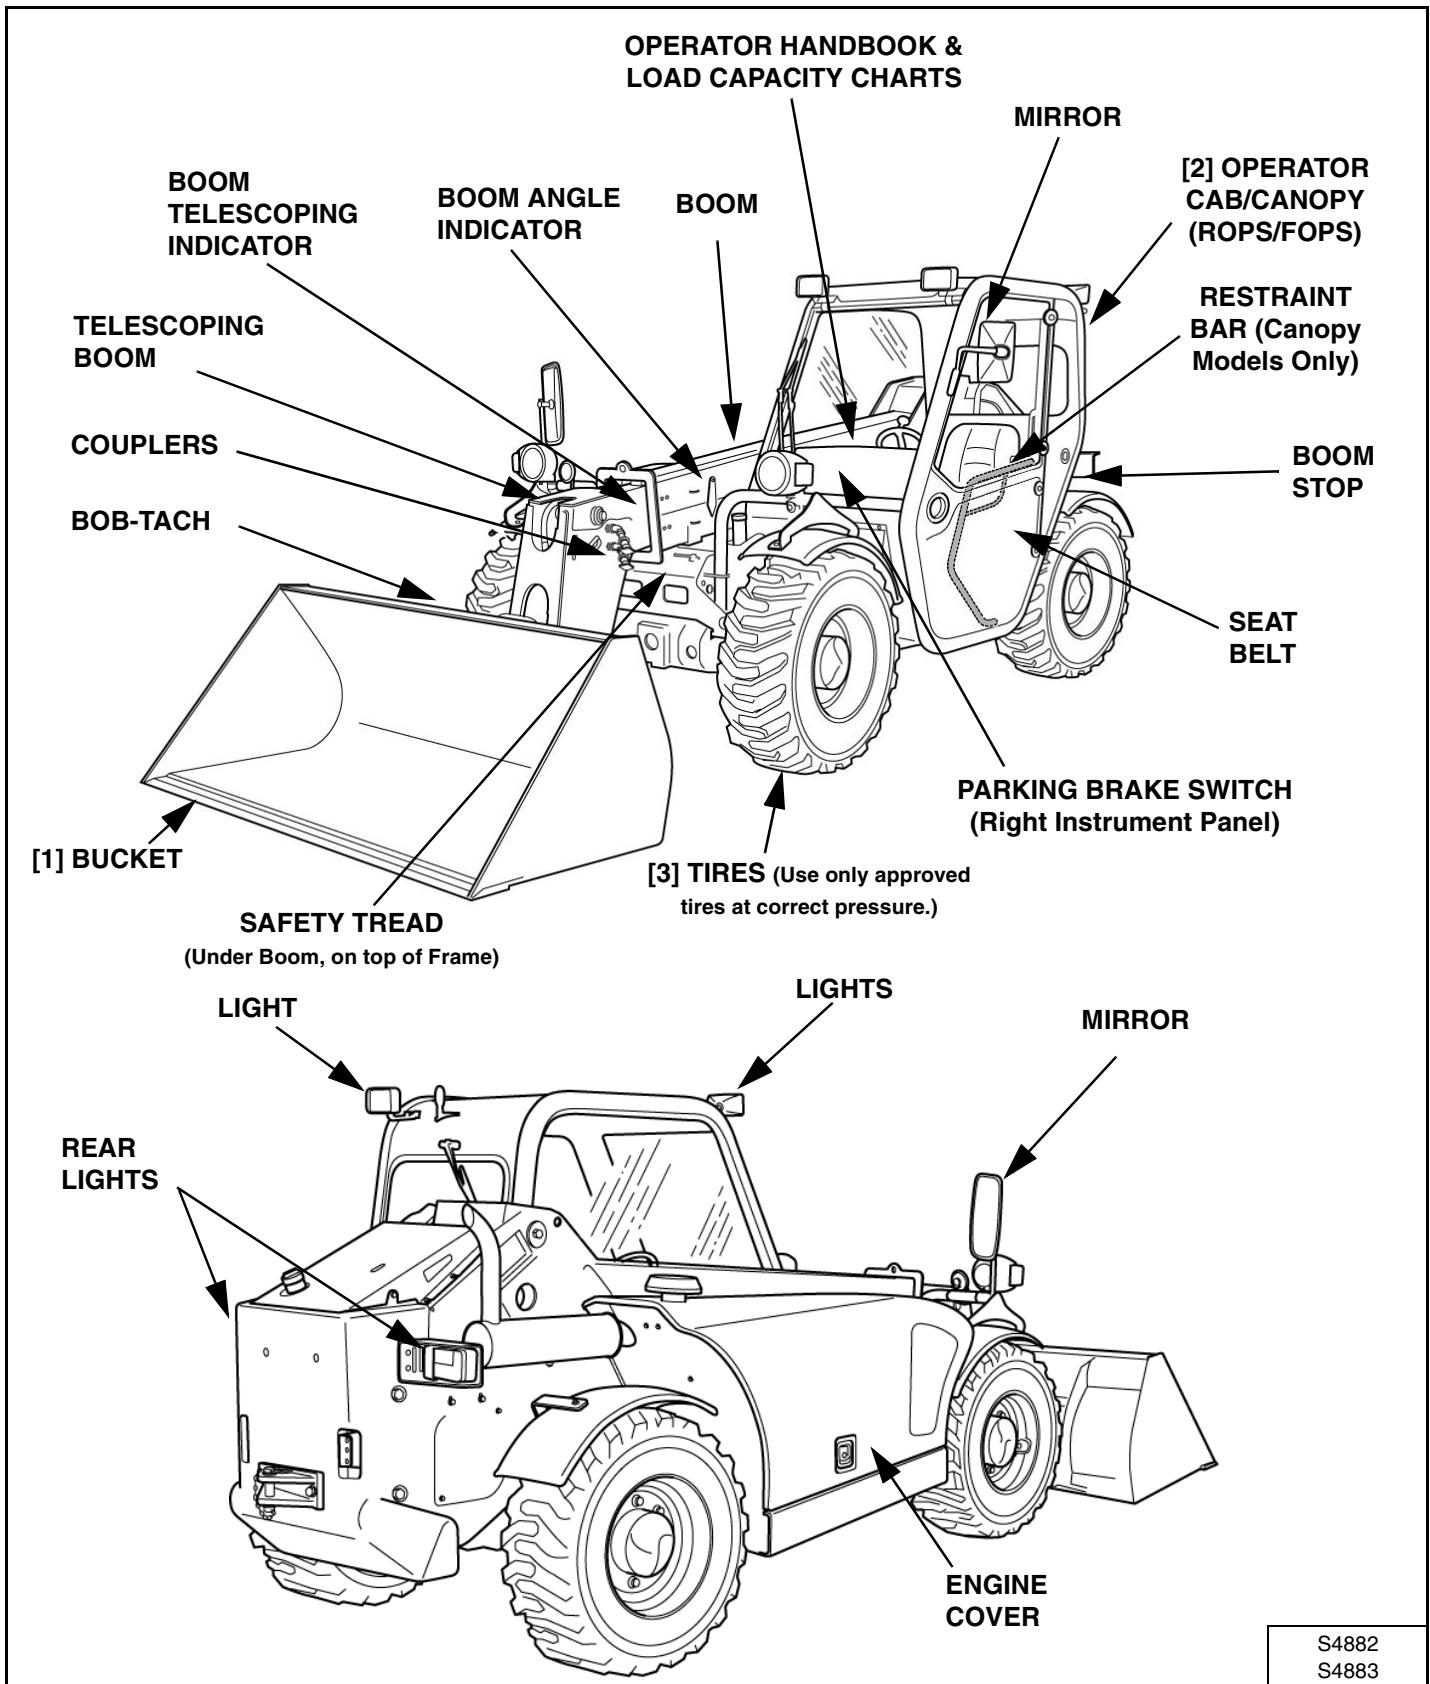

- [1] BUCKETS - Several different buckets and other attachments are available for the Bobcat loader.
- [2] ROPS, FOPS - Roll Over Protective Structure, per ISO 3471, and Falling Object Protective Structure per ISO 3449, Level I.
- [3] TIRES - Standard tires are shown. Several different tire styles and sizes are available for the Bobcat loader.

S4882
S4883



Bobcat®

SAFETY & MAINTENANCE

LIFTING AND BLOCKING THE VERSAHANDLER	10-10-1
Procedure	10-10-1
OPERATOR CAB / CANOPY	10-20-1
Cab Door	10-20-1
Cab Door Window	10-20-2
TRANSPORTING THE VERSAHANDLER ON A TRAILER	10-30-1
Loading And Unloading	10-30-1
Fastening	10-30-1
TOWING THE VERSAHANDLER	10-40-1
Releasing The Brake Discs	10-40-1
Towing	10-40-2
Engaging The Brake Discs	10-40-2
SERVICE SCHEDULE	10-50-1
Chart	10-50-1
AIR CLEANER SERVICE	10-60-1
Replacing The Filter Element	10-60-1
ENGINE COOLING SYSTEM	10-70-1
Cleaning	10-70-1
Removing And Replacing The Coolant	10-70-2
Checking Level	10-70-3
FUEL SYSTEM	10-80-1
Fuel Specifications	10-80-1
Filling The Fuel Tank	10-80-1
Fuel Filter	10-80-2
ENGINE LUBRICATION SYSTEM	10-90-1
Checking Engine Oil	10-90-1
Oil Chart	10-90-1
Replacing Oil And Filter	10-90-1
HYDRAULIC / HYDROSTATIC SYSTEM	10-100-1
Checking And Adding Fluid	10-100-1
Replacing The Hydraulic / Hydrostatic Filters	10-100-1
Replacing Hydraulic Fluid	10-100-2

AXLES (FRONT AND REAR)	10-110-1
Checking Oil Level (Planetary Carrier)	10-110-1
Draining Oil (Planetary Carrier)	10-110-1
Checking Oil Level (Rear Differential)	10-110-2
Draining Oil (Rear Differential)	10-110-2
Checking Oil Level (Front Differential)	10-110-3
Draining Oil (Front Differential)	10-110-3
LUBRICATION	10-120-1
Procedure	10-120-1
TIRE MAINTENANCE	10-130-1
Wheel Nuts	10-130-1
Tire Mounting	10-130-1
Tire Rotation	10-130-1
Tire Pressure	10-130-1
SPARK ARRESTOR MUFFLER	10-140-1
Procedure	10-140-1
APPROVED BOOM STOP	10-150-1
Installing	10-150-1
Removing	10-150-1
ENGINE COVER	10-160-1
Opening And Closing The Engine Cover	10-160-1
LATERAL OPERATOR RESTRAINT SYSTEM (LORS)	10-170-1
System Inspection	10-170-1
System Maintenance	10-170-1
REMOTE START	10-180-1
Connecting to the VersaHANDLER	10-180-1
Remote Start Procedure (For Tools MEL1563 And MEL1565)	10-180-3
Remote Start Procedure (For Tool Kit P/N 6689779)	10-180-4
VERSAHANDLER STORAGE AND RETURN TO SERVICE	10-190-1
Storage	10-190-1
Return To Service	10-190-1
STOPPING THE ENGINE AND LEAVING THE VERSAHANDLER	10-200-1
Procedure	10-200-1
EMERGENCY EXIT	10-210-1
Rear Window	10-210-1

LIFTING AND BLOCKING THE VERSAHANDLER

Procedure



Put jackstands under the front axles and rear corners of the frame before running the engine for service. Failure to use jackstands can allow the machine to fall or move and cause injury or death.

W-2017-0286

Figure 10-10-1



Always park the machine on a level surface.

STOP the engine. Put the floor jack under the center of the front axle. Lift the VersaHANDLER and install jackstands [Figure 10-10-1].

Figure 10-10-2




Put the floor jack under the center of the rear axle. Lift the VersaHANDLER and install jackstands [Figure 10-10-2].



Bobcat®

OPERATOR CAB / CANOPY

Figure 10-20-1

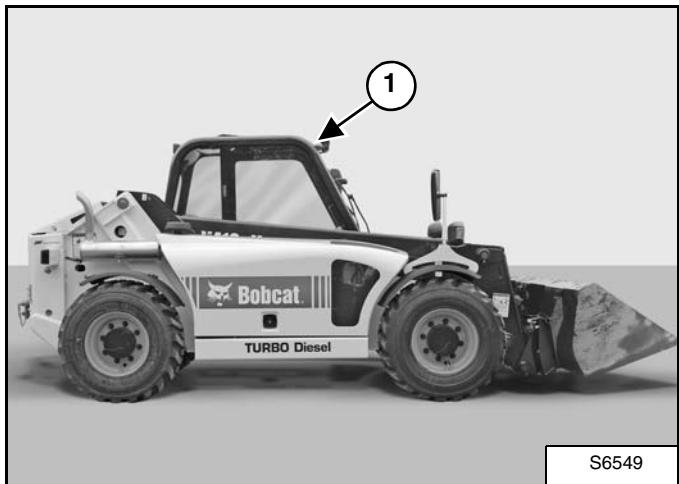

The VersaHANDLER has an operator cab or canopy (ROPS and FOPS) (Item 1) [Figure 10-20-1] to protect the operator from rollover and falling objects. Check with your dealer if the operator cab or canopy has been damaged. Never operate without right window. The seat belt must be worn for roll over protection.

ROPS / FOPS - Roll Over Protective Structure per SAE J1040 and ISO 3471, and Falling Object Protective Structure per SAE J1043 and ISO 3449.




WARNING

Never modify operator cab or canopy by welding, grinding, drilling holes or adding attachments unless instructed to do so by Bobcat. Do not operate without right window. Changes to the cab or canopy can cause loss of operator protection from rollover and falling objects, and result in serious injury or death.

W-2396-1202


Cab Door

Figure 10-20-2

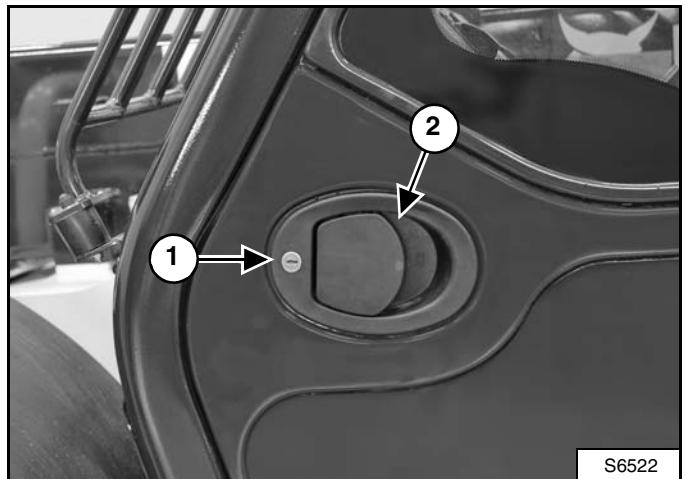

The cab door can be locked (Item 1) [Figure 10-20-2] with the start key.

Figure 10-20-3

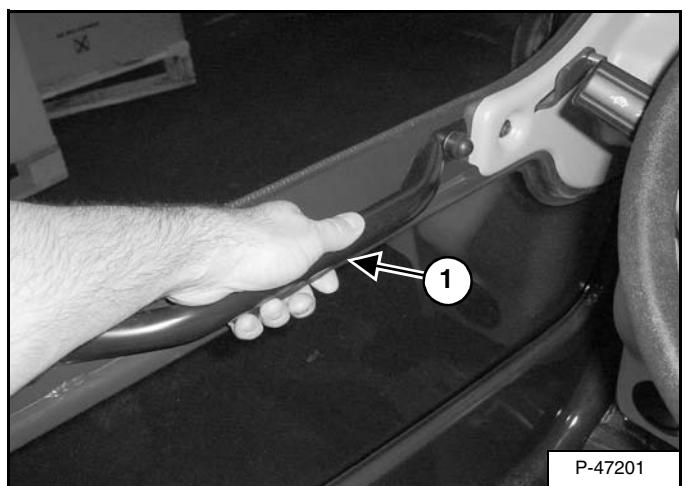


The cab door can be opened from the outside of the cab using the latch (Item 2) [Figure 10-20-2] and from the inside of the cab by squeezing the latch (Item 1) [Figure 10-20-3] (as shown).

OPERATOR CAB / CANOPY (CONT'D)


Cab Door Window

Figure 10-20-4

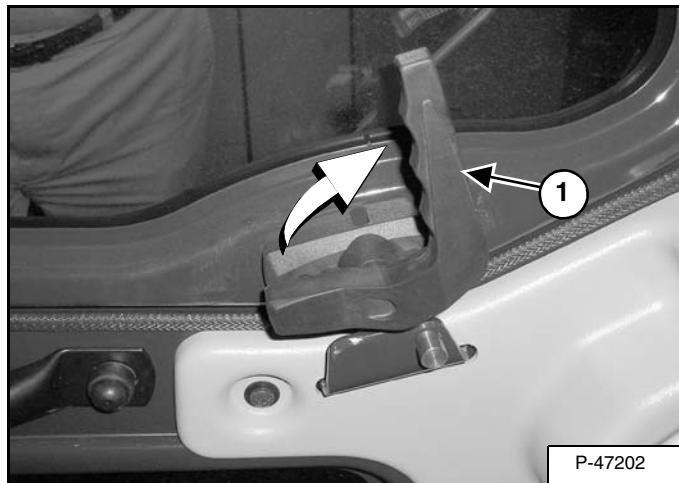

Turn the handle (Item 1) [Figure 10-20-4] (as shown). Push the window open fully until it latches against the cab.

Figure 10-20-5

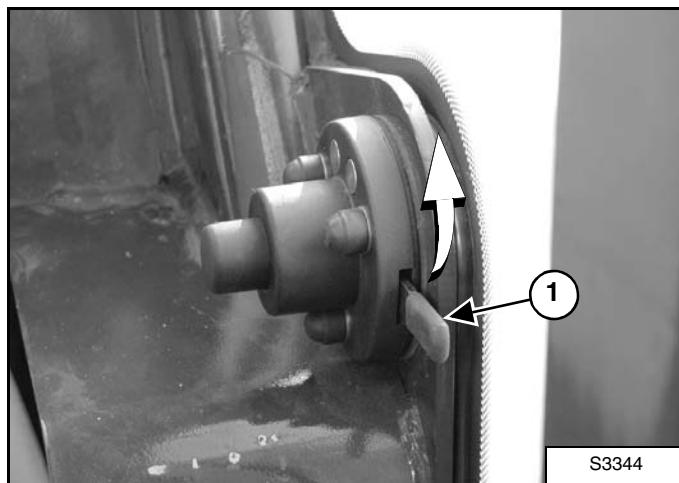

Pull up the lever (Item 1) [Figure 10-20-5] inside the cab to disengage the latch and close the window.

TRANSPORTING THE VERSAHANDLER ON A TRAILER

Loading And Unloading

Figure 10-30-1




The telescopic handler must be loaded backward on the trailer.

The rear of the trailer must be blocked or supported (Item 1) [Figure 10-30-1] when loading or unloading the telescopic handler to prevent the front end of the trailer from raising up.

Be sure the transport and towing vehicles are of adequate size and capacity. For the weight of telescopic handler, see (See Performance on Page SPEC-10-2.)

Fastening

Figure 10-30-2

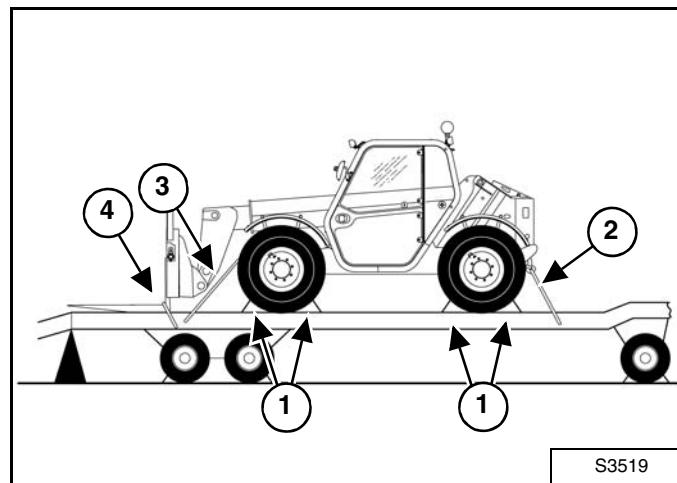

Fasten the telescopic handler to the transport vehicle to prevent it from moving during sudden stops or when going up or down slopes.

- Block the wheels (Item 1) [Figure 10-30-2].
- Fasten the machine frame to the transport vehicle (Items 2 and 3) [Figure 10-30-2].
- Attach the forks or bucket attachment to the transport vehicle (Item 4) [Figure 10-30-2].



WARNING

AVOID SERIOUS INJURY OR DEATH

Adequately designed ramps of sufficient strength are needed to support the weight of the machine when loading onto a transport vehicle. Wood ramps can break and cause personal injury.

W-2058-0807



Bobcat®

TOWING THE VERSAHANDLER

The VersaHANDLER can be towed a short distance such as removing it from mud or loading it onto a transport vehicle.

WARNING

UNEXPECTED MACHINE MOVEMENT CAN CAUSE SERIOUS INJURY OR DEATH

- Block wheels to prevent roll away before adjusting screws to bypass the park brake system.
- Return adjustment screws to the operating position before operating the machine.

W-2808-0909


Block the wheels to prevent the machine from rolling.

Releasing The Brake Discs

The brakes are engaged by spring pressure and released by hydraulic pressure. The parking brake must be released manually before towing (if the engine can not be started to release the brakes or there is no hydraulic pressure). Only the front axle has brakes.

The following procedure describes how to release the brakes:


Figure 10-40-1

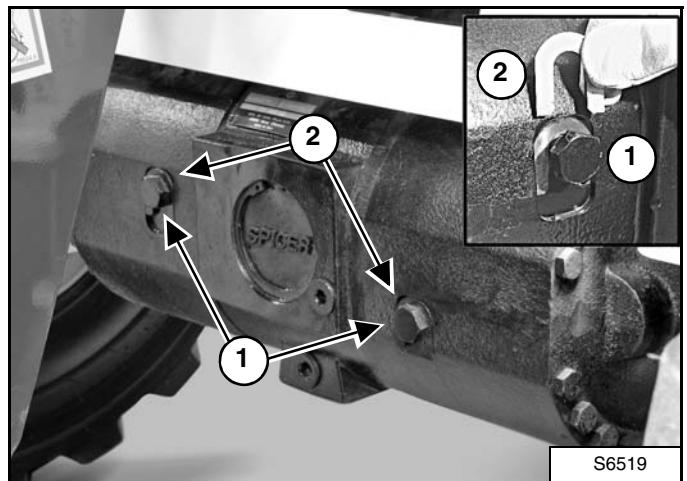

Loosen the four bolts (Item 1) until the slotted spacers (Item 2) [Figure 10-40-1] can be removed from under the bolt heads (the bolts and spacers are located on both the front and rear side of the front axle).

Remove the spacers (Item 2) [Figure 10-40-1] and save for reuse.

Figure 10-40-2

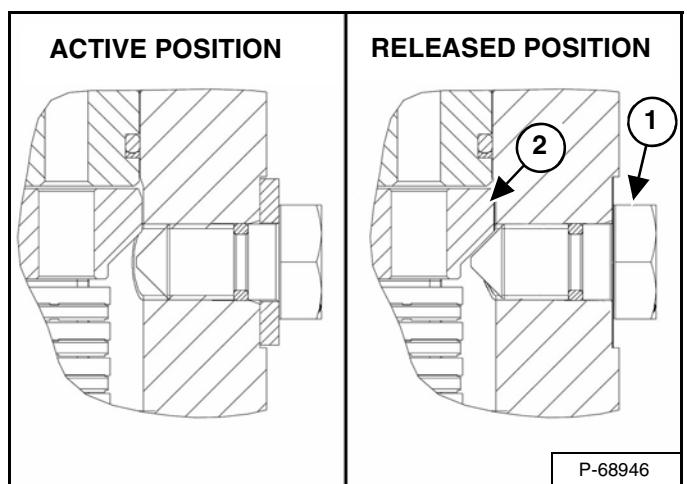


After removing the spacers, evenly tighten the front and rear bolts (Item 1) to hold the parking brake piston (Item 2) [Figure 10-40-2] in the released position.

TOWING THE VERSAHANDLER (CONT'D)

Towing

Figure 10-40-3

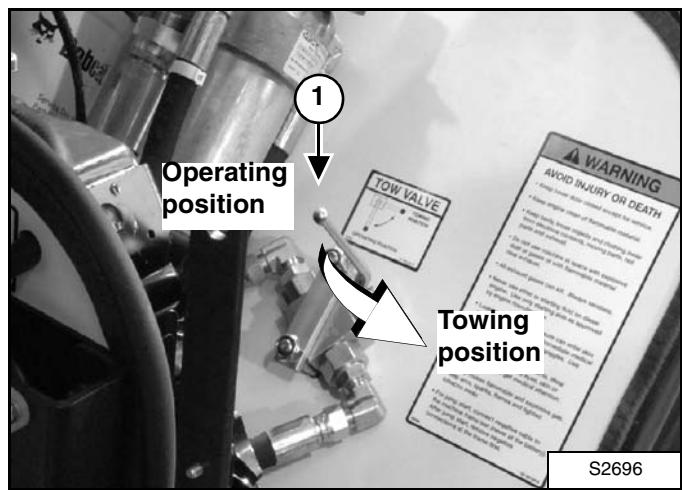

Raise the engine cover.

Turn the tow valve (Item 1) [Figure 10-40-3] counterclockwise 90 degrees to TOWING POSITION.

Tow the VersaHANDLER at a slow speed.

NOTE: The vehicle will not be able to brake until the four bolts (Item 1) [Figure 10-40-3] & [Figure 10-40-3] are returned to their original position.

⚠️ **WARNING**

UNEXPECTED MACHINE MOVEMENT CAN CAUSE SERIOUS INJURY OR DEATH

- Block wheels to prevent roll away before adjusting screws to bypass the park brake system.
 - Return adjustment screws to the operating position before operating the machine.

W-2808-0909


Block the wheels to prevent the machine from rolling.

After towing is completed, turn the tow valve (Item 1) [Figure 10-40-3] clockwise 90 degrees to the OPERATING POSITION.

NOTE: If the tow valve is not returned to the operating position, the machine will not be able to be driven forward or backward.


Engaging The Brake Discs

Figure 10-40-4

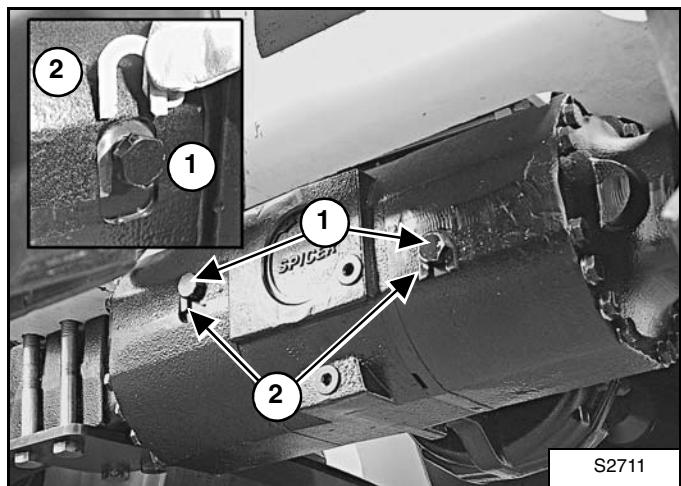

Loosen the four bolts (Item 1) until the spacers (Item 2) [Figure 10-40-4] can be installed under the bolt heads (the bolts and washers are located on both the front and rear side of front axle).

Figure 10-40-5

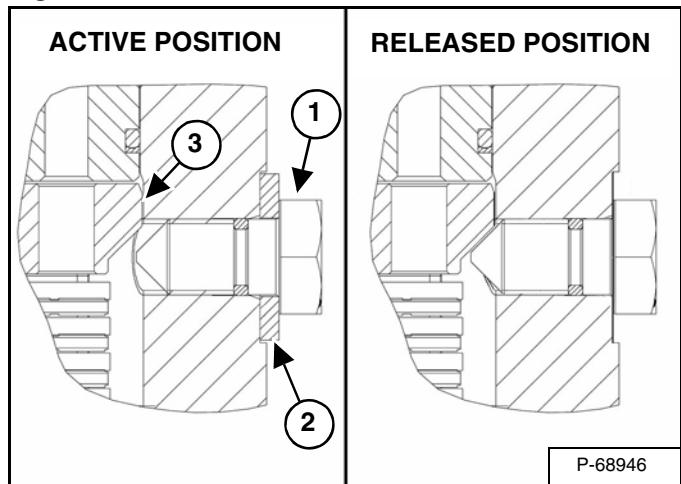

Evenly tighten the front and rear bolts (Item 1) to hold the spacers (Item 2) [Figure 10-40-4] & [Figure 10-40-5].

Tighten the bolts to 70-85 ft.-lb. (95-115 N•m) torque.

This will allow the parking brake piston (Item 3) **[Figure 10-40-5]** to be active again.

SERVICE SCHEDULE

Chart

Maintenance work must be done at regular intervals. Failure to do so will result in excessive wear and early failures. The service schedule is a guide for correct maintenance of the Bobcat VersaHANDLER.



WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903

ITEM	SERVICE REQUIRED	HOURS					
		10	50	100		[5] 250	[6] 500
Engine Oil	Check the oil level and add as needed. Do not overfill.						
Hydraulic Fluid	Check the fluid level and add as needed.						
Safety Signs, Safety Tread and Mirrors	Check for damaged signs (decals), safety treads, load charts and mirrors. Replace if damaged or missing.						
Fuel Filter	Remove the trapped water.						
Tires	Check for damaged tires and correct air pressure. Inflate to MAXIMUM pressure shown on sidewall of the tire.						
Seat Belt & Restraint Bar (LORS) (If Equipped)	Check the condition of the seat belt. Check the restraint bar (If equipped). Clean dirt and debris from moving parts.						
Brakes and Controls	Check for function. Service as necessary.						
Gauges, Horn and Backup Alarm	Check for function. Repair or replace as necessary.						
General	Check for loose or broken parts, damaged cab, seat belt and instrument operations. Check for installation of right hand cab window. Clean mirrors and windows. Repair or replace as needed.						
Engine Cooling System	Clean debris from oil cooler, radiator and air conditioner condenser. Check coolant level COLD in reservoir and add 50% ethylene glycol premixed with 50% water as needed. Check cooling system for leaks.						
Engine Air Filter	Check condition indicator. Service only when required. Do not use compressed air to clean elements. Empty dust cup.						
Engine Air Intake System	Check for leaks and damaged components.						
Bob-Tach Pivot, Wedges, Cylinder and Link Pin Pivots	Lubricate with multi-purpose lithium based grease.						
Axle Steering Pivot Points	Lubricate with multi-purpose lithium based grease.						
Rear Axle Pivot	Lubricate with multi-purpose lithium based grease.						
Boom and Cylinder Pivot	Lubricate with multi-purpose lithium based grease.						
Hydraulic Hoses and Tubelines	Check condition of hoses, tubelines and connections. Repair or replace as needed						
Universal Joints and Slip Yoke on Drive Shaft	Lubricate with multi-purpose lithium based grease.						
Cab Filter	Clean dust out of the cab filter. Replace every 500 hours.						
Battery	Check electrolyte level. Add distilled water as needed.						
Wheel Nuts	Check wheel nut torque. Tighten as needed [265 ft.-lb. (360 N•m)].	[1]					
Fuel Filter	Replace the fuel filter element. Use the genuine Bobcat Filter.	[2]					
Engine / Hydro. Drive Belt	Check for wear or damage. Check tension and adjust or replace as needed.						
Alt. & Air Cond. Belt (If Equipped)	Check belt tension and adjust as needed.						
LORS or door hinges (If Equipped)	Lubricate restraint bar spring pivot or door hinges with multi-purpose lithium based grease.						
Hydraulic/Hydrostatic Oil Filters	Replace the hydraulic/hydrostatic oil filter elements. Use a genuine Bobcat filter.	[2]					
Engine Oil and Filter	Replace the engine oil and filter. Use a genuine Bobcat filter.	[2]					
Cab Filter	Replace the cab filter.						
Axle Fluids	Check all fluid levels.				[3]		
Front & Rear Axle Fluid	Replace the axle oil in the central casings.				[3]		[4]
Gear Box Fluid	Replace the gear box (drive box) fluid.				[3]		[4]
Wheel Gear Fluid	Replace the wheel gear fluid.				[3]		[4]
Hydraulic Fluid	Replace the hydraulic fluid.						
Telescopic Boom Wear Blocks	Check for wear and adjust as needed. Replace if necessary.						
Pivot Pins and Bushings	Check for wear on the pivot pins and bushings.						
Breathers	Clean gear box, axle housing, and hydraulic tank breathers. Replace as needed.						
Engine Coolant	Check freeze protection of antifreeze -34° F (-30° C). Flush cooling system and replace with premixed coolant						Every 2 years

[1] Check wheel nut torque every 8 hours for the first 24 hours.

[2] Perform service first time at 50 hours, then as indicated in chart.

[3] Perform fluid level check first time at 100 hours, then as indicated in chart.

[4] Replace fluid first at 500 hours, then as indicated in chart.

[5] or every 6 months.

[6] or every 12 months.

Product: 2010 Bobcat V417 VersaHANDLER Service Repair Workshop Manual
Full Download: <https://www.arepairmanual.com/downloads/2010-bobcat-v417-versahandler-service-repair-workshop-manual/>



Sample of manual. Download All 868 pages at:
<https://www.arepairmanual.com/downloads/2010-bobcat-v417-versahandler-service-repair-workshop-manual/>