

2005 Acura RL

Product: 2005-2008 Acura RL Car Service Repair Workshop Manual

2005-06 ACURA RL

Full Download: <https://www.arespairmanual.com/downloads/2005-2008-acura-rl-c>[ar-service-repair-workshop-manual/](https://www.arespairmanual.com/downloads/2005-2008-acura-rl-c)**2005-06 ACURA****RL****BUZZERS, RELAYS & TIMERS****BUZZERS, RELAYS & TIMERS LOCATION**

Component	Location
Accessory Power Socket Relay (20)	In driver's under-dash fuse/relay box. See Fig. 193 .
A/C Compressor Clutch Relay (2)	In under-hood fuse/relay box. See Fig. 191 .
ACC Relay (2)	In auxiliary under-dash relay box. See Fig. 196 .
A/F Sensor Relay (21)	In driver's under-dash fuse/relay box. See Fig. 193 .
Blower Motor Relay (1)	In under-hood fuse/relay box. See Fig. 191 .
DRL Relay (1)	In auxiliary under-hood relay box. See Fig. 192 .
Fog Light Relay (14)	In under-hood fuse/relay box. See Fig. 191 .
Fuel Fill Door Opener Relay (5)	In passenger's under-dash fuse/relay box. See Fig. 194 .
HVAC Control Motor Relay	Behind right side of dash. See Fig. 92 .
Ignition Coil Relay (24)	In driver's under-dash fuse/relay box. See Fig. 193 .
IG2 Relay (1)	In auxiliary under-dash relay box. See Fig. 196 .
Keyless Answer Back Buzzer	Behind middle of rear bumper. See Fig. 168 .
Optional Relay (12)	In passenger's under-dash fuse/relay box. See Fig. 194 .
PGM-FI Main Relay 1 (22)	In driver's under-dash fuse/relay box. See Fig. 193 .
PGM-FI Main Relay 2 (25)	In driver's under-dash fuse/relay box. See Fig. 193 .
Radiator Fan Control (RFC) Unit Relay (2)	In auxiliary under-hood relay box. See Fig. 192 .
Rear Window Defogger Relay (3)	In under-hood fuse/relay box. See Fig. 191 .
Seat Heater Relay (4)	In passenger's under-dash fuse/relay box. See Fig. 194 .
SH-AWD Relay	Behind rear seat. See Fig. 150 .
Starter Cut Relay 1 (1) (2005)	In auxiliary under-dash relay holder. See Fig. 195 .
Starter Cut Relay 1 (1) (2006)	In auxiliary under-dash relay holder. See Fig. 203 .
Starter Cut Relay 2 (19)	In driver's under-dash fuse/relay box. See Fig. 193 .
Throttle Actuator Control Module Relay (13)	In passenger's under-dash fuse/relay box. See Fig. 194 .
Turn Signal/Hazard Relay 2 (Sounder)	Under left side of dash. See Fig. 43 .
Turn Signal/Hazard Relay (4)	In driver's under-dash fuse/relay box. See Fig. 193 .

Sample manual. Download All pages at:

<https://www.arespairmanual.com/downloads/2005-2008-acura-rl-car-service-repair-workshop-manual/>

2005 Acura RL

Product: 2005-2008 Acura RL Car Service Repair Workshop Manual

Full Download: <https://www.arepairmanual.com/downloads/2005-2008-acura-rl-car-service-repair-workshop-manual/>

2005-06 ACURA RL
ar-service-repair-workshop-manual/

Windshield Wiper Motor Relay (15)

In under-hood fuse/relay box. See **Fig. 191** .

CIRCUIT PROTECTION DEVICES

CIRCUIT PROTECTION DEVICES LOCATION

Component	Location
Auxiliary Under-Dash Fuse Holder	Under left side of dash. See Fig. 65 .
Auxiliary Under-Dash Relay Box	Under left side of dash. See Fig. 64 .
Auxiliary Under-Dash Relay Holder	Under left side of dash. See Fig. 65 .
Auxiliary Under-Hood Relay Box	Left rear of engine compartment. See Fig. 35 .
Battery Terminal Fuse Box (+)	In battery terminal fuse box. See Fig. 33 .
Driver's Under-Dash Fuse/Relay Box	Behind left kick panel. See Fig. 61 .
Passenger's Under-Dash Fuse/Relay Box	Behind right kick panel. See Fig. 97 .
Under-Hood Fuse/Relay Box	Left rear of engine compartment. See Fig. 31 .

CONTROL UNITS

CONTROL UNITS LOCATION

Component	Location
ACC Control Unit (2006)	Behind right side of dash. See Fig. 201 .
Active Noise Control Unit	Right side of trunk. See Fig. 165 .
AcuraLink Control Unit (XM Receiver)	On left side of trunk. See Fig. 157 .
Adaptive Front Lighting Control Unit	Under left side of dash. See Fig. 66 .
Driver's MPCS Unit	In driver's door. See Fig. 134 .
DRL Control Unit	Under left side of dash. See Fig. 67 .
ECPS Control Unit	Under left side of dash. See Fig. 66 .
E-Tensioner Unit (2006)	Under middle of dash. See Fig. 199 .
Front Passenger's MPCS Unit	In front passenger's door. See Fig. 135 .
Fuel Pump Control Module	In left "C" pillar. See Fig. 149 .
Hands FreeLink Control Unit	Behind right kick panel. See Fig. 99 .
Immobilizer Control Unit-Receiver	On right side of steering column. See Fig. 49 .
Imoes Unit	Under right side of dash. See Fig. 90 .
Keyless Access Control Unit	Under left side of dash. See Fig. 60 .
Keyless Access RF Unit 1	Behind middle of dash. See Fig. 75 .
Keyless Access RF Unit 2	Middle of rear shelf. See Fig. 161 .
Main Antenna Module	In right "C" pillar. See Fig. 142 .
Moonroof Control Unit	Rear of roof. See Fig. 141 .
Navigation Unit	In trunk, below left side of package tray. See Fig. 158 .
OnStar Control Unit	Behind rear seat. See Fig. 151 .
OPDS Unit	In front passenger's seat back. See Fig. 110 .
PCM	Under middle of dash. See Fig. 82 .
Power Rear Window Sunshade Control Unit	Middle of rear shelf. See Fig. 160 .
Power Seat Control Unit	Under driver's seat. See Fig. 106 .

2005 Acura RL

2005-06 ACURA RL

Power Tilt/Telescopic Steering Control Unit	Under left side of dash. See Fig. 42 .
RFC Unit	Front middle of engine compartment. See Fig. 29 .
SH-AWD Control Unit	Behind rear seat. See Fig. 154 .
SRS Unit	Under lower middle of dash. See Fig. 80 .
Sub-Antenna Module	In left "C" pillar. See Fig. 146 .
Throttle Actuator Control Module	Behind right kick panel. See Fig. 100 .
VSA Modulator-Control Unit	On right side of engine compartment. See Fig. 2 .

MOTORS**MOTORS LOCATION**

Component	Location
Blower Motor	Under right side of dash. See Fig. 94 .
Center/Left/Right Rear Headrest Actuator	Behind respective rear seat headrest. See Fig. 117 .
Driver's Air Mix Control Motor	Below left side of dash. See Fig. 69 .
Driver's Cool Vent Control Motor	Under left side of dash. See Fig. 68 .
Driver's Lumbar Support Motor Connector	Under right side of driver's seat. See Fig. 103 .
Driver's Power Seat Slide Motor	Under driver's seat. See Fig. 106 .
Driver's Power Window Motor	Center of driver's door. See Fig. 132 .
Front Passenger's Air Mix Control Motor	Behind right side of dash. See Fig. 89 .
Front Passenger's Cool Vent Control Motor	Behind right side of dash. See Fig. 89 .
Front Passenger's Lumbar Support Motor Connector	Under front passenger's seat. See Fig. 111 .
Front Passenger's Power Seat Slide Motor	Under front passenger's seat. See Fig. 114 .
Front Passenger's Power Window Motor	Center of front passenger's door. See Fig. 132 .
Fuel Tank Unit	Under rear seat. See Fig. 122 .
Left Power Mirror Connector	In driver's door. See Fig. 129 .
Left Rear Power Window Motor	Center of left rear door. See Fig. 137 .
Left/Right Adaptive Front Lighting Gear Box	Behind respective headlight assembly. See Fig. 27 .
Left/Right Headlight Leveling Motor	Behind respective headlight assembly. See Fig. 28 .
Mode Control Motor	Under left side of dash. See Fig. 67 .
Rear Vent Control Motor	Under middle of dash. See Fig. 83 .
Recirculation Control Motor	Behind glove box. See Fig. 92 .
Right Rear Power Window Motor	Center of right rear door. See Fig. 137 .
Starter	Left side of engine. See Fig. 23 .
Windshield Washer Motor	In bottom of washer reservoir. See Fig. 169 .
Windshield Wiper Motor	Left rear of engine compartment, under cowl cover. See Fig. 38 .

SENDING UNITS & SENSORS**SENDING UNITS & SENSORS LOCATION**

2005 Acura RL

2005-06 ACURA RL

Component	Location
A/C Pressure Sensor	Right side of engine compartment. See Fig. 4 .
APP Sensor	Under left side of dash. See Fig. 65 .
ATF Transmission Sensor	On transmission housing. See Fig. 182 .
Automatic Lighting Sensor/Sunlight Sensor	Front center of dash. See Fig. 71 .
CKP Sensor 1 & 2	Right side of engine. See Fig. 175 .
CMP Sensor	Right side of engine. See Fig. 8 .
Differential Oil Temperature Sensor Connector	On rear differential. See Fig. 189 .
Driver's Door Outer Handle Light/Touch Sensor Connector	Center of driver's door. See Fig. 133 .
Driver's Power Seat Front Up-Down Motor/Position Sensor Connector	Right side of driver's seat. See Fig. 102 .
Driver's Power Seat Rear Up-Down Motor/Position Sensor Connector	Left side of driver's seat. See Fig. 101 .
Driver's Power Seat Recline Motor/Position Sensor Connector	Under driver's seat. See Fig. 103 .
Driver's Power Seat Slide Position Sensor	Under driver's seat. See Fig. 107 .
Driver's Seat Position Sensor	Under front of driver's seat. See Fig. 109 .
Driver's Vent Air Temperature Sensor	Behind left side of gauge control module. See Fig. 51 .
ECT Sensor 1	On top left side of engine. See Fig. 20 .
ECT Sensor 2	Left side of engine. See Fig. 18 .
EGR Valve Position Sensor	Left side of engine. See Fig. 20 .
Evaporator Temperature Sensor Connector	Under left side of dash. See Fig. 68 .
Front A/F Sensor (B2, S1) Connector	Middle of engine. See Fig. 16 .
Front Passenger's Door Outer Handle Light/Touch Sensor Connector	Center of front passenger's door. See Fig. 133 .
Front Passenger's Power Seat Recline Motor/Position Sensor Connector	Under front passenger's seat. See Fig. 111 .
Front Passenger's Vent Air Temperature Sensor	Under right side of dash. See Fig. 90 .
Front Secondary HO2S (B2, S2) Connector	Middle of engine. See Fig. 16 .
FTP Sensor	Above rear differential. See Fig. 190 .
Headlight Leveling Sensor	Under left rear of vehicle. See Fig. 184 .
Hypoid Gear Speed Sensor	On rear differential. See Fig. 186 .
IAT Sensor	Left side of engine. See Fig. 20 .
In-Car Temperature Sensor	On dash, right of steering column. See Fig. 39 .
Input Shaft (Mainshaft) Speed Sensor	In transmission housing. See Fig. 25 .
Knock Sensor	On top middle of engine, below intake manifold. See Fig. 14 .
Left Front Impact Sensor	Behind left side of front bumper. See Fig. 173 .
Left Front Pressure Sensor	Left side of engine compartment. See Fig. 197 .
Left Front Wheel Speed Sensor Connector	Left side of engine compartment. See Fig. 36 .
Left Rear Wheel Speed Sensor Connector	Under left rear of vehicle. See Fig. 184 .
Left Side Impact Sensor	At base of left "B" pillar. See Fig. 125 .
Left Side Impact Sensor (2nd)	In left "C" pillar. See Fig. 147 .

2005 Acura RL

2005-06 ACURA RL

MAP Sensor	Left side of engine. See Fig. 17 .
Output Shaft (Countershaft) Speed Sensor	In transmission housing. See Fig. 182 .
Outside Air Temperature Sensor	Behind middle of front bumper. See Fig. 172 .
Rear A/F Sensor (B1, S1) Connector	Middle of engine. See Fig. 9 .
Rear Safing Sensor	Under rear seat. See Fig. 124 .
Rear Secondary HO2S (B1, S2) Connector	Middle of engine. See Fig. 9 .
Right Front Impact Sensor	Behind right side of front bumper. See Fig. 173 .
Right Front Pressure Sensor	Left side of engine compartment. See Fig. 197 .
Right Front Wheel Speed Sensor Connector	On right side of engine compartment. See Fig. 1 .
Right Rear Wheel Speed Sensor Connector	Under right rear of vehicle. See Fig. 184 .
Right Side Impact Sensor	At base of right "B" pillar. See Fig. 125 .
Right Side Impact Sensor (2nd)	In right "C" pillar. See Fig. 147 .
Seat Weight Sensor Unit	Under front passenger's seat. See Fig. 115 .
Secondary Fuel Gauge Sending Unit	Under rear seat. See Fig. 123 .
Steering Angle Sensor	On side of steering column. See Fig. 46 .
Telescopic Motor/Position Sensor Connector	Under steering column cover. See Fig. 50 .
Tilt Motor/Position Sensor Connector	Under steering column cover. See Fig. 50 .
TP Sensor/Throttle Actuator	On throttle body. See Fig. 19 .
Yaw Rate-Lateral Acceleration Sensor	Under center console. See Fig. 84 .

SOLENOIDS & SOLENOID VALVES**SOLENOIDS & SOLENOID VALVES LOCATION**

Component	Location
A/C Compressor Connector	Right side of engine compartment. See Fig. 178 .
A/T Clutch Pressure Control Solenoid Valve A	On transmission housing. See Fig. 24 .
A/T Clutch Pressure Control Solenoid Valve B	On transmission housing. See Fig. 24 .
A/T Clutch Pressure Control Solenoid Valve C	On transmission housing. See Fig. 26 .
Driver's Seat Belt Tension Reducer Solenoid Connector	On base of left "B" pillar. See Fig. 125 .
ECPS Valve Connector	Left side of engine compartment. See Fig. 22 .
EGR Valve	Left side of engine. See Fig. 20 .
Engine Mount Control Solenoid Valve	Middle of engine. See Fig. 21 .
EVAP Canister Purge Valve	At left side of engine compartment, near strut tower. See Fig. 17 .
EVAP Canister Vent Shut Valve	Under rear of vehicle. See Fig. 70 .
Front Passenger's Seat Belt Tension Reducer Solenoid Connector	On base of right "B" pillar. See Fig. 125 .
Fuel Fill Door Opener Solenoid	On left side of trunk. See Fig. 156 .
IMT Valve	Right side of engine. See Fig. 8 .
Injector No. 1	Middle of engine. See Fig. 12 .
Injector No. 2	Middle of engine. See Fig. 12 .
Injector No. 3	Middle of engine. See Fig. 12 .
Injector No. 4	Middle of engine. See Fig. 13 .

2005 Acura RL

2005-06 ACURA RL

Injector No. 5	Middle of engine. See Fig. 13 .
Injector No. 6	Middle of engine. See Fig. 13 .
Left Clutch Electromagnetic Coil	On rear differential. See Fig. 187 .
Right Clutch Electromagnetic Coil	On rear differential. See Fig. 189 .
Shift Lock Solenoid	Under center console. See Fig. 84 .
Shift Solenoid Valve	On rear differential. See Fig. 188 .
Starter Solenoid	On starter. See Fig. 23 .
VTEC Solenoid Valve Connector	Right side of engine. See Fig. 176 .

SWITCHES**SWITCHES LOCATION**

Component	Location
Brake Fluid Level Switch	Integral to brake fluid reservoir cap. See Fig. 37 .
Brake Pedal Position Switch	Near brake pedal. See Fig. 59 .
Driver's Seat Belt Switch Connector	Under driver's seat. See Fig. 109 .
Front Passenger's Seat Belt Switch Connector	Under front passenger's seat. See Fig. 112 .
Oil Pressure Switch	Right side of engine. See Fig. 175 .
Parking Brake Switch	Under left side of dash. See Fig. 59 .
PSP Switch	Right side of engine. See Fig. 177 .
Security Hood Switch Connector	Behind middle of front bumper. See Fig. 171 .
Transmission Range Switch	On transaxle. See Fig. 25 .
VTEC Oil Pressure Switch	Right side of engine. See Fig. 175 .
Washer Fluid Level Switch Connector	Behind right side of front bumper. See Fig. 169 .
2nd Clutch Transmission Fluid Pressure Switch	Top left side of engine. See Fig. 21 .
3rd Clutch Transmission Fluid Pressure Switch	On transmission. See Fig. 182 .
4th Clutch Transmission Fluid Pressure Switch Connector	On transmission. See Fig. 26 .

MISCELLANEOUS**MISCELLANEOUS LOCATION**

Component	Location
Active Noise Control Front Microphone	In center front of roof. See Fig. 139 .
AcuraLink (USA)	Left side of trunk. See Fig. 156 .
Alternator	Right front of engine compartment. See Fig. 4 .
AM Signal Main Window Antenna	Right "C" pillar. See Fig. 142 .
Antenna Sub-Lead Connector	Behind right kick panel. See Fig. 99 .
Audio Amplifier	Right side of trunk. See Fig. 164 .
Blower Power Transistor	Behind right side of dash, left of blower motor. See Fig. 93 .
Cable Reel Connector A	On steering column. See Fig. 48 .
Cable Reel Connector B	On steering column. See Fig. 47 .
Cable Reel Connector C	On steering wheel. See Fig. 45 .

2005 Acura RL

2005-06 ACURA RL

Cellular Phone Antenna/OnStar System GPS Antenna Connector	Rear of roof. See Fig. 141 .
Data Link Connector (DLC)	Under left side of dash. See Fig. 52 .
Driver's Airbag First & Second Inflators Connector	In base of steering column. See Fig. 44 .
Driver's Seat Belt Tensioner Connector	At base of left "B" pillar. See Fig. 126 .
Driver's Seat Heater Connector	Under driver's seat. See Fig. 104 .
Driver's Side Airbag Inflator Connector	Under driver's seat. See Fig. 105 .
FM Signal Main Window Antenna	Right "C" pillar. See Fig. 142 .
FM Signal Sub-Window Antenna	In left "C" pillar. See Fig. 146 .
Front Interior LF Antenna	Behind middle of dash. See Fig. 77 .
Front Passenger's Airbag First & Second Inflators Connector	Behind glove box. See Fig. 89 .
Front Passenger's Seat Belt Tensioner Connector	At base of right "B" pillar. See Fig. 126 .
Front Passenger's Seat Heater Connector	Under front passenger's seat. See Fig. 114 .
Front Passenger's Side Airbag Inflator Connector	Under front passenger seat. See Fig. 113 .
GPS Antenna	Middle of rear shelf. See Fig. 160 .
High Horn	Behind middle of front bumper. See Fig. 171 .
Ignition Coil No. 1	Middle of engine. See Fig. 10 .
Ignition Coil No. 2	Middle of engine. See Fig. 10 .
Ignition Coil No. 3	Middle of engine. See Fig. 10 .
Ignition Coil No. 4	Middle of engine. See Fig. 15 .
Ignition Coil No. 5	Middle of engine. See Fig. 15 .
Ignition Coil No. 6	Middle of engine. See Fig. 15 .
Junction Connector C105	Middle of engine. See Fig. 11 .
Junction Connector C106	Top of transmission. See Fig. 26 .
Junction Connector C107 (2006)	Middle of engine. See Fig. 11 .
Junction Connector C202 (2006)	Behind right side of dash. See Fig. 201 .
Junction Connector C203 (2006)	Right side of engine compartment. See Fig. 2 .
Junction Connector C305	Under left side of dash. See Fig. 58 .
Junction Connector C306	Under left side of dash. See Fig. 58 .
Junction Connector C310 (2006)	Left side of engine compartment. See Fig. 35 .
Junction Connector C404 (2005)	Under left side of dash. See Fig. 56 .
Junction Connector C404 (2006)	Under left side of dash. See Fig. 198 .
Junction Connector C405	Under steering column cover. See Fig. 48 .
Junction Connector C507	Behind left side of dash. See Fig. 41 .
Junction Connector C508	Behind left side of dash. See Fig. 41 .
Junction Connector C509	Behind left side of dash. See Fig. 41 .
Junction Connector C510	Behind left side of dash. See Fig. 40 .
Junction Connector C511	Behind left side of dash. See Fig. 40 .
Junction Connector C512	Behind left side of dash. See Fig. 40 .
Junction Connector C513	Behind left side of dash. See Fig. 40 .
Junction Connector C514	Under left side of dash. See Fig. 56 .
Junction Connector C515	Behind middle of dash. See Fig. 73 .

2005 Acura RL

2005-06 ACURA RL

Junction Connector C516	Behind middle of dash. See Fig. 73 .
Junction Connector C517	Behind middle of dash. See Fig. 73 .
Junction Connector C518	Behind middle of dash. See Fig. 76 .
Junction Connector C519	Behind middle of dash. See Fig. 76 .
Junction Connector C520	Under center console. See Fig. 86 .
Junction Connector C521	Behind middle of dash. See Fig. 74 .
Junction Connector C522	Behind middle of dash. See Fig. 74 .
Junction Connector C523	Behind middle of dash. See Fig. 79 .
Junction Connector C524	Behind middle of dash. See Fig. 74 .
Junction Connector C525	Under right side of dash. See Fig. 96 .
Junction Connector C526	Under right side of dash. See Fig. 96 .
Junction Connector C607	Behind left kick panel. See Fig. 63 .
Junction Connector C608	Behind left kick panel. See Fig. 62 .
Junction Connector C609	Behind left kick panel. See Fig. 62 .
Junction Connector C610	Under driver's seat. See Fig. 108 .
Junction Connector C612	In left "C" pillar. See Fig. 148 .
Junction Connector C613	In left "C" pillar. See Fig. 148 .
Junction Connector C615	In left "C" pillar. See Fig. 149 .
Junction Connector C616	In left "C" pillar. See Fig. 149 .
Junction Connector C660	At base of right "B" pillar. See Fig. 126 .
Junction Connector C661	At base of left "B" pillar. See Fig. 126 .
Junction Connector C662	Behind rear seat. See Fig. 153 .
Junction Connector C663	Behind rear seat. See Fig. 153 .
Junction Connector C702	On left side of trunk. See Fig. 155 .
Junction Connector C755	In driver's door. See Fig. 134 .
Junction Connector C756	In driver's door. See Fig. 134 .
Junction Connector C757	In driver's door. See Fig. 130 .
Junction Connector C775	In front passenger's door. See Fig. 130 .
Junction Connector C776	In front passenger's door. See Fig. 135 .
Junction Connector C783	In left rear door. See Fig. 131 .
Junction Connector C793	In right rear door. See Fig. 131 .
Junction Connector C833	Middle of trunk. See Fig. 167 .
Junction Connector C852	In left front of roof. See Fig. 138 .
Left Front TPMS Initiator	Behind left side of front bumper. See Fig. 173 .
Left Rear TPMS Initiator	On left rear fenderwell. See Fig. 183 .
Left Search Coil	On rear differential. See Fig. 188 .
Left Side Curtain Airbag Inflator Connector	In left "C" pillar. See Fig. 146 .
Low Horn	Behind middle of front bumper. See Fig. 171 .
MES Connector	Under left side of dash. See Fig. 58 .
Millimeter Wave Radar (2006)	Behind front grille. See Fig. 171 .
Navigation Service Check Connector	Under navigation unit. See Fig. 159 .
Noise Reduction Condenser Connector	In right "C" pillar. See Fig. 145 .
Rear Accessory Power Socket	Rear of center console. See Fig. 72 .
Rear Bumper LF Antenna Connector	Behind middle of rear bumper. See Fig. 168 .

2005 Acura RL

2005-06 ACURA RL

Rear Interior LF Antenna	Under rear of center console. See Fig. 88 .
Rear Shelf LF Antenna	Middle of rear shelf. See Fig. 162 .
Right Front TPMS Initiator	Behind right side of front bumper. See Fig. 173 .
Right Rear TPMS Initiator	On right rear fenderwell. See Fig. 183 .
Right Search Coil	On rear differential. See Fig. 185 .
Right Side Curtain Airbag Inflator Connector	In right "C" pillar. See Fig. 143 .
TPMS Receiver Unit	Right side of rear shelf. See Fig. 163 .
T1	In under-hood fuse/relay box. See Fig. 32 .
T3	Left rear of engine, near starter solenoid. See Fig. 23 .
T10 (Terminal Joint)	Top left side of engine. See Fig. 21 .
T11 (Terminal Joint)	Right side of engine compartment. See Fig. 3 .
T12 (Terminal Joint)	Top left side of engine. See Fig. 21 .
T15	On rear differential. See Fig. 186 .
T16	Behind left side rear seat headrest. See Fig. 117 .
T17	Behind center rear seat headrest. See Fig. 117 .
T18	Behind right side rear seat headrest. See Fig. 117 .
T101	In under-hood fuse/relay box. See Fig. 32 .
T102	Right side of engine compartment. See Fig. 5 .
XM Antenna Satellite Signal Connector	Center rear of roof. See Fig. 140 .
XM Antenna Terrestrial Signal Connector	Center rear of roof. See Fig. 140 .

CONNECTORS**CONNECTORS LOCATION**

Component	Location
C101 (Black, 33 Pin)	Left side of engine compartment. See Fig. 36 .
C102 (Gray, 33 Pin)	Left side of engine compartment. See Fig. 36 .
C103 (Black, 23 Pin)	Left side of engine compartment. See Fig. 36 .
C104 (Gray, 1 Pin)	Left side of engine compartment, near shock tower. See Fig. 34 .
C108 (Black, 5 Pin)	Top of transmission housing. See Fig. 25 .
C151 (Black, 6 Pin)	Right side of engine. See Fig. 176 .
C152 (Black, 1 Pin)	Top middle of engine. See Fig. 14 .
C201 (White, 18 Pin)	Behind right kick panel. See Fig. 99 .
C251 (White, 13 Pin)	Under right side of dash. See Fig. 93 .
C301 (White, 34 Pin)	Under left side of dash. See Fig. 55 .
C302 (Brown, 3 Pin)	Behind lower left side of dash. See Fig. 55 .
C303 (Yellow, 4 Pin)	Behind lower left side of dash. See Fig. 55 .
C304 (White, 5 Pin)	Behind lower left side of dash. See Fig. 57 .
C308 (Gray, 2 Pin)	Left side of engine compartment. See Fig. 181 .
C308 (Gray, 2 Pin)	Left side of engine compartment. See Fig. 181 .
C309 (Gray, 4 Pin)	Left side of engine compartment. See Fig. 180 .
C401 (White, 14 Pin)	Under left side of dash. See Fig. 54 .

2005 Acura RL

2005-06 ACURA RL

C402 (White, 34 Pin)	Under left side of dash. See Fig. 54 .
C403 (Yellow, 4 Pin)	Under left side of dash. See Fig. 54 .
C501 (White, 17 Pin)	Under middle of dash. See Fig. 81 .
C502 (White, 12 Pin)	Behind right side of dash. See Fig. 95 .
C503 (Brown, 2 Pin)	Behind right side of dash. See Fig. 95 .
C505 (USA) (Gray/White, 2 Pin)	Behind middle of dash. See Fig. 78 .
C551 (2005) (Gray, 6 Pin)	Under center console. See Fig. 87 .
C551 (2006) (Light Blue, 6 Pin)	Under center console. See Fig. 87 .
C599 (Gray, 8 Pin)	Under center console. See Fig. 86 .
C601 (White, 23 Pin)	Behind left kick panel. See Fig. 63 .
C602 (White, 20 Pin)	Behind left kick panel. See Fig. 62 .
C603 (2006) (Light Blue, 6 Pin)	Behind middle of dash. See Fig. 78 .
C604 (Yellow, 16 Pin)	Behind middle of dash. See Fig. 78 .
C606 (White, 24 Pin)	In left "C" pillar. See Fig. 145 .
C631 (White, 24 Pin)	Under left side of dash. See Fig. 57 .
C632 (White, 8 Pin)	Under left side of dash. See Fig. 57 .
C633 (White, 6 Pin)	In right "C" pillar. See Fig. 144 .
C651 (White, 34 Pin)	Behind right kick panel. See Fig. 98 .
C652 (White, 8 Pin)	Behind right kick panel. See Fig. 98 .
C653 (White, 23 Pin)	Behind rear seat. See Fig. 152 .
C654 (White, 12 Pin)	Behind rear seat. See Fig. 152 .
C655 (Yellow, 16 Pin)	Behind rear seat. See Fig. 152 .
C656 (White, 20 Pin)	In right "C" pillar. See Fig. 144 .
C657 (White, 12 Pin)	Right side of trunk. See Fig. 166 .
C658 (White, 12 Pin)	Behind rear seat. See Fig. 153 .
C659 (White, 8 Pin)	Behind rear seat. See Fig. 153 .
C698 (Gray, 10 Pin)	Near rear differential. See Fig. 185 .
C699 (Gray, 6 Pin)	Near rear differential. See Fig. 185 .
C701 (White, 20 Pin)	Left side of trunk. See Fig. 155 .
C751 (White, 14 Pin)	Under left side of dash. See Fig. 57 .
C752 (White, 20 Pin)	Front of driver's door. See Fig. 128 .
C754 (White, 28 Pin)	In driver's door. See Fig. 129 .
C771 (White, 20 Pin)	Under right side of dash. See Fig. 95 .
C772 (Light Blue, 6 Pin)	Behind right kick panel. See Fig. 99 .
C773 (White, 20 Pin)	In front passenger's door. See Fig. 129 .
C774 (White, 20 Pin)	Front of front passenger's door. See Fig. 128 .
C781 (White, 18 Pin)	Left "B" pillar. See Fig. 127 .
C782 (White, 6 Pin)	In left rear door. See Fig. 136 .
C791 (Gray, 17 Pin)	Right "B" pillar. See Fig. 127 .
C792 (White, 6 Pin)	In right rear door. See Fig. 136 .
C801 (Gray, 4 Pin)	Under front passenger's seat. See Fig. 113 .
C831 (White, 12 Pin)	Middle of trunk. See Fig. 167 .
C851 (White, 8 Pin)	Rear of roof. See Fig. 141 .
C901 (White, 23 Pin)	Under driver's seat. See Fig. 105 .

2005 Acura RL

2005-06 ACURA RL


C903 (Gray, 2 Pin)	Under driver's seat. See Fig. 105 .
C951 (Gray, 3 Pin)	Under rear seat. See Fig. 120 .
C961 (Gray, 3 Pin)	Right side of rear seat. See Fig. 118 .
C962 (Gray, 3 Pin)	Behind center of rear seat. See Fig. 119 .
C963 (Gray, 3 Pin)	Behind center of rear seat. See Fig. 119 .
C971 (Gray, 19 Pin)	Under driver's seat. See Fig. 109 .
C981 (Gray, 6 Pin)	Under front passenger's seat. See Fig. 116 .
C991 (2006) (White, 12 Pin)	Under middle of dash. See Fig. 200 .
C992 (2006) (White, 5 Pin)	Behind right kick panel. See Fig. 202 .
C993 (2006) (White, 2 Pin)	Behind right kick panel. See Fig. 202 .

GROUND S**GROUND S LOCATION**

Component	Location
G1	Left side of engine compartment. See Fig. 30 .
G2	Top of transmission housing. See Fig. 25 .
G3	Right side of engine compartment. See Fig. 3 .
G4	Right side of engine compartment. See Fig. 3 .
G101	Left side of engine. See Fig. 18 .
G102	On right front of engine. See Fig. 7 .
G201	Behind right side of front bumper. See Fig. 170 .
G202	Right side of engine compartment. See Fig. 6 .
G301	Behind left side of front bumper. See Fig. 174 .
G351	Middle of engine compartment. See Fig. 179 .
G401	Under right side of dash. See Fig. 91 .
G501	Under left side of dash. See Fig. 53 .
G502	Under left side of dash. See Fig. 53 .
G503	Under middle of dash. See Fig. 77 .
G504	Under middle of dash. See Fig. 79 .
G505	Under center console. See Fig. 85 .
G506	Behind glove box. See Fig. 90 .
G601	At left side of floor. See Fig. 121 .
G602	In left "C" pillar. See Fig. 147 .
G603	In left "C" pillar. See Fig. 148 .
G604	In left "C" pillar. See Fig. 146 .
G651	At right side of floor. See Fig. 121 .
G652	In right "C" pillar. See Fig. 147 .
G653 (2006)	Behind right kick panel. See Fig. 202 .
G701	Left side of trunk. See Fig. 155 .
G851	In right "C" pillar. See Fig. 143 .


COMPONENT LOCATION GRAPHICS

NOTE: Figures may show multiple component locations. Refer to appropriate table for proper figure references.

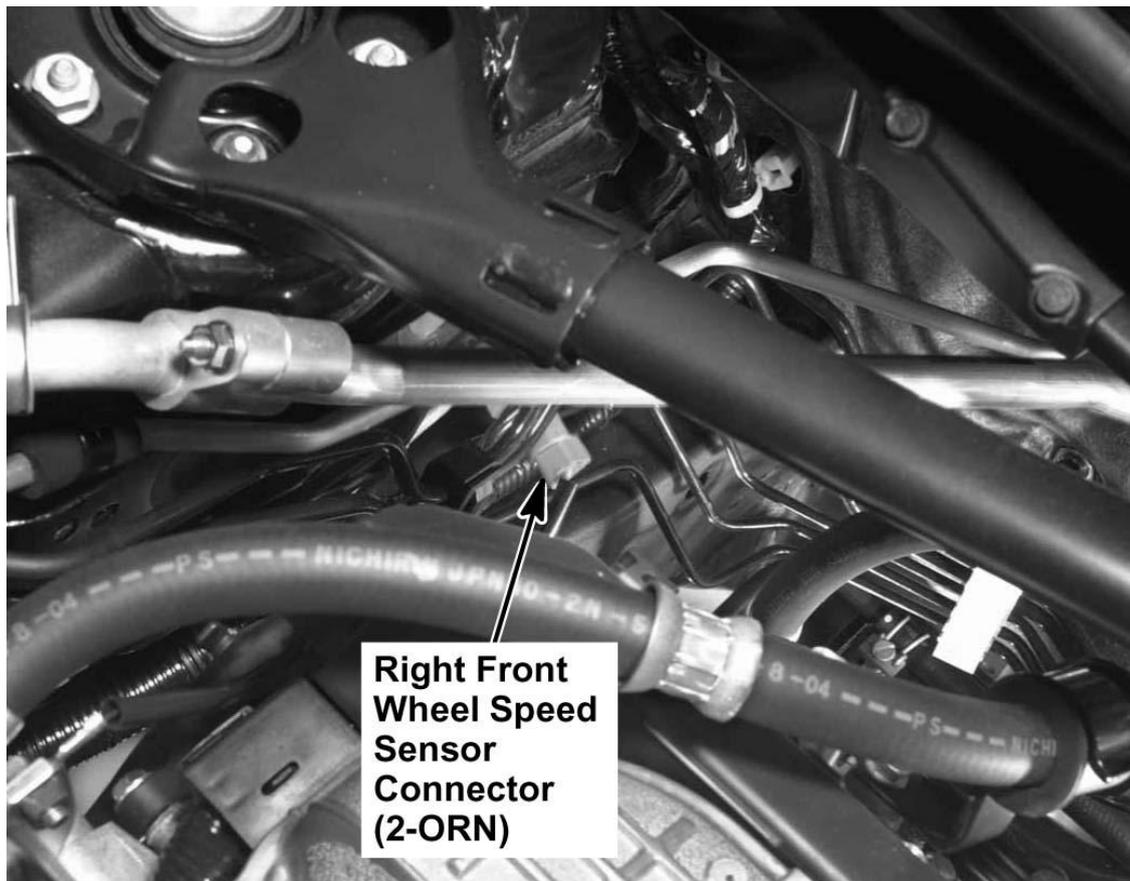


G00363455

Fig. 1: Right Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

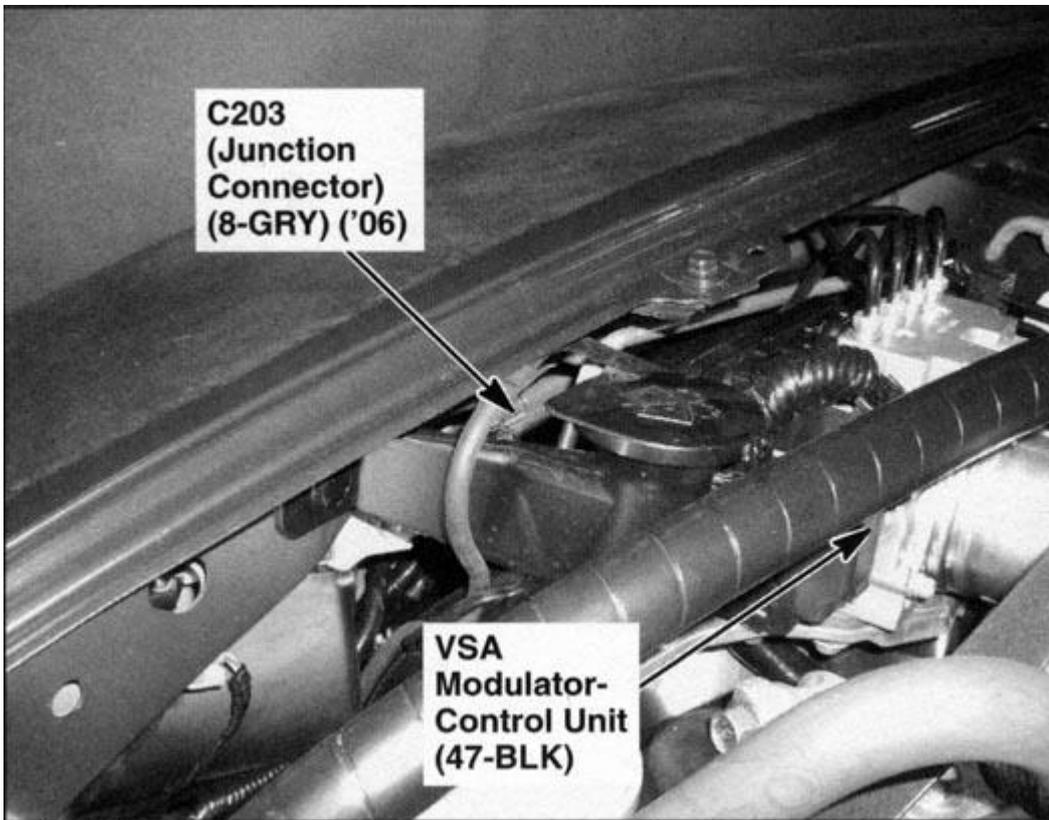

G00430623

Fig. 2: Right Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

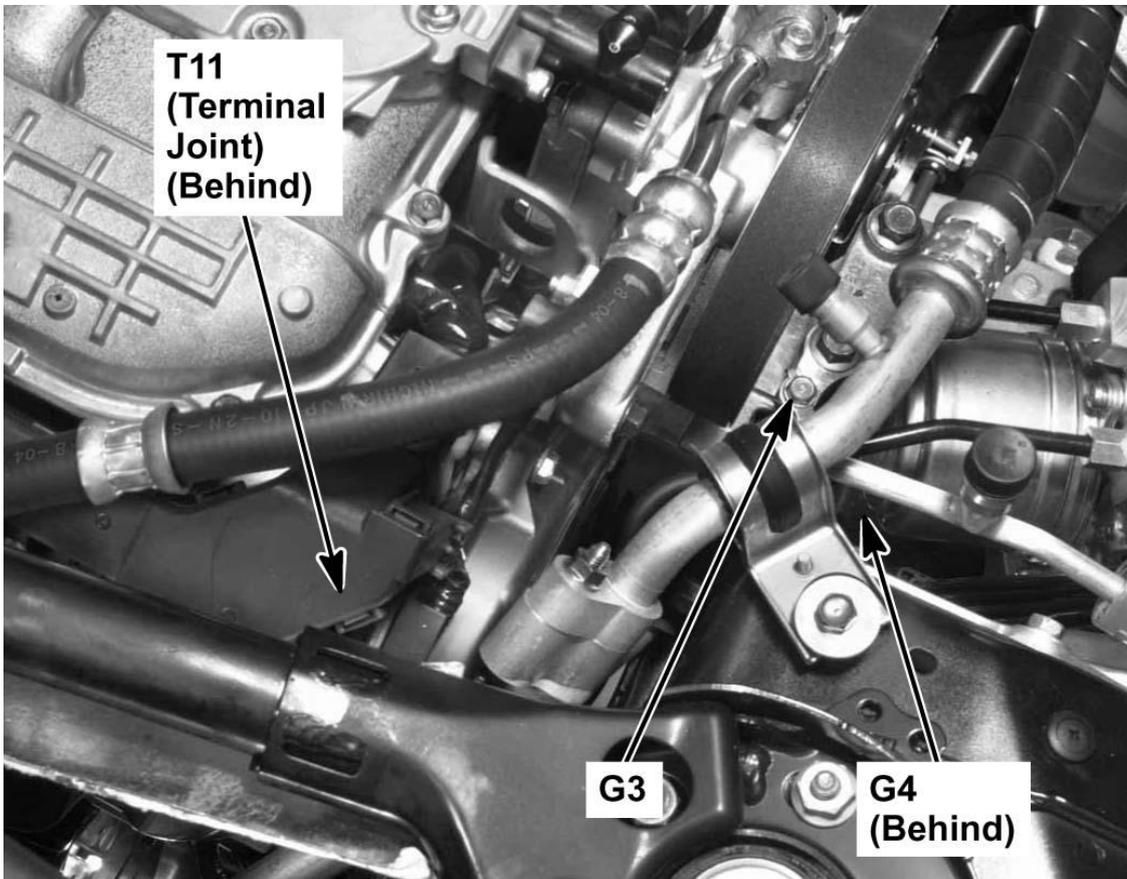


G00363457

Fig. 3: Right Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.




G00363458

Fig. 4: Right Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

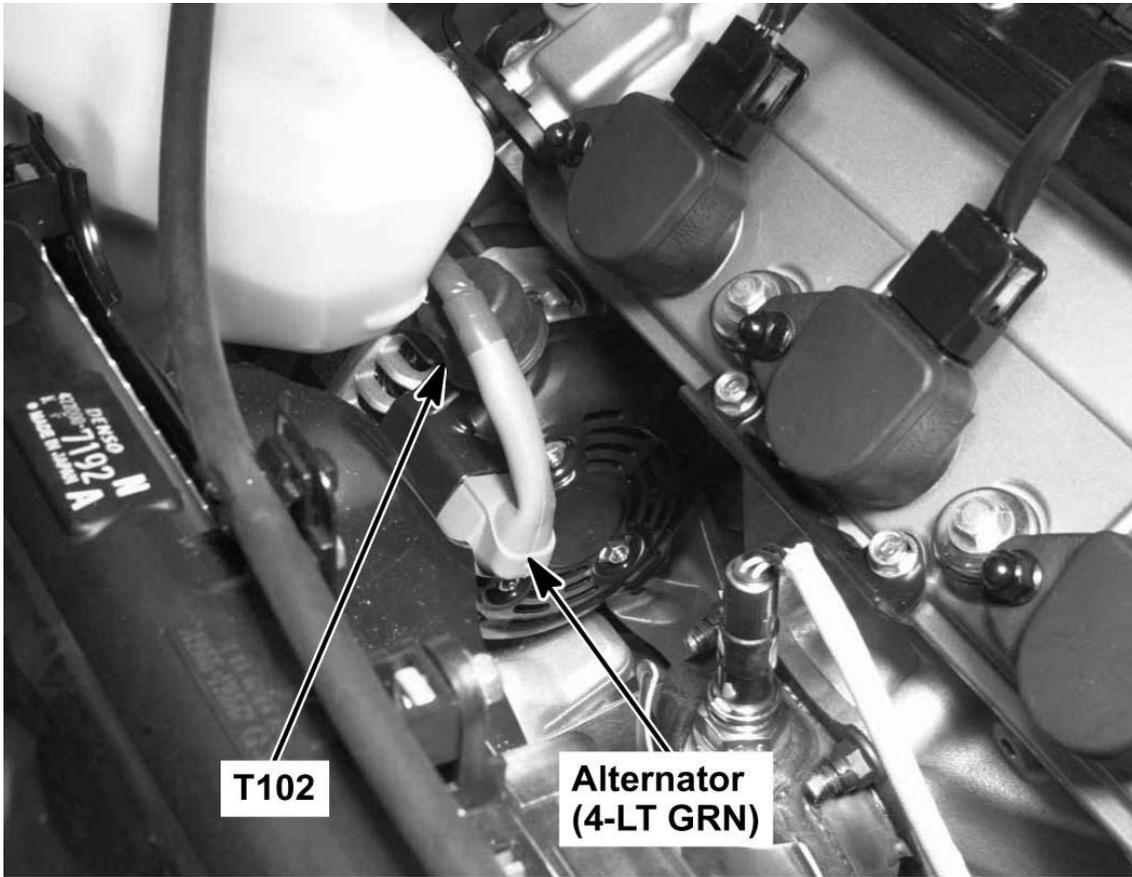

G00363459

Fig. 5: Right Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

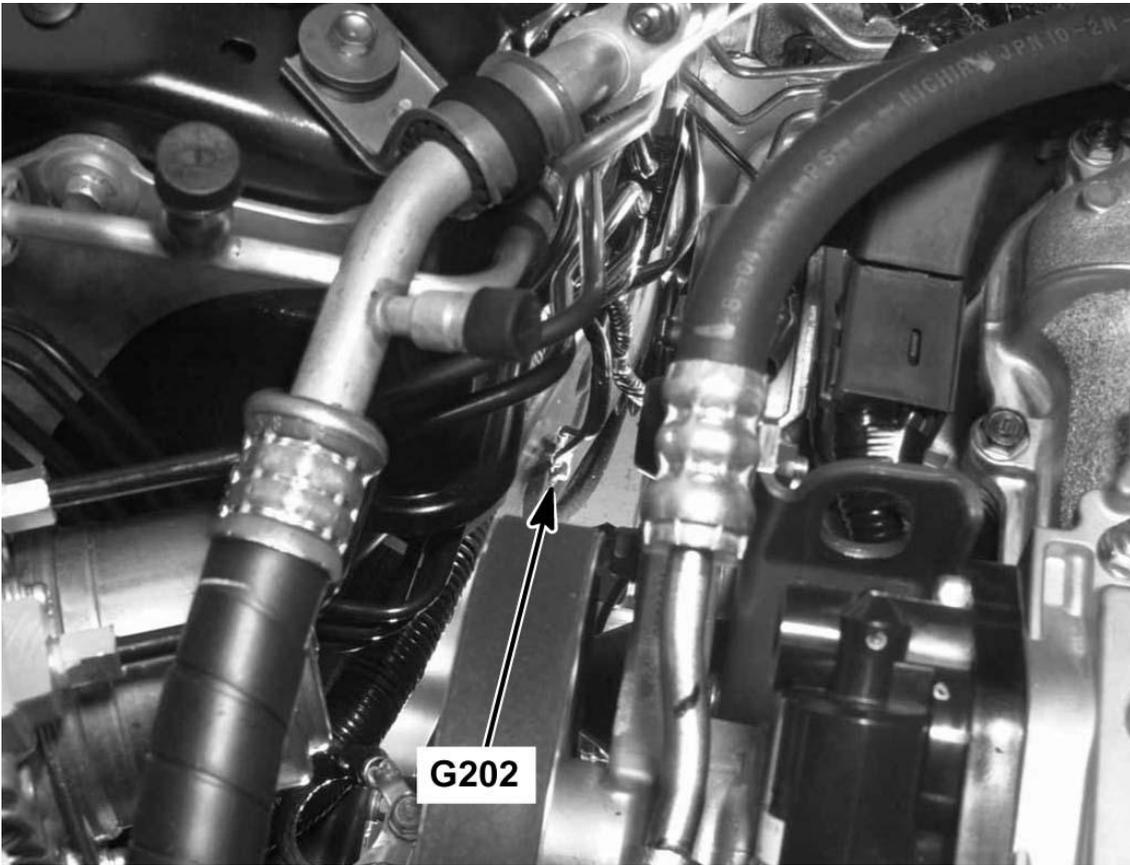

G00363460

Fig. 6: Right Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.


2005 Acura RL

2005-06 ACURA RL




G00363461

Fig. 7: Right Side Of Engine
Courtesy of AMERICAN HONDA MOTOR CO., INC.

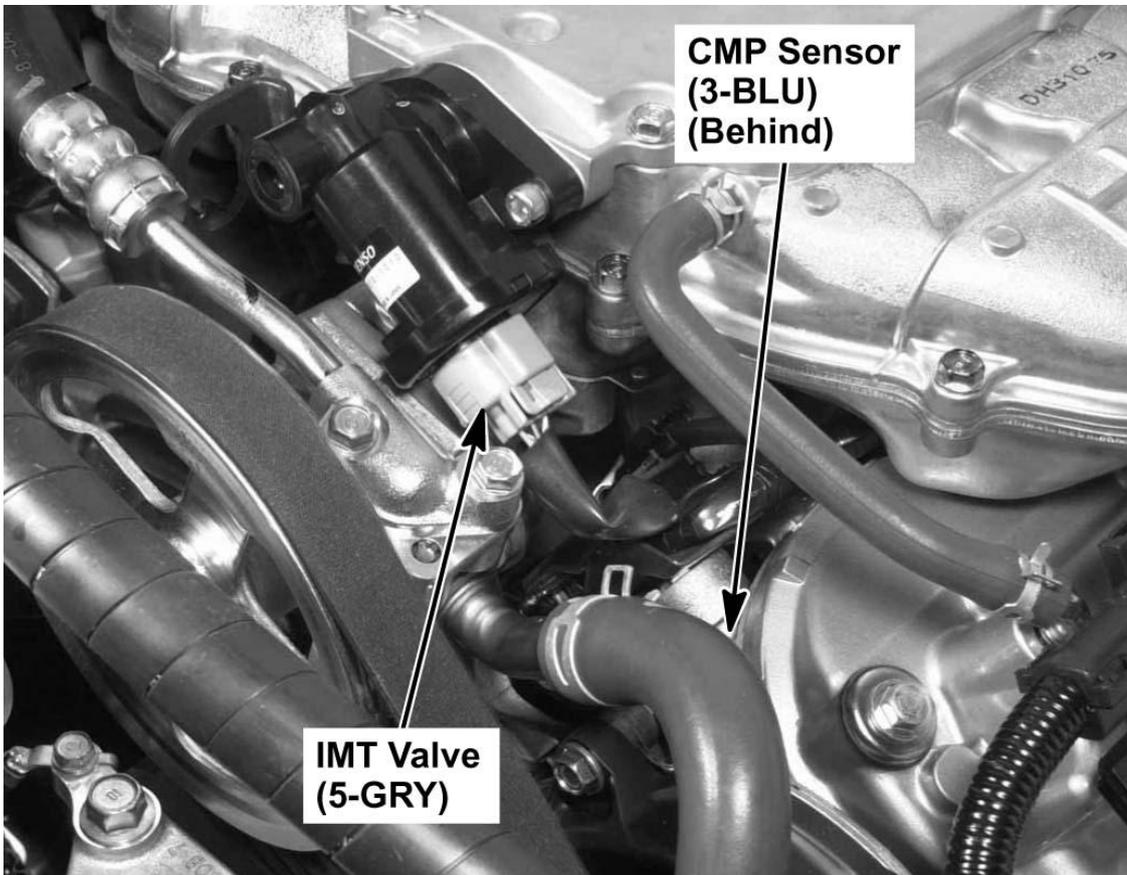

G00363462


Fig. 8: Right Side Of Engine
Courtesy of AMERICAN HONDA MOTOR CO., INC.

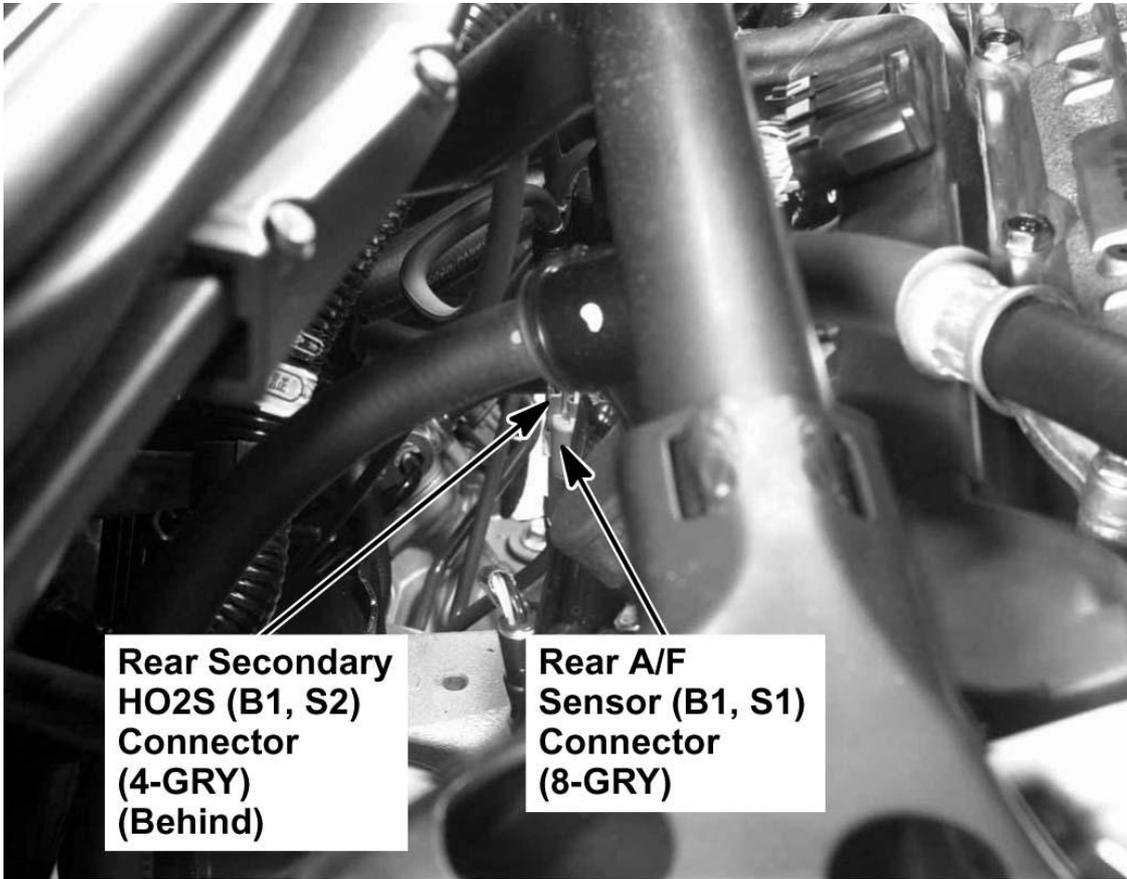

G00363463

Fig. 9: Middle Of Engine


Courtesy of AMERICAN HONDA MOTOR CO., INC.

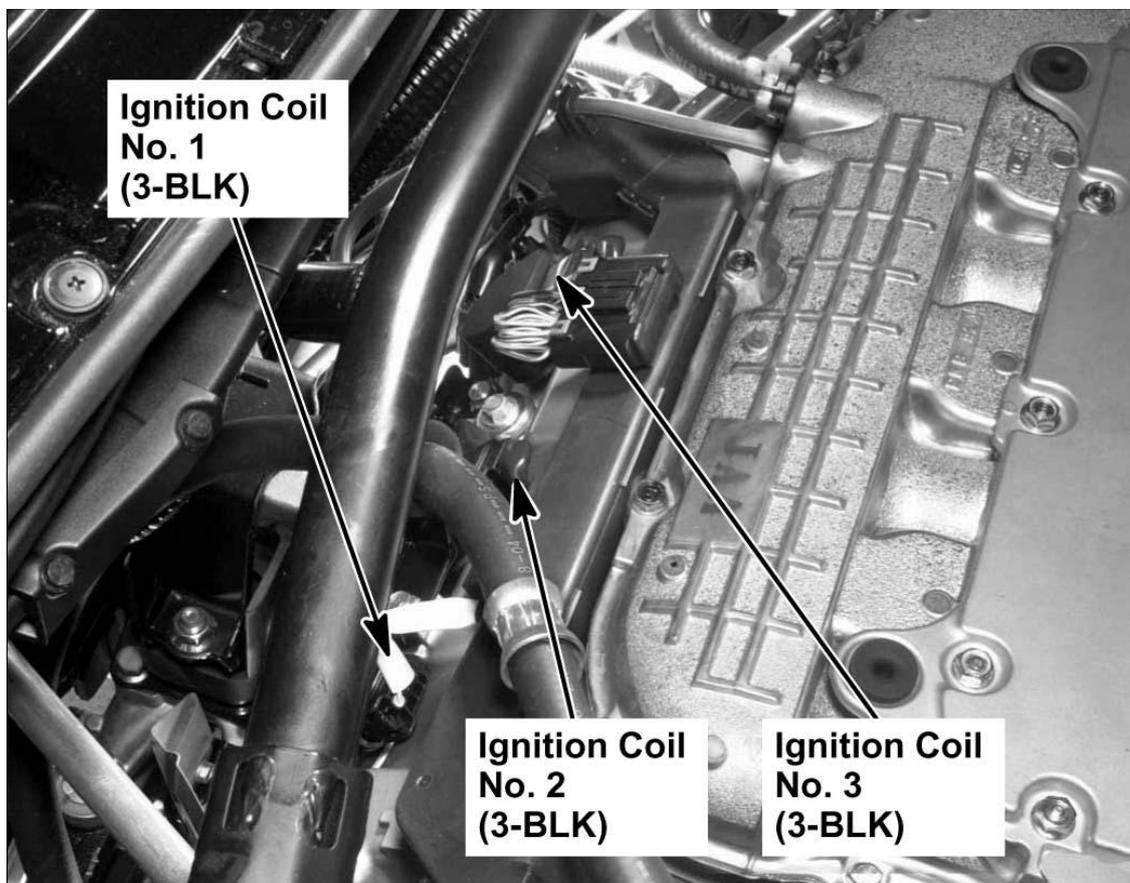

G00363464

Fig. 10: Middle Of Engine


Courtesy of AMERICAN HONDA MOTOR CO., INC.

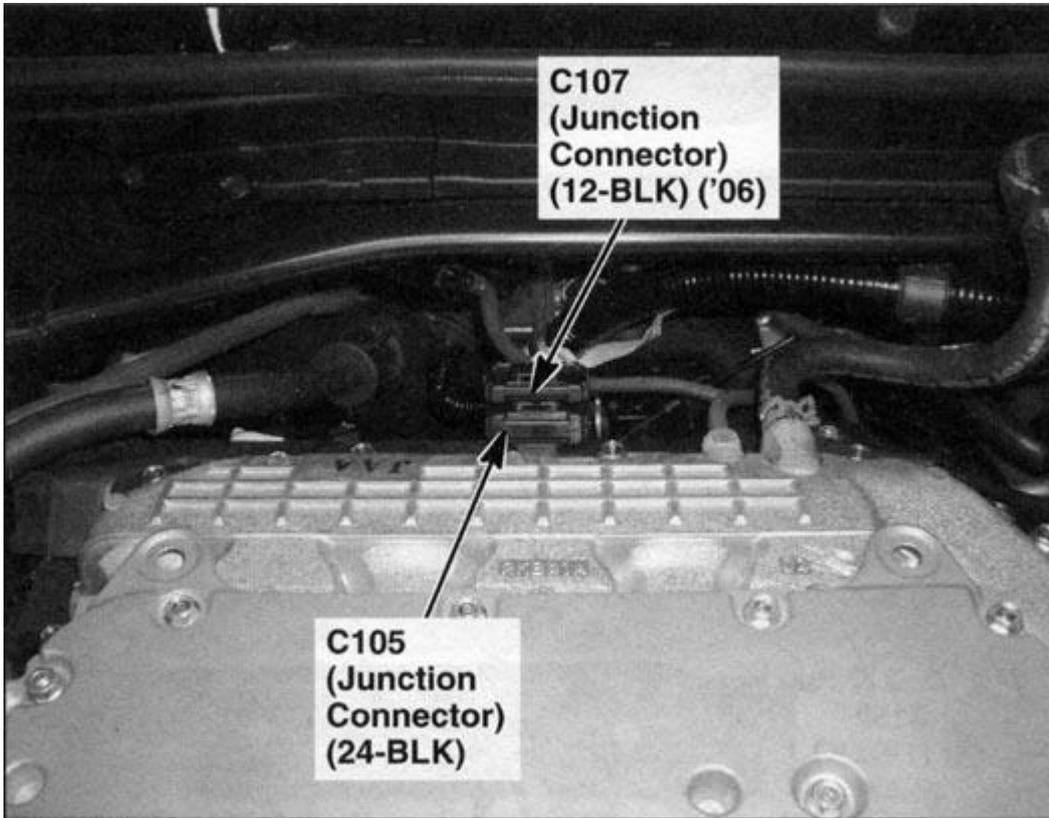

G00430624

Fig. 11: Middle Of Engine


Courtesy of AMERICAN HONDA MOTOR CO., INC.

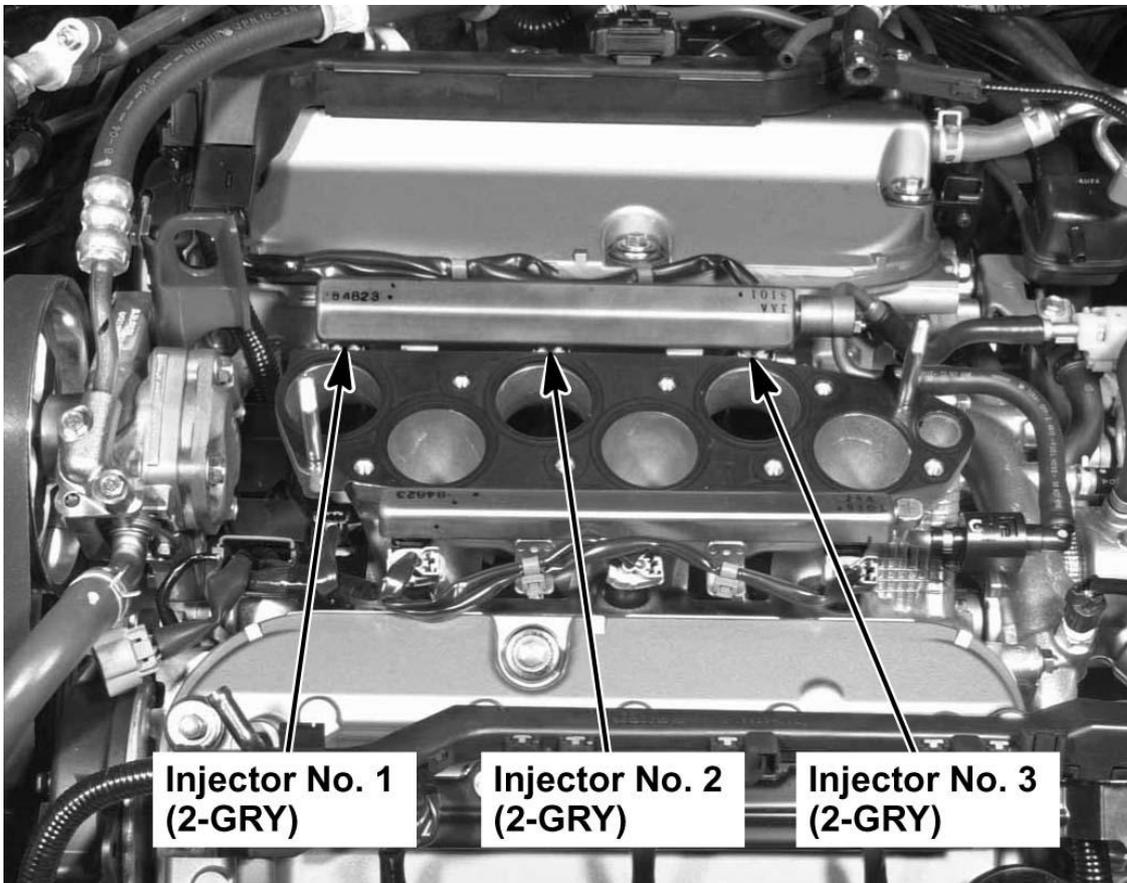

G00363466

Fig. 12: Middle Of Engine

Courtesy of AMERICAN HONDA MOTOR CO., INC.

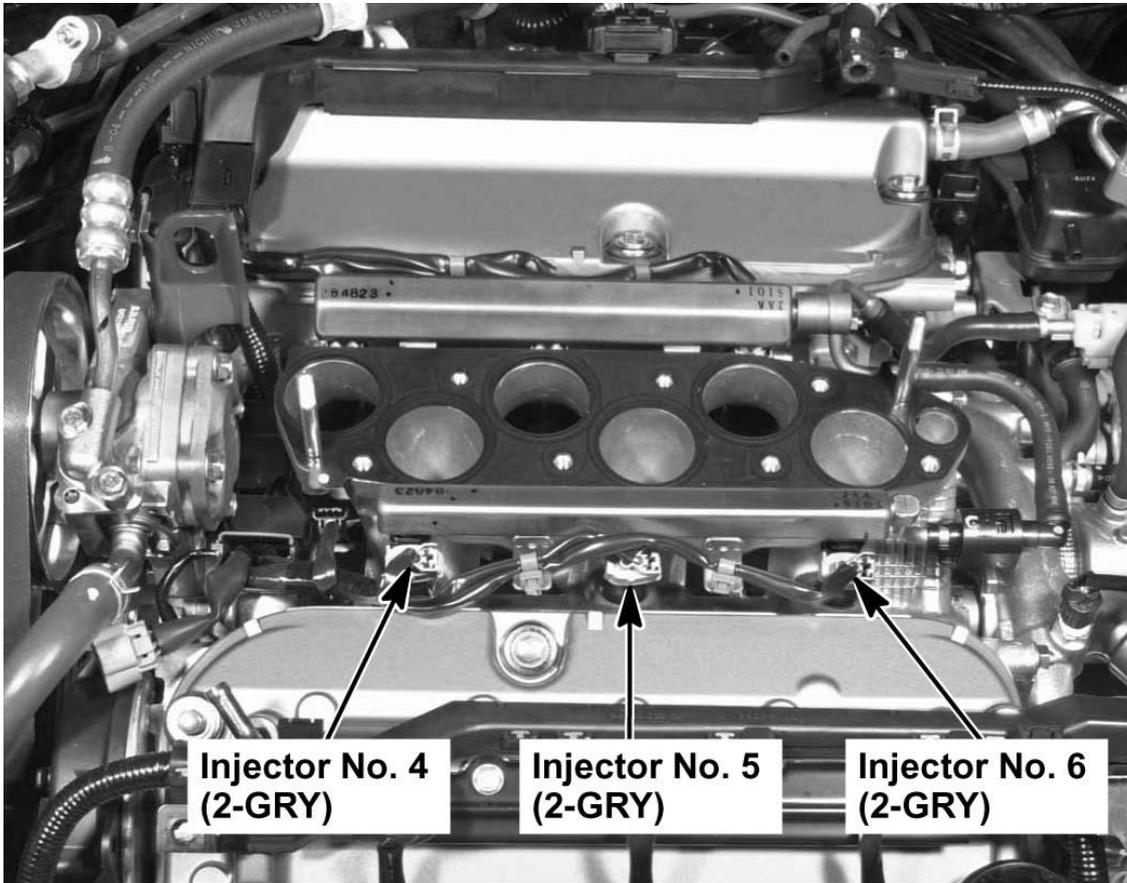


G00363467

Fig. 13: Middle Of Engine

Courtesy of AMERICAN HONDA MOTOR CO., INC.

2005 Acura RL


2005-06 ACURA RL

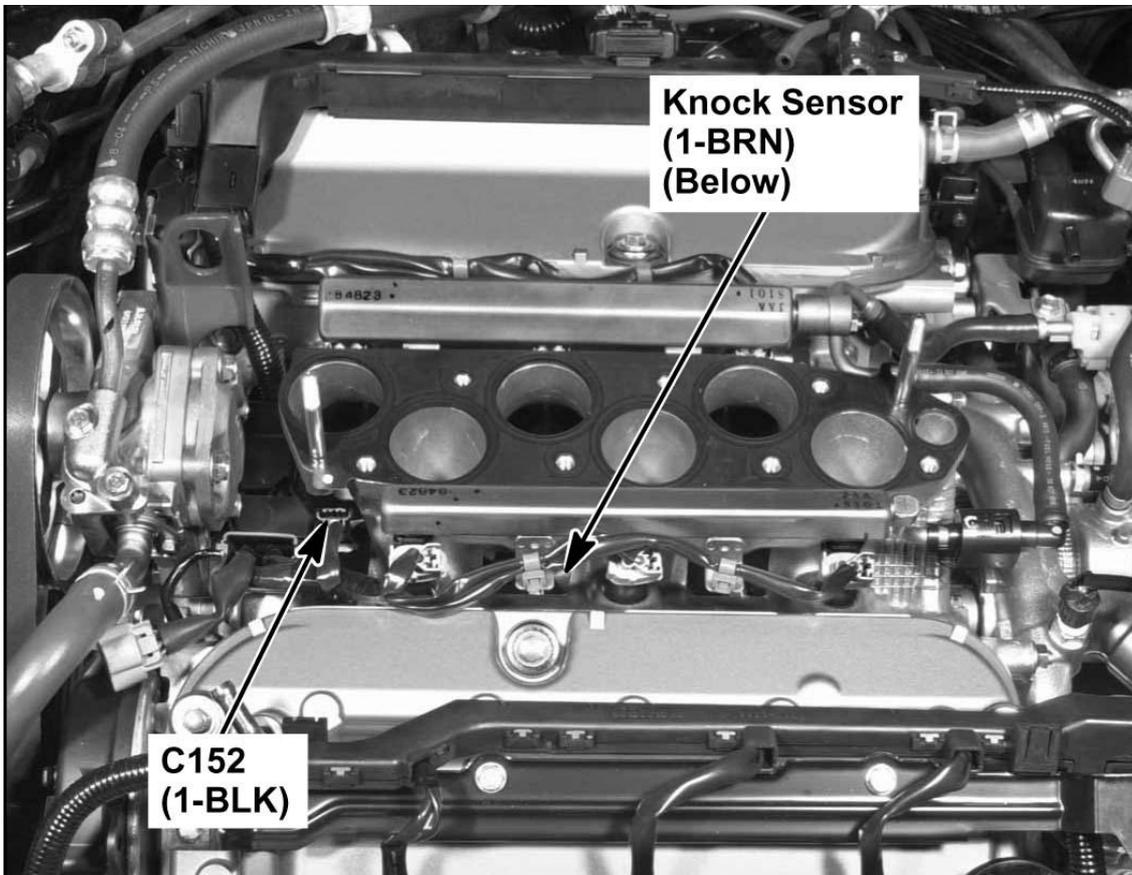

G00363468

Fig. 14: Middle Of Engine


Courtesy of AMERICAN HONDA MOTOR CO., INC.

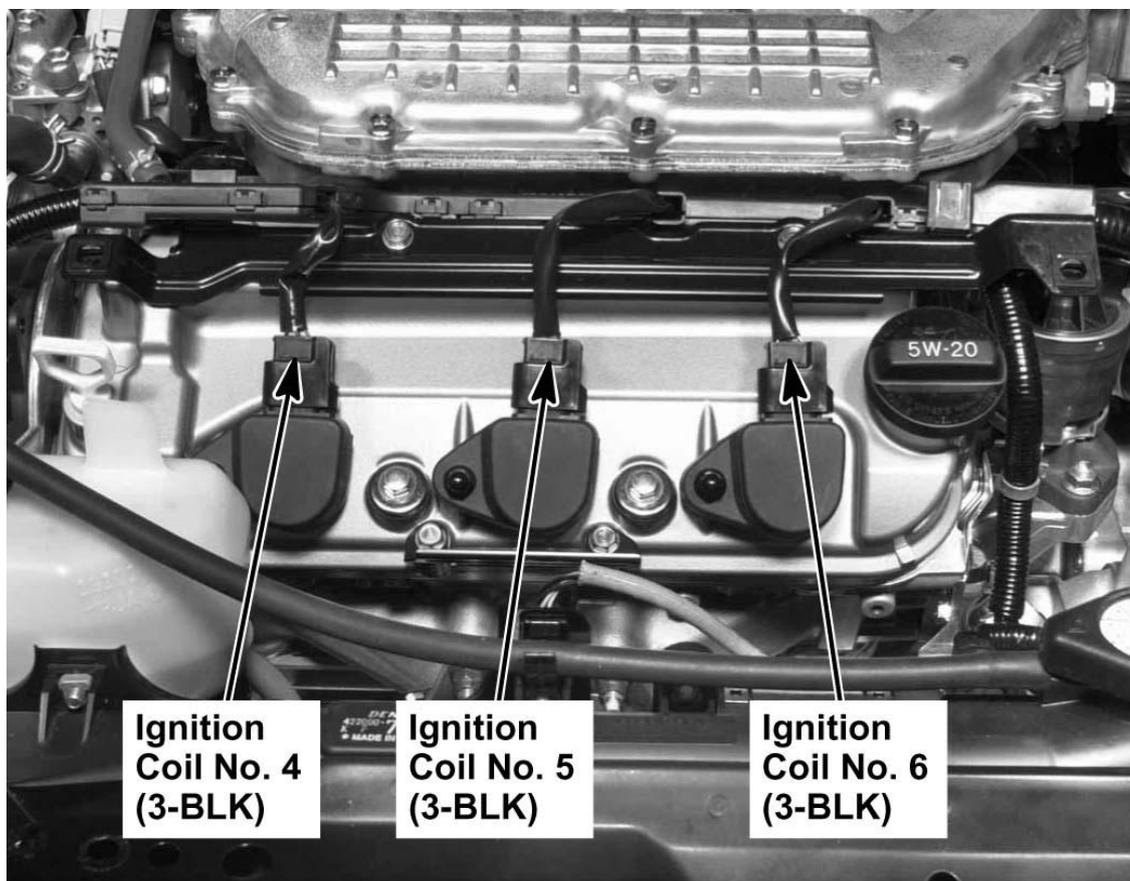

G00363469

Fig. 15: Middle Of Engine


Courtesy of AMERICAN HONDA MOTOR CO., INC.

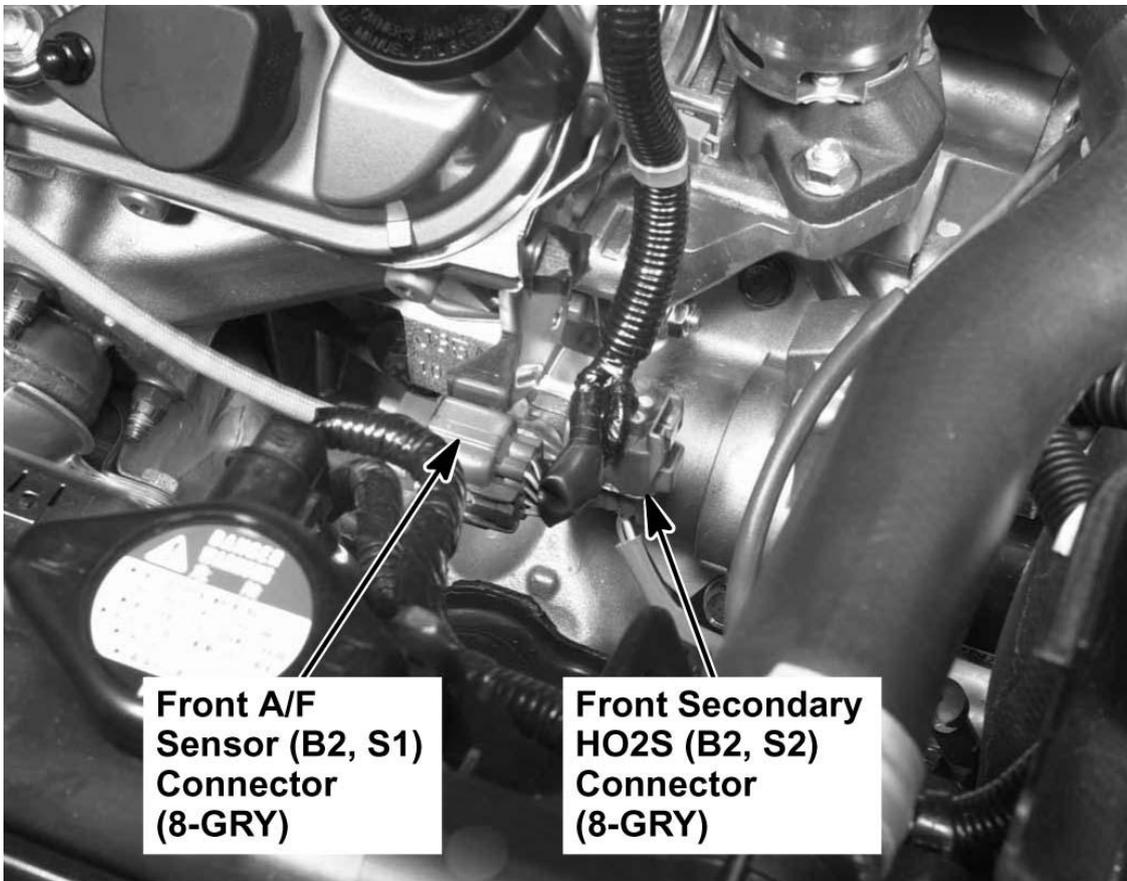

G00363470


Fig. 16: Middle Of Engine

Courtesy of AMERICAN HONDA MOTOR CO., INC.

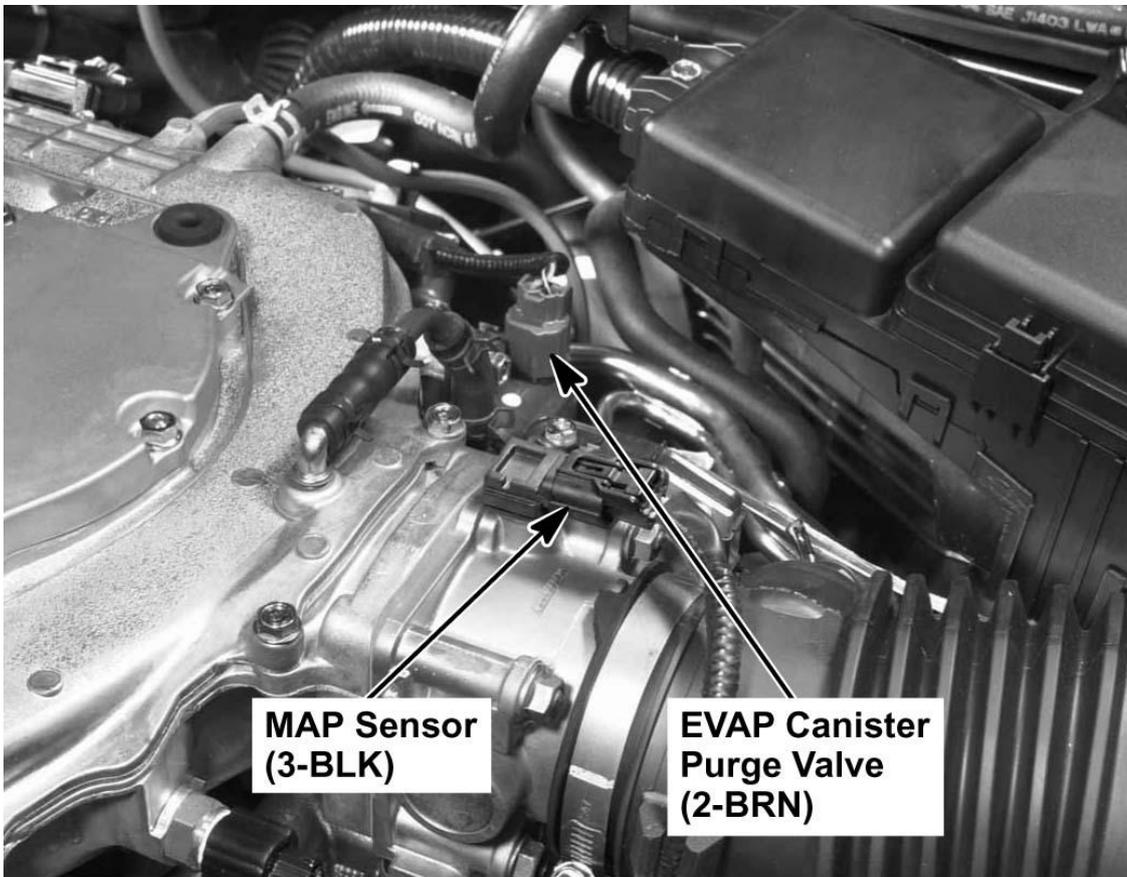

G00363471

Fig. 17: Left Side Of Engine
Courtesy of AMERICAN HONDA MOTOR CO., INC.

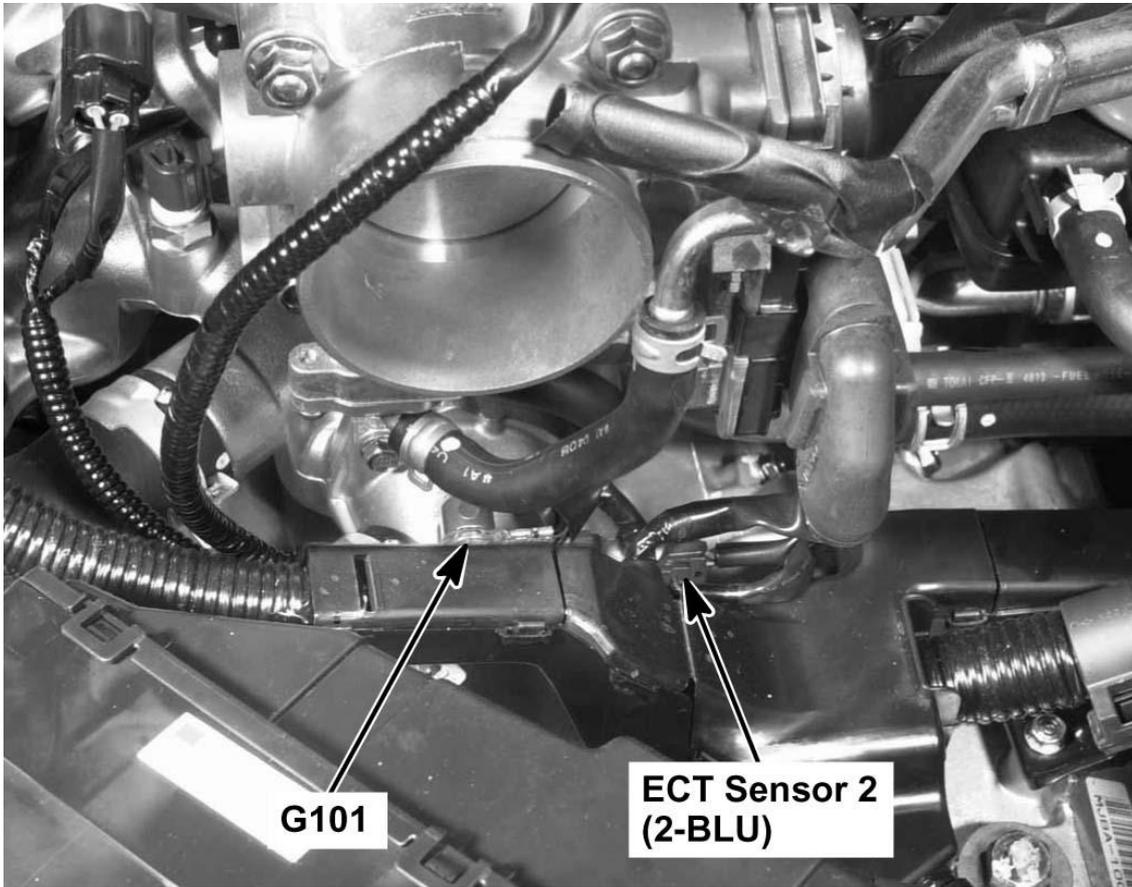

G00363472


Fig. 18: Left Side Of Engine
Courtesy of AMERICAN HONDA MOTOR CO., INC.

2005 Acura RL

Product: 2005-2008 Acura RL Car Service Repair Workshop Manual

Full Download: <https://www.arepairmanual.com/downloads/2005-2008-acura-rl-car-service-repair-workshop-manual/>

2005-06 ACURA RL
ar-service-repair-workshop-manual/

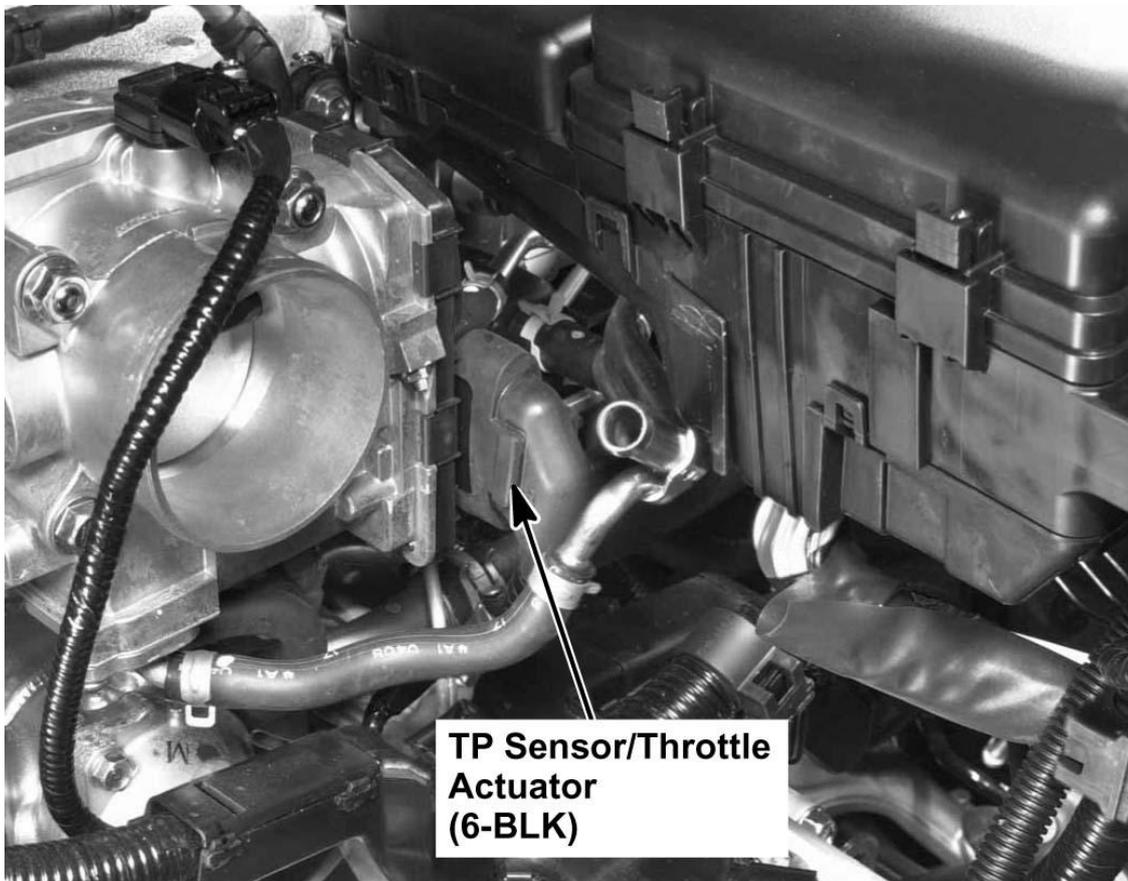

G00363473

Fig. 19: Left Side Of Engine

Courtesy of AMERICAN HONDA MOTOR CO., INC.

Sample manual. Download All pages at:

<https://www.arepairmanual.com/downloads/2005-2008-acura-rl-car-service-repair-workshop-manual/>