

2004 Acura TSX

Product: 2003-2008 Acura TSX Car Service Repair Workshop Manual

Full Download: [https://www.arepairmanual.com/downloads/2003-2008-acura-tsx-](https://www.arepairmanual.com/downloads/2003-2008-acura-tsx-car-service-repair-workshop-manual/)

[car-service-repair-workshop-manual/](https://www.arepairmanual.com/downloads/2003-2008-acura-tsx-car-service-repair-workshop-manual/)

2004 ACURA

TSX

BUZZERS, RELAYS & TIMERS

BUZZERS, RELAYS & TIMERS LOCATION

| Component | Location |
|--|---|
| Accessory Power Socket Relay | In under-dash fuse/relay box. See Fig. 1 . |
| A/C Compressor Clutch Relay | In under-hood fuse/relay box. See Fig. 2 . |
| A/F Sensor Relay | In under-dash fuse/relay box. See Fig. 1 . |
| Blower Motor Relay | In under-hood fuse/relay box. See Fig. 2 . |
| Condenser Fan Relay | In under-hood fuse/relay box. See Fig. 2 . |
| DRL Relay (Canada) | In underhood multi-relay box. See Fig. 3 . |
| Fog Light Relay | At left side of engine compartment. See Fig. 118 . |
| Ignition Coil Relay | In under-dash fuse/relay box. See Fig. 1 . |
| Moonroof Close Relay | At rear of roof. See Fig. 120 . |
| Moonroof Open Relay | At rear of roof. See Fig. 120 . |
| PGM-FI Main Relay 1 | In under-dash fuse/relay box. See Fig. 1 . |
| PGM-FI Main Relay 2 | In under-dash fuse/relay box. See Fig. 1 . |
| Power Window Relay | In under-dash fuse/relay box. See Fig. 1 . |
| Radiator Fan Relay | In under-hood fuse/relay box. See Fig. 2 . |
| Rear Window Defogger Relay | In under-hood fuse/relay box. See Fig. 2 . |
| Seat Heater Relay | Behind left side of glove box. See Fig. 62 . |
| Starter Cut Relay | In under-dash fuse/relay box. See Fig. 1 . |
| Throttle Actuator Control Module Relay | Behind left side of glove box. See Fig. 62 . |
| Turn Signal/Hazard Relay | In under-dash fuse/relay box. See Fig. 1 . |

CIRCUIT PROTECTION DEVICES

CIRCUIT PROTECTION DEVICES LOCATION

| Component | Location |
|----------------------------|---|
| Under-Dash Fuse/Relay Box | Behind left kick panel. See Fig. 46 . |
| Under-Hood Fuse/Relay Box | On left rear corner of engine compartment, forward of strut tower. See Fig. 35 . |
| Under-Hood Multi-Relay Box | Attached to under-hood fuse/relay box. |

CONTROL UNITS

CONTROL UNITS LOCATION

| Component | Location |
|---------------------------------------|----------|
| Sample manual. Download All pages at: | |

<https://www.arepairmanual.com/downloads/2003-2008-acura-tsx-car-service-repair-workshop-manual/>

Wednesday, March 12, 2008 12:08:45 AM

Page 1

2004 Acura TSX

Product: 2003-2008 Acura TSX Car Service Repair Workshop Manual

Full Download: <https://www.arepairmanual.com/downloads/2003-2008-acura-tsx->

[car-service-repair-workshop-manual/](https://www.arepairmanual.com/downloads/2003-2008-acura-tsx-car-service-repair-workshop-manual/)

| | |
|---|--|
| ECM/PCM | Under middle of dash. See Fig. 65 . |
| Hands-Free Telephone Control Unit (Acura Accessory) | Under center console. See Fig. 119 . |
| Immobilizer Control Unit-Receiver | Under steering column cover. See Fig. 41 . |
| Navigation Unit | In trunk, under right side of rear shelf. See Fig. 96 . |
| OPDS Unit | In front passenger's seat back. See Fig. 77 . |
| SRS Unit | Behind middle of dash. See Fig. 54 . |
| Throttle Actuator Control Module | Under right side of dash. See Fig. 70 . |
| VSA Modulator-Control Unit | At right side of engine compartment. See Fig. 6 . |

MOTORS

MOTORS LOCATION

| Component | Location |
|---|---|
| A/C Condenser Fan Motor Connector | At left front of engine. See Fig. 10 . |
| Blower Motor | Under right side of dash. See Fig. 69 . |
| Driver's Air Mix Control Motor | Behind left side of dash. See Fig. 51 . |
| Driver's Power Seat Front Up-Down Motor | Under driver's seat. See Fig. 74 . |
| Driver's Power Seat Rear Up-Down Motor | Under driver's seat. See Fig. 74 . |
| Driver's Power Seat Recline Motor Connector | Under driver's seat. See Fig. 73 . |
| Driver's Power Seat Slide Motor | Under driver's seat. See Fig. 74 . |
| Driver's Power Window Motor | In middle of driver's door. See Fig. 85 . |
| Front Passenger's Air Mix Control Motor | Under right side of dash. See Fig. 67 . |
| Front Passenger's Power Window Motor | In middle of front passenger's door. |
| Left Rear Power Window Motor | In middle of left rear door. See Fig. 87 . |
| Mode Control Motor | Behind glove box. See Fig. 61 . |
| Moonroof Motor | At rear center of roof. See Fig. 88 . |
| Radiator Fan Motor Connector | At left front of engine compartment. See Fig. 26 . |
| Recirculation Control Motor | Behind glove box, on blower unit. See Fig. 61 . |
| Right Rear Power Window Motor | In middle of right rear door. |
| Starter | At lower left rear of engine. See Fig. 19 . |
| Windshield Washer Motor | On bottom of windshield washer fluid reservoir. See Fig. 102 . |
| Windshield Wiper Motor | Under left side of cowl cover. See Fig. 37 . |

SENDING UNITS & SENSORS

SENDING UNITS & SENSORS LOCATION

| Component | Location |
|----------------------------|---|
| A/F Sensor Connector (A/T) | At rear of engine. See Fig. 29 . |

[Sample manual. Download All pages at:](#)

| | |
|--|---|
| A/F Sensor Connector (M/T) | At rear of engine. See Fig. 31 . |
| APP Sensor | At right side of engine compartment. See Fig. 4 . |
| CKP Sensor | At right front of engine. See Fig. 108 . |
| CMP Sensor A | At rear of engine. See Fig. 24 . |
| CMP Sensor B | At rear of engine. See Fig. 24 . |
| Countershaft Speed Sensor (A/T) | On top of transmission. See Fig. 29 . |
| Countershaft Speed Sensor (M/T) | On transmission housing. See Fig. 33 . |
| Driver's Side Curtain Impact Sensor Connector | At left "C" pillar. See Fig. 92 . |
| Driver's Side Impact Sensor | On floor, left of driver's seat. See Fig. 78 . |
| ECT Sensor (2.3L) | On right rear of engine. See Fig. 24 . |
| Evaporator Temperature Sensor Connector | Behind right side of dash. See Fig. 51 . |
| Front Passenger's Side Impact Sensor | On floor, right of front passenger's seat. See Fig. 78 . |
| FTP Sensor | Under left rear of vehicle. See Fig. 117 . |
| Fuel Tank Unit | At middle front of trunk. See Fig. 99 . |
| IAT Sensor | On top rear of intake manifold. See Fig. 18 . |
| Knock Sensor | At left side of engine. See Fig. 19 . |
| Left Front Impact Sensor | Behind left side of bumper. See Fig. 107 . |
| Left Front Wheel Speed Sensor Connector | On left front suspension knuckle. See Fig. 28 . |
| Left Rear Wheel Speed Sensor Connector | On left rear suspension knuckle. See Fig. 116 . |
| Mainshaft Speed Sensor (A/T) | On transmission housing. See Fig. 30 . |
| MAP Sensor | At left side of engine. See Fig. 18 . |
| Outside Air Temperature Sensor | Behind center of front bumper. See Fig. 105 . |
| Passenger's Side Curtain Impact Sensor Connector | At right "C" pillar. See Fig. 92 . |
| Right Front Impact Sensor | Behind right side of front bumper. See Fig. 103 . |
| Right Front Wheel Speed Sensor Connector | At right front side of engine compartment. See Fig. 5 . |
| Right Rear Wheel Speed Sensor | On right rear suspension knuckle. |
| Secondary HO2S Connector | At right side of floor. See Fig. 80 . |
| Steering Angle Sensor | In steering column. See Fig. 39 . |
| TP Sensor/Throttle Actuator | On throttle body. See Fig. 23 . |
| Yaw Rate Sensor | At left side of floor. See Fig. 79 . |

SOLENOIDS & SOLENOID VALVES

SOLENOIDS & SOLENOID VALVES LOCATION

| Component | Location |
|--|---|
| A/C Compressor Connector | At front of engine. See Fig. 110 . |
| A/T Clutch Pressure Control Solenoid Valve A (A/T) | On top rear of transmission. See Fig. 21 . |
| A/T Clutch Pressure Control Solenoid Valve B | On left side of transmission. See Fig. 113 . |

| | |
|--|--|
| A/T Clutch Pressure Control Solenoid Valve C | On left side of transmission. See Fig. 113 . |
| Engine Mount Control Solenoid Valve | On left front of engine. See Fig. 14 . |
| EVAP Canister Purge Valve | At left side of engine. See Fig. 25 . |
| EVAP Canister Vent Shut Valve | Under left rear of vehicle. See Fig. 117 . |
| Injector No. 1 | At top of engine. See Fig. 15 . |
| Injector No. 2 | At top of engine. See Fig. 15 . |
| Injector No. 3 | At top of engine. See Fig. 15 . |
| Injector No. 4 | At top of engine. See Fig. 15 . |
| Reverse Lockout Solenoid (M/T) | On transmission housing. See Fig. 31 . |
| Shift Lock Solenoid | Under floor console, on bottom right of gear selector lever. See Fig. 57 . |
| Starter Solenoid | At lower left rear of engine. See Fig. 19 . |
| VTC Oil Control Solenoid Valve | At right front of engine. See Fig. 11 . |
| VTEC Solenoid Valve | At rear of engine compartment. See Fig. 13 . |

SWITCHES

SWITCHES LOCATION

| Component | Location |
|---|---|
| A/C Pressure Switch | At right front of engine compartment. See Fig. 9 . |
| Back-Up Light Switch (M/T) | On top left of transmission. See Fig. 32 . |
| Brake Fluid Level Switch | On brake fluid reservoir. See Fig. 36 . |
| Brake Pedal Position Switch | On brake pedal support. See Fig. 50 . |
| Clutch Interlock Switch (M/T) | On clutch pedal support. See Fig. 115 . |
| Clutch Pedal Position Switch (M/T) | Behind left side of dash. Fig. 49 . |
| Driver's Door Key Cylinder Switch Connector | In driver's door. See Fig. 86 . |
| Driver's Seat Belt Switch Connector | Under driver's seat. See Fig. 73 . |
| Front Passenger's Seat Belt Switch | Under front passenger's seat. See Fig. 76 . |
| Moonroof Limit Switch Connector | At center rear of roof. See Fig. 88 . |
| Oil Pressure Switch | At right front of engine. See Fig. 109 . |
| Parking Brake Switch | Mounted under parking brake lever. See Fig. 58 . |
| PSP Switch | At right side of engine compartment. See Fig. 5 . |
| Radiator Fan Switch | Under left side of engine compartment. See Fig. 111 . |
| Security Hood Switch Connector | At front of engine compartment, on hood lock/latch assembly. See Fig. 104 . |
| Transmission Range Switch (A/T) | On rear of transmission. See Fig. 115 . |
| Trunk Latch Switch | At middle rear of trunk lid. See Fig. 101 . |
| Trunk Lid Opener Switch Connector | At center rear of trunk lid. See Fig. 101 . |
| VTEC Oil Pressure Switch | At rear of engine compartment. See Fig. 13 . |
| 2nd Clutch Pressure Switch (A/T) | On top front of transmission. See Fig. 21 . |

3rd Clutch Pressure Switch (A/T)

On side of transmission. See **Fig. 114** .**MISCELLANEOUS****MISCELLANEOUS LOCATION**

| Component | Location |
|---|--|
| Alternator | At left front of engine. See Fig. 12 . |
| Blower Power Transistor | On bottom of blower unit. See Fig. 67 . |
| Coil Assembly (Rear Window Defogger) | At right "C" pillar. See Fig. 89 . |
| DLC | At lower left of dash, above the kick panel. See Fig. 44 . |
| Driver's Airbag First & Second Inflators Connector | Under steering wheel horn pad. See Fig. 38 . |
| Driver's Seat Belt Tensioner Connector | At left "B" pillar. See Fig. 81 . |
| Driver's Seat Heater Connector | Under driver's seat. See Fig. 73 . |
| Driver's Side Airbag Inflator Connector | Under driver's seat. See Fig. 75 . |
| Driver's Side Curtain Airbag Inflator Connector | At left "C" pillar. See Fig. 91 . |
| Front Passenger's Airbag First & Second Inflators Connector | Behind glove box. See Fig. 60 . |
| Front Passenger's Seat Belt Tensioner Connector | At right "B" pillar. |
| Front Passenger's Seat Heater | Under front passenger's seat. See Fig. 76 . |
| Front Passenger's Side Airbag Inflator Connector | Under front passenger's seat. See Fig. 76 . |
| Front Passenger's Side Curtain Airbag Inflator Connector | At right "C" pillar. See Fig. 91 . |
| Front Passenger's Side Curtain Airbag Inflator Connector | At right "C" pillar. See Fig. 92 . |
| High Horn | At front of engine compartment, behind front grille. See Fig. 104 . |
| Ignition Coil No. 1 | At top of engine. See Fig. 17 . |
| Ignition Coil No. 2 | At top of engine. See Fig. 17 . |
| Ignition Coil No. 3 | At top of engine. See Fig. 17 . |
| Ignition Coil No. 4 | At top of engine. See Fig. 17 . |
| Junction Connector C102 | At left side of engine compartment. See Fig. 22 . |
| Junction Connector C405 | Behind left side of dash. See Fig. 43 . |
| Junction Connector C406 | Behind left side of dash. See Fig. 42 . |
| Junction Connector C407 | Behind left side of dash. See Fig. 42 . |
| Junction Connector C553 | Behind glove box. See Fig. 59 . |
| Junction Connector C554 | Behind glove box. See Fig. 59 . |
| Junction Connector C555 | Behind glove box. See Fig. 59 . |
| Junction Connector C556 | Behind glove box. See Fig. 59 . |
| Low Horn | At front of engine compartment, behind front grille. See Fig. 106 . |

| | |
|---|--|
| MES Connector | Behind left kick panel. See Fig. 46 . |
| Navigation Service Check Connector | In trunk, under right side of rear shelf. See Fig. 97 . |
| Noise Condenser Connector | At left "C" pillar. See Fig. 93 . |
| Passenger's Seat Belt Tensioner Connector | At right "B" pillar. See Fig. 81 . |
| Stereo Amplifier | Behind center of dash. See Fig. 53 . |
| Window Antenna Coil | At left "C" pillar. See Fig. 90 . |
| Window Antenna Coil Connector A | Under steering column cover. See Fig. 40 . |

CONNECTORS

CONNECTORS LOCATION

| Component | Location |
|--------------------------------|---|
| C101 (Gray, 6 Pin) | At left rear of engine. See Fig. 20 . |
| C108 (Black, 8 Pin) | At left side of transmission housing. See Fig. 112 . |
| C151 (Gray, 1 Pin) | At left side of engine compartment. See Fig. 27 . |
| C152 (Gray, 10 Pin) | At top of transmission housing. See Fig. 30 . |
| C201 (White, 13 Pin) | Under middle of dash. See Fig. 66 . |
| C251 (White, 13 Pin) | Under right side of dash. See Fig. 68 . |
| C310 (Optional) (Gray, 2 Pin) | Behind left side of dash. See Fig. 48 . |
| C401 (Brown, 20 Pin) | Behind left side of dash. See Fig. 47 . |
| C402 (Brown, 1 Pin) | Behind left side of dash. See Fig. 47 . |
| C403 (Yellow, 4 Pin) | Behind left side of dash. See Fig. 47 . |
| C404 (White, 13 Pin) | Behind left side of dash. See Fig. 48 . |
| C411 (Brown, 1 Pin) | Behind middle of dash. See Fig. 55 . |
| C415 (Optional) (Brown, 2 Pin) | At left side of engine compartment. See Fig. 28 . |
| C501 (White, 24 Pin) | Behind left side of dash. See Fig. 44 . |
| C502 (Gray, 4 Pin) | Behind left side of dash. See Fig. 44 . |
| C551 (Gray, 14 Pin) | Behind right kick panel. See Fig. 72 . |
| C552 (White, 21 Pin) | Behind right kick panel. See Fig. 71 . |
| C599 (A/T) (Gray, 8 Pin) | Under center console. See Fig. 56 . |
| C601 (Gray, 10 Pin) | Behind left side of dash. See Fig. 45 . |
| C631 (White, 20 Pin) | In driver's door. See Fig. 84 . |
| C632 (Blue/White, 17 Pin) | In driver's door. See Fig. 84 . |
| C651 (Light Blue, 6 Pin) | Behind glove box. See Fig. 64 . |
| C699 (White, 13 Pin) | In front of driver's door. See Fig. 83 . |
| C701 (White, 18 Pin) | At left front of trunk. See Fig. 95 . |
| C702 (White, 14 Pin) | At left front of trunk. See Fig. 95 . |
| C703 (White, 10 Pin) | At left front of trunk. See Fig. 95 . |
| C731 (White, 13 Pin) | Behind glove box. See Fig. 63 . |
| C732 (Gray, 12 Pin) | Behind glove box. See Fig. 63 . |
| C751 (White, 17 Pin) | At left "B" pillar. See Fig. 82 . |

| | |
|---------------------------------------|---|
| C781 (Gray, 17 Pin) | At right "B" pillar. See Fig. 82 . |
| C789 (Acura Accessory) (Green, 2 Pin) | At left side of trunk lid. See Fig. 100 . |
| C799 (White, 13 Pin) | In front of front passenger's door. See Fig. 83 . |
| C801 (Gray, 4 Pin) | Under front passenger's seat. See Fig. 76 . |
| C851 (White, 21 Pin) | Behind center of dash. See Fig. 52 . |
| C901 (Gray, 10 Pin) | Under driver's seat. See Fig. 75 . |
| C910 (Gray, 2 Pin) | Under driver's seat. See Fig. 73 . |


GROUNDS

GROUNDS LOCATION

| Component | Location |
|------------|---|
| G1 | At left side of engine compartment. See Fig. 34 . |
| G2 | At right side of engine compartment. See Fig. 7 . |
| G3 | At left side of engine compartment. See Fig. 27 . |
| G101 | At top left rear of engine. See Fig. 16 . |
| G201 | Behind right side of front bumper. See Fig. 102 . |
| G202 | Behind right side of front bumper. See Fig. 103 . |
| G203 | At right side of engine compartment. See Fig. 8 . |
| G301 | At left side of front bumper. See Fig. 107 . |
| G302 | Behind left side of front bumper. See Fig. 107 . |
| G501 | Behind left side of dash. See Fig. 42 . |
| G502 | Behind left side of dash. See Fig. 42 . |
| G503 | Behind glove box. See Fig. 63 . |
| G504 | Behind middle of dash. See Fig. 52 . |
| G505 (A/T) | Under center console. See Fig. 56 . |
| G506 | Behind center of dash. See Fig. 55 . |
| G601 | At left side of floor. See Fig. 79 . |
| G602 | At right side of floor. See Fig. 80 . |
| G603 | At middle front of trunk. See Fig. 98 . |
| G604 | At right "C" pillar. See Fig. 89 . |
| G701 | At left side of trunk. See Fig. 94 . |

COMPONENT LOCATION GRAPHICS


NOTE: Figures may show multiple component locations. Refer to appropriate table for proper figure references.

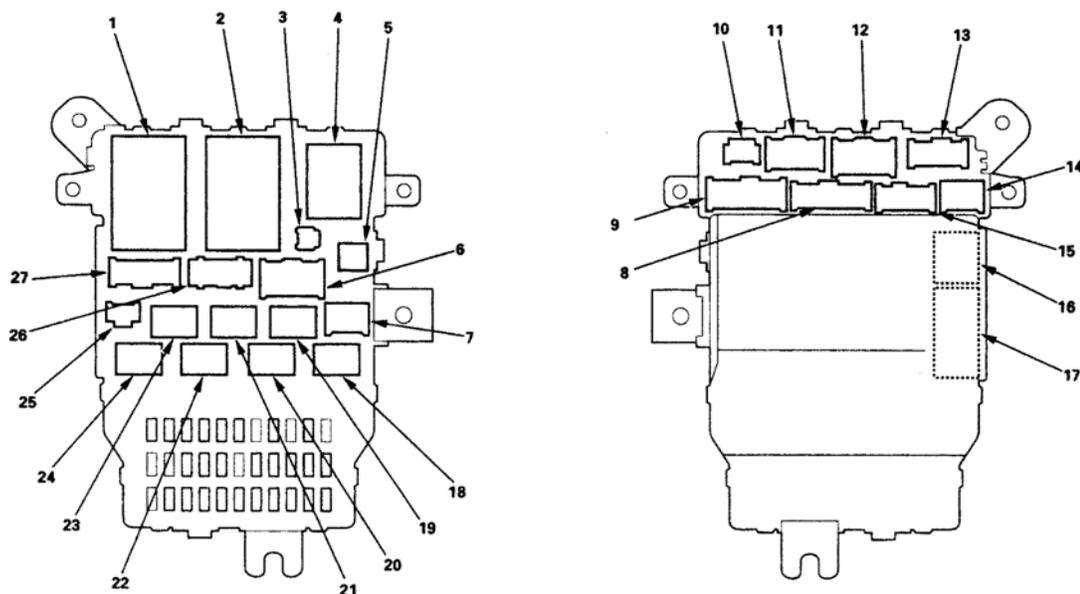

| Ref | Socket |
|-----|------------------------------|
| 1 | X |
| 2 | N |
| 3 | R (MES connector) |
| 4 | Turn signal/hazard relay |
| 5 | S |
| 6 | A |
| 7 | T |
| 8 | E |
| 9 | F |
| 10 | I |
| 11 | C |
| 12 | B |
| 13 | D |
| 14 | G |
| 15 | H |
| 16 | Q (MICU) |
| 17 | P (MICU) |
| 18 | Starter cut relay |
| 19 | Accessory power socket relay |
| 20 | A/F sensor relay |
| 21 | PGM-FI main relay 1 |
| 22 | Power window relay |
| 23 | Ignition coil relay |
| 24 | PGM-FI main relay 2 |
| 25 | M |
| 26 | K |
| 27 | J |

G00292065


Fig. 1: Under-Dash Fuse/Relay Box
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

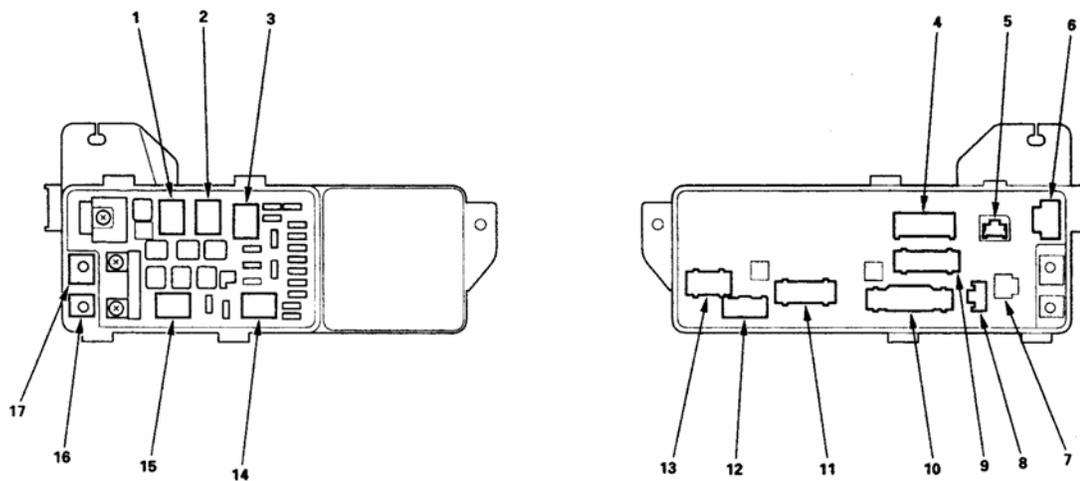

| Ref | Socket |
|-----|-----------------------------|
| 1 | Blower motor relay |
| 2 | A/C compressor clutch relay |
| 3 | Rear window defogger relay |
| 4 | D |
| 5 | A (ELD unit) |
| 6 | G |
| 7 | B |
| 8 | C |
| 9 | E |
| 10 | F |
| 11 | H |
| 12 | J |
| 13 | I |
| 14 | Radiator fan relay |
| 15 | Condenser fan relay |
| 16 | T101 |
| 17 | T102 |

G00292066


Fig. 2: Under-Hood Fuse/Relay Box
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

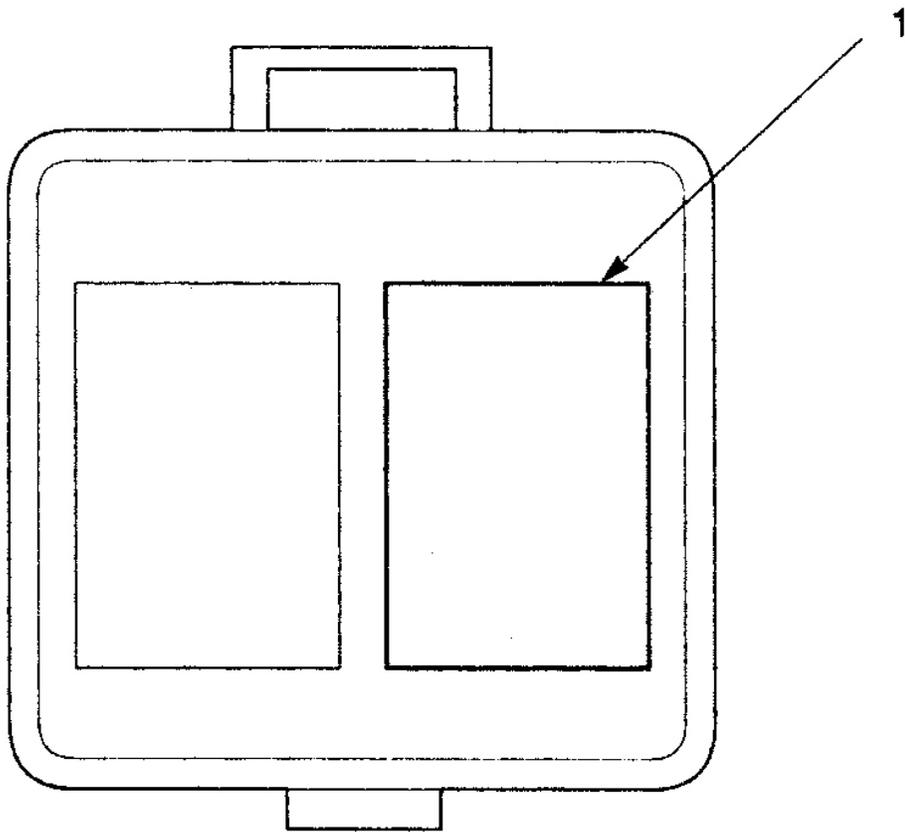

| Ref | Socket |
|-----|--------------------|
| 1 | DRL relay (Canada) |


G00292067

Fig. 3: Under-Hood Multi-Relay Box
Courtesy of AMERICAN HONDA MOTOR CO., INC.

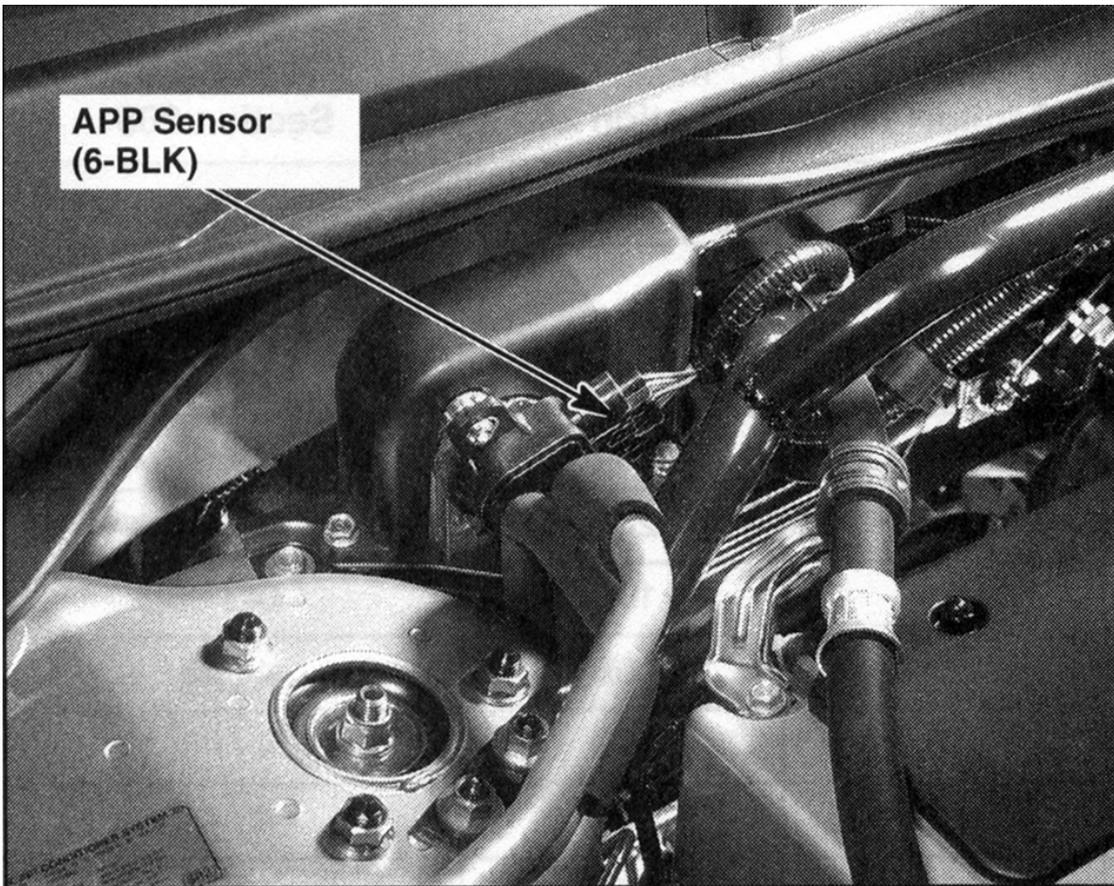


G00268078

Fig. 4: Right Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

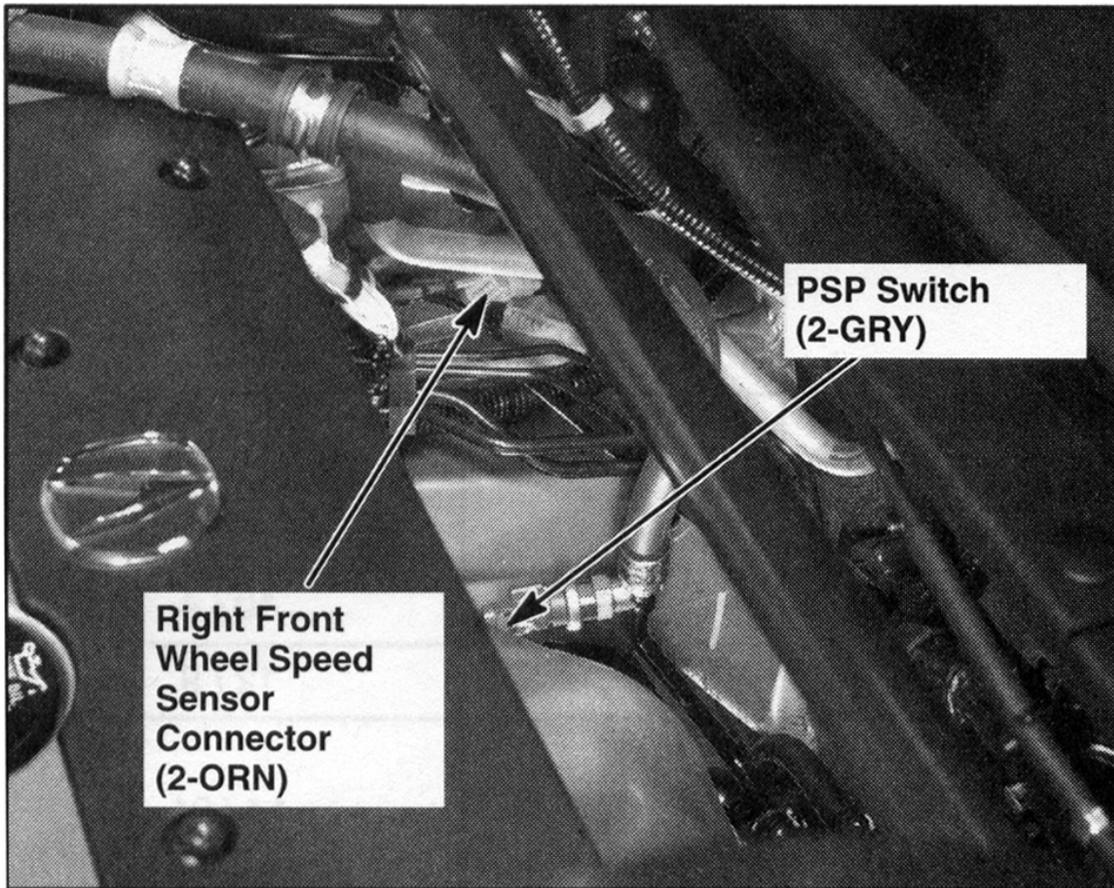


G00268079

Fig. 5: Right Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

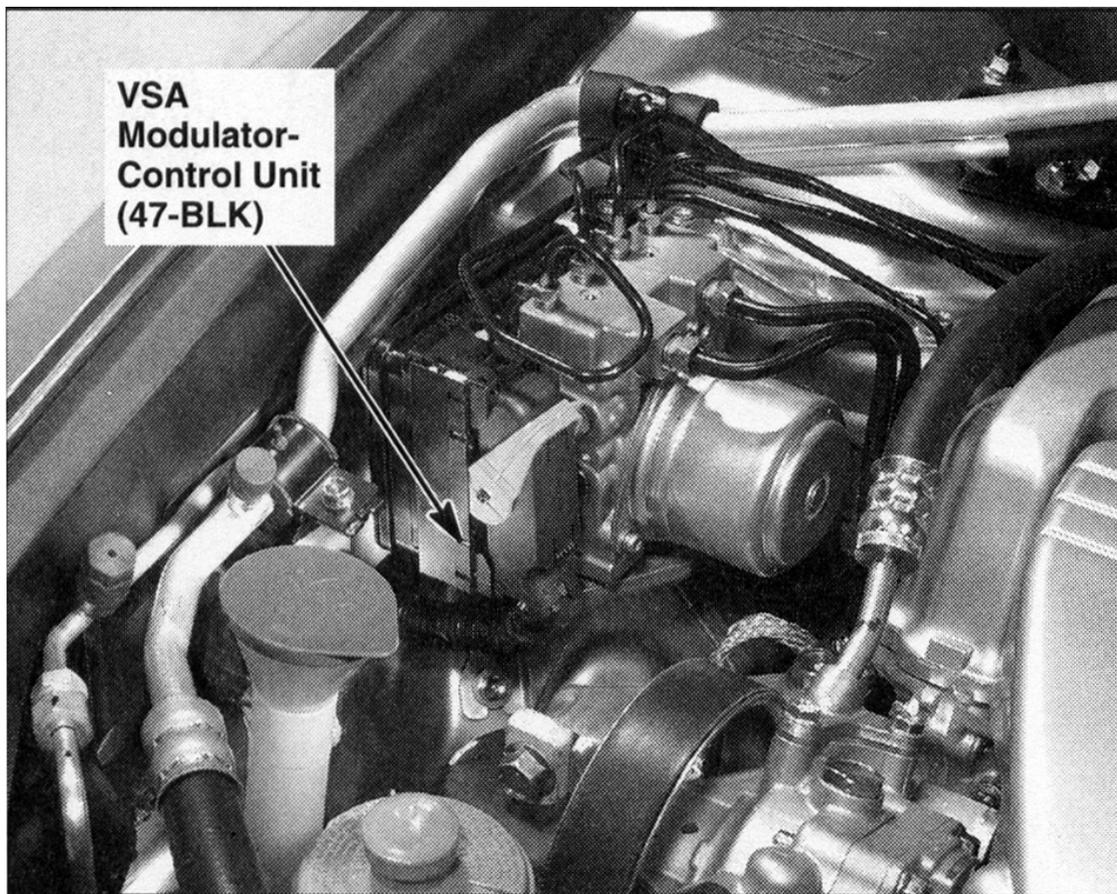


G00268080

Fig. 6: Right Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

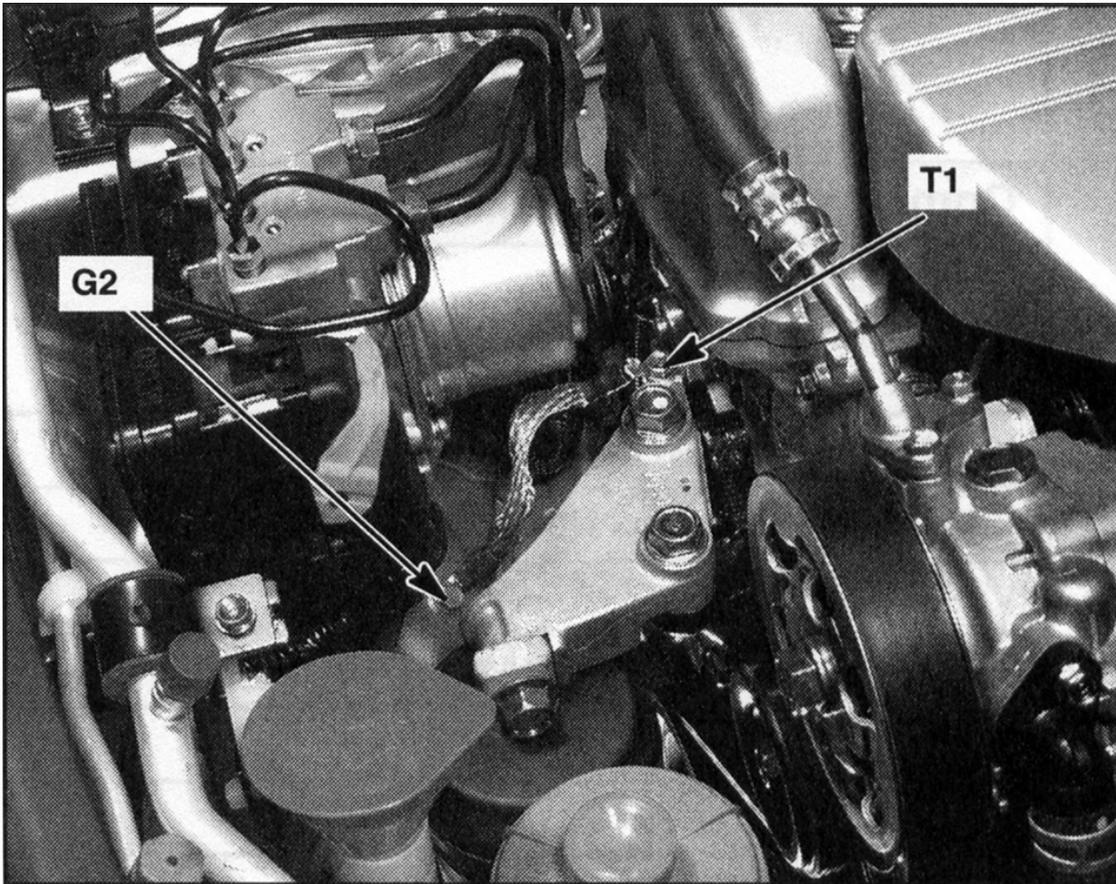


G00268081

Fig. 7: Right Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

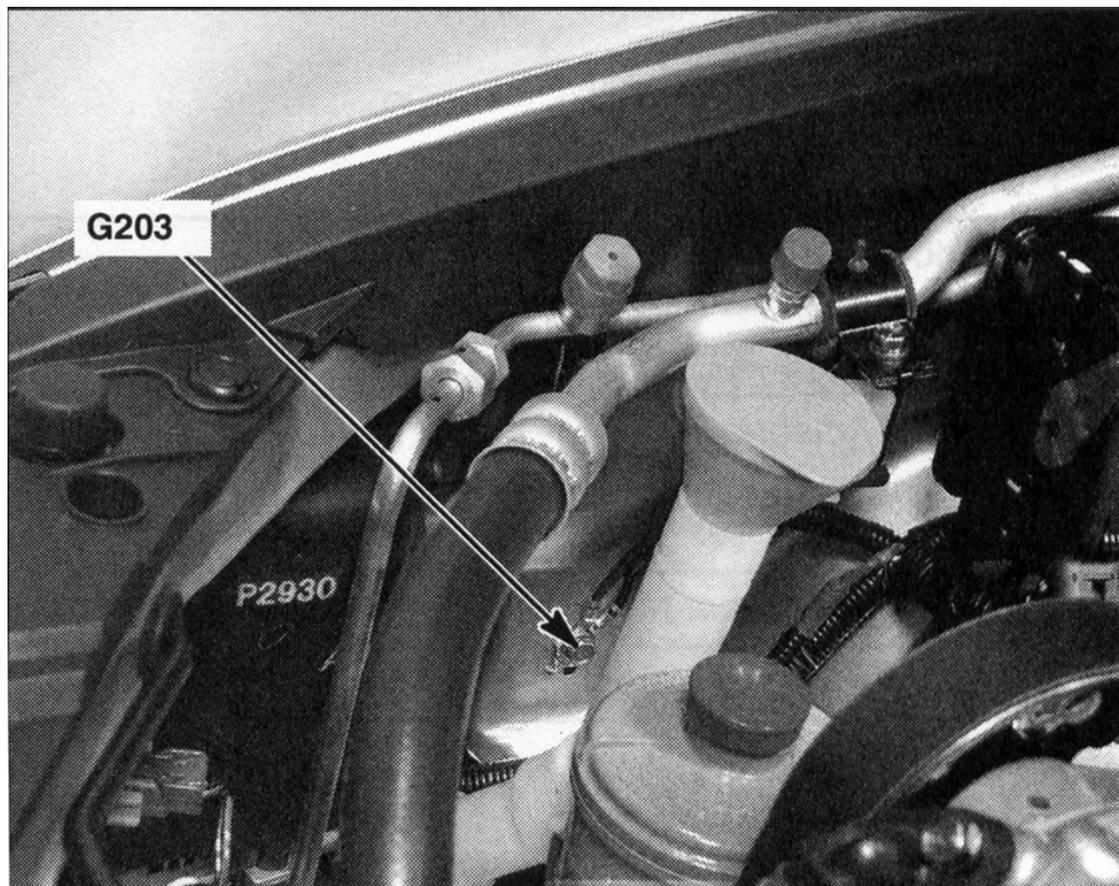


G00268082

Fig. 8: Right Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

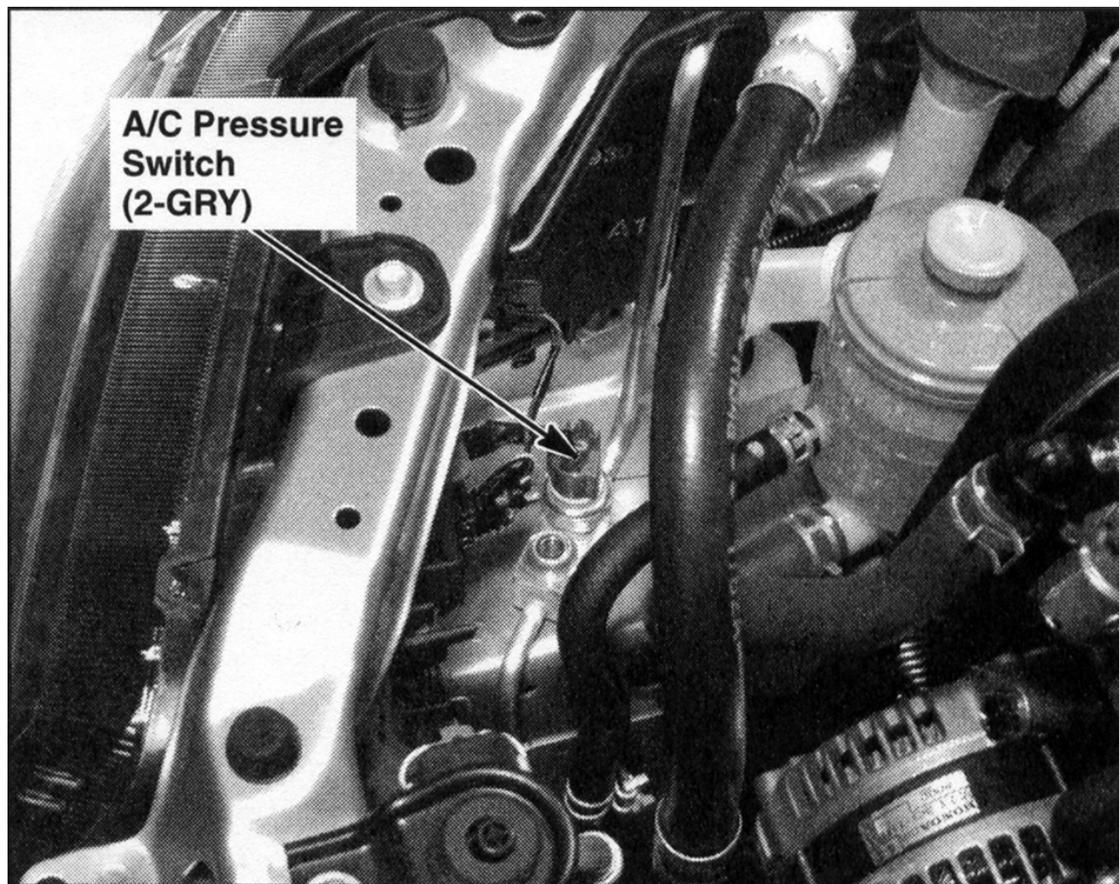


G00268083

Fig. 9: Right Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

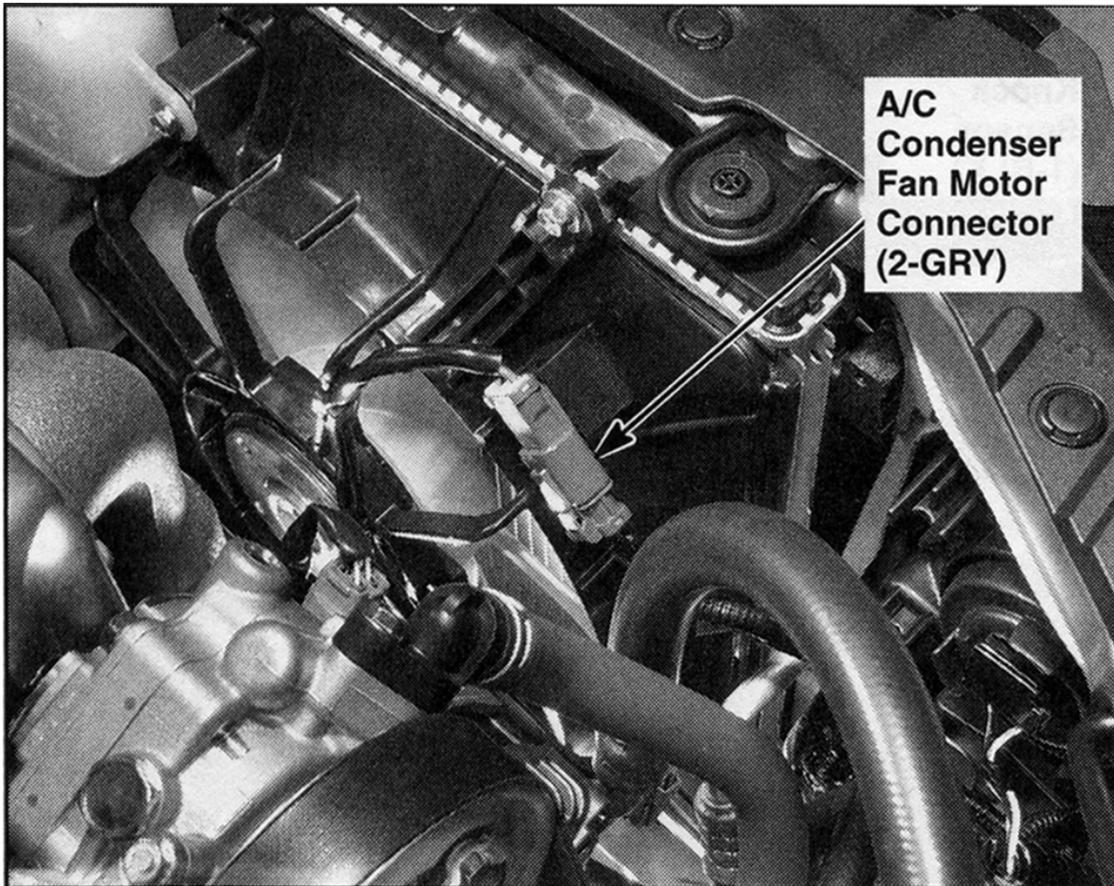

G00268084


Fig. 10: Right Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

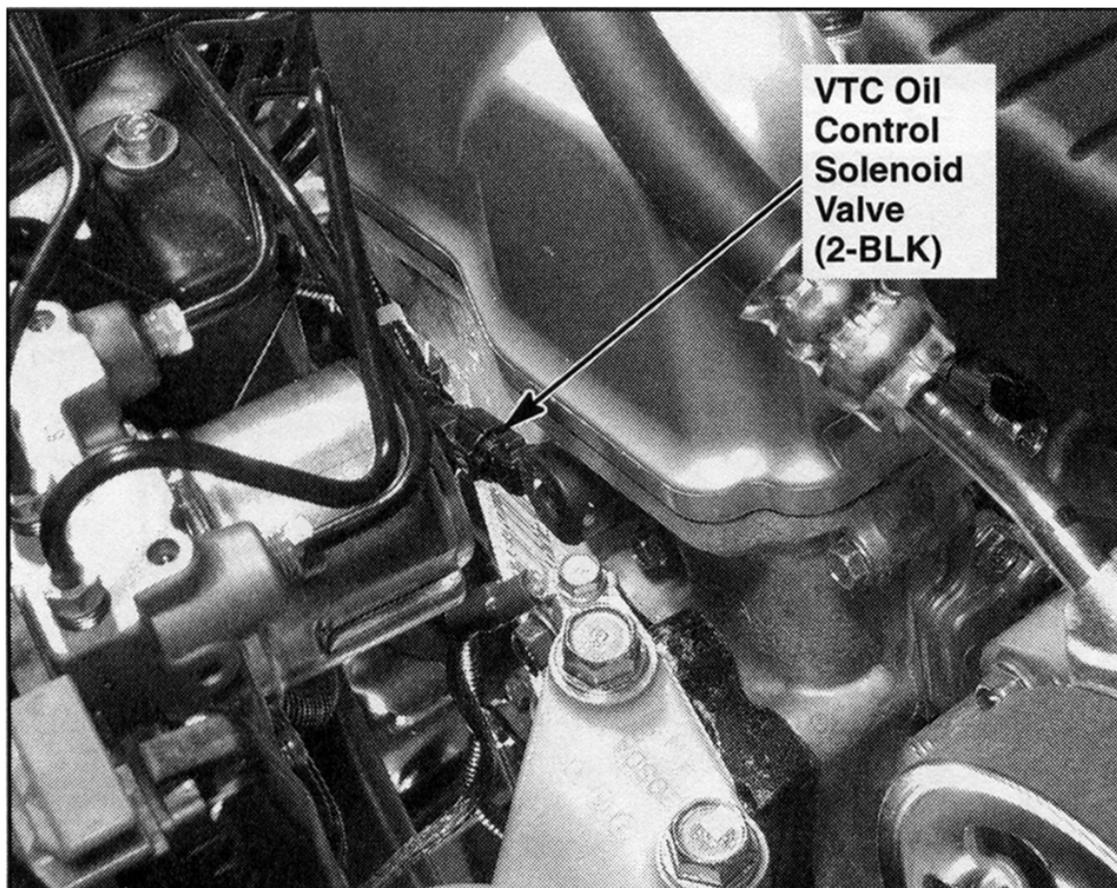

G00268085

Fig. 11: Right Side Of Engine


Courtesy of AMERICAN HONDA MOTOR CO., INC.

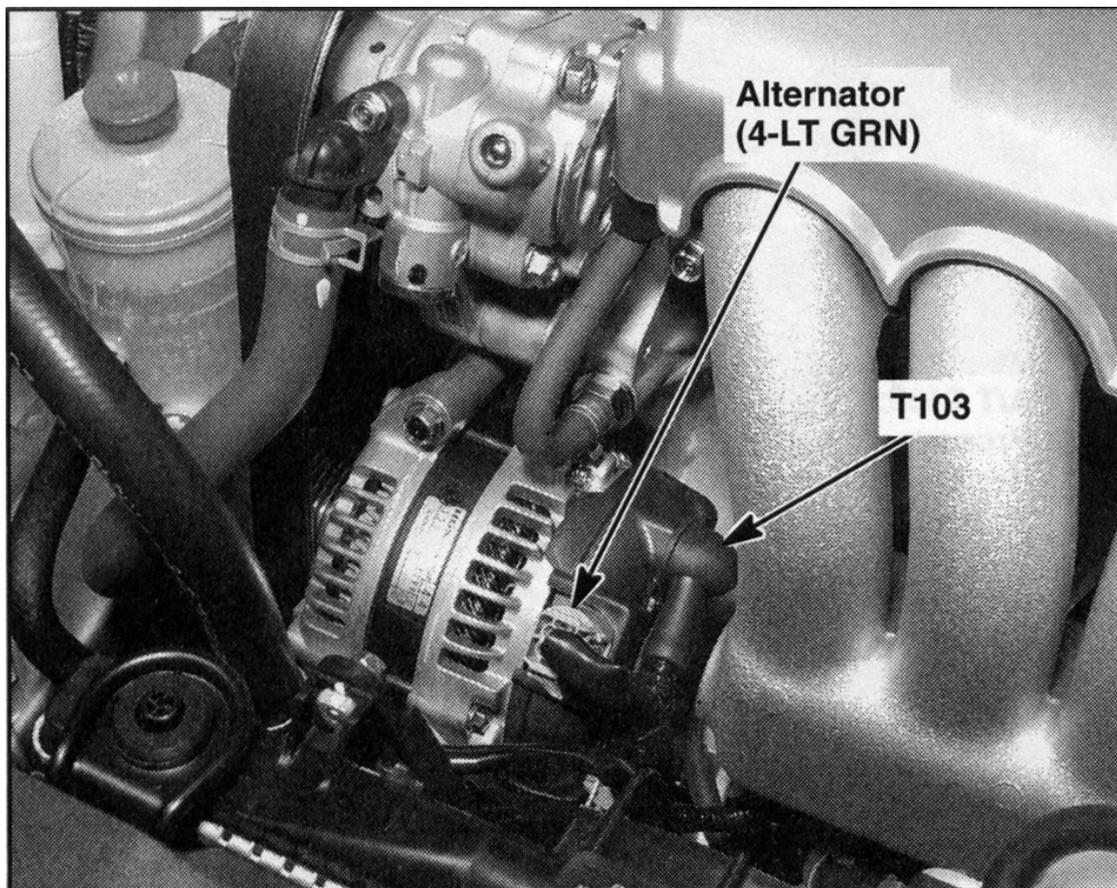

G00268086


Fig. 12: Left Front Of Engine

Courtesy of AMERICAN HONDA MOTOR CO., INC.

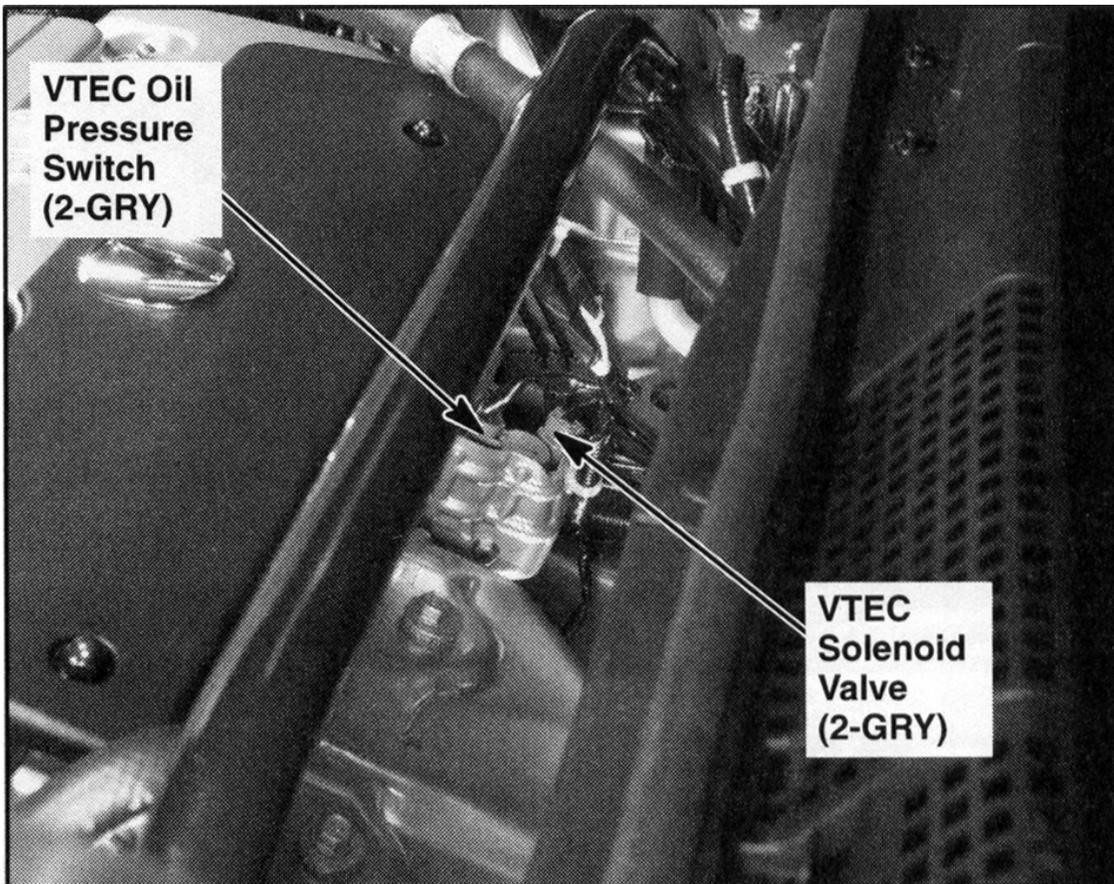


G00268087

Fig. 13: Rear Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

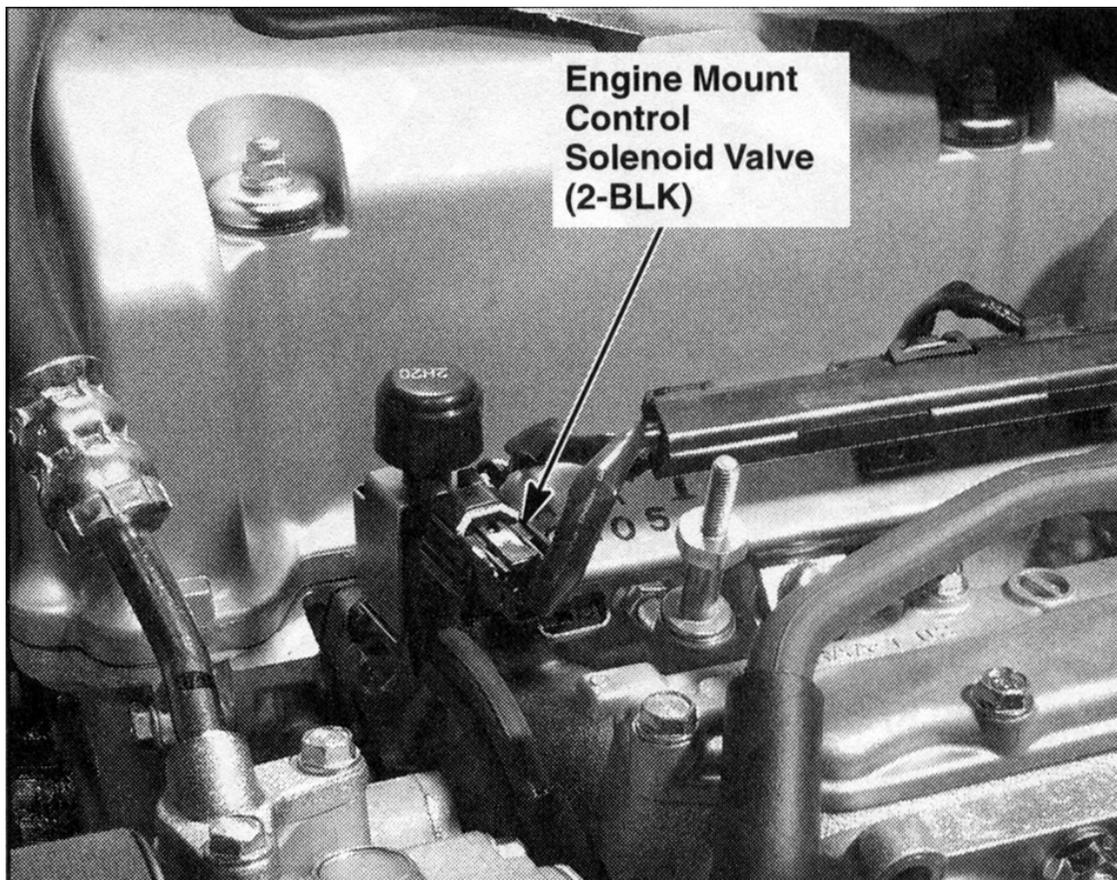

G00268088


Fig. 14: Left Front Of Engine
Courtesy of AMERICAN HONDA MOTOR CO., INC.

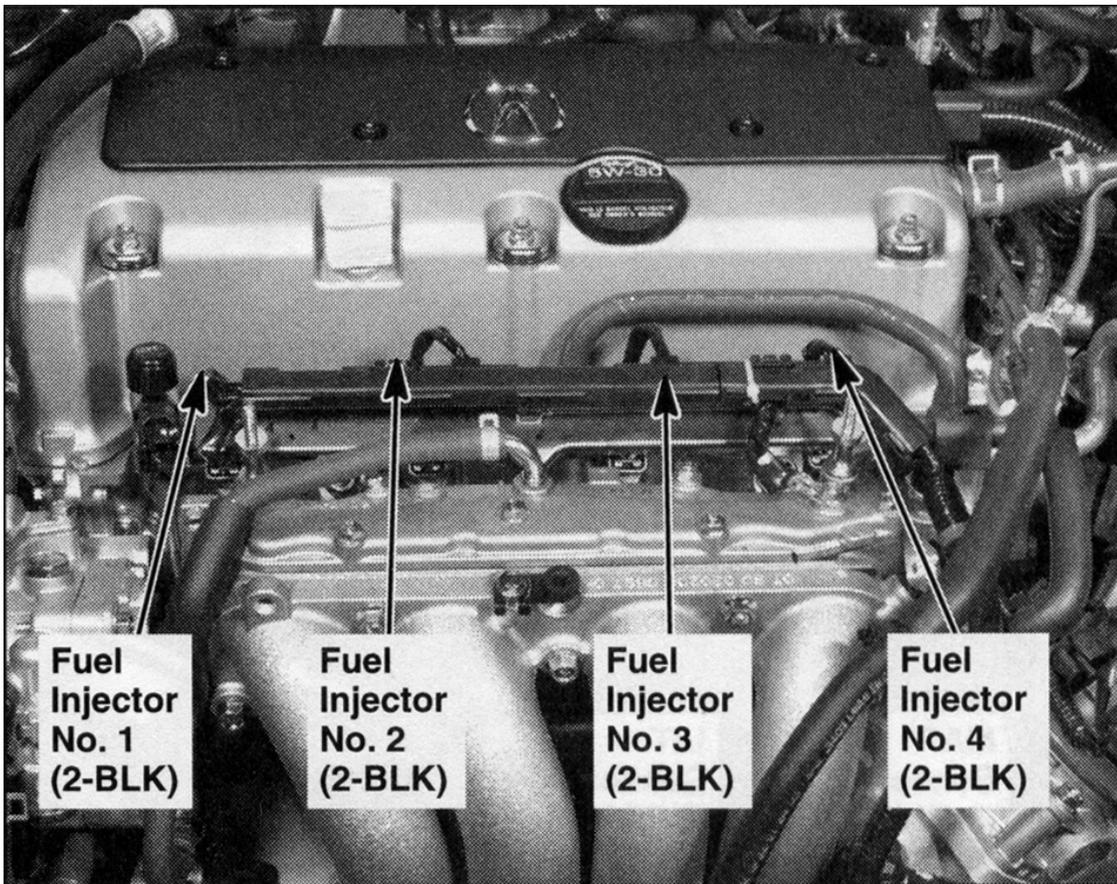

G00268089

Fig. 15: Middle Of Engine


Courtesy of AMERICAN HONDA MOTOR CO., INC.

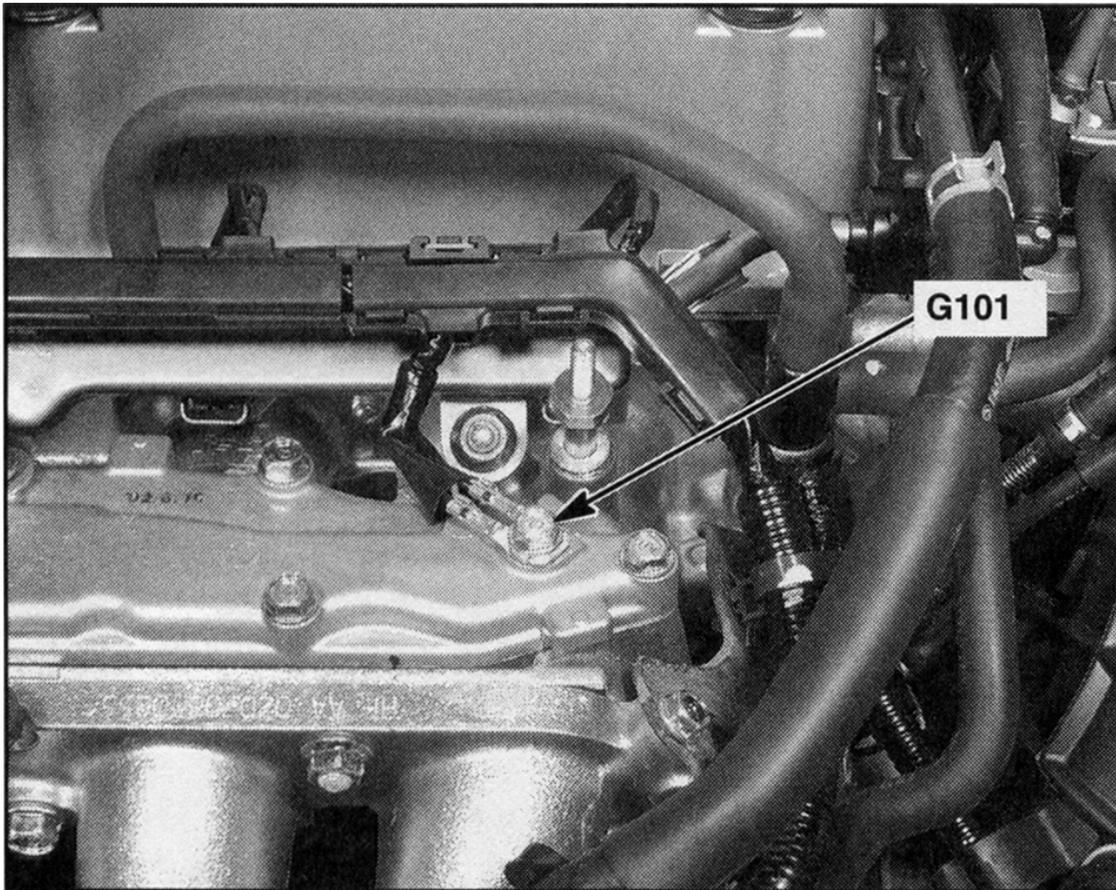

G00268090


Fig. 16: Left Rear Of Engine

Courtesy of AMERICAN HONDA MOTOR CO., INC.

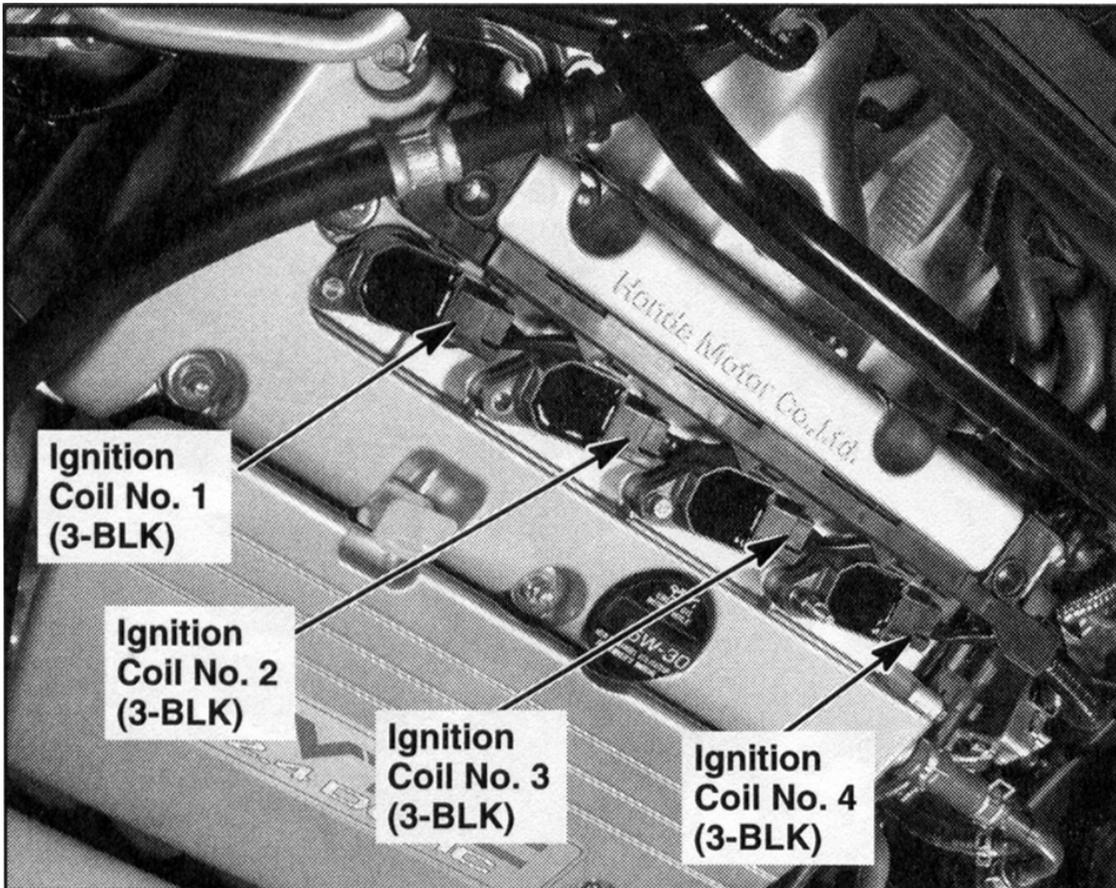


G00268091

Fig. 17: Middle Of Engine
Courtesy of AMERICAN HONDA MOTOR CO., INC.

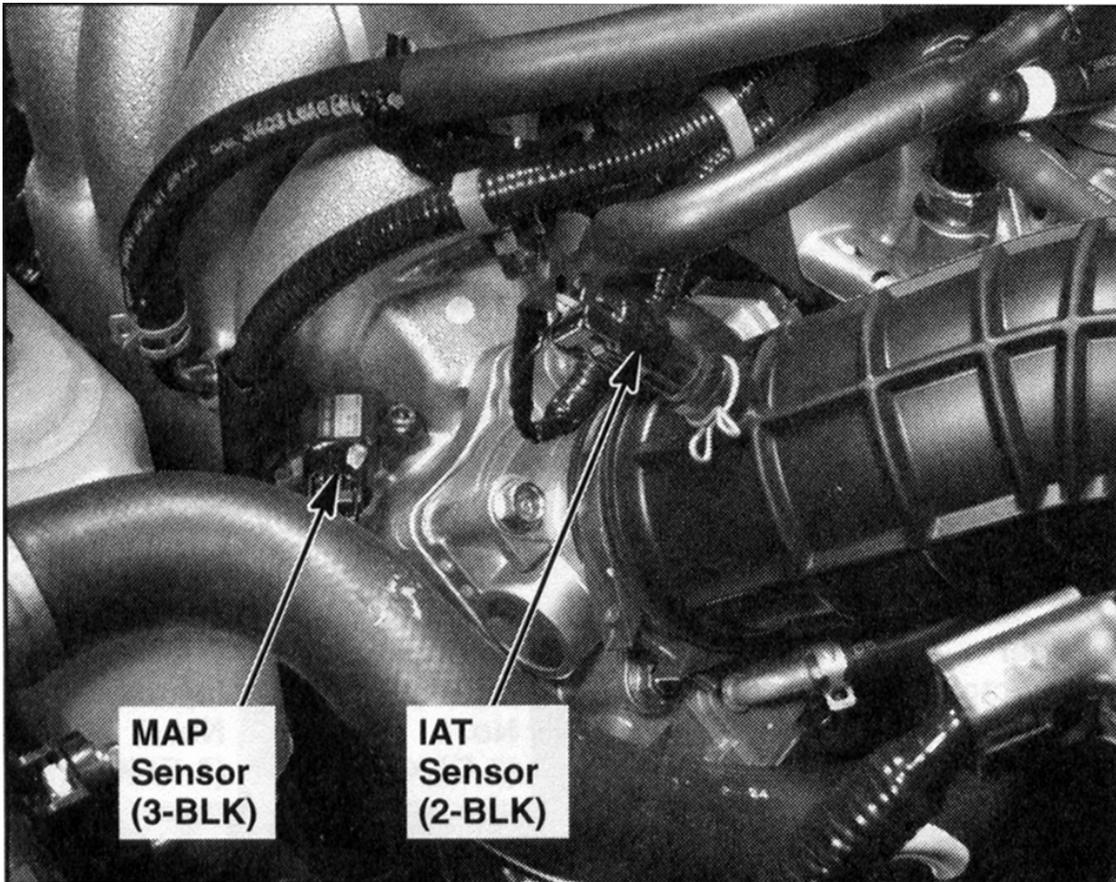


G00268092

Fig. 18: Left Rear Of Engine
Courtesy of AMERICAN HONDA MOTOR CO., INC.

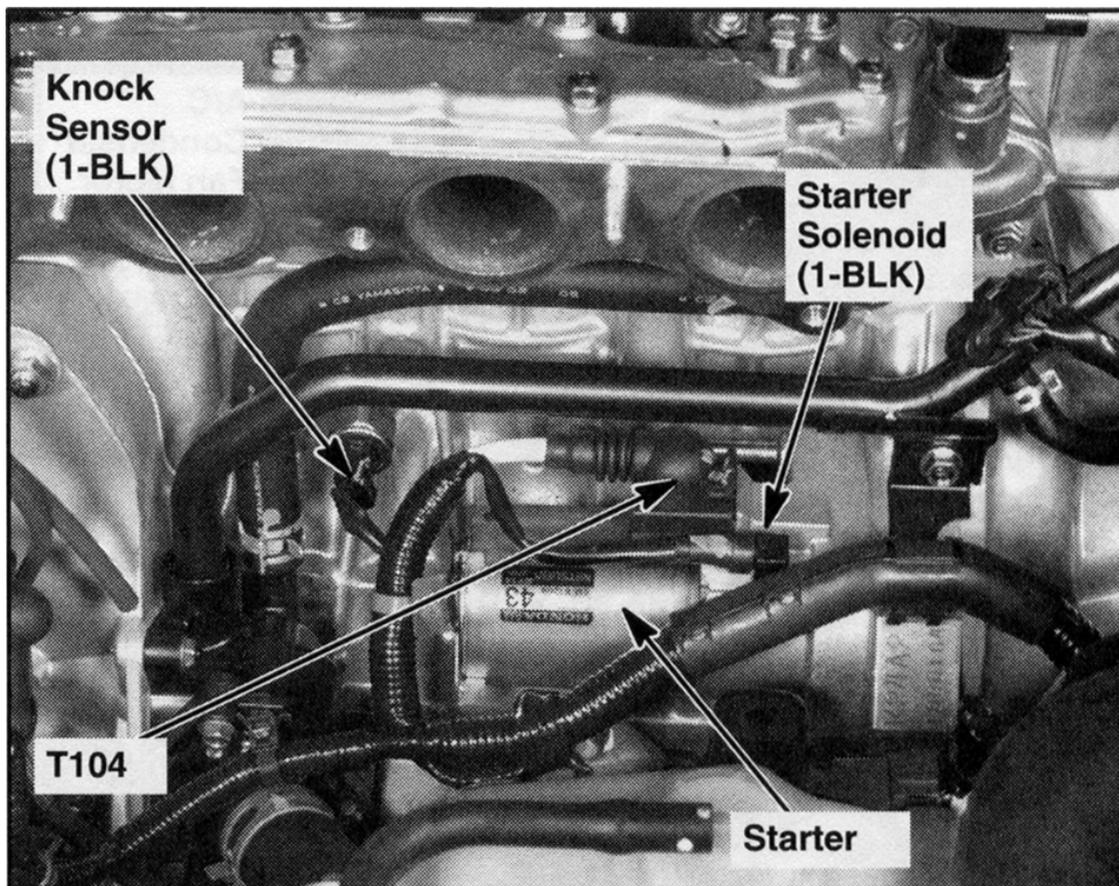


G00268093

Fig. 19: Left Side Of Engine
Courtesy of AMERICAN HONDA MOTOR CO., INC.

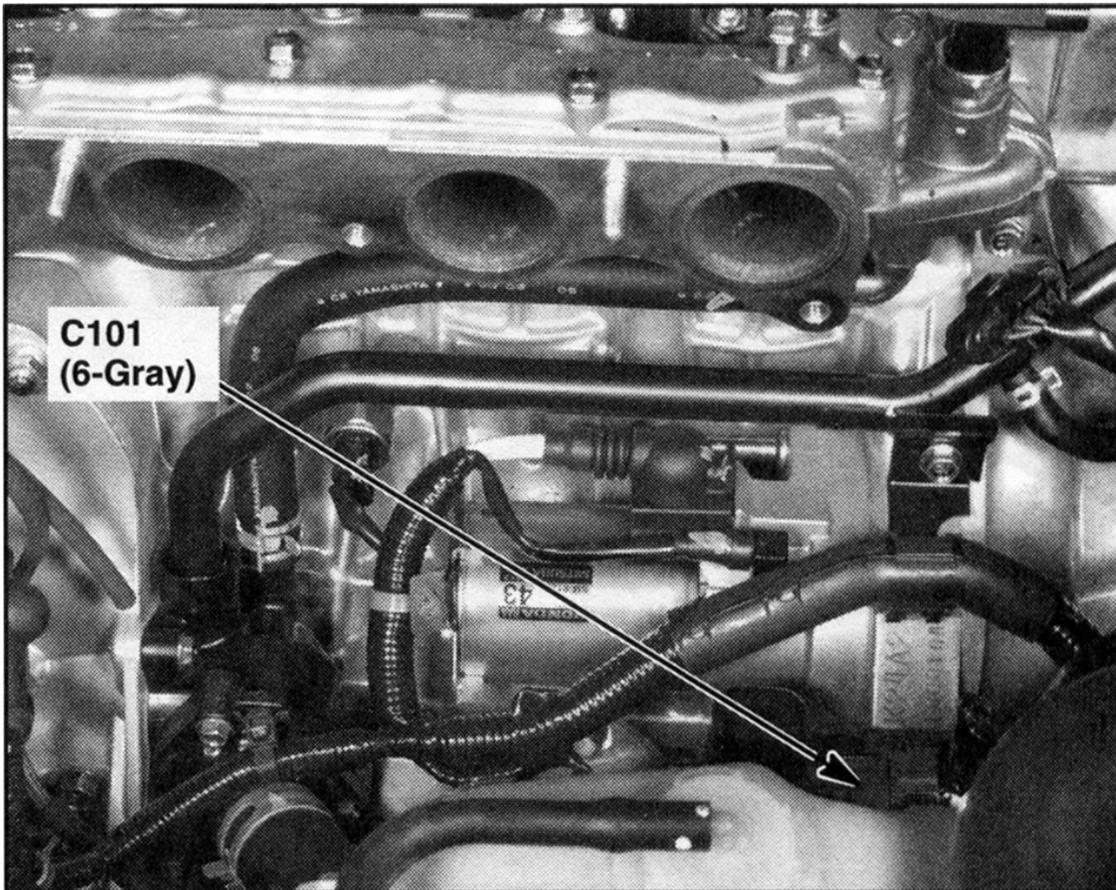


G00268094

Fig. 20: Left Rear Of Engine
Courtesy of AMERICAN HONDA MOTOR CO., INC.

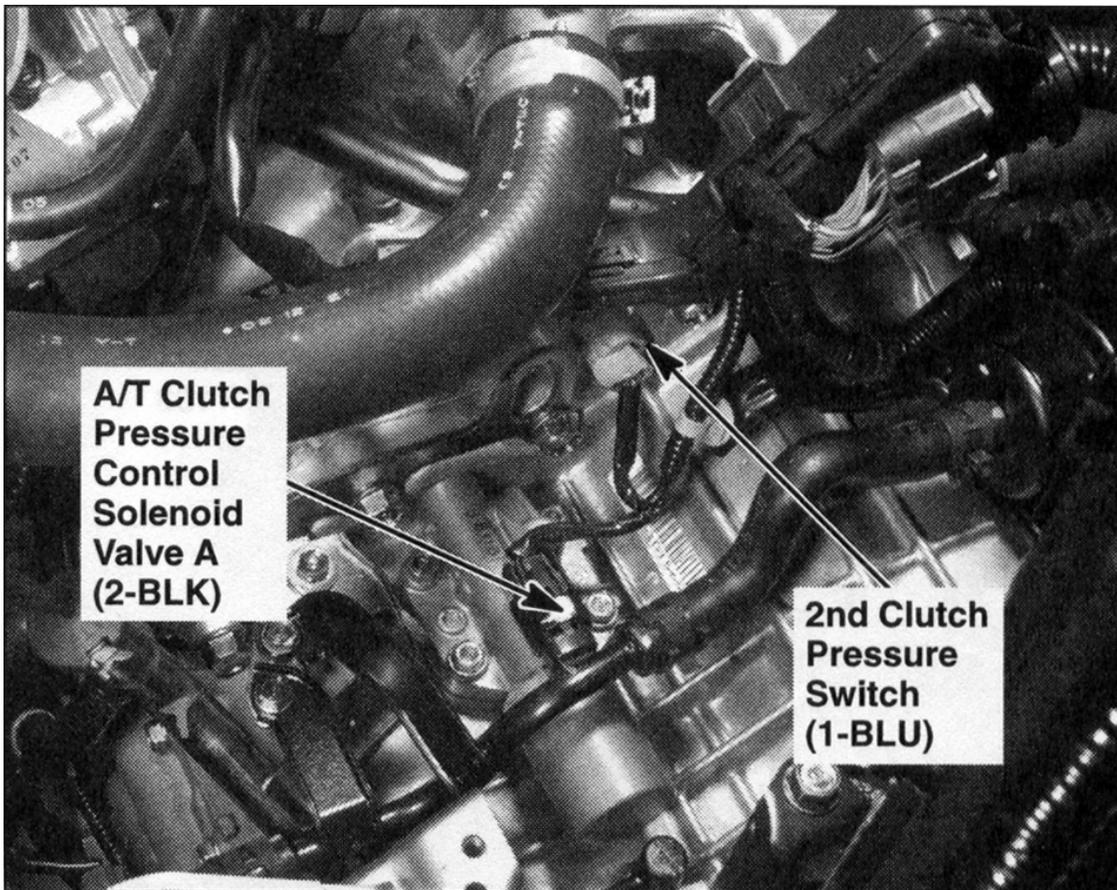


G00268095

Fig. 21: Automatic Transmission Housing
Courtesy of AMERICAN HONDA MOTOR CO., INC.

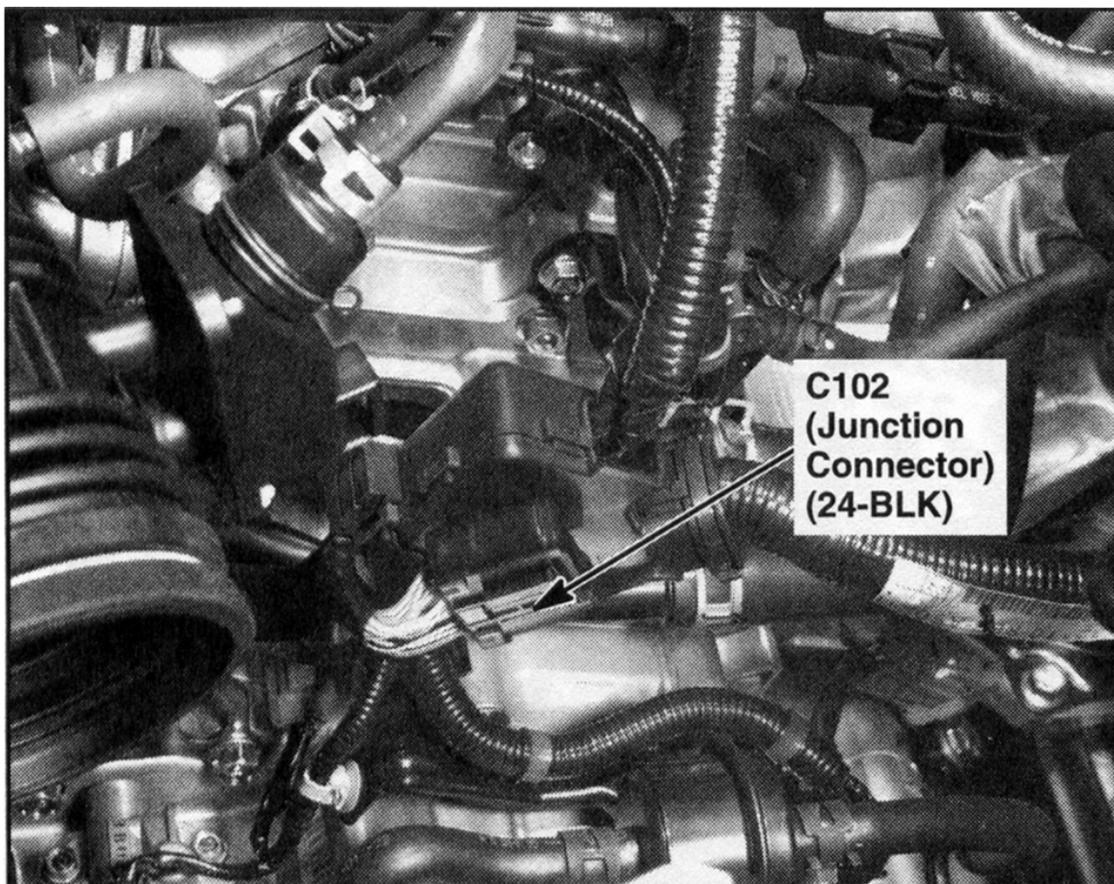

G00268096

Fig. 22: Left Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

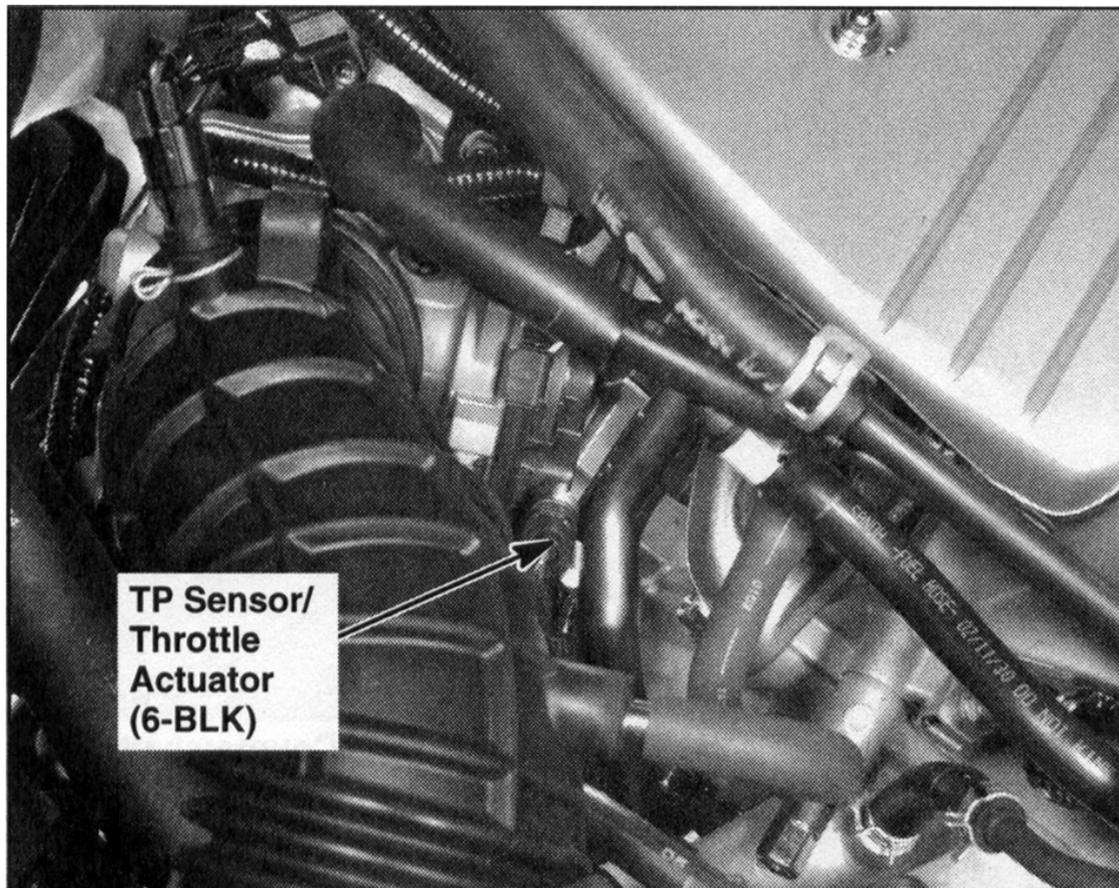

G00268097

Fig. 23: Left Side Of Engine

Courtesy of AMERICAN HONDA MOTOR CO., INC.