

Product: Case Cursor 10 Tier 4A (interim) ENGINE Service Manual
Full Download: <https://www.arepairmanual.com/downloads/case-cursor-10-tier-4a-interim-engine-service-manual/>

SERVICE MANUAL

Cursor[®] 10 Tier 4A (interim) and Stage IIIB Engine

See the following page for engine model numbers



Sample of manual. Download All 329 pages at:

<https://www.arepairmanual.com/downloads/case-cursor-10-tier-4a-interim-engine-service-manual/>

Part number 51421979

2nd edition English

November 2017

Replaces part number 84586905

Product: Case Cursor 10 Tier 4A (interim) ENGINE Service Manual
Full Download: <https://www.arepairmanual.com/downloads/case-cursor-10-tier-4a-interim-engine-service-manual/>



SERVICE MANUAL

F3AFE613A*A

Sample of manual. Download All 329 pages at:
<https://www.arepairmanual.com/downloads/case-cursor-10-tier-4a-interim-engine-service-manual/>


51421979 20/11/2017

Contents

INTRODUCTION

| | |
|--|-------|
| Engine..... | 10 |
| [10.001] Engine and crankcase | 10.1 |
| [10.102] Pan and covers | 10.2 |
| [10.106] Valve drive and gears | 10.3 |
| [10.101] Cylinder heads | 10.4 |
| [10.105] Connecting rods and pistons..... | 10.5 |
| [10.103] Crankshaft and flywheel..... | 10.6 |
| [10.110] Balancer and damper | 10.7 |
| [10.114] Pump drives | 10.8 |
| [10.210] Lift pump and lines | 10.9 |
| [10.206] Fuel filters | 10.10 |
| [10.218] Fuel injection system..... | 10.11 |
| [10.250] Turbocharger and lines..... | 10.12 |
| [10.254] Intake and exhaust manifolds and muffler | 10.13 |
| [10.500] Selective Catalytic Reduction (SCR) exhaust treatment | 10.14 |
| [10.400] Engine cooling system | 10.15 |
| [10.414] Fan and drive | 10.16 |
| [10.304] Engine lubrication system..... | 10.17 |
| Electrical systems..... | 55 |
| [55.015] Engine control system..... | 55.1 |
| [55.201] Engine starting system | 55.2 |
| [55.301] Alternator..... | 55.3 |
| [55.202] Cold start aid | 55.4 |
| [55.010] Fuel injection system..... | 55.5 |
| [55.014] Engine intake and exhaust system..... | 55.6 |
| [55.988] Selective Catalytic Reduction (SCR) electrical system | 55.7 |

| | |
|--------------------------------------|------|
| [55.012] Engine cooling system | 55.8 |
| [55.013] Engine oil system | 55.9 |

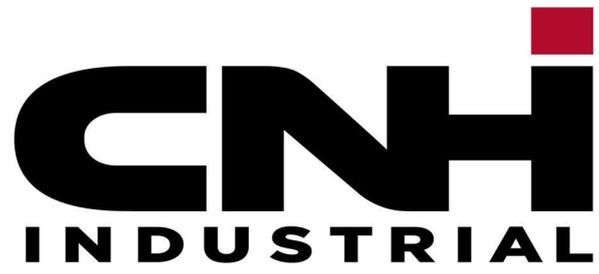

INTRODUCTION

Contents

INTRODUCTION

| | |
|---|---|
| Foreword | 3 |
| Safety rules | 5 |
| Basic instructions - Important notice regarding equipment servicing | 6 |
| Basic instructions - Shop and assembly | 7 |
| Torque - Minimum tightening torques for normal assembly | 9 |

Foreword

Soil, air, and water quality is important for all industries and life in general. When legislation does not yet rule the treatment of some of the substances that advanced technology requires, sound judgment should govern the use and disposal of products of a chemical and petrochemical nature.

Familiarize yourself with the relative legislation applicable to your country, and make sure that you understand this legislation. Where no legislation exists, obtain information from suppliers of oils, filters, batteries, fuels, anti-freeze, cleaning agents, etc., with regard to the effect of these substances on man and nature and how to safely store, use, and dispose of these substances. Your CNH Industrial dealer can also provide assistance.

Helpful hints

- Avoid the use of cans or other inappropriate pressurized fuel delivery systems to fill tanks. Such delivery systems may cause considerable spillage.
- In general, avoid skin contact with all fuels, oils, acids, solvents, etc. Most of these products contain substances that may be harmful to your health.
- Modern oils contain additives. Do not burn contaminated fuels and or waste oils in ordinary heating systems.
- Avoid spillage when you drain fluids such as used engine coolant mixtures, engine oil, hydraulic fluid, brake fluid, etc. Do not mix drained brake fluids or fuels with lubricants. Store all drained fluids safely until you can dispose of the fluids in a proper way that complies with all local legislation and available resources.
- Do not allow coolant mixtures to get into the soil. Collect and dispose of coolant mixtures properly.
- Do not open the air-conditioning system yourself. It contains gases that should not be released into the atmosphere. Your CNH Industrial dealer or air-conditioning specialist has a special extractor for this purpose and can recharge the system properly.
- Repair any leaks or defects in the engine cooling system or hydraulic system immediately.
- Do not increase the pressure in a pressurized circuit as this may lead to a component failure.

Battery recycling

Batteries and electric accumulators contain several substances that can have a harmful effect on the environment if the batteries are not properly recycled after use. Improper disposal of batteries can contaminate the soil, groundwater, and waterways. CNH Industrial strongly recommends that you return all used batteries to a CNH Industrial dealer, who will dispose of the used batteries or recycle the used batteries properly. In some countries, this is a legal requirement.



NHIL14GEN0038AA 1

Mandatory battery recycling

NOTE: The following requirements are mandatory in Brazil.

Batteries are made of lead plates and a sulfuric acid solution. Because batteries contain heavy metals such as lead, CONAMA Resolution 401/2008 requires you to return all used batteries to the battery dealer when you replace any batteries. Do not dispose of batteries in your household garbage.

Points of sale are obliged to:

- Accept the return of your used batteries

INTRODUCTION

- Store the returned batteries in a suitable location
- Send the returned batteries to the battery manufacturer for recycling

Safety rules

Personal safety



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible death or injury.

Throughout this manual and on machine decals, you will find the signal words DANGER, WARNING, and CAUTION followed by special instructions. These precautions are intended for the personal safety of you and those working with you.

Read and understand all the safety messages in this manual before you operate or service the machine.

 DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury. The color associated with DANGER is RED.

 WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury. The color associated with WARNING is ORANGE.

 CAUTION, used with the safety alert symbol, indicates a hazardous situation which, if not avoided, could result in minor or moderate injury. The color associated with CAUTION is YELLOW.

FAILURE TO FOLLOW DANGER, WARNING, AND CAUTION MESSAGES COULD RESULT IN DEATH OR SERIOUS INJURY.

Machine safety

NOTICE: Notice indicates a situation which, if not avoided, could result in machine or property damage. The color associated with Notice is BLUE.

Throughout this manual you will find the signal word Notice followed by special instructions to prevent machine or property damage. The word Notice is used to address practices not related to personal safety.

Information

NOTE: Note indicates additional information which clarifies steps, procedures, or other information in this manual.

Throughout this manual you will find the word Note followed by additional information about a step, procedure, or other information in the manual. The word Note is not intended to address personal safety or property damage.

Basic instructions - Important notice regarding equipment servicing

All repair and maintenance work listed in this manual must be carried out only by qualified dealership personnel, strictly complying with the instructions given, and using, whenever possible, the special tools.

Anyone who performs repair and maintenance operations without complying with the procedures provided herein shall be responsible for any subsequent damages.

The manufacturer and all the organizations of its distribution chain, including - without limitation - national, regional, or local dealers, reject any responsibility for damages caused by parts and/or components not approved by the manufacturer, including those used for the servicing or repair of the product manufactured or marketed by the manufacturer. In any case, no warranty is given or attributed on the product manufactured or marketed by the manufacturer in case of damages caused by parts and/or components not approved by the manufacturer.

The information in this manual is up-to-date at the date of the publication. It is the policy of the manufacturer for continuous improvement. Some information could not be updated due to modifications of a technical or commercial type, or changes to the laws and regulations of different countries.

In case of questions, refer to your CNH Industrial Sales and Service Networks.

Basic instructions - Shop and assembly

Shimming

For each adjustment operation, select adjusting shims and measure the adjusting shims individually using a micrometer, then add up the recorded values. Do not rely on measuring the entire shimming set, which may be incorrect, or the rated value shown on each shim.

Rotating shaft seals

For correct rotating shaft seal installation, proceed as follows:

1. Before assembly, allow the seal to soak in the oil it will be sealing for at least thirty minutes.
2. Thoroughly clean the shaft and check that the working surface on the shaft is not damaged.
3. Position the sealing lip facing the fluid.

NOTE: *With hydrodynamic lips, take into consideration the shaft rotation direction and position the grooves so that they will move the fluid towards the inner side of the seal.*

4. Coat the sealing lip with a thin layer of lubricant (use oil rather than grease). Fill the gap between the sealing lip and the dust lip on double lip seals with grease.
5. Insert the seal in its seat and press down using a flat punch or seal installation tool. Do not tap the seal with a hammer or mallet.
6. While you insert the seal, check that the seal is perpendicular to the seat. When the seal settles, make sure that the seal makes contact with the thrust element, if required.
7. To prevent damage to the seal lip on the shaft, position a protective guard during installation operations.

O-ring seals

Lubricate the O-ring seals before you insert them in the seats. This will prevent the O-ring seals from overturning and twisting, which would jeopardize sealing efficiency.

Sealing compounds

Apply a sealing compound on the mating surfaces when specified by the procedure. Before you apply the sealing compound, prepare the surfaces as directed by the product container.

Spare parts

Only use CNH Original Parts or CNH Industrial Original Parts.

Only genuine spare parts guarantee the same quality, duration, and safety as original parts, as they are the same parts that are assembled during standard production. Only CNH Original Parts or CNH Industrial Original Parts can offer this guarantee.

When ordering spare parts, always provide the following information:

- Machine model (commercial name) and Product Identification Number (PIN)
- Part number of the ordered part, which can be found in the parts catalog

Protecting the electronic and/or electrical systems during charging and welding

To avoid damage to the electronic and/or electrical systems, always observe the following practices:

1. Never make or break any of the charging circuit connections when the engine is running, including the battery connections.
2. Never short any of the charging components to ground.
3. Always disconnect the ground cable from the battery before arc welding on the machine or on any machine attachment.
 - Position the welder ground clamp as close to the welding area as possible.
 - If you weld in close proximity to a computer module, then you should remove the module from the machine.
 - Never allow welding cables to lie on, near, or across any electrical wiring or electronic component while you weld.
4. Always disconnect the negative cable from the battery when charging the battery in the machine with a battery charger.

NOTICE: *If you must weld on the unit, you must disconnect the battery ground cable from the machine battery. The electronic monitoring system and charging system will be damaged if this is not done.*

5. Remove the battery ground cable. Reconnect the cable when you complete welding.

⚠ WARNING

Battery acid causes burns. Batteries contain sulfuric acid.

Avoid contact with skin, eyes or clothing. Antidote (external): Flush with water. Antidote (eyes): flush with water for 15 minutes and seek medical attention immediately. Antidote (internal): Drink large quantities of water or milk. Do not induce vomiting. Seek medical attention immediately. Failure to comply could result in death or serious injury.

W0111A

Special tools

The special tools that CNH Industrial suggests and illustrate in this manual have been specifically researched and designed for use with CNH Industrial machines. The special tools are essential for reliable repair operations. The special tools are accurately built and rigorously tested to offer efficient and long-lasting operation.

By using these tools, repair personnel will benefit from:

- Operating in optimal technical conditions
- Obtaining the best results
- Saving time and effort
- Working in safe conditions

Torque - Minimum tightening torques for normal assembly

METRIC NON-FLANGED HARDWARE

| NOM. SIZE | CLASS 8.8 BOLT and CLASS 8 NUT | | CLASS 10.9 BOLT and CLASS 10 NUT | | LOCKNUT CL.8 W/CL8.8 BOLT | LOCKNUT CL.10 W/CL10.9 BOLT |
|--------------|-----------------------------------|------------------------|-------------------------------------|-------------------------|------------------------------------|--------------------------------------|
| | UNPLATED | PLATED W/ZnCr | UNPLATED | PLATED W/ZnCr | | |
| M4 | 2.2 N·m (19 lb in) | 2.9 N·m (26 lb in) | 3.2 N·m (28 lb in) | 4.2 N·m (37 lb in) | 2 N·m (18 lb in) | 2.9 N·m (26 lb in) |
| M5 | 4.5 N·m (40 lb in) | 5.9 N·m (52 lb in) | 6.4 N·m (57 lb in) | 8.5 N·m (75 lb in) | 4 N·m (36 lb in) | 5.8 N·m (51 lb in) |
| M6 | 7.5 N·m (66 lb in) | 10 N·m (89 lb in) | 11 N·m (96 lb in) | 15 N·m (128 lb in) | 6.8 N·m (60 lb in) | 10 N·m (89 lb in) |
| M8 | 18 N·m (163 lb in) | 25 N·m (217 lb in) | 26 N·m (234 lb in) | 35 N·m (311 lb in) | 17 N·m (151 lb in) | 24 N·m (212 lb in) |
| M10 | 37 N·m (27 lb ft) | 49 N·m (36 lb ft) | 52 N·m (38 lb ft) | 70 N·m (51 lb ft) | 33 N·m (25 lb ft) | 48 N·m (35 lb ft) |
| M12 | 64 N·m (47 lb ft) | 85 N·m (63 lb ft) | 91 N·m (67 lb ft) | 121 N·m (90 lb ft) | 58 N·m (43 lb ft) | 83 N·m (61 lb ft) |
| M16 | 158 N·m (116 lb ft) | 210 N·m (155 lb ft) | 225 N·m (166 lb ft) | 301 N·m (222 lb ft) | 143 N·m (106 lb ft) | 205 N·m (151 lb ft) |
| M20 | 319 N·m (235 lb ft) | 425 N·m (313 lb ft) | 440 N·m (325 lb ft) | 587 N·m (433 lb ft) | 290 N·m (214 lb ft) | 400 N·m (295 lb ft) |
| M24 | 551 N·m (410 lb ft) | 735 N·m (500 lb ft) | 762 N·m (560 lb ft) | 1016 N·m (750 lb ft) | 501 N·m (370 lb ft) | 693 N·m (510 lb ft) |


NOTE: M4 through M8 hardware torque specifications are shown in pound-inches. M10 through M24 hardware torque specifications are shown in pound-feet.

METRIC FLANGED HARDWARE

| NOM. SIZE | CLASS 8.8 BOLT and CLASS 8 NUT | | CLASS 10.9 BOLT and CLASS 10 NUT | | LOCKNUT CL.8 W/CL8.8 BOLT | LOCKNUT CL.10 W/CL10.9 BOLT |
|-----------|--------------------------------|---------------------|----------------------------------|----------------------|---------------------------|-----------------------------|
| | UNPLATED | PLATED W/ZnCr | UNPLATED | PLATED W/ZnCr | | |
| M4 | 2.4 N·m (21 lb in) | 3.2 N·m (28 lb in) | 3.5 N·m (31 lb in) | 4.6 N·m (41 lb in) | 2.2 N·m (19 lb in) | 3.1 N·m (27 lb in) |
| M5 | 4.9 N·m (43 lb in) | 6.5 N·m (58 lb in) | 7.0 N·m (62 lb in) | 9.4 N·m (83 lb in) | 4.4 N·m (39 lb in) | 6.4 N·m (57 lb in) |
| M6 | 8.3 N·m (73 lb in) | 11 N·m (96 lb in) | 12 N·m (105 lb in) | 16 N·m (141 lb in) | 7.5 N·m (66 lb in) | 11 N·m (96 lb in) |
| M8 | 20 N·m (179 lb in) | 27 N·m (240 lb in) | 29 N·m (257 lb in) | 39 N·m (343 lb in) | 18 N·m (163 lb in) | 27 N·m (240 lb in) |
| M10 | 40 N·m (30 lb ft) | 54 N·m (40 lb ft) | 57 N·m (42 lb ft) | 77 N·m (56 lb ft) | 37 N·m (27 lb ft) | 53 N·m (39 lb ft) |
| M12 | 70 N·m (52 lb ft) | 93 N·m (69 lb ft) | 100 N·m (74 lb ft) | 134 N·m (98 lb ft) | 63 N·m (47 lb ft) | 91 N·m (67 lb ft) |
| M16 | 174 N·m (128 lb ft) | 231 N·m (171 lb ft) | 248 N·m (183 lb ft) | 331 N·m (244 lb ft) | 158 N·m (116 lb ft) | 226 N·m (167 lb ft) |
| M20 | 350 N·m (259 lb ft) | 467 N·m (345 lb ft) | 484 N·m (357 lb ft) | 645 N·m (476 lb ft) | 318 N·m (235 lb ft) | 440 N·m (325 lb ft) |
| M24 | 607 N·m (447 lb ft) | 809 N·m (597 lb ft) | 838 N·m (618 lb ft) | 1118 N·m (824 lb ft) | 552 N·m (407 lb ft) | |

IDENTIFICATION


Metric Hex head and carriage bolts, classes 5.6 and up

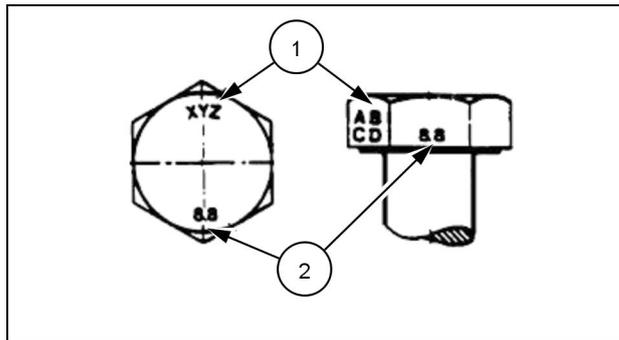

20083680 1

1. Manufacturer's Identification
2. Property Class

Metric Hex nuts and locknuts, classes 05 and up

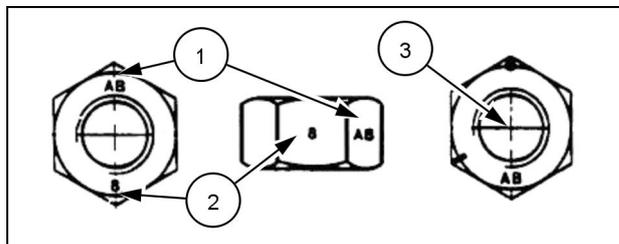

20083681 2

1. Manufacturer's Identification
2. Property Class
3. Clock Marking of Property Class and Manufacturer's Identification (Optional), i.e. marks 60° apart indicate Class 10 properties, and marks 120° apart indicate Class 8.

INCH NON-FLANGED HARDWARE

| NOMINAL SIZE | SAE GRADE 5 BOLT and NUT | | SAE GRADE 8 BOLT and NUT | | LOCKNUT GrB W/ Gr5 BOLT | LOCKNUT GrC W/ Gr8 BOLT |
|--------------|----------------------------|---------------------|----------------------------|----------------------|-------------------------|-------------------------|
| | UN-PLATED or PLATED SILVER | PLATED W/ZnCr GOLD | UN-PLATED or PLATED SILVER | PLATED W/ZnCr GOLD | | |
| 1/4 | 8 N·m (71 lb in) | 11 N·m (97 lb in) | 12 N·m (106 lb in) | 16 N·m (142 lb in) | 8.5 N·m (75 lb in) | 12.2 N·m (109 lb in) |
| 5/16 | 17 N·m (150 lb in) | 23 N·m (204 lb in) | 24 N·m (212 lb in) | 32 N·m (283 lb in) | 17.5 N·m (155 lb in) | 25 N·m (220 lb in) |
| 3/8 | 30 N·m (22 lb ft) | 40 N·m (30 lb ft) | 43 N·m (31 lb ft) | 57 N·m (42 lb ft) | 31 N·m (23 lb ft) | 44 N·m (33 lb ft) |
| 7/16 | 48 N·m (36 lb ft) | 65 N·m (48 lb ft) | 68 N·m (50 lb ft) | 91 N·m (67 lb ft) | 50 N·m (37 lb ft) | 71 N·m (53 lb ft) |
| 1/2 | 74 N·m (54 lb ft) | 98 N·m (73 lb ft) | 104 N·m (77 lb ft) | 139 N·m (103 lb ft) | 76 N·m (56 lb ft) | 108 N·m (80 lb ft) |
| 9/16 | 107 N·m (79 lb ft) | 142 N·m (105 lb ft) | 150 N·m (111 lb ft) | 201 N·m (148 lb ft) | 111 N·m (82 lb ft) | 156 N·m (115 lb ft) |
| 5/8 | 147 N·m (108 lb ft) | 196 N·m (145 lb ft) | 208 N·m (153 lb ft) | 277 N·m (204 lb ft) | 153 N·m (113 lb ft) | 215 N·m (159 lb ft) |
| 3/4 | 261 N·m (193 lb ft) | 348 N·m (257 lb ft) | 369 N·m (272 lb ft) | 491 N·m (362 lb ft) | 271 N·m (200 lb ft) | 383 N·m (282 lb ft) |
| 7/8 | 420 N·m (310 lb ft) | 561 N·m (413 lb ft) | 594 N·m (438 lb ft) | 791 N·m (584 lb ft) | 437 N·m (323 lb ft) | 617 N·m (455 lb ft) |
| 1 | 630 N·m (465 lb ft) | 841 N·m (620 lb ft) | 890 N·m (656 lb ft) | 1187 N·m (875 lb ft) | 654 N·m (483 lb ft) | 924 N·m (681 lb ft) |


NOTE: For Imperial Units, 1/4 in and 5/16 in hardware torque specifications are shown in pound-inches. 3/8 in through 1 in hardware torque specifications are shown in pound-feet.

INCH FLANGED HARDWARE

| NOM- INAL SIZE | SAE GRADE 5 BOLT and NUT | | SAE GRADE 8 BOLT and NUT | | LOCKNUT GrF W/ Gr5 BOLT | LOCKNUT GrG W/ Gr8 BOLT |
|----------------------|---------------------------------|--------------------------|---------------------------------|--------------------------|-------------------------------|-------------------------------|
| | UNPLATED or PLATED SILVER | PLATED W/ZnCr GOLD | UNPLATED or PLATED SILVER | PLATED W/ZnCr GOLD | | |
| 1/4 | 9 N·m (80 lb in) | 12 N·m (106 lb in) | 13 N·m (115 lb in) | 17 N·m (150 lb in) | 8 N·m (71 lb in) | 12 N·m (106 lb in) |
| 5/16 | 19 N·m (168 lb in) | 25 N·m (221 lb in) | 26 N·m (230 lb in) | 35 N·m (310 lb in) | 17 N·m (150 lb in) | 24 N·m (212 lb in) |
| 3/8 | 33 N·m (25 lb ft) | 44 N·m (33 lb ft) | 47 N·m (35 lb ft) | 63 N·m (46 lb ft) | 30 N·m (22 lb ft) | 43 N·m (32 lb ft) |
| 7/16 | 53 N·m (39 lb ft) | 71 N·m (52 lb ft) | 75 N·m (55 lb ft) | 100 N·m (74 lb ft) | 48 N·m (35 lb ft) | 68 N·m (50 lb ft) |
| 1/2 | 81 N·m (60 lb ft) | 108 N·m (80 lb ft) | 115 N·m (85 lb ft) | 153 N·m (113 lb ft) | 74 N·m (55 lb ft) | 104 N·m (77 lb ft) |
| 9/16 | 117 N·m (86 lb ft) | 156 N·m (115 lb ft) | 165 N·m (122 lb ft) | 221 N·m (163 lb ft) | 106 N·m (78 lb ft) | 157 N·m (116 lb ft) |
| 5/8 | 162 N·m (119 lb ft) | 216 N·m (159 lb ft) | 228 N·m (168 lb ft) | 304 N·m (225 lb ft) | 147 N·m (108 lb ft) | 207 N·m (153 lb ft) |
| 3/4 | 287 N·m (212 lb ft) | 383 N·m (282 lb ft) | 405 N·m (299 lb ft) | 541 N·m (399 lb ft) | 261 N·m (193 lb ft) | 369 N·m (272 lb ft) |
| 7/8 | 462 N·m (341 lb ft) | 617 N·m (455 lb ft) | 653 N·m (482 lb ft) | 871 N·m (642 lb ft) | 421 N·m (311 lb ft) | 594 N·m (438 lb ft) |
| 1 | 693 N·m (512 lb ft) | 925 N·m (682 lb ft) | 979 N·m (722 lb ft) | 1305 N·m (963 lb ft) | 631 N·m (465 lb ft) | 890 N·m (656 lb ft) |

IDENTIFICATION

Inch Bolts and free-spinning nuts

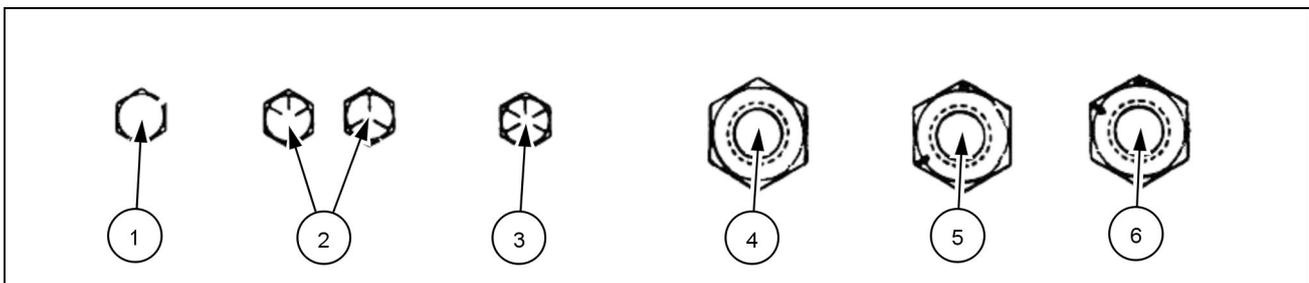


20083682 3

Grade Marking Examples

| SAE Grade Identification | | | |
|--------------------------|-----------------------|---|--------------------------------|
| 1 | Grade 2 - No Marks | 4 | Grade 2 Nut - No Marks |
| 2 | Grade 5 - Three Marks | 5 | Grade 5 Nut - Marks 120° Apart |
| 3 | Grade 8 - Five Marks | 6 | Grade 8 Nut - Marks 60° Apart |

Inch Lock Nuts, All Metal (Three optional methods)

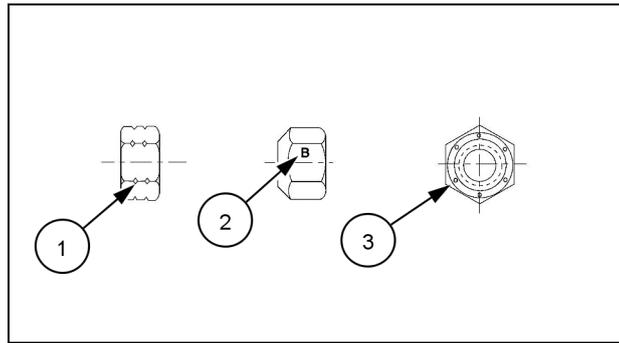

20090268 4

Grade Identification

| Grade | Corner Marking Method (1) | Flats Marking Method (2) | Clock Marking Method (3) |
|---------|-----------------------------|--------------------------|--------------------------|
| Grade A | No Notches | No Mark | No Marks |
| Grade B | One Circumferential Notch | Letter B | Three Marks |
| Grade C | Two Circumferential Notches | Letter C | Six Marks |



SERVICE MANUAL

Engine

F3AFE613A*A

Contents

Engine - 10

| | |
|---|-------|
| [10.001] Engine and crankcase | 10.1 |
| [10.102] Pan and covers | 10.2 |
| [10.106] Valve drive and gears | 10.3 |
| [10.101] Cylinder heads | 10.4 |
| [10.105] Connecting rods and pistons | 10.5 |
| [10.103] Crankshaft and flywheel..... | 10.6 |
| [10.110] Balancer and damper | 10.7 |
| [10.114] Pump drives | 10.8 |
| [10.210] Lift pump and lines | 10.9 |
| [10.206] Fuel filters | 10.10 |
| [10.218] Fuel injection system..... | 10.11 |
| [10.250] Turbocharger and lines..... | 10.12 |
| [10.254] Intake and exhaust manifolds and muffler | 10.13 |
| [10.500] Selective Catalytic Reduction (SCR) exhaust treatment..... | 10.14 |
| [10.400] Engine cooling system | 10.15 |
| [10.414] Fan and drive | 10.16 |
| [10.304] Engine lubrication system..... | 10.17 |

CONSUMABLES INDEX

| Consumable | Reference | PAGE |
|---------------------------------------|--|------------|
| | Crankcase Under block - Install | 10.1 / 12 |
| Loctite® 5970™ | Engine block cover Rear - Install | 10.2 / 5 |
| DEF/AdBlue® | Diesel Exhaust Fluid | 10.14 / 8 |
| DEF/AdBlue® | Diesel Exhaust Fluid | 10.14 / 8 |
| DEF/AdBlue® | Diesel Exhaust Fluid | 10.14 / 8 |
| DEF/AdBlue® | Diesel Exhaust Fluid | 10.14 / 8 |
| DEF/AdBlue® | Diesel Exhaust Fluid | 10.14 / 8 |
| DEF/AdBlue® | Diesel Exhaust Fluid | 10.14 / 8 |
| DEF/AdBlue® | Diesel Exhaust Fluid | 10.14 / 8 |
| DEF/AdBlue® | Diesel Exhaust Fluid | 10.14 / 9 |
| DEF/AdBlue® | Diesel Exhaust Fluid | 10.14 / 9 |
| DEF/AdBlue® | Diesel Exhaust Fluid | 10.14 / 9 |
| DEF/AdBlue® | Diesel Exhaust Fluid | 10.14 / 9 |
| Diesel Exhaust Fluid (DEF)/AdBlue® | Diesel Exhaust Fluid | 10.14 / 11 |
| | Crankcase ventilation system - Install | 10.17 / 15 |



Engine - 10

Engine and crankcase - 001

F3AFE613A*A

Contents

Engine - 10

Engine and crankcase - 001

SERVICE

Engine

Place on stand 4

Service instruction - Finding Top Dead Center (TDC) 5

Crankcase

Under block - Remove 6

Liner - Measure 7

Liner - Remove 10

Liner - Measure Protrusion 11


Under block - Install 12

CONSUMABLES INDEX

| Consumable | Reference | PAGE |
|-------------------|---------------------------------|-------------|
| | Crankcase Under block - Install | 10.1 / 12 |

Engine - Place on stand


1. Secure the engine to the rotary stand **380000361** with the brackets **380000155 (1)**. Drain the engine oil from the crankcase.

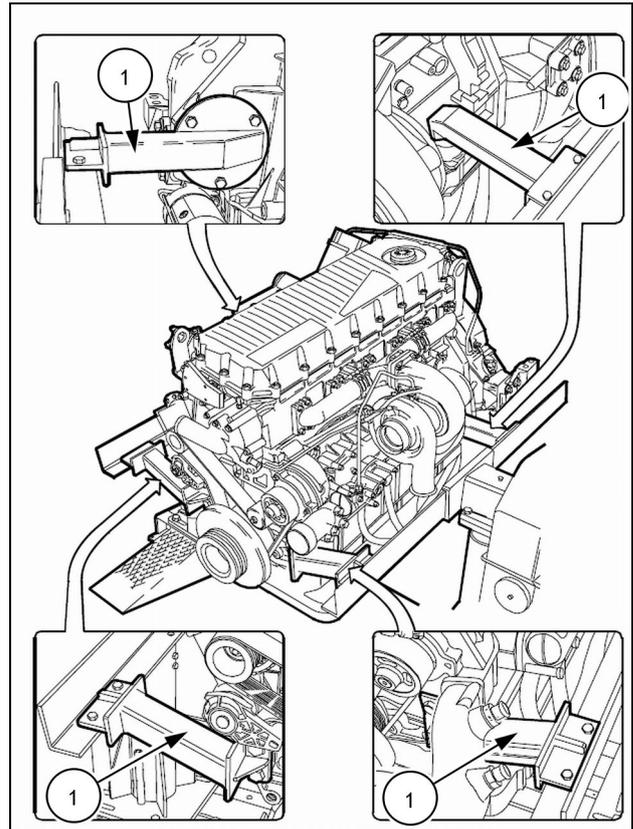

STANDMOUNT 1


Engine - Service instruction - Finding Top Dead Center (TDC)

1. Rotate the crankshaft counter-clockwise until the (D) hole (the hole with two notches) appears through the window (1) in the bottom of the flywheel housing.

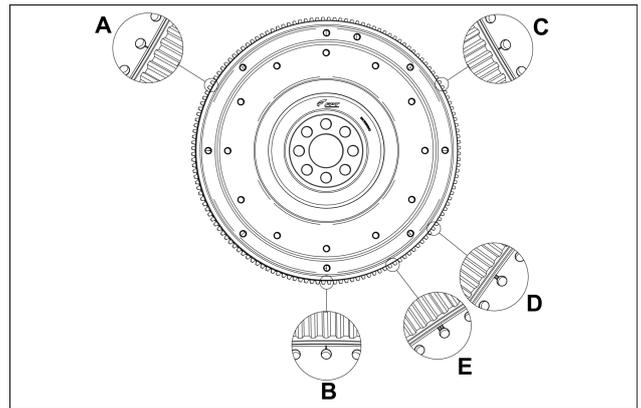

NHIL14ENG1086FA 1

2. Continue to rotate the crankshaft counter-clockwise until the first mark (B) (figure 1) for cylinder 1 and 6 appears through the window (1) in the bottom of the flywheel housing.

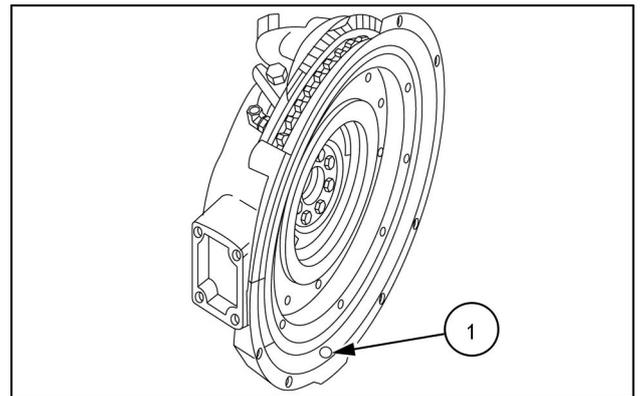


RAIL13SBA0059AA 2

3. Pin the flywheel through the crankshaft sensor hole with tool **380000150**.

NOTE: Depending on the engine configuration, there are two places to pin the flywheel:


- On the right side of the flywheel housing (2)
- On the left side of the flywheel housing (3)

4. On a running engine, identify the correct camshaft position with one or both of the following observations:
 - The hole marked with two reference marks (54° BTDC) can be seen through the inspection window.
 - Verify that the rocker arms are loose on #1 cylinder with the exhaust closing and intake opening on #6 cylinder.
 Cylinder 1 and 6 are now at Top Dead Center (TDC).

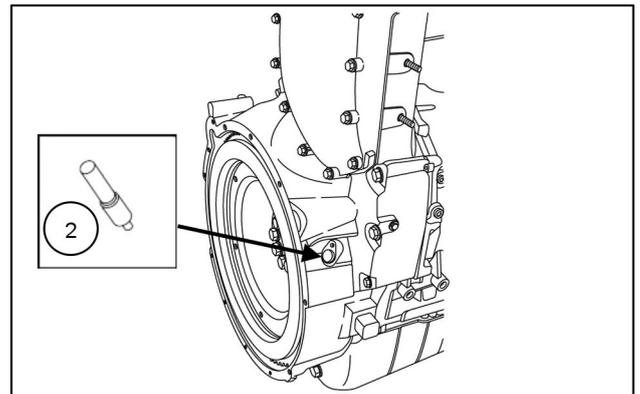

RAIL13SBA0076AA 3

5. If the rocker arms are not loose on cylinder #1, rotate the crankshaft 360° counter-clockwise. Cylinder #1 is now at TDC firing.

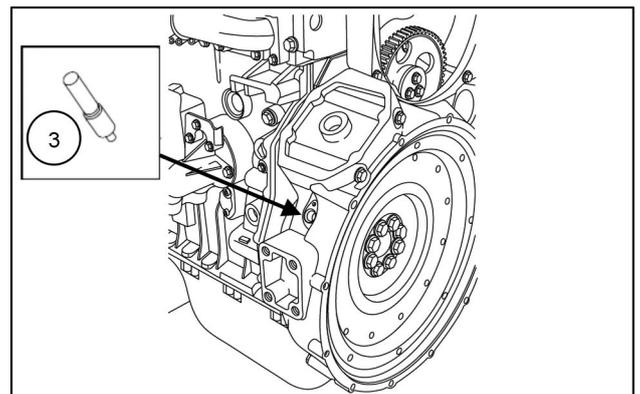


RAIL13SBA0080AA 4

Crankcase Under block - Remove

Prior operation:

Engine oil pan - Remove (10.102)

1. Remove the screws (1) and (2) using the proper tools and remove the under block (3) from the cylinder block.

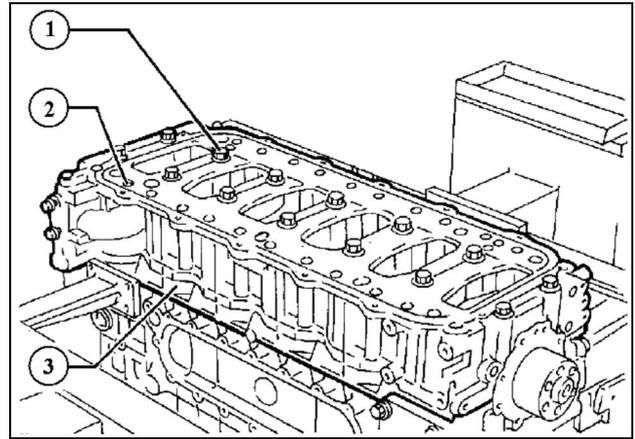

UNDERBLOCK 1

Next operation:

Crankcase Under block - Install (10.001)


Crankcase Liner - Measure

Prior operation:

Crankcase Liner - Remove (10.001)


1. The internal diameter of the cylinder liner is checked for ovalization, taper, and wear, using a bore dial (1) centesimal gauge (2) previously set to ring gauge (3), which has a diameter of 125 mm (4.921 in).

NOTE: If a 125 mm (4.921 in) is not available, it is acceptable to use a micrometer.

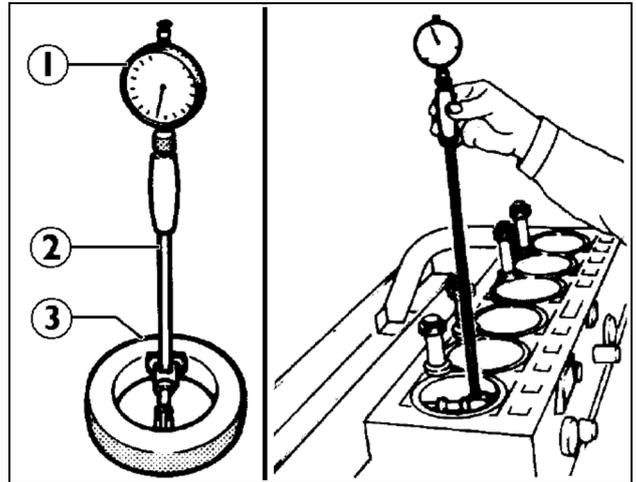

LINERMEASURE 1

2. The measurements have to be made on each single cylinder liner at three different heights and in two different positions perpendicular to each other as shown in the figure.

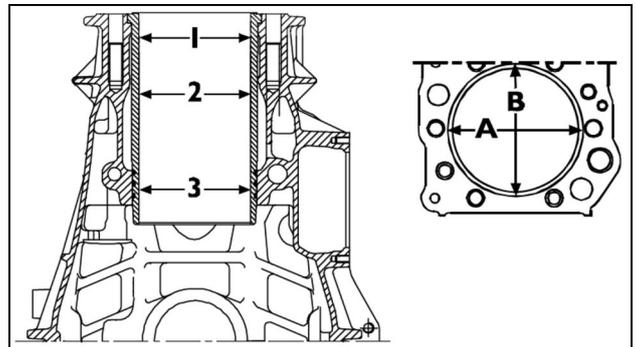


LINERMEASURE2 2

3. Upon finding a maximum wear value greater than 0.150 mm (0.006 in) or maximum ovalization value greater than 0.100 mm (0.004 in) as compared to the values in the following table, you need to replace the cylinder liner. No grinding, facing, or reconditioning is permitted.

4. Selection Class

- A = 125.000 – 125.013 mm (4.921 – 4.922 in).
- B = 125.011 – 125.024 mm (4.922 – 4.922 in).

NOTE: The cylinder liners are supplied as spare parts with selection class "A".
 "X" - Indicates the location of the marking that designates the selection class.

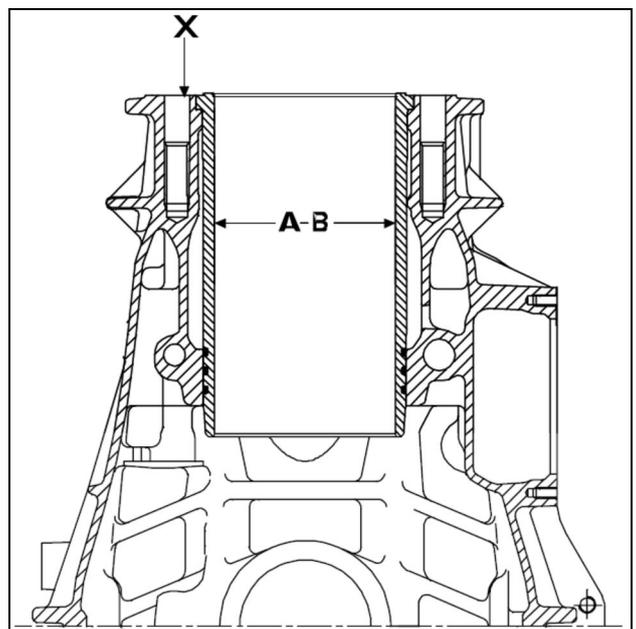

LINERMEASURE4 3