

1088 Crawler Excavator

Table of Contents

	SECTION N°	FORM N°
1. GENERAL		
Sectional Index		8-86410
Safety, General Information and Torque Specifications.....	1001 *	8-86010
Specifications.....	1002	8-86021
2. ENGINE		
Sectional Index		8-86420
Engine Removal and Installation.....	2000	8-86030
Radiator and Oil Cooler.....	2001	8-86040
Cylinder Head and Valve Train.....	2415	8-26071
Cylinder Block.....	2425	8-26082
Lubrication system.....	2445	8-26091
Cooling System.....	2455	8-26101
Turbocharger.....	2465	8-26110
Turbocharger Failure Analysis.....	2565	9-78235
3. FUEL SYSTEM		
Sectional Index		8-86430
Fuel Systems and filters.....	3410	8-26131
Fuel Injection Pump and Drive Gear.....	3412	8-26141
Fuel Injectors.....	3413	8-26150
4. ELECTRICAL		
Sectional Index		8-86440
Electrical Schematics and Troubleshooting.....	4001 *	8-86000
Battery Testing, Maintenance and Booster Battery Connections.....	4002	8-86050
Starter Motor.....	4003	8-86060
Alternator.....	4004	8-86070
5. TRACK		
Tracks, Rollers and Idlers.....	5002	8-86080
6. POWER TRAIN		
Sectional Index		8-86450
Drive Motor and Final Drive translation.....	6002	8-86090
Swing Motor and Reduction Gears.....	6003	8-86100

THIS TABLE OF CONTENTS REPLACES DON 8-86400.

8. HYDRAULICS

Sectional Index	8-86461
Pictorial Index Hydraulic Components.....8000	7-40260
Hydraulic Troubleshooting.....8001 *	8-85992
Low Pressure Pump.....8002	8-86110
High Pressure Pump and Regulator.....8003	8-86120
Attachment Valve Bank.....8004	8-86130
Drive Control Valve.....8005	8-86140
Option Control Valve.....8006	8-86150
Counter Rotation Valve.....8007	8-86970
Swing Brake Release Valve.....8008	8-86170
Swing Control Valve.....8009	8-86180
Anti-Surge Valve.....8010	8-86190
Hydraulic Swivel (Standard Excavators).....8011	8-86200
Hydraulic Swivel (Excavators with T.T.L.).....8011	7-40490
Drive Speed Limiter.....8012	8-86210
Drive Brake Release Valve.....8013	8-86220
Hand and Foot Control Valves.....8015	8-86240
Hydraulic Oil Tank.....8016	8-86250
Attachment Cylinders.....8018	8-86270
Hydraulic Turntable Leveler Cylinder.....8026	7-40500
Turntable Leveler Control Valve.....8027	7-40510
Turntable Leveler Check Valve.....8028	7-40600

9. MOUNTED EQUIPMENT

Sectional Index	8-86470
Upperstructure.....9001	8-86311
Boom, Dipper and Bucket.....9002	8-86290
Servicing the Cab.....9004	8-86320

* Schematic Set Sections

REVISION NO.1
1088 CRAWLER EXCAVATOR
SERVICE MANUAL DON 8-86380

Contents of Revision

Lep 8-86401	Table of Contents
Lep 8-86021	Section 1002 - General Specifications
Lep 8-86461	Sectional Index 8
Lep 7-40260	Section 8000 - Pictorial Index
Lep 8-85992	Section 8001 - Hydraulic Schematics and Troubleshooting
Lep 7-40490	Section 8011 - Hydraulic Swivel
Lep 7-40500	Section 8026 - Hydraulic Turntable Leveler Cylinder
Lep 7-40510	Section 8027 - Turntable Leveler Cylinder
Lep 7-40600	Section 8028 - Turntable Leveler Check Valve
Lep 8-86311	Section 9001 - Upperstructure and Turntable Bearing.

Assembly Instructions

Discard the Table of Contents, Sectional Index 8, General Specifications, Hydraulic Schematics and Troubleshooting, Upperstructure and Turntable Bearing Sections. Insert the new Table of Contents 8 (Lep 8-86401), Sectional Index (Lep 8-86461) and the remaining sections of this revision into your Service Manual. Remove the Spine Label (Lep 8-86380) and replace it with the new Spine Label (Lep 8-86382).

Summary of Revision

This revision includes coverage of the 1088 Turntable Leveler Crawler Excavator.

Sectional Index

1	GENERAL	SECTION NO.
C	Capacities.....	1002
D	Dimensions.....	1002
	Drawbar Pull.....	1002
	Drive Speed.....	1002
E	Electrical System Specifications	1002
	Engine Cooling System Specifications	1002
	Engine Lubricant Specifications.....	1002
	Engine Lubricating System Specifications	1002
	Engine Special Torques.....	1002
	Engine Specifications.....	1002
F	Fluids and Lubricants Specifications.....	1002
	Fuel Specifications	1002
	Fuel System Specifications.....	1002
G	General Dimensions.....	1002
	General Information.....	1001
H	Hydraulic System Specifications.....	1002
M	Model and PIN Numbers	1002
R	Run-in Instructions	1002
S	Safety Warnings	1001
T	Torque Data	
	Engine Special Torques.....	1002
	Hydraulic Fittings Special Torques	1001
	Standard Nut and Bolt Torques.....	1001
	Track, Rollers and Idlers Specifications	1002
	Transport Dimensions	1002
W	Weights.....	1002

Section 1001

SAFETY, GENERAL INFORMATION
AND TORQUE SPECIFICATIONS

1001

TABLE OF CONTENTS

SAFETY	3
GENERAL INFORMATION	5
STANDARD TORQUE DATA FOR NUTS AND BOLTS	6
TORQUE DATA FOR HYDRAULIC FITTINGS	7

SAFETY



This symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED. The message that follows the symbol contains important information about safety. Carefully read the message. Make sure you fully understand the causes of possible injury or death.

1-1-C

To prevent injury always follow the Warning, Caution and Danger notes in this section and throughout the manual.

Put the warning tag shown below on the key for the keyswitch when servicing or repairing the machine. One warning tag is supplied with each machine. Additional tags Part Number 331-4614 are available from your service parts supplier.



B004



WARNING: Read the operator's manual to familiarize yourself with the correct control functions.

46-27



WARNING: Operate the machine and equipment controls from the seat position only. Any other method could result in serious injury.

48-55



WARNING: This is one man machine, no riders allowed.

35-8



WARNING: Before starting engine, study Operator's Manual safety messages. Read all safety signs on machine. Clear the area of other persons. Learn and practice safe use of controls before operating.

It is your responsibility to understand and follow manufacturers instructions on machine operation, service, and to observe pertinent laws and regulations. Operator's and Service Manuals may be obtained from your J.I. Case dealer

45-2



WARNING: If you wear clothing that is too loose or do not use the correct safety equipment for your job, you can be injured. Always wear clothing that will not catch on objects. Extra safety equipment that can be required includes hard hat, safety shoes, ear protection, eye or face protection, heavy gloves and reflector clothing

45-3- A



WARNING: When working in the area of the fan belt with the engine running, avoid loose clothing if possible, and use extreme caution.

35-4



WARNING: When doing checks and tests on the equipment hydraulics, follow the procedures as they are written. DO NOT change the procedure.

47-44



WARNING: When putting the hydraulic cylinders on this machine through the necessary cycles to check operation or to remove air from a circuit, make sure all people are out of the way.

47-45



WARNING: Use insulated gloves or mittens when working with hot parts.

47-41A



CAUTION: Lower all attachments to the ground or use stands to safely support the attachments before you do any maintenance or service.

49-11



CAUTION: Pin sized and smaller streams of hydraulic oil under pressure can penetrate the skin and result in serious infection. If hydraulic oil under pressure does penetrate the skin, seek medical treatment immediately. Maintain all hoses and tubes in good condition. Make sure all connections are tight. Make a replacement of any tube or hose that is damaged or thought to be damaged. **DO NOT** use your hand to check for leaks, use a piece of cardboard or wood.

40-6-A



CAUTION: When removing hardened pins such as a pivot pin, or a hardened shaft, use a soft head (brass or bronze) hammer or use a driver made from brass or bronze and a steel head hammer.

46-17



CAUTION: When using a hammer to remove and install pivot pins or separate parts using compressed air or using a grinder, wear eye protection that completely encloses the eyes (approved goggles or other approved eye protectors).

46-13



CAUTION: Use suitable floor (service) jacks or chain hoist to raise wheels or tracks off the floor. Always block machine in place with suitable safety stands.

40-7-A



CAUTION: When servicing or repairing the machine. Keep the shop floor and operator's compartment and steps free of oil, water, grease, tools, etc. Use an oil absorbing material and or shop cloths as required. Use safe practices at all times.

40-8



CAUTION: Some components of this machine are very heavy. Use suitable lifting equipment or additional help as instructed in this Service Manual.

40-10



DANGER: Engine exhaust fumes can cause death. If it is necessary to start the engine in a closed place, remove the exhaust fumes from the area with an exhaust pipe extension. Open the doors and get outside air into the area.

48-56



DANGER: When the battery electrolyte is frozen, the battery can explode if (1), you try to charge the battery, or (2), you try to jump start and run the engine. To prevent the battery electrolyte from freezing, try to keep the battery at full charge. If you do not follow these instructions, you or others in the area can be injured.

48-35



DANGER: Batteries contain acid and explosive gas. Explosions can result from sparks, flames or wrong cable connections. To connect the jumper cables correctly to the battery of this machine see the Operator's Manual. Failure to follow these instructions can cause serious injury or death.

GENERAL INFORMATION

CLEANING

Clean all metal parts except bearings, in mineral spirits or by steam cleaning. Do not use caustic soda for steam cleaning. After cleaning dry, and put oil on all parts. Clean oil passages with compressed air. Clean bearings in kerosene, dry the bearings completely and put oil on the bearings.

INSPECTION

Check all parts when the parts are disassembled. Replace all parts that have wear or damage. Small scoring or grooves can be removed with a hone or crocus cloth. Complete visual inspection for indications of wear, pitting and the replacement of parts necessary will prevent early failures.

BEARINGS

Check bearings for easy action. If bearings have a loose fit or rough action replace the bearing. Wash bearings with a good solvent or kerosene and permit to air dry. **DO NOT DRY BEARINGS WITH COMPRESSED AIR.**

NEEDLE BEARINGS

Before you press needle bearings in a bore always remove any metal protrusions in the bore or edge of the bore. Before you press bearings into position put petroleum jelly on the inside and outside diameter of the bearings.

GEARS

Check all gears for wear and damage. Replace gears that have wear or damage.

OIL SEALS, O-RINGS AND GASKETS

Always install new oil seals, o-rings and gaskets. Put petroleum jelly on seals and o-rings.

SHAFTS

Check all shafts that have wear or damage. Check the bearing and oil seal surfaces of the shafts for damage.

SERVICE PARTS

Always install genuine Case service parts, when ordering refer to the Parts Catalog for the correct part number of the genuine Case replacement items. Failures due to the use of other than genuine Case replacement parts are not covered by warranty.

LUBRICATION

Only use the oils and lubricants specified in the Operator's or Service Manual. Failures due to the use of non specified oils and lubricants are not covered by warranty.

STANDARD TORQUE DATA FOR NUTS AND BOLTS

Where no special torque data is specified, the following torque figures should be applied. Threads should be lubricated with engine oil or chassis grease.

TORQUE SPECIFICATIONS $\pm 10\%$									
SIZE	GRADE 8.8			GRADE 10.9			GRADE 12.9		
	lb-ft	Nm	kg/m	lb-ft	Nm	kg/m	lb-ft	Nm	kg/m
M5	4	5.5	0.56	5.5	7.5	0.76	6.6	9	0.92
M6	6.6	9	0.92	9.2	12.5	1.27	11	15	1.53
M8	16.5	22.5	2.3	23	31.5	3.2	26.5	36	3.67
M10	32	44	4.5	45	62	6.3	55	75	7.65
M12	57	77.5	7.9	81	110	11.2	95	130	13.2
M14	88	120	12.2	125	170	17.3	155	210	21.4
M16	140	190	19.4	195	265	27	236	320	32.6
M18	192	260	26.5	269	365	37.2	320	435	44.3
M20	273	370	37.7	383	520	53	457	620	63.2
M22	369	500	51	516	700	71.4	619	840	85.6
M24	471	640	65.2	665	900	92	796	1080	110
M27	702	950	97	996	1350	137.7	1195	1620	165.2
M30	955	1300	132.5	1328	1800	183.6	1593	2160	220.3

TORQUE DATA FOR HYDRAULIC FITTINGS

UNIONS, CONNECTIONS AND PLUGS

Diameter x Pitch	Newton / Metres	Pounds / Feet	Kilogram / Metres
M10 x 1	20	14.5	2
M12 x 1.5	35	26	3.6
M14 x 1.5	45	33.2	4.6
M16 x 1.5	60	44	6.1
M18 x 1.5	70	51	7.1
M22 x 1.5	100	73	10.2
M27 x 2	200	147	20.4
M33 x 2	280	207	28.6
M42 x 2	380	281	38.8

NUTS FOR PIPES AND HOSES

Diameter x Pitch	Newton / Metres	Pounds / Feet	Kilogram / Metres
M16 x 1.5	20	14.5	2
M18 x 1.5	35	26	3.6
M20 x 1.45	45	33.2	4.6
M24 x 1.5	60	44	6.1

FLANGES

Diameter x Pitch	Newton / Metres	Pounds / Feet	Kilogram / Metres
M8 x 1.5	28	21	2.9
M10 x 1.5	55	41	5.6
M12 x 1.75	90	67	9.2
M14 x 2	145	107	14.8
M16 x 2	230	170	23.5

Section 1002

SPECIFICATIONS

1002

For 1088 Crawler Excavators



TABLE OF CONTENTS

MODEL AND PIN NUMBERS	3
GENERAL SPECIFICATIONS	
Capacities	4
Drawbar Pull	4
Drive Speed	4
Electrical System	4
Fluids and Lubricants	5
Fuel	5
Hydraulic System	6
Tracks, Rollers and Idlers	7
Weights	7
ENGINE SPECIFICATIONS	
IMPORTANT: <i>This engine was made using the metric measurement system. All measurements and checks must be made with metric tools to make sure of an accurate reading when inspecting parts.</i>	
Run-In Instructions	8
Engine Cooling System	9
Engine Lubrication	9
General Engine Specifications	
General	10
Pistons and Connecting Rods	10
Main Bearings	10
Engine Lubricating System	10
Fuel System	11
Detailed Engine Specifications	
Cylinder Block	12
Service Cylinder Sleeves	12
Pistons	12
Piston Pins	12
Piston Rings	13
Cylinder Head	13
Lifters	13
Connecting Rods	13
Crankshaft	14
Camshaft	15
Turbocharger	15
Gear Train	15
Rocker Arm Assembly	15
Intake Valves	16
Exhaust Valves	16
Valve Springs	16
Special Torques	17
GENERAL DIMENSIONS	20
TRANSPORT DIMENSIONS	21

MODEL AND PIN NUMBERS

When ordering parts or when requesting information or assistance, always give the identification numbers of your machine.

Write the model and PIN numbers of your machine on the lines below.

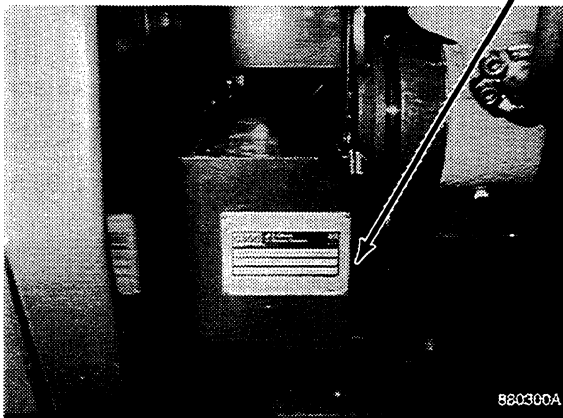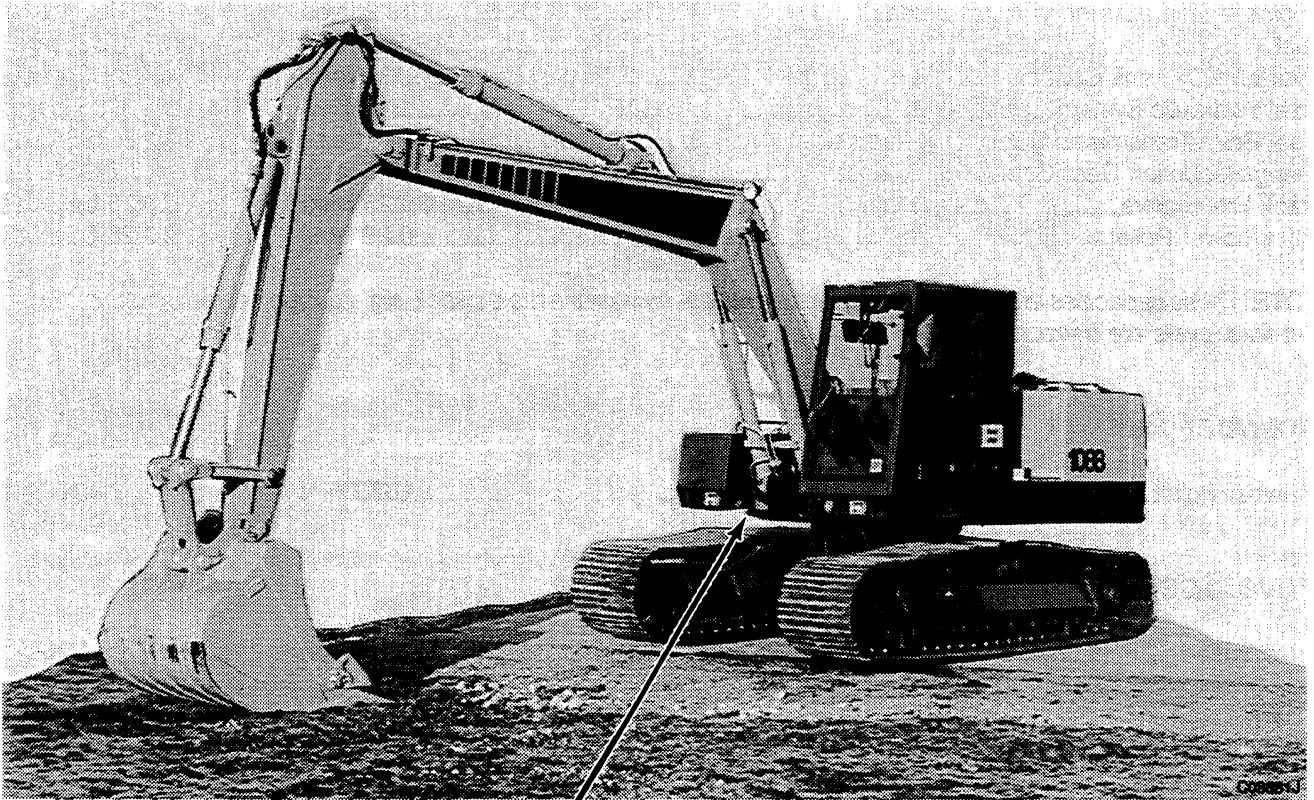

Machine Model Number

Machine PIN Number

Engine Serial Number

High Pressure Pump Serial Number

Low Pressure Pump Serial Number

Final Drive Serial Number:

Right Hand Side

Left Hand Side

GENERAL SPECIFICATIONS

Capacities

Engine Oil Capacity (with filter change)	15.4 litres	4 US gallons
Engine Cooling System (with cab heater)	19.2 litres	5.07 US gallons
Fuel Tank	330 litres	87.1 US gallons
Hydraulic Oil Tank Capacity	130 litres	34.3 US gallons
Total Hydraulic System Capacity	210 litres	55.4 US gallons
Final Drive Transmission Capacity (each side)	1.7 litres	1.80 US quarts
Swing Reduction Gear Capacity	3.5 litres	3.7 US quarts
Track Front Idlers	0.25 litres	0.26 US quarts
Track Lower Rollers	0.26 litres	0.28 US quarts

NOTE: These capacities are only a guide to the quantities. Always use the dipstick, sight gauge or level plug to make sure that fluid levels are correct.

Drawbar Pull

Drawbar Pull	182000 N	40940 lb
--------------------	----------	----------

Drive Speed

Drive Speed	3.15 kph	1.96 mph
-------------------	----------	----------

Electrical System

Type of System	24 volts, negative ground
----------------------	---------------------------

Alternator

Manufacturer	Bosch
Output	28 volts at 45 amperes
Resistance of rotor winding	9.0 ohms
Resistance of stator winding	0.22 ohms
Minimum brush length	14 mm (0.55 inch)

Batteries

Number of batteries required	2
Voltage of each battery	12 volts
Reserve capacity	160 minutes
Cold cranking capacity at -17°C (0°F)	800 amperes
Load for capacity (load) test	400 amperes

Starter Motor

Manufacturer	Bosch
No load test at 27°C (80°F)	
volts	23 volts
current draw	85 amperes maximum
armature speed	7000 rpm minimum
Brush length	8.5 mm (0.3125 inch) minimum
Armature run-out	0.03 mm (0.001 inch) maximum
Commutator diameter	42.5 mm (1.74 inch) minimum
Armature end play	0.05 to 0.4 mm (0.002 to 0.15 inch)

Fluids and Lubricants

Batteries	add drinking or distilled water
Engine Coolant Solution	refer to page 9
Engine Lubrication	refer to page 9
Fuel	refer to the entry on this page
Hydraulic Oil	Case hydraulic excavator fluid (MS 1230)
Final Drive Transmission Lubricant	Case IH 135-H EP gear lubricant or a gear lubricant API GL-5 (SAE 85W-140)
Swing Reduction Gear Lubricant	Case IH 135-H EP (gear lubricant) or a gear lubricant API GL-5 (SAE 85W-140)
Track Roller and Front Idler Lubricant	Case IH No. 1 Single Grade engine oil SAE 80
Turntable Ring Gear Lubricant	Case IH molydisulfide grease
Grease Fitting Lubricant	Case IH molydisulfide grease

Fuel

Use a good grade of Number Two diesel fuel.

Specifications for Acceptable Number Two Diesel Fuel:

API Gravity (minimum)	34
Flash Point (minimum)	60°C 140°F
Cloud Point (Wax Appearance Point) (maximum)	-2°C -5°F
Pour Point (maximum)	-26°C -15°F
Distillation Temperature, 90% Point	282 to 338°C 540 to 640°F
Viscosity at 38°C (100°F)	
Centistokes	2.0 to 4.3
Saybolt Seconds Universal	32 to 40
Cetane Number (minimum)	43 (45 to 55 for winter or high altitudes)
Water and Sediment by Volume (maximum)	0.05 of 1%
Sulfur by Weight (maximum)	0.50 of 1%
Copper Strip Corrosion (maximum)	Number 2
Ash by Weight (maximum)	0.01 of 1%

Hydraulic System

High Pressure Pump

The high pressure pump comprises two bodies:

One body with an variable flow for the attachment and travel hydraulic circuits,

Maximum flow at 2000 rpm: attachment hydraulic circuit	200 l/min	53 US gpm
travel hydraulic circuit	306 l/min	81 US gpm

One body with a fixed flow for the upperstructure swing and for travel hydraulic circuits,

Maximum flow at 2000 rpm:	56 l/min	15 US gpm
(total flow for travel)	362 l/min	96 US gpm

Low Pressure Pump

Comprises one body with a fixed flow for the servo-steering hydraulic circuits,

Maximum flow at 2000 rpm:	24 l/min	6.3 US gpm
Operating pressure	28 Bar	406 psi

Flow Setting Times

Boom Up	3.3 seconds
Dipper In	4.8 seconds
Bucket In	3.3 seconds

Flow Setting Valve Rates (cylinder large chamber):

Boom	195 to 210 l/min	51.5 to 55.5 US gpm
Bucket	195 to 210 l/min	51.5 to 55.5 US gpm
Dipper	195 to 210 l/min	51.5 to 55.5 US gpm
Right-hand travel in forward drive	168 to 172 l/min	44.3 to 45.4 US gpm
Left-hand travel in forward drive	168 to 172 l/min	44.3 to 45.4 US gpm
Right and left-hand travel in forward drive	336 to 344 l/min	88.7 to 90.9 US gpm
Offset backhoe	25 to 35 l/min	6.6 to 9.2 US gpm
Turn Table Leveler	25 to 35 l/min	6.6 to 9.2 US gpm

Hydraulic Oil Test Temperature	50°C	120°F
--------------------------------------	------	-------

Pressure Settings

Attachment Flow Cut-off Valve	352 to 360 Bar	5105 to 5221 psi
Attachment Valve Bank Main Relief Valve	425 to 440 Bar	6164 to 6381 psi
Regulator		
Torque Regulator Valve,		
160 l/min (42.3 US gpm) engine speed 2020 rpm at a pressure of	275 Bar	3988 psi
Load Sensing Valve,		
pressure difference between test points M1 and M3	18 to 20 Bar	261 to 290 psi
Swing Control Valve Main Relief Valve	370 to 380 Bar	5366 to 5511 psi
Travel Flow Cut-off Valve	385 to 395 Bar	5583 to 5729 psi

Circuit Relief Valves:

Boom : raising	380 to 400 Bar	5511 to 5801 psi
Boom : lowering	395 to 420 Bar	5729 to 6091 psi
Bucket : opening, closing	380 to 400 Bar	5511 to 5801 psi
Dipper : extension, retracting	380 to 400 Bar	5511 to 5801 psi
Swing : right, left	350 to 360 Bar	5076 to 5221 psi
Travel : forward drive, reverse drive	400 to 415 Bar	5801 to 6019 psi
Boom and Dipper Anti-Drift Valve	390 to 410 Bar	5656 to 5946 psi
Boom and Dipper Safety Valve	390 to 410 Bar	5656 to 5946 psi
Low Flow (Clamshell Swing)	130 to 150 Bar	1885 to 2175 psi
High Flow (Clamshell Swing) See NIT 3060	180 to 200 Bar	2610 to 2900 psi
Offset boom	180 to 200 Bar	2610 to 2900 psi
Turn Table Leveler	345 to 355 Bar	5002 to 5147 psi

Counter Rotation Valve		
Reduction Pressure	16.5 to 18 Bar	239 to 261 psi
Selector Sequence Pressure	14.5 to 15.5 Bar	210 to 224 psi
Thermostat Controlled Valve		
Starts to Close	40°C	104°F
Fully Closed.....	50°C	122°F
Track Speed		
5 Revolutions.....	53 to 58 seconds	

Tracks, Rollers and Idlers

Track Tension	240 to 260 mm	9.5 to 10.2 inch
Maximum Pin and Bushing Wear Over Four Links	700 mm	27.5 inch
Maximum Link Wear (ITRAC Link)	88.5 mm	3.5 inch
Maximum Track Shoe Wear	12 mm	0.47 inch
Maximum Spacer Wear	48.1 mm	1.9 inch
Maximum Idler Wear	29.5 mm	1.2 inch
Minimum Diameter on ITM Track Roller	147 mm	5.8 inch
Minimum Diameter on ITRAC Track Roller	135 mm	5.3 inch

Weights

Operating Weight	20480 kg	45160 lb
Operating Weight (For Machines Equipped With T.T.L)	21716 kg	47879 lb
Counterweight	3800 kg	8360 lb
Engine	512 kg	1130 lb
Attachments		
540 cm (223 inch) Boom with Dipper Cylinder	1497 kg	3300 lb
220 cm (87 inch) Dipper with Links and Bucket Cylinder	907 kg	2000 lb
280 cm (110 inch) Dipper with Links and Bucket Cylinder	998 kg	2200 lb
Buckets		
60 cm (24 inch) Bucket	545 kg	1200 lb
75 cm (30 inch) Bucket	590 kg	1300 lb
85 cm (34 inch) Bucket	621 kg	1365 lb
105 cm (42 inch) Bucket	721 kg	1585 lb
115 cm (46 inch) Bucket	752 kg	1655 lb
125 cm (50 inch) Bucket	822 kg	1810 lb
140 cm (56 inch) Bucket	867 kg	1905 lb
Cylinders		
Boom Cylinder (each)	290 kg	637 lb
Dipper Cylinder	219 kg	483 lb
Tool Cylinder	145 kg	320 lb

RUN-IN INSTRUCTIONS

Engine Lubrication

Fill the engine crankcase with CD service classification oil that has the correct viscosity rating for the ambient air temperature. Refer to Engine Lubrication on page 9. Install new oil filters, after the engine has been rebuilt.

Run-In Procedure For Rebuilt Engine

- STEP 1** Disconnect the wire to the electric shut-off on the injection pump so that the engine will not start. Crank the engine for 30 seconds until there is oil pressure, then reconnect the wire.
- STEP 2** Remove the air from the cooling system at the temperature sending unit.
- STEP 3** Run the engine at 1000 rpm minimum load for 5 minutes and check for oil leaks.
- STEP 4** During the Run-In, continue to check the oil pressure, coolant level, and coolant temperature.

Run-In Procedure For Rebuilt Engine (With A Dynamometer)

The following procedure must be followed when using a PTO dynamometer to Run-In the engine. The dynamometer will control the engine load at each speed and will remove stress on new parts during Run-In.

During the Run-In, continue to check the oil pressure, coolant level and coolant temperature.

STEP	TIME	ENGINE SPEED	DYNAMOMETER SCALE LOAD
1	5 Minutes	1000 rpm	50
2	5 Minutes	1100 rpm	1/2
3	5 Minutes	2200 rpm	Full

Run-In Procedure For Rebuilt Engines (Without A Dynamometer)

STEP	TIME	ENGINE SPEED	LOAD
1	5 Minutes	1000 rpm	No Load
2	5 Minutes	1100 rpm	Light Load
3	5 Minutes	2200 rpm	Full

Run-In Procedure

For the first 8 hours, operate the engine at full throttle maintaining a normal load. DO NOT "baby" the engine, but avoid converter or hydraulic stall. The engine must not be "lugged" below the rated engine rpm (Do not stall the engine more than 10 seconds).

Engine Cooling System

Coolant Solution Ethylene Glycol

IMPORTANT: When using ethylene glycol coolant solutions, always have a minimum of 50% ethylene glycol coolant in the system. Do not put more than 50% ethylene glycol in the cooling system unless the ambient air temperature will be less than -36°C (-34°F). More than 50% decreases heat transfer and will cause the engine surface temperature to be higher than normal.

Thermostat Starts to open at 82°C (180°F)
Fully open at 94°C (201°F)

Radiator Cap 1.03 Bar (15 psi)

Engine Lubrication

Engine Oil Type

Case IH No. 1 engine oil is recommended for use in the Case engine. Case IH engine oil will lubricate the engine under all operating conditions. If Case IH No.1 Multi-Viscosity engine oil is not available, Case IH No. 1 Single Grade engine oil can be used.


If Case IH No. 1 Multi-Viscosity or Single Grade engine oil is not available, use only oil meeting API engine oil service category CD.

See the chart below for recommended viscosity at ambient air temperature ranges.

NOTE: DO NOT put performance additives or other oil additive products into the engine crankcase.

Engine Lubrication Oil Viscosity

AMBIENT AIR TEMPERATURE RANGES

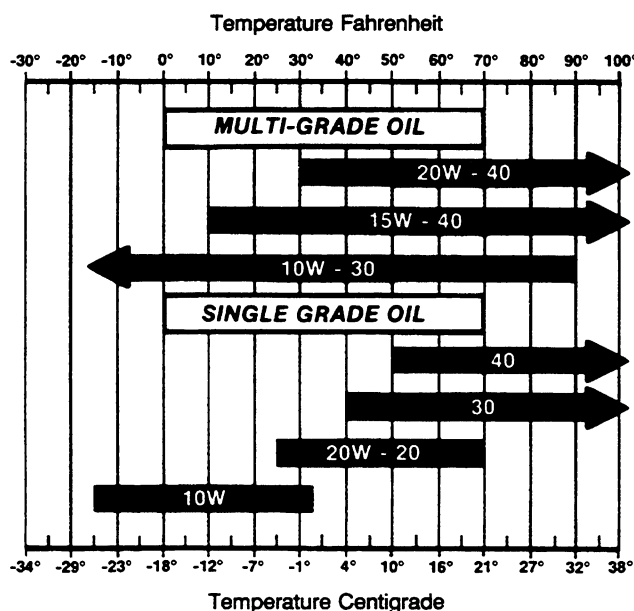

0217Z

GENERAL ENGINE SPECIFICATIONS

General

Make and Model	Jl Case, 6T-590	
Type	6 cylinder, turbocharged 4 stroke cycle	
Horsepower	145 at 2000 rpm	108 kw at 2000 rpm
Firing Order	1, 5, 3, 6, 2, 4	
Bore and Stroke	102 mm x 120 mm	
Piston Displacement	5880 cm ³	
Compression Ratio	17.5 to 1	
Valve Tappet Clearance		
Exhaust (Cold)	0.508 mm	
Intake (Cold)	0.254 mm	
Engine Speeds		
No Load Governed Speed	2140 to 2280 rpm	
Rated Engine Speed	2000 rpm	
Stall Speed, Full Load (minimum)	2040 rpm	
Engine Idle Speed	900 rpm	

Pistons and Connecting Rods

Rings per Piston	3
Number of Compression Rings	2
Number of Oil Rings (two piece)	1
Type of Pins	Full Float
Type of Bearings	Steel Back Leaded Bronze

Main Bearings

Number of Bearings	7
Type of Bearings	Replaceable

Engine Lubricating System

Type of System	Pressure and Spray Lubrication	
Oil Pressure (when engine warm and operating at rated speed)	2.07 to 3.45 Bar	30 to 50 psi
Oil Pump	Rotor Type	
Oil Filter	Full Flow Turn-on Type	
Oil Capacity		
(with filter change)	15.4 litres	16 US quarts
(without filter change)	14.4 litres	15 US quarts

Fuel System

Fuel Injection Pump	Bosch
Pump Timing	Top Dead Center
Fuel Injectors	Bosch 17 mm
Opening Pressure (New)	231 to 253 Bar 3350 to 3670 psi
Opening Pressure (Used)	221 to 250 Bar 3200 to 3625 psi
Maximum Pressure Difference	10.34 Bar 150 psi
Number of Orifices	4
Spray Orifice Size	0.29 mm
Governor	Variable Speed, Part of the Injection Pump
First Stage Fuel Filter	Turn-on Type
Second Stage Fuel Filter	Turn-on Type
Lift Pump	0.34 to 0.48 Bar 5 to 7 psi

DETAILED ENGINE SPECIFICATIONS

Cylinder Block

Type	Non-Sleeved
Material	Cast Iron
ID of Cylinder	102.00 to 102.04 mm
Maximum Service Limit	102.116 mm
Cylinder Out of Round (Maximum)	0.038 mm
Cylinder Taper (Maximum)	0.076 mm
0.5 mm Oversize Piston	
Machine Cylinder Bore to	102.40 to 102.44 mm
Hone Cylinder Bore to	102.50 to 102.54 mm
1.00 mm Oversize Piston	
Machine Cylinder Bore to	102.900 to 102.960 mm
Hone Cylinder Bore to	103.00 to 103.04 mm

Service Cylinder Sleeves

Type	Dry, Can Be Replaced
Material	Cast Iron
Machine Cylinder Block Bore to	104.485 to 104.515 mm
Installation	Press Fit
Hone Cylinder Bore to	102.00 to 102.10 mm

Pistons

Type	Cam Ground
Material	Aluminium alloy
OD at 12 mm From the Bottom, 90 Degrees From Piston Pin	
Standard Size Piston	101.873 to 101.887 mm
Minimum Service Limit	101.823 mm
0.5 Oversize Piston	102.373 to 102.387 mm
Minimum Service Limit	102.323 mm
1.00 Oversize Piston	102.873 to 102.887 mm
Minimum Service Limit	102.823 mm
ID of Piston Pin Bore	40.006 to 40.012 mm
Maximum Service Limit	40.025 mm
Width of 1st Ring Groove (Top)	2.465 to 2.485 mm
Width of 2nd Ring Groove (Intermediate)	2.425 to 2.445 mm
Width of 3rd Ring Groove (Oil Ring)	4.040 to 4.060 mm
Protrusion Above Cylinder Block (Maximum)	0.660 mm

Piston Pins

Type	Full Float
OD of Pin	39.997 to 40.003 mm
Minimum Service Limit	39.990 mm

Piston Rings

No. 1 Compression (6T-590 and 6TA-590 Engine)	Key Stone Type (Barrel Face)
End Gap in 102.02 ID	0.40 to 0.70 mm
No. 1 Compression 6-590 Engine	Rectangular Type (Barrel Face)
End Gap in 102.02 ID	0.25 to 0.55 mm
Maximum Service Limit	0.806 mm
Side Clearance	0.075 to 0.120 mm
Maximum Service Limit	0.15 mm
No. 2 Compression	Rectangular Type (Taper Face)
End Gap in 102.02 ID	0.25 to 0.55 mm
Maximum Service Limit	0.806 mm
Side Clearance	0.075 to 0.120 mm
Maximum Service Limit	0.15 mm
No. 3 Oil Control Rings	Two Piece
End Gap in 102.02 ID	0.25 to 0.55 mm
Maximum Service Limit	0.806 mm
Side Clearance	0.130 mm

Cylinder Head

Warpage (Maximum)	0.20 mm
-------------------	---------

Lifters

Material	Hardened Iron
OD of Lifter	15.961 to 15.977 mm
Minimum Service Limit	15.960 mm
Bore Diameter in Block	16.000 to 16.030 mm
Maximum Service Limit	16.055 mm

Connecting Rods

Bushing	Steel Backed Leaded Bronze
Bushing ID Installed (Ream to Size)	40.053 to 40.067 mm
Maximum Service Limit	40.092 mm
Bearing Liners	Replaceable
Journal ID Without Bearing Liners	72.987 to 73.013 mm
Bearing Oil Clearance	0.038 to 0.116 mm
Maximum Service Limit	0.129 mm
Side Clearance	0.100 to 0.300 mm
Maximum Service Limit	0.330 mm
Connecting Rod Bend (Maximum)	
Without Bushing	0.200 mm
With Bushing	0.150 mm
Connecting Rod Twist (Maximum)	
Without Bushing	0.500 mm
With Bushing	0.300 mm

Crankshaft

Type	Hardened Steel, Balanced
Main Bearing Liners	Replaceable
Crankshaft End Clearance	0.137 to 0.264 mm
Center Main Bearing Thrust Surface Thickness	2.50 mm
Connecting Rod Journal	
OD, Standard	68.987 to 69.013 mm
Maximum Service Limit	68.962 mm
0.25 mm OD Undersize, Grind to	68.737 to 68.763 mm
Maximum Service Limit	68.712 mm
0.50 mm OD Undersize, Grind to	68.487 to 68.513 mm
Maximum Service Limit	68.462 mm
0.75 mm OD Undersize, Grind to	68.237 to 68.263 mm
Maximum Service Limit	68.212 mm
1.00 mm OD Undersize, Grind to	67.987 to 68.013 mm
Maximum Service Limit	67.962 mm
Connecting Rod Journal Maximum Taper	0.013 mm
Journals Out of Round Maximum	0.050 mm
Undersize Main Bearing Liners For Service	0.25, 0.50, 0.75 and 1.00 mm
Main Bearing Oil Clearance	0.041 to 0.119 mm
Maximum Service Limit	0.140 mm
Main Bearing Journal	
OD, Standard	82.987 to 83.013 mm
Maximum Service Limit	82.962 mm
0.25 mm OD Undersize, Grind to	82.737 to 82.763 mm
Maximum Service Limit	82.712 mm
0.50 mm OD Undersize, Grind to	82.487 to 82.513 mm
Maximum Service Limit	82.462 mm
0.75 mm OD Undersize, Grind to	82.237 to 82.263 mm
Maximum Service Limit	82.212 mm
1.00 mm OD Undersize, Grind to	81.987 to 82.013 mm
Maximum Service Limit	81.962 mm
Main Bearing Journal Bore ID No Liners	87.982 to 88.018 mm
Maximum Service Limit	88.031 mm
Main Journal Width	
1st, 2nd, 3rd, 5th and 6th	37.424 to 37.576 mm
4th	37.475 to 37.525 mm
Connecting Rod Journals Width	38.950 to 39.050 mm

Camshaft

Type	Hardened Iron
Bushing (Front Only)	1, Replaceable
Bushing Lubrication:	
Front Bushing	Pressure Lubricated
Intermediate	Pressure Lubricated
Rear	Pressure Lubricated
Oil Clearance	0.076 to 0.152 mm
ID of No. 1 Bushing (Installed)	54.107 to 54.133 mm
Maximum Service Limit	54.146 mm
ID of No. 1 Oversize (57.36 to 57.40 mm OD) Service Bushing	54.107 to 54.133 mm
Maximum Service Limit	54.146 mm
ID of No. 2, 3, 4, 5 and 6 Service Bushing	54.107 to 54.133 mm
Maximum Service Limit	54.146 mm
Width of No. 1 Bushing	25.15 to 25.65 mm
Width of No. 2, 3, 4, 5 and 6 Service Bushing	17.75 to 18.25 mm
Camshaft Bushing Journal OD	53.987 to 54.013 mm
Minimum Serviceable Limit	53.962 mm
Camshaft Bore Diameter in Block	
No. 1 Bushing	57.222 to 57.258 mm
No. 1 Oversize Bushing, Machine to	57.722 to 57.758 mm
No. 2, 3, 4, 5 and 6 Less Bushings	54.107 to 54.133 mm
No. 2, 3, 4, 5 and 6 Oversize for Bushings, Machine to	57.222 to 57.258 mm
Camshaft Thrust Thickness	9.42 to 9.58 mm
Minimum Service Limit	9.34 mm
Camshaft Thrust Clearance	0.130 to 0.340 mm
Maximum Service Limit	0.470 mm

Turbocharger

Horizontal Travel of Turbine Shaft	0.10 to 0.16 mm
--	-----------------

Gear Train

Backlash:	
Crankshaft Gear to Camshaft Gear	0.08 to 0.33 mm
Crankshaft Gear to Idler Gear	0.08 to 0.33 mm
Camshaft to Fuel Pump Gear	0.08 to 0.33 mm
Idler Gear to Oil Pump	0.08 to 0.33 mm
Camshaft to Auxiliary	0.08 to 0.33 mm
Maximum Service Limit (All Gears)	0.45 mm

Rocker Arm Assembly

OD of Shaft	18.963 to 18.975 mm
Minimum Service Limit	18.938 mm
ID of Arm Bore	19.000 to 19.026 mm
Maximum Service Limit	19.051 mm
Lubrication	Pressure From Oil Gallery

Intake Valves

Tappet Clearance (Cold)	0.254 mm
Face Angle	29 Degrees
Face Run-Out	0.038 mm
Valve Head Edge Thickness, Minimum	1.50 mm
Length	128.84 to 129.46 mm
OD of Stem	7.960 to 7.980 mm
Minimum Service Limit	7.940 mm
OD of Head	44.870 to 45.130 mm
Seat Angle	30 Degrees
Seat Contact Width	1.32 to 1.92 mm
Seat Run-Out	0.10 mm
Insert Height	6.84 to 6.96 mm
OD of Insert	47.063 to 47.089 mm
ID of Insert	Tapered
Valve Recession Below Head Surface	0.99 to 1.52 mm
Maximum Service Limit	1.52 mm
ID of Valve Guide Bore	8.019 to 8.039 mm
Maximum Service Limit	8.089 mm

Exhaust Valves

Tappet Clearance (Cold)	0.508 mm
Face Angle	44 Degrees
Face Run-Out	0.038 mm
Valve Head Edge Thickness, Minimum	1.50 mm
OD of Head	41.870 to 42.130 mm
OD of Stem	7.960 to 7.980 mm
Minimum Service Limit	7.940 mm
Length	128.74 to 129.36 mm
Insert Seat Angle	45 Degrees
Seat Contact Width	1.47 to 2.07 mm
Seat Run-Out	0.10 mm
Insert Height	6.65 to 6.77 mm
OD of Insert	43.713 to 43.739 mm
ID of Insert	Tapered
Valve Recession Below Head Surface	0.99 to 1.52 mm
Maximum Service Limit	1.52 mm
ID of Valve Guide Bore	8.019 to 8.039 mm
Maximum Service Limit	8.089 mm

Valve Springs

Free Length	55.63 mm
Total Coils	7.25 mm
Wire Diameter	4.830 to 4.930 mm
Compressed to 38.53 mm	(Valve Open) 785 to 839 N
Maximum Service Limit	765 N
Compressed to 49.25 mm	(Valve Closed) 285 to 321 N
Minimum Service Limit	270 N

Sample of manual. Download All 971 pages at:

<https://www.arepairmanual.com/downloads/1990-case-1088-crawler-excavator-service-manual-8-86382r0/>