

# HYDRAULIC EXCAVATOR

**SHOP  
MANUAL**

**model SK330(LC)-6E  
SK330NLC-6E**

## INDEX

1	SPECIFICATION SECTION
2	MAINTENANCE SECTION
3	SYSTEM SECTION
4	DISASSEMBLY SECTION
5	TROUBLESHOOTING
6	ENGINE SECTION
7	INSTALLATION PROCEDURES FOR OPTIONAL ATTACHMENT

SPECIFICATION

MAINTENANCE

SYSTEM

DISASSEMBLING

TROUBLESHOOTING

E/G

OPT

# KOBELCO

Book code No. S5LC0009E②

Product: Kobelco Model SK330(LC)-6E,SK330NLC-6E Hydraulic Excavator Service Repair Workshop Manual  
Full Download: <https://www.arepairmanual.com/downloads/kobelco-model-sk330lc-6esk330nlc-6e-hydraulic-excavator-service-repair-workshop-manual-2/>

Sample of manual. Download All 1302 pages at:

<https://www.arepairmanual.com/downloads/kobelco-model-sk330lc-6esk330nlc-6e-hydraulic-excavator-service-repair-works>

## WARNING

# SAFETY

## WARNING

The proper and safe lubrication and maintenance for this machine, recommended by KOBELCO are outlined in the OPERATION & MAINTENANCE GUIDE for this machine.

Improper performance of lubrication or maintenance procedures is dangerous and could result in injury or death. Read and understand the OPERATION & MAINTENANCE GUIDE before performing any lubrication or maintenance.

The serviceman or mechanic may be unfamiliar with many of the systems on this machine. This makes it important to use caution when performing service work. A knowledge of the system and or components is important before the removal or disassembly of any component.

Because of the size of some of the machine components, the serviceman or mechanic should check the weights noted in this Manual. Use proper lifting procedures when removing any components.

Following is a list of basic precautions that should always be observed.

1. Read and understand all Warning plates and decals on the machine before operating, lubricating or repairing this product.
2. Always wear protective glasses and protective shoes when working around machines. In particular, wear protective glasses when pounding on any part of the machine or its attachments with a hammer or sledge. Use welders gloves, hood / goggles, apron and other protective clothing appropriate to the welding job being performed. Do not wear loose-fitting or torn clothing. Remove all rings from fingers when working on machinery.
3. Disconnect battery and discharge any capacitors before starting to work on machine. Hang "Do Not Operate" tag in the Operator's Cab.
4. If possible, make all repairs with the machine parked on a level, hard surface. Block machine so it does not roll while working on or under machine.
5. Do not work on any machine that is supported only by lift jacks or a hoist. Always use blocks or jack stands to support the machine before performing any disassembly.

## WARNING

Do not operate this machine unless you have read and understand the instructions in the OPERATORS MANUAL. Improper machine operation is dangerous and could result in injury or death.

6. Relieve all pressure in air, oil or water systems before any lines, fittings or related items are disconnected or removed. Always make sure all raised components are blocked correctly and be alert for possible pressure when disconnecting any device from a system that utilizes pressure.
7. Lower the bucket, blade, ripper or other attachment to the ground before performing any work on the machine. If this cannot be done, make sure the bucket, blade, ripper or other attachment is blocked correctly to prevent it from dropping unexpectedly.
8. Use steps and grab handles when mounting or dismounting a machine. Clean any mud or debris from steps, walkways or work platforms before using. Always face machine when using steps, ladders and walkways. When it is not possible to use the designed access system, provide ladders, scaffolds, or work platforms to perform safe repair operations.
9. To avoid back injury, use a hoist when lifting components which weigh 23 kg (50 lbs) or more. Make sure all chains, hooks, slings, etc., are in good condition and are in the correct capacity. Be sure hooks are positioned correctly. Lifting eyes are not to be side loaded during a lifting operation.
10. To avoid burns, be alert for hot parts on machines which have just been stopped and hot fluids in lines, tubes and components.
11. Be careful when removing cover plates. Gradually back off the last two bolts or nuts located at opposite ends of the cover or device and pry cover loose to relieve any spring or other pressure, before removing the last two bolts or nuts completely.
12. Be careful when removing filler caps, breathers and plugs on the machine. Hold a rag over the cap or plug to prevent being sprayed or splashed by liquids under pressure. The danger is even greater if the machine has just been stopped because fluids can be hot.

**⚠ WARNING**

13. Always use tools that are in good condition and be sure you understand how to use them before performing any service work.
14. Reinstall all fasteners with same part number. Do not use a lesser quality fastener if replacements are necessary.
15. Repairs, which require welding, should be performed only with the benefit of the appropriate reference information and by personnel adequately trained and knowledgeable in welding procedures. Determine type of metal being welded and select correct welding procedure and electrodes, rods or wire to provide a weld metal strength equivalent at least to that of parent metal. Always disconnect battery during welding operations to protect sensitive electric equipment.
16. Do not damage wiring during removal operations. Reinstall the wiring so it is not damaged nor will it be damaged in operation by contacting sharp corners, or by rubbing against some object or hot surface. Do not connect wiring to a line containing fluid.
17. Be sure all protective devices including guards and shields are properly installed and functioning correctly before starting a repair. If a guard or shield must be removed to perform the repair work, use extra caution.
18. Loose or damaged fuel, lubricant and hydraulic lines, tubes and hoses can cause fires. Do not bend or strike high-pressure lines or install ones, which have been bent or damaged. Inspect lines, tubes and hoses carefully. Do not check for leaks with your hands. Pinhole (very small) leaks can result in a high velocity oil stream that will be invisible close to the hose. This oil can penetrate the skin and cause personal injury. Use cardboard or paper to locate pinhole leaks.
19. Tighten connections to the correct torque. Make sure that all heat shields, clamps and guards are installed correctly to avoid excessive heat, vibration or rubbing against other parts during operation. Shields that protect against oil spray onto hot exhaust components in event of a line, tube or seal failure must be installed correctly.
20. Do not operate a machine if any rotating part is damaged or contacts any other part during operation. Any high speed-rotating component that has been damaged or altered should be checked for balance before reusing.
21. On track-type machines, be careful when servicing or separating tracks. Chips can fly when removing or installing a track pin. Wear safety glasses and long sleeve shirts. Track can unroll very quickly when separated. Keep away from front and rear of machine. The machine can move unexpectedly when both tracks are disengaged from the sprockets. Block the machine to prevent it from moving.

Book Code No. Distribution Year—Month			Index No	Title	
S5LC0109E 2003-03	S5LC0109E① 2003-11		<b>SPECIFICATION</b>	OUTLINE	LC01
S5LC0209E 2003-03	S5LC0209E① 2003-11			SPECIFICATION	LC02
S5LC0309E 2003-03	S5LC0309E① 2003-11			ATTACHMENT DIMENSION	LC03
S5LC1109E 2003-03	S5LC1109E① 2003-11		<b>MAINTENANCE</b>	TOOLS	LC11
S5LC1209E 2003-03	S5LC1209E① 2003-11			STANDARD MAINTENANCE TIME TABLE	LC12
S5LC1309E 2003-03	S5LC1309E① 2003-11			MAINTENANCE STANDARD AND TEST PROCEDURE	LC13
S5LC2109E 2003-03	S5LC2109E① 2003-11		<b>SYSTEM</b>	MECHATRO CONTROL SYSTEM	LC21
S5LC2209E 2003-03	S5LC2209E① 2003-11			HYDRAULIC SYSTEM	LC22
S5LC2309E 2003-03	S5LC2309E① 2003-11			ELECTRICAL SYSTEM	LC23
S5LC2409E 2003-03	S5LC2409E① 2003-11			COMPONENTS SYSTEM	LC24
S5LC2509E 2003-03	S5LC2509E① 2003-11			AIR-CONDITIONER SYSTEM	LC25
—				—	
S5LC3109E 2003-03	S5LC3109E① 2003-11		<b>DISASSEMBLING</b>	DISASSEMBLING AND ASSEMBLING	LC31
S5LC3209E 2003-03	S5LC3209E① 2003-11			ATTACHMENT	LC32
S5LC3309E 2003-03	S5LC3309E① 2003-11			UPPER STRUCTURE	LC33
S5LC3409E 2003-03	S5LC3409E① 2003-11			TRAVEL SYSTEM	LC34
S5LC4109E 2003-03	S5LC4109E① 2003-11		<b>TROUBLESHOOTING</b>	MECHATRO CONTROL	LC41
S5LC4209E 2003-03	S5LC4209E① 2003-11			HYDRAULIC	LC42
S5LC4309E 2003-03	S5LC4309E① 2003-11			ELECTRICAL	LC43
S5LC4409E 2003-03	S5LC4409E① 2003-11			ENGINE	LC44
S5LC5109E 2003-03	S5LC5109E① 2003-11		<b>E/G</b>	ENGINE	LC51
★ S5LC6103E 2003-05	←		<b>OPT.</b>	LMN & BREAKER	LC61
—	★ S5LC6303E 2003-11			MOUNTING THE BREAKER AND NIBBLER & BREAKER	LC63
LC08-06201~ YC08-03001~	LC08-06201~ YC08-03001~ LC09-06323~ YC09-03088~			APPLICABLE MACHINES	



# KOBELCO

Book code No.

S5 **LC01** 09E①

## SHOP MANUAL

### **SK330**(LC)-6E

### **SK330**NLC-6E **LC01**

---

## OUTLINE

---

### TABLE OF CONTENTS

1. GENERAL PRECAUTIONS FOR MAKING REPAIRS ..... 1
2. INTERNATIONAL UNIT CONVERSION SYSTEM ..... 4

**KOBELCO CONSTRUCTION MACHINERY CO., LTD.**

Applicable Machines

LC08-06201~

YC08-03001~

LC09-06323~

YC09-03088~

Revision	Date of Issue	Remarks
First edition	March, 2003	S5LC0109E K
First revision	November, 2003	S5LC0109E① K

# 1. GENERAL PRECAUTIONS FOR MAKING REPAIRS



## 1.1 PREPARATION BEFORE DISASSEMBLING

 
- (1) Knowledge of operating procedure  
Read Operator's Manual carefully to understand the operating procedure.
- (2) Cleaning machines  
Clean machines of soil, mud, and dust before carrying into the service shop.  
Carrying a soiled machine into the service shop, causes making less efficient work and damage of parts.
- (3) Inspecting machines  
Confirm the disassembling section before starting work, determine the disassembly procedure taking the conditions in work shop into account, and request to procure necessary parts in advance.
- (4) Recording  
Record the following items to keep contact and prevent malfunction from recurring.
  - 1) Inspecting date, place
  - 2) Model name, Applicable machine No., Records on hour meter
  - 3) Trouble condition, place, cause
  - 4) Visible oil leakage, water leakage and damage
  - 5) Clogging of filters, etc., oil level, oil quality, oil contamination and looseness which can be inspected.
  - 6) Examine the problems on the basis of operation rate with the last inspection date and records on hour meter.
- (5) Arrangement and cleaning in service shop
  - 1) Tools required for repair work.
  - 2) Specify places to put the disassembled parts on in advance.
  - 3) Prepare oil pans for leaking oil, etc.



## 1.2 SAFETY WHEN DISASSEMBLING AND ASSEMBLING

- (1) Safety
  - 1) Wear appropriate clothing, safety shoes, safety helmet, goggles, and clothes with long sleeves.
  - 2) Suspend warning tag "Don't operate" from lever, and begin preliminaries before getting down to work.
  - 3) Before starting inspection and maintenance which contain the danger of being caught in machine, stop the engine.

- 4) Confirm the position of first-aid kit and fire extinguisher, and also where to make contact for emergency measure and ambulance to prepare for accidents and fire.
- 5) Choose a hard, flat and safe place, and put attachment on the ground without fail.
- 6) Use crane, etc. to remove parts of heavy weight (20kg [44 lbs] or more).
- 7) Use proper tools, and change or repair defective tools.
- 8) Machine and attachment required to work in the lifting condition should be supported with supports or blocks securely.



## 1.3 DISASSEMBLING AND ASSEMBLING HYDRAULIC EQUIPMENT

- (1) Removing hydraulic equipment assy
  - 1) Before removing pipes, release the pressure of hydraulic oil tank, or open the cover on the return side to tank, and take out the filter.
  - 2) Put the oil in the removed pipes in reservoir taking care it is not spilled on the ground.
  - 3) Pipes with plugs or caps to prevent oil leaking, entry of dust, etc.
  - 4) Clean the outside surface of equipment, etc. before disassembling, and drain hydraulic oil and gear oil before putting them on working bench.
- (2) Disassembling hydraulic equipment
  - 1) Since performance and function of hydraulic equipment after disassembly and assembly results in immunity from responsibility on the manufacture's side, disassembly, assembly and conversion without permission are strictly prohibited.
  - 2) If it is unavoidably necessary to disassemble and convert, it should be carried out by experts or personnel authorized through service training.
  - 3) Make match mark on parts for reassembling.
  - 4) Before disassembling, read Disassembling Instruction in advance, and determine if the disassembly and assembly are permitted or not.
  - 5) For parts which are required to use jig and tools, don't fail to use the specified jig and tools.
  - 6) For parts which can not be removed in the specified procedure, never force removal. First check for the cause.

- 7) The removed parts should be put in order and tagged so as to install on proper places without confusion.
- 8) For common parts, pay attention to the quantity and places.
- (3) Inspecting parts
  - 1) Check that the disassembled parts are free from adherence, interference and non-uniform working face.
  - 2) Measure the wear of parts and clearance, and record the measured values.
  - 3) If an abnormality is detected, repair or replace the parts.
- (4) Reassembling hydraulic equipment
  - 1) Before cleaning, turn the fan on or open doors to ventilate air.
  - 2) Before assembly, clean parts roughly first, and then completely.
  - 3) Remove with oil by compressed air, and apply hydraulic oil or gear oil, and then assemble them.
  - 4) Replace the removed O ring, back-up rings and oil seal with new ones, and apply grease oil on them before assembling.
  - 5) Removes stain and water on the surface on which liquid sealant are applied, decrease them, and apply liquid sealant on them.
  - 6) Before assembling, remove rust preventives on new parts.
  - 7) Use special tools to fit bearings, bushing and oil seal.
  - 8) Assemble parts matching to the marks.
  - 9) After completion, check that there is no omission of parts.

(5) Installing hydraulic equipment

- 1) Confirm hydraulic oil and lubrication oil.
- 2) Air release is required in the following cases ;
  - a. Change of hydraulic oil
  - b. Replacement of parts on suction pipe side
  - c. Removing and attaching hydraulic pump
  - d. Removing and attaching swing motor
  - e. Removing and attaching travel motor
  - f. Removing and attaching hydraulic cylinder

 

**⚠** If hydraulic oil and lubricating oil are not filled and also air bleed is not performed, the hydraulic equipment may be damaged.

- 3) For air bleed of hydraulic pump and swing motor, loosen drain plug on the upper part, start engine, and run in low idling, then bleed air until hydraulic oil is oozed out. After completion of air bleed, tighten plug securely.
- 4) For air bleed of travel motor and hydraulic cylinder, starts engine and operate it for 10 minutes or more at no-load and low speed.

**⚠** For cylinder, don't move it to the stroke end at beginning.

- 5) Air in pilot circuit can be bleed out by only operating digging, swing and traveling motions thoroughly.
- 6) Check hydraulic oil level.  
Move attachments to hydraulic oil check position, and check hydraulic oil level of tank. Refill oil if the oil level is lower than the minimum level.

How to check oil level of hydraulic oil tank

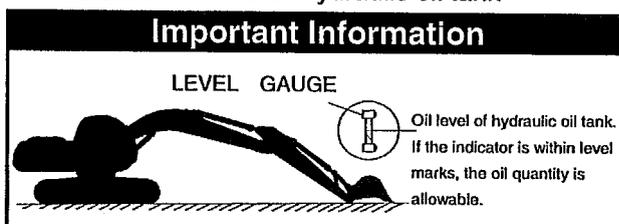

## 1.4 ELECTRICAL EQUIPMENT

- (1) The disassembly of electrical equipment is not allowed.
- (2) Handle equipment with care so as not to drop it or bump it.
- (3) Connector should be removed by unlocking while holding the connector.  
Never stress in tension to the caulked section by pulling wire.
- (4) Check that connector is connected and locked completely.
- (5) Starter key off before removing and connecting connector
- (6) Starter key off before touching terminals of starter and alternator.
- (7) Remove battery grounding terminal before beginning work close to battery and battery relay with tools.
- (8) Wash machine with care so as not to splash water on electrical equipment and connector.

- (9) When water has entered in the waterproofed connector, the removing of water is not easy. So check the removed waterproofed connector with care to protect it from entry of water. If moisture adheres on it, dry it completely before connecting.



Battery electrolyte is dangerous.

The battery electrolyte is dilute sulfuric acid, and causes scald and loss of eyesight by adhering on eyes, skin and clothes. When the electrolyte has adhered on them, take an emergency measure immediately and see a doctor for medical advice.

- o When it has adhered on skin ;  
Wash with soap and water.
- o When it has got in eyes ;  
Wash in water for 10 minutes or more immediately.
- o When it has spilled out in large quantity ;  
Use sodium bicarbonate to neutralize, or wash away with water.
- o When it was swallowed ;  
Drink milk or water.
- o When it has adhered on clothes ;  
Wash it immediately.



## 1.5 HYDRAULIC PARTS

### 1) O ring

- Check that O ring is free from flaw and has elasticity before fitting.
- Even if the size of O ring is equal, the usage differs, for example in dynamic and static sections, the rubber hardness also differs according to the pressure force, and also the quality differs depending on the materials to be seated. So, choose proper O ring.
- Fit O ring so as to be free from distortion and bend.
- Floating seal should be put in pairs.

### 2) Flexible hose (F hose)

- Even if the connector and length of hose are the same, the parts differ according to the withstanding pressure. Use proper parts.

- Tighten it to the specified torque, and check that it is free from distortion, over tension, interference, and oil leakage.

## 1.6 WELD REPAIR

- (1) The weld repair should be carried out by authorized personnel in the specified procedure after disconnecting the grounding cable of battery. If the grounding cable is not disconnected, the electrical equipment may be damaged.
- (2) Remove parts which may cause flame due to the entry of spark beforehand.
- (3) Repair attachments which are damaged, giving particular attention to the plated section of piston rod to protect it from sparks, and don't fail to cover the section with fire proof clothes.

## 1.7 ENVIRONMENTAL ISSUES

- (1) Engine should be started and operated in the place where air can be sufficiently ventilated.
- (2) Waste disposal  
The following parts follows the regulation.  
Waste oil, waste container and battery
- (3) Precautions for handling hydraulic oil  
Hydraulic oil may cause inflammation of eyes. Wear goggles to protect eyes on handling it.
  - o When it has got in eyes ;  
Wash eyes with water until the stimulus is gone.
  - o When it was swallowed ;  
Don't force him to vomit it, but immediately receive medical treatment.
  - o When it has adhered on skin ;  
Wash with soap and water.
- (4) Others  
For spare parts, grease and oil, use KOBELCO genuine ones.

## 2. INTERNATIONAL UNIT CONVERSION SYSTEM

### Introduction

Although this manual uses the JIS unit system.

If you need SI unit, refer to following international system of units.


Given hereinunder are an excerpt of the units that are related to this manual :

#### 1. Etymology of SI Units

French : Le Système International d' Unités

English: International System of Units

#### 2. Construction of SI Unit System

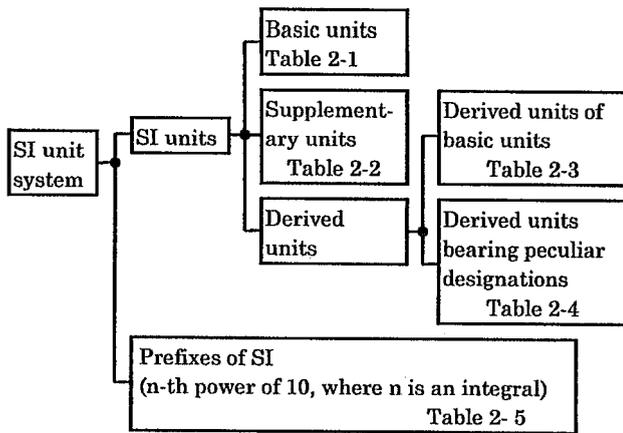

#### (1) Basic Units

Table 2-1

QUANTITIES	DESIGNATION	SIGN
Length	Meter	m
Mass	Kilogram	kg
Time	Second	s
Current	Ampere	A
Thermodynamic temperature	Kelvin	K
Gram molecule	Mol	mol
Luminous intensity	Candela	cd

#### (2) Supplementary Units

Table 2-2

QUANTITIES	DESIGNATION	SIGN
Plane angle	Radian	rad
Solid angle	Steradian	sr

#### (3) Derived Units of Basic Units

Table 2-3

QUANTITIES	DESIGNATION	SIGN
Area	Square meter	m <sup>2</sup>
Volume	Cubic meter	m <sup>3</sup>
Velocity	Meter per second	m/s
Acceleration	Meter per second / second	m/s <sup>2</sup>
Density	Kilogram per cubic meter	kg/m <sup>3</sup>

#### (4) Derived Units bearing Peculiar Designations

Table 2-4

QUANTITIES	DESIGNATION	SIGN	DERIVED UNIT
Frequency	Hertz	Hz	1Hz=1s <sup>-1</sup>
Force	Newton	N	1N=1kgf.m/s <sup>2</sup>
Pressure, Stress	Pascal	Pa	1Pa=1N/m <sup>2</sup>
Energy, Work, Quantity of heat	Joule	J	1J=1N.m
Power, Motive power, Electric power	Watt	W	1W=1J/s
Charge, Quantity of electricity	Coulomb	C	1C=1A.s
Potential, Voltage, Electromotive force	Volt	V	1V=1J/C (1W/A)
Quantity of static electricity, Capacitance	Farad	F	1F=1C/V
Electric resistance	Ohm	Ω	1Ω=1V/A
Celcius temperature or degree	Celcius degree or degree	°C	t°C=(t+273.15)K
Illuminance	lux	lx	1 lx=1 lm/m <sup>2</sup>

#### (5) Prefixes of SI

Table 2-5

DESIGNATION	PREFIX		POWER
	DESIGNATION	SIGN	
Giga-	G		10 <sup>9</sup>
Mega-	M		10 <sup>6</sup>
Kilo-	k		10 <sup>3</sup>
Hecto-	h		10 <sup>2</sup>
Deca-	da		10
Deci-	d		10 <sup>-1</sup>
Centi-	c		10 <sup>-2</sup>
Milli-	m		10 <sup>-3</sup>
Micro-	μ		10 <sup>-6</sup>
Nano-	n		10 <sup>-9</sup>
Pico-	p		10 <sup>-12</sup>

#### (6) Unit Conversion Table

Table 2-6

QUANTITIES	JIS	SI	REMARKS
Mass	kg	kg	
Force	kgf	N	1kgf=9.807N
Torque	kgf.m	N.m	kgf.m=9.807N.m
Pressure	kgf/cm <sup>2</sup>	MPa	1kgf/cm <sup>2</sup> =0.098MPa
Motive power	PS	kW	1PS=0.7355kW
Revolution	rpm	min <sup>-1</sup>	r/min

# KOBELCO

Book code No.

S5LC02<sub>09E</sub>①

**SHOP MANUAL SK330(LC)-6E**  
**SK330NLC-6E**

**LC02**

## SPECIFICATION

### TABLE OF CONTENTS

1. NAME OF COMPONENTS .....	1
2. GENERAL DIMENSIONS .....	2
3. WEIGHT OF COMPONENTS .....	4
4. TRANSPORTATION .....	5
5. SPECIFICATIONS AND PERFORMANCE .....	8
6. TYPE OF CRAWLER .....	9
7. TYPE OF BUCKET .....	10
8. COMBINATIONS OF ATTACHMENT .....	10
9. ENGINE SPECIFICATIONS .....	11

**KOBELCO CONSTRUCTION MACHINERY CO., LTD.**

Applicable Machines

LC08-06201~


YC08-03001~

LC09-06323~

YC09-03088~

Revision	Date of Issue	Remarks
First edition	March, 2003	S5LC0209E K
First revision	November, 2003	S5LC0209E① K

# 1. NAME OF COMPONENTS

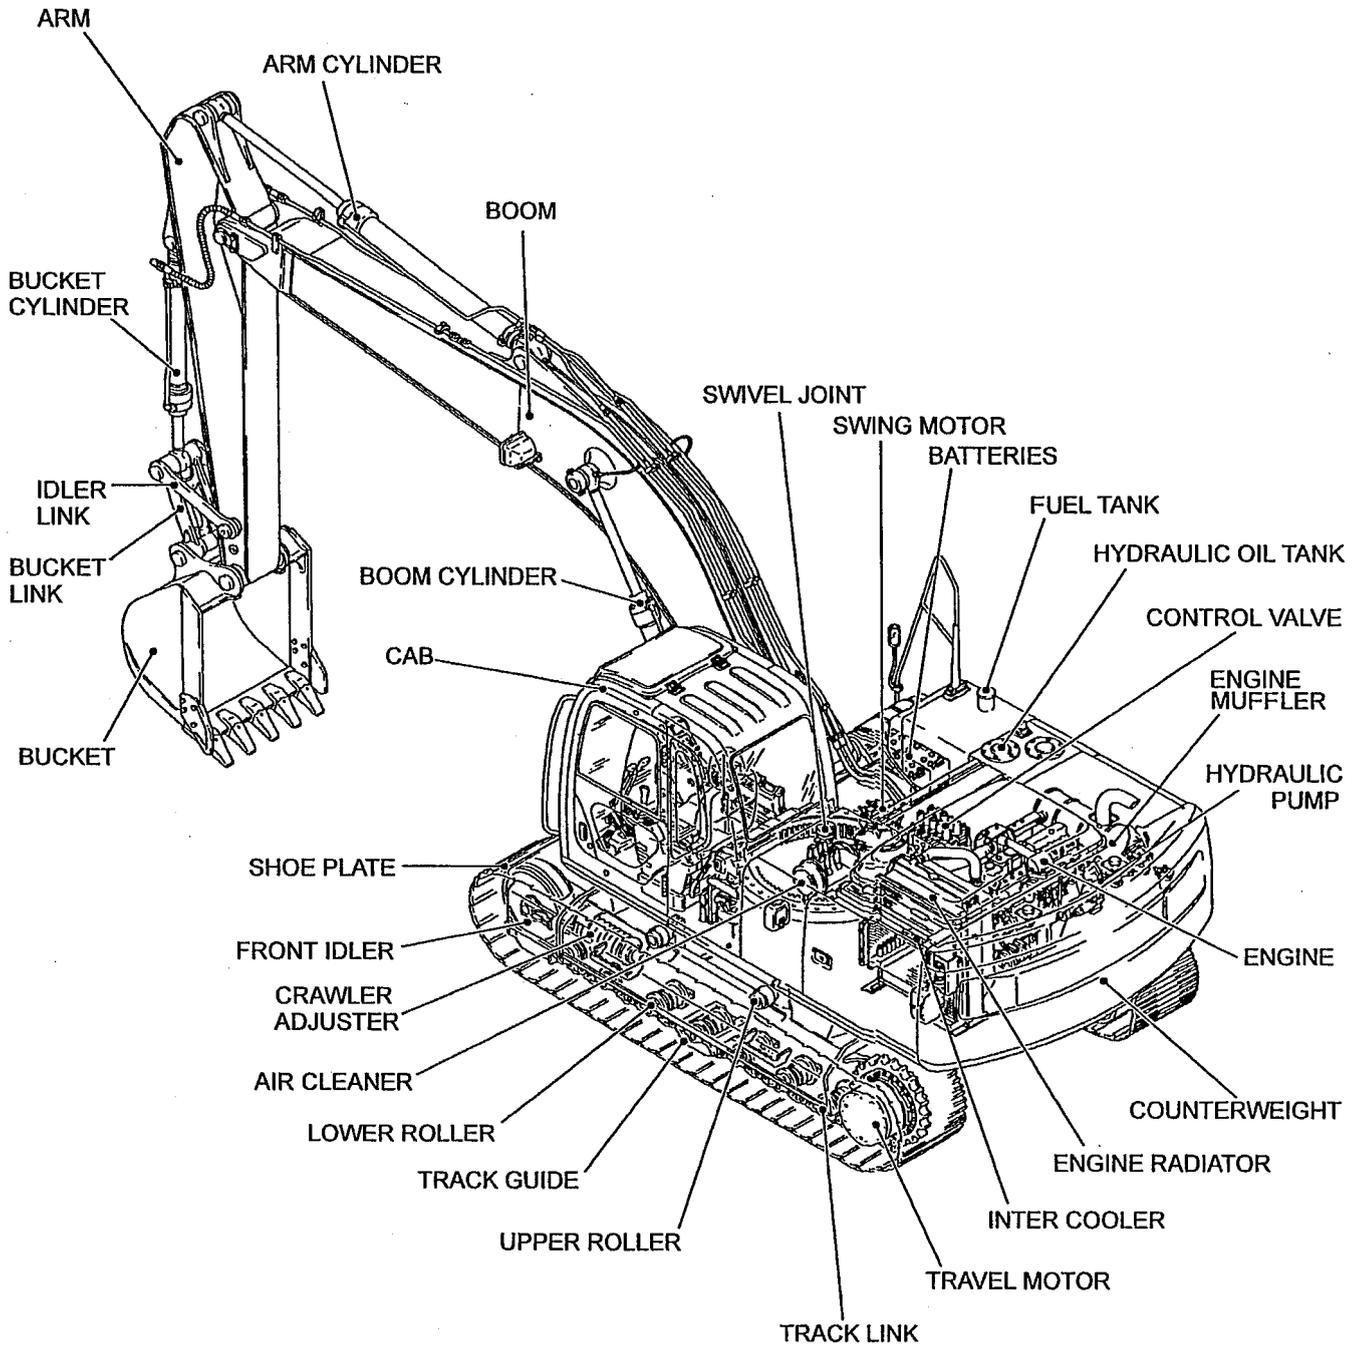

## 2. GENERAL DIMENSIONS


SK330-6E SK330LC-6E

Unit : mm (ft-in)


2.1 6.50m (21' 4") Boom+3.30m (10' 10") Standard Arm+1.40m<sup>3</sup> (1.83cu-yd) Bucket+600mm (23.6") Shoe

**NOTE :**


Dimensions marked ※ do not include the height of the shoe lug.  
 [ ] indicate LC specifications.

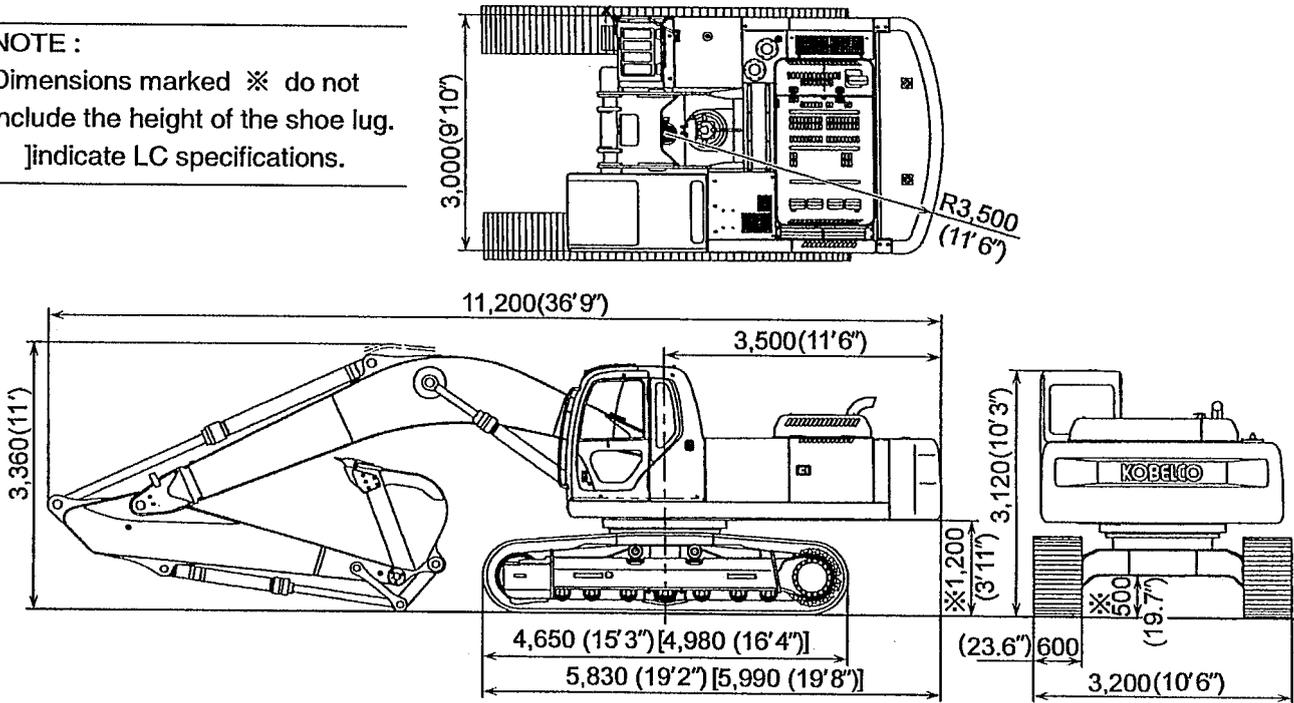

2.2 6.50m (21' 4") Boom+2.60m (8' 6") Short Arm+1.60m<sup>3</sup> (2.09cu-yd) Bucket+600mm (23.6") Shoe

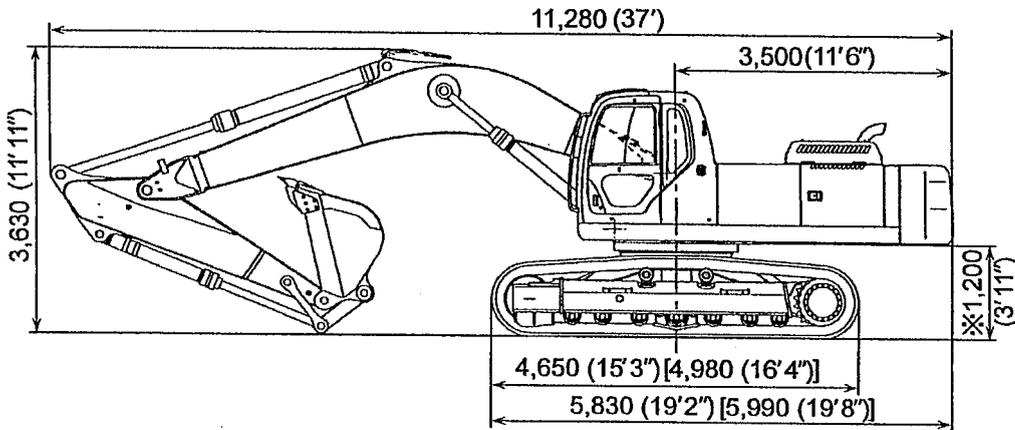

2.3 6.50m (21' 4") Boom+4.15m (13' 7") Long Arm+1.20m<sup>3</sup> (1.57cu-yd) Bucket+600mm (23.6") Shoe

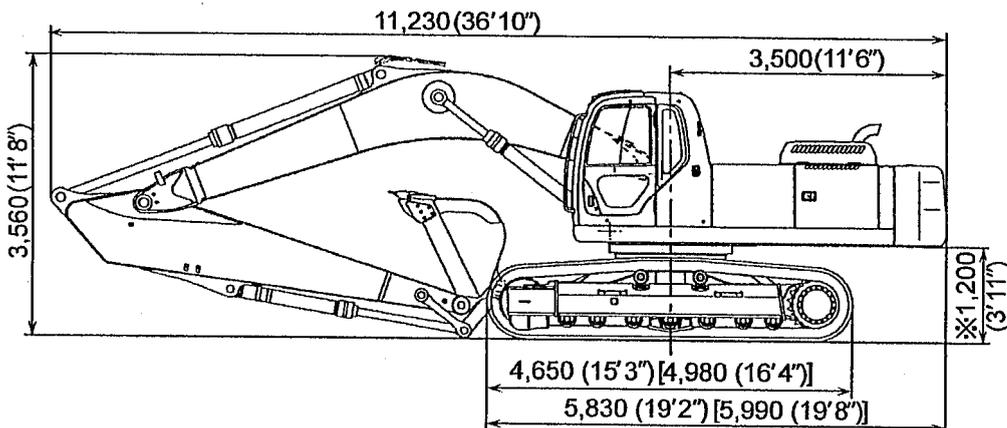


SK330NLC-6E

Unit : mm (ft-in)

2.4 6.50m (21' 4") Boom+3.3m (10' 10") Standard Arm+1.40m<sup>3</sup> (1.83cu-yd) Bucket+600mm (23.6") Shoe

NOTE :

Dimensions marked ※ do not include the height of the shoe lug.

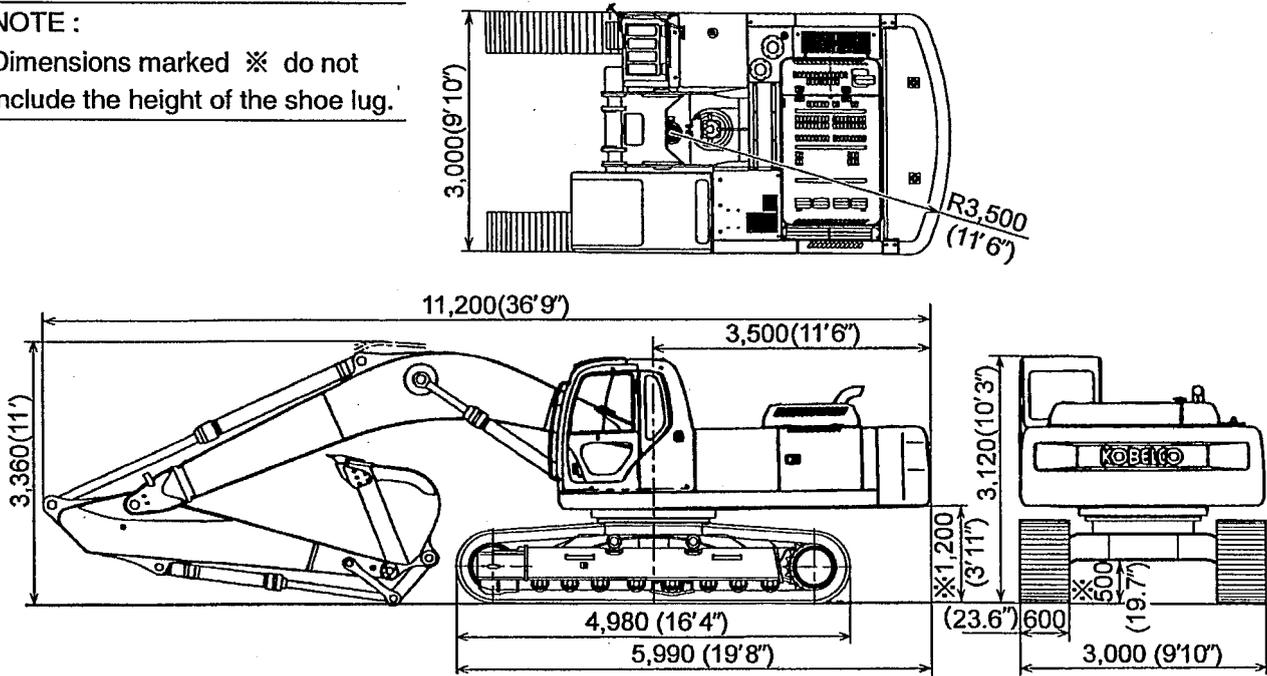

### 3. WEIGHT OF COMPONENTS

Unit : kg (lb)

Item	Model	SK330-6E 600mm(23.6")Shoe	SK330LC-6E 600mm(23.6")Shoe	SK330NLC-6E
Machine complete		33,300 (73,410)	33,900 (74,700) <small>KCME</small> 33,800 (74,500) <small>ASIA, OCE</small>	33,800 (74,500)
1. Upper frame assy (including the following :)		16,300 (35,930)	←	←
1.1 Upper frame		3,010 (6,640)	←	←
1.2 Counterweight		8,420 (18,600)	←	←
1.3 Cab		260 (570)	←	←
1.4 Engine		※ 580 (1,280)	←	←
1.5 Hydraulic oil tank		172 (380)	←	←
1.6 Fuel tank		204 (450)	←	←
1.7 Slewing motor (including reduction unit)		※ 510 (1,120)	←	←
1.8 Control valve		※ 170 (370)	←	←
1.9 Boom cylinder		※ 270 (600)×2	←	←
1.10 Pin (for mounting boom)		80 (176)	←	←
1.11 Pump		※ 126 (280)	←	←
1.12 Radiator		170 (370)	←	←
2. Lower frame assy (including the following :)		10,900 (24,030)	11,530 (25,410) <small>KCME</small> 11,430 (25,200) <small>ASIA, OCE</small>	11,340 (25,000)
2.1 Lower frame		3,790 (8,360)	3,930 (8,670)	3,840 (8,470)
2.2 Slewing bearing		585 (1,290)	←	←
2.3 Travel motor (including reduction unit)		※ 360 (790)×2	←	←
2.4 Upper roller		30 (66)×4	←	←
2.5 Lower roller		58 (130)×14	58 (130)×18 <small>KCME</small> 58 (130)×16 <small>ASIA, OCE</small>	58 (130)×18
2.6 Front idler		170 (370)×2	←	←
2.7 Idler adjuster		190 (420)×2	←	←
2.8 Sprocket		88 (190)×2	←	←
2.9 Swivel joint		30 (66)	←	←
2.10 Track link with 600mm (23.6in) shoes assy		1,870 (4,120)×2	1,995 (4,400)×2	←
2.10.1 Track link assy		840 (1,850)×2	900 (1,980)×2	←
3. Attachment (including the following / STD :) (6.5m (21ft-4in) Boom+3.3m (10ft-10in) Arm +1.4m <sup>3</sup> (1.83cu-yd) Bucket)		6,000 (13,200)	←	←
3.1 Bucket assy (STD)		1,040 (2,290)	←	←
3.2 STD Arm assy (including the following :)		1,770 (3,900)	←	←
3.2.1 STD Arm		1,160 (2,560)	←	←
3.2.2 Bucket cylinder		※ 260 (570)	←	←
3.2.3 Idler link		27 (60)×2	←	←
3.2.4 Bucket link		130 (290)	←	←
3.2.5 Pin (2pcs. for mounting bucket cylinder / 2pcs. for mounting bucket)		115 (250)	←	←
3.3 Boom assy		3,180 (7,010)	←	←
3.3.1 Boom		2,580 (5,690)	←	←
3.3.2 Arm cylinder		※ 500 (1,100)	←	←
3.3.3 Pin (Mounting arm • Mounting arm cylinder)		98 (216)	←	←
4. Lubricant and water (including the following :)		830 (1,830)	←	←
4.1 Hydraulic oil		304 (670)	←	←
4.2 Engine oil		25 (55)	←	←
4.3 Fuel		466 (1,030)	←	←
4.4 Water		35 (77)	←	←


NOTE : Numerical values marked ※ indicate the dry weight.

## 4. TRANSPORTATION

### 4.1 DIMENSIONS OF MACHINE ON A TRAILER (WITHOUT COUNTERWEIGHT)

(1) 6.50m (21ft-4in) Boom+3.30m (10ft-10in) Arm+1.40m<sup>3</sup> (1.83cu-yd) Bucket

Item	Model	SK330-6E	SK330LC-6E	SK330NLC-6E
Width	600mm (23.6in) shoes mm(ft-in)	3,200 (10' 6")	3,200 (10' 6")	3,000 (9' 10")
Weight	kg(lb)	24,900(54,900)	25,500(56,200) <span style="border: 1px solid black; padding: 2px;">KCME</span> 25,400(56,000) <span style="border: 1px solid black; padding: 2px;">ASIA, OCE.</span>	25,300 (55,800)

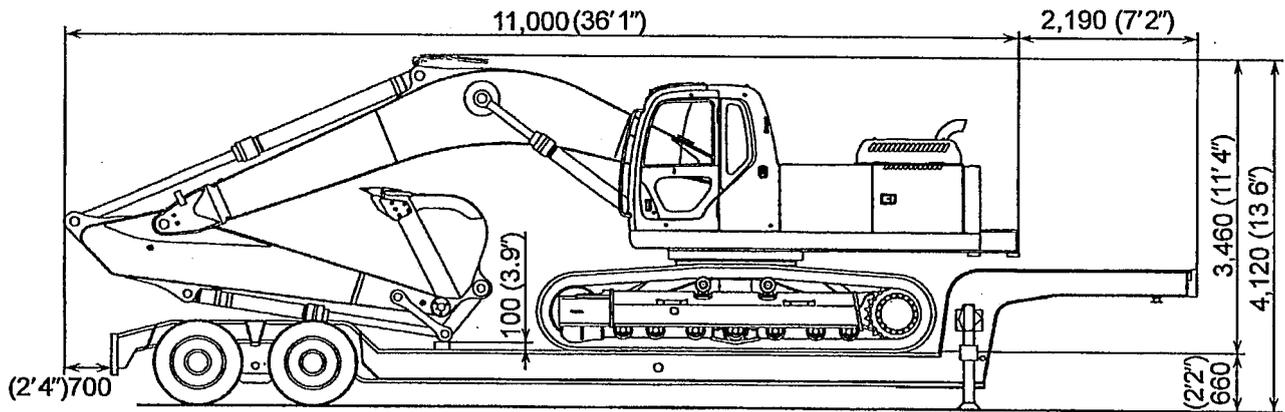


Unit : mm (ft-in)

#### 4.2 DIMENSIONS OF ATTACHMENT


##### (1) BOOM

Item	Type	6.50m (21ft-4in) Boom	6.50m (21ft-4in) Boom (HD)
	Length×Height×Width L×H×W	m(ft-in)	6.75×1.82×0.91 (22' 2"×6' ×3')
Weight	kg (lbs)	3,240 (7,140)	3,420 (7,540)

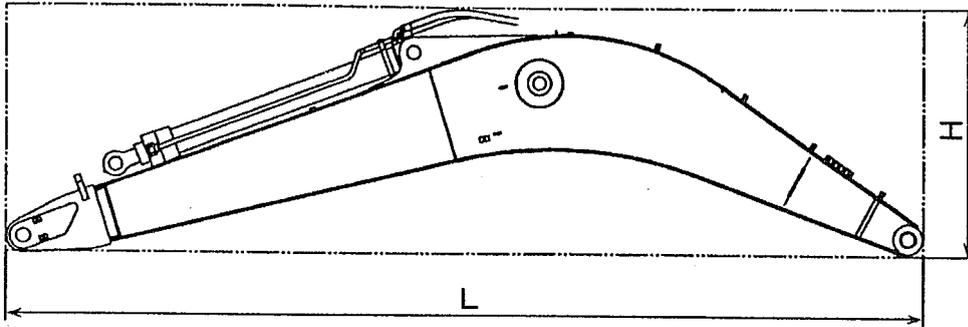


##### (2) ARM AND BUCKET

Item	Type	2.6m (8ft-6in) Arm +1.60m <sup>3</sup> (2.09cu-yd) Bucket	3.3m (10ft-10in) Arm +1.40m <sup>3</sup> (1.83cu-yd) Bucket	4.15m (13ft-7in) Arm +1.20m <sup>3</sup> (1.57cu-yd) Bucket
	Length×Height×Width L×H×W	m(ft-in)	5.39×1.11×1.61 (17' 8"×3' 8"×5' 3")	6.08×1.07×1.43 (19' 11"×3' 6"×4' 8")
Weight	kg (lbs)	2,780 (6,130)	2,810 (6,200)	3,000 (6,620)

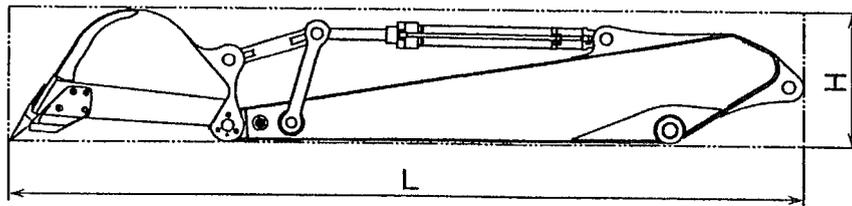

(3) ARM


Item	Type	2.6m (8ft-6in) Arm	3.3m (10ft-10in) Arm	4.15m (13ft-7in) Arm
Length×Height×Width L×H×W	m(ft-in)	3.79×1.09×0.65 (12' 5"×3' 7"×2' 2")	4.49×0.98×0.65 (14' 9"×3' 3"×2' 2")	5.35×1.03×0.65 (17' 7"×3' 5"×2' 2")
Weight	kg (lbs)	1,650 (3,640)	1,770 (3,900)	2,070 (4,560)

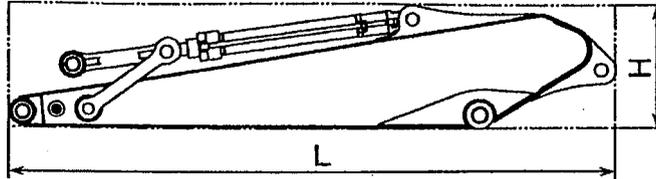

(4) BUCKET

Type	Hoe bucket			
Length×Height×Width L×H×W m (ft-in)	1.64×1.46×1.24 (5' 5"×4' 9"×4' 1")	1.64×1.46×1.43 (5' 5"×4' 9"×4' 8")	1.64×1.46×1.61 (5' 5"×4' 9"×5' 3")	1.64×1.46×1.68 (5' 5"×4' 9"×5' 6")
Weight kg (lbs)	930 (2,050)	1,040 (2,290)	1,130 (2,490)	1,170 (2,580)
Bucket capacity m <sup>3</sup> (cu·yd)	1.20 (1.57)	1.40 (1.83)	1.60 (2.09)	1.80 (2.35)

● Hoe bucket

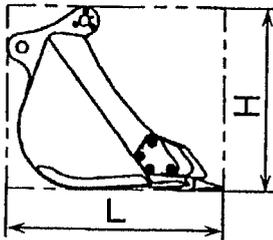

## 5. SPECIFICATIONS AND PERFORMANCE

### 5.1 SPEED AND CLIMBING CAPABILITY

Item	Model	SK330 (LC)-6E	SK330NLC-6E
Swing speed		8.6rpm	←
Travel speed (1-speed/2-speed)	km/h (mile/h)	3.3 / 5.7 (2.2 / 3.5)	←
Gradeability	%(degree)	70 (35)	←

### 5.2 ENGINE

Engine model (Mitsubishi)	MMC 6D16-TLU2D [KCME, OCE,] MMC 6D16-TLE2A [ASIA]	MMC 6D16-TLU2D
Type	Water-cooled, 4-cycle direct injection type engine with turbo charger and inter cooler	←
Number of cylinders—Bore×Stroke	6—118mm×115mm (4.65in×4.53in)	←
Total displacement	7,545cc (460.25cu·in)	←
Rated output / Rotation speed	184kW (250PS) / 2,200rpm	←
Maximum torque / Rotation speed	85kgf·m (615 lbf·ft) / 1,800rpm	←
Starter	24V / 5.0kW	←
Alternator	24V / 35A	←

### 5.3 HYDRAULIC COMPONENTS

Hydraulic pump	Variable displacement axial piston + gear pump	←
Hydraulic motor (swing)	Axial piston motor	←
Hydraulic motor (travel)	2-speed axial piston motor	←
Control valve	7-spool control valve	←
Cylinder (Boom, Arm, Bucket)	Double action cylinder	←
Oil cooler	Air-cooled type	←


### 5.4 WEIGHT

Unit : kg (lb)

	SK330-6E	SK330LC-6E	SK330NLC-6E
Fully equipped weight	33,300 (73,410)	33,900 (74,700) [KCME] 33,800 (74,500) [ASIA, OCE]	33,800 (74,500)
Upper structure	16,300 (35,930)	←	←
Lower machinery	10,900 (24,030)	11,530 (25,410) [KCME] 11,430 (25,200) [ASIA, OCE]	11,340 (25,000)
Attachment (6.50m (21ft-4in) Boom+3.30m (10ft-10in) Arm +1.40m <sup>3</sup> (1.83cu·yd) Bucket)	6,000 (13,200)	←	←

## 6. TYPE OF CRAWLER


### 6.1 CRAWLER

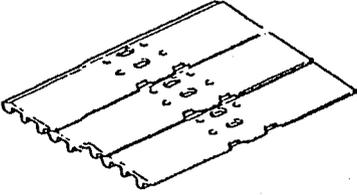Shape	Shoe width mm (in)		Overall width of crawler mm (ft-in)	Ground pressure kgf /cm <sup>2</sup> (psi)
 <p style="margin-top: 20px;">STD : 45LINKS LC, NLC : 48LINKS</p>	STD	600 (23.6")	3,200 (10'6")	0.68 (9.72)
		800 (31.5")	3,400 (11'2")	0.53 (7.54)
	LC	600 (23.6")	3,200 (10'6")	0.65 (9.28)
		800 (31.5")	3,400 (11'2")	0.50 (7.12)
		900 (35.4")	3,500 (11'6")	0.46 (6.53)
	NLC	600 (23.6")	3,000 (9'10")	0.65 (9.28)
		800 (31.5")	3,200 (10'6")	0.50 (7.12)

**NOTE :**

Use grouser shoes on rough ground (areas covered with rocks and gravel). If you drive or excavate with other shoes, this may cause shoe bending, shoe bolt looseness, and track assembly (link, roller, etc.) damage.

## 7. TYPE OF BUCKET

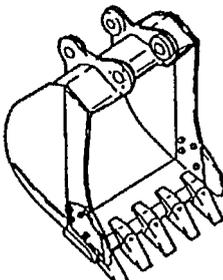Hoe bucket	Heaped capacity m <sup>3</sup> (cu·yd)	Struck m <sup>3</sup> (cu·yd)	Outer width mm (ft-in)		Number of tooth	W or W/O side cutter	Availability of face shovel	Weight kg (lbs)
			With side cutter	Without side cutter				
	1.20(1.57)	0.84 (1.10)	1,240 (4'1")	1,110 (3'8")	4	W	YES	930 (2,050)
	1.40(1.83) (STD)	1.00 (1.31)	1,430 (4'8")	1,300 (4'3")	5	W	YES	1,040 (2,290)
	1.40(1.83) (Heavy Digging)	1.00 (1.31)	1,390 (4'7")	1,320 (4'4")	5	W	YES	1,320 (2,910)
	1.60(2.09)	1.20 (1.57)	1,610 (5'3")	1,480 (4'10")	5	W	YES	1,130 (2,490)
	1.80(2.35)	1.40 (1.83)	—	1,670 (5'6")	5	W/O	YES	1,170 (2,580)

## 8. COMBINATIONS OF ATTACHMENT

Type	Bucket		Available Arm		
	Heaped capacity m <sup>3</sup> (cu·yd)	Struck m <sup>3</sup> (cu·yd)	3.30m (10ft-10in) Arm (STD)	4.15m (13ft-17in) Arm (Long)	2.6m (8ft-6in) Arm (Short)
Hoe bucket	1.20 (1.57)	0.84 (1.10)	○	◎	○
	STD 1.40 (1.83)	1.00 (1.31)	◎	△	○
	Heavy digging 1.40 (1.83)	1.00 (1.31)	○	×	○
	1.60 (2.09)	1.20 (1.57)	△	×	◎
	1.80 (2.35)	1.40 (1.83)	×	×	△
Breaker	—	—	○ (Reinforced arm)	○	○
Nibbler	—	—	○ (Reinforced arm)	×	○ (Reinforced arm)

### NOTE :

- ◎ Standard combination
  - General operation : Excavation or loading of sand, gravel, and clay
  - △ Light operation : Mainly loading or loose gravel (e.g., cultivation or loading of sand or gravel)
  - ×
- Prohibited combination : There are problems from the view points of strength and stability.

- ⚠ ● Use the attachments recommended by KOBELCO. Reinforcement of arm allows to use it as nibbler and breaker.

The trouble due to the use in the condition "Use not allowed" described in the above table is not included in our responsibility

### ⚠ CAUTION

If any other bucket, except for the backhoe bucket, is turned over and used for excavation, damage to the arm and bucket may occur.


## 9. ENGINE SPECIFICATIONS

### 9.1 SPECIFICATIONS

Applicable machine		SK330(LC)-6E, SK330NLC-6E		
Engine model		MITSUBISHI 6D16-TLE2A <span style="border: 1px solid black; padding: 2px;">ASIA</span> MITSUBISHI 6D16-TLU2D <span style="border: 1px solid black; padding: 2px;">KCME, OCE.</span>		
Type		Diesel, 4-cycle water-cooled, in-line, direct injection, turbo charged and with inter cooler		
Number of cylinder× Bore×Stroke	mm (in)	6×118×115 (4.65×4.53)		
Total displacement	cc (cu·in)	7,545 (460.25)		
Compression ratio		17.5		
Rated output	kW (PS) at min <sup>-1</sup>	184 (250) at 2,200		
Maximum torque	kgf·m (lbf·ft) at min <sup>-1</sup>	85 (615) at 1,800		
High idling	min <sup>-1</sup>	2,385±20		
Low idling	min <sup>-1</sup>	1,000±40		
Injection valve opening pressure	kgf/cm <sup>2</sup> (psi)	180 (2,570)		
Thermostat action Start/Full open	°C (°F)	76.5 / 90 (170 / 194)		
Firing order		1-5-3-6-2-4		
Compression pressure	kgf/cm <sup>2</sup> (psi) at min <sup>-1</sup>	25.5 (363) at 200		
Lubrication oil pressure	kgf/cm <sup>2</sup> (psi) at min <sup>-1</sup>	2.0~5 (29~71) at 1000		
Fuel injection timing		8° before top dead point		
Valve clearance		Valve clearance	Open	Close
	Intake valve	0.4mm (0.016") at cool	21° before top dead point	39° after bottom dead point
	Exhaust valve	0.4mm (0.016") at cool	62° before bottom dead point	18° after top dead point
Starter capacity	V×kW	24×5.0		
Generator capacity (Alternator)	V×A	24×35		
Cooling fan drive method		Ø620 (24.4") suction type 9 fans, V-belt drive, pulley ratio Crank / Fan= 0.9 (EU,ASIA) 1.03 (TROPICAL)		
Engine oil quantity	ℓ (gal)	Full level 28 (7.4) Low level sensor actuation 23 (6.1) Oil filter, etc. 4 (1.1)		
Dry weight	kg (lbs)	580 (1,280)		
Fuel consumption ratio	g / kW·h	232		
Allowable inclination	(Limited by E/G lubrication)	Front / Rear and Right / Left : 35°		
Dimension (L×W×H)	mm (in)	1,321×806×991 (52.0×31.7×39.0)		
Rotating direction		Counterclockwise seeing from flywheel side		

## 9.2 ENGINE CHARACTERISTIC CURVE (MITSUBISHI 6D16-TLE2A)

Condition to be measured : With fan, alternator and air cleaner  
Without muffler

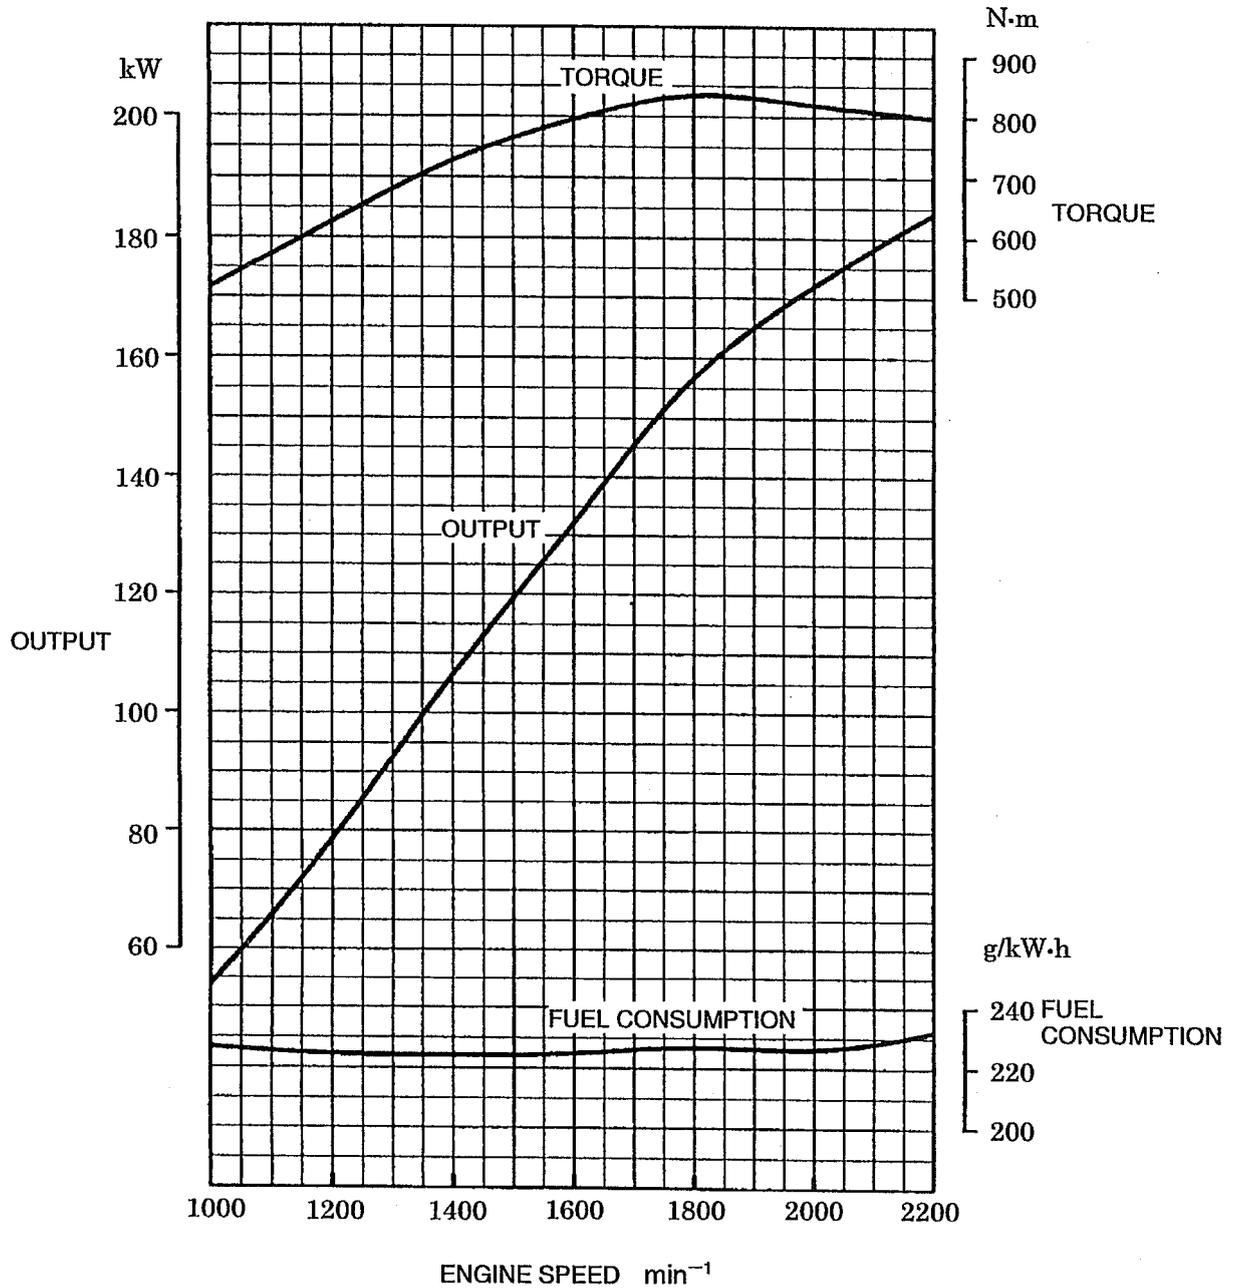

Fuel consumption volume

$$= \frac{\text{Fuel consumption rate}}{0.835 \times 1000} \times \text{kW} \times \text{Load factor } (\alpha)$$

$$= \frac{232 \text{ g / kW} \cdot \text{h}}{0.835 \times 1000} \times 184 \text{ kW} \times \alpha$$

$$= 51.1 \alpha \cdot \ell/\text{h}$$

$\alpha$  : Standard load factor  
(0.70~0.80)

Fuel consumption in regular operation  
35.8~40.9ℓ/h

# KOBELCO

Book code No.

S5LC03<sub>09E</sub>①

## SHOP MANUAL **SK330(LC)-6E** **SK330NLC-6E**

**LC03**

### — ATTACHMENT DIMENSION —

#### TABLE OF CONTENTS

1. BOOM	
1.1 Boom dimensional drawing .....	1
1.2 Boom maintenance standard .....	2
2. ARM	
2.1 Arm dimensional drawing .....	4
2.2 Arm maintenance standard .....	5
3. BUCKET	
3.1 Bucket dimensional drawing .....	7
3.2 Bucket dimensional table .....	7
3.3 Dimensional drawing of lug section .....	8
3.4 Dimensional drawing of boss section .....	9

**KOBELCO CONSTRUCTION MACHINERY CO., LTD.**

Applicable Machines

LC08-06201~

YC08-03001~

LC09-06323~

YC09-03088~

Revision	Date of Issue	Remarks
First edition	March, 2003	S5LC0309E K
First revision	November, 2003	S5LC0309E① K

# 1. BOOM

## 1.1 BOOM DIMENSIONAL DRAWING

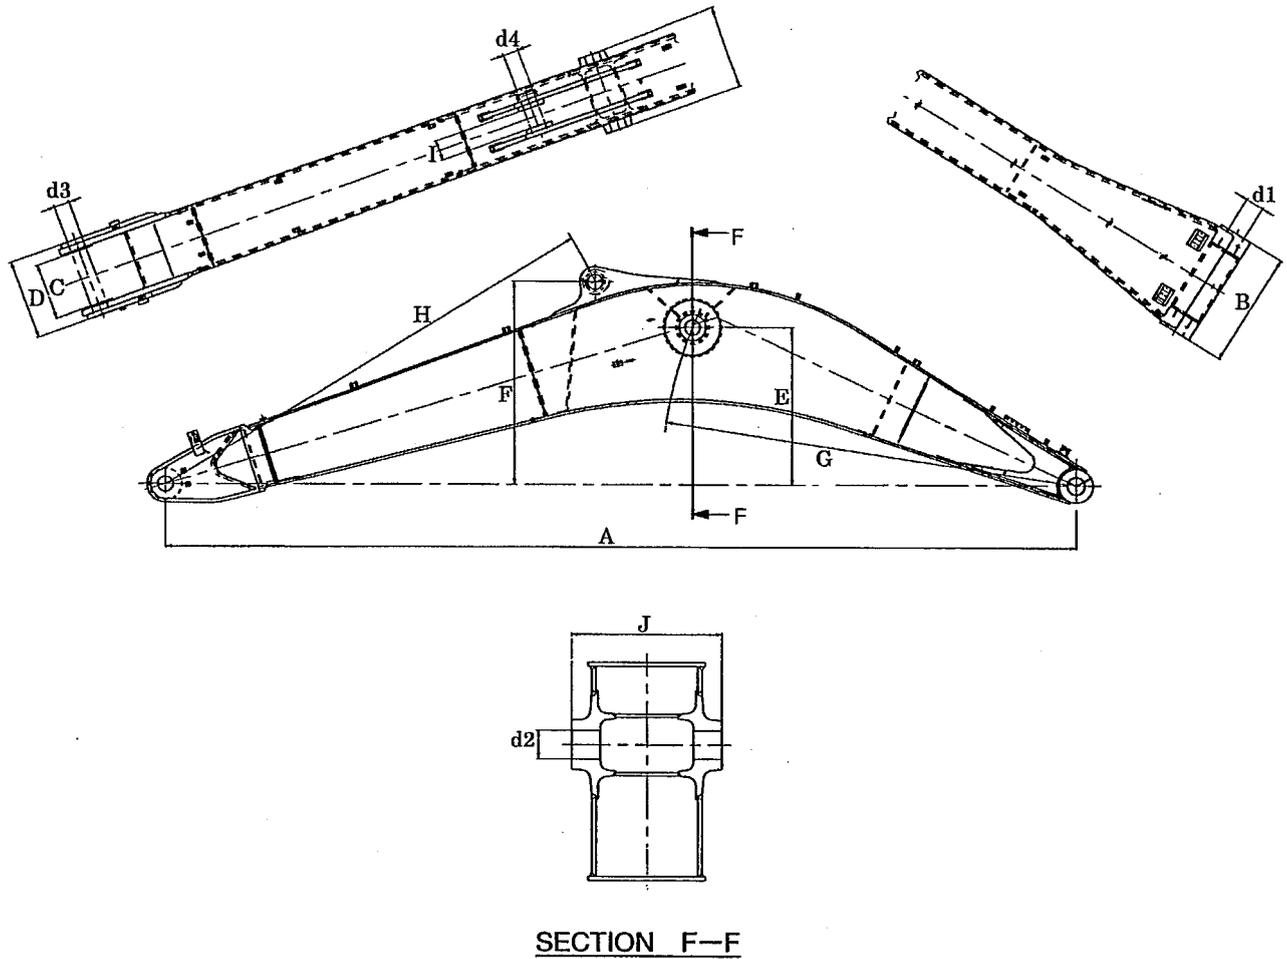


Fig. 1-1 Boom dimensional drawing

Table 1-1

6.5M (21ft-4in) BOOM		STD boom	LC02B00035F1	Unit : mm (ft-in)
No	NAME			DIMENSION
A	Boom length			6,500 (21'4")
B	Boom foot width			830 (32.7")
C	Boom end inner width			401.8 (15.8")
D	Boom end outer width			569 (22.4")
E	Height of boom cylinder rod pin			1,135 (3'9")
F	Height of arm cylinder (head side) pin			1,460.8 (4'9")
G	Distance between pins of boss			R2,969 (9'9")
H	Distance between pins of bracket			R3,390.5 (11'1")
I	Arm cylinder (head side) inner width			142 (5.59")
J	Outer width of bracket on the arm cylinder (rod side) mounting section			581 (22.9")
d1	Boom foot pin dia.			Ø110 (4.33")
d2	Boom cylinder (rod side) pin dia.			Ø110 (4.33")
d3	Pin dia. of arm end.			Ø110 (4.33")
d4	Arm cylinder (head side) pin dia.			Ø110 (4.33")
	Weight		kg (lbs)	2,420 (5,330)

1.2 BOOM MAINTENANCE STANDARD

(1) Clearance of pin and bushing

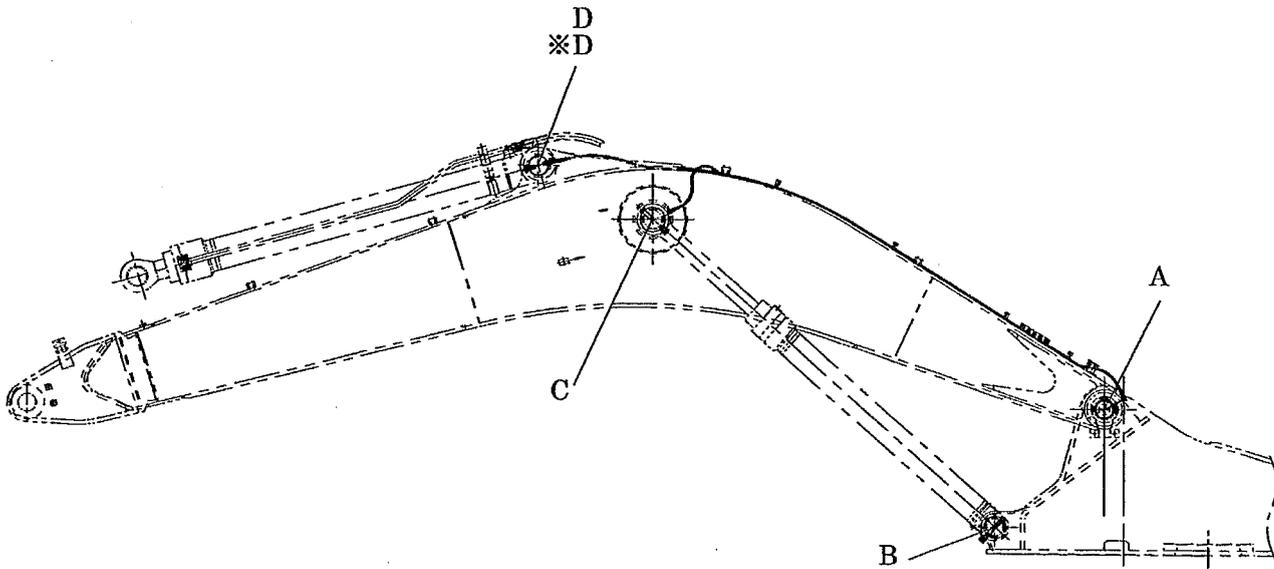


Fig. 1-2 Clearance of pin and bushing on boom section

Table 1-2

Unit : mm (in)

Sym-bol	Item	Pin part No.	Standard value			Clearance			Remedy
			Pin dia.	Pin dia. tolerance	Bushing i.d. tolerance	Standard value	Repairable level	Service limit	
A	Boom foot	LC02B01056P2	Ø110 (4.3307)		+0.177 (+0.00697) +0.076 (+0.00299)	+0.197 (+0.0078) +0.056 (+0.0022)	More than 2.5 (0.098)	3.0 (0.118)	Replace bushing or pin
B	Boom cylinder (Head side)	LC02B01011P1	Ø100 (3.937)	+0.020 (+0.0008) -0.020 (-0.0008)		+0.270 (+0.0106) +0.030 (+0.0012)			
C	Boom cylinder (Rod side)	2419P3752	Ø110 (4.3307)		+0.250 (+0.00984) +0.050 (+0.00197)				
D	Arm cylinder (Head side)	LC02B01052P1		-0.070 (-0.0028) -0.130 (-0.0051)		+0.380 (+0.015) +0.120 (+0.0047)			
※D		LC02B01066P1		+0.020 (+0.0008) -0.020 (-0.0008)		+0.270 (+0.0106) +0.030 (+0.0012)			

Note ; The mark ※ shows ground pin. (KCME spec.)