

# HYDRAULIC EXCAVATOR

**SHOP  
MANUAL**

model

**SK09SR**

## INDEX

1	SPECIFICATIONS
2	MAINTENANCE
3	SYSTEM
4	DISASSEMBLING
5	TROUBLESHOOTING
6	ENGINE
7	INSTALLATION PROCEDURES FOR OPTIONAL ATTACHMENTS

SPECIFICATIONS

MAINTENANCE

SYSTEM

DISASSEMBLING

TROUBLESHOOTING

E/G

OPT

# KOBELCO

This page is blank because of editing convenience.

# INDEX

SK09SR

Book Code No. Issed Year-Month				Title	Index No.
S5PA0101E 2000-4	S5PA0101E ① 2001-7		SPECIFICATIONS	PRELIMINARY REMARKS	PA01
S5PA0201E 2000-4	S5PA0201E ① 2001-7	S5PA0201E ② 2003-2		SPECIFICATIONS	PA02
S5PA0301E 2000-4	S5PA0301E ① 2001-7	S5PA0301E ② 2003-2		ATTACHMENT DIMENSIONS	PA03
S5PA1101E 2000-4	S5PA1101E ① 2001-7	S5PA1101E ② 2003-2	MAINTENANCE	TOOLS	PA11
S5PA1201E 2000-4				STANDARD MAINTENANCE TIME TABLE	PA12
S5PA1301E 2000-4	S5PA1301E ① 2001-7			MAINTENANCE STANDARDS AND TEST PROCEDURES	PA13
—					
S5PA2201E 2000-4	S5PA2201E ① 2001-7	S5PA2201E ② 2003-2	SYSTEM	HYDRAULIC SYSTEM	PA22
S5PA2301E 2000-4	S5PA2301E ① 2001-7	S5PA2301E ② 2003-2		ELECTRICAL SYSTEM	PA23
S5PA2401E 2000-4	S5PA2401E ① 2001-7	S5PA2401E ② 2003-2		COMPONENTS SYSTEM	PA24
—					
—					
S5PA3101E 2000-4			DISASSEMBLING	WHOLE DISASSEMBLING & ASSEMBLING	PA31
S5PA3201E 2000-4	S5PA3201E ① 2001-7	S5PA3201E ② 2003-2		ATTACHMENTS	PA32
S5PA3301E 2000-4	S5PA3301E ① 2001-7	S5PA3301E ② 2003-2		UPPER SLEWING STRUCTURE	PA33
S5PA3401E 2000-4		S5PA3401E ① 2003-2		TRAVEL SYSTEM	PA34
—					
S5PA4201E 2000-4			TROUBLESHOOTING	HYDRAULIC SYSTEM	PA42
S5PA4301E 2000-4				ELECTRICAL SYSTEM	PA43
S5PA4401E 2000-4		S5PA4401E ① 2003-2		ENGINE	PA44
S5PA5101E 2000-4			E/G	ENGINE	PA51
			OPT		

# SAFETY PRECAUTIONS

## 1.1 GENERAL SAFETY INFORMATION

 **WARNING** 

Do Not operate or perform any maintenance on this machine until all instructions found in the OPERATION & MAINTENANCE MANUAL have been thoroughly read and understood. Improper operation or maintenance of this machine may cause accidents and could result in serious injury or death. Always keep the manual in the operator's seat pocket. If it is missing or damaged, place an order with an authorized KOBELCO Distributor for a replacement. If you have any questions, please consult an authorized KOBELCO Distributor.

1. Most accidents, which occur during operation, are due to neglect of precautionary measures and safety rules. Sufficient care should be taken to avoid these accidents. Erroneous operation, lubrication or maintenance services are very dangerous and may cause injury or death of personnel. Therefore all precautionary measures, NOTES, DANGERS, WARNINGS and CAUTIONS contained in the manual and on the machine should be read and understood by all personnel before starting any work with or on the machine.
2. Operation, inspection, and maintenance should be carefully carried out, and safety must be given the first priority. Messages of safety are indicated with marks. The safety information contained in the manual is intended only to supplement safety codes, insurance requirements, local laws, rules and regulations.
3. Messages of safety appear in the manual and on the machine : All messages of safety are identified by either word of "DANGER", "WARNING" and "CAUTION".

**a. DANGER-** Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury and is represented as follows:

 **DANGER** 

**b. WARNING-** Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury and is represented as follows:

 **WARNING** 

**c. CAUTION-** Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against possible damage to the machine and its components and is represented as follows:

 **CAUTION** 

4. It is very difficult to forecast every danger that may occur during operation. However, safety can be ensured by fully understanding proper operating procedures for this machine according to methods recommended by KOBELCO.
5. While operating the machine, be sure to perform work with great care, so as not to damage the machine, or allow accidents to occur.
6. Continue studying the manual until all Safety, Operation and Maintenance procedures are completely understood by all persons working with the machine.

## 1.2 SAFETY PRECAUTIONS

 **WARNING** 

The proper and safe lubrication and maintenance for this machine, recommended by KOBELCO, are outlined in the OPERATOR'S MANUAL for the machine. Improper performance of lubrication or maintenance procedures are dangerous and could result in injury or death. Read and understand the MANUAL before performing any lubrication or maintenance.


The serviceman or mechanic may be unfamiliar with many of the systems on this machine. This makes it important to use caution when performing service work. A knowledge of the system and or components is important before the removal or disassembly of any component.

Because of the size of some of the machine components, the serviceman or mechanic should check the weights noted in this manual. Use proper lifting procedures when removing any components. Weight of components table is shown in the section ; SPECIFICATIONS.

## SAFETY PRECAUTIONS

The following is a list of basic precautions that must always be observed.

1. Read and understand all Warning plates and decal on the machine before Operating, Maintaining or Repairing this machine.
2. Always wear protective glasses and protective shoes when working around machines. In particular, wear protective glasses when using hammers, punches or drifts on any part of the machine or attachments. Use welders gloves, hood/goggles, apron and the protective clothing appropriate to the welding job being performed. Do not wear loose fitting or torn clothing. Remove all rings from fingers, loose jewelry, confine long hair and loose clothing before working on this machinery.
3. Disconnect the battery and hang a "Do Not Operate" tag in the Operators Compartment. Remove ignition keys.
4. If possible, make all repairs with the machine parked on a level, hard surface. Block the machine so it does not roll while working on or under the machine. Hang a "Do Not Operate" tag in the Operators Compartment.
5. Do not work on any machine that is supported only by lift, jacks or a hoist. Always use blocks or jack stands, capable of supporting the machine, before performing any disassembly.
6. Relieve all pressure in air, oil or water systems before any lines, fittings or related items are disconnected or removed. Always make sure all raised components are blocked correctly and be alert for possible pressure when disconnecting any device from a system that utilizes pressure.
7. Lower the bucket, dozer, or other attachments to the ground before performing any work on the machine. If this cannot be done, make sure the bucket, dozer, ripper or other attachment is blocked correctly to prevent it from dropping unexpectedly.
8. Use steps and grab handles when mounting or dismounting a machine. Clean any mud or debris from steps, walkways or work platforms before using. Always face to the machine when using steps, ladders and walkways. When it is not possible to use the designed access system, provide ladders, scaffolds, or work platforms to perform safe repair operations.
9. To avoid back injury, use a hoist when lifting components which weigh 20kg (45lbs) or more. Make sure all chains, hooks, slings, etc., are in good condition and are the correct capacity. Be sure hooks are positioned correctly. Lifting eyes are not to be side loaded during a lifting operation.
10. To avoid burns, be alert for hot parts on machines which have just been stopped and hot fluids in lines, tubes and compartments.
11. Be careful when removing cover plates. Gradually back off the last two capscrews or nuts located at opposite ends of the cover or device and carefully pry cover loose to relieve any spring or other pressure, before removing the last two capscrews or nuts completely.
12. Be careful when removing filler caps, breathers and plugs on the machine. Hold a rag over the cap or plug to prevent being sprayed or splashed by liquids under pressure. The danger is even greater if the machine has just been stopped because fluids can be hot.
13. Always use the proper tools that are in good condition and that are suited for the job at hand. Be sure you understand how to use them before performing any service work.
14. Reinstall all fasteners with the same part number. Do not use a lesser quality fastener if replacements are necessary.
15. Repairs which require welding should be performed only with the benefit of the appropriate reference information and by personnel adequately trained and knowledgeable in welding procedures. Determine type of metal being welded and select correct welding procedure and electrodes, rods or wire to provide a weld metal strength equivalent at least to that of the parent metal. Make sure to disconnect battery before any welding procedures are attempted.

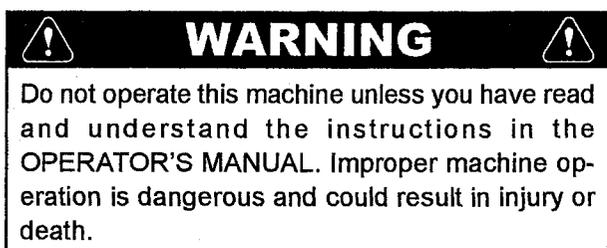

## **SAFETY PRECAUTIONS**

---

16. Do not damage wiring during removal operations. Reinstall the wiring so it is not damaged nor will be damaged in operation of the machine by contacting sharp corners, or by rubbing against some object or hot surface. Do not connect wiring to a line containing fluid.
17. Be sure all protective devices including guards and shields are properly installed and functioning correctly before starting a repair. If a guard or shield must be removed to perform the repair work, use extra caution and replace the guard or shield after repair is completed.
18. The maintenance and repair work while holding the bucket raised is dangerous due to the possibility of a falling attachment. Don't fail to lower the attachment and place the bucket to the ground before starting the work.
19. Loose or damaged fuel, lubricant and hydraulic lines, tubes and hoses can cause fires. Do not bend or strike high pressure lines or install ones which have been bent or damaged. Inspect lines, tubes and hoses carefully. Do not check for leaks with your hands. Very small (pinhole) leaks can result in a high velocity oil stream that will be invisible close to the hose. This oil can penetrate the skin and cause personal injury. Use cardboard or paper to locate pinhole leaks.
20. Tighten connections to the correct torque. Make sure that all heat shields, clamps and guards are installed correctly to avoid excessive heat, vibration or rubbing against other parts during operation. Shields that protect against oil spray onto hot exhaust components in event of a line, tube or seal failure must be installed correctly.
21. Do not operate a machine if any rotating part is damaged or contacts any other part during operation. Any high speed rotating component that has been damaged or altered should be checked for balance before reusing.
22. Be careful when servicing or separating the tracks (crawlers). Chips can fly when removing or installing a track (crawlers) pin. Wear safety glasses and long sleeve protective clothing. Tracks (crawlers) can unroll very quickly when separated. Keep away from front and rear of machine. The machine can move unexpectedly when both tracks (crawlers) are disengaged from the sprockets. Block the machine to prevent it from moving.

Book Code No.

**S5PA01**<sub>01E</sub> ①

# KOBELCO

PA01

# SHOP MANUAL **SK09SR**

## — PRELIMINARY REMARKS —

### TABLE OF CONTENTS

- |  |     |
|--|-----|
| 1. GENERAL PRECAUTIONS FOR REPAIRS .....         | 1-1 |
| 2. ESCAPING PROCEDURE IN CASE OF EMERGENCY ..... | 1-4 |
| 3. INTERNATIONAL UNIT CONVERSION SYSTEM .....    | 1-5 |

**KOBELCO CONSTRUCTION MACHINERY CO., LTD.**

01-0-1 ①

Applicable Machines

SK09SR:PA02-00101~

Revision	Date of Issue	Remarks
First edition	April, 2000	S5PA0101E A
First revision	July, 2001	S5PA0101E① A

# 1. GENERAL PRECAUTIONS FOR REPAIRS



## 1.1 PREPARATION BEFORE DISASSEMBLING

- (1) Understanding operating procedure  
Read OPERATION & MAINTENANCE MANUAL carefully to understand the operating procedure.
- (2) Cleaning machines  
Remove soil, mud, and dust from the machine before carrying it into the service shop to prevent loss of work efficiency, damage of parts, and difficulty in rust prevention and dust protection while reassembling.
- (3) Inspecting machines  
Identify the parts to be disassembled before starting work, determine the disassembling procedure by yourself considering the workshop situations etc., and request procurement of necessary parts in advance.
- (4) Recording  
Record the following items for communication and prevention of recurring malfunction.
  - 1) Inspection date and place
  - 2) Model name, applicable machine number, and hour meter read
  - 3) Trouble condition, place and cause, if any
  - 4) Visible oil leakage, water leakage and damage
  - 5) Clogging of filters, oil level, oil quality, oil contamination and loosening of connections
  - 6) Result of consideration if any problem exists based on the operation rate per month calculated from hour meter indication after the last inspection date.
- (5) Arrangement and cleaning in service shop
  - 1) Tools required for repair work.
  - 2) Prepare space to place the disassembled parts.
  - 3) Prepare oil containers for spilling oil etc.




## 1.2 SAFETY IN DISASSEMBLING AND ASSEMBLING

- 1) Wear appropriate clothes with long sleeves, safety shoes, safety helmet and protective glasses.
- 2) Suspend warning tag "DO NOT OPERATE" from the doorknob or the operating lever, and

have a preliminary meeting before starting work.

- 3) Stop the engine before starting inspection and maintenance to prevent the operator being caught in machine.
- 4) Identify the location of a first-aid kit and a fire extinguisher, and also where to make contact in a state of emergency.
- 5) Choose a hard, level and safe place, and place the attachment on the ground securely.
- 6) Use a lifter such as a crane to remove heavy parts (20 kg [45 lbs] or more) from the machine.
- 7) Use proper tools, and replace or repair defective tools.
- 8) Support the machine and attachment with supports or blocks if the work is performed in the lifted condition.

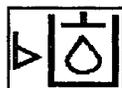

## 1.3 DISASSEMBLING AND ASSEMBLING HYDRAULIC EQUIPMENT

- (1) Removing hydraulic equipment
  - 1) Before disconnecting pipes, release the hydraulic pressure of the system, or open the return side cover and take out the filter.
  - 2) Carefully drain oil of the removed pipes into a containers without spilling on the floor.
  - 3) Apply plugs or caps on the pipe ends to avoid oil spillage and dust intrusion.
  - 4) Clean off the external surface of the equipment before disassembling, and drain hydraulic and gear oil before placing it on the workbench.
- (2) Disassembling hydraulic equipment
  - 1) Do not disassemble, reassemble or modify the hydraulic equipment without the permission of the manufacturer, who is not responsible for the performance and function of the product after reassembling.
  - 2) When disassembling and reassembling for unavoidable reason, refer the work to qualified personnel who have the specific knowledge or completed the parts service training.
  - 3) Provide matching marks to facilitate reassembling work.
  - 4) Before starting the work, read the manual of disassembling procedure, if it is provided, and decide whether the work can be performed by yourself.

- 5) Use the special jig and tools without fail if they are specified.
- 6) If it is hard to remove a part according to the procedure, do not try it by force but investigate the cause.
- 7) Place the removed parts in order and attach tags to facilitate the reassembling.
- 8) Note the location and quantity of parts commonly applied to multiple locations.

(3) Inspecting parts

- 1) Ensure that the disassembled parts are free from seizure, interference and uneven contact.
- 2) Measure and record wear condition of parts and clearance.
- 3) If the problem is found in a part, repair or replace it with a new one.

(4) Reassembling hydraulic equipment

- 1) Turn ON the ventilation fan or open windows to maintain good ventilation prior to starting the cleaning of parts.
- 2) Perform rough and finish cleaning before assembling.
- 3) Remove washing oil by air and apply clean hydraulic or gear oil for assembling.
- 4) Always replace the removed O-rings, backup rings and oil seals with new ones by applying grease in advance.
- 5) Remove dirt and moisture from and perform degreasing on the surface where liquid gasket to be applied.
- 6) Remove rust preventive agent from the new parts before use.
- 7) Fit bearings, bushings and oil seals using special jigs.
- 8) Assemble the parts utilizing matching marks.
- 9) Ensure all the parts are completely assembled after the work.

(5) Installing hydraulic equipment



- 1) Ensure hydraulic oil and lubricant are properly supplied.
- 2) Perform air releasing when:
  - a. Hydraulic oil changed
  - b. Parts of suction side piping replaced
  - c. Hydraulic pump installed
  - d. Slewing motor installed
  - e. Travel motor installed
  - f. Hydraulic cylinder installed

**⚠** • Operation of the hydraulic equipment without filling hydraulic oil or lubricant or without performing air releasing will result in damage to the equipment.

- 3) Perform air releasing after loosening the upper drain plug, starting the engine and keep it in low idle condition. Complete the air releasing when seeping of hydraulic oil is recognized, and tightly plug.
- 4) Perform air releasing of the travel motor and the hydraulic cylinders by running the engine for more than 5 minutes at low speed without load.

**⚠** • Do not allow the hydraulic cylinder to bottom on the stroke end just after the maintenance.

- 5) Perform air releasing of pilot line by performing a series of digging, slewing and travel.
- 6) Check hydraulic oil level after placing the attachment to the oil check position, and replenish oil if necessary.

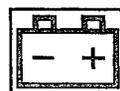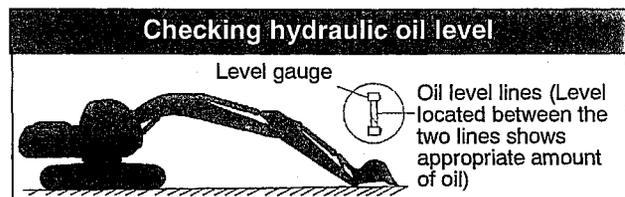

#### 1.4 ELECTRICAL EQUIPMENT

- (1) Do not disassemble electrical equipment.
- (2) Handle it carefully not to drop and give a shock.
- (3) Turn the key OFF prior to connecting and disconnecting work.
- (4) Disconnect the connector by holding it and pressing the lock. Do not pull the wire to apply force to the caulking portion.
- (5) Connect the connector and ensure it is completely locked.
- (6) Turn the key OFF prior to touching the terminal of starter or generator.
- (7) Remove the ground (earth) terminal of battery

when handling tools around the battery or its relay.

- (8) Do not splash water on the electrical equipment and connectors during machine washing.
- (9) Check for moisture adhesion inside the waterproof connector after pulling it out, since it is hard to remove moisture from the connector. If moisture adhesion is found, dry it completely before the connection.

**⚠** ● Battery electrolyte is hazardous.  
Battery electrolyte is dilute sulfuric acid. Exposure of skin or eyes to this liquid will cause burning or loss of eyesight. If the exposure occurs, take the following emergency measures and seek the advice of a medical specialist.

- When skin exposed: Wash with water and soap sufficiently.
- When eyes exposed: Immediately wash away with city water continuously for more than 10 minutes.
- When a large amount of the liquid flows out: Neutralize with sodium bicarbonate or wash away with city water.
- When swallowed: Drink a large amount of milk or water.
- When clothes exposed: Immediately undress and wash.



## 1.5 HYDRAULIC PARTS

- 1) O-ring
  - Ensure O-rings have elasticity and are not damaged before use.
  - Use the appropriate O-rings. O-rings are made of various kinds of materials having different hardness to apply to a variety of parts, such as the part for moving or fixed portion, subjected to high pressure, and exposed to corrosive fluid, even if the size is same.
  - Fit the O-rings without distortion and bend.
  - Always handle floating seals as a pair.
- 2) Flexible hose (F hose)
  - Use the appropriate parts. Different parts are

used depending on the working pressure even the size of fitting and the total length of the hose is same.

- Tighten the fitting at the specified torque. Ensure no kink, tension, interference nor oil leakage is recognized.

## 1.6 WELDING REPAIR

- (1) Refer repair welding to qualified personnel according to the appropriate procedure.
- (2) Disconnect the ground (earth) cable of the battery before starting the repair. Failure to do so will cause damage to the electrical equipment.
- (3) Move away the articles in advance that may cause fire if exposed to sparks.
- (4) Before starting the repair of the attachment, do not fail to cover the plated surface of the piston rod with flameproof sheet to prevent it from being exposed to sparks.

## 1.7 ENVIRONMENTAL MEASURE

- (1) Run the engine at the place that is sufficiently ventilated.
- (2) Industrial waste disposal  
Dispose of the following parts according to the relevant regulations:  
Waste oil and waste container  
Battery
- (3) Precautions for handling hydraulic oil  
Exposure of eyes to hydraulic oil will cause inflammation. Wear protective glasses before handling to avoid an accident. If an eye is exposed to the oil, take the following emergency measures:
  - When an eye exposed: Immediately wash away with city water sufficiently till stimulative feeling vanishes.
  - When swallowed: Do not let vomit, and receive medical treatment immediately.
  - When skin exposed: Wash with water and soap sufficiently.
- (4) Others  
Use replacement parts and lubricants authorized as the KOBELCO genuine parts.

## 2. ESCAPING PROCEDURE IN CASE OF EMERGENCY

### 2.1 WHEN CAB DOOR DOES NOT OPEN ;(CAB spec. only)

- (1) Escape from the front window.
- (2) Escape from skylight.
- (3) When front window and skylight do not open ;  
The life hammer is always reserved on the rear left side of cab. Break the glass on the rear side of cab, and escape from there.

▲ • Break the window glass with care to protect eyes, and don't fail to break the window on which label "Emergency exit" is stuck.

- (4) In addition, the life hammer is equipped with a cutter on the lever side to cut the seat belt, etc.

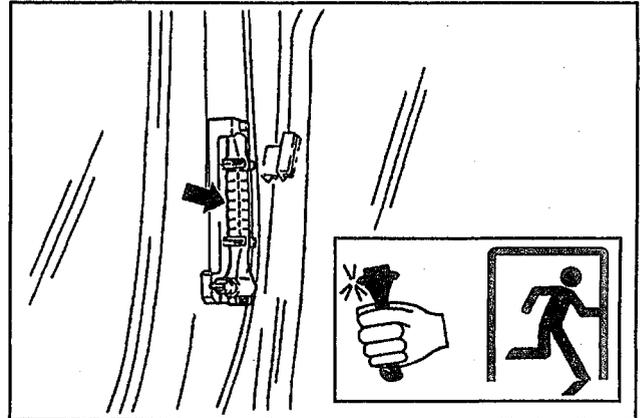


Fig. 2-1 LIFE HAMMER AND "EMERGENCY EXIT" SEAL

### 2.2 TOWING THE MACHINE

1. If the machine should become stuck in soft soil areas it may be necessary to tow the machine. Attach a wire rope or chain, with the capacity to pull the machine out, to the lower frame axles.
2. Attach other end to the vehicle used to pull the machine. Operate the Machine's Travel Lever in the proper direction while pulling with the other vehicle.



### WARNING



- While towing, do not enter between the machine and towing vehicle.
- Do not apply a shock load onto the towing rope.
- Do not use eyes on machine lower frame to tow machine.
- Keep the wire rope horizontally, and perpendicularly to the crawler frame.
- Tow the machine slowly at low speed mode.
- For the towing of the machine body, provide pads to be applied to the corner of crawler frame to prevent the wire rope and crawler frame from any damages.

### NOTE

Do not pull machine utilizing the brackets welded on the lower plates of the carbody. These brackets are provided for pulling lightweight objects. See figure for better reference.

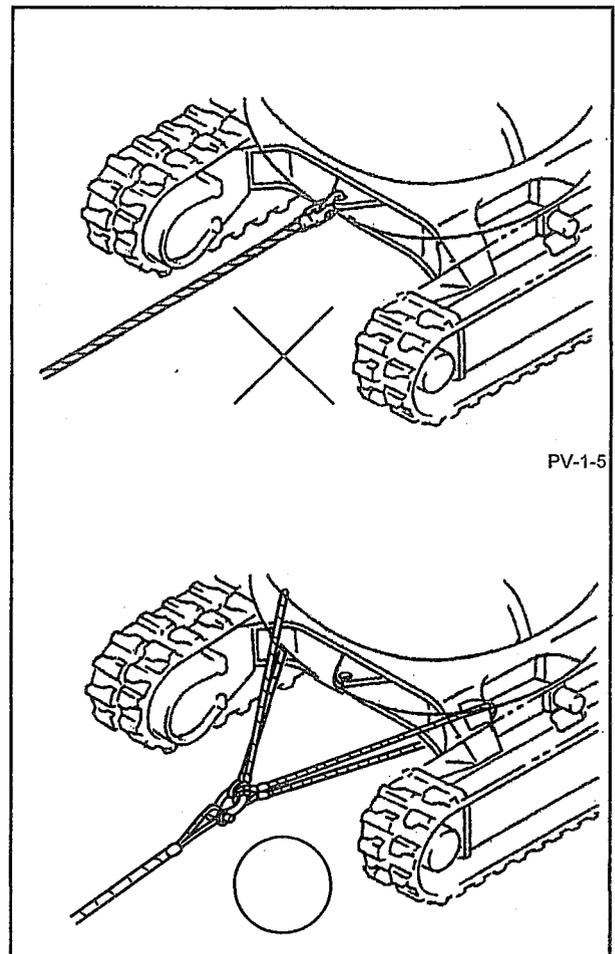


FIG. 2-2 TOW MACHINE PROPERLY

### 3. INTERNATIONAL UNIT CONVERSION SYSTEM

(Based on MARKS' STANDARD HANDBOOK FOR MECHANICAL ENGINEERS)

#### Introduction

Although this manual uses the JIS unit system, if you need SI unit, refer to the following international system of units.


Given hereinafter is an excerpt of the units that are related to this manual :

#### 1. Etymology of SI Units

French :Le Système International d' Unités

English :International System of Units

#### 2. Construction of SI Unit System

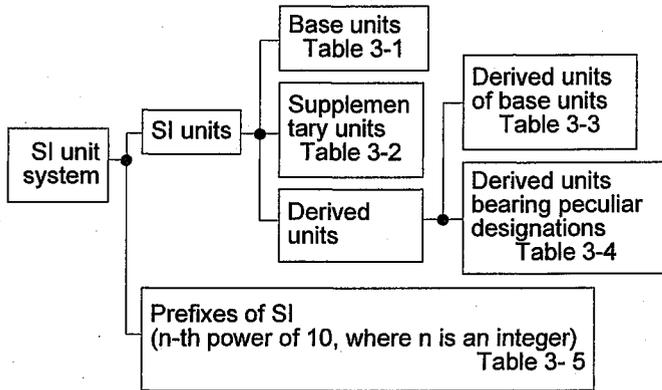

#### (4) Derived Units bearing Peculiar Designations

[ Table 3-4 ]

QUANTITY	UNIT	SYMBOL	FORMULA
Frequency	hertz	Hz	1/s
Force	newton	N	kg·m/s <sup>2</sup>
Pressure and Stress	pascal	Pa	N/m <sup>2</sup>
Energy, Work and Quantity of heat	joule	J	N·m
Power	watt	W	J/s
Quantity of electricity	coulomb	C	A·s
Electric potential difference, Voltage, and Electromotive force	volt	V	W/A
Quantity of static electricity and Electric capacitance	farad	F	C / V
Electric resistance	ohm	Ω	V / A
Celcius temperature	celcius degree or degree	°C	(t+273.15)K
Illuminance	lux	lx	l m/m <sup>2</sup>

#### (1) Base Units [ Table 3-1 ]

QUANTITY	UNIT	SYMBOL
Length	metre	m
Mass	kilogram	kg
Time	second	s
Electric current	ampere	A
Thermodynamic temperature	kelvin	K
Amount of substance	mol	mol
Luminous intensity	candela	cd

#### (2) Supplementary Units [ Table 3-2 ]

QUANTITY	UNIT	SYMBOL
Plane angle	radian	rad
Solid angle	steradian	sr

#### (3) Derived Units [ Table 3-3 ]

QUANTITY	UNIT	SYMBOL
Area	square metre	m <sup>2</sup>
Volume	cubic metre	m <sup>3</sup>
Velocity	metre per second	m/s
Acceleration	metre per second squared	m/s <sup>2</sup>
Density	kilogram per cubic metre	kg/m <sup>3</sup>

#### (5) Prefixes of SI [ Table 3-5 ]

PREFIX	SYMBOL	MULTIPLICATION FACTORS
giga	G	10 <sup>9</sup>
mega	M	10 <sup>6</sup>
kilo	k	10 <sup>3</sup>
hecto	h	10 <sup>2</sup>
deca	da	10
deci	d	10 <sup>-1</sup>
centi	c	10 <sup>-2</sup>
milli	m	10 <sup>-3</sup>
micro	μ	10 <sup>-6</sup>
nano	n	10 <sup>-9</sup>
pico	p	10 <sup>-12</sup>


#### (6) Unit Conversion [ Table 3-6 ]

QUANTITY	JIS	SI	CONVERSION FACTOR
Weight	kgf		
Mass		kg	1 kgf=1 kg
Force	kgf	N	1 kgf=9.807 N
Torque	kgf·m	N·m	1 kgf·m=9.807 N·m
Pressure	kgf/cm <sup>2</sup>	MPa	1 kgf/cm <sup>2</sup> =0.09807 MPa
Motive power	PS	kW	1 PS=0.7355 kW
Revolution	rpm	min <sup>-1</sup>	r/min *1


\*1 Units that are allowed to use

(7) Unit conversion logarithmic chart


**FORCE**

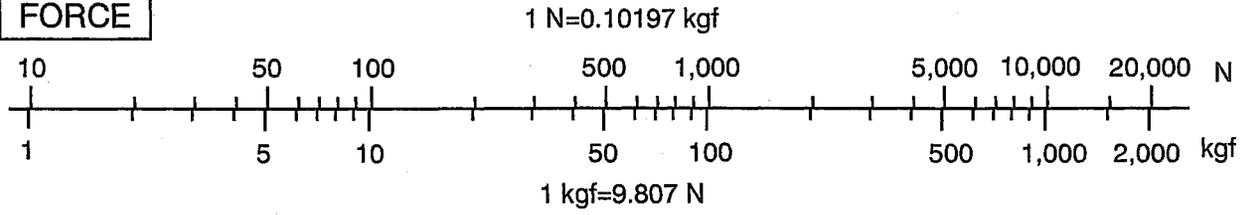

**TORQUE**

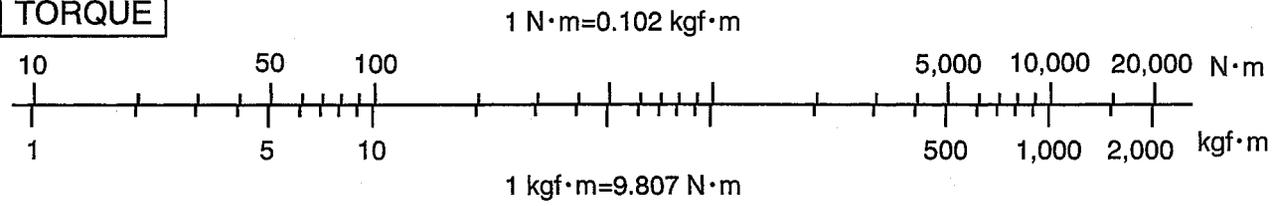

**PRESSURE**

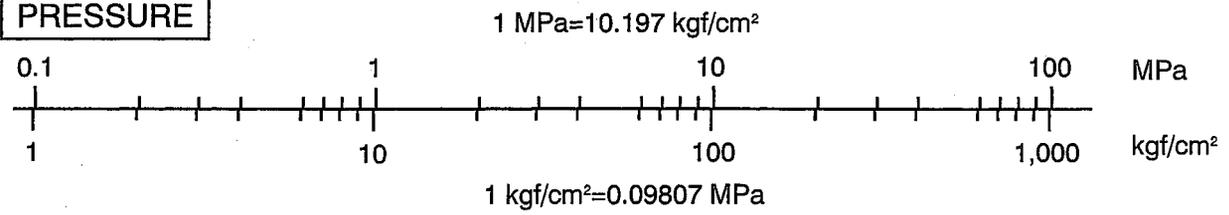

**KOBELCO****SHOP MANUAL SK09SR PA02****SPECIFICATIONS****TABLE OF CONTENTS**

1. COMPONENTS NAME .....	1-1
2. MACHINE DIMENSIONS .....	1-2
3. SPECIFICATIONS AND PERFORMANCE .....	1-3
4. MACHINE & COMPONENTS WEIGHT (DRY) .....	1-4
5. TRANSPORTATION DIMENSIONS AND WEIGHT .....	1-5
6. TYPE OF CRAWLER SHOES .....	1-8
7. TYPE OF BUCKETS .....	1-8
8. MACHINE LIFTING PROCEDURE .....	1-9
9. ATTACHMENT WORKING RANGES .....	1-10
10. LIFTING CAPACITIES .....	1-11
11. ENGINE SPECIFICATIONS .....	1-13


**KOBELCO CONSTRUCTION MACHINERY CO., LTD.**

Applicable Machines

SK09SR:PA02-00101~

Revision	Date of Issue	Remarks
First edition	April, 2000	S5PA0201E A
First revision	July, 2001	S5PA0201E ① A
Second revision	February, 2003	S5PA0201E ② A


# 1. COMPONENTS NAME

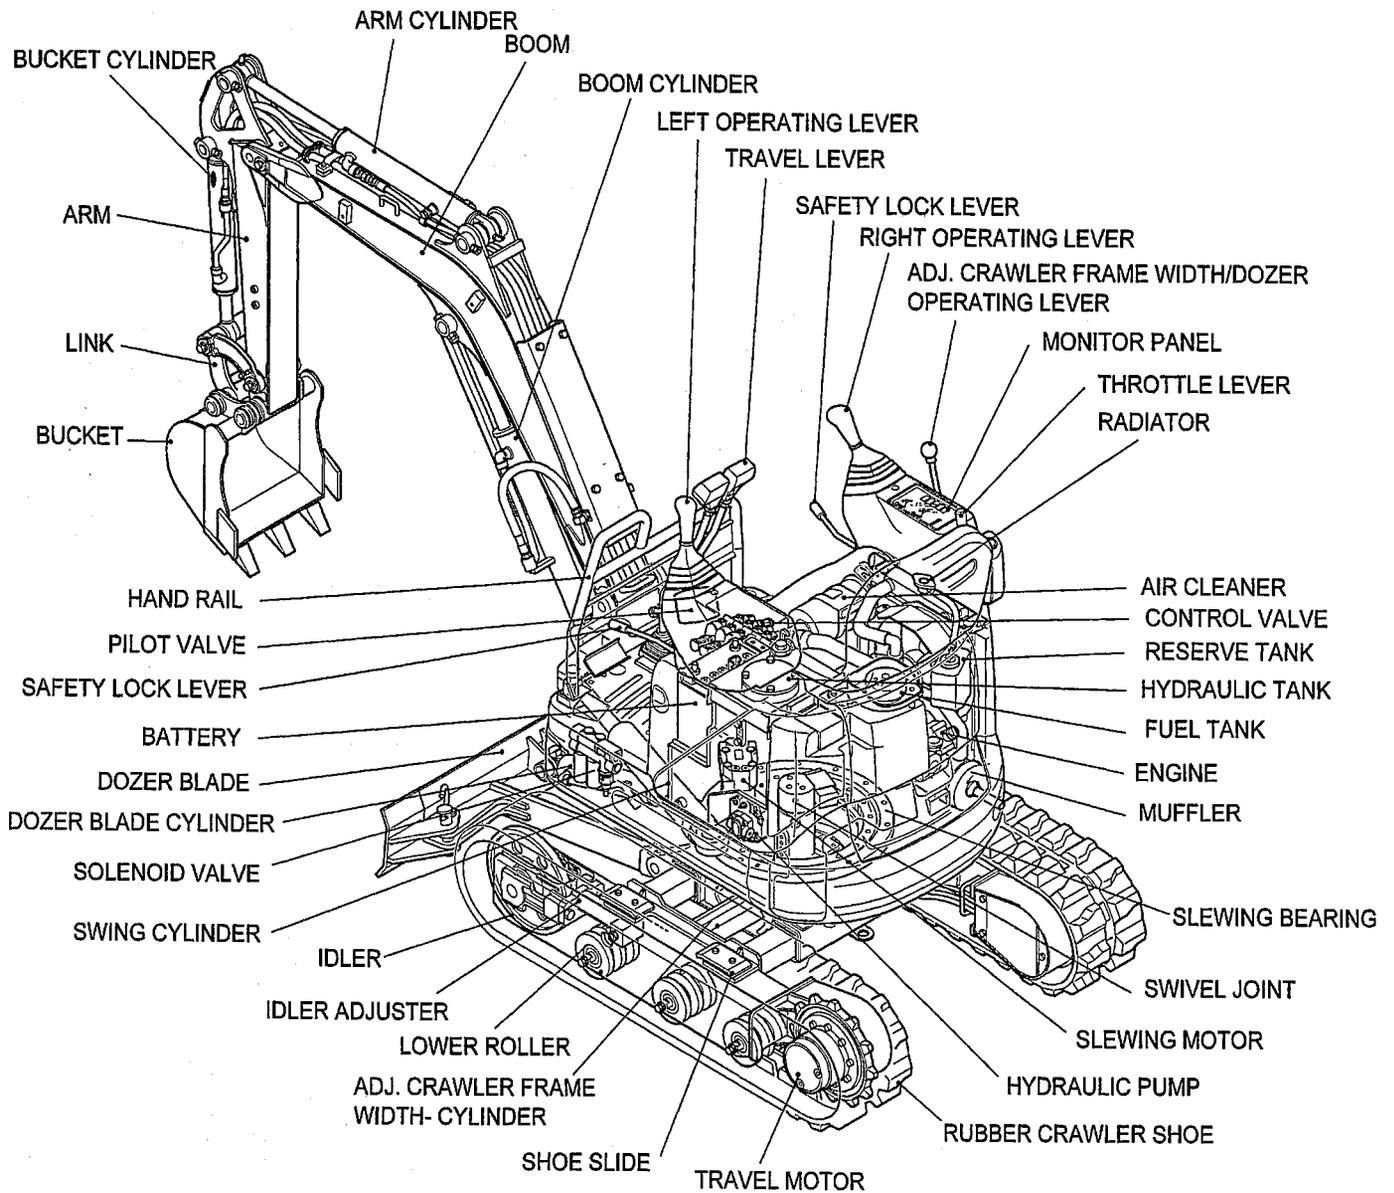

## 2. MACHINE DIMENSIONS

■ SK09SR (LONG ARM)

Unit : mm (ft-in)

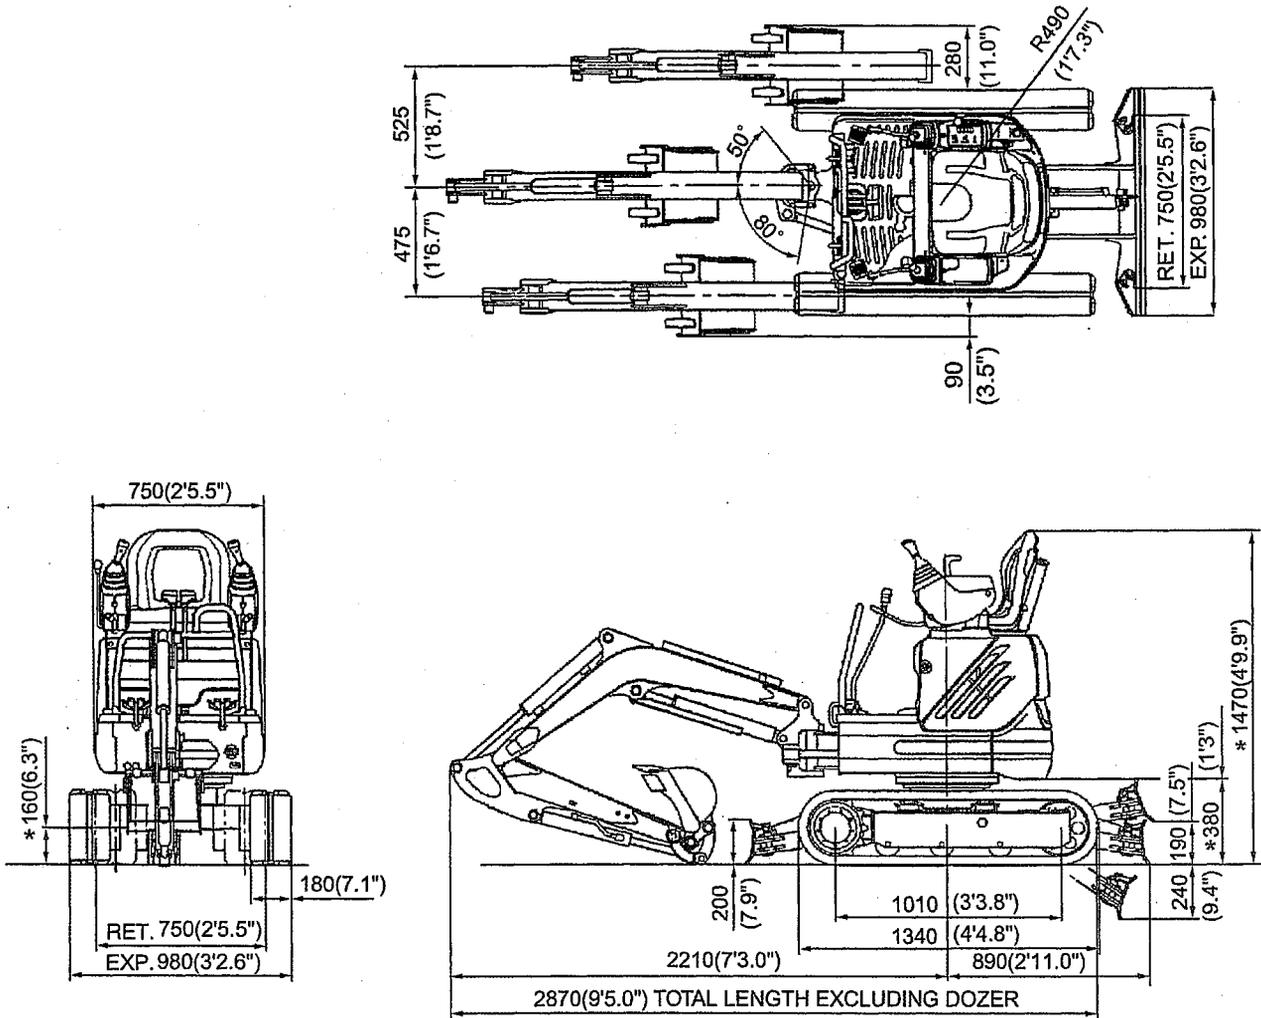

PAE-6-1

\*Dimension does not include height of grouser  
Shoe lug : 18mm (0.7in)

### 3. SPECIFICATIONS AND PERFORMANCE

#### 1. SPEED AND GRADEABILITY

Item	Model	SK09SR	
		Rubber crawler shoe	
Slewing Speed		9.0rpm	
Travel Speed		Low (1st)	High (2nd)
		2.0km / h (1.2mph)	3.5km / h (2.2mph)
Gradeability	% (degree)	58% (30°)	

#### 2. SIDE DIGGING & DOZER

Type	Boom swing by hydraulic cylinder		
Boom Swing Angle	Right	50°	
	Left	80°	
Strokes of Dozer (above / below) mm(in)	190 / 240 (7.5 / 9.4)		

#### 3. ENGINE

Model	YANMAR 2TNE68 - YB		
Type	Vertical, 4-cycle, water cooled, diesel engine		
Number of cylinders-Bore x Stroke	2 - 68mm x 72mm (2.68in x 2.83in)		
Total Displacement	0.52 0 (31.7cu-in)		
Output Rating	7.8PS (5.7kW) / 2,000rpm		
Maximum Torque	3.1kgf·m / 1,500rpm (22lb·ft / 1500rpm)		
Starting Motor	12V / 0.9 kW		
Generator (Dynamo)	12V / 20 A		

#### 4. HYDRAULIC COMPONENTS

Hydraulic Pump	Variable displacement axial piston + gear pump		
Hydraulic Motor	Orbit motor		
Hydraulic Motor w / Reducer (Travel)	Axial piston, 2-Speed motor		
Control Valve	9-function multiple control valve		
Cylinder (Boom, Arm, Swing, Bucket, Dozer, Frame width)	Double action cylinder		
Return Filter	Safety valve containing / Filter Type (30 μ )		

#### 5. NOISE LEVEL

Sound Power Level	87dB (A)
-------------------	----------

#### 4. MACHINE & COMPONENTS WEIGHT (DRY)

Unit : kgf(lbs)

MODEL	SK09SR	
COMPLETE MACHINE (LONG ARM)	950	(2090)
UPPER SLEWING BODY (ASSY OF FOLLOWINGS)	426	(939)
UPPER FRAME	75	(165)
ENGINE	65	(143)
RADIATOR	2.8	(6.2)
HYDRAULIC PUMP	10	(22)
HYDRAULIC TANK	16	(35)
FUEL TANK	1.4	(3.1)
CONTROL VALVE	17	(37)
SLEWING MOTOR	15	(33)
SWING BRACKET	16	(35)
SWING CYLINDER	15	(33)
COUNTER WEIGHT	46	(101)
TRAVEL SYSTEM (ASSY OF FOLLOWINGS)	377	(831)
SWIVEL JOINT	12	(26)
SLEWING BEARING	17	(37)
CRAWLER SHOE	33 × 2	(73 × 2)
TRAVEL MOTOR	17 × 2	(37 × 2)
LOWER ROLLER	3.8 × 6	(8.4 × 6)
IDLER	4.5 × 2	(9.9 × 2)
SPROCKET	5.2 × 2	(11.5 × 2)
IDLER ADJUSTER	2.8 × 2	(6.2 × 2)
DOZER	42	(93)
DOZER CYLINDER	8	(18)
CRAWLER WIDTH CYLINDER	7.5	(17)
HOE ATTACHMENT (ASSY OF FOLLOWINGS)	122	(269)
BOOM	35	(77)
ARM (LONG)	25	(55)
BUCKET (STANDARD)	17	(37)
BOOM CYLINDER	7	(15)
ARM CYLINDER	9	(20)
BUCKET CYLINDER	7	(15)
FLUIDS	25	(55)
HYDRAULIC OIL	15 ℓ	(4.0gal)
COOLING WATER	2.2 ℓ	(0.58gal)
ENGINE OIL	1.7 ℓ	(0.45gal)
FUEL	9 ℓ	(2.4gal)



## 5. TRANSPORTATION DIMENSIONS AND WEIGHT

### (1) MACHINE AND 1-TON TRUCK

#### ■ SK09SR (LONG ARM)


Machine Weight 950 kgf (2090 lbs)

Unit : mm (ft·in)

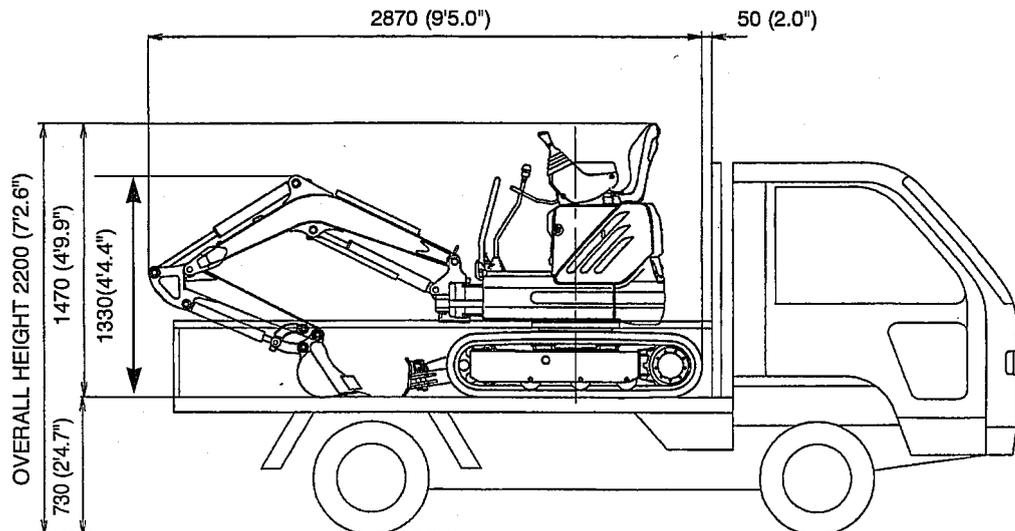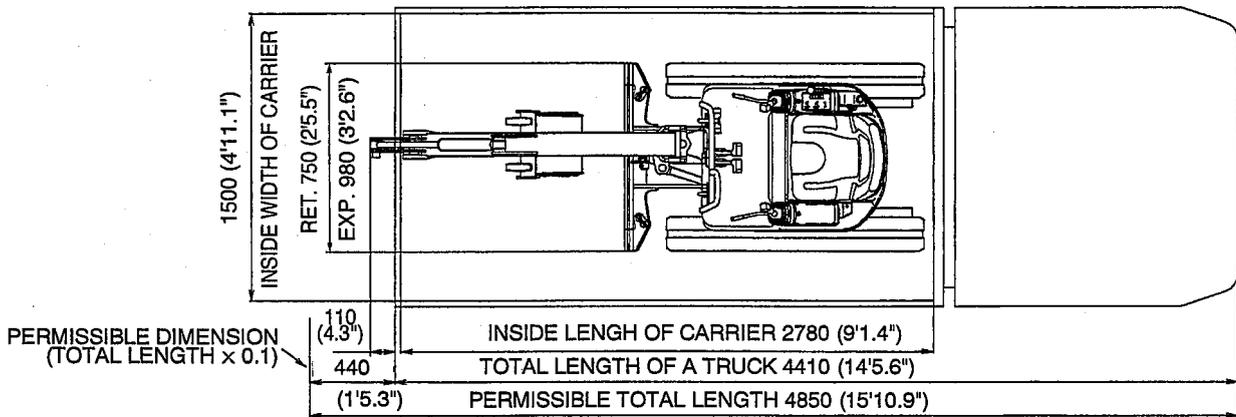

(2) BOOM WITH ARM CYLINDER


Model	SK09SR
L x H x W mm(ft-in)	1440 x 515 x 220 (4'8.7" x 1'8.3" x 8.7")
Weight w / arm cyl. kgf(lbs)	45 (99)

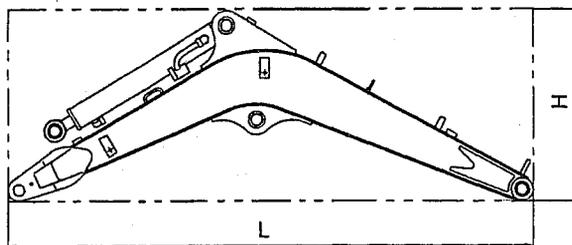

PA-6-4

(3) LONG ARM & STANDARD BUCKET


Model	SK09SR
L x H x W mm(ft-in)	1535 x 265 x 350 (5'0.4" x 10.4" x 1'1.8")
Weight kgf(lbs)	58 (128)

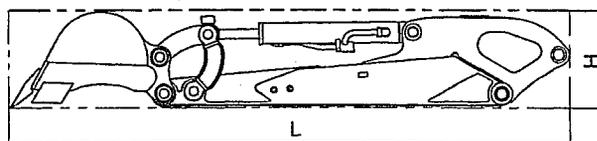

PAE-6-5

(4) LONG ARM


Model	SK09SR
L x H x W mm(ft-in)	1150 x 255 x 175 (3'9.3" x 10.0" x 6.9")
Weight kgf(lbs)	42 (93)

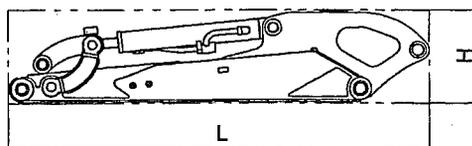

PAE-6-6

(5) STANDARD BUCKET (Japanese standard bucket)

Model	SK09SR
Heaped capacity m <sup>3</sup> (cu-yd)	0.022 (0.029)
L x H x W mm(in)	380 x 355 x 350 (1'3.0" x 1'2.0" x 1'1.8")
Weight kgf(lbs)	16.5 (36.4)

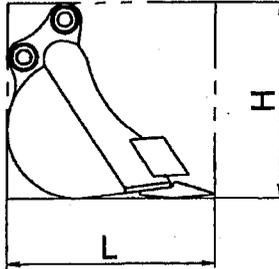


PA-6-7

(6) DOZER


w / o cylinder weight

Model	SK09SR
L x H x W ; Ret/Exp mm(in)	660 x 195 x 750 / 980 (2'2.0" x 7.7" x 2'5.5" / 3'2.6")
Weight kgf(lbs)	42 (93)

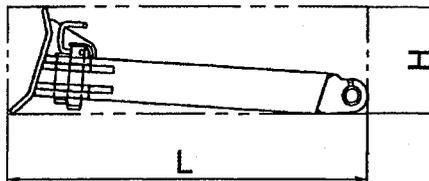


PA-6-8

## 6. TYPE OF CRAWLER SHOES

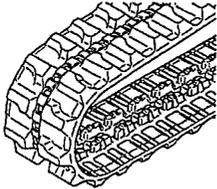Type	Model	Shoe width mm (in)	Total Crawler width mm (ft-in)	Ground Pressure kgf / cm <sup>2</sup> (psi)
Rubber shoe 	SK09SR	180 (7.1)	Retracted : 750 (2'5.5") Expanded : 980 (3'2.6")	0.25 (3.6)

## 7. TYPE OF BUCKETS (Reference Only)

(Japanese standard bucket)

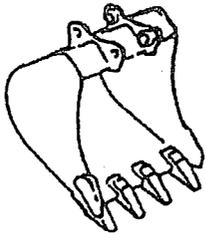
Type	Model	Heaped capacity m <sup>3</sup> (cu-yd)	Outer width mm (ft-in)		Number of tooth	Weight kgf (lbs)	Remarks
			With side cutter	Without side cutter			
Hoe bucket 	SK09SR	0.014 (0.018)	250 (9.8")	-	3	14.5 (32)	Option
		0.018 (0.024)	300 (11.8")	-	3	15.5 (34)	Option
		0.022 (0.029)	350 (1'1.8")	-	3	16.5 (36)	Standard

## 8. MACHINE LIFTING PROCEDURE

### ■ LIFTING PROCEDURES FOR THE MACHINE COMPLETE



**WARNING**

- The wire ropes to be used for lifting the machine should have sufficient strength against the machine weight.
- Improper lifting method and/or rope rigging manner might cause a movement or slip of the machine while it is being lifted, resulting in serious injury or damage to the machine.
- Do not impose a load suddenly on the wire ropes and slings.
- When the lifting work is carried out in cooperation with multiple persons, make sure to check every situation by exchanging signals with each other.
- During the lifting work, keep any persons away from the lifted machine, especially under the machine.

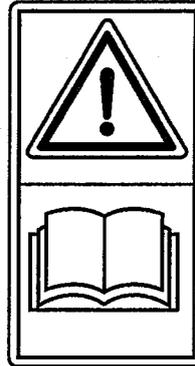


Carry out the lifting work at a level ground.

- [1] Manipulate each operating lever to take the machine a posture as shown in the figure.
- [2] Operate the boom swing pedal to face the boom direct front.
- [3] Stop the engine, and make the safety lock lever to "LOCKED" position. Then take off the machine after confirmation for no abnormalities around the operator's seat.
- [4] Rope the wires to the shackles under the floor mat (Location is this side of slewing lock lever and crawler frame width / dozer selector lever).
- [5] Slightly lift the machine to confirm the balance, then lift up the machine.

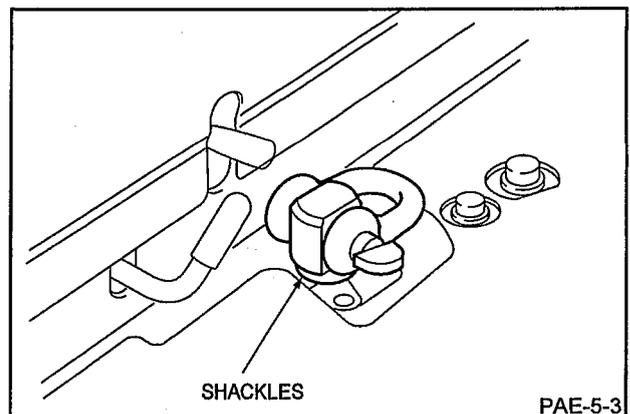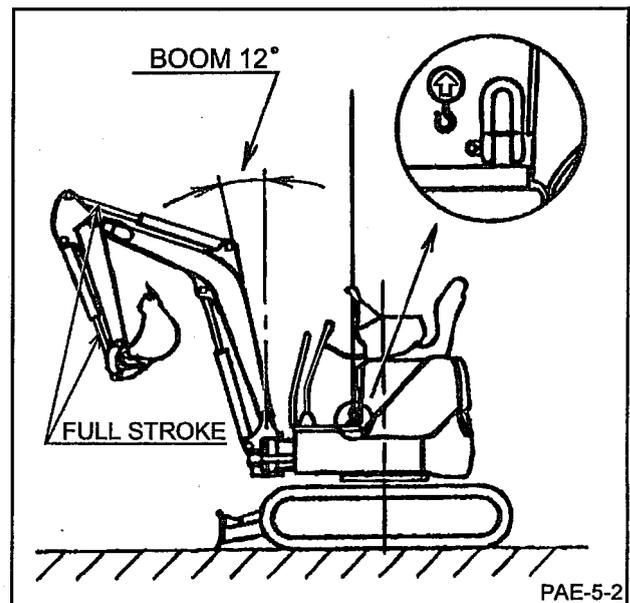

## 9. ATTACHMENT WORKING RANGES [LONG ARM / STANDARD BUCKET]

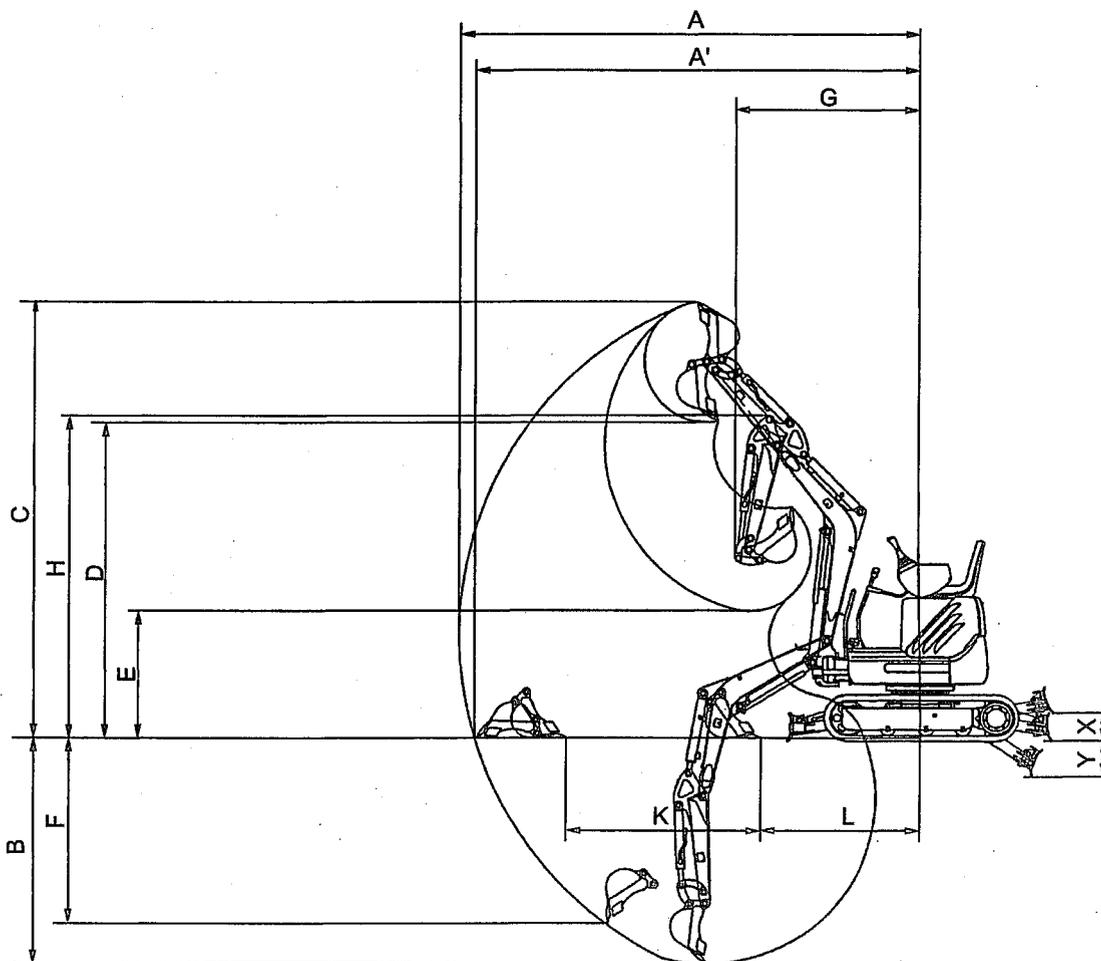

PAE-6-2

Unit : mm (ft-in)

Model		SK09SR	
Item	Attachment	Arm	Long : 0.925m (3' 0.4")
		Bucket	Standard : 0.022m <sup>3</sup> (0.029cu-yd)
A	Max. digging reach		3300 (10' 9.9")
A'	Max. digging reach at ground level		3210 (10' 6.4")
* B	Max. digging depth		1750 (5' 8.9")
* C	Max. digging height		3160 (10' 4.4")
* D	Max. dumping clearance		2320 (7' 7.3")
* E	Min. dumping clearance		740 (2' 5.1")
* F	Max. vertical wall digging depth		1460 (4' 9.5")
G	Min. front slew radius		1390 (4' 6.7")
* H	Height at min. slew radius		2240 (7' 4.2")
K	Horizontal digging stroke	Stroke	1520 (4' 11.8")
L	stroke at ground level	Minimum	1060 (3' 5.7")
X	Dozer strokes	Above	190 (7.5")
Y		Below	240 (9.4")

\* Dimension does not include height of grouser ; Shoe lug : 18mm (0.7")

Note : Japanese domestic specification.

## 10. LIFTING CAPACITIES

(1) Conditions of calculation

- 1) The lifting load shows the lower value either 87% of lifting capacity by hydraulic pressure, or 75% of tipping load.
- 2) The load point is on the bucket lift point, and the bucket cylinder is extended (bucket IN).
- 3) Weight of hooks, slings, and all other lifting equipment shall be considered a part of the load.
- 4) The values in the upper rows show the lifting capacity at a machine facing sideways, and values in the lower rows show a machine facing longitudinally.
- 5) Unit : ton,  
Crawler : 180mm (7.1 in), Rubber crawler shoe.
- 6) Set hydraulic pressure 210 kgf / cm<sup>2</sup> (2990 psi)

(2) Reference No. list of lifting diagram

■ SK09SR

<b>Attachment</b>	Long Arm + Standard Bucket (Japanese standard bucket) 0.925m (3'0.4") + 0.022m <sup>3</sup> (0.029 cu.yd)		
<b>Crawler width</b>	EXPANDING 980mm (3'2.6")		—
<b>Dozer blade position</b>	Up and Front	Up and Rear	—
<b>Figure No.</b>	(1)	(2)	—

 <span style="font-size: 1.2em; font-weight: bold; padding: 0 10px;">WARNING</span> 
<p>Hydraulic excavator whose crawler can be changed its width, is dangerous due to losing its side-way stability when the crawler is retracted. Lifting work is prohibited for the machine with contracted crawler width.</p>


■ SK09SR

(1) Long Arm

Crawler width : Expanding

Dozer blade : Up and Front

Unit : ton

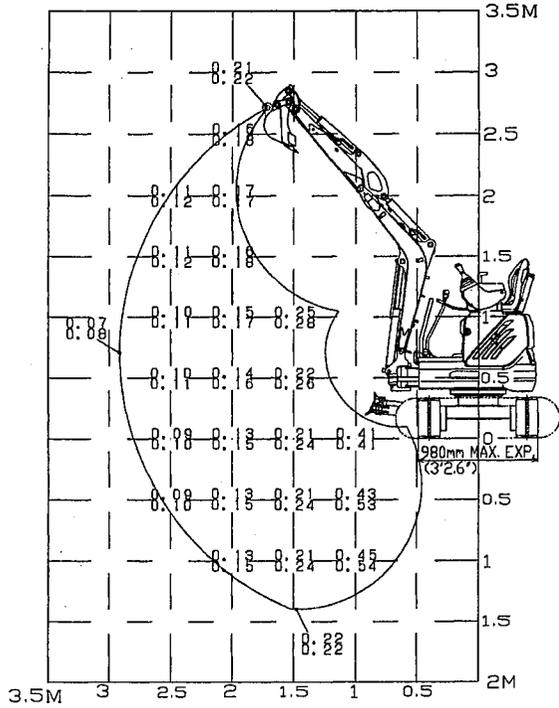


(2) Long Arm

Crawler width : Expanding

Dozer blade : Up and Rear

Unit : ton

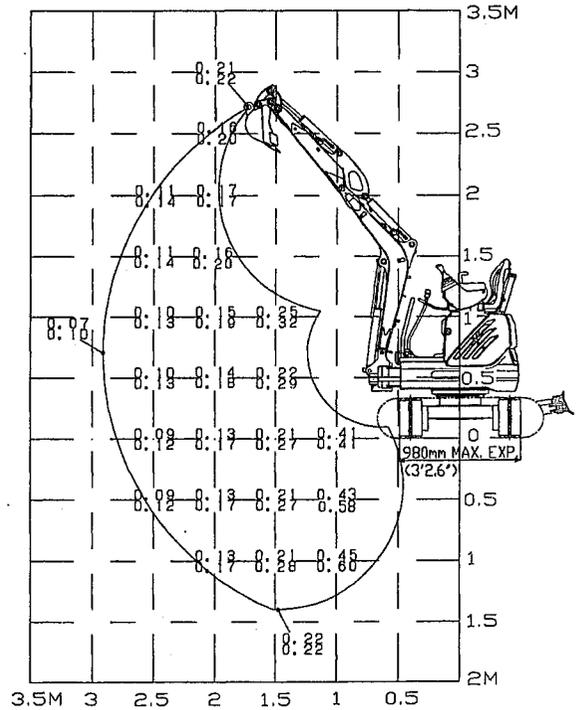

## 11. ENGINE SPECIFICATIONS


### 11.1 SPECIFICATIONS

Item	Model	SK09SR	
Engine Model		2TNE68-YB	
Type		Vertical, 4-cycle water-cooled diesel engine	
No. of cylinders - Bore × Stroke		2 - 68mm (2.68 in) × 72 mm (2.83 in)	
Total displacement		0.52 ℓ (31.7 cu·in)	
Compression ratio		23.0	
Rated output		7.8 PS (5.7 kW) at 2000 rpm	
Maximum torque		3.1 ~ 3.4 kgf·m (22.4 ~ 24.6 ft·lbs) at 1500 rpm	
Low idling		1300 ± 25 rpm	
High idling		2180 ± 25 rpm	
Fuel consumption rate		Less than 200 g / PS·h	
Allowable tilting angles		Back and forth, left and right 25° (momentary 30°)	
Rotating direction		Counterclockwise as seen from flywheel side	
Firing order		1-2-1	
Fuel injection timing (FID, b.T.D.C.)		14 ± 1°	
Fuel injection pressure		120 <sup>+10</sup> <sub>0</sub> kgf / cm <sup>2</sup> (1710 <sup>+140</sup> <sub>0</sub> psi)	
Valve action		Open	Close
	Intake valve	b.T.D.C. 10 ± 5°	a.B.D.C. 42 ± 5°
	Exhaust valve	b.T.D.C. 42 ± 5°	a.B.D.C. 10 ± 5°
Valve clearance	Intake valve	0.2 mm (0.008 in) in cold condition	
	Exhaust valve	0.2 mm (0.008 in) in cold condition	
Thermostat action		Start 71 ± 1.5°C (160 ± 3°F) / Full open 85°C(185°F)	
Compression pressure		33 ± 1 kgf / cm <sup>2</sup> (469 ± 14psi) at 250 rpm	
Lubrication oil pressure		3.5 ± 0.5 kgf / cm <sup>2</sup> (50 ± 7psi) at 2000 rpm	
Dimensions L × W × H		389 × 405 × 505 mm (15.3 × 15.9 × 19.9 in)	
Dry weight		65 <sup>+5</sup> <sub>0</sub> kgf (143 <sup>+11</sup> <sub>0</sub> lbs)	
Governor		Mechanical centrifugal governor (All speed type)	
Lubrication system		Forced lubrication with trochoid pump	
Cooling system		Liquid cooling / Radiator	
Starter capacity		12 V × 0.9 kW	
Generator capacity		12 V × 20 A	
Cooling water capacity : Max / Engine		2.2 / 0.6 ℓ (0.58 / 0.16 gal)	
Engine oil volume : Max / Effective		1.7 / 0.7 ℓ (0.45 / 0.18 gal)	

SK09SR

Model : 2TNE68-YB

Rated Output : 7.8PS / 2,000rpm (5.7 kW / 2000min<sup>-1</sup>)

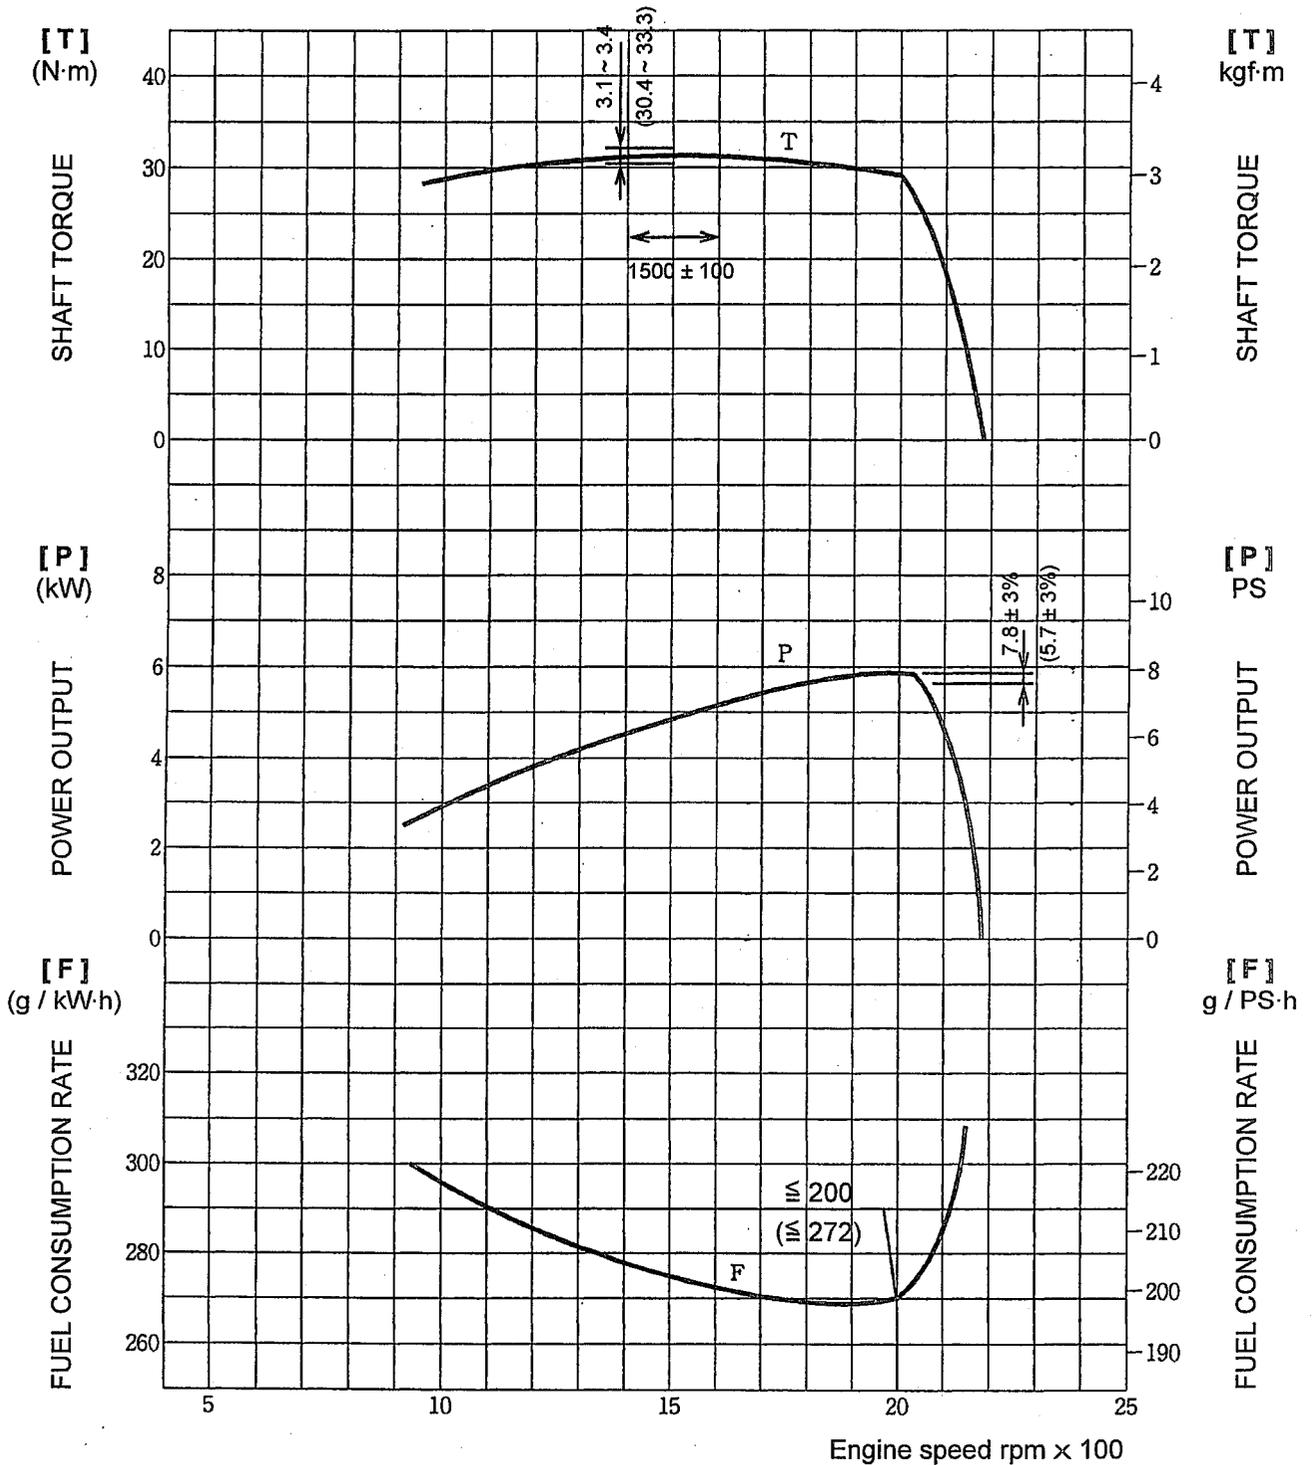

$$\begin{aligned}
 \text{Fuel consumption volume} &= \frac{F}{\rho \times 1000} \times P \times \alpha \\
 &= \frac{200}{0.835 \times 1000} \times 7.8 \times \alpha \\
 &= 1.87 \alpha
 \end{aligned}$$

F : Fuel consumption rate (g / PS·h)

P : Shaft output (ps)

$\rho$  : Specific gravity

$\alpha$  : Standard load factor (0.60 ~ 0.70)

Fuel consumption in normal operation ;

1.1 ~ 1.3  $\ell$  / h (load factor : (0.60 ~ 0.70))