

# Field Assembly Instruction

DUMP TRUCK

**HD785-5**

SERIAL NUMBERS 4001 and up

**KOMATSU**

/

## CONTENTS

FRONT AXLE, F/T, CHASSIS, HD785-5 (COMMON TO ALL SPECIFICATIONS).....	3
TIRE ASSEMBLY (INCLUDING TIRES), REAR AXLE, HD785-5.....	4
R.H. PLATFORM, CABIN, HD785-5.....	5
BODY ASSEMBLY (INCLUDING BODY), HD785-5.....	6
LIST OF JIGS, TOOLS, AND CONSUMABLES FOR FIELD ASSEMBLING (1/3).....	7
LIST OF JIGS, TOOLS, AND CONSUMABLES FOR FIELD ASSEMBLING (2/3).....	8
LIST OF JIGS, TOOLS, AND CONSUMABLES FOR FIELD ASSEMBLING (3/3).....	9
LIST OF TOUTH-UP COATING ON BODY FOR OVERSEAS SPECIFICATIONS.....	9
SKETCHES OF SPECIAL TOOLS.....	10
MAN-HOURS, WORKERS NEEDED FOR LOCAL ASSEMBLY.....	14
ASSEMBLING PROCEDURES ON SITE.....	16
1. Lifting and mounting rear axle assembly.....	16
2. Lifting chassis assembly.....	18
3. Transferring chassis assembly onto rear axle assembly.....	20
4. Connecting rods to rear axle suspension.....	22
5. Placing mount for front side.....	24
6. Connecting rear axle and parking brake line.....	25
7. Lifting front axle assembly.....	26
8. Assembling front axle.....	28
9. Connecting tie rod of steering cylinder.....	30
10. Connecting front axle hoses.....	32
11. Installing steps on A-shaped arm and bumper.....	34
12. Installing front tire.....	36
13. Installing propeller shaft.....	38
14. Installing fuel tank (1/2).....	40
15. Installing fuel tank (2/2).....	42
16. Installing left- and right-hand stays of frame.....	44
17. Installing left-and right-hand fenders.....	46
18. Installing front supports.....	48
19. Installation of front support (-40 °C specification for POLYUS).....	50
20. Installation of front support (Diagonal ladder + Large-capacity air cleaner specification).....	52
21. Installation of air cleaner assembly indicator hoses (Large-capacity air cleaner specification).....	54
22. Installation of right front support air cleaner assembly (Large-capacity air cleaner specification).....	56
23. Connecting steering oil line.....	58
24. Connection of air cleaner piping (Large-capacity air cleaner specification).....	60
25. Removing engine hood.....	62
26. Installing right-hand platform handrail.....	63
27. Installing right-hand platform.....	64
28. Fixing of air cleaner piping (Large-capacity air cleaner specification).....	66
29. Wiring along right-hand platform side.....	68
30. Wiring in battery box.....	70
31. Installation of diagonal ladder (1/3) (Diagonal ladder + Large-capacity air cleaner specification).....	72
32. Installation of diagonal ladder (2/3) (Diagonal ladder + Large-capacity air cleaner specification).....	74
33. Installation of diagonal ladder (3/3) (Diagonal ladder + Large-capacity air cleaner specification).....	76
34. Replacing side bracket of cabin.....	78
35. Installing handrail of cabin.....	79
36. Installing cabin.....	80
37. Connecting steering column.....	82
38. Clamping drain hose of air conditioner.....	84
39. Installing rops and payload lamp.....	85
40. Connecting dump control.....	86
41. Installing air intake (1/2).....	88
42. Installing air intake (2/2).....	89
43. Installing air intake (1/2) (Front air intake specification).....	90
44. Installing exhaust pipe.....	91

Sample of manual. Download All 204 pages at:

<https://www.arepairmanual.com/downloads/komatsu-hd785-5-rigid-dump-truck-service-repair-field-assembly-manualgen00027-03>

45. Drawing harness into inside of cabin.....	92
46. Connecting harnesses inside cabin (1/2) .....	93
47. Connecting harnesses inside cabin (2/2) .....	94
48. Connecting air conditioner hoses.....	96
49. Installing washer tank.....	97
50. Installing and connecting air horn.....	98
51. Wiring around cabin (1/2) .....	99
52. Wiring around cabin (2/2).....	100
53. Installation and connection of fuel filter (-40 °C specification for POLYUS) .....	102
54. Connecting right-hand front brake and radiator surge tank.....	104
55. Wiring for head lamp.....	106
56. Connecting air charge line .....	108
57. Air piping .....	110
58. Connecting left-hand front brake.....	112
59. Installing parts around hood.....	113
60. Checking for oil and cooling water.....	114
61. Filling gas into air conditioner .....	115
62. Bleeding air from brake .....	116
63. Removing parts from host cylinder after transportation.....	118
64. Equipping machine body .....	120
65. Installing grease tubes on hoist cylinder .....	122
66. Adjustment of body bottom mount.....	124
67. Adjustment of body positioner.....	126
68. Welding by determining dimensions with actual parts (body front mount) .....	128
69. Welding by determining dimensions with actual parts (swing prevention of body) .....	130
70. Welding by determining dimensions with actual parts (exhaust flange) .....	131
71. Installing body seating switch .....	132
72. Installing body accessories .....	133
73. Painting.....	134
74. Body stopper pin.....	136
75. Adjustment of suspension .....	137
76. Smoothing of floating seal.....	138

PROCEDURE FOR WELDING AND ASSEMBLING THREE SEPARATED BODY PARTS .....	139
---	-----

WORK PROCEDURES FOR TURNING OVER THE BODY .....	154
---	-----

2900 mm TRANSPORTATION POSTURE (IF EQUIPPED).....	157
---	-----

APPENDIX  
FIELD ASSEMBLY INSPECTION REPORT




Note 1: Install fittings such as bolts, washers, nuts, retaining plates, and pins on their specified locations. Those fittings was used to mount separated package during transportation.

Note 2: Install or weld the components specified in the delivery instruction in place, except those specified to make package separate.

**Front Axle, F/T, Chassis, HD785-5  
(common to all specifications)**

Remarks:  
A ... Single part of assembly  
L ... Single part of lot  
B ... Single part of bulk


Component				Description
No	Part name	Part No.	Quantity/ machine	
01	Chasis Ass'y	561-00-00000	1	For Japan.....without rack, with air cleaner Except Japan.....cleaner sepa- rated  (Note) Two spill lines added for HD785-5.
01	F. Axle Ass'y (R.H.)	561-27-R0000	1	
02	F. Axle Ass'y (L.H.)	561-27-L0000	1	
03	Fuel Tank Ass'y	561-04-6111	1	

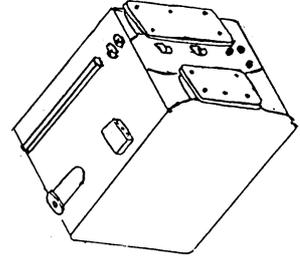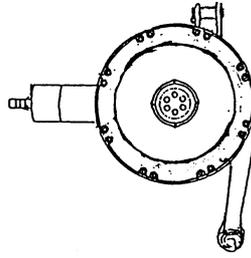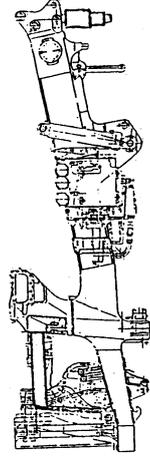

Note 1: Install fittings such as bolts, washers, nuts, retaining plates, and pins on their specified locations. Those fittings were used to mount separated package during transportation.  
 Note 2: Install or weld the components specified in the delivery instruction in place, except those specified to make package separate.

**Tire Assembly (including Tires), Rear Axle, HD785-5**

Remarks:  
 A ... Single part of assembly  
 L ... Single part of lot  
 B ... Single part of bulk

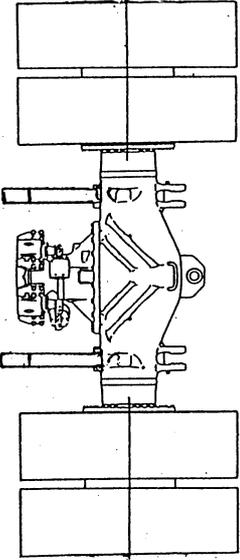Component		Part No.	Quantity/ machine	Classifi- cation	Description
No	Part name				
01	R. Axle Ass'y	561-22-60001	1	A	
02	Tire Ass'y (L.H.)	561-30-X0000	2	A	



Note 1: Install fittings such as bolts, washers, nuts, retaining plates, and pins on their specified locations. Those fittings was used to mount separated package during transportation.

Note 2: Install or weld the components specified in the delivery instruction in place, except those specified to make package separate.

**R.H. Platform, Cabin, HD785-5**

Remarks:  
 A ... Single part of assembly  
 L ... Single part of lot  
 B ... Single part of bulk


Component					Description
No	Part name	Part No.	Quantity/ machine	Classification	
01	Cabin A'ssy	561-54-67003	1	A	(Note) Improved cabin to make assembling easy for HD785-5
02	R.H. Platform Ass'y	561-54-61411	1	A	(Note) Standardization of pressure reducing valve for HD785-5

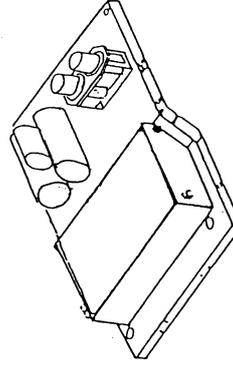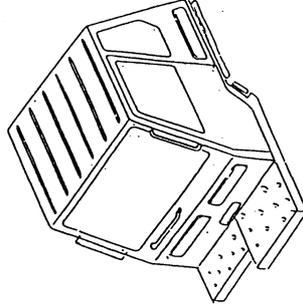

Note 1: Install fittings such as bolts, washers, nuts, retaining plates, and pins on their specified locations. Those fittings was used to mount separated package during transportation.  
 Note 2: Install or weld the components specified in the delivery instruction in place, except those specified to make package separate.

**Body Assembly (Including Body), HD785-5**

Remarks:  
 A ... Single part of assembly  
 L ... Single part of lot  
 B ... Single part of bulk

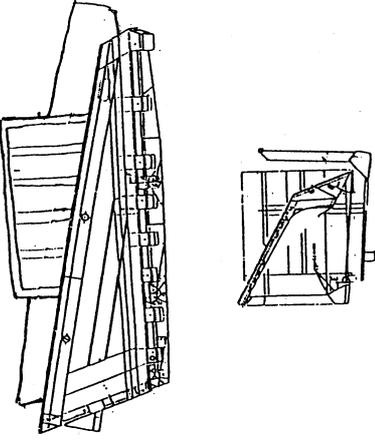Component				Description
No	Part name	Part No.	Quantity/ machine	
01	Body Ass'y	561-74-00000	1	

## LIST OF JIGS, TOOLS, AND CONSUMABLES FOR FIELD ASSEMBLING (1/3)

No.	Item	Specification	Q'ty	Remarks
1	Truck crane	25 tons	1	
2	Truck crane	45 tons	1	
3	Forklift truck	2.5 tons	1	
4	Gas cutting machine	No. A type Novac 112R	1	
5	Torch	1220N2	1	
6	Acetylene gas		1	For gas cutting machine
7	Oxygen gas	150kg/cm <sup>2</sup>	1	For gas cutting machine
8	Grinder (round)	FG50L-1	1	
9	Grindstone	SCW50 × 19 • 10	1	
10	Grinder	LISG-7S	1	For finishing
11	Grindstone	180φ × 6 × 22	3	
12	Dia. bar	CB7C105	1	
13	Dia. bar blade	6GH	1	
14	Semi-automatic welding machine	500A	3	
15	Hand shield	GP-1S	3	
16	Welding wire for semi-automatic welding machine	1.2 mm	80kg	
17	Chipper scaling hammer	FCM-20F	2	
18	Port power	300 mm for 10 tons	1	For adjustment of dump body deviation
19	Hydraulic jack	10 tons	1	For dump body
20	Hydraulic jack	5 tons	1	For dump body
21	Pin for body hinge	WJ-H46-74001-023	1	
22	Refractory cloth	1 m × 10 m	1	Protection when field welding
23	Spacer	ATH-465-027	3	Use when welding exhaust flange in field
24	Nitrogen gas injector	566-88-14003	1	
25	Nitrogen gas bottle	150 kg/cm <sup>2</sup>	1	Injection into suspension
26	Tire inflation gauge	No. 2252	1	
27	Electric nut runner	For 200 kgm NR-30T	1	For tire tightening
28	Extension	ATH-785-014	1	For tire tightening
29	Cord reel	For 200V	1	For electric nut runner
30	Generator	220V	1	
31	Grease pump gun	For 20kg can	1	
32	Grease	GL-2	5 kg	
33	Footstool	Three steps	1	
34	Footstool	Six steps	1	
35	Blue sheet	5 m × 10 m	5	Protection for equipment
36	Square timber	300 mm square, 1 m long	16	

## LIST OF JIGS, TOOLS, AND CONSUMABLES FOR FIELD ASSEMBLING (2/3)

No.	Item	Specification	Q'ty	Remarks
37	Oil jack	5L	1	For oil injection
38	Oil	Engine oil SAE10W	100ℓ	See Field Assembling Procedures.
39	Oil	Engine oil SAE30W	20ℓ	See Field Assembling Procedures.
40	Oil sump, washing can		2	
41	Drained oil can	Empty drum can	1	
42	Cloth		5kg	
43	Diesel fuel	No. 2 for summer Special No. 3 for winter (ASTM D975 No. 2)		For refilling fuel
44	Antifreeze		5ℓ	For adding in subtank (to change mixing ratio depending on local weather)
45	Air hose	6φ × 1m	1	For air bleeding
46	Three-bond #1521	Tube of 100 gram	1	Use for windshield glass
47	Washer liquid		3ℓ	
48	Sanding machine for scaling-off coating	914B	1	
49	Sandpaper	#80	100	
50	Sandpaper	#180	10	
51	Cup gun set	W87-20R2S	1	Use for coating
52	Brush		1	Use to repair coating.
53	Air compressor	Not less than 3.5 m <sup>3</sup> or 7 kg/cm <sup>2</sup>	1	
54	Air hose	With mouthpiece of φ12	5	For impact grinder
55	Impact wrench	UW-13SK	2	
56	Impact wrench	KW-3800P	1	
57	Impact wrench	UW-9SK	2	
58	Extension for impact wrench 38S	150 mm long	1	
59	Socket	1 inch × 41 mm	1	For tightening tire
60	Socket	1 inch × 36 mm	1	For tightening ROPS (option for overseas specification)
61	Socket	1 inch × 30 mm	1	For tightening support
62	Wrench	Width across flats: 36 mm	1	
63	Wrench	Width across flats: 41 mm	1	
64	Torque-wrench	1800QL	1	For propeller shaft
65	Torque-wrench	10000QLE	1	
66	Torque-wrench, open type	24 × 1200SP	1	
67	Torque-wrench, open type	36 × 2200SP	1	
68	Torque-wrench, box type	Width across flats: 27 mm, 4200CL	1	
69	Torque wrench, box type	Width across flats: 30 mm, 7000CL	1	
70	Convex	5m	2	

## LIST OF JIGS, TOOLS, AND CONSUMABLES FOR FIELD ASSEMBLING (3/3)

No.	Item	Specification	Q'ty	Remarks
71	Loctite	LT-2	1	
72	Vinyl tape		1	Use to bundle harnesses
73	Standard tool (ISO specification)	700SX	2	
74	Bar	1m	1	
75	Shino		1	For hole alignment
76	Sledgehammer	10 lb	1	
77	Shackle	BD10 for 500 kg	4	
78	Shackle	BC40 for 10 tons	4	For mounting body
79	Chain	ATH-465-042	1	Multi purpose
80	Nylon shoe ring	100 mm wide × 5 m	2	For mounting fuel tank
81	Nylon shoe ring	250 mm wide × 5 m	1	For mounting R.H. platform to cabin
82	Nylon shoe ring	60 mm wide × 3 m	2	For mounting support and small articles
83	Nylon shoe ring	100 mm wide × 12 m	1	For mounting front tires
84	Nylon shoe ring	30 mm wide × 2 m	3	For installing front axle
85	Nylon shoe ring	100 mm wide × 3 m	1	For installing front axle
86	Pin	φ60 × 250 mm	2	For slinging chassis, rear side
87	Jig for slinging body	ATH-785-006	4	For mounting body
88	Lever block	3/4 tons, LB008	3	For installing front axle
89	Lever block	2 tons, LB020	1	For installing front axle
90	Wire	7m 28φ	2	For slinging chassis
91	Wire	4m 28φ	2	For mounting body
92	Wire	5m 28φ	2	For installing body
	The following items may be substituted for No. 90 to 92. ATH-465-039 ATH-465-040 ATH-465-041		1 2 1	For mounting body For slinging chassis For slinging separated body

## LIST OF TOUCH-UP COATING ON BODY FOR OVERSEAS SPECIFICATIONS

No.	Part Name	Unit	Q'ty
1	Retane GP primer	4kg	1
2	Retane GO hardener	0.8kg	1
3	Retane GP thinner	16	1
4	AX Mightylacq G2KB type natural yellow	10kg	2
5	NAX Mightylacq G2KB type hardener	2kg	2
6	X Mightylacq G2 500 standard thinner	16kg	1
7	Acryliquid cloud gray	Spray can	1
8	Heat-resistance silver	Spray can	1

# SKETCHES OF SPECIAL TOOLS

Note: Komatsu cannot accept any responsibility for special tools manufactured according to these sketches.

## When welding by actually positioning exhaust flange on machine

HEAT TREATMENT PU-4	MATERIAL SS40
PART NAME SPACER	QTY 3
ATH-465-027	

## Body assembly lifting tool

HEAT TREATMENT —	MATERIAL —
PART NAME Body assembly lifting tool	QTY 1
ATH-465-039	


### Chassis lifting tool

HEAT TREATMENT	MATERIAL
—	—
PART NAME Chassis lifting tool	QTY 2
ATH-465-040	

### Dump body lifting tool

HEAT TREATMENT	MATERIAL
—	—
PART NAME ?? dump body lifting tool	QTY 1
ATH-465-041	



### Universal lifting tool

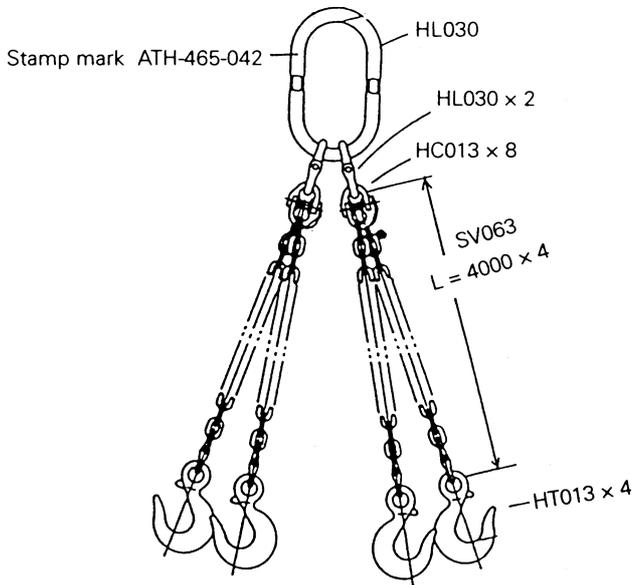

QL-4T

HEAT TREATMENT —	MATERIAL —
PART NAME Universal lifting tool	QTY 1
ATH-465-042	



### Body lifting pin

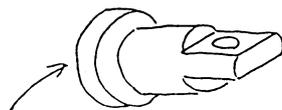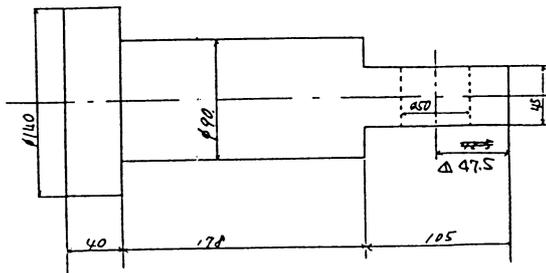

Stamp mark ATH-785-006

HEAT TREATMENT —	MATERIAL SS400
PART NAME Body lifting pin	QTY 4
ATH-785-006	

Chassis lifting tool

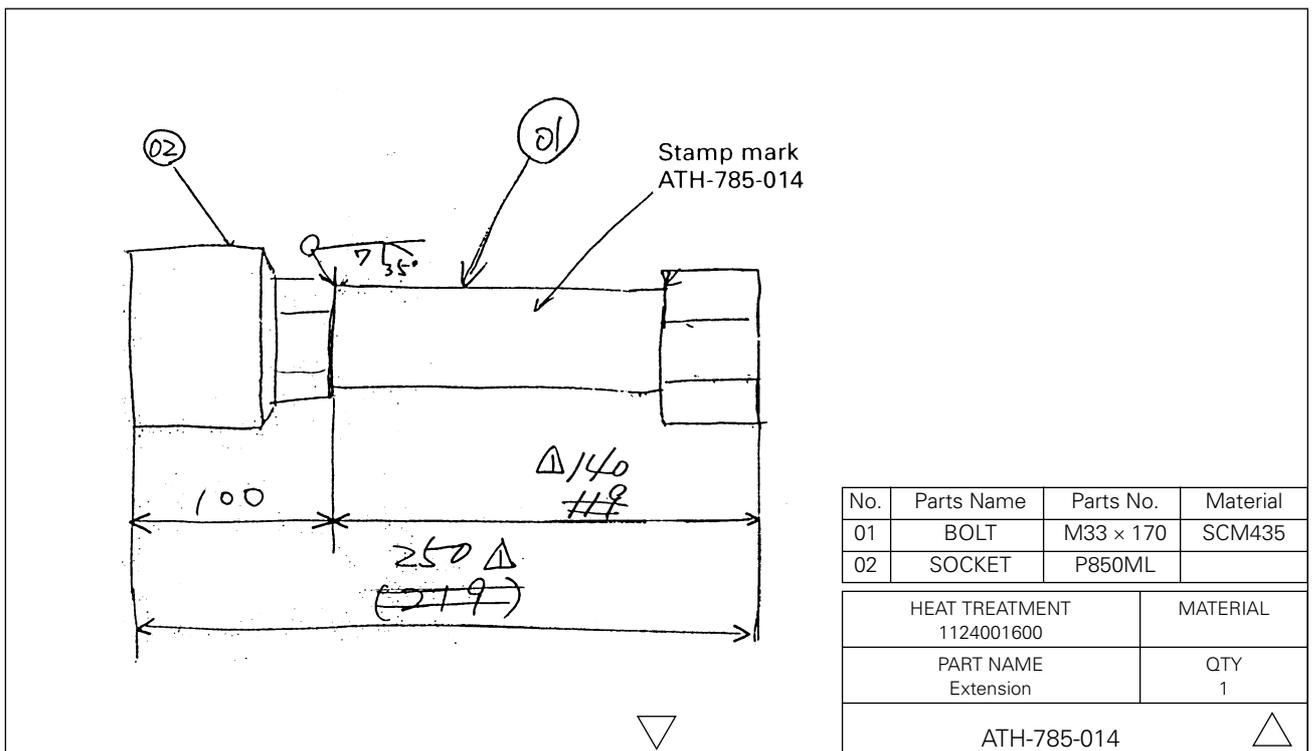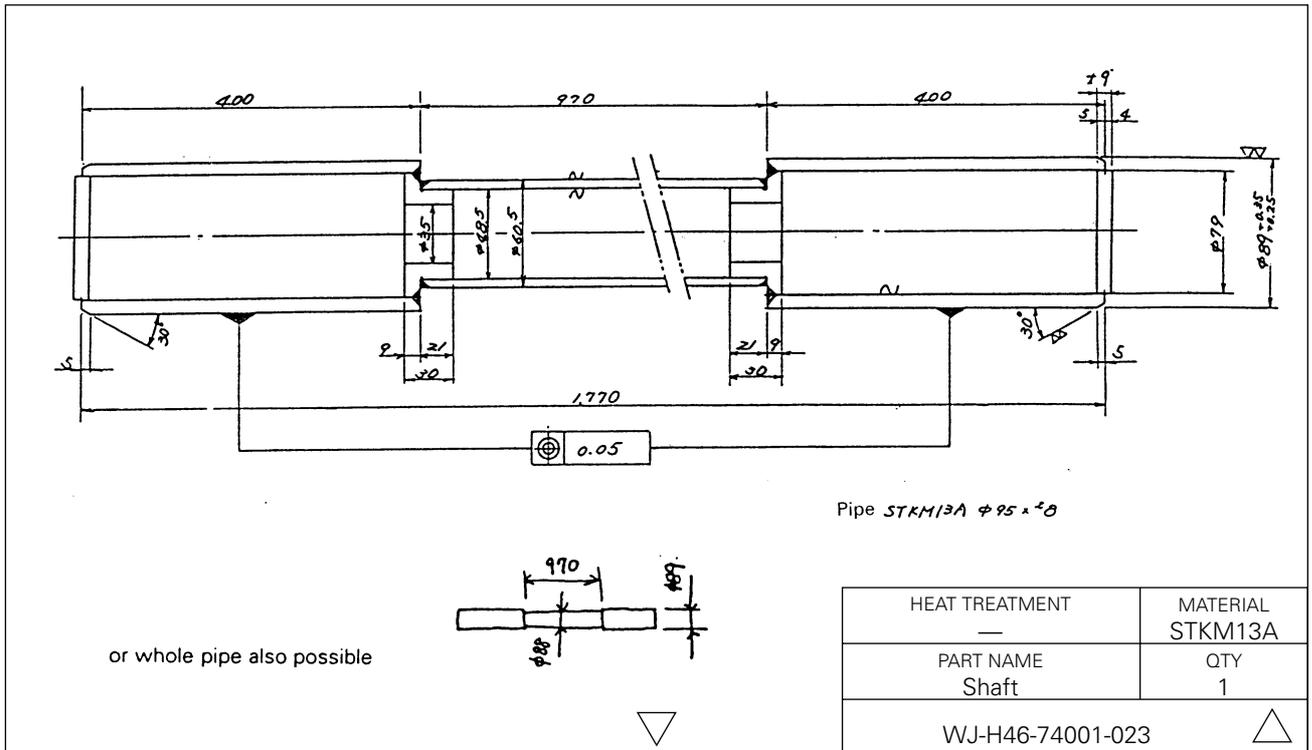

## MAN-HOURS, WORKERS NEEDED FOR LOCAL ASSEMBLY

									Remarks
		Assembly	Welding	Body mounting, connection of exhaust pipes	Inspection	Maintenance	Coating	Total	
HD465 series (day)		1.5	3	1	0.5	0.5	1	6	
	with lock (field welding)	1.5	5	1	0.5	0.5	2	9	
HD785 series (day)		2.5	3	1	1.5	0.5	1	7	
	lock (field welding)	2.5	5	1	1.5	0.5	2	10	
Man-power	Assembly (per day)	3		3		1		3	Total shows max. man/day.
	Welding (per day)		3	2				3	Total shows max. man/day.
	Inspection (per day)				1			1	
	Coating (per day)						2	2	
Equipment	45 ton crane (day)	1	1	1				3	1st day (when shipment received), 2nd day (when reversing), and when mounting body
	25 tone crane	1	1					2	1st day (when shipment received), 2nd day (when reversing)
	Working car with crane	1						1	Everyday
	Semi-automatic welding machine		3	2				3	Total shows max. welding work days.
	Gas cutting machine		1	1				1	Total shows max. welding work days.
	Generator		1	1				1	Total shows max. welding work days.
	Compressor		1	1		1	1	1	1 everyday

Note: This schedule is made on the assumption that work day is not rainy (for welding and coating.)  
If it is rainy, postpone the work.



# ASSEMBLING PROCEDURES ON SITE

## 1. LIFTING AND MOUNTING REAR AXLE ASSEMBLY

1. Remove rod retaining bolts for pins ① and ② on upper face of differential case and then withdraw pins. Hook sling at pins. Then, install pins in place again with sling.



Rear axle: 9.5 tons for single body.



Tire assembly: 1.5 ton per each tire.  
(Tire weight varies according to its specification.)



Rear axle assembly: approx. 16 tons

★ Remember to remove spacers.

2. Lower rear axle on ground. Place chocks ③ and rectangular timbers to mount parking disc plate assembly.

★ Select flat ground for assembling operation.

★ Adjust stack height of rectangular timbers ④ so that axle is placed horizontally.

3. Remove sling.

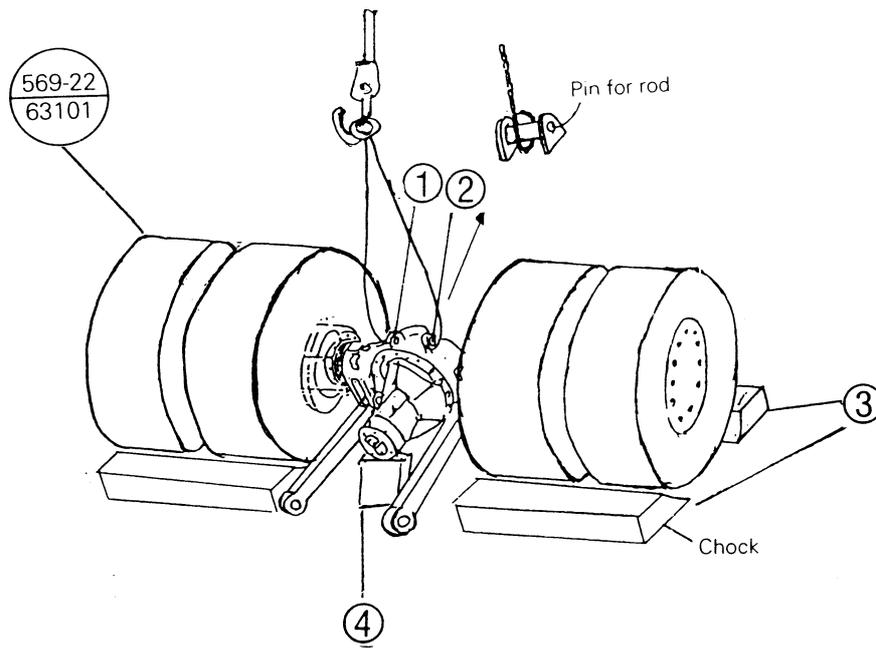


Photo shows sling operation by simultaneously using two cranes.

## 2. LIFTING CHASSIS ASSEMBLY

1. Use two cranes.



Chassis assembly: approx. 22 tons


For movable crane:

45 tons for front side

25 tons for rear side

2. Hook sling at chassis and then sling up chassis assembly.

- ★ Protect bumper on front side not to damage.
- ★ Be careful not to interfere assembly with grease tubes on rear side.

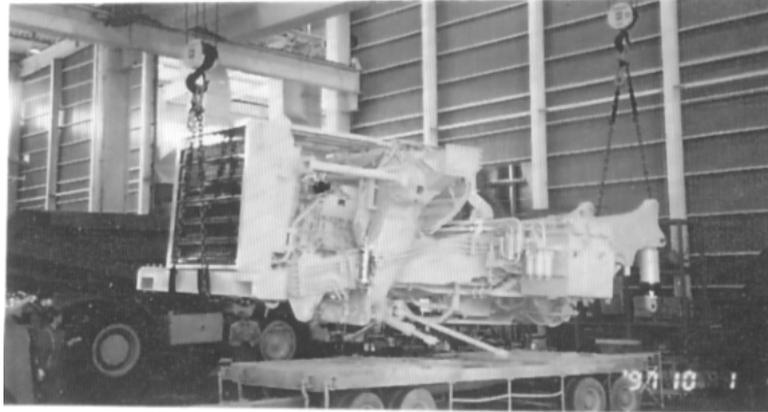

Chassis assembly is slung.



Use hook located under frame on front side.


Insert pin from inside.



Use holes for body stopper pin on rear side.

### 3. TRANSFERRING CHASSIS ASSEMBLY ONTO REAR AXLE ASSEMBLY

1. Lift rod (upper rod) before installing upper side of differential.
2. Move chassis assembly onto rear axle assembly.

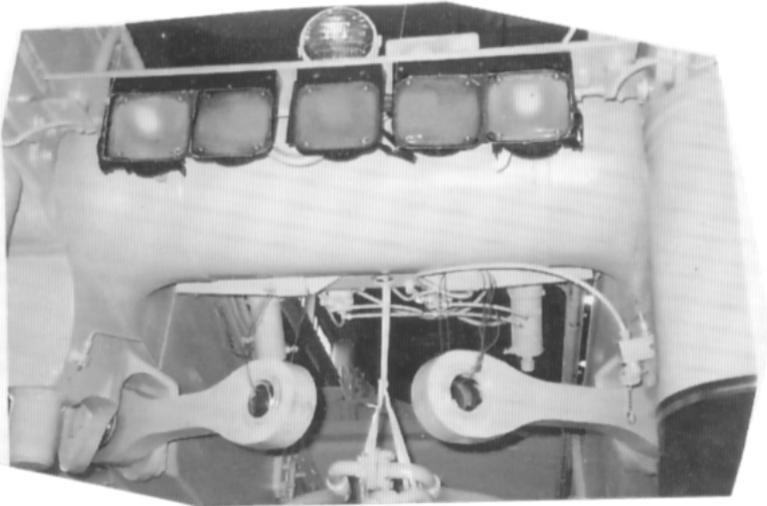

Upper rod lifted.




Chassis assembly is transferring onto rear axle.




#### 4. CONNECTING RODS TO REAR AXLE SUSPENSION

1. Connect rods ①, ②, and ③ in this order as shown in left-hand figure.
2. Align pin with hole, and temporarily move rod.
  - ★ When alignment, be careful not to be caught your finger.
3. Place spacer in rubber portion on spherical bushing.
  - ★ Force spacer carefully, but not so strong as to deform spacer.
4. Again, align pins with holes.
  - ★ When driving pins with hammer, be careful not to damage grease fittings.
5. Place lock bolts and washers.
  -  Tightening torque:
    - 157 to 196 Nm {16 to 20 kgm},
    - desired value: 177 Nm {18 kgm}
6. Supply grease in related lubrication points.

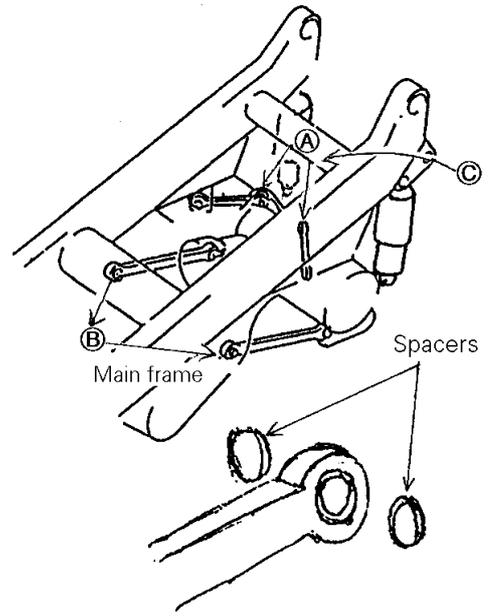

## 5. PLACING MOUNT FOR FRONT SIDE

1. Place rectangular timbers under vertical member up to 1 m in height.
  - ★ Stack timbers crosswise in parallel
2. Lower frame.

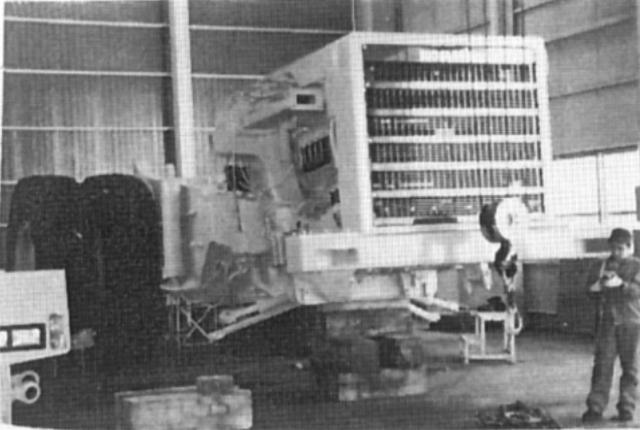

## 6. CONNECTING REAR AXLE AND PARKING BRAKE LINE

1. Remove blind parts (A) from elbow of relay valve on parking brake line.
  - ★ For machine with two-way brake system, only one hose is provided.

2. Connect hose from rear axle.

 Tightening torque:  
29 to 69 Nm {3.0 to 7.0 kg},  
desired value: 49 Nm {5.0 kg}

3. Remove blind parts (B) from connector of brake chamber on brake chamber line.

4. Connect hose from rear axle

 Tightening torque:  
108 to 167 Nm {11.0 to 17.0 kg},  
desired value: 137 Nm {14.0 kg}

- ★ Keep hoses from interfering with each other.

5. Place oil sump.



6. Remove blind parts (C) (total four on both sides) of cooling tube on rear axle.

7. Remove blind parts (D) (total two on upper and lower sides) of cooling tube on chassis side.

8. Connect two hoses on each left and right side respectively.



- ★ Keep hoses uncrossed.
- ★ Remember to mount spacer on lower right side.
- ★ Keep hoses from interfering with each other.

9. Clean any greasy surfaces.

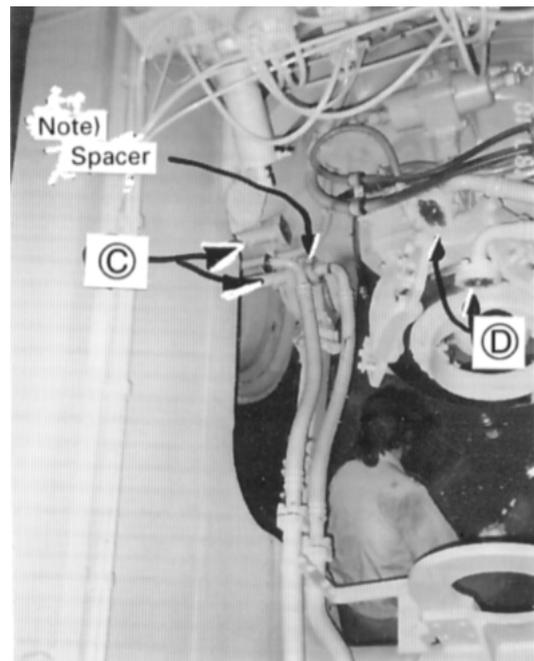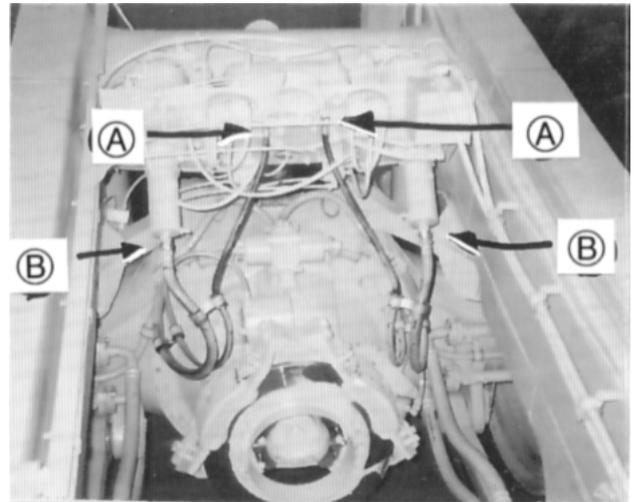

## 7. LIFTING FRONT AXLE ASSEMBLY

1. Remove pins and spacers from portions **A**, **B**, and **C** on chassis side.
  - ★ Dimensions of pin vary on each portion. Place pins near relevant locations to install pins in place with ease.
2. Lifting front axle as shown in photo.
  - ★ Adjust sling so that suspension cylinder becomes vertical against ground. Hook slings at suspension cylinder assembly and hub stud portion.

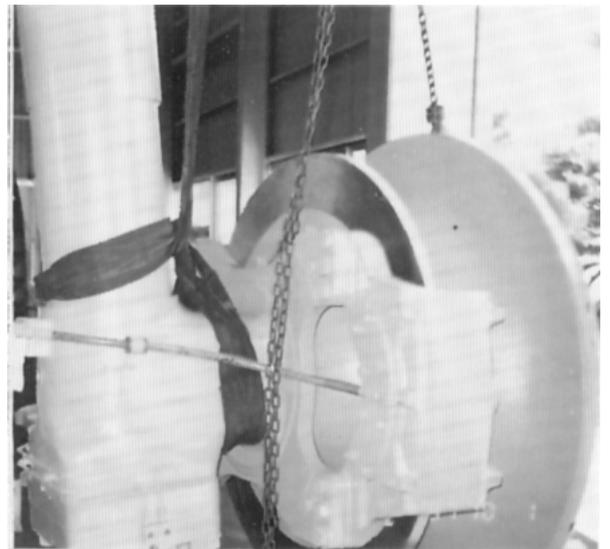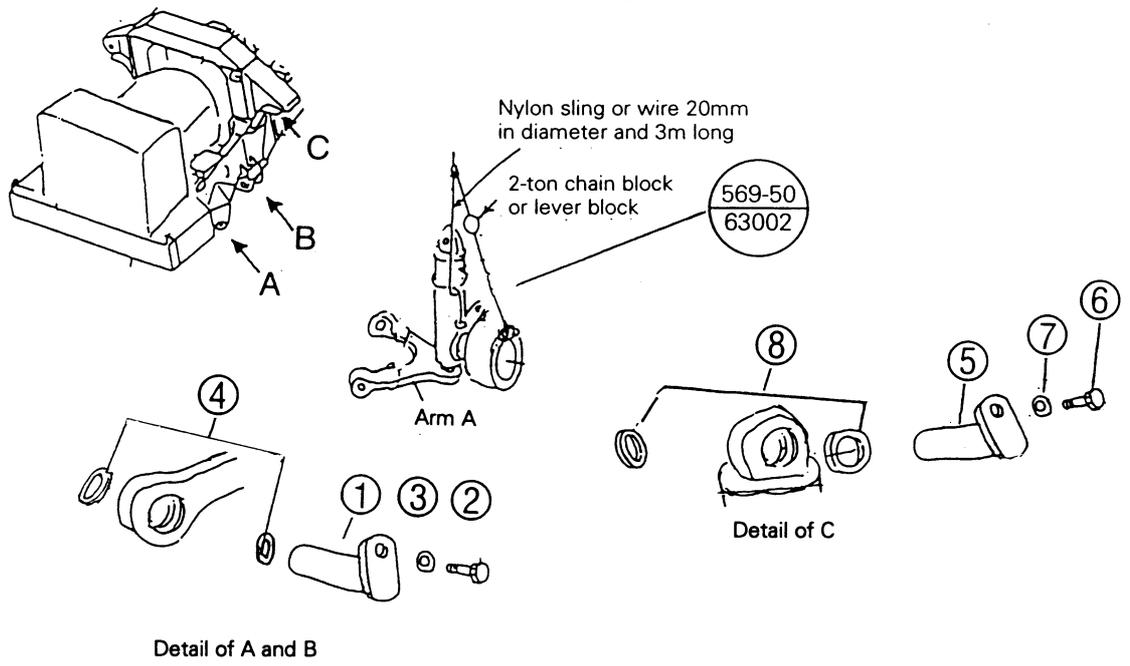

## 8. ASSEMBLING FRONT AXLE

1. While controlling crane and lever block, insert A-shaped arm into mounting portion on chassis and align pins with holes once. Then, lower A-shaped arm with lever block.

**Caution:** When making alignment, watch your fingers!

2. Insert 8 spacers previously removed into rubber cover on spherical bushing (four places on both sides) of A-shaped arm. Align pins with holes again using lever block.
  - ★ Check spacer for deviation.
  - ★ Check for O-ring on spherical bushing.

3. Set pins and install lock bolts.


 Tightening torque:  
157 to 196 Nm {16 to 20 kgm},  
desired value: 177 Nm {18 kgm}

5. Remove sling from A-shaped arm.
6. Install upper portion of suspension in the same way as for A-shaped arm while controlling crane.
7. Supply grease in related lubrication points.

/



Left side

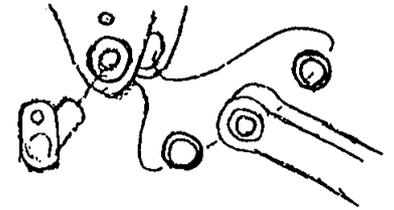

Right side