

Shop Manual

DUMP TRUCK

HD785-7

SERIAL NUMBERS 7001 and up

KOMATSU

SHOP MANUAL DUMP TRUCK

HD785-7

| | |
|----------------------|----------------------|
| Machine model | Serial number |
| HD785-7 | 7001 and up |

00 Index and foreword

Index

| | |
|----------------------------------|---|
| Composition of shop manual | 2 |
| Table of contents | 4 |

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tab No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

| Section Title | Form Number |
|---|---------------|
| Shop Manual, contents binder, binder label and tabs | SEN01274-20 |
| 00 Index and foreword | SEN01275-20 |
| Index | SEN01276-20 ● |
| Foreword and general information | SEN01277-04 |
| 01 Specification | SEN01278-04 |
| Specification and technical data | SEN01279-04 |
| 10 Structure, function and maintenance standard | SEN01280-10 |
| Engine and cooling system | SEN01281-01 |
| Power train, Part 1 | SEN01282-03 |
| Power train, Part 2 | SEN01283-01 |
| Steering system | SEN01284-01 |
| Brake system | SEN01285-04 |
| Undercarriage and frame | SEN01286-02 |
| Hydraulic system | SEN01287-03 |
| Work equipment (Body) | SEN04681-00 |
| Cab and its attachments | SEN01288-01 |
| Electrical system, Part 1 | SEN01289-02 |
| Electrical system, Part 2 | SEN01290-06 |
| Electrical system, Part 3 | SEN01291-05 |
| Electrical system, Part 4 | SEN01292-03 |
| 20 Standard value table | SEN01293-01 |
| Standard service value table | SEN01769-01 |
| 30 Testing and adjusting | SEN01294-08 |
| Testing and adjusting, Part 1 | SEN01770-03 |
| Testing and adjusting, Part 2 | SEN01771-05 |
| Testing and adjusting, Part 3 | SEN01772-04 |
| Testing and adjusting, Part 4 | SEN01773-05 |
| Testing and adjusting, Part 5 | SEN01774-04 |
| 40 Troubleshooting | SEN01295-06 |
| Failure code table and fuse locations | SEN01936-03 |

| | |
|---|---------------|
| General information on troubleshooting | SEN01937-03 |
| Troubleshooting by failure code, Part 1 | SEN01938-02 |
| Troubleshooting by failure code, Part 2 | SEN01939-04 |
| Troubleshooting by failure code, Part 3 | SEN01940-02 |
| Troubleshooting by failure code, Part 4 | SEN01941-02 |
| Troubleshooting by failure code, Part 5 | SEN01942-02 |
| Troubleshooting by failure code, Part 6 | SEN01943-03 |
| Troubleshooting by failure code, Part 7 | SEN01944-02 |
| Troubleshooting by failure code, Part 8 | SEN01945-02 |
| Troubleshooting by failure code, Part 9 | SEN01946-02 |
| Troubleshooting by failure code, Part 10 | SEN01947-02 |
| Troubleshooting of electrical system (E-mode) | SEN01948-04 |
| Troubleshooting of hydraulic and mechanical system (H-mode) | SEN01949-01 |
| Troubleshooting of engine (S-mode) | SEN01950-01 |
| | |
| 50 Disassembly and assembly | SEN01296-06 |
| General information on disassembly and assembly | SEN01951-04 |
| Engine and cooling system | SEN01952-03 |
| Power train, Part 1 | SEN01953-02 |
| Power train, Part 2 | SEN02106-03 |
| Steering system | SEN04641-00 |
| Brake system | SEN04642-01 |
| Undercarriage and frame | SEN04643-02 |
| Hydraulic system | SEN04644-00 |
| Body | SEN04645-00 |
| Cab and its attachments | SEN04646-00 |
| Electrical system | SEN04647-01 |
| | |
| 90 Diagrams and drawings | SEN01297-08 |
| Hydraulic diagrams and drawings | SEN01298-03 |
| Electrical diagrams and drawings | SEN01299-08 ● |

Table of contents

| | |
|---|-------------|
| 00 Index and foreword | |
| Index | SEN01276-20 |
| Composition of shop manual | 2 |
| Table of contents | 4 |
| Foreword and general information | SEN01277-04 |
| Safety notice | 2 |
| How to read the shop manual | 7 |
| Explanation of terms for maintenance standard | 9 |
| Handling of electric equipment and hydraulic component | 11 |
| Handling of connectors newly used for engines | 20 |
| How to read electric wire code | 23 |
| Precautions when carrying out operation | 26 |
| Method of disassembling and connecting push-pull type coupler | 29 |
| Standard tightening torque table | 32 |
| Conversion table | 36 |
| 01 Specification | |
| Specification and technical data | SEN01279-04 |
| Specification drawing | 2 |
| Specifications | 4 |
| Weight table | 7 |
| Fuel, coolant and lubricants | 8 |
| 10 Structure, function and maintenance standard | |
| Engine and cooling system | SEN01281-01 |
| Radiator, brake, torque converter oil cooler, aftercooler, steering, hoist oil cooler | 2 |
| Fuel system | 4 |
| Power train, Part 1 | SEN01282-03 |
| Power train skeleton | 2 |
| Output shaft | 4 |
| Drive shaft | 6 |
| Torque converter and transmission hydraulic piping | 8 |
| Brake cooling oil control valve (BCV) | 10 |
| Torque converter | 11 |
| Torque converter valve | 19 |
| Transmission | 22 |
| Transmission control valve | 50 |
| ECMV | 52 |
| Lubricating oil amount selector valve | 59 |
| Power train, Part 2 | SEN01283-01 |
| Axle | 2 |
| Differential | 4 |
| Final drive | 5 |
| Wheels | 6 |
| Steering system | SEN01284-01 |
| Steering column | 2 |
| Steering linkage | 3 |
| Brake system | SEN01285-04 |
| Brake piping | 2 |
| Brake valve | 4 |
| Secondary brake valve | 7 |
| Accumulator charge valve | 8 |

| | |
|--|-------------|
| Accumulator | 12 |
| Slack adjuster..... | 14 |
| Brake, parking brake | 18 |
| Parking brake solenoid..... | 24 |
| Retarder control valve | 25 |
| Exhaust brake | 26 |
| Undercarriage and frame | SEN01286-02 |
| Suspension | 2 |
| Suspension cylinder | 4 |
| Rear axle support..... | 12 |
| Hydraulic system | SEN01287-03 |
| Steering and hoist hydraulic piping | 2 |
| Steering, hoist filter (high pressure circuit) | 4 |
| Dump body control | 6 |
| Hydraulic tank | 8 |
| Steering valve..... | 9 |
| Crossover relief valve..... | 13 |
| Steering cylinder..... | 14 |
| Steering control valve..... | 15 |
| Hoist valve..... | 24 |
| Dump control valve (EPC valve) | 30 |
| Hydraulic pump | 34 |
| Work equipment (Body) | SEN04681-00 |
| Auto greasing system..... | 2 |
| Hoist cylinder..... | 13 |
| Cab and its attachments | SEN01288-01 |
| ROPS cab | 2 |
| Air conditioner | 3 |
| Rear view monitor | 12 |
| Controller related..... | 15 |
| Electrical system, Part 1 | SEN01289-02 |
| Machine monitor system | 2 |
| Electrical system, Part 2 | SEN01290-06 |
| Automatic shift control system | 2 |
| External power supply heater..... | 22 |
| Automatic emergency steering system | 24 |
| Automatic suspension system..... | 28 |
| Retarder control system | 31 |
| Battery disconnecter switch | 44 |
| Dump control lever | 48 |
| Electrical system, Part 3 | SEN01291-05 |
| VHMS controller related | 2 |
| ABS/ASR system | 28 |
| Altitude setting function | 46 |
| Speed limit function | 49 |
| Electrical system, Part 4 | SEN01292-03 |
| Sensors, switches | 2 |
| 20 Standard value table | |
| Standard service value table | SEN01769-01 |
| Standard value table for engine | 2 |
| Standard value table for machine..... | 4 |

| | |
|--|-------------|
| 30 Testing and adjusting | |
| Testing and adjusting, Part 1 | SEN01770-03 |
| Testing and adjusting tools list..... | 3 |
| Sketch of special tool | 8 |
| Testing engine speed | 9 |
| Testing air supply pressure (boost pressure) | 10 |
| Testing exhaust temperature | 12 |
| Testing exhaust gas color..... | 14 |
| Adjustment of valve clearance | 16 |
| Testing compression pressure..... | 18 |
| Testing blow-by pressure..... | 20 |
| Testing engine oil pressure..... | 21 |
| Handling of fuel system devices..... | 22 |
| Releasing residual pressure from fuel system | 22 |
| Testing fuel pressure | 23 |
| Reduced cylinder mode operation..... | 24 |
| No-injection cranking..... | 24 |
| Testing leakage-from pressure limiter and return rate from injector | 25 |
| Bleeding air from fuel circuit (Standard spec.)..... | 28 |
| Bleeding air from fuel circuit (Extra low-grade fuel spec.) | 30 |
| Testing the fuel circuit for leakage | 32 |
| Replacement and adjustment of fan belt..... | 33 |
| Testing and adjusting alternator belt tension | 34 |
| Testing and adjusting air conditioner compressor belt | 35 |
| Testing and adjusting, Part 2 | SEN01771-05 |
| Testing torque converter stall speed..... | 3 |
| Testing power train oil pressure..... | 5 |
| Adjusting transmission speed sensor..... | 13 |
| Testing and adjusting brake oil pressure | 14 |
| Testing of accumulator nitrogen gas pressure and procedure for charging accumulator with nitrogen gas | 17 |
| Testing brake performance..... | 22 |
| Bleeding air from brake circuit..... | 24 |
| Bleeding air from ASR circuit (if equipped) | 26 |
| Testing wear of front brake disc..... | 27 |
| Testing wear of rear brake disc | 28 |
| Method of releasing parking brake in an emergency | 29 |
| Testing and adjusting front suspension cylinder..... | 30 |
| Testing and adjusting rear suspension cylinder..... | 34 |
| Testing and adjusting front suspension cylinder (Automatic suspension specification) | 38 |
| Testing and adjusting hydraulic pressure in steering, hoist circuit..... | 39 |
| Testing and adjusting oil pressure in dump EPC circuit | 42 |
| Air bleeding from steering cylinder..... | 43 |
| Procedure for raising dump body in emergency..... | 44 |
| Adjusting body positioner sensor | 45 |
| Handling of high voltage circuit of engine controller | 47 |
| Adjusting transmission controller..... | 47 |
| Method for emergency escape at electrical system failure | 48 |
| Testing and adjusting, Part 3 | SEN01772-04 |
| Setting and adjusting of devices..... | 2 |
| Testing and adjusting, Part 4 | SEN01773-05 |
| Special functions of machine monitor (EMMS)..... | 2 |
| Testing and adjusting, Part 5 | SEN01774-04 |
| Opening ORBCOMM terminal..... | 2 |
| VHMS controller initial setting procedure | 4 |
| Precautions for replacing VHMS controller | 29 |

| | |
|--|-------------|
| Pm Clinic check sheet..... | 35 |
| Initial setting of payload meter | 39 |
| Setting of payload meter built in VHMS | 40 |
| 40 Troubleshooting | |
| Failure code table and fuse locations | SEN01936-03 |
| Failure codes table | 2 |
| Fuse locations | 18 |
| General information on troubleshooting | SEN01937-03 |
| Points to remember when troubleshooting..... | 2 |
| Sequence of events in troubleshooting | 3 |
| Check before troubleshooting | 4 |
| Classification and procedures for troubleshooting | 5 |
| Contents of troubleshooting table..... | 6 |
| Connection table for connector pin numbers | 8 |
| T-branch box and T-branch adapter table | 44 |
| Troubleshooting by failure code, Part 1 | SEN01938-02 |
| Failure code [1500L0] Dual engagement..... | 3 |
| Failure code [15B0NX] Transmission oil filter: Clogging | 4 |
| Failure code [15F0KM] R → F shifting abuse 1: Mistake in operation | 6 |
| Failure code [15F0MB] R → F shifting abuse 2: Mistake in operation | 6 |
| Failure code [15F7KM] Forward clutch disk abuse: Mistake in operation or setting | 7 |
| Failure code [15G0MW] R clutch: Slipping | 8 |
| Failure code [15G7KM] Reverse clutch disk abuse: Mistake in operation or setting | 10 |
| Failure code [15H0MW] Hi clutch: Slipping..... | 12 |
| Failure code [15J0MW] Lo clutch: Slipping | 14 |
| Failure code [15K0MW] 1st clutch: Slipping..... | 16 |
| Failure code [15L0MW] 2nd clutch: Slipping..... | 18 |
| Failure code [15M0MW] 3rd clutch: Slipping..... | 20 |
| Failure code [15N0MW] 4th clutch: Slipping | 22 |
| Failure code [15SBL1] R clutch solenoid: Fill signal is ON when command current is OFF | 24 |
| Failure code [15SBMA] R clutch solenoid: Malfunction | 26 |
| Failure code [15SCL1] Hi clutch solenoid: Fill signal is ON when command current is OFF | 28 |
| Failure code [15SCMA] Hi clutch solenoid: Malfunction | 31 |
| Failure code [15SDL1] Lo clutch solenoid: Fill signal is ON when command current is OFF | 32 |
| Failure code [15SDMA] Lo clutch solenoid: Malfunction | 35 |
| Failure code [15SEL1] 1st clutch solenoid: Fill signal is ON when command current is OFF..... | 36 |
| Failure code [15SEMA] 1st clutch solenoid: Malfunction | 39 |
| Troubleshooting by failure code, Part 2 | SEN01939-04 |
| Failure code [15SFL1] 2nd clutch solenoid: Fill signal is ON when command current is OFF.... | 4 |
| Failure code [15SFMA] 2nd clutch solenoid: Malfunction | 7 |
| Failure code [15SGL1] 3rd clutch solenoid: Fill signal is ON when command current is OFF | 8 |
| Failure code [15SGMA] 3rd clutch solenoid: Malfunction | 11 |
| Failure code [15SHL1] 4th clutch solenoid: Fill signal is ON when command current is OFF | 12 |
| Failure code [15SHMA] 4th clutch solenoid: Malfunction..... | 15 |
| Failure code [15SJMA] Lockup clutch solenoid: Malfunction | 16 |
| Failure code [2F00KM] Parking brake: Mistake in operation or setting..... | 18 |
| Failure code [2G42ZG] Accumulator: Oil pressure reduction (Front)..... | 21 |
| Failure code [2G43ZG] Accumulator: Oil pressure reduction (Rear) | 21 |
| Failure code [989A00] Engine over run prevention command signal: Operating..... | 22 |
| Failure code [989D00] Rear section tipping over alarm: Alarm is activated..... | 22 |
| Failure code [989X00] Overspeed alarm: Alarm operation | 23 |
| Failure code [989Y00] Overload alarm: Speed limit function operation | 23 |
| Failure code [A570NX] Engine oil filter: Clogging | 24 |
| Failure code [AA10NX] Air cleaner element: Clogging | 26 |
| Failure code [AB00L4] Alternator: Failure on battery charge circuit (R terminal signal is present and engine is stopped)..... | 28 |
| Failure code [AB00MA] Alternator: Malfunction | 30 |

| | |
|---|-------------|
| Failure code [AB00MB] Alternator: Failure on battery charge circuit (Absence of R terminal signal and detection error) | 32 |
| Failure code [B@BAZG] Abnormal lowering of engine oil pressure: Lowering of oil pressure ... | 34 |
| Failure code [B@BAZK] Engine oil: Level too low | 36 |
| Failure code [B@BCNS] Engine: Overheat..... | 38 |
| Failure code [B@BCZK] Lowering of radiator coolant: Lowering of level..... | 40 |
| Failure code [B@BFZK] Lowering of fuel level..... | 42 |
| Failure code [B@C6NS] Brake cooling oil: Overheating (Front) | 43 |
| Failure code [B@C7NS] Brake cooling oil: Overheating (Rear)..... | 44 |
| Failure code [B@CENS] Overheating of torque converter oil | 46 |
| Failure code [B@GAZK] Battery electrolyte level: Lowering of level..... | 47 |
| Failure code [B@JANS] Steering oil: Overheat..... | 48 |
| Troubleshooting by failure code, Part 3 | SEN01940-02 |
| Failure code [CA111] Engine controller (Left bank): Internal abnormality | 4 |
| Failure code [CB111] Engine controller (Right bank): Internal abnormality | 6 |
| Failure code [CA115] Abnormal engine Ne and Bkup speed sensors (Left bank): Abnormal speed sensor signal | 8 |
| Failure code [CB115] Abnormal engine Ne and Bkup speed sensors (Right bank): Abnormal speed sensor signal | 9 |
| Failure code [CA122] Charge pressure sensor too high (At left bank only): Excessively high voltage detected..... | 10 |
| Failure code [CA123] Charge pressure sensor too low (At left bank only): Excessively low voltage detected | 12 |
| Failure code [CA131] Throttle sensor high error (At left bank only) | 14 |
| Failure code [CA132] Throttle sensor low error (At left bank only)..... | 17 |
| Failure code [CA135] Oil pressure sensor too high (At left bank only): Excessively high voltage detected..... | 18 |
| Failure code [CA141] Oil pressure sensor too low (At left bank only): Excessively low voltage detected | 20 |
| Failure code [CA144] Coolant temperature sensor too high: Excessively high voltage detected..... | 22 |
| Failure code [CA145] Coolant temperature sensor too low (At left bank only): Excessively low voltage detected | 24 |
| Failure code [CA153] Charge temperature sensor too high (At left bank only): Excessively high voltage detected..... | 26 |
| Failure code [CA154] Charge temperature sensor too low (At left bank only): Excessively low voltage detected | 28 |
| Failure code [CA187] Sensor power supply (2) abnormally low level (Left bank): Low voltage detection | 30 |
| Failure code [CB187] Sensor power supply (2) abnormally low level (Right bank): Low voltage detection | 30 |
| Failure code [CA212] Engine oil temperature sensor abnormally high level (At left bank only): High voltage detection | 32 |
| Failure code [CA213] Engine oil temperature sensor abnormally low level (At left bank only): Low voltage detection | 34 |
| Failure code [CA221] Atmospheric pressure sensor too high (At left bank only): Excessively high voltage detected..... | 36 |
| Failure code [CA222] Atmospheric pressure sensor too low (At left bank only): Excessively low voltage detected | 38 |
| Failure code [CA227] Sensor power source (2) too high (Left bank): Excessively high voltage detected..... | 40 |
| Failure code [CB227] Sensor power supply (2) abnormally high level (Right bank): High voltage detection | 42 |
| Failure code [CA234] Engine over speed (At left bank only): Excessively high speed | 44 |
| Failure code [CA238] Abnormal power source for Ne speed sensor (At left bank only): Excessively low voltage detected | 46 |
| Failure code [CB238] Abnormal power source for Ne speed sensor (At right bank only): Excessively low voltage detected | 48 |

| | |
|--|-------------|
| Failure code [CA263] Fuel temperature sensor too high (Left bank): Excessively high voltage detected..... | 50 |
| Failure code [CB263] Fuel temperature sensor too high (Right bank): Excessively high voltage detected..... | 52 |
| Failure code [CA265] Fuel temperature sensor abnormally low level (Left bank): Low voltage detection..... | 54 |
| Failure code [CB265] Fuel temperature sensor abnormally low level (Right bank): Low voltage detection..... | 54 |
| Failure code [CA271] PCV1 short circuit (Left bank): Short circuit | 55 |
| Failure code [CB271] PCV1 short circuit (Right bank): Short circuit | 56 |
| Failure code [CA272] PCV1 disconnection (Left bank): Disconnection | 57 |
| Failure code [CB272] PCV1 disconnection (Right bank): Disconnection..... | 58 |
| Failure code [CA273] PCV2 short circuit (Left bank): Short circuit | 59 |
| Failure code [CB273] PCV2 short circuit (Right bank): Short circuit | 60 |
| Failure code [CA274] PCV2 disconnection (Left bank): Disconnection | 61 |
| Failure code [CB274] PCV2 disconnection (Right bank): Disconnection..... | 62 |
| Troubleshooting by failure code, Part 4 | SEN01941-02 |
| Failure code [CA322] Injector No. 1 (L/B No.1) system disconnection or short circuit (Left bank): Disconnection, short circuit..... | 4 |
| Failure code [CA323] Injector No. 5 (L/B No.5) system disconnection or short circuit (Left bank): Disconnection, short circuit..... | 6 |
| Failure code [CA324] Injector No. 3 (L/B No.3) system disconnection or short circuit (Left bank): Disconnection, short circuit..... | 8 |
| Failure code [CA325] Injector No. 6 (L/B No.6) system disconnection or short circuit (Left bank): Disconnection, short circuit..... | 10 |
| Failure code [CA331] Injector No. 2 (L/B No.2) system disconnection or short circuit (Left bank): Disconnection, short circuit..... | 12 |
| Failure code [CA332] Injector No. 4 (L/B No.4) system disconnection or short circuit (Left bank): Disconnection, short circuit..... | 14 |
| Failure code [CA342] Engine controller data mismatch (Left bank): Mismatch..... | 16 |
| Failure code [CB342] Engine controller data mismatch (Right bank): Mismatch | 16 |
| Failure code [CA351] Abnormal injector drive circuit (Left bank): Abnormal circuit | 18 |
| Failure code [CB351] Injector drive circuit abnormality (Right bank): Circuit abnormality | 20 |
| Failure code [CA352] Sensor power supply (1) abnormally low level (Left bank): Low voltage detection | 22 |
| Failure code [CB352] Sensor power supply (1) abnormally low level (Right bank): Low voltage detection | 22 |
| Failure code [CA386] Sensor power supply (1) abnormally high level (Left bank): High voltage detection | 24 |
| Failure code [CB386] Sensor power supply (1) abnormally high level (Right bank): High voltage detection | 26 |
| Failure code [CA431] Trouble in idle validation switch..... | 28 |
| Failure code [CA432] Idle validation action error | 32 |
| Failure code [CA441] Power supply voltage abnormally low level (Left bank): Low voltage detection | 33 |
| Failure code [CB441] Power supply voltage abnormally low level (Right bank): Low voltage detection | 33 |
| Failure code [CA442] Power supply voltage abnormally high level (Left bank): High voltage detection | 34 |
| Failure code [CB442] Power supply voltage abnormally high level (Right bank): High voltage detection | 34 |
| Failure code [CA449] Common rail abnormally high pressure (2) (Left bank): Abnormally high pressure occurrence | 35 |
| Failure code [CB449] Common rail abnormally high pressure (2) (Right bank): Abnormally high pressure occurrence | 35 |
| Failure code [CA451] Common rail pressure sensor too high (Left bank): Excessively high voltage detected..... | 36 |

| | |
|---|-------------|
| Failure code [CB451] Common rail pressure sensor abnormally high level (Right bank): High voltage detection | 38 |
| Failure code [CA452] Common rail pressure sensor abnormally low level (Left bank): Abnormally low voltage detection | 40 |
| Failure code [CB452] Common rail pressure sensor abnormally low level (Right bank): Abnormally low voltage detection | 40 |
| Failure code [CA553] Common rail pressure too high (1) (Left bank): Excessively high pressure detected | 41 |
| Failure code [CB553] Common rail pressure too high (1) (Right bank): Excessively high pressure detected | 42 |
| Failure code [CA554] In-range error in common rail pressure sensor (Left bank): In-range error..... | 43 |
| Failure code [CB554] In-range error in common rail pressure sensor (Right bank): In-range error..... | 43 |
| Failure code [CA559] Loss of pressure feed from supply pump (1) (Left bank): Loss of pressure feed detected | 44 |
| Failure code [CB559] Loss of pressure feed from supply pump (1) (Right bank): Loss of pressure feed detected | 48 |
| Failure code [CA689] Abnormal engine Ne speed sensor (Left bank): Abnormal signal | 52 |
| Failure code [CB689] Abnormal engine Ne speed sensor (Right bank): Abnormal signal..... | 54 |
| Failure code [CA691] Intake air temperature sensor abnormally high level (At left bank only): High voltage detection | 56 |
| Failure code [CA692] Intake air temperature sensor abnormally low level (At left bank only): Low voltage detection | 58 |
| Failure code [CA731] Abnormal engine Bkup speed sensor phase (Left bank): Abnormal phase..... | 59 |
| Failure code [CB731] Abnormal engine Bkup speed sensor phase (Right bank): Abnormal phase..... | 59 |
| Troubleshooting by failure code, Part 5 | SEN01942-02 |
| Failure code [CA757] Loss of all engine controller data (Left bank): Loss of all data..... | 3 |
| Failure code [CB757] Loss of all engine controller data (Right bank): Loss of all data | 3 |
| Failure code [CA778] Abnormal engine Bkup speed sensor (Left bank): Abnormal Bkup signal..... | 4 |
| Failure code [CB778] Engine Bkup speed sensor abnormality (Right bank): Bkup signal error..... | 6 |
| Failure code [CA781] Inter-multicontroller communication error (Left bank): Communication error | 8 |
| Failure code [CB781] Inter-multicontroller communication error (Right bank): Communication error | 10 |
| Failure code [CA1257] Multicontroller distinction wiring harness key error (Left bank): Distinction error..... | 11 |
| Failure code [CB1257] Multicontroller distinction wiring harness key error (Right bank): Distinction error..... | 12 |
| Failure code [CB1548] Injector #7 (R/B #1) system disconnection/short circuit (Right bank): Disconnection/Short circuit | 14 |
| Failure code [CB1549] Injector #8 (R/B #2) system disconnection/short circuit (Right bank): Disconnection/Short circuit | 16 |
| Failure code [CB1551] Injector #10 (R/B #4) system disconnection/short circuit (Right bank): Disconnection/Short circuit | 18 |
| Failure code [CB1552] Injector #11 (R/B #5) system disconnection/short circuit (Right bank): Disconnection/Short circuit | 20 |
| Failure code [CB1553] Injector #12 (R/B #6) system disconnection/short circuit (Right bank): Disconnection/Short circuit | 22 |
| Failure code [CB1622] Injector #9 (R/B #3) system disconnection/short circuit (Right bank): Disconnection/Short circuit | 24 |
| Failure code [CA1633] KOMNET abnormality (Left bank): Communication error | 26 |
| Failure code [CA2185] Throttle sensor supply voltage high error | 28 |
| Failure code [CA2186] Throttle sensor power supply low error | 30 |

| | |
|---|-------------|
| Failure code [CA2249] Loss of pressure feed from supply pump (2) (Left bank): | |
| Loss of pressure feed detected | 31 |
| Failure code [CB2249] Loss of pressure feed from supply pump (2) (Right bank): | |
| Loss of pressure feed detected | 31 |
| Failure code [CA2555] Intake heater relay voltage low error (Left bank) | 32 |
| Failure code [CA2556] Intake heater relay voltage high error (Left bank) | 34 |
| Troubleshooting by failure code, Part 6 | SEN01943-03 |
| Failure code [D180KA] Preheating relay output system: Disconnection | 3 |
| Failure code [D180KB] Preheating relay output system: Grounding fault | 4 |
| Failure code [D180KY] Preheating relay output system: Hot short circuit | 6 |
| Failure code [D19HKB] Stop lamp relay output system: Short circuit | 8 |
| Failure code [D1EFKA] Pre-lubrication start relay output system: Disconnection | 10 |
| Failure code [D1EFKB] Pre-lubrication start relay output system: Grounding fault | 12 |
| Failure code [D1EFKY] Pre-lubrication start relay output system: Hot short circuit | 14 |
| Failure code [DAF9KM] Wrong connection of connector | 16 |
| Failure code [DAFRKR] CAN communication error (Machine monitor): Communication error... | 17 |
| Failure code [DAQ0KK] Transmission controller direct power supply: | |
| Lowering of source voltage | 18 |
| Failure code [DAQ0KT] Transmission controller nonvolatile memory: | |
| Abnormality in controller | 20 |
| Failure code [DAQ2KK] Transmission controller solenoid power source: | |
| Power source voltage too low | 22 |
| Failure code [DAQ9KQ] Transmission controller: Disagreement of model selection | 24 |
| Failure code [DAQRKR] Abnormality in CAN communication (Transmission) | 25 |
| Failure code [DAQRMA] Transmission controller option setting: Malfunction | 30 |
| Failure code [DB10KT] Retarder controller nonvolatile memory: Abnormality in controller | 30 |
| Failure code [DB12KK] Retarder controller solenoid power source: | |
| Power source system trouble | 31 |
| Failure code [DB13KK] Retarder controller battery direct power source: | |
| Power source voltage too low | 33 |
| Failure code [DB19KQ] Disagreement of model selection (Retarder controller) | 35 |
| Failure code [DB1RKR] CAN communication (retarder controller): Communication disabled | 36 |
| Failure code [DB1RMA] Disagreement of option setting (Retarder controller) | 40 |
| Failure code [DB2RKR] CAN communication (engine controller): Communication disabled | 41 |
| Failure code [dB2RKR] CAN communication (engine controller): Communication disabled | 47 |
| Failure code [DBB0KK] (or VHMS_LED display: "n9" → "01") | |
| VHMS controller: Low source voltage (input) | 54 |
| Failure code [DBB0KQ] (or VHMS_LED display: "nF" → "11") | |
| (VHMS controller: Disagreement of model selection signals) | 56 |
| Failure code [DBB3KK] (or VHMS_LED display: "n9" → "05") | |
| VHMS controller battery power supply: Low source voltage (input) | 68 |
| Failure code [DBB5KP] (or VHMS_LED display: "n9" → "04") | |
| (VHMS controller 5 V power supply output: Low output voltage) | 60 |
| Failure code [DBB6KP] (or VHMS_LED display: "n9" → "02") | |
| (VHMS controller 24 V power supply output: Low output voltage) | 62 |
| Failure code [DBB7KP] (or VHMS_LED display: "n9" → "03") | |
| (VHMS controller 12 V power supply output: Low output voltage) | 64 |
| Failure code [DBBQKR] (or VHMS_LED display: "n8" → "02") VHMS controller | |
| CAN communication: Defective communication (Abnormality in target component system) .. | 65 |
| Failure code [DBBRKR] Abnormality in CAN communication (VHMS) | 65 |
| Failure code [DBC2KK] ABS controller solenoid power source: | |
| Power source system trouble | 66 |
| Failure code [DBC3KK] ABS controller battery direct power source: | |
| Power source voltage too low | 68 |
| Failure code [DBC9KQ] Disagreement of model selection (ABS controller) | 68 |
| Failure code [DBCRRKR] Abnormality in CAN communication (ABS) | 70 |
| Failure code [DBCRRMA] Disagreement of option setting (ABS controller) | 71 |
| Failure code [DBG2KK] Solenoid power supply: Low voltage | 75 |

| | |
|--|-------------|
| Failure code [DBG3KK] Battery direct power supply: Low voltage | 76 |
| Failure code [DBG9KQ] Model selection signal: Abnormal..... | 78 |
| Failure code [DDD7KX] Trouble in travel speed setting switch system: | |
| Out of input signal range..... | 80 |
| Failure code [DDD8KA] ARSC system switch system: Disconnection..... | 82 |
| Failure code [DDD8KB] ARSC system switch system: Short circuit | 84 |
| Failure code [DDD9KA] ABS system switch system: Disconnection | 86 |
| Failure code [DDD9KB] ABS system switch system: Short circuit..... | 88 |
| Failure code [DDDAKA] ASR system switch: Disconnection | 90 |
| Failure code [DDDAKB] ASR system switch: Short circuit..... | 92 |
| Failure code [DDE2KB] Engine oil pressure switch error: Grounding fault | 94 |
| Failure code [DDE2L6] Engine oil pressure switch error: Disconnection or hot short circuit | 96 |
| Failure code [DDP6L4] Service brake pressure switch trouble (Rear)..... | 98 |
| Failure code [DDTHKA] Hi clutch fill switch: Disconnection | 100 |
| Failure code [DDTJKA] Lo clutch fill switch: Disconnection | 102 |
| Failure code [DDTKKA] 1st clutch fill switch: Disconnection..... | 104 |
| Failure code [DDTLKA] 2nd clutch fill switch: Disconnection | 106 |
| Failure code [DDTMKA] 3rd clutch fill switch: Disconnection..... | 108 |
| Failure code [DDTNKA] R clutch fill switch: Disconnection..... | 110 |
| Failure code [DDTPKA] 4th clutch fill switch: Disconnection..... | 112 |
| Failure code [DF10KA] Gear shift lever: Disconnection | 114 |
| Failure code [DF10KB] Gear shift lever: Short circuit..... | 116 |
| Failure code [DGE5KX] or VHMS_LED display: "n4" → "01" | |
| (Atmospheric temperature sensor: Out of input signal range)..... | 120 |
| Failure code [DGF1KX] Transmission oil temperature sensor: Out of input signal range..... | 126 |
| Failure code [DGR2KB] Trouble in retarder oil temperature sensor (rear wheel) system | |
| (Disconnection and short circuit) | 128 |
| Failure code [DGR2KZ] Trouble in retarder oil temperature sensor (rear wheel) system | |
| (Ground fault)..... | 130 |
| Failure code [DGR4KB] Trouble in retarder oil temperature sensor (front wheel) system | |
| (Disconnection and short circuit) | 131 |
| Failure code [DGR4KZ] Trouble in retarder oil temperature sensor (front wheel) system | |
| (Ground fault)..... | 132 |
| Failure code [DGR6KX] Steering oil temperature sensor: Input signal out of range | 134 |
| Failure code [DGT1KX] Torque converter oil temperature sensor: Out of input signal range | 136 |
| Troubleshooting by failure code, Part 7 | SEN01944-02 |
| Failure code [DGT5KA] (or VHMS_LED display: "n3" → "12") | |
| Left bank exhaust temperature sensor system (Front): Disconnection | 3 |
| Failure code [dGT5KA] (or VHMS_LED display: "n3" → "22") | |
| Left bank exhaust temperature sensor system (Rear): Disconnection | 6 |
| Failure code [DGT5KB] (or VHMS_LED display: "n3" → "11") | |
| Left bank exhaust temperature sensor system (Front): Short circuit | 9 |
| Failure code [dGT5KB] (or VHMS_LED display: "n3" → "21") | |
| Left bank exhaust temperature sensor system (Rear): Short circuit..... | 12 |
| Failure code [DGT6KA] (or VHMS_LED display: "n3" → "24") | |
| Right bank exhaust temperature sensor system (Front): Disconnection | 15 |
| Failure code [dGT6KA] (or VHMS_LED display: "n3" → "26") | |
| Right bank exhaust temperature sensor system (Rear): Disconnection..... | 18 |
| Failure code [DGT6KB] (or VHMS_LED display: "n3" → "23") | |
| Right bank exhaust temperature sensor system (Front): Short circuit..... | 21 |
| Failure code [dGT6KB] (or VHMS_LED display: "n3" → "25") | |
| Right bank exhaust temperature sensor system (Rear): Short circuit | 24 |
| Failure code [DHE5KB] (or VHMS_LED display: "n3" → "32") | |
| (Blow-by pressure sensor: Short circuit)..... | 27 |
| Failure code [DHE5KY] (or VHMS_LED display: "n3" → "31") | |
| (Blow-by pressure sensor: Short circuit with power supply line)..... | 30 |
| Failure code [DHP4KY] (or VHMS_LED display: "n5" → "44") | |
| Suspension pressure sensor system: Short circuit (Right front)..... | 32 |

| | |
|--|-------------|
| Failure code [DHP4KZ] (or VHMS_LED display: "n5" → "43") | |
| Suspension pressure sensor system: Disconnection or ground fault (Right front)..... | 34 |
| Failure code [DHP5KY] (or VHMS_LED display: "n5" → "54") | |
| Suspension pressure sensor system: Short circuit (Left front) | 36 |
| Failure code [DHP5KZ] (or VHMS_LED display: "n5" → "53") | |
| Suspension pressure sensor system: Disconnection or ground fault (Left front) | 38 |
| Failure code [DHP6KA] Suspension pressure sensor system: Disconnection (Right rear) | 40 |
| Failure code [DHP6KX] Failure in suspension pressure sensor system trouble: | |
| Out of input signal range (Right rear) | 41 |
| Failure code [DHP6KY] (or VHMS_LED display: "n5" → "64") | |
| Suspension pressure sensor system: Short circuit (Right rear) | 44 |
| Failure code [DHP6KZ] (or VHMS_LED display: "n5" → "63") | |
| Suspension pressure sensor system: Disconnection or ground fault (Right rear)..... | 46 |
| Failure code [DHP7KA] Suspension pressure sensor system: Disconnection (Left rear)..... | 48 |
| Failure code [DHP7KX] Failure in suspension pressure sensor system: | |
| Out of input signal range (Left rear)..... | 49 |
| Failure code [DHP7KY] (or VHMS_LED display: "n5" → "74") | |
| Suspension pressure sensor system: Short circuit (Left rear)..... | 52 |
| Failure code [DHP7KZ] (or VHMS_LED display: "n5" → "73") | |
| Suspension pressure sensor system: Disconnection or ground fault (Left rear) | 54 |
| Failure code [DHT5KX] Torque converter oil pressure sensor: Out of input signal range..... | 56 |
| Failure code [DHT5L6] Torque converter oil pressure sensor: | |
| Disagreement of run and stop condition with signal | 58 |
| Failure code [DHU2KX] Front accumulator oil pressure sensor: Out of input signal range | 60 |
| Failure code [DHU3KX] Rear accumulator oil pressure sensor: Out of input signal range..... | 62 |
| Failure code [DHU6KX] Trouble in ABS control valve pressure sensor (Front right) | 64 |
| Failure code [DHU7KX] Trouble in ABS control valve pressure sensor (Front left) | 66 |
| Failure code [DHU8KX] Trouble in ABS control valve pressure sensor (Rear right)..... | 68 |
| Failure code [DHU9KX] Trouble in ABS control valve pressure sensor (Rear left) | 70 |
| Failure code [DJF1KA] Fuel level sensor: Disconnection | 72 |
| Failure code [DK30KX] Steering angle potentiometer: Trouble (Disconnection)..... | 74 |
| Failure code [DK51L5] Trouble in retarder lever potentiometer and RVS | 75 |
| Failure code [DK52KX] Failure in hoist lever potentiometer 1: Out of input signal range | 78 |
| Failure code [DK53L8] Failure in hoist lever potentiometer 2: Disagreement of analog signal... | 80 |
| Failure code [DK54KX] Body positioner sensor: Out of input signal range | 82 |
| Failure code [DKD0L6] Failure in steering angle speed sensor | 84 |
| Failure code [DKH0KX] Pitch angle sensor: Out of input signal range | 86 |
| Failure code [DKH1KX] (or VHMS_LED display: "n4" → "33") Pitch angle sensor: | |
| Abnormality..... | 88 |
| Failure code [DLF1KA] Transmission input shaft speed sensor: Disconnection..... | 90 |
| Failure code [DLF1LC] Transmission input shaft speed sensor: | |
| Disagreement of revolution speed signal | 92 |
| Failure code [DLF2KA] Transmission intermediate shaft speed sensor: Disconnection..... | 94 |
| Failure code [DLF2LC] Transmission intermediate shaft speed sensor: | |
| Disagreement of revolution speed signal | 96 |
| Troubleshooting by failure code, Part 8 | SEN01945-02 |
| Failure code [DLF6KA] Disconnection in wheel speed sensor (Front right)..... | 4 |
| Failure code [DLF6L3] Trouble in wheel speed sensor (Front right) | 6 |
| Failure code [DLF7KA] Disconnection in wheel speed sensor (Front left) | 8 |
| Failure code [DLF7L3] Trouble in wheel speed sensor (Front left) | 10 |
| Failure code [DLF8KA] Wheel speed sensor: Disconnection (Rear right) | 12 |
| Failure code [DLF8L3] Wheel speed sensor: Disconnection (Rear right) | 14 |
| Failure code [DLF8LC] Wheel speed sensor: Trouble (Rear right) | 16 |
| Failure code [DLF8MA] Wheel speed sensor: Disconnection (Rear right)..... | 16 |
| Failure code [DLF9KA] Wheel speed sensor: Disconnection (Rear left) | 18 |
| Failure code [DLF9L3] Wheel speed sensor: Trouble (Rear left) | 20 |
| Failure code [DLF9LC] Wheel speed sensor: Trouble (Rear left) | 22 |
| Failure code [DLF9MA] Wheel speed sensor: Disconnection (Rear left) | 22 |

| | |
|--|-------------|
| Failure code [DLT3KA] Transmission output shaft speed sensor: Disconnection | 24 |
| Failure code [DLT3LC] Transmission output shaft speed sensor: Disagreement of revolution speed signal..... | 26 |
| Failure code [DLT4KA] Transmission output shaft speed sensor: Disconnection | 28 |
| Failure code [DLT4MA] Transmission output shaft speed sensor: Disconnection | 30 |
| Failure code [DUM7KY] Pre-lubrication operation lamp output abnormality: Hot short circuit.... | 32 |
| Failure code [DUM7KZ] Pre-lubrication operation lamp output abnormality: Disconnection or grounding fault | 34 |
| Failure code [DV00KB] Buzzer output: Short circuit..... | 36 |
| Failure code [DW2AKA] Main pressure variable valve output: Disconnection | 38 |
| Failure code [DW2AKB] Main pressure variable valve output circuit: Ground fault | 40 |
| Failure code [DW2AKY] Main pressure variable valve output circuit: Hot short..... | 42 |
| Failure code [DW2AL1] Main pressure variable valve: Defective reset | 44 |
| Failure code [DW2ALH] Main pressure variable valve: Malfunction | 46 |
| Failure code [DW2BKA] Main oil level selector valve output: Disconnection | 47 |
| Failure code [DW2BKB] Main oil level selector valve output circuit: Ground fault | 48 |
| Failure code [DW2BKY] Main oil level selector valve output circuit: Hot short..... | 50 |
| Failure code [DW2BL1] Main oil level selector valve: Defective reset | 52 |
| Failure code [DW2BLH] Main oil level selector valve: Malfunction | 54 |
| Failure code [DW2CKA] Transmission lubrication variable valve output: Disconnection | 55 |
| Failure code [DW2CKB] Transmission lubrication variable valve output circuit: Ground fault | 56 |
| Failure code [DW2CKY] Transmission lubrication variable valve output circuit: Hot short..... | 58 |
| Failure code [DW2CL1] Transmission lubrication variable valve: Defective reset | 60 |
| Failure code [DW2CLH] Transmission lubrication variable valve: Malfunction | 62 |
| Failure code [DW35KZ] Failure in output system of auto suspension solenoid 1: Disconnection or short circuit..... | 64 |
| Failure code [DW36KZ] Failure in output system of auto suspension solenoid 2: Disconnection or short circuit..... | 66 |
| Failure code [DW71KZ] Exhaust brake output system trouble (Disconnection/Ground fault/Hot short) | 68 |
| Failure code [DW72KZ] Kick-out solenoid output system trouble: Disconnection or short circuit..... | 70 |
| Failure code [DW73KZ] Failure in hoist select valve output system: Disconnection or short circuit..... | 72 |
| Failure code [DW78KZ] Brake cooling valve (BCV) (rear wheel) output system trouble: Disconnection or short circuit..... | 74 |
| Failure code [DWNBK4] ASR shut-off valve: Trouble (Valve keeps operating)..... | 76 |
| Failure code [DWNBKA] ASR shut-off valve output circuit: Disconnection | 78 |
| Failure code [DWNBKB] ASR shut-off valve output circuit: Ground fault..... | 80 |
| Failure code [DWNBKY] ASR shut-off valve output circuit: Short circuit..... | 82 |
| Failure code [DWNBMA] ASR shut-off valve: Trouble (Valve does not operate) | 82 |
| Failure code [DWNDKZ] Trouble in ABS cut-off valve (Front) system | 84 |
| Failure code [DWNDMA] Defective ABS cut-off valve (Front)..... | 86 |
| Failure code [DWNEKZ] Trouble in ABS cut-off valve (Rear) system | 88 |
| Failure code [DWNEMA] Defective ABS cut-off valve (Rear) | 90 |
| Troubleshooting by failure code, Part 9 | SEN01946-02 |
| Failure code [DX11K4] Rear brake proportional pressure reducing solenoid valve: Out of control | 4 |
| Failure code [DX11KA] Rear brake proportional pressure reducing solenoid valve output circuit: Disconnection | 6 |
| Failure code [DX11KB] Rear brake proportional pressure reducing solenoid valve: Short circuit..... | 7 |
| Failure code [DX11KY] Rear brake proportional pressure reducing solenoid valve: Short circuit to power source line..... | 8 |
| Failure code [DX11MA] Rear brake proportional pressure reducing solenoid valve: Malfunction | 10 |
| Failure code [DX12K4] Front brake proportional pressure reducing solenoid valve: Out of control | 12 |

| | |
|--|-------------|
| Failure code [DX12KA] Front brake proportional pressure reducing solenoid valve output circuit: Disconnection | 14 |
| Failure code [DX12KB] Front brake proportional pressure reducing solenoid valve: Short circuit..... | 15 |
| Failure code [DX12KY] Front brake proportional pressure reducing solenoid valve: Short circuit to power source line | 16 |
| Failure code [DX12MA] Front brake proportional pressure reducing solenoid valve: Malfunction | 18 |
| Failure code [DX13KA] Output circuit of hoist EPC valve: Disconnection | 20 |
| Failure code [DX13KB] Output circuit of hoist EPC valve: Short circuit | 22 |
| Failure code [DX13KY] Output circuit of hoist EPC valve: Short circuit with power source line | 24 |
| Failure code [DX17K4] ASR proportional pressure reducing solenoid valve (right): Trouble (Valve keeps operating) | 26 |
| Failure code [DX17KA] ASR proportional pressure reducing solenoid valve (right) output circuit: Disconnection | 28 |
| Failure code [DX17KB] ASR proportional pressure reducing solenoid valve (right) output circuit: Ground fault..... | 30 |
| Failure code [DX17KY] ASR proportional pressure reducing solenoid valve (right) output circuit: Short circuit..... | 32 |
| Failure code [DX17MA] ASR proportional pressure reducing solenoid valve (right): Trouble (Valve does not operate) | 32 |
| Failure code [DX18K4] ASR proportional pressure reducing solenoid valve (left): Trouble (Valve keeps operating) | 34 |
| Failure code [DX18KA] ASR proportional pressure reducing solenoid valve (left) output circuit: Disconnection | 36 |
| Failure code [DX18KB] ASR proportional pressure reducing solenoid valve (left) output circuit: Ground fault..... | 38 |
| Failure code [DX18KY] ASR proportional pressure reducing solenoid valve (left) output circuit: Short circuit..... | 40 |
| Failure code [DX18MA] ASR proportional pressure reducing solenoid valve (left): Trouble (Valve does not operate) | 40 |
| Failure code [DX21KA] Disconnection in ABS control valve output circuit (Front right)..... | 41 |
| Failure code [DX21KB] Ground fault in ABS control valve output circuit (Front right) | 42 |
| Failure code [DX21KY] Hot short in ABS control valve output circuit (Front right)..... | 43 |
| Failure code [DX21MA] Defective ABS control valve (Front right) | 44 |
| Failure code [DX22KA] Disconnection in ABS control valve output circuit (Front left) | 45 |
| Failure code [DX22KB] Ground fault in ABS control valve output circuit (Front left)..... | 46 |
| Failure code [DX22KY] Hot short in ABS control valve output circuit (Front left) | 47 |
| Failure code [DX22MA] Defective ABS control valve (Front left) | 48 |
| Failure code [DX23KA] Disconnection in ABS control valve output circuit (Rear right) | 49 |
| Failure code [DX23KB] Ground fault in ABS control valve output circuit (Rear right) | 50 |
| Failure code [DX23KY] Hot short in ABS control valve output circuit (Rear right) | 51 |
| Failure code [DX23MA] Defective ABS control valve (Rear right) | 52 |
| Failure code [DX24KA] Disconnection in ABS control valve output circuit (Rear left)..... | 53 |
| Failure code [DX24KB] Ground fault in ABS control valve output circuit (Rear left) | 54 |
| Failure code [DX24KY] Hot short in ABS control valve output circuit (Rear left) | 55 |
| Failure code [DX24MA] Defective ABS control valve (Rear left)..... | 56 |
| Failure code [DX25MA] Defective ABS front wheel system control valve..... | 57 |
| Failure code [DX26MA] Defective ABS rear wheel system control valve | 57 |
| Troubleshooting by failure code, Part 10 | SEN01947-02 |
| Failure code [DXH1KA] Lockup clutch solenoid output circuit: Disconnection..... | 4 |
| Failure code [DXH1KB] Lock-up clutch solenoid output circuit: Short circuit | 6 |
| Failure code [DXH1KY] Lockup clutch solenoid output circuit: Short circuit to power source line | 8 |
| Failure code [DXH2KA] Hi clutch solenoid output circuit: Disconnection | 10 |
| Failure code [DXH2KB] Hi clutch solenoid output circuit: Short circuit | 12 |
| Failure code [DXH2KY] Hi clutch solenoid output circuit: Short circuit to power source line | 14 |
| Failure code [DXH3KA] Lo clutch solenoid output circuit: Disconnection | 18 |

| | |
|--|-------------|
| Failure code [DXH3KB] Lo clutch solenoid output circuit: Short circuit | 20 |
| Failure code [DXH3KY] Lo clutch solenoid output circuit: Short circuit in power source line | 22 |
| Failure code [DXH4KA] 1st clutch solenoid output circuit: Disconnection | 26 |
| Failure code [DXH4KB] 1st clutch solenoid output circuit: Short circuit | 28 |
| Failure code [DXH4KY] 1st clutch solenoid output circuit: Short circuit to power source line | 30 |
| Failure code [DXH5KA] 2nd clutch solenoid output circuit: Disconnection | 34 |
| Failure code [DXH5KB] 2nd clutch solenoid output circuit: Short circuit | 36 |
| Failure code [DXH5KY] 2nd clutch solenoid output circuit: Short circuit in power source line | 38 |
| Failure code [DXH6KA] 3rd clutch solenoid output circuit: Disconnection | 42 |
| Failure code [DXH6KB] 3rd clutch solenoid output circuit: Short circuit | 44 |
| Failure code [DXH6KY] 3rd clutch solenoid output circuit: Short circuit to power source line | 46 |
| Failure code [DXH7KA] R clutch solenoid output circuit: Disconnection | 50 |
| Failure code [DXH7KB] R clutch solenoid output circuit: Short circuit | 52 |
| Failure code [DXH7KY] R clutch solenoid output circuit: Short circuit to power source line | 54 |
| Failure code [DXHHKA] 4th clutch solenoid output circuit: Disconnection | 56 |
| Failure code [DXHHKB] 4th clutch solenoid output circuit: Short circuit | 58 |
| Failure code [DXHHKY] 4th clutch solenoid output circuit: Short circuit to power source line | 60 |
| Failure code [F@BBZL] (or VHMS_LED display: "n3" → "38") (Blow-by pressure: High error) | 63 |
| Failure code [F@BYNS] (or VHMS_LED display "n3" → "61") Left front exhaust temperature sensor (1): Exhaust temperature abnormal rise | 64 |
| Failure code [f@BYNS] (or VHMS_LED display "n3" → "71") Left rear exhaust temperature sensor (1): Exhaust temperature abnormal rise | 66 |
| Failure code [F@BZNS] (or VHMS_LED display "n3" → "81") Right front exhaust temperature sensor (1): Exhaust temperature abnormal rise | 68 |
| Failure code [f@BZNS] (or VHMS_LED display "n3" → "91") Right rear exhaust temperature sensor (1): Exhaust temperature abnormal rise | 70 |
| Failure code [F@BYNR] (or VHMS_LED display "n3" → "62") Left front exhaust temperature sensor (2): Exhaust temperature abnormal rise | 72 |
| Failure code [f@BYNR] (or VHMS_LED display "n3" → "72") Left rear exhaust temperature sensor (2): Exhaust temperature abnormal rise | 74 |
| Failure code [F@BZNR] (or VHMS_LED display "n3" → "82") Right front exhaust temperature sensor (2): Exhaust temperature abnormal rise | 76 |
| Failure code [f@BZNR] (or VHMS_LED display "n3" → "92") Right rear exhaust temperature sensor (2): Exhaust temperature abnormal rise | 78 |
| Troubleshooting of electrical system (E-mode) | SEN01948-04 |
| Before troubleshooting of electric system | 3 |
| Contents of troubleshooting table | 4 |
| E-1 Engine does not start | 5 |
| E-2 Automatic preheating does not operate | 8 |
| E-3 Machine monitor does not display all, when starting switch is turned ON | 12 |
| E-4 Machine monitor does not operate when starting switch is OFF | 14 |
| E-5 Alarm buzzer does not sound | 16 |
| E-6 Alarm buzzer does not stop sounding | 18 |
| E-7 Gauges of machine monitor, caution lamps or character display section do not display properly | 19 |
| E-8 A selection of the display in character display section cannot be changed | 21 |
| E-9 Power mode selecting function does not operate properly | 24 |
| E-10 AISS function does not operate properly | 25 |
| E-11 Seat belt caution lamp does not display properly | 26 |
| E-12 Turn signal lamp or turning lamp (hazard lamp) do not work properly | 27 |
| E-13 Night illumination (lighting) does not work properly | 30 |
| E-14 Emergency steering does not operate | 42 |
| E-15 Hoist lever does not operate normally | 48 |
| E-16 Power supply system (Air conditioner does not operate) | 50 |
| E-17 Compressor and refrigerant system (Air is not cooled) | 52 |
| E-18 Blower motor system (Air does not come out or air flow is abnormal) | 54 |
| Troubleshooting of hydraulic and mechanical system (H-mode) | SEN01949-01 |

| | |
|--|-------------|
| Contents of troubleshooting table..... | 3 |
| H-1 Machine does not start | 4 |
| H-2 Machine does not travel smoothly (hunting)..... | 6 |
| H-3 Lockup cannot be cancelled..... | 6 |
| H-4 Excessive shock when starting or shifting excessive | 7 |
| H-5 Transmission does not shift up..... | 8 |
| H-6 Machine lacks power or speed when traveling..... | 10 |
| H-7 Time lag is excessive when starting or shifting gear | 14 |
| H-8 Torque converter oil temperature is high | 16 |
| H-9 Torque converter oil pressure is low..... | 17 |
| H-10 Front brake is ineffective | 18 |
| H-11 Rear brake is ineffective | 19 |
| H-12 Steering wheel is heavy..... | 20 |
| H-13 Steering wheel does not work | 21 |
| H-14 Steering wheel vibrates | 22 |
| H-15 Dump body lifting speed is slow | 23 |
| H-16 Dump body does not work..... | 24 |
| H-17 Excessive hydraulic drift of dump body | 25 |
| Troubleshooting of engine (S-mode) | SEN01950-01 |
| Method of using troubleshooting charts | 3 |
| S-1 Starting performance is poor | 6 |
| S-2 Engine does not start..... | 7 |
| S-3 Engine does not pick up smoothly | 10 |
| S-4 Engine stops during operations | 11 |
| S-5 Engine does not rotate smoothly | 12 |
| S-6 Engine lacks output (or lacks power)..... | 13 |
| S-7 Exhaust smoke is black (incomplete combustion)..... | 15 |
| S-8 Oil consumption is excessive (or exhaust smoke is blue) | 16 |
| S-9 Oil becomes contaminated quickly | 17 |
| S-10 Fuel consumption is excessive..... | 18 |
| S-11 Oil is in coolant (or coolant spurts back or coolant level goes down) | 19 |
| S-12 Oil pressure drops | 20 |
| S-13 Oil level rises (Entry of coolant or fuel)..... | 21 |
| S-14 Coolant temperature becomes too high (overheating) | 22 |
| S-15 Abnormal noise is made | 23 |
| S-16 Vibration is excessive | 24 |
| | |
| 50 Disassembly and assembly | |
| General information on disassembly and assembly | SEN01951-04 |
| How to read this manual | 2 |
| Coating materials list..... | 4 |
| Special tool list | 7 |
| Sketches of special tools..... | 10 |
| Engine and cooling system | SEN01952-03 |
| Removal and installation of fuel supply pump assembly..... | 2 |
| Removal and installation of fuel injector assembly | 4 |
| Removal and installation of cylinder head assembly | 5 |
| Removal and installation of engine hood assembly | 18 |
| Removal and installation of radiator assembly..... | 19 |
| Removal and installation of engine assembly | 28 |
| Removal and installation of engine front oil seal..... | 33 |
| Removal and installation of engine rear oil seal..... | 36 |
| Power train, Part 1 | SEN01953-02 |
| Removal and installation of front drive shaft | 2 |
| Removal and installation of rear drive shaft | 4 |
| Removal and installation of output shaft assembly | 5 |
| Disassembly and assembly of damper assembly | 10 |

| | |
|--|-------------|
| Removal and installation of torque converter and transmission assembly..... | 12 |
| Disconnection and connection of torque converter assembly and transmission assembly..... | 15 |
| Disassembly and assembly of torque converter PTO assembly | 22 |
| Disassembly and assembly of transmission assembly | 35 |
| | |
| Power train, Part 2 | SEN02106-03 |
| Removal and installation of final drive carrier assembly | 2 |
| Disassembly and assembly of final drive carrier assembly | 4 |
| Removal and installation of differential assembly..... | 6 |
| Disassembly and assembly of differential assembly | 9 |
| Steering system | SEN04641-00 |
| Removal and installation of steering cylinder assembly | 2 |
| Disassembly and assembly of steering cylinder assembly | 3 |
| Removal and installation of steering valve assembly..... | 7 |
| Disassembly and assembly of steering valve assembly | 8 |
| Brake system | SEN04642-01 |
| Removal and installation of front wheel hub and brake assembly | 2 |
| Disassembly and assembly of front wheel hub and brake assembly | 6 |
| Removal and installation of final drive and rear brake assembly | 14 |
| Disassembly and assembly of final drive and rear brake assembly..... | 16 |
| Undercarriage and frame | SEN04643-02 |
| Removal and installation of front wheel assembly | 2 |
| Removal and installation of rear wheel assembly | 4 |
| Removal and installation of front suspension cylinder assembly | 6 |
| Disassembly and assembly of front suspension cylinder assembly (cylinder with buffer ring) ... | 8 |
| Removal and installation of king pin..... | 11 |
| Removal and installation of rear suspension cylinder assembly | 13 |
| Disassembly and assembly of rear suspension cylinder assembly..... | 14 |
| Hydraulic system | SEN04644-00 |
| Removal and installation of hoist valve assembly | 2 |
| Disassembly and assembly of hoist valve assembly..... | 3 |
| Disassembly and assembly of hoist cylinder assembly..... | 5 |
| Body | SEN04645-00 |
| Removal and installation of body assembly | 2 |
| Cab and its attachments | SEN04646-00 |
| Disassembly and assembly of operator's seat assembly | 2 |
| Removal and installation of air conditioner unit assembly..... | 12 |
| Electrical system | SEN04647-01 |
| Removal and installation of engine controller assembly | 2 |
| Removal and installation of transmission controller assembly | 2 |
| Removal and installation of retarder controller assembly..... | 3 |
| Removal and installation of ABS controller assembly | 3 |
| Removal and installation of VHMS controller assembly..... | 4 |
| | |
| 90 Diagrams and drawings | |
| Hydraulic diagrams and drawings | SEN01298-03 |
| Power train hydraulic circuit diagram | 3 |
| Steering and hoist hydraulic circuit diagram..... | 5 |
| Brake hydraulic circuit diagram | 7 |
| Brake hydraulic circuit diagram (ASR specification)..... | 9 |
| Brake hydraulic circuit diagram (ABS specification)..... | 11 |
| Brake hydraulic circuit diagram (ASR and ABS specification) | 13 |
| Electrical diagrams and drawings | SEN01299-08 |
| Electrical circuit diagram for outside cab (1/3) | 3 |
| Electrical circuit diagram for outside cab (2/3) | 5 |

| | |
|--|----|
| Electrical circuit diagram for outside cab (3/3) | 7 |
| Electrical circuit diagram for inside cab (1/3) | 9 |
| Electrical circuit diagram for inside cab (2/3) | 11 |
| Electrical circuit diagram for inside cab (3/3) | 13 |
| Electrical circuit diagram for VHMS (If equipped) | 15 |
| Electrical circuit diagram for ABS (Outside cab) (If equipped) | 17 |
| Electrical circuit diagram for ABS (Inside cab) (If equipped) | 19 |
| Electrical circuit diagram for ASR (If equipped) | 21 |
| Air conditioner electrical circuit diagram (If equipped) | 23 |
| Electrical circuit diagram for auto greasing (If equipped) | 25 |
| Electrical circuit diagram of external power supply heater | 26 |
| Connectors table and arrangement drawing | 27 |

HD785-7 Dump truck

Form No. SEN01276-20

© 2011 KOMATSU
All Rights Reserved
Printed in Japan 10-11

DUMP TRUCK

HD785-7

| Machine model | Serial number |
|----------------------|----------------------|
| HD785-7 | 7001 and up |

00 Index and foreword

Foreword and general information

| | |
|---|----|
| Safety notice | 2 |
| How to read the shop manual | 7 |
| Explanation of terms for maintenance standard | 9 |
| Handling of electric equipment and hydraulic component | 11 |
| Handling of connectors newly used for engines | 20 |
| How to read electric wire code | 23 |
| Precautions when carrying out operation | 26 |
| Method of disassembling and connecting push-pull type coupler | 29 |
| Standard tightening torque table | 32 |
| Conversion table | 36 |

Safety notice

(Rev. 2008/08)

Important safety notice

Proper service and repair are extremely important for safe machine operation. The service and repair techniques recommended by Komatsu and described in this manual are both effective and safe. Some of these techniques require the use of tools specially designed by Komatsu for the specific purpose.

To prevent injury to workers, the symbol  is used to mark safety precautions in this manual. The cautions accompanying these symbols should always be followed carefully. If any dangerous situation arises or may possibly arise, first consider safety, and take the necessary actions to deal with the situation.

1. General precautions

 **Mistakes in operation are extremely dangerous. Read the Operation and Maintenance Manual carefully before operating the machine. In addition, read this manual and understand its contents before starting the work.**

- 1) Before carrying out any greasing or repairs, read all the safety labels stuck to the machine. For the locations of the safety labels and detailed explanation of precautions, see the Operation and Maintenance Manual.
- 2) Decide a place in the repair workshop to keep tools and removed parts. Always keep the tools and parts in their correct places. Always keep the work area clean and make sure that there is no dirt, water, or oil on the floor. Smoke only in the areas provided for smoking. Never smoke while working.
- 3) When carrying out any operation, always wear safety shoes and helmet. Do not wear loose work clothes, or clothes with buttons missing.
 - Always wear safety glasses when hitting parts with a hammer.
 - Always wear safety glasses when grinding parts with a grinder, etc.
- 4) When carrying out any operation with 2 or more workers, always agree on the operating procedure before starting. Always inform your fellow workers before starting any step of the operation. Before starting work, hang UNDER REPAIR warning signs in the operator's compartment.
- 5) Only qualified workers must carry out work and operation which require license or qualification.
- 6) Keep all tools in good condition, learn the correct way to use them, and use the proper ones of them. Before starting work, thoroughly check the tools, machine, forklift, service car, etc.
- 7) If welding repairs are needed, always have a trained and experienced welder carry out the work. When carrying out welding work, always wear welding gloves, apron, shielding goggles, cap and other clothes suited for welding work.
- 8) Before starting work, warm up your body thoroughly to start work under good condition.
- 9) Avoid continuing work for long hours and take rests at proper intervals to keep your body in good condition. Take rests in specified safe places.

Safety points

| | |
|----|--|
| 1 | Good arrangement |
| 2 | Correct work clothes |
| 3 | Following work standard |
| 4 | Making and checking signs |
| 5 | Prohibition of operation and handling by unlicensed workers |
| 6 | Safety check before starting work |
| 7 | Wearing protective goggles (for cleaning or grinding work) |
| 8 | Wearing shielding goggles and protectors (for welding work) |
| 9 | Good physical condition and preparation |
| 10 | Precautions against work which you are not used to or you are used to too much |

2. Preparations for work

- 1) Before adding oil or making any repairs, park the machine on a hard and level ground, and apply the parking brake and block the wheels or tracks to prevent the machine from moving.
- 2) Before starting work, lower the work equipment (blade, ripper, bucket, etc.) to the ground. If this is not possible, insert the lock pin or use blocks to prevent the work equipment from falling. In addition, be sure to lock all the control levers and hang warning signs on them.
- 3) When disassembling or assembling, support the machine with blocks, jacks, or stands before starting work.
- 4) Remove all mud and oil from the steps or other places used to get on and off the machine. Always use the handrails, ladders or steps when getting on or off the machine. Never jump on or off the machine. If it is impossible to use the handrails, ladders or steps, use a stand to provide safe footing.

3. Precautions during work

- 1) Before disconnecting or removing components of the oil, water, or air circuits, first release the pressure completely from the circuit. When removing the oil filler cap, a drain plug, or an oil pressure pickup plug, loosen it slowly to prevent the oil from spurting out.
- 2) The coolant and oil in the circuits are hot when the engine is stopped, so be careful not to get scalded. Wait for the oil and coolant to cool before carrying out any work on the oil or water circuits.
- 3) Before starting work, stop the engine. When working on or around a rotating part, in particular, stop the engine. When checking the machine without stopping the engine (measuring oil pressure, revolving speed, temperature, etc.), take extreme care not to get rolled or caught in rotating parts or moving parts.
- 4) Before starting work, remove the leads from the battery. Always remove the lead from the negative (-) terminal first.
- 5) When raising a heavy component (heavier than 25 kg), use a hoist or crane. Before starting work, check that the slings (wire ropes, chains, and hooks) are free from damage. Always use slings which have ample capacity and install them to proper places. Operate the hoist or crane slowly to prevent the component from hitting any other part. Do not work with any part still raised by the hoist or crane.
- 6) When removing a cover which is under internal pressure or under pressure from a spring, always leave 2 bolts in diagonal positions. Loosen those bolts gradually and alternately to release the pressure, and then remove the cover.
- 7) When removing components, be careful not to break or damage the electrical wiring. Damaged wiring may cause electrical fires.
- 8) When removing piping, stop the fuel or oil from spilling out. If any fuel or oil drips onto the floor, wipe it up immediately. Fuel or oil on the floor can cause you to slip and can even start fires.
- 9) As a general rule, do not use gasoline to wash parts. Do not use it to clean electrical parts, in particular.
- 10) Be sure to assemble all parts again in their original places. Replace any damaged parts and parts which must not be reused with new parts. When installing hoses and wires, be sure that they will not be damaged by contact with other parts when the machine is operated.
- 11) When installing high pressure hoses, make sure that they are not twisted. Damaged tubes are dangerous, so be extremely careful when installing tubes for high pressure circuits. In addition, check that connecting parts are correctly installed.
- 12) When assembling or installing parts, always tighten them to the specified torques. When installing protective parts such as guards, or parts which vibrate violently or rotate at high speed, be particularly careful to check that they are installed correctly.
- 13) When aligning 2 holes, never insert your fingers or hand. Be careful not to get your fingers caught in a hole.
- 14) When measuring hydraulic pressure, check that the measuring tools are correctly assembled.
- 15) Take care when removing or installing the tracks of track-type machines. When removing the track, the track separates suddenly, so never let anyone stand at either end of the track.
- 16) If the engine is operated for a long time in a place which is not ventilated well, you may suffer from gas poisoning. Accordingly, open the windows and doors to ventilate well.

4. Precautions for sling work and making signs


1) Only one appointed worker must make signs and co-workers must communicate with each other frequently. The appointed sign maker must make specified signs clearly at a place where he is well seen from the operator's seat and where he can see the working condition easily. The sign maker must always stand in front of the load and guide the operator safely.

- Do not stand under the load.
- Do not step on the load.


- 2) Check the slings before starting sling work.
- 3) Keep putting on gloves during sling work. (Put on leather gloves, if available.)
- 4) Measure the weight of the load by the eye and check its center of gravity.
- 5) Use proper sling according to the weight of the load and method of slinging. If too thick wire ropes are used to sling a light load, the load may slip and fall.
- 6) Do not sling a load with 1 wire rope alone. If it is slung so, it may rotate and may slip out of the rope. Install 2 or more wire ropes symmetrically.

⚠ Slinging with 1 rope may cause turning of the load during hoisting, untwisting of the rope, or slipping of the rope from its original winding position on the load, which can result in a dangerous accident.

- 7) Limit the hanging angle to 60°, as a rule. Do not sling a heavy load with ropes forming a wide hanging angle from the hook. When hoisting a load with 2 or more ropes, the force subjected to each rope will increase with the hanging angle. The table below shows the variation of allowable load in kN {kg} when hoisting is made with 2 ropes, each of which is allowed to sling up to 9.8 kN {1,000 kg} vertically, at various hanging angles. When the 2 ropes sling a load vertically, up to 19.6 kN {2,000 kg} of total weight can be suspended. This weight is reduced to 9.8 kN {1,000 kg} when the 2 ropes make a hanging angle of 120°. If the 2 ropes sling a 19.6 kN {2,000 kg} load at a lifting angle of 150°, each of them is subjected to a force as large as 39.2 kN {4,000 kg}.

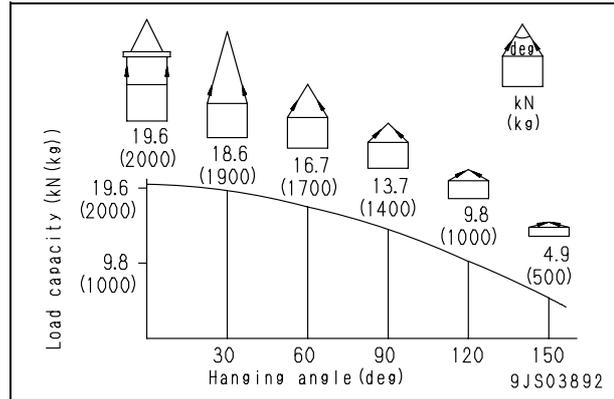

- 8) When installing wire ropes to an angular load, apply pads to protect the wire ropes. If the load is slippery, apply proper material to prevent the wire rope from slipping.
- 9) Use the specified eyebolts and fix wire ropes, chains, etc. to them with shackles, etc.
- 10) Apply wire ropes to the middle portion of the hook.
 - Slinging near the tip of the hook may cause the rope to slip off the hook during hoisting. The hook has the maximum strength at the middle portion.

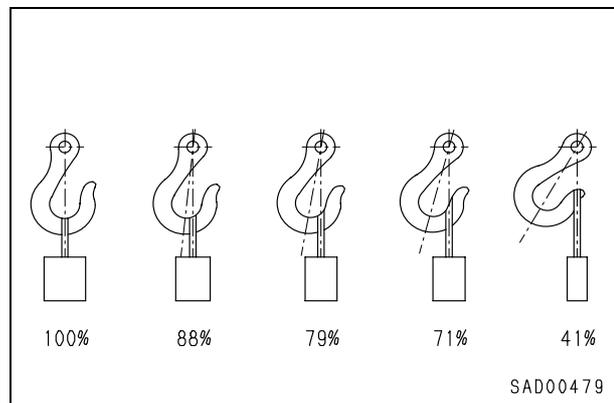

- 11) Do not use twisted or kinked wire ropes.
- 12) When lifting up a load, observe the following.
 - Wind in the crane slowly until wire ropes are stretched. When settling the wire ropes with the hand, do not grasp them but press them from above. If you grasp them, your fingers may be caught.
 - After the wire ropes are stretched, stop the crane and check the condition of the slung load, wire ropes, and pads.

- If the load is unstable or the wire rope or chains are twisted, lower the load and lift it up again.
 - Do not lift up the load slantingly.
- 13) When lifting down a load, observe the following.
- When lifting down a load, stop it temporarily at 30 cm above the floor, and then lower it slowly.
 - Check that the load is stable, and then remove the sling.
 - Remove kinks and dirt from the wire ropes and chains used for the sling work, and put them in the specified place.

5. Precautions for using mobile crane

- ★ Read the Operation and Maintenance Manual of the crane carefully in advance and operate the crane safely.

6. Precautions for using overhead hoist crane

▲ When raising a heavy part (heavier than 25 kg), use a hoist, etc. In Disassembly and assembly, the weight of a part heavier than 25 kg is indicated after the mark of .

- 1) Before starting work, inspect the wire ropes, brake, clutch, controller, rails, over wind stop device, electric shock prevention earth leakage breaker, crane collision prevention device, and power application warning lamp, and check safety.
- 2) Observe the signs for sling work.
- 3) Operate the hoist at a safe place.
- 4) Check the direction indicator plates (east, west, south, and north) and the directions of the control buttons without fail.
- 5) Do not sling a load slantingly. Do not move the crane while the slung load is swinging.
- 6) Do not raise or lower a load while the crane is moving longitudinally or laterally.
- 7) Do not drag a sling.
- 8) When lifting up a load, stop it just after it leaves the ground and check safety, and then lift it up.
- 9) Consider the travel route in advance and lift up a load to a safe height.
- 10) Place the control switch on a position where it will not be an obstacle to work and passage.
- 11) After operating the hoist, do not swing the control switch.
- 12) Remember the position of the main switch so that you can turn off the power immediately in an emergency.

- 13) If the hoist stops because of a power failure, turn the power switch OFF. When turning on a switch which was turned OFF by the electric shock prevention earth leakage breaker, check that the devices related to that switch are not in operation state.
- 14) If you find an obstacle around the hoist, stop the operation.
- 15) After finishing the work, stop the hoist at the specified position and raise the hook to at least 2 m above the floor. Do not leave the sling installed to the hook.

7. Selecting wire ropes

- 1) Select adequate ropes depending on the weight of parts to be hoisted, referring to the table below.

Wire ropes
(Standard "Z" twist ropes without galvanizing)
(JIS G3525, No. 6, Type 6X37-A)

| Nominal diameter of rope mm | Allowable load | |
|--------------------------------|----------------|------|
| | kN | ton |
| 10 | 8.8 | 0.9 |
| 12 | 12.7 | 1.3 |
| 14 | 17.3 | 1.7 |
| 16 | 22.6 | 2.3 |
| 18 | 28.6 | 2.9 |
| 20 | 35.3 | 3.6 |
| 25 | 55.3 | 5.6 |
| 30 | 79.6 | 8.1 |
| 40 | 141.6 | 14.4 |
| 50 | 221.6 | 22.6 |
| 60 | 318.3 | 32.4 |

- ★ The allowable load is one-sixth of the breaking strength of the rope used (Safety coefficient: 6).

8. Precautions for disconnecting and connecting hoses and tubes in air conditioner circuit

1) Disconnection

⚠ For the environment, the air conditioner of this machine uses the refrigerant (air conditioner gas: R134a) which has fewer factors of the depletion of the ozone layer. However, it does not mean that you may discharge the refrigerant into the atmosphere as it is. Be sure to recover the refrigerant when disconnecting the refrigerant gas circuit and then reuse it.

★ Ask professional traders for collecting and filling operation of refrigerant (R134a).

★ Never release the refrigerant (R134a) to the atmosphere.

⚠ If the refrigerant gas gets in your eyes or contacts your skin, you may lose your sight and your skin may be frozen. Accordingly, put on safety glasses, safety gloves and safety clothes when recovering or adding the refrigerant. Refrigerant gas must be recovered and added by a qualified person.

2) Connection


1] When installing the air conditioner circuit hoses and tubes, take care that dirt, dust, water, etc. will not enter them.

2] When connecting the air conditioner hoses and tubes, check that O-rings (1) are fitted to their joints.

3] Check that each O-ring is not damaged or deteriorated.

4] When connecting the refrigerant piping, apply compressor oil for refrigerant (R134a) (**DENSO: ND-OIL8, VALEO THERMAL SYSTEMS: ZXL100PG (equivalent to PAG46)**) to its O-rings.

★ Example of O-ring (Fitted to every joint of hoses and tubes)

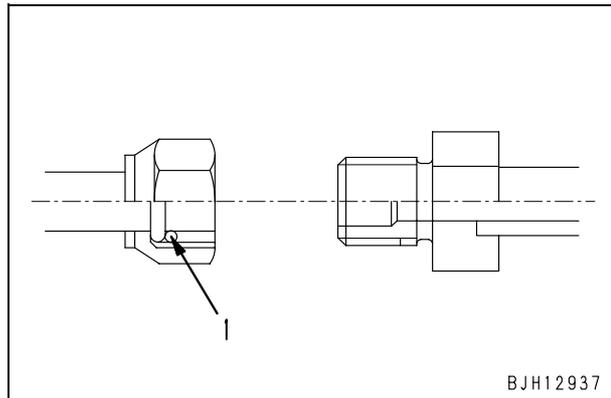

★ For tightening torque, see the precautions for installation in each section of "Disassembly and assembly".

How to read the shop manual

- Some attachments and optional parts in this shop manual may not be delivered to certain areas. If one of them is required, consult KOMATSU distributors.
- Materials and specifications are subject to change without notice.
- Shop manuals are divided into the “Chassis volume” and “Engine volume”. For the engine unit, see the engine volume of the engine model mounted on the machine.

1. Composition of shop manual

This shop manual contains the necessary technical information for services performed in a workshop. For ease of understanding, the manual is divided into the following sections.

00. Index and foreword

This section explains the shop manuals list, table of contents, safety, and basic information.

01. Specification

This section explains the specifications of the machine.

10. Structure, function and maintenance standard

This section explains the structure, function, and maintenance standard values of each component. The structure and function sub-section explains the structure and function of each component. It serves not only to give an understanding of the structure, but also serves as reference material for troubleshooting. The maintenance standard sub-section explains the criteria and remedies for disassembly and service.

20. Standard value table

This section explains the standard values for new machine and judgement criteria for testing, adjusting, and troubleshooting. This standard value table is used to check the standard values in testing and adjusting and to judge parts in troubleshooting.

30. Testing and adjusting

This section explains measuring instruments and measuring methods for testing and adjusting, and method of adjusting each part. The standard values and judgement criteria for testing and adjusting are explained in Testing and adjusting.

40. Troubleshooting

This section explains how to find out failed parts and how to repair them. The troubleshooting is divided by failure modes. The “S mode” of the troubleshooting related to the engine may be also explained in the Chassis volume and Engine volume. In this case, see the Chassis volume.

50. Disassembly and assembly

This section explains the special tools and procedures for removing, installing, disassembling, and assembling each component, as well as precautions for them. In addition, tightening torque and quantity and weight of coating material, oil, grease, and coolant necessary for the work are also explained.

90. Diagrams and drawings (chassis volume)/Repair and replacement of parts (engine volume)

- Chassis volume
This section gives hydraulic circuit diagrams and electrical circuit diagrams.
- Engine volume
This section explains the method of reproducing, repairing, and replacing parts.

2. Revision and distribution

Any additions, revisions, or other change of notices will be sent to KOMATSU distributors. Get the most up-to-date information before you start any work.

3. Filing method

File by the brochures in the correct order of the form number printed in the shop manual composition table.

- **Revised edition mark**

When a manual is revised, the ones and tens digits of the form number of each brochure is increased by 1. (Example: 00, 01, 02 ...)

- **Revisions**

Revised brochures are shown in the shop manual composition table.

4. Symbols

Important safety and quality portions are marked with the following symbols so that the shop manual will be used practically.

| Symbol | Item | Remarks |
|---|-------------------|---|
|  | Safety | Special safety precautions are necessary when performing work. |
|  | Caution | Special technical precautions or other precautions for preserving standards are necessary when performing work. |
|  | Weight | Weight of parts of component or parts. Caution necessary when selecting hoisting wire, or when working posture is important, etc. |
|  | Tightening torque | Places that require special attention for tightening torque during assembly. |
|  | Coat | Places to be coated with adhesives, etc. during assembly. |
|  | Oil, coolant | Places where oil, etc. must be added, and capacity. |
|  | Drain | Places where oil, etc. must be drained, and quantity to be drained. |

5. Units

In this shop manual, the units are indicated with International System of units (SI). For reference, conventionally used Gravitational System of units is indicated in parentheses { }.

Explanation of terms for maintenance standard

The maintenance standard chapter explains the criteria for replacing or reusing products and parts in the machine maintenance work. The following terms are used to explain the criteria.

1. Standard size and tolerance

- To be accurate, the finishing size of parts is a little different from one to another.
- To specify a finishing size of a part, a temporary standard size is set and an allowable difference from that size is indicated.
- The above size set temporarily is called the "standard size" and the range of difference from the standard size is called the "tolerance".
- The tolerance with the symbols of + or - is indicated on the right side of the standard size.

Example:

| Standard size | Tolerance |
|---------------|------------------|
| 120 | -0.022 -0.126 |

- ★ The tolerance may be indicated in the text and a table as [standard size (upper limit of tolerance/lower limit of tolerance)].
Example) 120 (-0.022/-0.126)
- Usually, the size of a hole and the size of the shaft to be fitted to that hole are indicated by the same standard size and different tolerances of the hole and shaft. The tightness of fit is decided by the tolerance.
- Indication of size of rotating shaft and hole and relationship drawing of them

Example:

| Standard size | Tolerance | |
|---------------|------------------|-------------|
| | Shaft | Hole |
| 60 | -0.030 -0.076 | +0.046 0 |

