

PREFACE

When it becomes necessary to replace parts on SUZUKI MOTORCYCLES, always use SUZUKI GENUINE PARTS which have passed a strict inspection which guarantees quality and performance.

This parts catalogue covers the list of all service parts for SUZUKI GSF1200K1, GSF1200SK1, GSF1200K2, GSF1200SK2.

INSTRUCTIONS FOR QUOTING THE CATALOGUE

1. DIMENSIONS

Dimensions of the parts in this catalogue are indicated in unit millimeters.

2. ABBREVIATIONS

Abbreviations used in this catalogue are as follows:

AR : As required	NT : Number of teeth
ASSY : Assembly	OPT : Optional
E. No. : Engine number	OS : Over size
F. No. : Frame number	STD : Standard
d : Diameter of material	T : Thickness
ID : Inside diameter	US : Under size
OD : Outside diameter	W : Width
L : Length	P28 : Canada specification
LH : Left hand side	P3 : Federal specification
RH : Right hand side	
~100045 : Up to F.No.100045	
100046~ : From F.No.100046	
12 x 34 x 5.6..... Figures in the description column	
show the dimensions of parts.	
ID OD T(or W,L)	

3. INNER PARTS OF ASSEMBLY

Part name with a dot (.) in front as shown in the description column indicates the component of the assembly also available individually.

4. MODIFICATION NOTICE

A parts bulletin will be sent to you on all occasions when changes in parts occur, including interchangeable modifications between new parts and old ones.

5. NOTE

5-1. There are some different parts from those of production models among spare parts for the administrative reasons and common use of them with other models.

5-2. In respect of rubber hoses and vinyl tubes, please be sure to use them by cutting off according to the length mentioned on parts catalogue or what is actually required on the vehicle.

5-3. Note that the drawings on the illustration page are for ready reference of spare parts number, not to be used as an assembly manual. When assembling, use "SUZUKI SERVICE MANUAL".

6. SERIAL FRAME NUMBER

GSF1200K1/SK1 : JS1GV77A 12100001~

GSF1200K2/SK2 : JS1GV77A 22100001~

AIR CLEANER.....	C-07	COWLING BODY.....	I-02	FRAME COVER.....	H-03	GASKET SET.....	B-02	OIL COOLER.....	C-08	SEAT TAIL COVER.....	J-03	TRANSMISSION.....	D-04
ALTERNATOR.....	E-03	COWLING INSTALLATIO	I-04	FRAME.....	G-02	GEAR SHIFTING.....	D-06	OIL PAN.....	B-09	SEAT.....	J-02	TURN SIGNAL LAMP...	F-04
BATTERY.....	E-06	CRANKCASE COVER...	B-08	FRONT BRAKE HOSE...	K-04	HANDLE LEVER.....	H-10	OIL PUMP.....	B-10	SECOND AIR.....	C-10	WIRING HARNESS.....	F-07
CAM CHAIN.....	C-03	CRANKCASE.....	B-06	FRONT CALIPERS.....	K-03	HANDLE SWITCH.....	F-09	OPTIONAL.....	L-07	SIGNAL GENERATOR...	E-04		
CAM SHAFT / VALVE...	C-02	CRANKSHAFT.....	B-11	FRONT DAMPER.....	J-07	HANDLEBAR.....	H-09	REAR CALIPER.....	L-05	SPEEDOMETER.....	E-07		
CANISTER.....	H-02	CYLINDER HEAD COVER	B-03	FRONT FENDER.....	H-07	HEADLAMP HOUSING...	H-08	REAR CUSHION LEVER	L-03	STAND.....	G-04		
CARBURETOR FITTING...	C-06	CYLINDER HEAD.....	B-04	FRONT MASTER CYLIND	K-05	HEADLAMP.....	F-02	REAR FENDER.....	H-11	STARTER CLUTCH.....	B-12		
CARBURETOR.....	C-04	CYLINDER.....	B-05	FRONT WHEEL.....	K-02	LABEL.....	I-05	REAR MASTER CYLIND	L-06	STARTING MOTOR.....	E-02		
CLUTCH MASTER CYLIN	K-07	ELECTRICAL.....	E-05	FUEL COCK.....	G-08	MANUAL BOX.....	H-05	REAR SWINGING ARM..	L-02	STEERING STEM.....	J-08		
CLUTCH.....	D-02	FOOTREST.....	G-05	FUEL TANK.....	G-07	MUFFLER.....	C-08	REAR WHEEL.....	L-04	TAIL LAMP.....	F-06		

COLOR CODE CHART

CODE	COLOR
BH4	T15,W05
DL2	0AT,YC6
DL3	YN9,YD8
DL4	0AT,24G,33J
DL5	0AT,24G,Y7H
DL6	0AT,1ZZ,YC6
DL7	YN7,0RN,YD8
GW2	0AT,17U,33J
GW3	YN7,24G,YD8
GW5	YN7,YD8
HG8	0AT,YL9,Y7H
M2R	0AT,33J
M2S	0AT,Y7H
T15	BLACK (LEATHER)
W05	BLACK (LEATHER)
YC6	CANDY VELVETY RED
YD8	SONIC SILVER METALLIC
YJX	SUZUKI DEEP BLUE (1LF)
YL9	NORSE BLUE METALLIC
YN7	HIRE LINE CHROME BLACK NO.2
YN9	LT50 BLUE GRADATION (TAPE)
YUX	SONIC SILVER METALLIC (YD8)
YWX	DARK SPACE BLUE
Y7H	DARK SPACE BLUE
Y7L	SATURN BLACK METALLIC
0AT	SILVER
0RN	ASPHALT SILVER(TAPE)
00B	MARBLE RIO ORANGE
019	BLACK
1ZZ	URBAN MIDIAM GRAY METALLIC
13L	BRIGHT SILVER METALLIC
17U	GRAY METALLIC
24G	LEGATO GOLD METALLIC
291	BLACK (SEMI-GLOSS)
33J	PEARL NOVELTY BLACK
35W	CHARCOAL GRAY METALLIC NO.2
5ES	OFF BLACK
5PK	BLACK

MILLIMETER → INCH CONVERSION CHART TABLEAU DE CONVERSION DE MILLIMETRES → POUCES

	0	1	2	3	4	5	6	7	8	9
00	.000	.039	.079	.118	.157	.197	.238	.278	.315	.354
10	.394	.433	.472	.512	.551	.591	.630	.669	.709	.748
20	.787	.827	.866	.906	.945	.984	1.024	1.063	1.102	1.142
30	1.181	1.220	1.260	1.299	1.339	1.378	1.417	1.457	1.496	1.535
40	1.575	1.614	1.654	1.693	1.732	1.772	1.811	1.850	1.890	1.929
50	1.969	2.008	2.047	2.087	2.126	2.165	2.205	2.244	2.283	2.323
60	2.362	2.402	2.441	2.480	2.520	2.559	2.598	2.638	2.677	2.717
70	2.756	2.795	2.835	2.874	2.913	2.953	2.992	3.031	3.071	3.110
80	3.150	3.189	3.228	3.268	3.307	3.346	3.386	3.425	3.465	3.504
90	3.543	3.583	3.622	3.661	3.701	3.740	3.780	3.819	3.858	3.898

How to read
 Mode de lecture

	0	1	2	3	4
00
10
20	0.906
30

23 millimeters equal 0.906 inch
 23 millimètres égalent 0.906 pouce

Contents are subject to change without notice or obligation.

Les matières traitées sont susceptibles d'être modifiées sans préavis obligation de notre part.

AIR CLEANER.....	C-07	COWLING BODY.....	I-02	FRAME COVER.....	H-03	GASKET SET.....	B-02	OIL COOLER.....	C-08	SEAT TAIL COVER.....	J-03	TRANSMISSION.....	D-04
ALTERNATOR.....	E-03	COWLING INSTALLATIO	I-04	FRAME.....	G-02	GEAR SHIFTING.....	D-06	OIL PAN.....	B-09	SEAT.....	J-02	TURN SIGNAL LAMP...	F-04
BATTERY.....	E-08	CRANKCASE COVER.....	B-08	FRONT BRAKE HOSE.....	K-04	HANDLE LEVER.....	H-10	OIL PUMP.....	B-10	SECOND AIR.....	C-10	WIRING HARNESS.....	F-07
CAM CHAIN.....	C-03	CRANKCASE.....	B-06	FRONT CALIPERS.....	K-03	HANDLE SWITCH.....	F-09	OPTIONAL.....	L-07	SIGNAL GENERATOR...	E-04		
CAM SHAFT / VALVE.....	C-02	CRANKSHAFT.....	B-11	FRONT DAMPER.....	J-07	HANDLEBAR.....	H-09	REAR CALIPER.....	L-05	SPEEDOMETER.....	E-07		
CANISTER.....	H-02	CYLINDER HEAD COVER	B-03	FRONT FENDER.....	H-07	HEADLAMP HOUSING...	H-06	REAR CUSHION LEVER.	L-03	STAND.....	G-04		
CARBURETOR FITTING.	C-06	CYLINDER HEAD.....	B-04	FRONT MASTER CYLIND	K-05	HEADLAMP.....	F-02	REAR FENDER.....	H-11	STARTER CLUTCH.....	B-12		
CARBURETOR.....	C-04	CYLINDER.....	B-05	FRONT WHEEL.....	K-02	LABEL.....	I-05	REAR MASTER CYLINDE	L-06	STARTING MOTOR.....	E-02		
CLUTCH MASTER CYLIN	K-07	ELECTRICAL.....	E-05	FUEL COCK.....	G-09	MANUAL BOX.....	H-05	REAR SWINGING ARM..	L-02	STEERING STEM.....	J-08		
CLUTCH.....	D-02	FOOTREST.....	G-05	FUEL TANK.....	G-07	MUFFLER.....	C-06	REAR WHEEL.....	L-04	TAIL LAMP.....	F-06		

**SUZUKI. 2001 SUZUKI SERVICE/OWNERS MANUAL
PART NUMBER LISTING
SERVICE PUBLICATIONS #1-REVISED 2/01**

- * USE THIS PART NUMBER LISTING TO ORDER SUZUKI SET-UP MANUALS, SERVICE MANUALS SERVICE MANUAL SUPPLEMENTS, AND OWNERS MANUALS.
- * PART NUMBER PREFIX SHOWN AT THE TOP OF EACH COLUMN INDICATES THE TYPE OF MANUAL.
(EXAMPLE: 99500 = SERVICE MANUAL, 99011 = OWNERS MANUAL, ETC.....)
- * CHECK FOOT-NOTES TO SEE IF A BINDER OR SUPPLEMENT IS REQUIRED FOR SERVICE MANUALS. FOOT-NOTES ALSO INDICATE OWNERS MANUAL GUIDELINES.
- * PRICES FOR ALL MANUALS ARE LISTED IN THE MOTORCYCLE PARTS PRICE GUIDE.

AIR CLEANER.....	C-07	COWLING BODY.....	I-02	FRAME COVER.....	H-03	GASKET SET.....	B-02	OIL COOLER.....	C-06	SEAT TAIL COVER.....	J-03	TRANSMISSION.....	D-04
ALTERNATOR.....	E-03	COWLING INSTALLATIO	I-04	FRAME.....	G-02	GEAR SHIFTING.....	D-06	OIL PAN.....	B-09	SEAT.....	J-02	TURN SIGNAL LAMP.....	F-04
BATTERY.....	E-06	CRANKCASE COVER.....	B-08	FRONT BRAKE HOSE.....	K-04	HANDLE LEVER.....	H-10	OIL PUMP.....	B-10	SECOND AIR.....	C-10	WIRING HARNESS.....	F-07
CAM CHAIN.....	C-03	CRANKCASE.....	B-06	FRONT CALIPERS.....	K-03	HANDLE SWITCH.....	F-09	OPTIONAL.....	L-07	SIGNAL GENERATOR.....	E-04		
CAM SHAFT / VALVE.....	C-02	CRANKSHAFT.....	B-11	FRONT DAMPER.....	J-07	HANDLEBAR.....	H-09	REAR CALIPER.....	L-05	SPEEDOMETER.....	E-07		
CANISTER.....	H-02	CYLINDER HEAD COVER	B-03	FRONT FENDER.....	H-07	HEADLAMP HOUSING.....	H-06	REAR CUSHION LEVER.....	L-03	STAND.....	G-04		
CARBURETOR FITTING.....	C-06	CYLINDER HEAD.....	B-04	FRONT MASTER CYLIND	K-05	HEADLAMP.....	F-02	REAR FENDER.....	H-11	STARTER CLUTCH.....	B-12		
CARBURETOR.....	C-04	CYLINDER.....	B-05	FRONT WHEEL.....	K-02	LABEL.....	I-05	REAR MASTER CYLIND	L-06	STARTING MOTOR.....	E-02		
CLUTCH MASTER CYLIN	K-07	ELECTRICAL.....	E-05	FUEL COCK.....	G-09	MANUAL BOX.....	H-05	REAR SWINGING ARM.....	L-02	STEERING STEM.....	J-08		
CLUTCH.....	D-02	FOOTREST.....	G-05	FUEL TANK.....	G-07	MUFFLER.....	C-06	REAR WHEEL.....	L-04	TAIL LAMP.....	F-06		

2001 SERVICE PUBLICATIONS

Model / Year K1 / 2001	Set-Up / PDI Guide	Service Manual	Service Manual Supplement	Owner's Manual	Owner's Manual Supplement	Owner's Maintenance Manual
JR50K1	99505-J1100-03E	99500-20180-01E ⁴	N/A	99011-04447-03A	N/A	N/A
JR80K1	99505-01091-03E	99500-20200-01E ⁴	N/A	99011-03460-03A	N/A	N/A
DR200SEK1	99505-01040-03E	99500-41102-03E ⁴	N/A	99011-42A53-03A	N/A	N/A
DR-Z250K1	99505-01171-03E	99500-42150-03E ⁴	N/A	99011-13E60-03A	N/A	N/A
DR-Z400K1	99505-01180-03E	99500-43021-03E ⁴	N/A	99011-29F51-03A	N/A	N/A
DR-Z400EK1	99505-01180-03E	99500-43021-03E ⁴	N/A	99011-29F51-03A	N/A	N/A
DR-Z400SK1	99505-01200-03E	99500-43030-03E ⁴	N/A	99011-29F61-03A	N/A	N/A
DR650SEK1	99505-01030-03E	99500-46033-03E ⁴	N/A	99011-32E55-03A	N/A	N/A
RM80K1	99505-01139-03E					99011-02B76-03A ⁵
RM125K1	99505-01111-03E					99011-36F50-03A ⁵
RM250K1	99505-01051-03E					99011-37F50-03A ⁵
GS500K1	99505-01131-03E	99500-34069-03E ⁴	N/A	99011-01062-03A	N/A	N/A
GSF600SK1	99505-01170-03E	99500-36100-03E ⁴	N/A	99011-31F51-03A	N/A	N/A
GSF1200K1	99505-01011-03E	99500-39200-03E ⁴	99501-39320-03E	99011-31F60-03A	N/A	N/A
GSF1200SK1	99505-01021-03E	99500-39200-03E ⁴	N/A	99011-31F60-03A	N/A	N/A
GSX600FK1	99505-01158-03E	99500-35072-03E ⁴	N/A	99011-19C63-03A	N/A	N/A
GSX750FK1	99505-01188-03E	99500-37103-03E ⁴	N/A	99011-20C63-03A	N/A	N/A
SV650K1	99505-01249-03E	99500-36091-03E ⁴	N/A	99011-20F52-03A	N/A	N/A
SV650SK1	99505-01101-03E	99500-36091-03E ⁴	99501-36090-03E	99011-20F52-03A	N/A	N/A
TL1000SK1	99505-01148-03E	99500-39144-03E ⁴	N/A	99011-02F55-03A	N/A	N/A
GSX1300RK1	99505-01289-03E	99500-39181-03E ⁴	99501-39310-03E	99011-24F52-03A	N/A	N/A
GSX-R600K1	99505-01121-03E	99500-35080-03E ⁴	N/A	99011-39F50-03A	N/A	N/A
GSX-R750K1	99505-01210-03E	99500-37111-03E ⁴	N/A	99011-33F50-03A	N/A	N/A
GSX-R1000K1	99505-01151-03E	99500-39210-01E ⁵	N/A	99011-40F50-03A	N/A	N/A
TL1000RK1	99505-01258-03E	99500-39170-03E ⁴	N/A	99011-02F63-03A	N/A	N/A
GZ250K1	99505-01109-03E	99500-32101-03E ⁴	N/A	99011-13F52-03A	N/A	N/A
LS650PK1	99505-01038-03E	99500-36081-03E ⁴	N/A	99011-24C56-03A	N/A	N/A
VS800GLK1	99505-01010-03E	99500-38026-03E ⁴	N/A	99011-39A60-03A	N/A	N/A
VS1400GLPK1	99505-01000-03E	99500-39152-03E ⁴	N/A	99011-38B64-03A	N/A	N/A
VZ800K1	99505-01090-03E	99500-38033-03E ⁴	N/A	99011-48E54-03A	N/A	N/A
VL800K1	99505-01161-03E	99500-38040-01E ⁵	N/A	99011-41F50-03A	N/A	N/A
VL1500K1	99505-01178-03E	99500-39162-03E ⁴	N/A	99011-10F53-03A	N/A	N/A
LT80K1	99505-01009-03E	99500-20191-01E ⁵	N/A	99011-43F50-03A	N/A	N/A
LT-F180K1	99505-01129-03E	99500-41111-01E ⁵	N/A	99011-02C71-03A	N/A	N/A
LT-F250K1	99505-01071-03E	99500-42142-01E ⁵	N/A	99011-20B72-03A	N/A	N/A
LT-F250FK1	99505-01071-03E	99500-42142-01E ⁵	N/A	99011-19B72-03A	N/A	N/A
LT-F300FK1	99505-01081-03E	99500-42122-01E ⁵	N/A	99011-19B72-03A	N/A	N/A
LT-A500FK1	99505-01061-03E	99500-44032-01E ⁵	N/A	99011-09F51-03A	N/A	N/A
LT-F500FK1	99505-01041-03E	99500-44023-01E ⁵	N/A	99011-09F53-03A	N/A	N/A

(1) - SUPPLEMENT FOR THIS YEAR MODEL IS ALREADY INCLUDED IN THE LATEST VERSION OF THE SERVICE MANUAL, BUT MAY STILL BE AVAILABLE SEPARATELY. (2) - USE THIS OWNER'S MANUAL AS A GUIDE ONLY. (3) - USE THE PREFIX GIVEN INSTEAD OF THE ONE AT THE TOP OF THE COLUMN. (4) - MANUAL REQUIRES BINDER #99935-01841. (5) - MANUAL IS BOUND, DOES NOT REQUIRE A BINDER. MULTIPLE OR LARGER MANUALS CAN BE STORED TOGETHER IN BINDER #99935-01842.

AIR CLEANER.....	C-07	COWLING BODY.....	I-02	FRAME COVER.....	H-03	GASKET SET.....	B-02	OIL COOLER.....	C-09	SEAT TAIL COVER.....	J-03	TRANSMISSION.....	D-04
ALTERNATOR.....	E-03	COWLING INSTALLATIO.....	I-04	FRAME.....	G-02	GEAR SHIFTING.....	D-06	OIL PAN.....	B-09	SEAT.....	J-02	TURN SIGNAL LAMP.....	F-04
BATTERY.....	E-06	CRANKCASE COVER.....	B-08	FRONT BRAKE HOSE.....	K-04	HANDLE LEVER.....	H-10	OIL PUMP.....	B-10	SECOND AIR.....	C-10	WIRING HARNESS.....	F-07
CAM CHAIN.....	C-03	CRANKCASE.....	B-08	FRONT CALIPERS.....	K-03	HANDLE SWITCH.....	F-09	OPTIONAL.....	L-07	SIGNAL GENERATOR.....	E-04		
CAM SHAFT / VALVE.....	L-02	CRANKSHAFT.....	B-11	FRONT DAMPER.....	J-07	HANDLEBAR.....	H-09	REAR CALIPER.....	L-05	SPEEDOMETER.....	E-07		
CANISTER.....	H-02	CYLINDER HEAD COVER.....	B-03	FRONT FENDER.....	H-07	HEADLAMP HOUSING.....	H-06	REAR CUSHION LEVER.....	L-03	STAND.....	G-04		
CARBURETOR FITTING.....	C-06	CYLINDER HEAD.....	B-04	FRONT MASTER CYLIND.....	K-05	HEADLAMP.....	F-02	REAR FENDER.....	H-11	STARTER CLUTCH.....	B-12		
CARBURETOR.....	C-04	CYLINDER.....	B-05	FRONT WHEEL.....	K-02	LABEL.....	I-05	REAR MASTER CYLINDE.....	L-06	STARTING MOTOR.....	E-02		
CLUTCH MASTER CYLIN.....	K-07	ELECTRICAL.....	E-05	FUEL COCK.....	G-09	MANUAL BOX.....	H-05	REAR SWINGING ARM.....	L-02	STEERING STEM.....	J-08		
CLUTCH.....	D-02	FOOTREST.....	G-06	FUEL TANK.....	G-07	MUFFLER.....	C-08	REAR WHEEL.....	L-04	TAIL LAMP.....	F-06		

SUZUKI 2000 Motorcycle & ATV Service and Owner's Manual Listing

Model	Owner's Manual	Service Manual	S/M Supplement	Note
JR50Y	99011-04447-03A	99500-20180-01E	None	Bound manual
DS80Y	99011-03458-03A	99500-20172-03E	None	Bound manual
DR200SEY	99011-42A52-03A	99500-41102-03E	None	S/M needs binder 99935-01842
DR-Z400Y/EY	99011-29F50-03A	99500-43020-01E	None	Bound manual
DR-Z400SY	99011-29F00-03A	99500-43030-03E	None	S/M needs binder 99935-01842
DR650SEY	99011-32E54-03A	99500-46033-03E	None	S/M needs binder 99935-01842
RM80Y	99011-02B75-03A	Service Manual is included in Owner's Manual		Bound manual
RM125Y	99011-36E54-03A	Service Manual is included in Owner's Manual		Bound manual
RM250Y	99011-37E54-03A	Service Manual is included in Owner's Manual		Bound manual
GZ250Y	99011-13F51-03A	99500-32100-03E	None	S/M needs binder 99935-01842
GS500EY	99011-01D61-03A	99500-34069-03E	None	S/M needs binder 99935-01842
GSF600SY	99011-31F50-03A	99500-36100-03E	None	S/M needs binder 99935-01842
GSX600FY	99011-19C62-03A	99500-35071-03E	None	S/M needs binder 99935-01842
GSX-R600Y	99011-34E53-03A	99500-35062-03E	None	S/M needs binder 99935-01842
LS650PY	99011-24C55-03A	99500-36081-03E	None	S/M needs binder 99935-01842
SV650Y	99011-20F51-03A	99500-36090-03E	None	S/M needs binder 99935-01042
GSX750FY	99011-20C62-03A	99500-37101-03E	None	S/M needs binder 99935-01842
GSX-R750Y	99011-33F50-03A	99500-37110-03E	None	S/M needs binder 99935-01842
VS800GLY	99011-39A59-03A	99500-38025-03E	None	S/M needs binder 99935-01842
VZ800Y	99011-48E53-03A	99500-38032-03E	None	S/M needs binder 99935-01842
TL1000SY	99011-02F53-03A	99500-39141-03E	99501-39290-03E	S/M needs binder 99935-01842
TL1000RY	99011-02F62-03A	99500-39170-03E	None	S/M needs binder 99935-01842
GSF1200SY	99011-27E54-03A	99500-39134-03E	None	S/M needs binder 99935-01842
GSX1300RY	99011-24F51-03A	99500-39180-03E	99501-39300-03E	S/M needs binder 99935-01842
VS1400GLPY	99011-38B63-03A	99500-39151-03E	None	S/M needs binder 99935-01842
VL1500Y	99011-10F52-03A	99500-39162-03E	None	S/M needs binder 99935-01842
LT80Y	99011-40C64-03A	99500-20159-01E	None	Bound manual
LT-F160Y	99011-02C70-03A	99500-41099-01E	None	Bound manual
LT-F250Y	99011-20B71-03A	99500-42140-01E	99501-42180-01E	Bound manual
LT-F250FY	99011-19B71-03A	99500-42140-01E	99501-42180-01E	Bound manual
LT-F300FY	99011-19B71-03A	99500-42130-01E	99501-42190-01E	Bound manual
LT-F500FY	99011-09F52-03A	99500-44021-01E	None	Bound manual
LT-A500FY	99011-09F60-03A	99500-44030-01E	None	Bound manual

Your Suzuki dealer can order you manuals for other model year motorcycles and ATVs.
Please contact your dealer and have him/her check the Service Publications Bulletin - #1 Manual Listing for ordering information.

AIR CLEANER.....	C-07	COWLING BODY.....	I-02	FRAME COVER.....	H-03	GASKET SET.....	B-02	OIL COOLER.....	C-09	SEAT TAIL COVER.....	J-03	TRANSMISSION.....	D-04
ALTERNATOR.....	E-03	COWLING INSTALLATIO	I-04	FRAME.....	G-02	GEAR SHIFTING.....	D-08	OIL PAN.....	B-09	SEAT.....	J-02	TURN SIGNAL LAMP.....	F-04
BATTERY.....	E-08	CRANKCASE COVER.....	B-08	FRONT BRAKE HOSE.....	K-04	HANDLE LEVER.....	H-10	OIL PUMP.....	B-10	SECOND AIR.....	C-10	WIRING HARNESS.....	F-07
CAM CHAIN.....	C-03	CRANKCASE.....	B-06	FRONT CALIPERS.....	K-03	HANDLE SWITCH.....	F-09	OPTIONAL.....	L-07	SIGNAL GENERATOR.....	E-04		
CAM SHAFT / VALVE.....	C-02	CRANKSHAFT.....	B-11	FRONT DAMPER.....	J-07	HANDLEBAR.....	H-09	REAR CALIPER.....	L-05	SPEEDOMETER.....	E-07		
CANISTER.....	H-02	CYLINDER HEAD COVER	B-03	FRONT FENDER.....	H-07	HEADLAMP HOUSING.....	H-06	REAR CUSHION LEVER	L-03	STAND.....	G-04		
CARBURETOR FITTING.....	C-06	CYLINDER HEAD.....	B-04	FRONT MASTER CYLIND	K-05	HEADLAMP.....	F-02	REAR FENDER.....	H-11	STARTER CLUTCH.....	B-12		
CARBURETOR.....	C-04	CYLINDER.....	B-05	FRONT WHEEL.....	K-02	LABEL.....	L-05	REAR MASTER CYLINDE	L-06	STARTING MOTOR.....	E-02		
CLUTCH MASTER CYLIN	K-07	ELECTRICAL.....	E-05	FUEL COCK.....	G-09	MANUAL BOX.....	H-05	REAR SWINGING ARM..	L-02	STEERING STEM.....	J-08		
CLUTCH.....	D-02	FOOTREST.....	G-05	FUEL TANK.....	G-07	MUFFLER.....	C-08	REAR WHEEL.....	L-04	TAIL LAMP.....	F-06		

MODEL/ YEAR X/1999	SET-UP MANUAL 99505-	SERVICE MANUAL 99500-	SERVICE MANUAL SUPPLEMENT 99501-	OWNERS MANUAL 99011-	OWNERS MANUAL SUPPLEMENT 99016-	OWNERS MAINTENANCE MANUAL 99011-
JR50X	01067-03E	20160-01E		04445-03A		02B74-03A 36E53-03A 37E53-03A
DS80X	01117-03E	20172-03E		03457-03A		
DR200SEX	01126-03E	41101-03E (4)		42A51-03A		
DR350X	01187-03E	43018-03E (4)		14D69-03A		
DR350SEX	01099-03E	43018-03E (4)		14D95-03A		
DR650SEX	01206-03E	46032-03E (4)		32E53-03A		
RM80X	01139-03E					
RM125X	01159-03E					
RM250X	01189-03E					
GZ250X	01109-03E	32100-03E (4)		13F50-03A		
GS500EX	01027-03E	34068-03E (4)		01D80-03A		
GSF800SX	01167-03E	35042-03E (4)		27E53-03A		
SV650X	01249-03E	38090-03E (4)		20F50-03A		
GSF1200SX	01297-03E	39133-03E (4)		27E53-03A		
LS650FX	01038-03E	38080-03E (4)		24C54-03A		
VS800GLPX	01106-03E	38023-03E (4)		39A58-03A		
VS1400GLPX	01047-03E	39150-03E (4)		39B62-03A		
VZ800GLX	01227-03E	38031-03E (4)		48E52-03A		
VL1500X	01178-03E	39160-03E (4)		10F51-03A		
GSX600FX	01158-03E	35070-03E (4)		19C61-03A		
GSX750FX	01188-03E	37100-03E (4)		20C61-03A		
GSX-R600X	01237-03E	35061-03E (4)		34E52-03A		
GSX-R750X	01098-03E	37082-03E (4)		33E53-03A		
GSX1300RX	01269-01E	29180-03E (4)		24F50-03A		
TL1000SX	01148-03E	39141-03E (4)	39280-03E	02F53-03A		
TL1000RX	01258-03E	39170-03E (4)		02F61-03A		
LT80X	01009-03E	20158-01E		40B62-03A		
LT-F160X	01129-03E	41098-01E		02C68-03A		
LT-F250X	01069-03E	42140-01E		20B70-03A		
LT-F250FX	01069-03E	42140-01E		19B70-03A		
LT-F300FX	01059-03E	42130-01E		19B70-03A		
LT-F500FX	01138-03E	44020-01E		09F51-03A		

(1) - SERVICE MANUAL SUPPLEMENT FOR THIS YEAR MODEL IS ALREADY INCLUDED IN THE LATEST VERSION OF THE SERVICE MANUAL, BUT IS STILL AVAILABLE SEPARATELY.
(2) - USE THIS OWNER'S MANUAL AS A GUIDE ONLY. (3) - USE THE PREFIX GIVEN INSTEAD OF THE ONE AT THE TOP OF THE COLUMN. (4) - THIS MANUAL REQUIRES BINDER # 99935-01841. NOTE: ATV SERVICE MANUALS ARE BOUND AND DO NOT REQUIRE A BINDER, HOWEVER, SEVERAL CAN BE STORED TOGETHER IN BINDER #99935-01842.

MODEL/ YEAR W/98	SET-UP MANUAL 99505-	SERVICE MANUAL 99500-	SERVICE MANUAL SUPPLEMENT 99501-	OWNERS MANUAL 99011-	OWNERS MANUAL SUPPLEMENT 99016-	OWNERS MAINTENANCE MANUAL 99011-
JR50W	01067-03E	20160-01E		04445-03A		02B73-03A 36E52-03A 37E52-03A 05D59-03A
DS80W	01117-03E	20019-03E		03456-03A		
DR200SEW	01126-03E	41101-03E (4)		42A50-03A		
DR350W	01187-03E	43018-03E (4)	43070-03E	14D68-03A		
DR350SEW	01186-03E	43018-03E (4)	43070-03E	14D94-03A		
DR650SEW	01206-03E	46032-03E (4)		32E52-03A		
RM80W	01096-03E					
RM125W	01236-03E					
RM250W	01217-03E					
RMX250W	01256-03E					
GS500EW	01027-03E	34068-03E (4)		01D59-03A		
GSF600SW	01167-03E	35040-03E (4)		27E52-03A		
GSF1200SW	01147-03E	39132-03E (4)		27E52-03A		
LS650PW	01038-03E	38065-03E (4)		24C53-03A		
VS800GLPW	01106-03E	38022-03E (4)		39A57-03A		
VS1400GLPW	01047-03E	39079-03E (4)		38B61-03A		
VZ800GLW	01227-03E	38030-03E (4)		48E51-03A		
VL1500W	01178-03E	39160-03E (4)		10F5C-03A		
GSX600FW	01158-03E	35070-03E (4)		19C60-03A		
GSX750FW	01188-03E	37100-03E (4)		20C60-03A		
GSX-R600W	01237-03E	35060-03E (4)	35150-03E	34E51-03A		
GSX-R750W	01098-03E	37081-03E (4)	37200-03E	33E52-03A		
GSX-R1100WW	01235-03E	39113-03E (4)		48E55-03A		
TL1000SW	01148-03E	39140-03E (4)	39270-03E	02F52-03A		
TL1000RW	TBA	39170-03E (4)		02F60-03A		
LT80W	01044-03E	20158-01E		40B62-03A		
LT-F160W	01054-03E	41097-01E		02C68-03A		
LT-F250W	01066-03E	42097-01E		20B61-03A		
LT-4WDW	01007-03E	42058-01E		19B52-03A		
LT-F4WDXW	01076-03E	42058-01E		19B52-03A		
LT-F500FW	01138-03E	44020-01E		09F50-03A		

(1) - SERVICE MANUAL SUPPLEMENT FOR THIS YEAR MODEL IS ALREADY INCLUDED IN THE LATEST VERSION OF THE SERVICE MANUAL, BUT IT IS STILL AVAILABLE SEPARATELY.
(2) - USE THIS OWNER'S MANUAL AS A GUIDE ONLY. (3) - USE THE PREFIX GIVEN INSTEAD OF THE ONE AT THE TOP OF THE COLUMN. (4) - THIS MANUAL REQUIRES BINDER # 99935-01841. NOTE: ATV SERVICE MANUALS ARE BOUND AND DO NOT REQUIRE A BINDER, HOWEVER, SEVERAL CAN BE STORED TOGETHER IN BINDER #99935-01842.

AIR CLEANER.....	C-07	COWLING BODY.....	I-02	FRAME COVER.....	H-03	GASKET SET.....	B-02	OIL COOLER.....	C-09	SEAT TAIL COVER.....	J-03	TRANSMISSION.....	D-04
ALTERNATOR.....	E-03	COWLING INSTALLATIO	I-04	FRAME.....	G-02	GEAR SHIFTING.....	D-06	OIL PAN.....	B-09	SEAT.....	J-02	TURN SIGNAL LAMP...	F-04
BATTERY.....	E-06	CRANKCASE COVER.....	B-08	FRONT BRAKE HOSE...	K-04	HANDLE LEVER.....	H-10	OIL PUMP.....	B-10	SECOND AIR.....	C-00	WIRING HARNESS.....	F-07
CAM CHAIN.....	C-03	CRANKCASE.....	B-06	FRONT CALIPERS.....	K-03	HANDLE SWITCH.....	F-09	OPTIONAL.....	L-07	SIGNAL GENERATOR.....	F-04		
CAM SHAFT / VALVE.....	C-02	CRANKSHAFT.....	B-11	FRONT DAMPER.....	J-07	HANDLEBAR.....	H-09	REAR CALIPER.....	L-05	SPEEDOMETER.....	E-07		
CANISTER.....	H-02	CYLINDER HEAD COVER	B-03	FRONT FENDER.....	H-07	HEADLAMP HOUSING.....	H-06	REAR CUSHION LEVER.....	L-03	STAND.....	G-04		
CARBURETOR FITTING.....	C-06	CYLINDER HEAD.....	B-04	FRONT MASTER CYLIND	K-05	HEADLAMP.....	F-02	REAR FENDER.....	H-11	STARTER CLUTCH.....	B-12		
CARBURETOR.....	C-04	CYLINDER.....	B-05	FRONT WHEEL.....	K-02	LABEL.....	I-05	REAR MASTER CYLINDE	L-06	STARTING MOTOR.....	E-02		
CLUTCH MASTER CYLIN	K-07	ELECTRICAL.....	E-05	FUEL COCK.....	G-09	MANUAL BOX.....	H-05	REAR SWINGING ARM.....	L-02	STEERING STEM.....	J-08		
CLUTCH.....	D-02	FOOTREST.....	G-05	FUEL TANK.....	G-07	MUFFLER.....	C-08	REAR WHEEL.....	L-04	TAIL LAMP.....	F-06		

MODEL/ YEAR V/97	SET-UP MANUAL 99505-	SERVICE MANUAL 99500-	SERVICE MANUAL SUPPLEMENT 99501-	OWNERS MANUAL 99011-	OWNERS MANUAL SUPPLEMENT 99016-	OWNERS MAINTENANCE MANUAL 99011-
JR50V	01067-03E	20160-01E		04444-03A		
DS80V	01117-03E	20019-03E		03455-03A		
DR200SEV	01126-03E	41101-03E (4)		42A26-03A		
DR350V	01187-03E	43016-03E (4)	43060-03E	14D67-03A		
DR350SEV	01186-03E	43016-03E (4)	43060-03E	14D93-03A		
DR650SEV	01206-03E	46030-03E (4)		32E51-03A		
RM80V	01096-03E					02B72-03A
RM125V	01236-03E					36E51-03A
RM250V	01217-03E					37E51-03A
RMX250V	01256-03E					05D56-03A
GN125EV	01246-03E	31007-03E (4)		05351-03A		
GS500EV	01027-03E	34068-03E (4)		01D58-03A		
GSF600SV	01167-03E	35040-03E (4)		27E51-03A		
GSF1200SV	01147-03E	39131-03E (4)		27E51-03A		
GSF1200SAV	01297-03E	39131-03E (4)	39260-03E	27E71-03A		
LS650PV	01107-03E	36065-03E (4)		24C52-03A		
VS800GLPV	01106-03E	38020-03E (4)		39A56-03A		
VS1400GLPV	01047-03E	39078-03E (4)	39250-03E	38B60-03A		
VZ800GLV	01227-03E	38030-03E (4)		48E50-03A		
GSX600FV	01067-03E	35027-03E (4)	35120-03E	20C58-03A		
GSX750FV	01017-03E	37067-03E (4)		20C58-03A		
RF900RV	01097-03E	39122-03E (4)		31E53-03A		
GSX-R600V	01237-03E	35060-03E (4)		34E50-03A		
GSX-R750V	01266-03E	37081-03E (4)		33E51-03A		
GSX-R1100WV	01235-03E	39113-03E (4)		46E54-03A		
TL1000SV	01287-03E	39140-03E (4)		02F51-03A		
LT80V	01044-03E	20158-01E		40B61-03A		
LT-F160V	01054-03E	41097-01E		02C67-03A		
LT-F250V	01066-03E	42097-01E		20B60-03A		
LT-4WDV	01007-03E	42058-01E		19B51-03A		
LT-F4WDV	01076-03E	42058-01E		19B51-03A		

(1) - SERVICE MANUAL SUPPLEMENT FOR THIS YEAR MODEL IS ALREADY INCLUDED IN THE LATEST VERSION OF THE SERVICE MANUAL, BUT IS STILL AVAILABLE SEPARATELY. (2) - USE THIS OWNER'S MANUAL AS A GUIDE ONLY. (3) - USE THE PREFIX GIVEN INSTEAD OF THE ONE AT THE TOP OF THE COLUMN. (4) - THIS MANUAL REQUIRES BINDER # 99935-01941. NOTE: ATV SERVICE MANUALS ARE BOUND AND DO NOT REQUIRE A BINDER, HOWEVER, SEVERAL CAN BE STORED TOGETHER IN BINDER #99935-01942.

MODEL/ YEAR T/96	SET-UP MANUAL 99505-	SERVICE MANUAL 99500-	SERVICE MANUAL SUPPLEMENT 99501-	OWNERS MANUAL 99011-	OWNERS MANUAL SUPPLEMENT 99016-	OWNERS MAINTENANCE MANUAL 99011-
JR50T	01144-03E	20160-01E		04443-03A		
DS80T	01105-03E	20019-03E		03454-03A		
DR125SET	01194-03E	31030-03E (4)		42A27-03A		
DR200SET	01126-03E	41101-03E (4)		42A27-03A		
DR350T	01145-03E	43016-03E (4)		14D66-03A		
DR350SET	01186-03E	43016-03E (4)		14D92-03A		
DR650SET	01206-03E	46030-03E (4)		32E50-03A		
RM80T	01096-03E					02B71-03A
RM125T	01236-03E					36E50-03A
RM250T	01286-03E					37E50-03A
RMX250T	01256-03E					05D67-03A
GN125ET	01246-03E	31007-03E (4)		05350-03A		
GS500ET	01045-03E	34068-03E (4)	34120-03E (1)	01D57-03A		
GSF600ST	01006-03E	35040-03E (4)		26E51-03A		
LS650PT	01275-03E	36065-03E (4)	36080-03E (1)	24C51-03A		
VS800GLPT	01106-03E	38020-03E (4)	38080-03E (1)	39A55-03A		
VS1400GLPT	01046-03E	39078-03E (4)	39230-03E (1)	38B59-03A		
GSX600FT	01086-03E	35027-03E (4)	35120-03E	20C57-03A		
GSX750FT	01036-03E	37067-03E (4)	37190-03E (1)	20C57-03A		
RF600RT	01205-03E	35033-03E (4)	35130-03E (1)	31E52-03A		
RF900RT	01265-03E	39122-03E (4)	39240-03E (1)	31E52-03A		
GSX-R750T	01266-03E	37081-03E (4)		33E50-03A		
GSX-R1100WT	01235-03E	39113-03E (4)		46E57-03A		
LT80T	01044-03E	20158-01E		40B60-03A		
LT-F160T	01054-03E	41097-01E		02C66-03A		
LT-F250T	01066-03E	42097-01E		20B58-03A		
LT-4WDT	01016-03E	42058-01E		19B50-03A		
LT-F4WDXT	01076-03E	42058-01E		19B50-03A		

(1) - SERVICE MANUAL SUPPLEMENT FOR THIS YEAR MODEL IS ALREADY INCLUDED IN THE LATEST VERSION OF THE SERVICE MANUAL, BUT IT IS STILL AVAILABLE SEPARATELY. (2) - USE THIS OWNER'S MANUAL AS A GUIDE ONLY. (3) - USE THE PREFIX GIVEN INSTEAD OF THE ONE AT THE TOP OF THE COLUMN. (4) - THIS MANUAL REQUIRES BINDER # 99935-01941. NOTE: ATV SERVICE MANUALS ARE BOUND AND DO NOT REQUIRE A BINDER, HOWEVER, SEVERAL CAN BE STORED TOGETHER IN BINDER #99935-01942.

AIR CLEANER.....	C-07
ALTERNATOR.....	E-03
BATTERY.....	E-06
CAM CHAIN.....	C-03
CAM SHAFT / VALVE.....	C-02
CANISTER.....	H-02
CARBURETOR FITTING.....	C-06
CARBURETOR.....	C-04
CLUTCH MASTER CYLINDER.....	K-07
CLUTCH.....	D-02

COWLING BODY.....	H-02
COWLING INSTALLATION.....	H-04
CRANKCASE COVER.....	B-08
CRANKCASE.....	B-06
CRANKSHAFT.....	B-11
CYLINDER HEAD COVER.....	B-03
CYLINDER HEAD.....	B-04
CYLINDER.....	B-05
ELECTRICAL.....	E-05
FOOTREST.....	G-05

FRAME COVER.....	H-03
FRAME.....	G-02
FRONT BRAKE HOSE.....	K-04
FRONT CALIPERS.....	K-03
FRONT DAMPER.....	J-07
FRONT FENDER.....	H-07
FRONT MASTER CYLINDER.....	K-05
FRONT WHEEL.....	K-02
FUEL COCK.....	G-09
FUEL TANK.....	G-07

GASKET SET.....	B-02
GEAR SHIFTING.....	D-06
HANDLE LEVER.....	H-10
HANDLE SWITCH.....	F-09
HANDLEBAR.....	H-09
HEADLAMP HOUSING.....	H-08
HEADLAMP.....	F-02
LABEL.....	H-05
MANUAL BOX.....	H-05
MUFFLER.....	C-08

OIL COOLER.....	C-09
OIL PAN.....	B-09
OIL PUMP.....	B-10
OPTIONAL.....	L-07
REAR CALIPER.....	L-05
REAR CUSHION LEVER.....	L-03
REAR FENDER.....	H-11
REAR MASTER CYLINDER.....	L-06
REAR SWINGING ARM.....	L-02
REAR WHEEL.....	L-04

SEAT TAIL COVER.....	J-03
SEAT.....	J-02
SECOND AIR.....	C-10
SIGNAL GENERATOR.....	E-04
SPEEDOMETER.....	E-07
STAND.....	G-04
STARTER CLUTCH.....	B-12
STARTING MOTOR.....	E-02
STEERING STEM.....	J-08
TAIL LAMP.....	F-06

TRANSMISSION.....	D-04
TURN SIGNAL LAMP.....	F-04
WIRING HARNESS.....	F-07

MODEL/ YEAR S/95	SET-UP MANUAL 99505-	SERVICE MANUAL 99500-	SERVICE MANUAL SUPPLEMENT 99501-	OWNERS MANUAL 99011-	OWNERS MANUAL SUPPLEMENT 99016-	OWNERS MAINTENANCE MANUAL 99011-
JR50S	01144-03E	20160-01E		04442-03A		
DS80S	01105-03E	20019-03E		03463-03A		
DR125SES	01194-03E	31030-03E (4)	41130-03E	44A26-03A		
DR250SES	01185-03E	42114-03E (4)	42170-03E (1)	15D82-03A		
DR350S	01145-03E	43018-03E (4)		14D85-03A		
DR350SES	01304-03E	43018-03E (4)	43040-03E (1)	14D91-03A		
DR650SES	01294-03E	46022-03E (4)	46060-03E	12E81-03A		
RM70S	01094-03E					0287C-03A
RM125S	01175-03E					43D53-03A
RM250S	01155-03E					28E52-03A
RMX250S	01135-03E					05D56-03A
GN125S	01004-03E	31006-03E (4)	31020-03E (1)	05329-03A		
GS500ES	01045-03E	34068-03E (4)	34110-03E (1)	01D56-03A		
LS650PS	01275-03E	38065-03E (4)	38070-03E (1)	24C60-03A		
VS800GLPS	01085-03E	38020-03E (4)		39A54-03A		
VS1400GLPS	01043-03E	39078-03E (4)	39210-03E (1)	38B58-03A		
GSX600FS	01124-03E	35027-03E (4)	35080-03E (1)	19C57-03A		
GSX750FS	01063-03E	37067-03E (4)	37180-03E (1)	20C56-03A		
RF600RS	01205-03E	35033-03E (4)	35090-03E (1)	21E52-03A		
RF900RS	01265-03E	39122-03E (4)	39200-03E (1)	31E51-03A		
GSX-R750WS	01165-03E	37073-03E (4)	37170-03E (1)	17E51-03A		
GSX-R1100WS	01235-03E	39113-03E (4)		48E52-03A		
LT80S	01044-03E	20158-01E		40B59-03A		
LT-F160S	01054-03E	41097-01E		02C65-03A		
LT-F250S	01055-03E	42097-01E		20B57-03A		
LT-4WDS	01025-03E	42058-01E		19B28-03A		
LT-F4WDXS	01075-03E	42058-01E		19B38-03A		

(1) - SERVICE MANUAL SUPPLEMENT FOR THIS YEAR MODEL IS ALREADY INCLUDED IN THE LATEST VERSION OF THE SERVICE MANUAL, BUT IS STILL AVAILABLE SEPARATELY.
(2) - USE THE OWNER'S MANUAL AS A GUIDE ONLY. (3) - USE THE PREFIX GIVEN INSTEAD OF THE ONE AT THE TOP OF THE COLUMN. (4) - THIS MANUAL REQUIRES BINDER # 99836-01841. NOTE: ATV SERVICE MANUALS ARE BOUND AND DO NOT REQUIRE A BINDER, HOWEVER, SEVERAL CAN BE STORED TOGETHER IN BINDER #99836-01842.

MODEL/ YEAR R/94	SET-UP MANUAL 99505-	SERVICE MANUAL 99500-	SERVICE MANUAL SUPPLEMENT 99501-	OWNERS MANUAL 99011-	OWNERS MANUAL SUPPLEMENT 99016-	OWNERS MAINTENANCE MANUAL 99011-
JR50R	01144-03E	20160-01E		04441-03A		
DS80R	01143-03E	20019-03E		03452-03A		
DR125SER	01194-03E	31030-03E (4)		44A25-03A		
DR250SER	01293-03E	42113-03E (4)		15D81-03A		
DR350R	01184-03E	43018-03E (4)		14D84-03A		
DR350SER	01304-03E	43018-03E (4)		14D90-03A		
DR650SER	01294-03E	46022-03E (4)		12E81-03A		
RMB0R	01094-03E					02B26-03A
RM125R	01204-03E					43D52-03A
RM250R	NLA					28E51-03A
RMX250R	NLA					05D56-03A
GN125ER	01004-03E	31006-03E (4)		05328-03A		
GS500ER	NLA	34068-03E (4)		01D55-03A		
VS800GLPR	01182-03E	38020-03E (4)		39A53-03A		
VS1400GLPR	01043-03E	39078-03E (4)		38B57-03A		
GSX600FR	01124-03E	35027-03E (4)		19C56-03A		
GSX750FR	01063-03E	37067-03E (4)		20C55-03A		
RF600RR	01224-03E	35033-03E (4)		21E51-03A		
RF900RR	01284-03E	39122-03E (4)		31E50-03A		
GSX-R750WR	01234-03E	37073-03E (4)		17E50-03A		
GSX-R1100WR	01383-03E	39113-03E (4)		48E51-03A		
LT80R	01044-03E	20158-01E		NLA USE "S" MODEL		
LT-F160R	01054-03E	41097-01E		02C64-03A		
LT-F250R	01084-03E	42097-01E		20B56-03A		
LT-4WDR	NLA	42058-01E		19B27-03A		
LT-F4WDXR	01073-03E	42058-01E		19B37-03A		

(1) - SERVICE MANUAL SUPPLEMENT FOR THIS YEAR MODEL IS ALREADY INCLUDED IN THE LATEST VERSION OF THE SERVICE MANUAL, BUT IS STILL AVAILABLE SEPARATELY.
(2) - USE THE OWNER'S MANUAL AS A GUIDE ONLY. (3) - USE THE PREFIX GIVEN INSTEAD OF THE ONE AT THE TOP OF THE COLUMN. (4) - THIS MANUAL REQUIRES BINDER # 99836-01841. NOTE: ATV SERVICE MANUALS ARE BOUND AND DO NOT REQUIRE A BINDER, HOWEVER, SEVERAL CAN BE STORED TOGETHER IN BINDER #99836-01842.

AIR CLEANER.....	C-07	COWLING BODY.....	F-02	FRAME COVER.....	H-03	GASKET SET.....	B-02	OIL COOLER.....	C-09	SEAT TAIL COVER.....	J-03	TRANSMISSION.....	D-04
ALTERNATOR.....	E-03	COWLING INSTALLATIO	F-04	FRAME.....	G-02	GEAR SHIFTING.....	D-06	OIL PAN.....	B-09	SEAT.....	J-02	TURN SIGNAL LAMP.....	F-04
BATTERY.....	E-06	CRANKCASE COVER.....	B-08	FRONT BRAKE HOSE.....	K-04	HANDLE LEVER.....	H-10	OIL PUMP.....	B-10	SECOND AIR.....	C-10	WIRING HARNESS.....	F-07
CAM CHAIN.....	C-03	CRANKCASE.....	B-06	FRONT CALIPERS.....	K-03	HANDLE SWITCH.....	F-09	OPTIONAL.....	L-07	SIGNAL GENERATOR.....	E-04		
CAM SHAFT / VALVE.....	C-02	CRANKSHAFT.....	B-11	FRONT DAMPER.....	J-07	HANDLEBAR.....	H-09	REAR CALIPER.....	L-06	SPEEDOMETER.....	E-04		
CANISTER.....	H-02	CYLINDER HEAD COVER	B-03	FRONT FENDER.....	H-07	HEADLAMP.....	H-06	REAR CUSHION LEVER	L-03	STAND.....	G-04		
CARBURETOR FITTING	C-06	CYLINDER HEAD.....	B-04	FRONT MASTER CYLIND	K-05	HEADLAMP HOUSING...	H-06	REAR FENDER.....	H-11	STARTER CLUTCH.....	B-12		
CARBURETOR.....	C-04	CYLINDER.....	B-05	FRONT WHEEL.....	K-02	LABEL.....	I-05	REAR MASTER CYLINDE	L-06	STARTING MOTOR.....	E-02		
CLUTCH MASTER CYLIN	K-07	ELECTRICAL.....	E-05	FUEL COCK.....	G-09	MANUAL BOX.....	H-05	REAR SWINGING ARM	L-02	STEERING STEM.....	J-08		
CLUTCH.....	D-02	FOOTREST.....	G-05	FUEL TANK.....	G-07	MUFFLER.....	C-06	REAR WHEEL.....	L-04	TAIL LAMP.....	F-06		

MODEL/ YEAR P/93	SET-UP MANUAL 99505-	SERVICE MANUAL 99500-	SERVICE MANUAL SUPPLEMENT 99501-	OWNERS MANUAL 99011-	OWNERS MANUAL SUPPLEMENT 99016-	OWNERS MAINTENANCE MANUAL 99011-
JR50P	NLA	20180-01E		04440-03A		
DS80P	01143-03E	20019-03E		03451-03A		
DR250P	01152-03E	42114-03E (4)		15063-03A		
DR250SEP	01293-03E	42114-03E (4)		15080-03A		
DR350P	01092-03E	43016-03E (4)		14063-03A		
DR350SP	01112-03E	43016-03E (4)		14073-03A		
DR650SP	NLA	46022-03E (4)		12E51-03A		
RM80P	01051-03E					02827-03A
RM125P	01223-03E					43051-03A
RM250P	NLA					28E50-03A
RMX250P	01301-03E					05054-03A
GN125EP	01041-03E	31008-03E (4)		05327-03A		
GSF400P	01072-03E	33022-03E (4)		10D53-03A		
GS500EP	NLA	34068-03E (4)		01D54-03A		
VS800GLPP	01182-03E	38020-03E (4)		39A52-03A		
VS1400GLPP	01043-03E	39078-03E (4)		38856-03A		
VX800P	NLA	38013-03E (4)		45C53-03A		
GSX600FP	01202-03E	35027-03E (4)		19C66-03A		
GSX750FP	01063-03E	37067-03E (4)		20C54-03A		
GSX1100FP	01200-03E	39085-03E (4)		48856-03A		
GSX1100GP	01192-03E	39103-03E (4)		28D52-03A		
GSX-R600WP	01292-03E	36071-03E (4)		18E51-03A		
GSX-R750WP	01133-03E	37073-03E (4)		07F51-03A		
GSX-R1100WP	01383-03E	39113-03E (4)		46E60-03A		
LT80P	01001-03E	20158-01E		40857-03A		
LT-F160P	01281-03E	41097-01E		02C62-03A		
LT230EP	01153-03E	42075-01E		35B26-03A		
LT-F250P	01261-03E	42097-01E		20B55-03A		
LT4WDP	NLA	42058-01E		19B26-03A		
LT-F4WDXP	01073-03E	42058-01E		19B38-03A		

(1) = SERVICE MANUAL SUPPLEMENT FOR THIS YEAR MODEL IS ALREADY INCLUDED IN THE LATEST VERSION OF THE SERVICE MANUAL, BUT IS STILL AVAILABLE SEPARATELY.
(2) = USE THIS OWNER'S MANUAL AS A GUIDE ONLY. (3) = USE THE PREFIX GIVEN INSTEAD OF THE ONE AT THE TOP OF THE COLUMN. (4) = THIS MANUAL REQUIRES BINDER # 99935-01841. NOTE: ATV SERVICE MANUALS ARE BOUND AND DO NOT REQUIRE A BINDER, HOWEVER, SEVERAL CAN BE STORED TOGETHER IN BINDER #99935-01842.

MODEL/ YEAR N/92	SET-UP MANUAL 99505-	SERVICE MANUAL 99500-	SERVICE MANUAL SUPPLEMENT 99501-	OWNERS MANUAL 99011-	OWNERS MANUAL SUPPLEMENT 99016-	OWNERS MAINTENANCE MANUAL 99011-
JR50N	NLA	20180-01E		04441-03A		
DS80N	NLA	20019-03E		03450-03A		
DR250N	01152-03E	42114-03E (4)		15062-03A		
DR250SN	01172-03E	42114-03E (4)		15072-03A		
DR350N	01092-03E	43016-03E (4)		14062-03A		
DR350SN	01112-03E	43016-03E (4)		14072-03A		
DR650SN	01242-03E	46022-03E (4)		12E51-03A		
RM80N	01051-03E					02826-03A
RM125N	01082-03E					43D50-03A
RM250N	NLA					28C53-03A
RMX250N	01301-03E					05D53-03A
GN125EN	01041-03E	31008-03E (4)		05326-03A		
GSF400N	01072-03E	33022-03E (4)		10D52-03A		
GS500EN	01042-03E	34068-03E (4)		01D53-03A		
VS800GLPN	01182-03E	38020-03E (4)		39A50-03A		
VS1400GLPN	01320-03E	39078-03E (4)		38855-03A		
VX800N	NLA	38013-03E (4)		45C52-03A		
GSX600FN	01202-03E	35027-03E (4)		19C54-03A		
GSX750FN	NLA	37067-03E (4)		20C53-03A		
GSX1100FN	NLA	39085-03E (4)		48855-03A		
GSX1100GN	01192-03E	39103-03E (4)		28F51-03A		
GSX-R600WN	01292-03E	36071-03E (4)		18L50-03A		
GSX-R750N	01311-03E	37066-03E (4)		17C54-03A		
GSX-R1100N	01321-03E	39092-03E (4)		40C53-03A		
LT80N	01001-03E	20158-01E		40856-03A		
LT160N	NLA	41097-01E		02C54-03A		
LT-F160N	01281-03E	41097-01E		02C61-03A		
LT230EN	NLA	42075-01E		35B25-03A		
LT-F250N	01261-03E	42097-01E		20B54-03A		
LT4WDN	NLA	42058-01E		19B25-03A		
LT-F4WDXN	01241-03E	42058-01E		19B35-03A		
LT250RN	NLA	22065-01E		19A27-03A		

(1) = SERVICE MANUAL SUPPLEMENT FOR THIS YEAR MODEL IS STILL AVAILABLE SEPARATELY, BUT IS ALREADY INCLUDED IN THE LATEST VERSION OF THE SERVICE MANUAL. (2) = USE THIS OWNER'S MANUAL AS A GUIDE ONLY. (3) = USE THE PREFIX GIVEN INSTEAD OF THE ONE AT THE TOP OF THE COLUMN. (4) = THIS MANUAL REQUIRES BINDER # 99935-01841. ATV MANUALS ARE BOUND, BUT SEVERAL CAN BE STORED TOGETHER IN BINDER #99935-01842.

AIR CLEANER.....	C-07	COWLING BODY.....	I-02	FRAME COVER.....	H-03	GASKET SET.....	B-02	OIL COOLER.....	C-09	SEAT TAIL COVER.....	J-03	TRANSMISSION.....	D-04
ALTERNATOR.....	E-03	COWLING INSTALLATIO.....	I-04	FRAME.....	G-02	GEAR SHIFTING.....	D-08	OIL PAN.....	B-09	SEAT.....	J-02	TURN SIGNAL LAMP.....	F-04
BATTERY.....	E-06	CRANKCASE COVER.....	B-08	FRONT BRAKE HOSE.....	K-04	HANDLE LEVER.....	H-10	OIL PUMP.....	B-10	SECOND AIR.....	C-10	WIRING HARNESS.....	F-07
CAM CHAIN.....	C-03	CRANKCASE.....	B-06	FRONT CALIPERS.....	K-03	HANDLE SWITCH.....	F-09	OPTONAL.....	L-07	SIGNAL GENERATOR.....	E-04		
CAM SHAFT / VALVE.....	C-02	CRANKSHAFT.....	B-11	FRONT DAMPER.....	J-07	HANDLEBAR.....	H-09	REAR CALIPER.....	L-05	SPEEDOMETER.....	E-07		
CANISTER.....	H-02	CYLINDER HEAD COVER.....	B-03	FRONT FENDER.....	H-07	HEADLAMP HOUSING.....	H-06	REAR CUSHION LEVER.....	L-03	STAND.....	G-04		
CARBURETOR FITTING.....	C-06	CYLINDER HEAD.....	B-04	FRONT MASTER CYLIND.....	K-05	HEADLAMP.....	F-02	REAR FENDER.....	H-11	STARTER CLUTCH.....	B-12		
CARBURETOR.....	C-04	CYLINDER.....	B-05	FRONT WHEEL.....	K-02	LABEL.....	I-05	REAR MASTER CYLINDE.....	L-06	STARTING MOTOR.....	E-02		
CLUTCH MASTER CYLIN.....	K-07	ELECTRICAL.....	E-05	FUEL COCK.....	G-09	MANUAL BOX.....	H-05	REAR SWINGING ARM.....	L-02	STEERING S'EM.....	J-08		
CLUTCH.....	D-02	FOOTREST.....	G-05	FUEL TANK.....	G-07	MUFFLER.....	C-06	REAR WHEEL.....	L-04	TAIL LAMP.....	F-06		

MODEL/ YEAR M/91	SET-UP MANUAL 99505-	SERVICE MANUAL 99500-	SERVICE MANUAL SUPPLEMENT 99501-	OWNERS MANUAL 99011-	OWNERS MANUAL SUPPLEMENT 99016-	OWNERS MAINTENANCE MANUAL 99011-
FA50M	01341-03E	10067-03E		02232-03A		
JR50M	NLA	20160-01E		NLA USE "N" MODEL		
DS80M	NLA	20019-03E		03428-03A		
DR250M	NLA	42114-03E (4)		15061-03A		
DR250SM	NLA	42114-03E (4)		15071-03A		
DR350M	NLA	43016-03E (4)		14061-03A		
DR350SM	NLA	43016-03E (4)		14071-03A		
DR650SM	NLA	46011-03E (4)		14A26-03A		
RM80M	01051-03E					02B25-03A
RM125M	01161-03E					27C52-03A
RM250M	NLA					28C52-03A
RMX250M	01301-03E					05D52-03A
GN125EM	01041-03E	31006-03E (4)		05324-03A		
GSF400M	01141-03E	33022-03E (4)		10051-03A		
GS500EM	NLA	34068-03E (4)		01052-03A		
VS750GLPM	01191-03E	38020-03E (4)		38A37-03A		
VS1400GLPM	01320-03E	39078-03E (4)		38B54-03A		
VX800M	NLA	38013-03E (4)		45C51-03A		
GSX600FM	NLA	35027-03E (4)		19C53-03A		
GSX750FM	NLA	37067-03E (4)		20C53-03A		
GSX1100FM	NLA	39085-03E (4)		48B54-03A		
GSX1100GM	NLA	39103-03E (4)		26D50-03A		
GSX-R750M	01311-03E	37056-03E (4)		17C54-03A		
GSX-R1100M	01321-03E	39092-03E (4)		40C52-03A		
LT80M	01001-03E	20158-01E		NLA USE "S" MODEL		
LT160EM	NLA	41097-01E		02C53-03A		
LT-F160EM	01281-03E	41097-01E		02C60-03A		
LT230EM	NLA	42075-01E		35B24-03A		
LT-F250M	01261-03E	42097-01E		NLA USE "M" MODEL		
LT4WDM	01201-03E	42058-01E		19B24-03A		
LT-F4WDXM	01241-03E	42058-01E		19B34-03A		
LT250RM	NLA	22065-01E		19A26-03A		

(1) - SERVICE MANUAL SUPPLEMENT FOR THIS YEAR MODEL IS ALREADY INCLUDED IN THE LATEST VERSION OF THE SERVICE MANUAL, BUT IS STILL AVAILABLE SEPARATELY.
(2) - USE THIS OWNER'S MANUAL AS A GUIDE ONLY. (3) - USE THE PREFIX GIVEN INSTEAD OF THE ONE AT THE TOP OF THE COLUMN. (4) - THIS MANUAL REQUIRES BINDER # 99935-01841. NOTE: ATV SERVICE MANUALS ARE BOUND AND DO NOT REQUIRE A BINDER, HOWEVER, SEVERAL CAN BE STORED TOGETHER IN BINDER #99935-01842.

MODEL/ YEAR L/90	SET-UP MANUAL 99505-	SERVICE MANUAL 99500-	SERVICE MANUAL SUPPLEMENT 99501-	OWNERS MANUAL 99011-	OWNERS MANUAL SUPPLEMENT 99016-	OWNERS MAINTENANCE MANUAL 99011-
FA50L	NLA	10067-03E		02231-03A		
JR50L	NLA	20160-01E		04437-03A		
DS80L	NLA	20019-03E		03427-03A		
DR100L	NLA	41034-03E (4)		05257-03A		
DR250L	NLA	42114-03E (4)		15060-03A		
DR250SL	NLA	42114-03E (4)		15070-03A		
DR350L	NLA	43016-03E (4)		14060-03A		
DR350SL	NLA	43016-03E (4)		14070-03A		
DR650SL	NLA	46011-03E (4)		14A25-03A		
RM80L	NLA					02B24-03A
RM125L	NLA					27C51-03A
RM250L	01230-03E					28C51-03A
RMX250L	01310-03E					05D51-03A
GS500EL	NLA	34068-03E (4)		01D51-03A		
VS750GLPL	NLA	38020-03E (4)		38A36-03A		
VS1400GLPL	01320-03E	39078-03E (4)		38B53-03A		
VX800L	NLA	38013-03E (4)		45C50-03A		
GSX600FL	NLA	35027-03E (4)		19C52-03A		
GSX750FL	NLA	37067-03E (4)		20C53-03A		
GSX1100FL	NLA	39085-03E (4)		48B53-03A		
GSX-R750L	01290-03E	37056-03E (4)		17C52-03A		
GSX-R1100L	01260-03E	39092-03E (4)		40C51-03A		
LT80L	NLA	20158-01E		40B54-03A		
LT160EL	NLA	41096-01E		02C52-03A		
LT230EL	NLA	42075-01E		35B23-03A		
LT250SL	NLA	42101-01E		25C51-03A		
LT-F250L	NLA	42097-01E		20B52-03A		
LT-4WDL	NLA	42058-01E		19B23-03A		
LT250RL	NLA	22065-01E		19A25-03A		
LT500RL	NLA	24014-01E		43B62-03A		

(1) - SERVICE MANUAL SUPPLEMENT FOR THIS YEAR MODEL IS ALREADY INCLUDED IN THE LATEST VERSION OF THE SERVICE MANUAL, BUT IT IS STILL AVAILABLE SEPARATELY.
(2) - USE THIS OWNER'S MANUAL AS A GUIDE ONLY. (3) - USE THE PREFIX GIVEN INSTEAD OF THE ONE AT THE TOP OF THE COLUMN. (4) - THIS MANUAL REQUIRES BINDER # 99935-01841. NOTE: ATV SERVICE MANUALS ARE BOUND AND DO NOT REQUIRE A BINDER, HOWEVER, SEVERAL CAN BE STORED TOGETHER IN BINDER #99935-01842.

AIR CLEANER	C-07	COWLING BODY	I-02	FRAME COVER	H-03	GASKET SET	B-02	OIL COOLER	C-08	SEAT TAIL COVER	J-03	TRANSMISSION	D-04
ALTERNATOR	E-03	COWLING INSTALLATIO	I-04	FRAME	G-02	GEAR SHIFTING	D-08	OIL PAN	B-09	SEAT	J-02	TURN SIGNAL LAMP	F-04
BATTERY	E-06	CRANKCASE COVER	B-08	FRONT BRAKE HOSE	K-04	HANDLE LEVER	H-10	OIL PUMP	B-10	SECOND AIR	C-10	WIRING HARNESS	F-07
CAM CHAIN	C-03	CRANKCASE	B-06	FRONT CALIPERS	K-03	HANDLE SWITCH	F-09	OPTIONAL	L-07	SIGNAL GENERATOR	E-04		
CAM SHAFT / VALVE	C-02	CRANKSHAFT	B-11	FRONT DAMPER	J-07	HANDLEBAR	H-09	REAR CALIPER	L-06	SPEEDOMETER	E-07		
CANISTER	H-02	CYLINDER HEAD COVER	B-03	FRONT FENDER	H-07	HEADLAMP HOUSING	H-06	REAR CUSHION LEVER	L-03	STAND	G-04		
CARBURETOR FITTING	C-06	CYLINDER HEAD	B-04	FRONT MASTER CYLIND	K-05	HEADLAMP	F-02	REAR FENDER	H-11	STARTER CLUTCH	B-12		
CARBURETOR	C-04	CYLINDER	B-05	FRONT WHEEL	K-02	LABEL	I-05	REAR MASTER CYLINDE	L-08	STARTING MOTOR	E-02		
CLUTCH MASTER CYLIN	K-07	ELECTRICAL	E-05	FUEL COCK	G-09	MANUAL BOX	H-05	REAR SWINGING ARM	L-02	STEERING STEM	J-08		
CLUTCH	D-02	FOOTREST	G-05	FUEL TANK	G-07	MUFFLER	C-08	REAR WHEEL	L-04	TAIL LAMP	F-06		

MODEL/ YEAR K/89	SET-UP MANUAL 99505-	SERVICE MANUAL 99500-	SERVICE MANUAL SUPPLEMENT 99501-	OWNERS MANUAL 99011-	OWNERS MANUAL SUPPLEMENT 99016-	OWNERS MAINTENANCE MANUAL 99011-
FA50K	NLA	10067-03E		NLA		
JR50K	NLA	20160-01E		04438-03A		
DS90K	NLA	20019-03E		03426-03A		
DR100K	NLA	41034-03E (4)		05255-03A		
RM80K	NLA					02B23-03A
RM125K	NLA					27C50-03A
RM250K	NLA					28C60-03A
RMX250K	NLA					05D70-03A
GS500EK	NLA	34068-03E (4)		01D50-03A		
VS750GLPK	NLA	38020-03E (4)		38A35-03A		
GSX600FK	NLA	35027-03E (4)		19C51-03A		
GSX750FK	NLA	37067-03E (4)		20C50-03A		
GSX1100FK	NLA	39085-03E (4)		48B52-03A		
GSX-R750K	NLA	37056-03E (4)		17C51-03A		
GSX-R1100K	NLA	39092-03E (4)		40C50-03A		
LT80K	NLA	20158-01E		40B53-03A		
LT180EK	NLA	41096-01E		02C51-03A		
LT230EK	NLA	42075-01E		35B22-03A		
LT250SK	NLA	42101-01E		26C50-03A		
LT-F250K	NLA	42097-01E		20B51-03A		
LT300EK	NLA	42082-01E		41B52-03A		
LT-4WDK	NLA	42058-01E		19B22-03A		
LT250RK	NLA	22065-01E		19A24-03A		
LT500RK	NLA	24014-C:2		43B61-03A		

(1) - SERVICE MANUAL SUPPLEMENT FOR THIS YEAR MODEL IS ALREADY INCLUDED IN THE LATEST VERSION OF THE SERVICE MANUAL, BUT IS STILL AVAILABLE SEPARATELY. (2) - USE THIS OWNER'S MANUAL AS A GUIDE ONLY. (3) - USE THE PREFIX GIVEN INSTEAD OF THE ONE AT THE TOP OF THE COLUMN. (4) - THIS MANUAL REQUIRES BINDER # 99938-01B41. NOTE: ATV SERVICE MANUALS ARE BOUND AND DO NOT REQUIRE A BINDER, HOWEVER, SEVERAL CAN BE STORED TOGETHER IN BINDER #99938-01B42.

MODEL/ YEAR J/88	SET-UP MANUAL 99505-	SERVICE MANUAL 99500-	SERVICE MANUAL SUPPLEMENT 99501-	OWNERS MANUAL 99011-	SERVICE MANUAL SUPPLEMENT 99016-	OWNERS MAINTENANCE MANUAL 99011-
FA50J	NLA	10067-03E		02229-03A		
JR50J	NLA	20160-01E		04435-03A		
SP125J	NLA	41082-03E (4)		44A23-03A		
SP200J	NLA	41072-03E (4)		42A23-03A		
DS90J	NLA	20019-03E		03426-03A		
DR100J	NLA	41034-03E (4)		05255-03A		
DR125J	NLA	41082-03E (4)		44A33-03A		
DR200J	NLA	41072-03E (4)		42A33-03A		
RM80J	NLA					02B22-03A
RM125J	NLA					01B22-03A
RM250J	NLA					28C50-03A
GN250J	NLA	32023-03E (4)		38324-03A		
GS450LJ	NLA	34025-03E (4)		44B35-03A		
LS650J	NLA	36065-03E (4)		24B22-03A		
VS750GLPJ	NLA	38020-03E (4)		38A34-03A		
VS1400GLPJ	NLA	39078-03E (4)		NLA USE "L" MODEL		
GSX600FJ	NLA	35027-03E (4)		19C50-03A		
GSX1100FJ	NLA	39085-03E (4)		48B51-03A		
GSX-R750J	NLA	37056-03E (4)		17C50-03A		
GSX-R1100J	NLA	39062-03E (4)		06B22-03A		
GV1400GDJ	NLA	39052-03E (4)		24A22-03A		
LT80J	NLA	20158-01E		40B51-03A		
LT230EJ	NLA	42075-01E		35B21-03A		
LT230SJ	NLA	42034-01E		22A23-03A		
LT-F250J	NLA	42097-01E		20B50-03A		
LT-4WDJ	NLA	42058-01E		19B21-03A		
LT300EJ	NLA	42082-01E		41B51-03A		
LT250RJ	NLA	22065-01E		19A23-03A		
LT500RJ	NLA	24014-01E		43B60-03A		

(1) - SERVICE MANUAL SUPPLEMENT FOR THIS YEAR MODEL IS ALREADY INCLUDED IN THE LATEST VERSION OF THE SERVICE MANUAL, BUT IS STILL AVAILABLE SEPARATELY. (2) - USE THIS OWNER'S MANUAL AS A GUIDE ONLY. (3) - USE THE PREFIX GIVEN INSTEAD OF THE ONE AT THE TOP OF THE COLUMN. (4) - THIS MANUAL REQUIRES BINDER # 99938-01B41. NOTE: ATV SERVICE MANUALS ARE BOUND AND DO NOT REQUIRE A BINDER, HOWEVER, SEVERAL CAN BE STORED TOGETHER IN BINDER #99938-01B42.

AIR CLEANER.....	C-07	COWLING BODY.....	I-02	FRAME COVER.....	H-03	GASKET SET.....	B-02	OIL COOLER.....	C-09	SEAT TAIL COVER.....	J-03	TRANSMISSION.....	D-04
ALTERNATOR.....	E-03	COWLING INSTALLATIO.....	I-04	FRAME.....	G-02	GEAR SHIFTING.....	D-06	OIL PAN.....	B-09	SEAT.....	J-02	TURN SIGNAL LAMP.....	F-04
BATTERY.....	C-08	CRANKCASE COVER.....	B-08	FRONT BRAKE HOSE.....	K-04	HANDLE LEVER.....	H-10	OIL PUMP.....	B-10	SECOND AIR.....	C-10	WIRING HARNESS.....	F-07
CAM CHAIN.....	C-03	CRANKCASE.....	B-06	FRONT CALIPERS.....	K-03	HANDLE SWITCH.....	F-09	OPTIONAL.....	L-07	SIGNAL GENERATOR.....	E-04		
CAM SHAFT / VALVE.....	C-02	CRANKSHAFT.....	B-11	FRONT DAMPER.....	J-07	HANDLEBAR.....	H-09	REAR CALIPER.....	L-05	SPEEDOMETER.....	E-07		
CANISTER.....	H-02	CYLINDER HEAD COVER.....	B-03	FRONT FENDER.....	H-07	HEADLAMP HOUSING.....	H-06	REAR CUSHION LEVER.....	L-03	STAND.....	G-04		
CARBURETOR FITTING.....	C-06	CYLINDER HEAD.....	B-04	FRONT MASTER CYLIND.....	K-05	HEADLAMP.....	F-02	REAR FENDER.....	H-11	STARTER CLUTCH.....	B-12		
CARBURETOR.....	C-04	CYLINDER.....	B-05	FRONT WHEEL.....	K-02	LABEL.....	I-05	REAR MASTER CYLINDE.....	L-06	STARTING MOTOR.....	E-02		
CLUTCH MASTER CYLIN.....	K-07	ELECTRICAL.....	E-05	FUEL COCK.....	G-09	MANUAL BOX.....	H-05	REAR SWINGING ARM.....	-02	STEERING STEM.....	J-08		
CLUTCH.....	D-02	FOOTREST.....	G-05	FUEL TANK.....	G-07	MUFFLER.....	C-08	REAR WHEEL.....	L-04	TAIL LAMP.....	F-06		

MODEL/ YEAR H/87	SET-UP MANUAL 99505-	SERVICE MANUAL 99500-	SERVICE MANUAL SUPPLEMENT 99501-	OWNERS MANUAL 99011-	SERVICE MANUAL SUPPLEMENT 99016-	OWNERS MAINTENANCE MANUAL 99011-
FA50H	NLA	10067-03E		02226-03A		
JR50H	NLA	20160-01E		04434-03A		
GSX-R50(RB50)	NLA	40000-01E		28850-03A		
SP125H	NLA	41082-03E (4)		44A22-03A		
SP200H	NLA	41072-03E (4)		42A21-03A		
DS80H	NLA	20019-03E		03424-03A		
DR100H	NLA	41034-03E (4)		NLA		
DR125H	NLA	41082-03E (4)		44A32-03A		
DR200H	NLA	41072-03E (4)		42A32-03A		
RM80H	NLA					02821-03A
RM125H	NLA					NLA
RM250H	NLA					00822-03A
GS450LH	NLA	34025-03E (4)		44935-03A		
LS650PH/FH	NLA	36065-03E (4)		NLA USE "J" MODEL		
VS700GLPH/FH	NLA	38020-03E (4)		38A22-03A		
VS1400GLPH/FH	NLA	39078-03E (4)		38B50-03A		
GSX-R750H	NLA	37033-03E (4)		NLA		
GSX-R1100H	NLA	39062-03E (4)		06821-03A		
GV1400GDH	NLA	39052-03E (4)		24A21-03A		
GV1400GCH	NLA	39052-03E (4)		24A21-03A		
LT50H	NLA	20125-03E		04233-03A		
LT80H	NLA	20158-01E		40850-03A		
LT125H	NLA	41013-03E		18924-03A		
LT185H	NLA	41054-01E		24423-03A		
LT-F230H	NLA	42042-01E		18821-03A		
LT230EH	NLA	42075-01E		NLA		
LT230SH	NLA	42034-01E		22A22-03A		
LT300EH	NLA	42082-01E		41850-03A		
LT-4WDH	NLA	42058-01E		19820-03A		
LT250RH	NLA	22085-01E		19A22-03A		
LT500RH	NLA	24014-01E		43850-03A		

(1) - SERVICE MANUAL SUPPLEMENT FOR THIS YEAR MODEL IS ALREADY INCLUDED IN THE LATEST VERSION OF THE SERVICE MANUAL, BUT IS STILL AVAILABLE SEPARATELY.
(2) - USE THIS OWNER'S MANUAL AS A GUIDE ONLY. (3) - USE THE PREFIX GIVEN INSTEAD OF THE ONE AT THE TOP OF THE COLUMN. (4) - THIS MANUAL REQUIRES BINDER # 99835-01841. NOTE: ATV SERVICE MANUALS ARE BOUND AND DO NOT REQUIRE A BINDER, HOWEVER, SEVERAL CAN BE STORED TOGETHER IN BINDER #99835-01842.

MODEL/ YEAR G/86	SET-UP MANUAL 99505-	SERVICE MANUAL 99500-	SERVICE MANUAL SUPPLEMENT 99501-	OWNERS MANUAL 99011-	SERVICE MANUAL SUPPLEMENT 99016-	OWNERS MAINTENANCE MANUAL 99011-
FA50G	NLA	10067-03E		NLA		
JR50G	NLA	20160-01E		04433-03A		
SP125G	NLA	41082-03E (4)		44A21-03A		
SP200G	NLA	41072-03E (4)		42A21-03A		
DS80G	NLA	20019-03E		NLA		
DR100G	NLA	41034-03E (4)		NLA USE "L" MODEL		
DR125G	NLA	41082-03E (4)		44A31-03A		
DR200G	NLA	41072-03E (4)		42A31-03A		
RM80G	NLA					02820-03A
RM125G	NLA					01820-03A
RM250G	NLA					00820-03A
GS450LG	NLA	34025-03E (4)		NLA USE "H" MODEL		
GS550LG	NLA	35012-03E (4)		43533-03A		
GS550ESG	NLA	35012-03E (4)		43423-03A		
LS650PG	NLA	36065-03E (4)		24820-03A		
LS650FG	NLA	36065-03E (4)		24820-03A		
VS700GLPG	NLA	38020-03E (4)		38A20-03A		
VS700GLFG	NLA	38020-03E (4)		38A20-03A		
VS700GLEPG	NLA	38020-03E (4)		38A20-03A		
VS700GLEFG	NLA	38020-03E (4)		38A20-03A		
GSX-R750G	NLA	37033-03E (4)		28A20-03A		
GSX-R750RG	NLA	37033-03E (4)		28A30-03A		
GSX-R1100G	NLA	39062-03E (4)		06820-03A		
GS1150EG	NLA	39032-03E (4)		00A22-03A		
GV1200GLG	NLA	39041-03E (4)		05A21-03A		
GV1400GTG	NLA	39052-03E (4)		NLA USE "H" MODEL		
GV1400GDG	NLA	39052-03E (4)		NLA USE "H" MODEL		
GV1400GCG	NLA	39052-03E (4)		NLA USE "H" MODEL		
ALT125G	NLA	41022-03E		24323-03A		
LT50G	NLA	20125-03E		04232-03A		
LT125G	NLA	41013-03E		18923-03A		
LT185G	NLA	41054-01E		24422-03A		
LT230GEG	NLA	42022-01E		18A21-03A		
LT-F230G	NLA	42042-01E		18820-03A		
LT230SG	NLA	42034-01E		22A21-03A		
LT250EFG	NLA	42011-01E		NLA		
LT250RG	NLA	22041-01E		19A21-03A		

(1) - SERVICE MANUAL SUPPLEMENT FOR THIS YEAR MODEL IS ALREADY INCLUDED IN THE LATEST VERSION OF THE SERVICE MANUAL, BUT IS STILL AVAILABLE SEPARATELY.
(2) - USE THIS OWNER'S MANUAL AS A GUIDE ONLY. (3) - USE THE PREFIX GIVEN INSTEAD OF THE ONE AT THE TOP OF THE COLUMN. (4) - THIS MANUAL REQUIRES BINDER # 99835-01841. NOTE: ATV SERVICE MANUALS ARE BOUND AND DO NOT REQUIRE A BINDER, HOWEVER, SEVERAL CAN BE STORED TOGETHER IN BINDER #99835-01842.

AIR CLEANER.....	C-07	COWLING BODY.....	I-02	FRAME COVER.....	H-03	GASKET SET.....	B-02	OIL COOLER.....	C-09	SEAT TAIL COVER.....	J-03	TRANSMISSION.....	D-04
ALTERNATOR.....	E-03	COWLING INSTALLATIO	I-04	FRAME.....	G-02	GEAR SHIFTING.....	D-06	OIL PAN.....	B-09	SEAT.....	J-02	TURN SIGNAL LAMP.....	F-04
BATTERY.....	E-08	CRANKCASE COVER.....	B-08	FRONT BRAKE HOSE.....	K-04	HANDLE LEVER.....	H-10	OIL PUMP.....	B-10	SECOND AIR.....	C-10	WIRING HARNESS.....	F-07
CAM SHAFT.....	C-03	CRANKCASE.....	B-06	FRONT CALIPERS.....	K-03	HANDLE SWITCH.....	F-09	OPTIONAL.....	L-07	SIGNAL GENERATOR.....	E-04		
CAM SHAFT / VALVE.....	C-02	CRANKSHAFT.....	B-11	FRONT DAMPER.....	J-07	HANDLEBAR.....	H-09	REAR CALIPER.....	L-05	SPEEDOMETER.....	E-07		
CANISTER.....	H-02	CYLINDER HEAD COVER	B-03	FRONT FENDER.....	H-07	HEADLAMP HOUSING.....	H-06	REAR CUSHION LEVER.....	L-03	STAND.....	G-04		
CARBURETOR FITTING.....	C-06	CYLINDER HEAD.....	B-04	FRONT MASTER CYLIND	K-05	HEADLAMP.....	F-02	REAR FENDER.....	H-11	STARTER CLUTCH.....	B-12		
CARBURETOR.....	C-04	CYLINDER.....	B-05	FRONT WHEEL.....	K-02	LABEL.....	I-05	REAR MASTER CYLINDE	L-06	STARTING MOTOR.....	E-02		
CLUTCH MASTER CYLIN	K-07	ELECTRICAL.....	E-05	FUEL COCK.....	G-09	MANUAL BOX.....	H-05	REAR SWINGING ARM.....	L-02	STEERING STEM.....	J-08		
CLUTCH.....	D-02	FOOTREST.....	G-05	FUEL TANK.....	G-07	MUFFLER.....	C-08	REAR WHEEL.....	L-04	TAIL LAMP.....	F-06		

MODEL/ YEAR F/85	SET-UP MANUAL 99505-	SERVICE MANUAL 99500-	SERVICE MANUAL SUPPLEMENT 99501-	OWNERS MANUAL 99011-	SERVICE MANUAL SUPPLEMENT 99016-	OWNERS MAINTENANCE MANUAL 99011-
FA50F	NLA	10067-03E		02226-03A		
JR50F	NLA	20160-01E		NLA		
SP250F	NLA	42002-03E (4)		38223-03A		
SP600F	NLA	NLA		14A20-03A		
DS90F	NLA	20019-03E		03427-03A		
DR100F	NLA	41034-03E (4)		NLA		
DR250F	NLA	42002-03E (4)		NLA		
RM80F	NLA					20923-03A
RM125F	NLA					14621-03A
RM250F	NLA					14621-03A
GN250F	NLA	32023-03E (4)		38323-03A		
GS300LF	NLA	32013-03E (4)		NLA		
GS450LF	NLA	34025-03F (4)		44932-03A		
GS450GAF	NLA	34041-03E (4)		NLA		
GS550EF	NLA	35012-03E (4)		43422-03A		
GS550ESF	NLA	35012-03E (4)		43422-03A		
GS550LF	NLA	35012-03E (4)		43532-03A		
GS700EF	NLA	37022-03E (4)		NLA		
GS700ESF	NLA	J7022-03E (4)		NLA		
GS1150EF	NLA	39032-03E (4)		NLA		
GS1150ESF	NLA	39032-03E (4)		NLA		
GV700GLF	NLA	36040-03E (4)		07A20-03A		
GV1200GLF	NLA	39041-03E (4)		NLA USE "G" MODEL		
ALT125F	NLA	41022-03E		24322-03A		
ALT185F	NLA	41060-01E		24330-03A		
LT50F	NLA	20125-03E		04231-03A		
LT125F	NLA	41013-03E		18922-03A		
LT185F	NLA	41054-01E		24421-03A		
LT230GEF	NLA	42022-01E		18A20-03A		
LT230SF	NLA	42034-01E		22A20-03A		
LT250EF	NLA	42011-01E		24520-03A		
LT250EFF	NLA	42011-01E		24520-00A		
LT250RF	NLA	22041-01E		19A20-03A		

(1) - SERVICE MANUAL SUPPLEMENT FOR THIS YEAR MODEL IS ALREADY INCLUDED IN THE LATEST VERSION OF THE SERVICE MANUAL, BUT IS STILL AVAILABLE SEPARATELY.
(2) - USE THIS OWNER'S MANUAL AS A GUIDE ONLY. (3) - USE THE PREFIX GIVEN INSTEAD OF THE ONE AT THE TOP OF THE COLUMN. (4) - THIS MANUAL REQUIRES BINDER # 99928-01841. NOTE: ATV SERVICE MANUALS ARE BOUND AND DO NOT REQUIRE A BINDER, HOWEVER, SEVERAL CAN BE STORED TOGETHER IN BINDER #99928-01842.

MODEL/ YEAR E/84	SET-UP MANUAL 99505-	SERVICE MANUAL 99500-	SERVICE MANUAL SUPPLEMENT 99501-	OWNERS MANUAL 99011-	OWNERS MANUAL SUPPLEMENT 99016-	OWNERS MAINTENANCE MANUAL 99011-
FA50E	NLA	10067-03E		NLA USE "F" MODEL (2)		
ALT50E	NLA	NLA		04630-03A		
ALT125E	NLA	41022-03E		NLA		
LT50E	NLA	20125-03E		04230-03A		
LT125E	NLA	41013-03E		18921-03A		
LT185E	NLA	41054-01E		24420-03A		
DR100E	NLA	41034-03E (4)		NLA		
DR125E	NLA	41001-03E (4)		05232-03A		
RM80E	NLA					20922-03A
RM125E	NLA					14520-03A
RM250E	NLA					NLA
RM500E	NLA					14223-03A
PE175E	NLA					NLA
GS550ESE	NLA	35012-03E (4)		43421-03A		
GS1100GKE	NLA	39022-03E (4)		49432-03A		
GS1150ESE	NLA	39032-03E (4)		NLA		

(1) - SERVICE MANUAL SUPPLEMENT FOR THIS YEAR MODEL IS ALREADY INCLUDED IN THE LATEST VERSION OF THE SERVICE MANUAL, BUT IT IS STILL AVAILABLE SEPARATELY.
(2) - USE THIS OWNER'S MANUAL AS A GUIDE ONLY. (3) - USE THE PREFIX GIVEN INSTEAD OF THE ONE AT THE TOP OF THE COLUMN. (4) - THIS MANUAL REQUIRES BINDER # 99928-01841. NOTE: ATV SERVICE MANUALS ARE BOUND AND DO NOT REQUIRE A BINDER, HOWEVER, SEVERAL CAN BE STORED TOGETHER IN BINDER #99928-01842.

AIR CLEANER.....	C-07
ALTERNATOR.....	E-03
BATTERY.....	E-06
CAM SHAFT.....	C-03
CAM CHAIN / VALVE.....	C-02
CANISTER.....	H-02
CARBURETOR FITTING.....	C-06
CARBURETOR.....	C-04
CLUTCH MASTER CYLIN.....	K-07
CLUTCH.....	D-02

COWLING BODY.....	H-02
COWLING INSTALLATIO.....	H-04
CRANKCASE COVER.....	B-08
CRANKCASE.....	B-06
CRANKSHAFT.....	B-11
CYLINDER HEAD COVER.....	B-03
CYLINDER HEAD.....	B-04
CYLINDER.....	B-05
ELECTRICAL.....	E-05
FOOTREST.....	G-05

FRAME COVER.....	H-03
FRAME.....	G-02
FRONT BRAKE HOSE.....	K-04
FRONT CALIPERS.....	K-03
FRONT DAMPER.....	J-07
FRONT FENDER.....	H-07
FRONT MASTER CYLIND.....	K-05
FRONT WHEEL.....	K-02
FUEL COCK.....	G-09
FUEL TANK.....	G-07

GASKET SET.....	B-02
GEAR SHIFTING.....	D-06
HANDLE LEVER.....	H-10
HANDLE SWITCH.....	F-09
HANDLEBAR.....	H-09
HEADLAMP HOUSING.....	H-06
HEADLAMP.....	F-02
LABEL.....	F-05
MANUAL BOX.....	H-05
MUFFLER.....	C-08

OIL COOLER.....	C-09
OIL PAN.....	B-09
OIL PUMP.....	B-10
OPTIONAL.....	L-07
REAR CALIPER.....	L-05
REAR CUSHION LEVER.....	L-03
REAR FENDER.....	H-11
REAR MASTER CYLINDE.....	L-08
REAR SWINGING ARM.....	L-02
REAR WHEEL.....	L-04

SEAT TAIL COVER.....	J-03
SEAT.....	J-02
SECOND AIR.....	C-10
SIGNAL GENERATOR.....	E-04
SPEEDOMETER.....	E-07
STAND.....	G-04
STARTER CLUTCH.....	B-12
STARTING MOTOR.....	E-02
STEERING STEM.....	J-08
TAIL LAMP.....	F-06

TRANSMISSION.....	D-04
TURN SIGNAL LAMP.....	F-04
WIRING HARNESS.....	F-07

MODEL/ YEAR D/83	SET-UP MANUAL 99505-	SERVICE MANUAL 99500-	SERVICE MANUAL SUPPLEMENT 99501-	OWNERS MANUAL 99011-	OWNERS MANUAL SUPPLEMENT 99016-	OWNERS MAINTENANCE MANUAL 99011-
ALT50	NLA	NLA		04830-03A		
ALT125	NLA	41022-03F		NLA		
DR1000	NLA	41034-03E (4)		NLA		
DR1250	NLA	41001-03E (4)		NLA-USE "E" MODEL (2)		
DR2500	NLA	42002-03E (4)		38231-03A		
DR5000	NLA	NLA		NLA		
DS800	NLA	20019-03E		NLA-USE "F" MODEL (2)		
FA500	NLA	10067-03E (4)		NLA-USE "F" MODEL (2)		
FZ500	NLA	10054-03E (4)		NLA		
GN1250	NLA	31008-03E (4)		05321-03A		
GN2500	NLA	22023-03E (4)		38231-03A		
GN4500	NLA	26031-03E (4)		15520-03A		
GN650XD	NLA	26031-03E (4)		15520-03A		
GS300LD	NLA	32013-03E (4)		11921-03A		
GS450ED	NLA	24025-03E (4)		44430-03A		
GS450GAD	NLA	34041-03E (4)		NLA		
GS450LD	NLA	34025-03E (4)		44930-03A		
GS450TXD	NLA	34025-03E (4)		44740-02A		
GS550ED	NLA	26012-03E (4)		43420-03A		
GS550ESD	NLA	26012-03E (4)		43420-03A		
GS550LD	NLA	26012-03E (4)		43830-03A		
GS550PD	NLA	26002-03E (4)		34222-03A		
GS550GLD	NLA	26002-03E (4)		NLA		
GS550MD	NLA	26002-03E (4)		NLA		
GS750ED	NLA	27022-03E (4)		31320-03A		
GS750ESD	NLA	27022-03E (4)		31320-03A		
GS750SD	NLA	27013-03E (4)		48521-03A		
GS750TD	NLA	27013-03E (4)		NLA		
GS850GD	NLA	28002-03E (4)		NLA		
GS850GLD	NLA	28002-03E (4)		NLA		
GS1100ESD	NLA	28012-03E (4)		49521-03A		
GS1100ESD	NLA	28012-03E (4)		NLA		
GS1100GSD	NLA	28022-03E (4)		NLA		
GS1100GLD	NLA	28022-03E (4)		49071-03A		
GS1100GRD	NLA	28022-03E (4)		NLA		
GS1100PSD	NLA	28012-03E (4)		NLA		
JRS500	NLA	20090-03E (4)		NLA		
LT1250	NLA	41013-03E		NLA-USE "E" MODEL (2)		
PE1750	NLA					NLA
RM600	NLA					NLA
RM800	NLA					NLA-USE "E" MODEL (2)
RM1250	NLA					14123-03A
RM2500	NLA					14321-03A
RM5000	NLA					NLA-USE "E" MODEL (2)
SP1000	NLA	41034-03E (4)		05240-03A		
SP1250	NLA	41001-03E (4)		05221-03A		
SP2500	NLA	42002-03E (4)		NLA		
SP5000	NLA			NLA		
XN950	NLA	NLA		NLA		


(1) - SERVICE MANUAL SUPPLEMENT FOR THIS YEAR MODEL IS ALREADY INCLUDED IN THE LATEST VERSION OF THE SERVICE MANUAL, BUT IS STILL AVAILABLE SEPARATELY.
(2) - USE THIS OWNER'S MANUAL AS A GUIDE ONLY. (3) - USE THE PREFIX GIVEN INSTEAD OF THE ONE AT THE TOP OF THE COLUMN. (4) - THIS MANUAL REQUIRES BINDER # 99935-01841. NOTE: ATV SERVICE MANUALS ARE BOUND AND DO NOT REQUIRE A BINDER, HOWEVER, SEVERAL CAN BE STORED TOGETHER IN BINDER #99935-01842.

MODEL/ YEAR Z/82	SET-UP MANUAL 99505-	SERVICE MANUAL 99500-	SERVICE MAN. SUPPLEMENT 99501-	OWNERS MANUAL 99011-	OWNERS MANUAL SUPPLEMENT 99016-	OWNERS MAINTENANCE MANUAL 99011-
DR125Z	NLA	41001-03E (4)		NLA-USE "E" MODEL (2)		
DR250Z	NLA	42002-03E (4)		NLA-USE "D" MODEL (2)		
DR500Z	NLA	NLA		NLA		
DS80Z	NLA	20019-03E		48432-03A		
FA50Z	NLA	10067-03E		NLA-USE "F" MODEL (2)		
FZ50Z	NLA	10054-03E		NLA		
GN125Z	NLA	31008-03E (4)		NLA-USE "D" MODEL (2)		
GN250Z	NLA	32023-03E (4)		NLA-USE "F" MODEL (2)		
GN400TZ	NLA	NLA		37322-03A		
GS300LZ	NLA	32013-03E (4)		NLA-USE "F" MODEL (2)		
GS450EZ	NLA	34025-03E (4)		44123-03A		
GS450LZ	NLA	34025-03E (4)		NLA		
GS450TZ	NLA	34025-03E (4)		44321-03A		
GS450TXZ	NLA	34025-03E (4)		44321-03A		
GS450GAZ	NLA	34041-03E (4)		NLA		
GS550LZ	NLA	35003-01E (4)		NLA		
GS550MZ	NLA	35003-01E (4)		47721-03A		
GS650EZ	NLA	36011-03E (4)		34521-03A		
GS650GZ	NLA	36002-03E (4)		NLA-USE "D" MODEL (2)		
GS650GLZ	NLA	36002-03E (4)		NLA		
GS750EZ	NLA	37013-03E (4)		NLA		
GS750TZ	NLA	37013-03E (4)		NLA-USE "D" MODEL (2)		
GS850GZ	NLA	38002-03E (4)		NLA-USE "D" MODEL (2)		
GS850GLZ	NLA	38002-03E (4)		NLA-USE "D" MODEL (2)		
GS1000SZ	NLA	39012-03E (4)		NLA		
GS1100EZ	NLA	39012-03E (4)		NLA-USE "D" MODEL (2)		
GS1100GZ	NLA	39022-03E (4)		NLA		
GS1100GLZ	NLA	39022-03E (4)		NLA-USE "D" MODEL (2)		
GS1100GKZ	NLA	39022-03E (4)		NLA		
JRS50Z	NLA	20160-01E (4)		NLA		
PE175Z	NLA					NLA
RM60Z	NLA					NLA
RM80Z	NLA					20420-03A
RM125Z	NLA					NLA
RM250Z	NLA					NLA-USE "D" MODEL (2)
RM485Z	NLA					NLA
RS175Z	NLA					NLA
SP125Z	NLA	41001-03E (4)		NLA		
SP250Z	NLA	42002-03E (4)		NLA		
SP500Z	NLA	NLA		NLA-USE "D" MODEL (2)		

(1) - SERVICE MANUAL SUPPLEMENT FOR THIS YEAR MODEL IS ALREADY INCLUDED IN THE LATEST VERSION OF THE SERVICE MANUAL, BUT IS STILL AVAILABLE SEPARATELY.
(2) - USE THIS OWNER'S MANUAL AS A GUIDE ONLY. (3) - USE THE PREFIX GIVEN INSTEAD OF THE ONE AT THE TOP OF THE COLUMN. (4) - THIS MANUAL REQUIRES BINDER # 99935-01841. NOTE: ATV SERVICE MANUALS ARE BOUND AND DO NOT REQUIRE A BINDER, HOWEVER, SEVERAL CAN BE STORED TOGETHER IN BINDER #99935-01842.

AIR CLEANER.....	C-07	COWLING BODY.....	H-02	FRAME COVER.....	H-03	GASKET SET.....	B-02	OIL COOLER.....	C-08	SEAT TAIL COVER.....	J-03	TRANSMISSION.....	D-04
ALTERNATOR.....	E-03	COWLING INSTALLATIO.....	H-04	FRAME.....	G-02	GEAR SHIFTING.....	D-06	OIL PAN.....	B-09	SEAT.....	J-02	TURN SIGNAL LAMP.....	F-04
BATTERY.....	E-06	CRANKCASE COVER.....	B-08	FRONT BRAKE HOSE.....	K-04	HANDLE LEVER.....	H-10	OIL PUMP.....	B-10	SECOND AIR.....	C-10	WIRING HARNESS.....	F-07
CAM CHAIN.....	C-03	CRANKCASE.....	B-06	FRONT CALIPERS.....	K-03	HANDLE SWITCH.....	F-09	OPTIONAL.....	L-07	SIGNAL GENERATOR.....	E-04		
CAM SHAFT / VALVE.....	C-02	CRANKSHAFT.....	B-11	FRONT DAMPER.....	J-07	HANDLEBAR.....	H-09	REAR CALIPER.....	L-05	SPEEDOMETER.....	E-07		
CANISTER.....	H-02	CYLINDER HEAD COVER.....	B-03	FRONT FENDER.....	H-07	HEADLAMP HOUSING.....	H-08	REAR CUSHION LEVER.....	L-03	STAND.....	G-04		
CARBURETOR FITTING.....	C-08	CYLINDER HEAD.....	B-04	FRONT MASTER CYLIND.....	K-05	HEADLAMP.....	F-02	REAR FENDER.....	H-11	STARTER CLUTCH.....	B-12		
CARBURETOR.....	C-04	CYLINDER.....	B-05	FRONT WHEEL.....	K-02	LABEL.....	H-05	REAR MASTER CYLIND.....	L-06	STARTING MOTOR.....	E-02		
CLUTCH MASTER CYLIN.....	K-07	ELECTRICAL.....	E-05	FUEL COCK.....	G-09	MANUAL BOX.....	H-05	REAR SWINGING ARM.....	L-02	STEERING STEM.....	J-08		
CLUTCH.....	D-02	FOOTREST.....	G-05	FUEL TANK.....	G-07	MUFFLER.....	C-08	REAR WHEEL.....	L-04	TAIL LAMP.....	F-06		


FIG.1

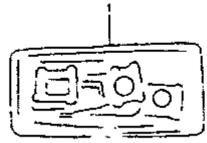

GSF1200SK1 E03 E28_001
GASKET SET

B 2


FIG.1A

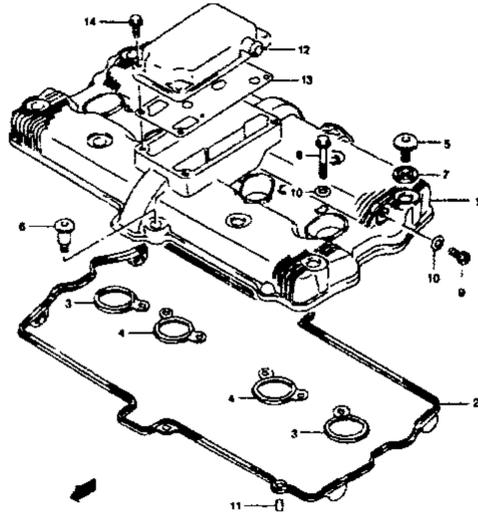

GSF1200SK1 E03 E28_001A
CYLINDER HEAD COVER

B 3


FIG.2

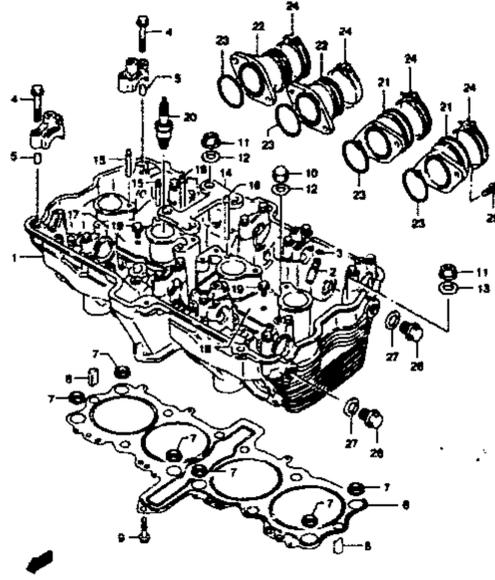

GSF1200SK1 E03 E28_002
CYLINDER HEAD

B 4


FIG.3

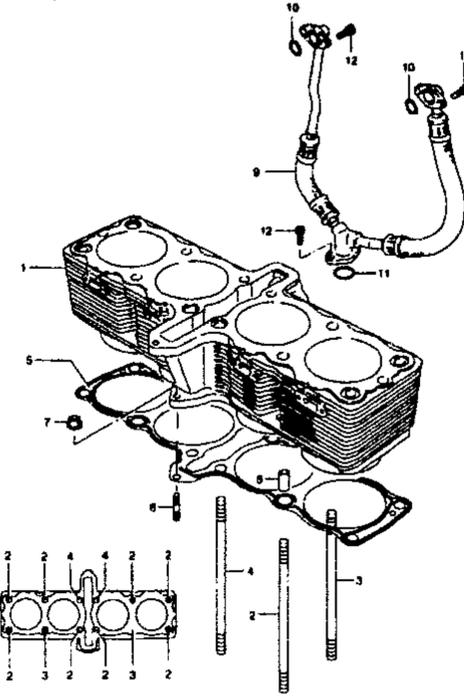

GSF1200SK1 E03 E28_003
CYLINDER

B 5


FIG.4

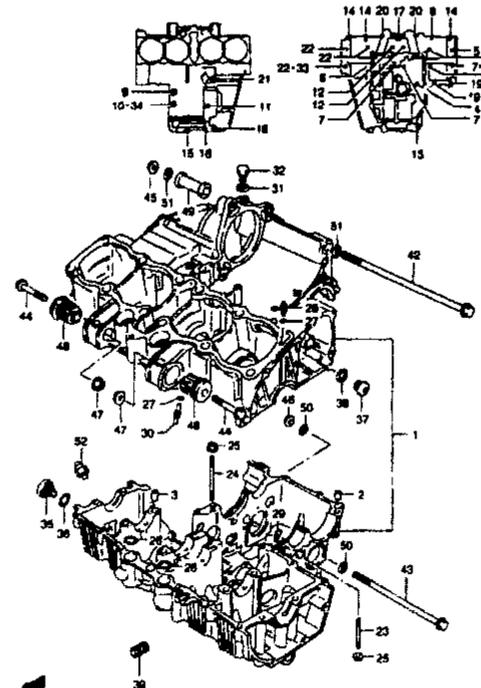

GSF1200SK1 E03 E28_004
CRANKCASE

B 6


FIG.5

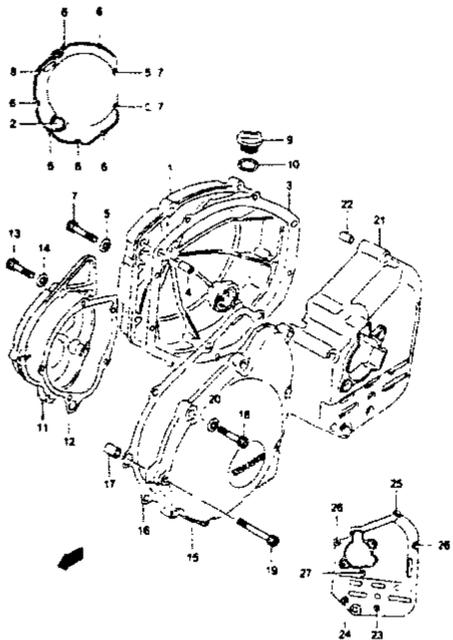

GSF1200SK1 E03 E28_005
CRANKCASE COVER

B 8


FIG.6

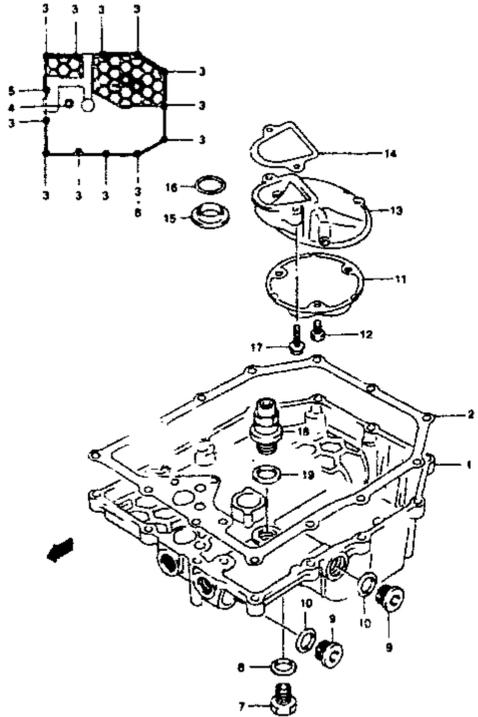

GSF1200SK1 E03 E28_006
OIL PAN

B 9


FIG.7

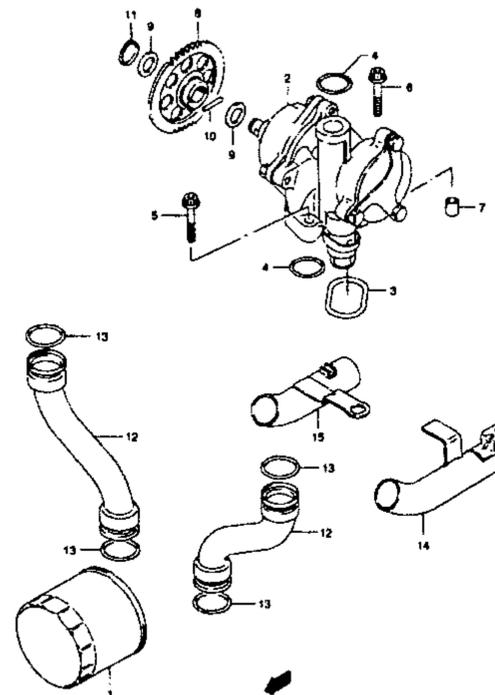

GSF1200SK1 E03 E28_007
OIL PUMP

B 10


FIG.8

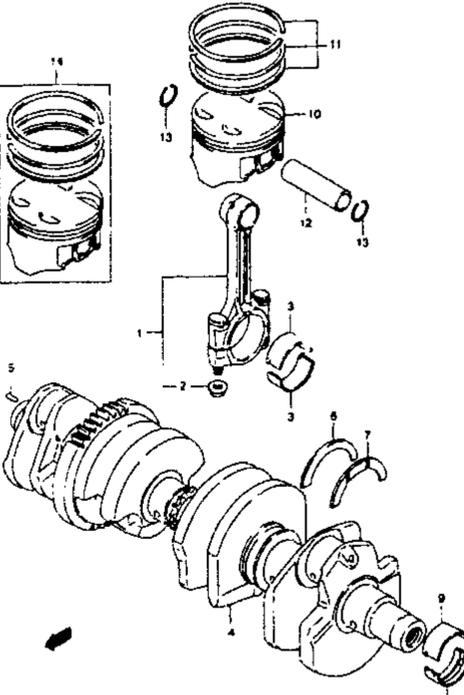

GSF1200SK1 E03 E28_008
CRANKSHAFT

B 11

FIG.9

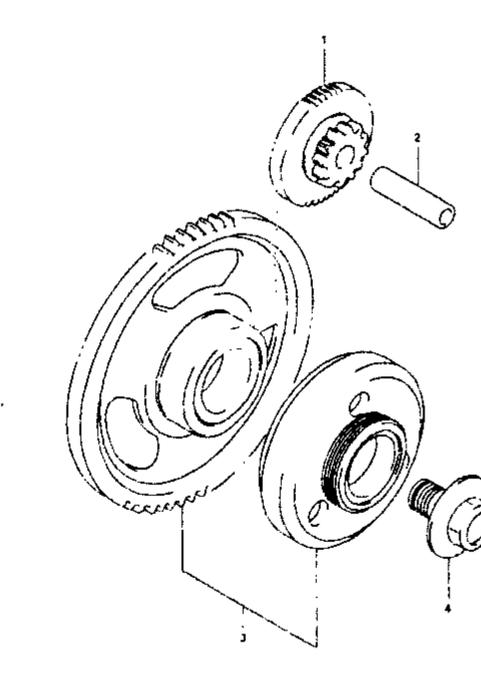

GSF1200SK1 E03 E28_009
STARTER CLUTCH


B 12

B 1

AIR CLEANER.....	C-07	COWLING BODY.....	I-02	FRAME COVER.....	H-03	GASKET SET.....	B-02	OIL COOLER.....	C-09	SEAT TAIL COVER.....	J-03	TRANSMISSION.....	D-04
ALTERNATOR.....	E-03	COWLING INSTALLATIO	I-04	FRAME.....	G-02	GEAR SHIFTING.....	D-06	OIL PAN.....	B-09	SEAT.....	J-02	TURN SIGNAL LAMP...	F-04
BATTERY.....	E-08	CRANKCASE COVER.....	B-08	FRONT BRAKE HOSE...	K-04	HANDLE LEVER.....	H-10	OIL PUMP.....	B-10	SECOND AIR.....	C-10	WIPING HARNESS.....	F-07
CAM CHAIN.....	C-03	CRANKCASE.....	B-06	FRONT CALIPERS.....	K-03	HANDLE SWITCH.....	F-09	OPTIONAL.....	L-07	SIGNAL GENERATOR...	E-04		
CAM SHAFT / VALVE..	C-02	CRANKSHAFT.....	B-11	FRONT DAMPER.....	J-07	HANDLEBAR.....	H-09	REAR CALIPER.....	L-02	SPEEDOMETER.....	E-07		
CANISTER.....	H-02	CYLINDER HEAD COVER	B-03	FRONT FENDER.....	H-07	HEADLAMP HOUSING...	H-06	REAR CUSHION LEVER	L-03	STAND.....	G-04		
CARBURETOR FITTING	C-08	CYLINDER HEAD.....	B-04	FRONT MASTER CYLIND	K-05	HEADLAMP.....	F-02	REAR FENDER.....	H-11	STARTER CLUTCH.....	B-12		
CARBURETOR.....	C-04	CYLINDER.....	B-05	FRONT WHEEL.....	K-02	LABEL.....	I-05	REAR MASTER CYLINDE	L-06	STARTING MOTOR.....	E-02		
CLUTCH MASTER CYLIN	K-07	ELECTRICAL.....	E-05	FUEL COCK.....	G-09	MANUAL BOX.....	H-05	REAR SWINGING ARM..	L-02	STEERING STEM.....	J-08		
CLUTCH.....	D-02	FOOTREST.....	G-05	FUEL TANK.....	G-07	MUFFLER.....	C-08	REAR WHEEL.....	L-04	TAIL LAMP.....	F-06		

FIG.1

Fig.1 (B-2) GASKET SET

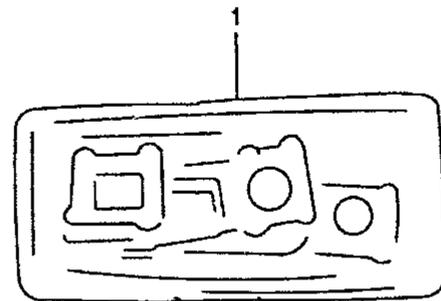

Ref #	Part Number	Description	Qty	Remarks
1	11400-32890	GASKET SET	1	OPT
2	11141-32F00	GASKET, CYLINDER HEAD	1	NOT SHOWN
3	11143-32F00	O RING, HEAD GASKET	5	NOT SHOWN
4	11173-06B02	GASKET, CYLINDER HEAD COVER	1	NOT SHOWN
5	11177-17E00	GASKET, BREATHER COVER	1	NOT SHOWN
6	11178-27A01	GASKET, HEAD COVER NO.2	2	NOT SHOWN
7	11179-27A02	GASKET, HEAD COVER NO.3	2	NOT SHOWN
8	11241-32F00	GASKET, CYLINDER	1	NOT SHOWN
9	11482-27A20	GASKET, CYLINDER COVER	1	NOT SHOWN
10	11483-48B20	GASKET, CYLINDER GEAR COVER	1	NOT SHOWN
11	11489-27A20	GASKET, OIL PAN	1	NOT SHOWN
12	11491-27A30	GASKET, SIGNAL GENERATOR COVE	1	NOT SHOWN
13	12837-27A10	GASKET, TENSIONER ADJUSTER	1	NOT SHOWN
14	14181-18C00	GASKET, EXHAUST PIPE	4	NOT SHOWN
15	16491-27A01	O RING, OIL PUMP	1	NOT SHOWN
16	16528-27A20	GASKET, OIL STRAINER PROTECTO	1	NOT SHOWN
17	16529-27A01	GASKET, OIL OUTLET	1	NOT SHOWN
18	09161-11008	WASHER	8	NOT SHOWN
19	09280-42003	O RING	4	NOT SHOWN

GSF1200SK1 E03 E28_001
GASKET SET


1 GSF1200, S K2 E3, E33

B 2

AIR CLEANER.....	C-07	COWLING BODY.....	H-02	FRAME COVER.....	H-03	GASKET SET.....	B-02	OIL COOLER.....	C-09	SEAT TAIL COVER.....	J-03	TRANSMISSION.....	D-04
ALTERNATOR.....	E-03	COWLING INSTALLATIO	H-04	FRAME.....	G-02	GEAR SHIFTING.....	D-06	OIL PAN.....	B-09	SEAT.....	J-02	TURN SIGNAL LAMP...	F-04
BATTERY.....	E-08	CRANKCASE COVER.....	B-08	FRONT BRAKE HOSE...	K-04	HANDLE LEVER.....	H-10	OIL PUMP.....	B-10	SECOND AIR.....	C-10	WIRING HARNESS.....	F-07
CAM CHAIN.....	C-03	CRANKCASE.....	B-06	FRONT CALIPERS.....	K-03	HANDLE SWITCH.....	F-09	OPTIONAL.....	L-07	SIGNAL GENERATOR...	E-04		
CAM SHAFT / VALVE..	C-02	CRANKSHAFT.....	B-11	FRONT DAMPER.....	J-07	HANDLEBAR.....	H-09	REAR CALIPER.....	L-05	SPEEDOMETER.....	E-07		
CANISTER.....	H-02	CYLINDER HEAD COVER	B-03	FRONT FENDER.....	H-07	HEADLAMP HOUSING..	H-06	REAR CUSHION LEVER.	L-03	STAND.....	G-04		
CARBURETOR FITTING.	C-06	CYLINDER HEAD.....	B-04	FRONT MASTER CYLIND	K-05	HEADLAMP.....	F-02	REAR FENDER.....	H-11	STARTER CLUTCH.....	B-12		
CARBURETOR.....	C-04	CYLINDER.....	B-05	FRONT WHEEL.....	K-02	LABEL.....	H-05	REAR MASTER CYLINDE	L-06	STARTING MOTOR.....	E-02		
CLUTCH MASTER CYLIN	K-07	ELECTRICAL.....	E-05	FUEL COCK.....	G-08	MANUAL BOX.....	H-05	REAR SWINGING ARM..	L-02	STEERING STEM.....	J-08		
CLUTCH.....	D-02	FOOTREST.....	G-05	FUEL TANK.....	G-07	MUFFLER.....	C-08	REAR WHEEL.....	L-04	TAIL LAMP.....	F-06		

FIG.1A

Fig.1A (B-3) CYLINDER HEAD COVER

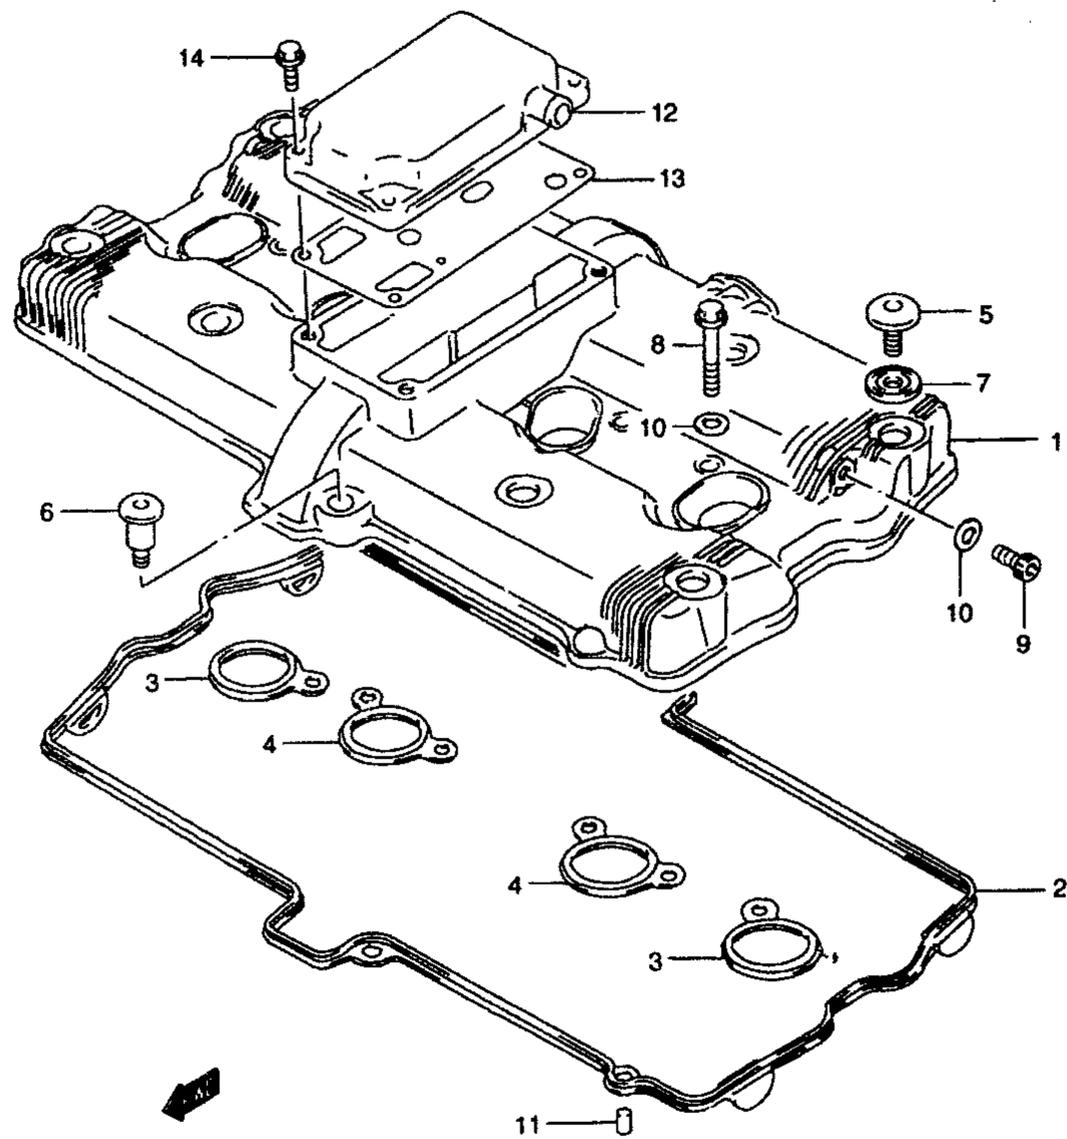

Ref #	Part Number	Description	Qty	Remarks
1	11171-27E00	COVER, CYLINDER HEAD	1	
2	11173-06B02	GASKET	1	
3	11178-27A01	GASKET, HEAD COVER NO.2	2	
4	11179-27A02	GASKET, HEAD COVER NO.3	2	
5	09106-07009	BOLT (L:5.5)	8	
6	09106-07010	BOLT (L:19)	2	
7	09161-11008	WASHER	8	
8	11181-27E00	BOLT, UNION	4	
9	07130-08123	BOLT	2	
10	09168-08029	GASKET (8.2X16X1)	6	
11	04221-08129	PIN	2	
12	11176-26D00	COVER, BREATHER	1	
13	11177-17E00	GASKET	1	
14	01550-06253	BOLT	4	


GSF1200SK1 E03 E28_001A
CYLINDER HEAD COVER

GSF1200, S K2 E3, E33

AIR CLEANER.....	C-07	COWLING BODY.....	H-02	FRAME COVER.....	H-03	GASKET SET.....	B-02	OIL COOLER.....	C-09	SEAT TAIL COVER....	J-03	TRANSMISSION.....	D-04
ALTERNATOR.....	E-03	COWLING INSTALLATIO	H-04	FRAME.....	G-02	GEAR SHIFTING.....	D-08	OIL PAN.....	B-09	SEAT.....	J-02	TURN SIGNAL LAMP...	F-04
BATTERY.....	E-06	CRANKCASE COVER.....	B-08	FRONT BRAKE HOSE...	K-04	HANDLE LEVER.....	H-10	OIL PUMP.....	B-10	SECOND AIR.....	C-10	WIRING HARNESS....	F-07
CAM CHAIN.....	C-03	CRANKCASE.....	B-06	FRONT CALIPERS.....	K-03	HANDLE SWITCH.....	F-09	OPTIONAL.....	L-07	SIGNAL GENERATOR...	E-04		
CAM SHAFT / VALVE..	C-02	CRANKSHAFT.....	B-11	FRONT DAMPER.....	J-07	HANDLEBAR.....	H-09	REAR CALIPER.....	L-05	SPEEDOMETER.....	E-07		
CANISTER.....	H-02	CYLINDER HEAD COVER	B-03	FRONT FENDER.....	H-07	HEADLAMP HOUSING..	H-08	REAR CUSHION LEVER	L-03	STAND.....	G-04		
CARBURETOR FITTING	C-08	CYLINDER HEAD.....	B-04	FRONT MASTER CYLIND	K-05	HEADLAMP.....	F-02	REAR FENDER.....	H-11	STARTER CLUTCH....	B-12		
CARBURETOR.....	C-04	CYLINDER.....	B-05	FRONT WHEEL.....	K-02	LABEL.....	I-05	REAR MASTER CYLINDE	L-06	STARTING MOTOR....	E-02		
CLUTCH MASTER CYLIN	K-07	ELECTRICAL.....	E-05	FUEL COCK.....	G-09	MANUAL BOX.....	H-05	REAR SWINGING ARM..	L-02	STEERING STEM....	J-08		
CLUTCH.....	D-02	FOOTREST.....	G-05	FUEL TANK.....	G-07	MUFFLER.....	C-06	REAR WHEEL.....	L-04	TAIL LAMP.....	F-06		

FIG.3

Fig.3 (B-5) CYLINDER

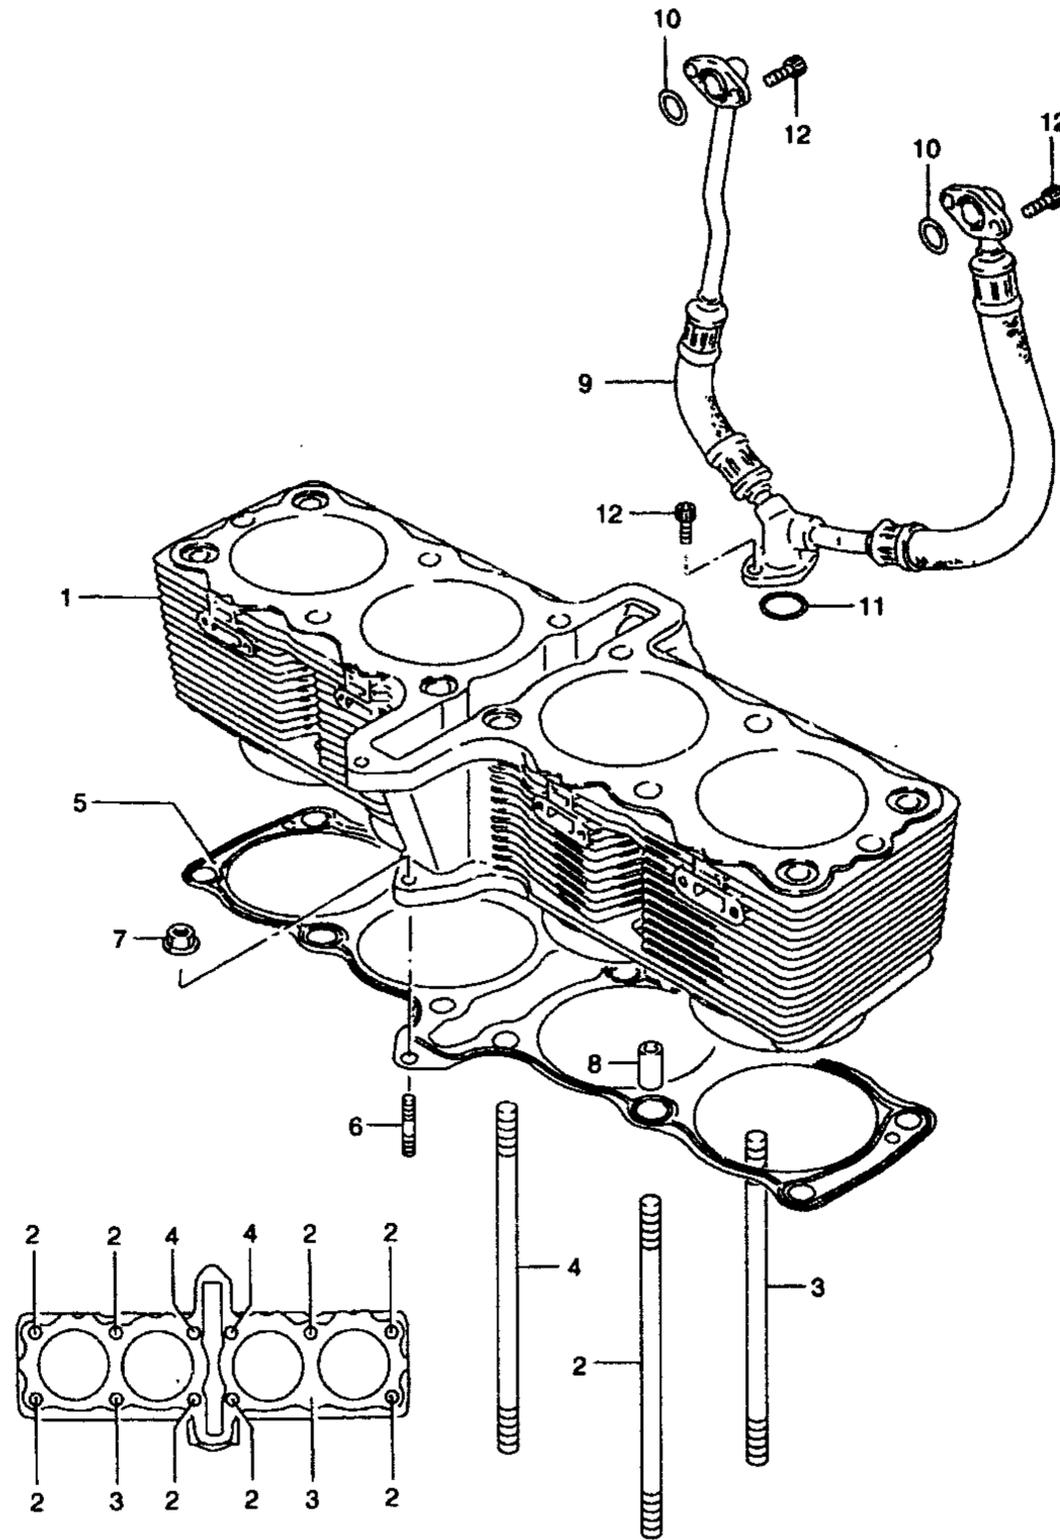

Ref #	Part Number	Description	Qty	Remarks
1	11210-27E11-0F0	CYLINDER	1	
2	09108-10081	STUD BOLT (10X164)	8	
3	09108-10099	STUD BOLT (10X157)	2	
4	09108-10108	STUD BOLT (10X168)	2	
5	11241-32F00	GASKET, CYLINDER	1	
6	01421-06203	STUD BOLT	1	
7	08316-10063	NUT	1	
8	09206-13017	PIN	2	
9	11328-48B04	HOSE, OIL HEAD COOLER	1	
10	09280-14011	O RING (D:2.5, ID:13.8)	2	
11	09280-15007	O RING (D:2.4, ID:15.8)	1	
12	07130-06163	BOLT	6	

GSF1200SK1 E03 E28_003
CYLINDER


4 GSF1200, S K2 E3, E33

B 5

AIR CLEANER.....	C-07	COWLING BODY.....	I-02	FRAME COVER.....	H-03	GASKET SET.....	B-02	OIL COOLER.....	C-08	SEAT TAIL COVER...	J-03	TRANSMISSION.....	D-04
ALTERNATOR.....	E-03	COWLING INSTALLATIO	I-04	FRAME.....	G-02	GEAR SHIFTING.....	D-08	OIL PAN.....	B-09	SEAT.....	J-02	TURN SIGNAL LAMP...	F-04
BATTERY.....	E-06	CRANKCASE COVER...	B-08	FRONT BRAKE HOSE...	K-04	HANDLE LEVER.....	H-10	OIL PUMP.....	B-10	SECOND AIR.....	C-10	WIRING HARNESS.....	F-07
CAM CHAIN.....	C-03	CRANKCASE.....	B-06	FRONT CALIPERS.....	K-03	HANDLE SWITCH.....	F-09	OPTIONAL.....	L-07	SIGNAL GENERATOR...	E-04		
CAM SHAFT / VALVE..	C-02	CRANKSHAFT.....	B-11	FRONT DAMPER.....	J-07	HANDLEBAR.....	H-09	REAR CALIPER.....	L-06	SPEEDOMETER.....	E-07		
CANISTER.....	H-02	CYLINDER HEAD COVER	B-03	FRONT FENDER.....	H-07	HEADLAMP HOUSING..	H-06	REAR CUSHION LEVER	L-03	STAND.....	G-04		
CARBURETOR FITTING.	C-06	CYLINDER HEAD.....	B-04	FRONT MASTER CYLIND	K-05	HEADLAMP.....	F-02	REAR FENDER.....	H-11	STARTER CLUTCH.....	B-12		
CARBURETOR.....	C-04	CYLINDER.....	B-05	FRONT WHEEL.....	K-02	LABEL.....	I-05	REAR MASTER CYLINDE	L-06	STARTING MOTOR.....	E-02		
CLUTCH MASTER CYLIN	K-07	ELECTRICAL.....	E-05	FUEL COCK.....	G-08	MANUAL BOX.....	H-05	REAR SWINGING ARM..	L-02	STEERING STEM.....	J-08		
CLUTCH.....	D-02	FOOTREST.....	G-05	FUEL TANK.....	G-07	MUFFLER.....	C-08	REAR WHEEL.....	L-04	TAIL LAMP.....	F-06		

FIG.4

Fig.4 (B-6) CRANKCASE

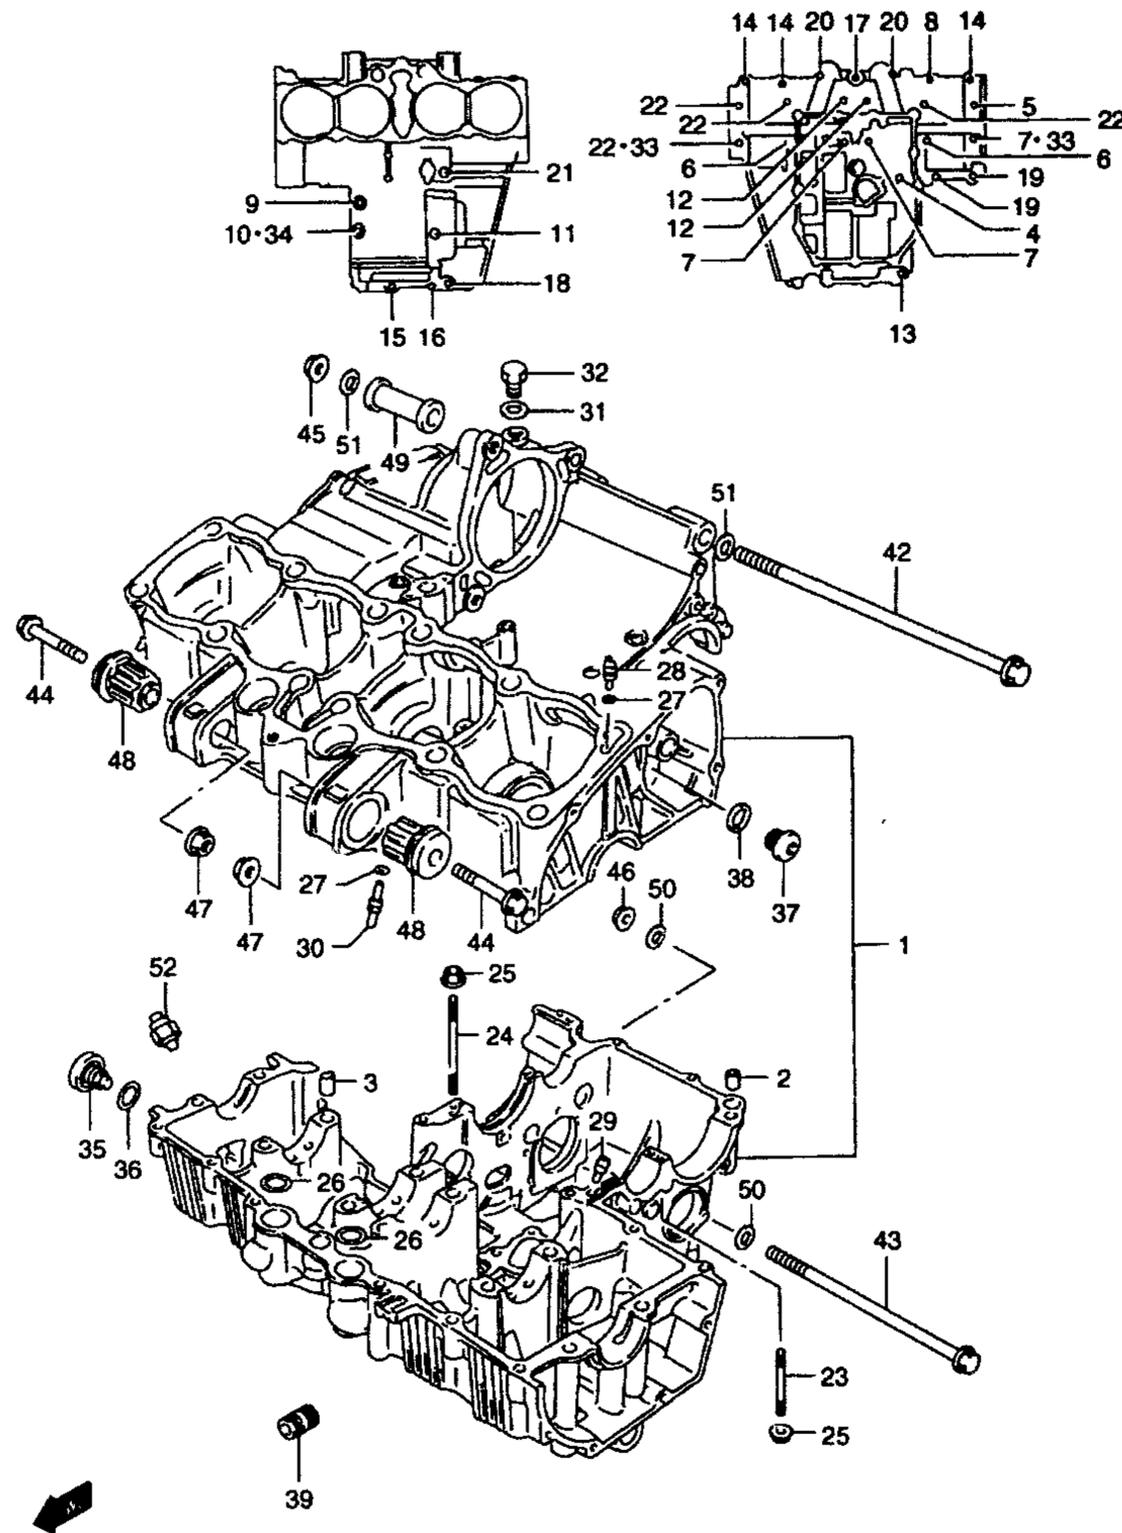

Ref #	Part Number	Description	Qty	Remarks
1	11301-27830	CRANKCASE SET	1	* SEE NOTE
2	09206-13004	.PIN (13X22)	2	
3	09206-11017	.PIN (11X20)	2	
4	09103-06163	.BOLT (6X105)	1	
5	09103-08097	.BOLT (8X105)	1	
6	09103-08182	.BOLT (8X125)	2	
7	09103-08098	.BOLT (8X115)	3	
8	01550-06353	.BOLT	1	
9	07130-06403	.BOLT	1	
10	07120-06553	.BOLT	1	
11	07130-06653	.BOLT	1	
12	07130-08653	.BOLT	2	
13	01550-08603	.BOLT	1	
14	01550-06353	.BOLT	3	
15	01550-06403	.BOLT	1	
16	01550-06403	.BOLT	1	
17	01550-06503	.BOLT	1	
18	01550-06603	.BOLT	1	
19	01550-06553	.BOLT	2	
20	01550-06703	.BOLT	2	
21	01550-06803	.BOLT	1	
22	09103-08066	.BOLT (8X95)	4	
23	01421-06408	.STUD BOLT	1	
24	01421-06608	.STUD BOLT	1	
25	08316-10063	.NUT	2	
26	09280-21008	.O RING (D:2.5, ID:21)	2	
27	09280-04004	.O RING (D:1.2, ID:4)	6	
28	09493-14002	.JET	2	
29	09493-24010	.JET	2	
30	09493-26007	.JET	4	
31	09168-12002	.GASKET	1	
32	09247-12103	.PLUG	1	
33	09168-08021	.GASKET	2	
34	09168-06018	.GASKET	1	
35	09248-16003	.PLUG	1	
36	09280-17002	.O RING (D:2.4, ID:16.8)	1	
37	09248-14010	.PLUG	1	
38	09168-14002	.GASKET	1	
39	16591-06B00	.UNION, OIL FILTER STAND	1	
40	12228-48B00-0E0	.BEARING, CRANK THRUST (GREEN)	1	

RH
SEE ILLUSTRATION ON
FIG. 8 (B-10)


** SPECIAL NOTE ENGINE CASES AND FRAMES FOR THIS MODEL MUST BE ORDERED ON THE FRAME/ENGINE CASE ORDER FORM (99924-FC003). IF YOU HAVE ANY QUESTIONS REGARDING THESE PROCEDURES, PLEASE CALL YOUR PARTS COORDINATOR BEFORE PLACING YOUR ORDER.

GSF1200SK1 E03 E28_004
CRANKCASE

5 GSF1200, S K2 E3, E33

AIR CLEANER.....	C-07	COWLING BODY.....	I-02	FRAME COVER.....	H-03	GASKET SET.....	B-02	OIL COOLER.....	C-09	SEAT TAIL COVER.....	J-03	TRANSMISSION.....	D-04
ALTERNATOR.....	E-03	COWLING INSTALLATIO	I-04	FRAME.....	G-02	GEAR SHIFTING.....	D-06	OIL PAN.....	B-09	SEAT.....	J-02	TURN SIGNAL LAMP..	F-04
BATTERY.....	E-06	CRANKCASE COVER.....	B-08	FRONT BRAKE HOSE..	K-04	HANDLE LEVER.....	H-10	OIL PUMP.....	B-10	SECOND AIR.....	C-10	WIRING HARNESS....	F-07
CAM CHAIN.....	C-03	CRANKCASE.....	B-06	FRONT CALIPERS.....	K-03	HANDLE SWITCH.....	F-09	OPTIONAL.....	L-07	SIGNAL GENERATOR...	E-04		
CAM SHAFT / VALVE..	C-02	CRANKSHAFT.....	B-11	FRONT DAMPER.....	J-07	HANDLEBAR.....	H-09	REAR CALIPER.....	L-05	SPEEDOMETER.....	E-07		
CANISTER.....	H-02	CYLINDER HEAD COVER	B-03	FRONT FENDER.....	H-07	HEADLAMP HOUSING..	H-06	REAR CUSHION LEVER.	L-03	STAND.....	G-04		
CARBURETOR FITTING.	C-06	CYLINDER HEAD.....	B-04	FRONT MASTER CYLIND	K-05	HEADLAMP.....	F-02	REAR FENDER.....	H-11	STARTER CLUTCH.....	B-12		
CARBURETOR.....	C-04	CYLINDER.....	B-05	FRONT WHEEL.....	K-02	LABEL.....	I-05	REAR MASTER CYLINDE	L-06	STARTING MOTOR.....	E-02		
CLUTCH MASTER CYLIN	K-07	ELECTRICAL.....	E-05	FUEL COCK.....	G-09	MANUAL BOX.....	H-05	REAR SWINGING ARM..	L-02	STEERING STEM.....	J-08		
CLUTCH.....	D-02	FOOTREST.....	G-05	FUEL TANK.....	G-07	MUFFLER.....	C-06	REAR WHEEL.....	L-04	TAIL LAMP.....	F-06		

FIG.4

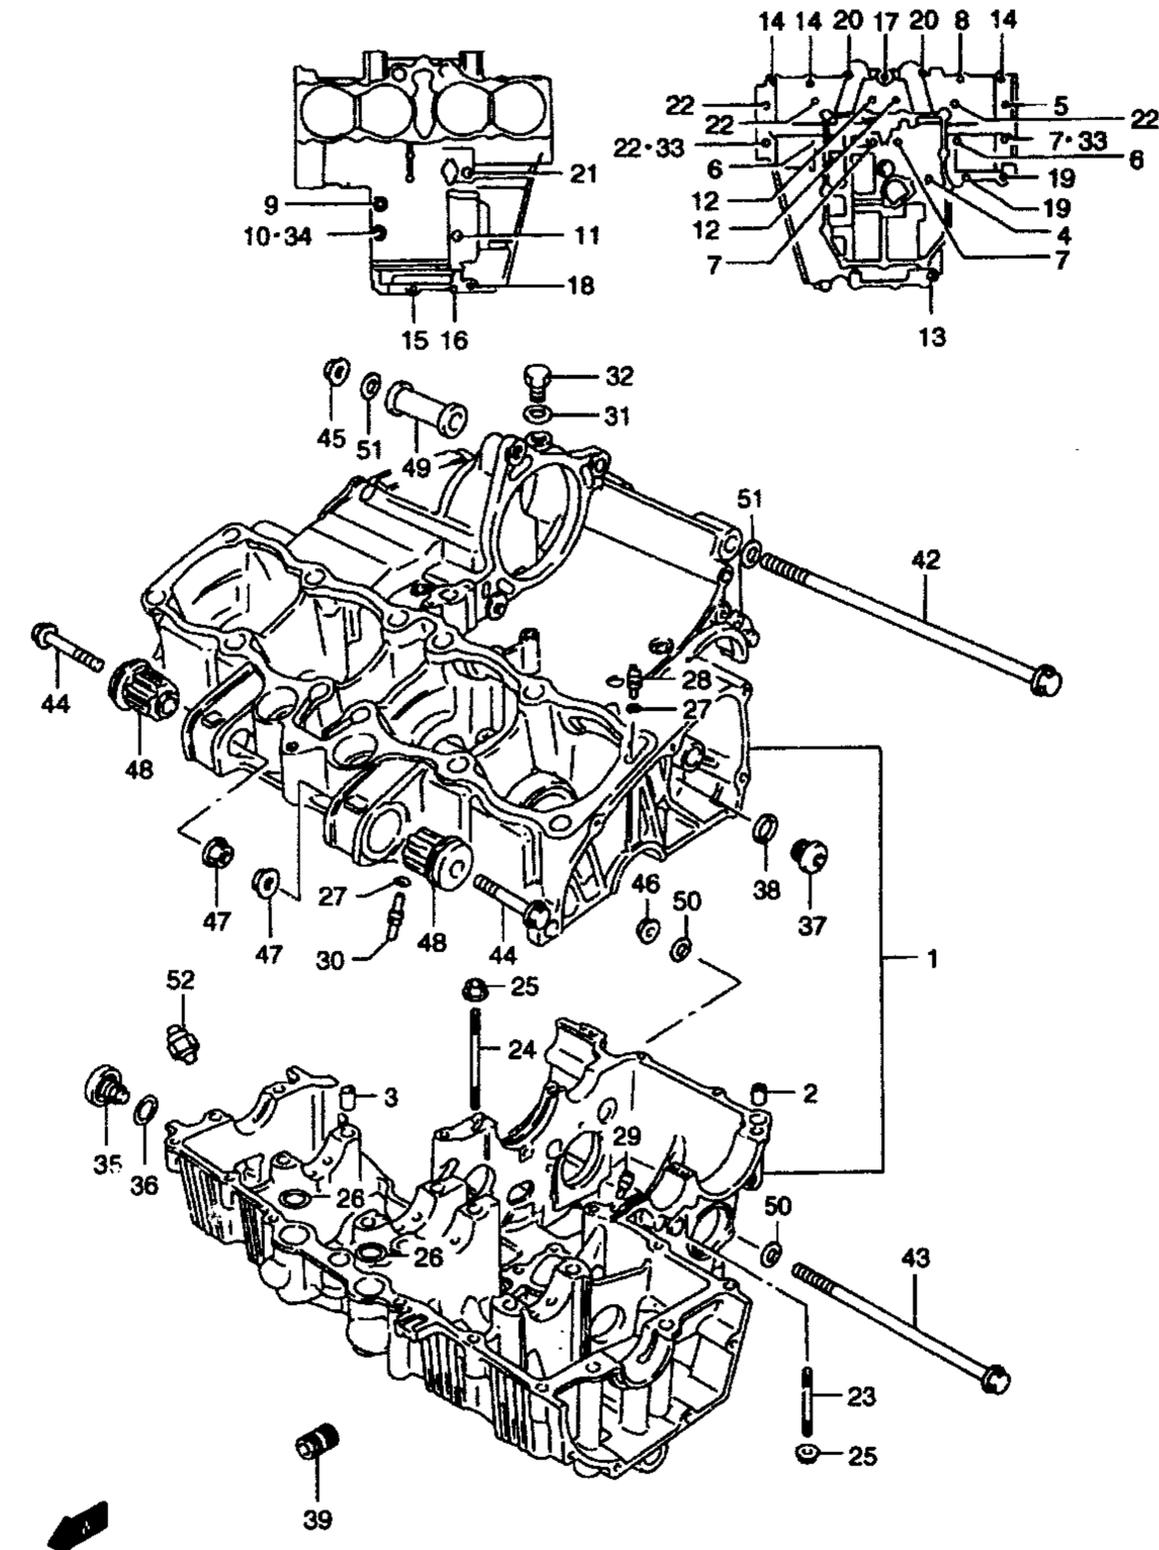

GSF1200SK1 E03 E28_004
CRANKCASE

Fig.4 (B-7) CRANKCASE


Ref #	Part Number	Description	Qty	Remarks
41-1	12228-48B00-0A0	.BEARING, CRANK THRUST (PINK)	1	LH SEE ILLUSTRATION ON FIG.8 (B-10)
41-2	12228-48B00-0B0	.BEARING, CRANK THRUST (BROWN)	1	
41-3	12228-48B00-0C0	.BEARING, CRANK THRUST (RED)	1	
41-4	12228-48B00-0D0	.BEARING, CRANK THRUST (YELLOW)	1	
41-5	12228-48B00-0E0	.BEARING, CRANK THRUST (GREEN)	1	
41-6	12228-48B00-0F0	.BEARING, CRANK THRUST (BLUE)	1	
41-7	12228-48B00-0G0	.BEARING, CRANK THRUST (ORANGE)	1	
41-8	12228-48B00-0H0	.BEARING, CRANK THRUST (BLACK)	1	
42	09103-10136	BOLT (10X180)	1	
43	09100-12053	BOLT (12X140)	1	
44	09103-10289	BOLT	2	
45	09159-10058	NUT	1	
46	08319-31128	NUT	1	
47	08316-10103	NUT	2	
48	11681-06B00	BUSH, ENGINE MOUNT	2	
49	11610-20C00	SPACER, ENGINE MOUNT	1	
50	08322-01123	WASHER	2	
51	08322-01103	WASHER	2	
52	37820-33D10	SWITCH ASSY, OIL PRESSURE	1	

6 GSF1200, S K2 E3, E33

AIR CLEANER.....	C-07	COWLING BODY.....	I-02	FRAME COVER.....	H-03	GASKET SET.....	B-02	OIL COOLER.....	C-09	SEAT TAIL COVER....	J-03	TRANSMISSION.....	D-04
ALTERNATOR.....	E-03	COWLING INSTALLATIO	I-04	FRAME.....	G-02	GEAR SHIFTING.....	D-08	OIL PAN.....	B-09	SEAT.....	J-02	TURN SIGNAL LAMP...	F-04
BATTERY.....	E-06	CRANKCASE COVER....	B-08	FRONT BRAKE HOSE...	K-04	HANDLE LEVER.....	H-10	OIL PUMP.....	B-10	SECOND AIR.....	C-10	WIRING HARNESS....	F-07
CAM CHAIN.....	C-03	CRANKCASE.....	B-06	FRONT CALIPERS.....	K-03	HANDLE SWITCH.....	F-09	OPTIONAL.....	L-07	SIGNAL GENERATOR...	E-04		
CAM SHAFT / VALVE..	C-02	CRANKSHAFT.....	B-11	FRONT DAMPER.....	J-07	HANDLEBAR.....	H-09	REAR CALIPER.....	L-05	SPEEDOMETER.....	E-07		
CANISTER.....	H-02	CYLINDER HEAD COVER	B-03	FRONT FENDER.....	H-07	HEADLAMP HOUSING..	H-08	REAR CUSHION LEVER.	L-03	STAND.....	G-04		
CARBURETOR FITTING.	C-06	CYLINDER HEAD.....	B-04	FRONT MASTER CYLIND	K-05	HEADLAMP.....	F-02	REAR FENDER.....	H-11	STARTER CLUTCH....	B-12		
CARBURETOR.....	C-04	CYLINDER.....	B-05	FRONT WHEEL.....	K-02	LABEL.....	I-05	REAR MASTER CYLINDE	L-06	STARTING MOTOR....	E-02		
CLUTCH MASTER CYLIN	K-07	ELECTRICAL.....	E-05	FUEL COCK.....	G-09	MANUAL BOX.....	H-05	REAR SWINGING ARM..	L-02	STEERING STEM....	J-08		
CLUTCH.....	D-02	FOOTREST.....	G-05	FUEL TANK.....	G-07	MUFFLER.....	C-08	REAR WHEEL.....	L-04	TAIL LAMP.....	F-06		

FIG.5

Fig.5 (B-8) CRANKCASE COVER

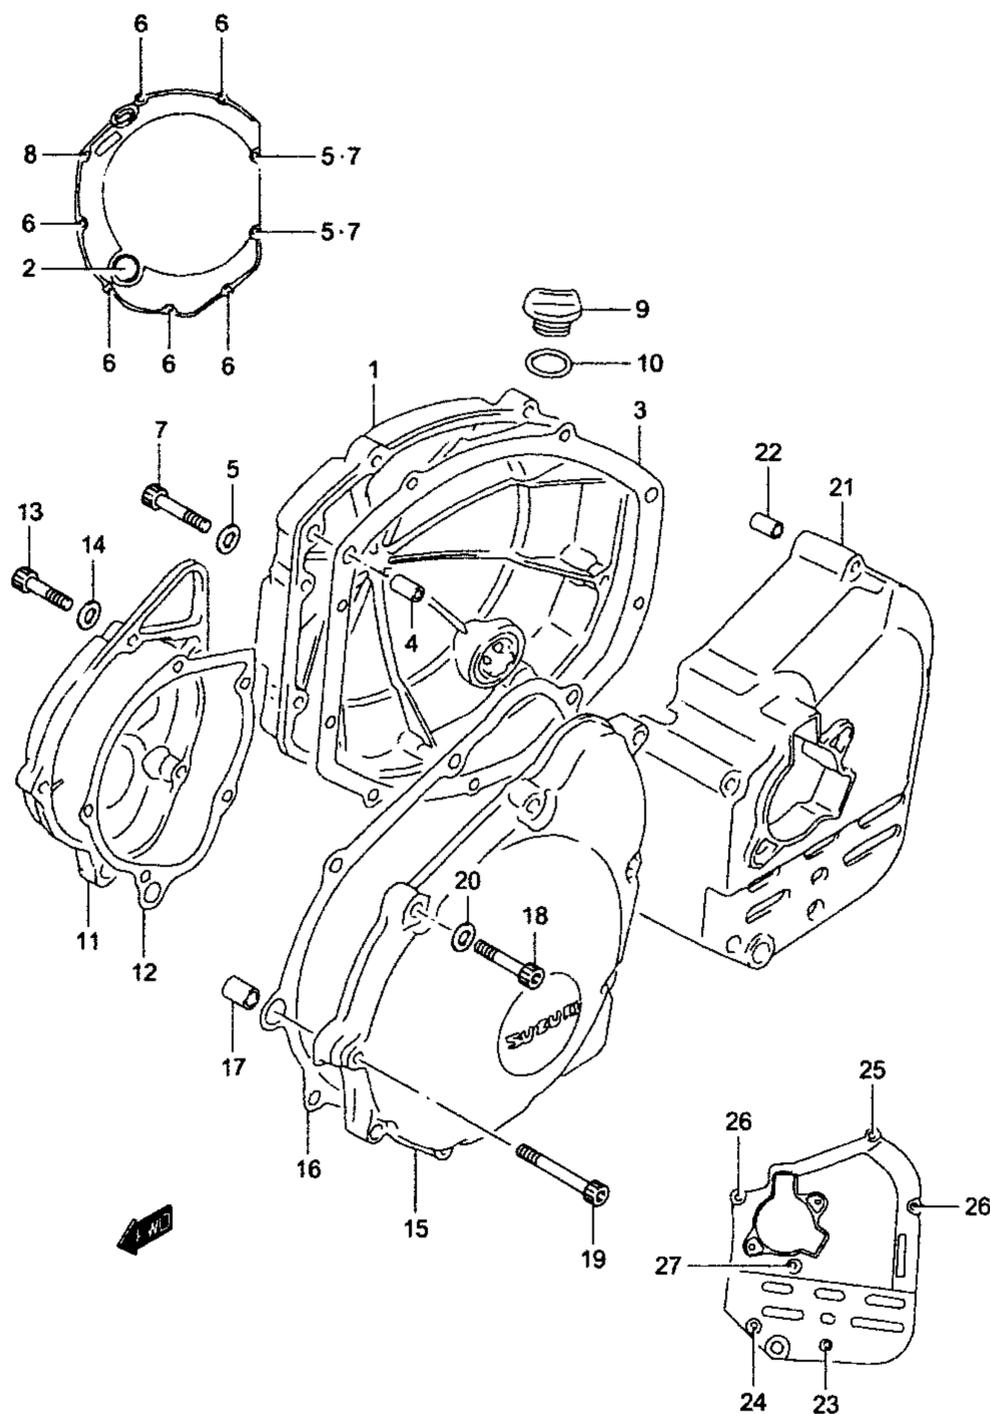

Ref #	Part Number	Description	Qty	Remarks
1	11340-26E20	COVER, CLUTCH	1	
2	11971-33210	.LENS, OIL LEVEL CHECK	1	
3	11482-27A20	GASKET	1	
4	04211-09189	PIN	2	
5	09168-06023	GASKET (5.8X13X1.2)	2	
6	07130-06253	BOLT	6	
7	07130-06303	BOLT	2	
8	07130-06353	BOLT	1	
9	09259-20008	PLUG	1	
10	09280-17003	O RING (D:3.1, ID:16.8)	1	
11	11381-26E21	COVER, SIGNAL GENERATOR	1	
12	11491-27A30	GASKET	1	
13	09106-06082	BOLT	5	
14	09168-06023	GASKET (5.8X13X1.2)	1	
15	11351-26E20	COVER, STARTER GEAR	1	
16	11483-48B20	GASKET	1	
17	09206-11017	PIN	1	
18	07130-06253	BOLT	8	
19	07130-06403	BOLT	1	
20	09168-06023	GASKET (5.8X13X1.2)	1	
21	11360-27E10	COVER, ENGINE SPROCKET	1	
22	04211-09129	PIN	2	
23	07130-06453	BOLT	1	
24	07130-06353	BOLT	1	
25	07130-06553	BOLT	1	
26	07130-06703	BOLT	2	
27	07130-06753	BOLT	1	

GSF1200SK1 E03 E28_005
CRANKCASE COVER


7 GSF1200, S K2 E3, E33

B 8

AIR CLEANER.....	C-07	COWLING BODY.....	I-02	FRAME COVER.....	H-03	GASKET SET.....	B-02	OIL COOLER.....	C-08	SEAT TAIL COVER...	J-03	TRANSMISSION.....	D-04
ALTERNATOR.....	E-03	COWLING INSTALLATIO	I-04	FRAME.....	G-02	GEAR SHIFTING.....	D-08	OIL PAN.....	B-09	SEAT.....	J-02	TURN SIGNAL LAMP...	F-04
BATTERY.....	E-06	CRANKCASE COVER...	B-08	FRONT BRAKE HOSE...	K-04	HANDLE LEVER.....	H-10	OIL PUMP.....	B-10	SECOND AIR.....	C-10	WIRING HARNESS....	F-07
CAM CHAIN.....	C-03	CRANKCASE.....	B-06	FRONT CALIPERS.....	K-03	HANDLE SWITCH.....	F-09	OPTIONAL.....	L-07	SIGNAL GENERATOR...	E-04		
CAM SHAFT / VALVE..	C-02	CRANKSHAFT.....	B-11	FRONT DAMPER.....	J-07	HANDLEBAR.....	H-09	REAR CALIPER.....	L-05	SPEEDOMETER.....	E-07		
CANISTER.....	H-02	CYLINDER HEAD COVER	B-03	FRONT FENDER.....	H-07	HEADLAMP HOUSING...	H-08	REAR CUSHION LEVER	L-03	STAND.....	G-04		
CARBURETOR FITTING	C-06	CYLINDER HEAD.....	B-04	FRONT MASTER CYLIND	K-05	HEADLAMP.....	F-02	REAR FENDER.....	H-11	STARTER CLUTCH....	B-12		
CARBURETOR.....	C-04	CYLINDER.....	B-05	FRONT WHEEL.....	K-02	LABEL.....	I-05	REAR MASTER CYLINDE	L-08	STARTING MOTOR....	E-02		
CLUTCH MASTER CYLIN	K-07	ELECTRICAL.....	E-05	FUEL COCK.....	G-09	MANUAL BOX.....	H-05	REAR SWINGING ARM..	L-02	STEERING STEM.....	J-08		
CLUTCH.....	D-02	FOOTREST.....	G-05	FUEL TANK.....	G-07	MUFFLER.....	C-08	REAR WHEEL.....	L-04	TAIL LAMP.....	F-06		

FIG.6

Fig.6 (B-9) OIL PAN

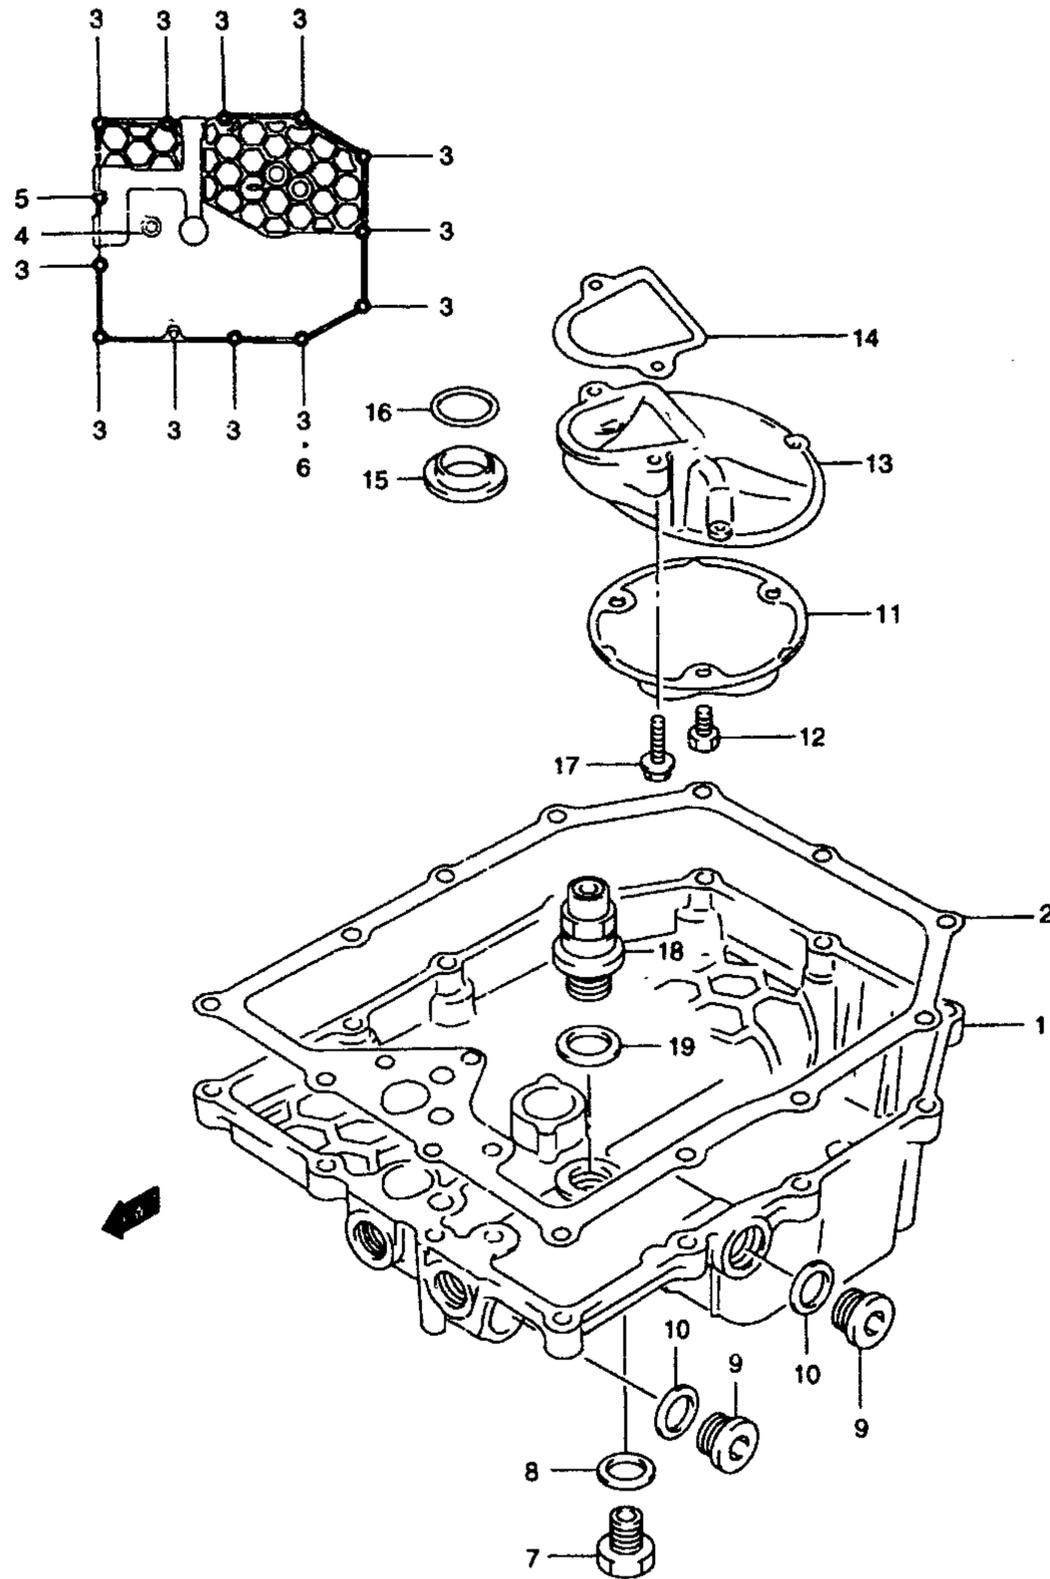

Ref #	Part Number	Description	Qty	Remarks
1-1	11511-26E00	PAN, OIL	1	MODEL K1
1-2	11511-26E01	PAN, OIL	1	MODEL K2
2	11489-27A20	GASKET	1	
3	01550-06253	BOLT	12	
4	01550-06303	BOLT	1	
5	01550-06503	BOLT	1	
6	09168-06023	GASKET (5.8X13X1.2)	1	
7	09247-14002	PLUG, DRAIN	1	
8	09168-14002	GASKET	1	
9	09248-16012	PLUG, OIL GALLERY	2	
10	09168-16002	GASKET	2	
11	16520-09301	STRAINER, OIL	1	
12	01570-06123	BOLT	3	
13	16525-06B00	PROTECTOR, OIL STRAINER	1	
14	16528-27A20	GASKET, PROTECTOR	1	
15	16529-27A01	GASKET, OIL OUTLET	1	
16	09280-18009	O RING (D:3.2, ID:17.8)	1	
17	01550-06253	BOLT	2	
18	16440-17C01	VALVE ASSY, OIL RELIEF	1	
19	09168-16002	GASKET	1	


GSF1200SK1 E03 E28_006
OIL PAN

8 GSF1200, S K2 E3, E33

AIR CLEANER.....	C-07	COWLING BODY.....	I-02	FRAME COVER.....	H-03	GASKET SET.....	B-02	OIL COOLER.....	C-09	SEAT TAIL COVER.....	J-03	TRANSMISSION.....	D-04
ALTERNATOR.....	E-03	COWLING INSTALLATIO	I-04	FRAME.....	G-02	GEAR SHIFTING.....	D-06	OIL PAN.....	B-09	SEAT.....	J-02	TURN SIGNAL LAMP...	F-04
BATTERY.....	E-06	CRANKCASE COVER.....	B-08	FRONT BRAKE HOSE...	K-04	HANDLE LEVER.....	H-10	OIL PUMP.....	B-10	SECOND AIR.....	C-10	WIRING HARNESS.....	F-07
CAM CHAIN.....	C-03	CRANKCASE.....	B-06	FRONT CALIPERS.....	K-03	HANDLE SWITCH.....	F-09	OPTIONAL.....	L-07	SIGNAL GENERATOR...	E-04		
CAM SHAFT / VALVE..	C-02	CRANKSHAFT.....	B-11	FRONT DAMPER.....	J-07	HANDLEBAR.....	H-09	REAR CALIPER.....	L-05	SPEEDOMETER.....	E-07		
CANISTER.....	H-02	CYLINDER HEAD COVER	B-03	FRONT FENDER.....	H-07	HEADLAMP HOUSING...	H-06	REAR CUSHION LEVER	L-03	STAND.....	G-04		
CARBURETOR FITTING	C-06	CYLINDER HEAD.....	B-04	FRONT MASTER CYLIND	K-05	HEADLAMP.....	F-02	REAR FENDER.....	H-11	STARTER CLUTCH.....	B-12		
CARBURETOR.....	C-04	CYLINDER.....	B-05	FRONT WHEEL.....	K-02	LABEL.....	I-05	REAR MASTER CYLINDE	L-06	STARTING MOTOR.....	E-02		
CLUTCH MASTER CYLIN	K-07	ELECTRICAL.....	E-05	FUEL COCK.....	G-09	MANUAL BOX.....	H-05	REAR SWINGING ARM..	L-02	STEERING STEM.....	J-06		
CLUTCH.....	D-02	FOOTREST.....	G-05	FUEL TANK.....	G-07	MUFFLER.....	C-08	REAR WHEEL.....	L-04	TAIL LAMP.....	F-06		

FIG.7

Fig.7 (B-10) OIL PUMP

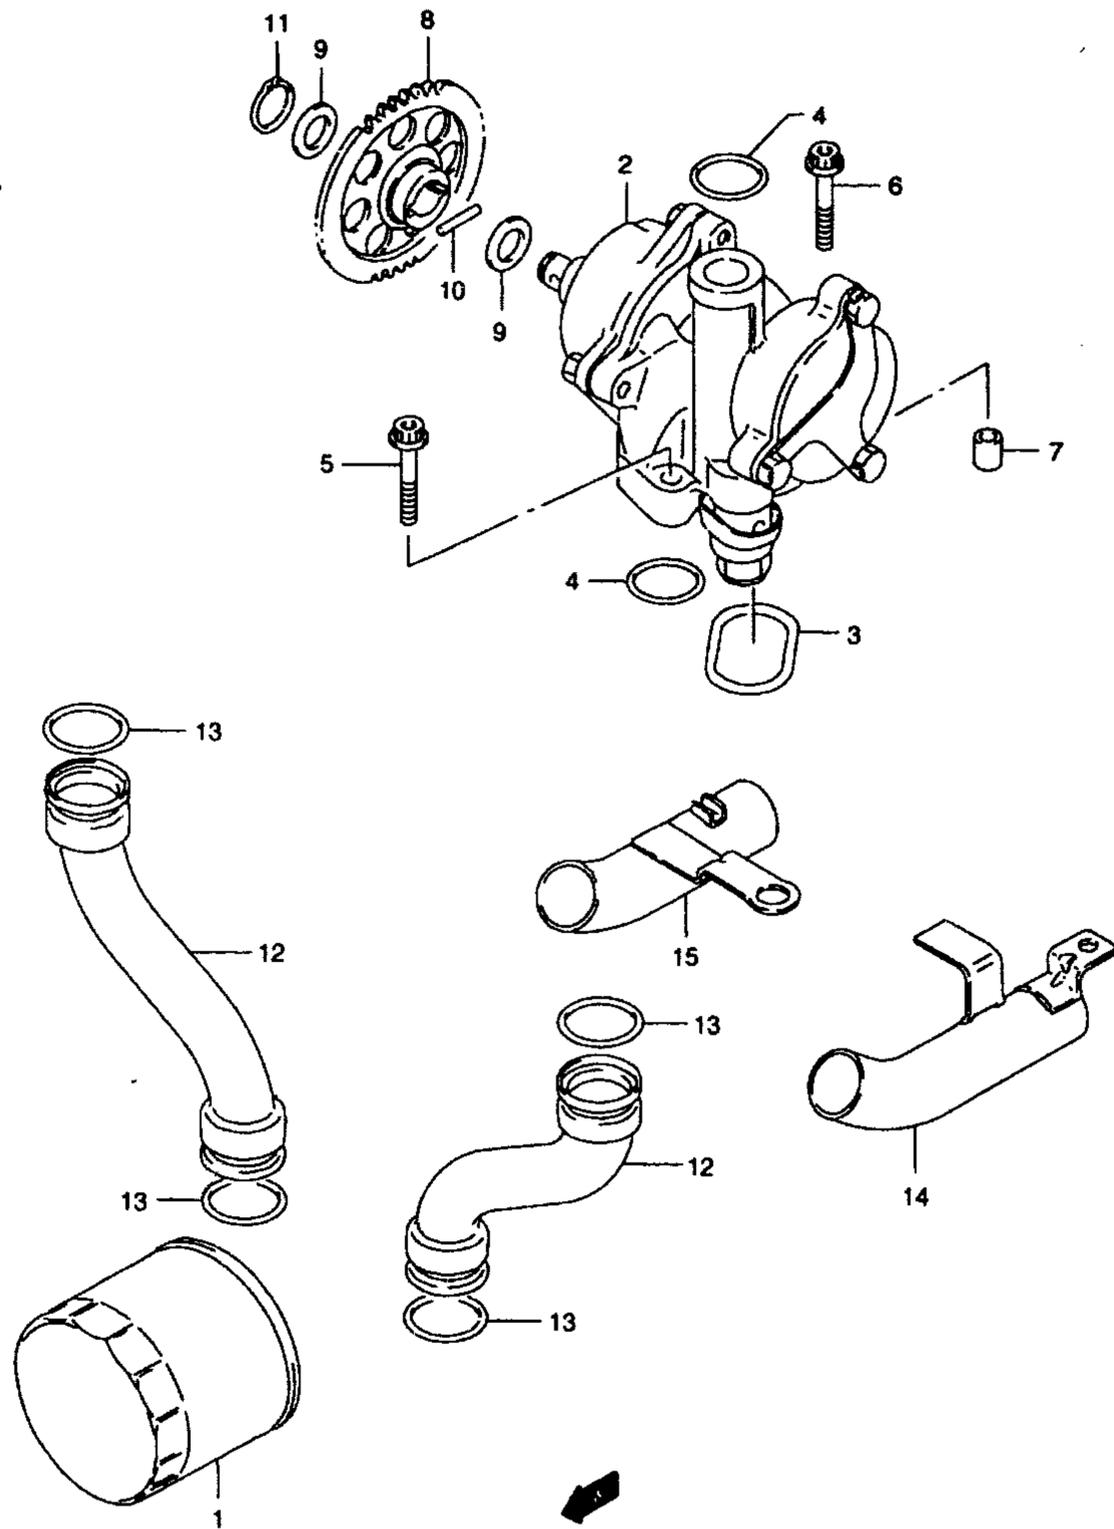

Ref #	Part Number	Description	Qty	Remarks
1	16510-34E00	FILTER ASSY, ENGINE OIL	1	
2	16400-06B30	PUMP ASSY, OIL	1	
3	16491-27A01	O RING, PUMP	1	
4	09280-18009	O RING (D:3.2, ID:17.8)	2	
5	09106-06089	BOLT (6X30)	2	
6	09106-06088	BOLT (6X35)	1	
7	04211-09129	PIN	2	
8	16332-19C00	GEAR, PUMP DRIVEN (NT:37)	1	
9	08221-12205	SHIM	2	
10	09261-05006	PIN	1	
11	08331-31126	CIRCLIP	1	
12	16481-48B01	PIPE, OUTLET	2	
13	09280-22016	O RING (D:3.7, ID:21.7)	4	
14	16530-27A02	PIPE, OUTLET UNDER LH	1	
15	16540-27A02	PIPE, OUTLET UNDER RH	1	

GSF1200SK1 E03 E28_007
OIL PUMP

9 GSF1200, S K2 E3, E33

B 10

AIR CLEANER.....	C-07	COWLING BODY.....	I-02	FRAME COVER.....	H-03	GASKET SET.....	B-02	OIL COOLER.....	C-09	SEAT TAIL COVER.....	J-03	TRANSMISSION.....	D-04
ALTERNATOR.....	E-03	COWLING INSTALLATIO.....	I-04	FRAME.....	G-02	GEAR SHIFTING.....	D-06	OIL PAN.....	B-09	SEAT.....	J-02	TURN SIGNAL LAMP.....	F-04
BATTERY.....	E-06	CRANKCASE COVER.....	B-08	FRONT BRAKE HOSE.....	K-04	HANDLE LEVER.....	H-10	OIL PUMP.....	B-10	SECOND AIR.....	C-10	WIRING HARNESS.....	F-07
CAM CHAIN.....	C-03	CRANKCASE.....	B-06	FRONT CALIPERS.....	K-03	HANDLE SWITCH.....	F-09	OPTIONAL.....	L-07	SIGNAL GENERATOR.....	E-04		
CAM SHAFT / VALVE.....	C-02	CRANKSHAFT.....	B-11	FRONT DAMPER.....	J-07	HANDLEBAR.....	H-09	REAR CALIPER.....	L-05	SPEEDOMETER.....	E-07		
CANISTER.....	H-02	CYLINDER HEAD COVER.....	B-03	FRONT FENDER.....	H-07	HEADLAMP HOUSING.....	H-06	REAR CUSHION LEVER.....	L-03	STAND.....	G-04		
CARBURETOR FITTING.....	C-06	CYLINDER HEAD.....	B-04	FRONT MASTER CYLIND.....	K-05	HEADLAMP.....	F-02	REAR FENDER.....	H-11	STARTER CLUTCH.....	B-12		
CARBURETOR.....	C-04	CYLINDER.....	B-05	FRONT WHEEL.....	K-02	LABEL.....	I-05	REAR MASTER CYLINDE.....	L-06	STARTING MOTOR.....	E-02		
CLUTCH MASTER CYLIN.....	K-07	ELECTRICAL.....	E-05	FUEL COCK.....	G-09	MANUAL BOX.....	H-05	REAR SWINGING ARM.....	L-02	STEERING STEM.....	J-08		
CLUTCH.....	D-02	FOOTREST.....	G-05	FUEL TANK.....	G-07	MUFFLER.....	C-06	REAR WHEEL.....	L-04	TAIL LAMP.....	F-06		

FIG.8

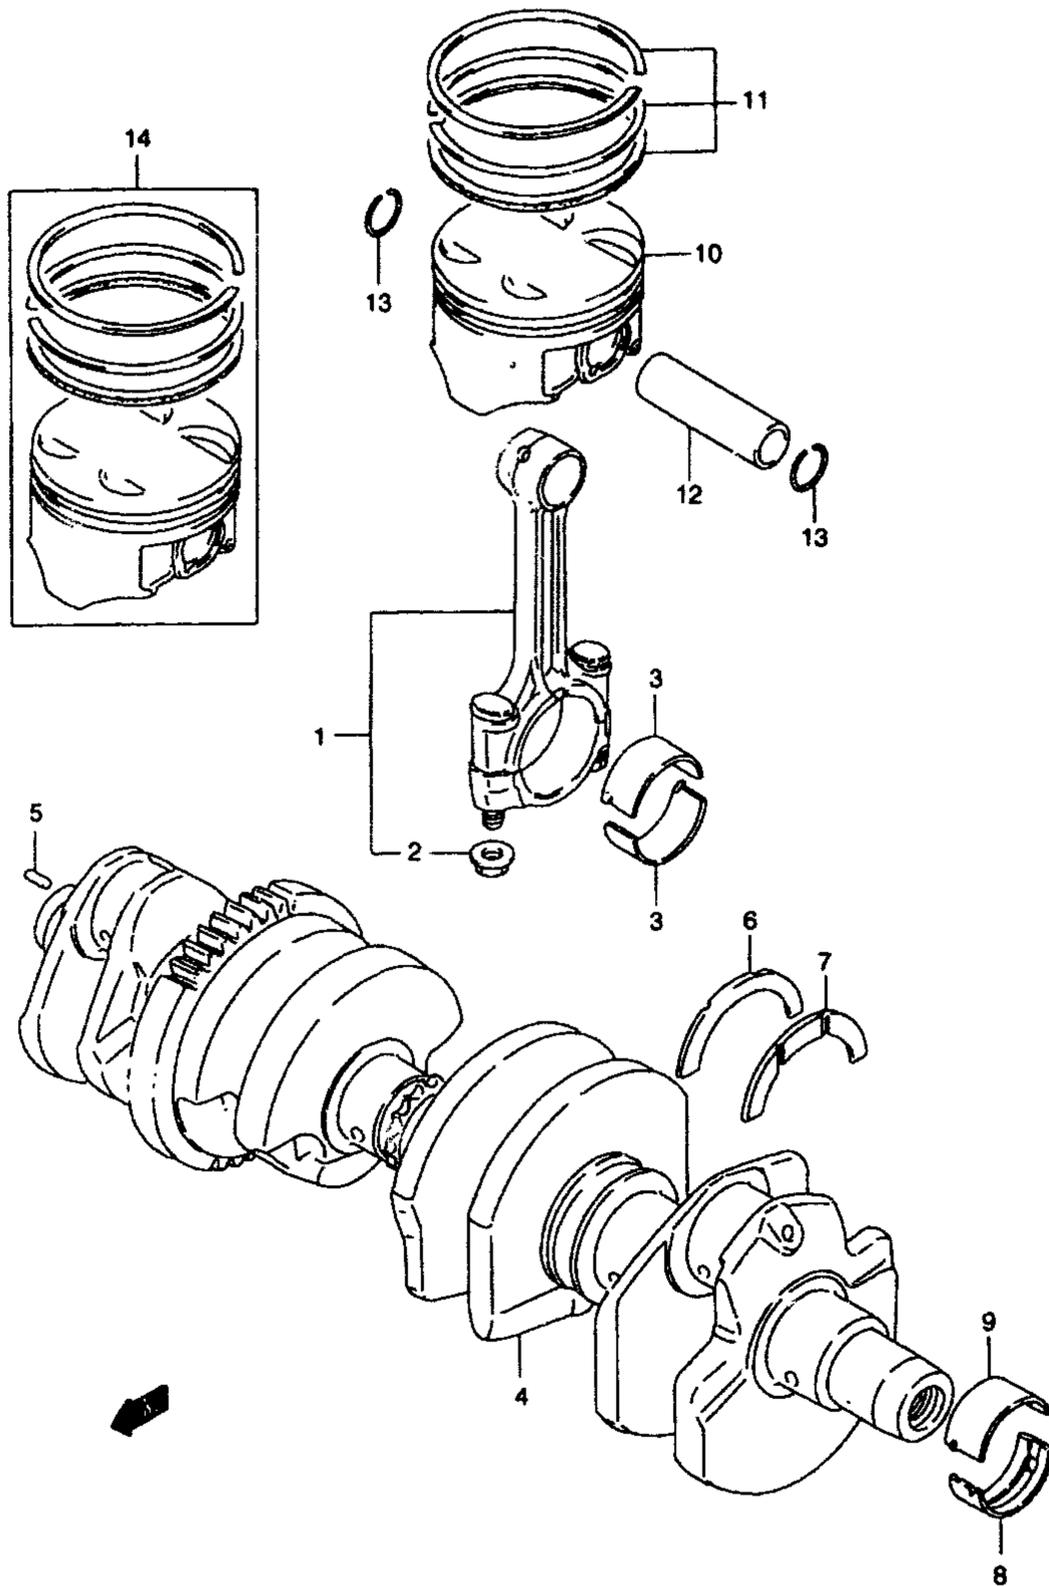


Fig.8 (B-11) CRANKSHAFT

Ref #	Part Number	Description	Qty	Remarks
1	12160-40C03	ROD ASSY, CONNECTING	4	
2	09159-09001	.NUT	8	
3-1	12164-46E01-0A0	BEARING (GREEN)	8	*SEE NOTE
3-2	12164-46E01-0B0	BEARING (BLACK)	8	*SEE NOTE
3-3	12164-46E01-0C0	BEARING (BROWN)	8	*SEE NOTE
3-4	12164-46E01-0D0	BEARING (YELLOW)	8	*SEE NOTE
4	12000-27831	CRANKSHAFT SET	1	
5	04221-04089	.PIN	1	
6	12228-48B00-0E0	.BEARING, CRANK THRUST (GREEN)	1	RH
7-1	12228-48B00-0A0	.BEARING, CRANK THRUST (PINK)	1	LH
7-2	12228-48B00-0B0	.BEARING, CRANK THRUST (BROWN)	1	LH
7-3	12228-48B00-0C0	.BEARING, CRANK THRUST (RED)	1	LH
7-4	12228-48B00-0D0	.BEARING, CRANK THRUST (YELLOW)	1	LH
7-5	12228-48B00-0E0	.BEARING, CRANK THRUST (GREEN)	1	LH
7-6	12228-48B00-0F0	.BEARING, CRANK THRUST (BLUE)	1	LH
7-7	12228-48B00-0G0	.BEARING, CRANK THRUST (ORANGE)	1	LH
7-8	12228-48B00-0H0	.BEARING, CRANK THRUST (BLACK)	1	LH
8-1	12229-06B00-0A0	BEARING, CRANKSHAFT (GREEN)	6	LOWER *SEE NOTE
8-2	12229-06B00-0B0	BEARING, CRANKSHAFT (BLACK)	6	LOWER *SEE NOTE
8-3	12229-06B00-0C0	BEARING, CRANKSHAFT (BROWN)	6	LOWER *SEE NOTE
8-4	12229-06B00-0D0	BEARING, CRANKSHAFT (YELLOW)	6	LOWER *SEE NOTE
9-1	12229-06B10-0A0	BEARING, CRANKSHAFT (GREEN)	6	UPPER *SEE NOTE
9-2	12229-06B10-0B0	BEARING, CRANKSHAFT (BLACK)	6	UPPER *SEE NOTE
9-3	12229-06B10-0C0	BEARING, CRANKSHAFT (BROWN)	6	UPPER *SEE NOTE
9-4	12229-06B10-0D0	BEARING, CRANKSHAFT (YELLOW)	6	UPPER *SEE NOTE
10	12111-27E02-0F0	PISTON	4	
11	12140-27E20	RING SET, PISTON	4	
12	12151-05A00	PIN, PISTON	4	
13	09381-20004	CIRCLIP	8	
14	12100-27E01-050	PISTON SET (OS:0.5)	4	OPT

** SPECIAL NOTE
THERE IS A BEARING KIT AVAILABLE FOR THIS MODEL. PART NUMBER 99104-BRKT-002. REFER TO BULLETIN 431-92-02.


GSF1200SK1 E03 E28_008
CRANKSHAFT

10 GSF1200, S K2 E3, E33

AIR CLEANER.....	C-07	COWLING BODY.....	I-02	FRAME COVER.....	H-03	GASKET SET.....	B-02	OIL COOLER.....	C-08	SEAT TAIL COVER.....	J-03	TRANSMISSION.....	D-04
ALTERNATOR.....	E-03	COWLING INSTALLATIO	I-04	FRAME.....	G-02	GEAR SHIFTING.....	D-06	OIL PAN.....	B-08	SEAT.....	J-02	TURN SIGNAL LAMP.....	F-04
BATTERY.....	E-06	CRANKCASE COVER.....	B-08	FRONT BRAKE HOSE.....	K-04	HANDLE LEVER.....	H-10	OIL PUMP.....	B-10	SECOND AIR.....	C-10	WIRING HARNESS.....	F-07
CAM CHAIN.....	C-03	CRANKCASE.....	B-06	FRONT CALIPERS.....	K-03	HANDLE SWITCH.....	F-09	OPTIONAL.....	L-07	SIGNAL GENERATOR.....	E-04		
CAM SHAFT / VALVE.....	C-02	CRANKSHAFT.....	B-11	FRONT DAMPER.....	J-07	HANDLEBAR.....	H-09	REAR CALIPER.....	L-05	SPEEDOMETER.....	E-07		
CANISTER.....	H-02	CYLINDER HEAD COVER	B-03	FRONT FENDER.....	H-07	HEADLAMP HOUSING...	H-06	REAR CUSHION LEVER.	L-03	STAND.....	G-04		
CARBURETOR FITTING.	C-06	CYLINDER HEAD.....	B-04	FRONT MASTER CYLIND	K-05	HEADLAMP.....	F-02	REAR FENDER.....	H-11	STARTER CLUTCH.....	B-12		
CARBURETOR.....	C-04	CYLINDER.....	B-05	FRONT WHEEL.....	K-02	LABEL.....	I-05	REAR MASTER CYLINDE	L-06	STARTING MOTOR.....	E-02		
CLUTCH MASTER CYLIN	K-07	ELECTRICAL.....	E-05	FUEL COCK.....	G-09	MANUAL BOX.....	H-05	REAR SWINGING ARM..	L-02	STEERING STEM.....	J-08		
CLUTCH.....	D-02	FOOTREST.....	G-05	FUEL TANK.....	G-07	MUFFLER.....	C-08	REAR WHEEL.....	L-04	TAIL LAMP.....	F-06		

FIG.9

Fig.9 (B-12) STARTER CLUTCH

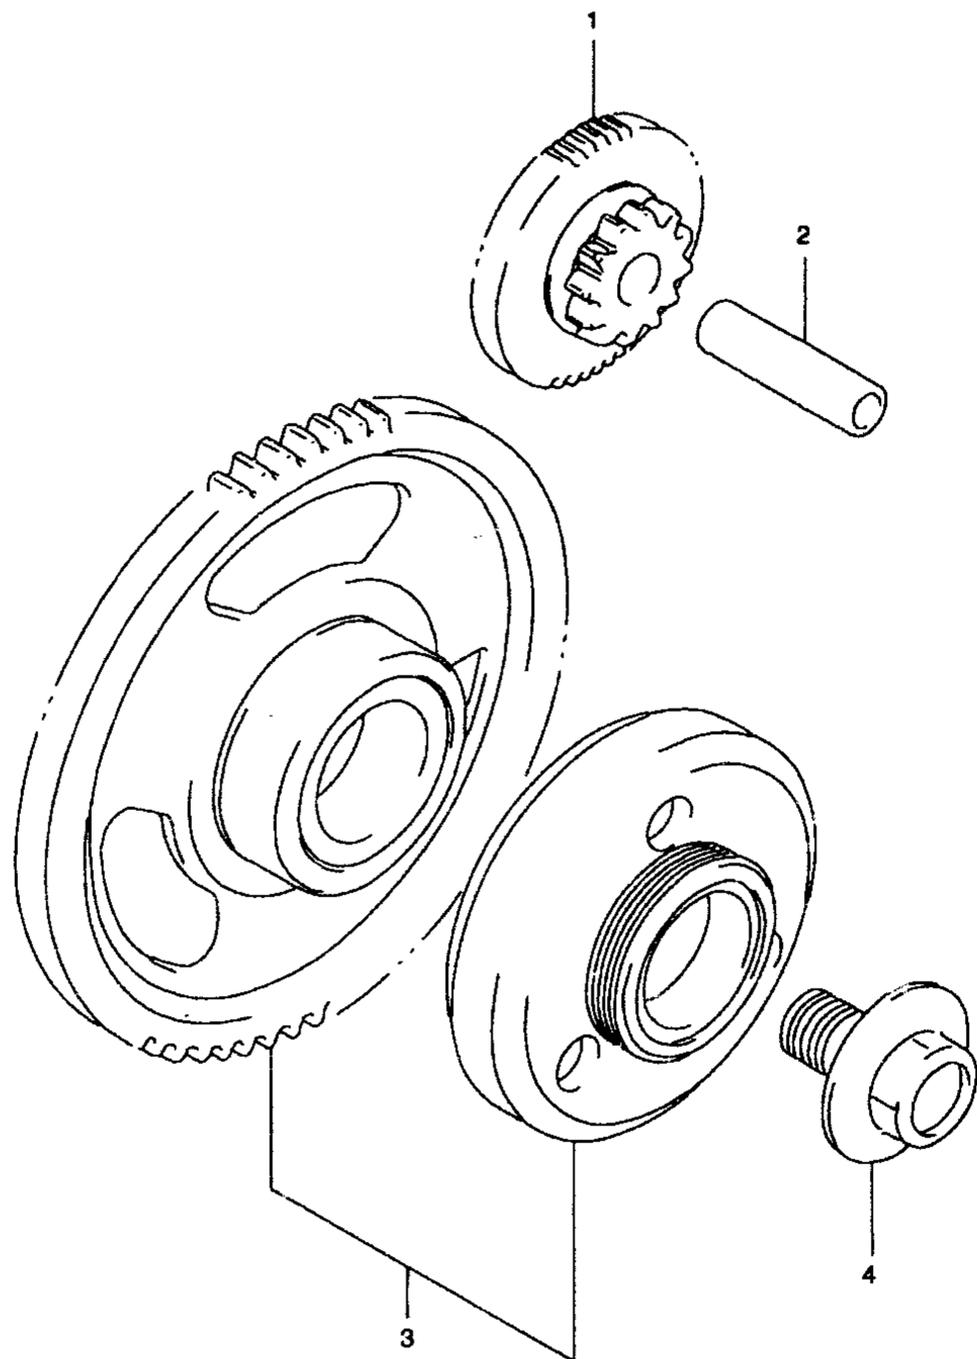

Ref #	Part Number	Description	Qty	Remarks
1	12611-06B00	GEAR, STARTER ILDE (NT:12/53)	1	
2	09206-11014	PIN	1	
3	12600-27830	CLUTCH SET, STARTER	1	
4	09103-14005	BOLT (14X21)	1	

GSF1200SK1 E03 E28_009
STARTER CLUTCH


11 GSF1200, S K2 E3, E33

B 12

AIR CLEANER.....	C-07	COWLING BODY.....	H-02	FRAME COVER.....	H-03	GASKET SET.....	B-02	OIL COOLER.....	C-09	SEAT TAIL COVER...	J-03	TRANSMISSION.....	D-04
ALTERNATOR.....	E-03	COWLING INSTALLATIO	I-04	FRAME.....	G-02	GEAR SHIFTING.....	D-06	OIL PAN.....	B-09	SEAT.....	J-02	TURN SIGNAL LAMP...	F-04
BATTERY.....	E-06	CRANKCASE COVER...	B-08	FRONT BRAKE HOSE...	K-04	HANDLE LEVER.....	H-10	OIL PUMP.....	B-10	SECOND AIR.....	C-10	WIRING HARNESS...	F-07
CAM CHAIN.....	C-03	CRANKCASE.....	B-06	FRONT CALIPERS.....	K-03	HANDLE SWITCH.....	F-09	OPTIONAL.....	L-07	SIGNAL GENERATOR...	E-04		
CAM SHAFT / VALVE..	C-02	CRANKSHAFT.....	B-11	FRONT DAMPER.....	J-07	HANDLEBAR.....	H-09	REAR CALIPER.....	L-05	SPEEDOMETER.....	E-07		
CANISTER.....	H-02	CYLINDER HEAD COVER	B-03	FRONT FENDER.....	H-07	HEADLAMP HOUSING...	H-08	REAR CUSHION LEVER.	L-03	STAND.....	G-04		
CARBURETOR FITTING.	C-06	CYLINDER HEAD.....	B-04	FRONT MASTER CYLIND	K-05	HEADLAMP.....	F-02	REAR FENDER.....	H-11	STARTER CLUTCH....	B-12		
CARBURETOR.....	C-04	CYLINDER.....	B-05	FRONT WHEEL.....	K-02	LABEL.....	I-05	REAR MASTER CYLINDE	L-08	STARTING MOTOR....	E-02		
CLUTCH MASTER CYLIN	K-07	ELECTRICAL.....	E-05	FUEL COCK.....	G-08	MANUAL BOX.....	H-05	REAR SWINGING ARM	L-02	STEERING STEM....	J-08		
CLUTCH.....	D-02	FOOTREST.....	G-05	FUEL TANK.....	G-07	MUFFLER.....	C-08	REAR WHEEL.....	L-04	TAIL LAMP.....	F-06		

FIG.11

Fig.11 (C-3) CAM CHAIN

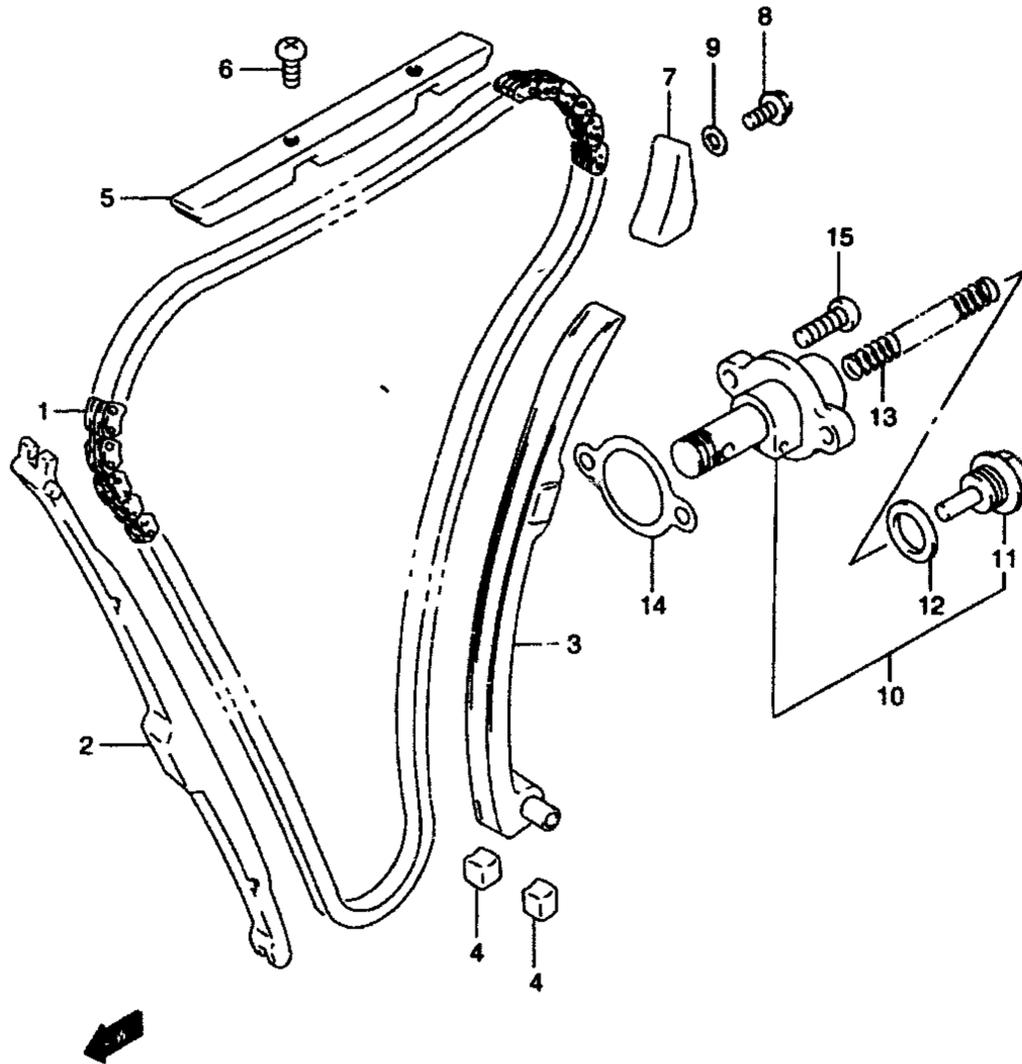

Ref #	Part Number	Description	Qty	Remarks
1	12760-26D00	CHAIN, CAM SHAFT DRIVE	1	
2	12771-26D00	GUIDE, CAM CHAIN NO.1	1	
3	12810-26D00	TENSIONER, CAM CHAIN	1	
4	12814-34200	CUSHION	2	
5	12782-05A01	GUIDE, CAM CHAIN NO.2	1	
6	02112-06103	SCREW	2	
7	12791-27A00	GUIDE, CAM CHAIN NO.3	1	
8	01550-06103	BOLT	1	
9	09168-06023	GASKET	1	
10	12830-46E10	ADJUSTER ASSY, TENSIONER	1	
11	12834-27A00	. PLUG	1	
12	12832-27A00	. GASKET	1	
13	12833-26D10	. SPRING	1	
14	12837-27A10	GASKET	1	
15	07130-06253	BOLT	2	

GSF1200SK1 E03 E28_011
CAM CHAIN

13 GSF1200, S K2 E3, E33

C3

AIR CLEANER.....	C-07	COWLING BODY.....	I-02	FRAME COVER.....	H-03	GASKET SET.....	B-02	OIL COOLER.....	C-09	SEAT TAIL COVER.....	J-03	TRANSMISSION.....	D-04
ALTERNATOR.....	E-03	COWLING INSTALLATIO	I-04	FRAME.....	G-02	GEAR SHIFTING.....	D-06	OIL PAN.....	B-08	SEAT.....	J-02	TURN SIGNAL LAMP...	F-04
BATTERY.....	E-06	CRANKCASE COVER.....	B-08	FRONT BRAKE HOSE.....	K-04	HANDLE LEVER.....	H-10	OIL PUMP.....	B-10	SECOND AIR.....	C-10	WIRING HARNESS.....	F-07
CAM CHAIN.....	C-03	CRANKCASE.....	B-06	FRONT CALPERS.....	K-03	HANDLE SWITCH.....	F-09	OPTIONAL.....	L-07	SIGNAL GENERATOR...	E-04		
CAM SHAFT / VALVE.....	C-02	CRANKSHAFT.....	B-11	FRONT DAMPER.....	J-07	HANDLEBAR.....	H-09	REAR CALIPER.....	L-05	SPEEDOMETER.....	E-07		
CANISTER.....	H-02	CYLINDER HEAD COVER	B-03	FRONT FENDER.....	H-07	HEADLAMP HOUSING...	H-08	REAR CUSHION LEVER.	L-03	STAND.....	G-04		
CARBURETOR FITTING.	C-06	CYLINDER HEAD.....	B-04	FRONT MASTER CYLIND	K-05	HEADLAMP.....	F-02	REAR FENDER.....	H-11	STARTER CLUTCH.....	B-12		
CARBURETOR.....	C-04	CYLINDER.....	B-05	FRONT WHEEL.....	K-02	LABEL.....	I-05	REAR MASTER CYLINDE	L-08	STARTING MOTOR.....	E-02		
CLUTCH MASTER CYLIN	K-07	ELECTRICAL.....	E-05	FUEL COCK.....	G-09	MANUAL BOX.....	H-05	REAR SWINGING ARM..	L-02	STEERING STEM.....	J-08		
CLUTCH.....	D-02	FOOTREST.....	G-05	FUEL TANK.....	G-07	MUFFLER.....	C-08	REAR WHEEL.....	L-04	TAIL LAMP.....	F-06		

FIG.12

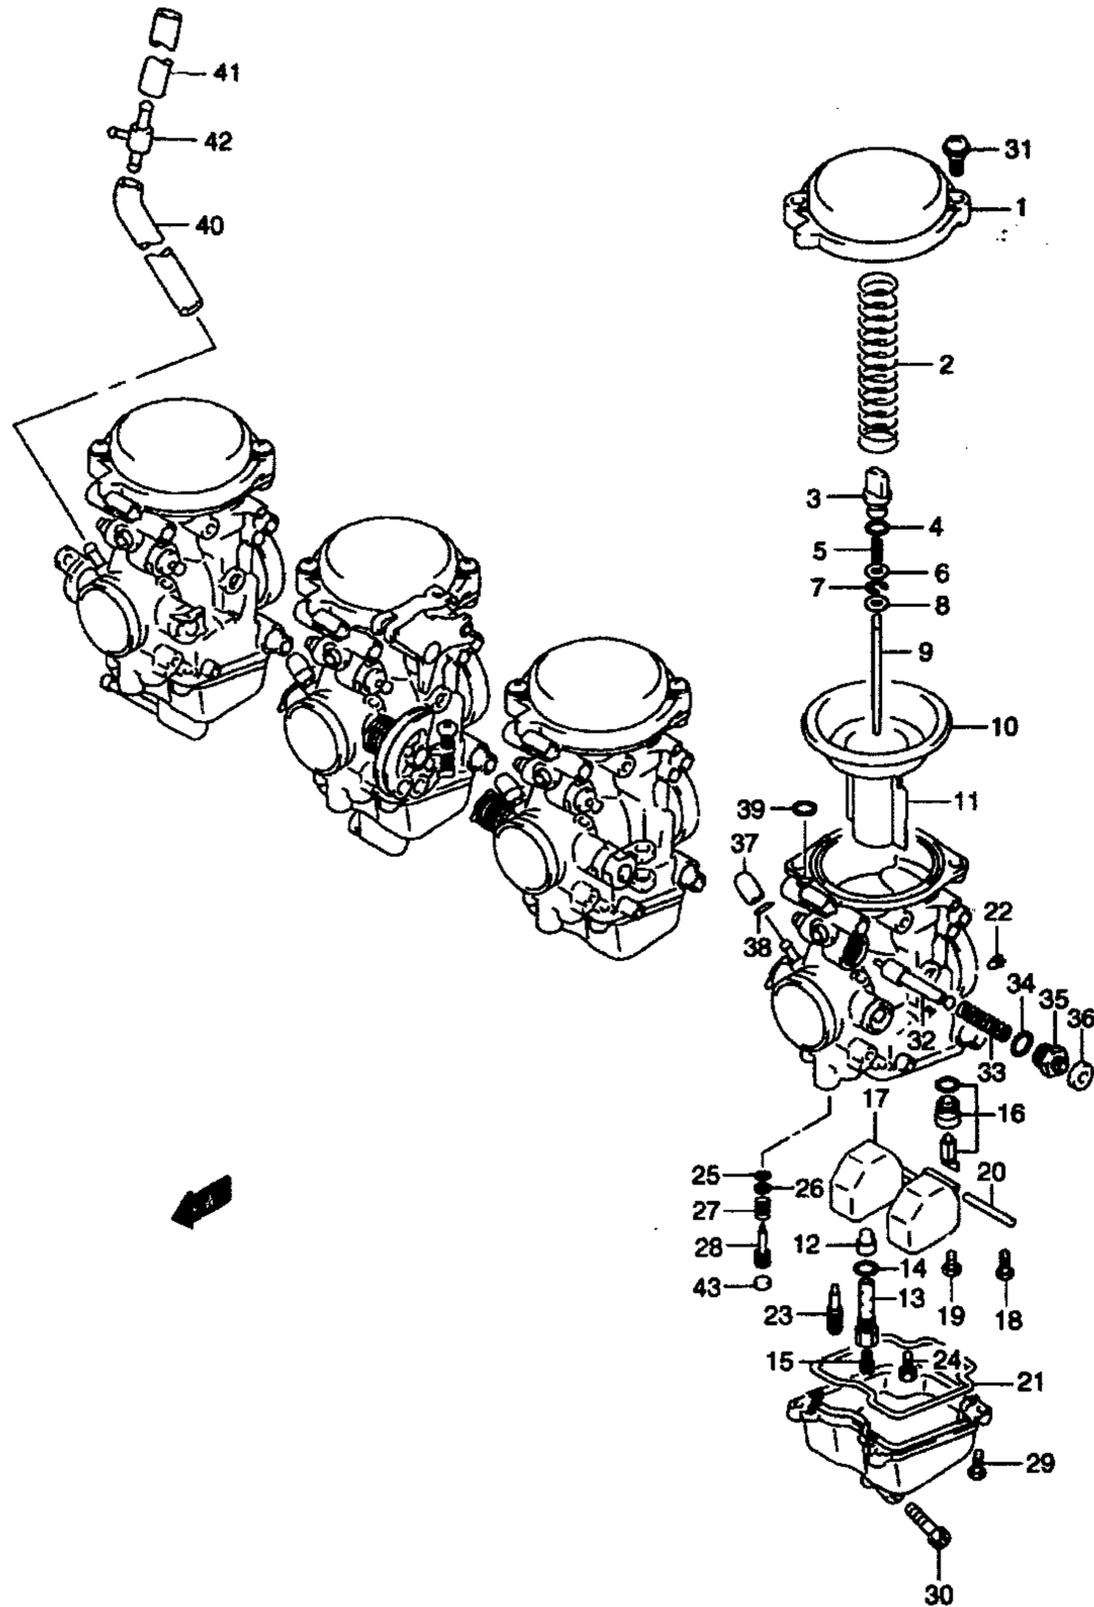


Fig.12 (C-4) CARBURETOR

Ref #	Part Number	Description	Qty	Remarks
	13201-32F10	CARBURETOR ASSY, LH	1	E3,E28
	13201-32F20	CARBURETOR ASSY, LH	1	E33
	13202-32F10	CARBURETOR ASSY, ML	1	E3,E28
	13202-32F20	CARBURETOR ASSY, ML	1	E33
	13203-32F10	CARBURETOR ASSY, MR	1	E3,E28
	13203-32F20	CARBURETOR ASSY, MR	1	E33
	13204-32F10	CARBURETOR ASSY, RH	1	E3,E28
	13204-32F20	CARBURETOR ASSY, RH	1	E33
1	13502-08F00	.DIAOGRAGN COVER	4	
2	13573-33E00	.SPRING	4	
3	13418-33E00	.HOLDER	4	
4	09280-05004	.O RING (D:1.9, ID:4.8)	4	
5	13481-33E00	.SPRING	4	
6	13382-19E00	.WASHER	4	
7	13394-17E60	.E RING, MULTI PULL JET NOZZL	4	
8	13387-44030	.RING	4	
9	13383-32F10	.NEEDLE, JET	4	SC71-1
10	13507-17C01	.DIAPHRAGM	4	
11	13501-08F00	.VALVE, PISTON	4	
12	09494-00921	.JET, NEEDLE (P-OM)	4	
13	13385-08F00	.HOLDER, JET	4	
14	13246-43010	.O RING	4	
15	09491-20019	.JET, MAIN (100)	4	
16	13370-08F50	.VALVE ASSY, NEEDLE	4	
17	13250-04F00	.FLOAT ASSY	4	
18	02112-04083	.SCREW	4	
19	13602-05A10	.SCREW	4	
20	13254-01010	.PIN, FLOAT	4	
21	13258-04F00	.GASKET	4	
22	09493-34004	.JET, PILOT AIR (1.7)	4	
23	09492-15017	.JET, PILOT (15)	4	
24	09491-60010	.JET, MAIN (60)	4	
25	13295-29900	.O RING	4	
26	13291-29900	.WASHER	4	
27	13268-48700	.SPRING	4	
28	13279-19F10	.ADJUSTER	4	3.0
29	02112-04107	.SCREW	16	
30	13247-02340	.SCREW, DRAIN	4	
31	13247-33E00	.SCREW	8	
32	13411-05300	.PLUNGER	4	
33	13417-26D00	.SPRING	4	
34	13278-47090	.O RING	4	

GSF1200SK1 E03 E28_012
 CARBURETOR

14 GSF1200, S K2 E3, E33

C4

AIR CLEANER.....	C-07	COWLING BODY.....	I-02	FRAME COVER.....	H-03	GASKET SET.....	B-02	OIL COOLER.....	C-09	SEAT TAIL COVER...	J-03	TRANSMISSION.....	D-04
ALTERNATOR.....	E-03	COWLING INSTALLATIO	I-04	FRAME.....	G-02	GEAR SHIFTING.....	D-06	OIL PAN.....	B-09	SEAT.....	J-02	TURN SIGNAL LAMP...	F-04
BATTERY.....	E-08	CRANKCASE COVER...	B-08	FRONT BRAKE HOSE...	K-04	HANDLE LEVER.....	H-10	OIL PUMP.....	B-10	SECOND AIR.....	C-10	WIRING HARNESS.....	F-07
CAM CHAIN.....	C-03	CRANKCASE.....	B-06	FRONT CALIPERS.....	K-03	HANDLE SWITCH.....	F-09	OPTIONAL.....	L-07	SIGNAL GENERATOR...	E-04		
CAM SHAFT / VALVE..	C-02	CRANKSHAFT.....	B-11	FRONT DAMPER.....	J-07	HANDLEBAR.....	H-09	REAR CALIPER.....	L-05	SPEEDOMETER.....	E-07		
CANISTER.....	H-02	CYLINDER HEAD COVER	B-03	FRONT FENDER.....	H-07	HEADLAMP HOUSING...	H-06	REAR CUSHION LEVER.	L-03	STAND.....	G-04		
CARBURETOR FITTING.	C-06	CYLINDER HEAD.....	B-04	FRONT MASTER CYLIND	K-05	HEADLAMP.....	F-02	REAR FENDER.....	H-11	STARTER CLUTCH....	B-12		
CARBURETOR.....	C-04	CYLINDER.....	B-05	FRONT WHEEL.....	K-02	LABEL.....	I-05	REAR MASTER CYLINDE	L-08	STARTING MOTOR....	E-02		
CLUTCH MASTER CYLIN	K-07	ELECTRICAL.....	E-05	FUEL COCK.....	G-09	MANUAL BOX.....	H-05	REAR SWINGING ARM..	L-02	STEERING STEM.....	J-08		
CLUTCH.....	D-02	FOOTREST.....	G-05	FUEL TANK.....	G-07	MUFFLER.....	C-08	REAR WHEEL.....	L-04	TAIL LAMP.....	F-06		