


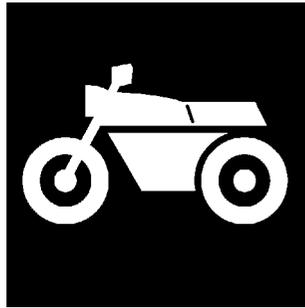

Product: 2005 Yamaha YZF-R6/YZF-R6T Motorcycle Parts Manual
Full Download: <https://www.arepairmanual.com/downloads/2005-yamaha-yzf-r6/yzf-r6t-motorcycle-parts-manual/>



PARTS CATALOGUE

Sample of manual. Download All 79 pages at:
<https://www.arepairmanual.com/downloads/2005-yamaha-yzf-r6/yzf-r6t-motorcycle-parts-manual/>

YZF-R6 (5SLV) EUROPE, SOUTH AFRICA
YZF-R6T (5SLX) AUSTRALIA



1D5SL-300EA

(2D5SL-300EA)

A2

YZF-R6/YZF-R6T
PARTS CATALOGUE
©2005 by Yamaha Motor Co., Ltd.
1st edition, January 2005
All rights reserved.
Any reprinting or unauthorized use
without the written permission of
Yamaha Motor Co., Ltd.
is expressly prohibited.
Printed in Japan.

YZF-R6



A4

FOREWORD

This Parts Catalogue is related to the parts for the model(s) on the cover page. When you are ordering replacement parts, please refer to this Parts Catalogue and quote both part numbers and part names correctly.

1. Modifications or additions which have been made after the issue of the Parts Catalogue will be announced in the Parts News.

It is advisable that you make the necessary corrections to the Parts Catalogue according to the Parts News.

2. Abbreviations

The following abbreviations are used in this Parts Catalogue.

“UR” Use specified parts number.

“UN” Use as many as needed.

“AP” Alternate Parts

“LM” Locally Made (Parts need to be ordered locally)

“F#” Frame No. (Applicable machine No.)

“O/S” Over Size

3. The number of components for assembly

- Parts, which are to be supplied in an assembly, are listed with a dot (.) in front of the part name as shown below.
- The numeral appearing to the right of each component part indicates the quantity of parts for each assembly unit.

| PART NO. | DESCRIPTION | Q'TY | REMARKS |
|--------------|--------------------------|------|---------|
| 2F5-83310-60 | FRONT FLASHER LIGHT ASSY | 2 | |
| 115-83311-60 | .BULB (6V-18W) | 1 | |

4. Applicable colours of graphics are represented in the “REMARKS” as shown below.

| PART NO. | DESCRIPTION | Q'TY | REMARKS |
|-----------------|---------------------|------|---------|
| 2N4-24110-00-X5 | FUEL TANK COMP. | 2 | MXR |
| 3J1-24240-10 | .GRAPHIC, FUEL TANK | 1 | FOR MXR |

5. Note that the illustrations for reference in finding parts numbers are not to be used for assembling. When assembling, please use the applicable service manual.



6. The asterisk (*) before a reference number indicates modified items after the first edition.

FOREWORD

7. Applicable Serial No.

Engine Serial No.

Frame Serial No.

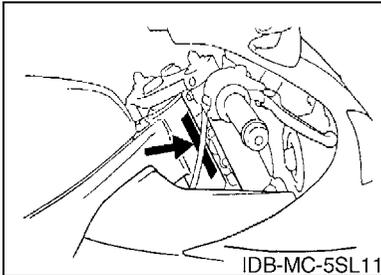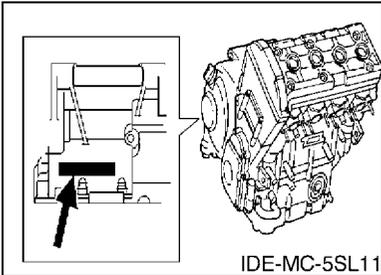

8. Applicable Colour Code (The (*) mark shows Model colour.)

| Abbreviation | Colour Name | Colour Code |
|--------------|---------------------------|-------------|
| LGB | LOW GLOSS BLACK | 0098 |
| RYC1(*) | REDDISH YELLOW COCKTAIL 1 | 0251 |
| SMX | BLACK METALLIC X | 0903 |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |

CONTENTS

ENGINE

| | |
|----------------------------|-----|
| CYLINDER | B2 |
| CRANKSHAFT & PISTON | B3 |
| VALVE | B4 |
| CAMSHAFT & CHAIN | B6 |
| WATER PUMP | B7 |
| RADIATOR & HOSE | B8 |
| OIL PUMP | B10 |
| OIL CLEANER | B11 |
| INTAKE | B12 |
| INTAKE 2 | B14 |
| AIR INDUCTION SYSTEM | C2 |
| EXHAUST | C3 |
| CRANKCASE | C4 |
| CRANKCASE COVER 1 | C6 |
| STARTER | C8 |
| CLUTCH | C9 |
| TRANSMISSION | C11 |
| SHIFT CAM & FORK | C13 |
| SHIFT SHAFT | C14 |


CHASSIS

| | |
|-------------------------------|-----|
| FRAME | C15 |
| FENDER | D3 |
| SIDE COVER | D5 |
| REAR ARM | D6 |
| REAR SUSPENSION | D8 |
| STEERING | D9 |
| FRONT FORK | D10 |
| FUEL TANK | D12 |
| SEAT | D14 |
| FRONT WHEEL | D15 |
| FRONT BRAKE CALIPER | E2 |
| REAR WHEEL | E3 |
| REAR BRAKE CALIPER | E5 |
| STEERING HANDLE & CABLE | E6 |
| FRONT MASTER CYLINDER | E7 |
| STAND & FOOTREST | E9 |
| REAR MASTER CYLINDER | E12 |
| COWLING 1 | E14 |
| COWLING 2 | F2 |
| GENERATOR | F4 |

| | |
|-----------------------------|-----|
| STARTING MOTOR | F5 |
| FLASHER LIGHT | F6 |
| METER | F7 |
| HEADLIGHT | F8 |
| TAILLIGHT | F9 |
| HANDLE SWITCH & LEVER | F10 |
| ELECTRICAL 1 | F11 |
| ELECTRICAL 2 | F12 |

INDEX

| | |
|-----------------------|----|
| NUMERICAL INDEX | M1 |
|-----------------------|----|

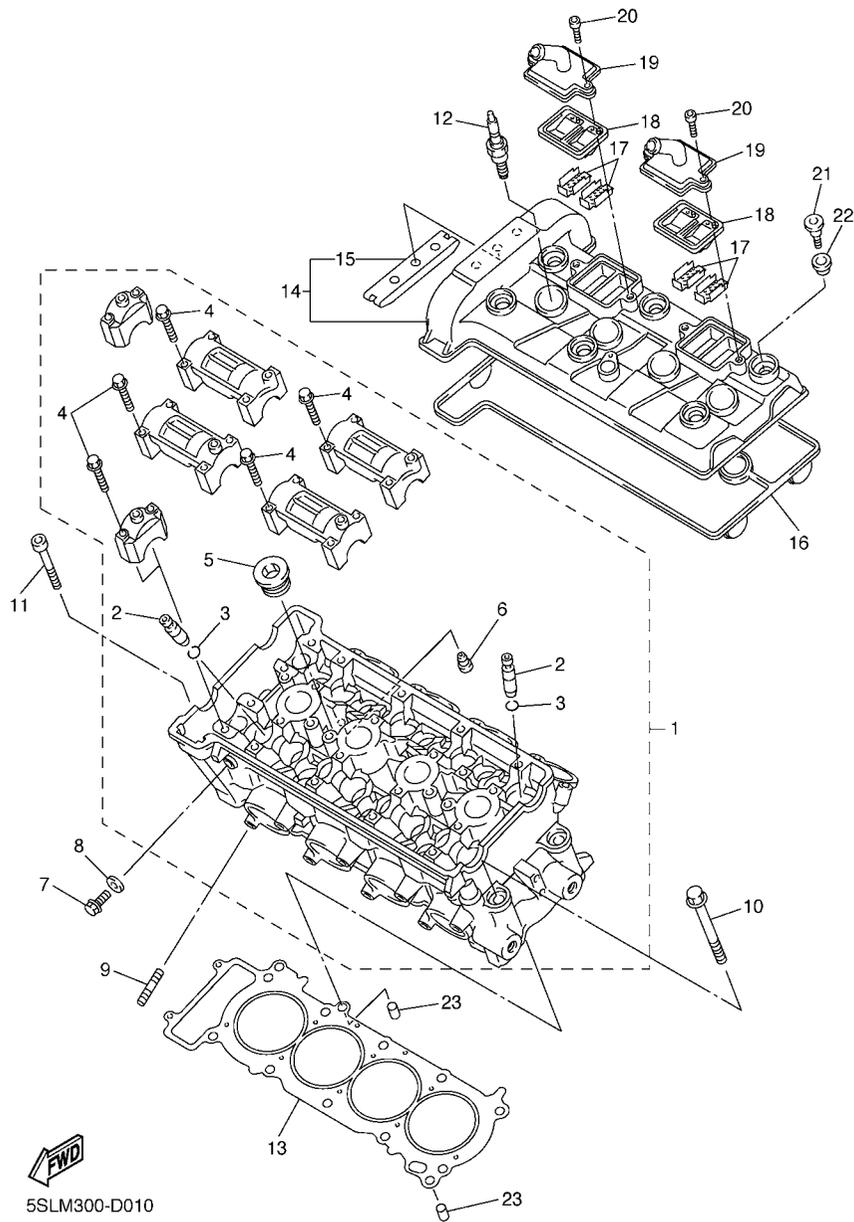


5SLM300-D010

FIG. 1 CYLINDER

| REF. NO. | PART NO. | DESCRIPTION | 5SLV | 5SLX | REMARKS |
|----------|--------------|---------------------------|------|------|---------|
| 1 | 5SL-11101-10 | CYLINDER HEAD ASSY | 1 | 1 | |
| 2 | 5EB-11133-10 | .GUIDE, VALVE 1 | 16 | 16 | |
| 3 | 93440-10153 | .CIRCLIP | 16 | 16 | |
| 4 | 90105-06027 | .BOLT, FLANGE | 20 | 20 | |
| 5 | 90340-20090 | .PLUG, STRAIGHT SCREW | 3 | 3 | |
| 6 | 11H-15138-00 | .NOZZLE 1 | 1 | 1 | |
| 7 | 95027-08012 | BOLT, FLANGE | 1 | 1 | |
| 8 | 90430-08119 | GASKET | 1 | 1 | |
| 9 | 95617-08625 | BOLT, STUD | 8 | 8 | |
| 10 | 90119-10003 | BOLT, WITH WASHER | 10 | 10 | |
| 11 | 91317-06060 | BOLT | 2 | 2 | |
| 12 | 94701-00402 | PLUG, SPARK (NGK CR10EK) | 4 | 4 | |
| 13 | 5SL-11181-00 | GASKET, CYLINDER HEAD 1 | 1 | 1 | |
| 14 | 5SL-11191-01 | COVER, CYLINDER HEAD 1 | 1 | 1 | |
| 15 | 5BE-12241-00 | .GUIDE, STOPPER 2 | 1 | 1 | |
| 16 | 5SL-11193-00 | GASKET, HEAD COVER 1 | 1 | 1 | |
| 17 | 5SL-1482K-00 | PLATE | 4 | 4 | |
| 18 | 5SL-14890-00 | REED VALVE ASSY | 2 | 2 | |
| 19 | 5SL-14899-00 | CAP, CASE | 2 | 2 | |
| 20 | 90110-06118 | BOLT, HEXAGON SOCKET HEAD | 4 | 4 | |
| 21 | 90109-066F0 | BOLT | 6 | 6 | |
| 22 | 4KG-1111G-00 | RUBBER, MOUNT 1 | 6 | 6 | |
| 23 | 99530-10114 | PIN, DOWEL | 2 | 2 | |

FIG. 2 CRANKSHAFT & PISTON

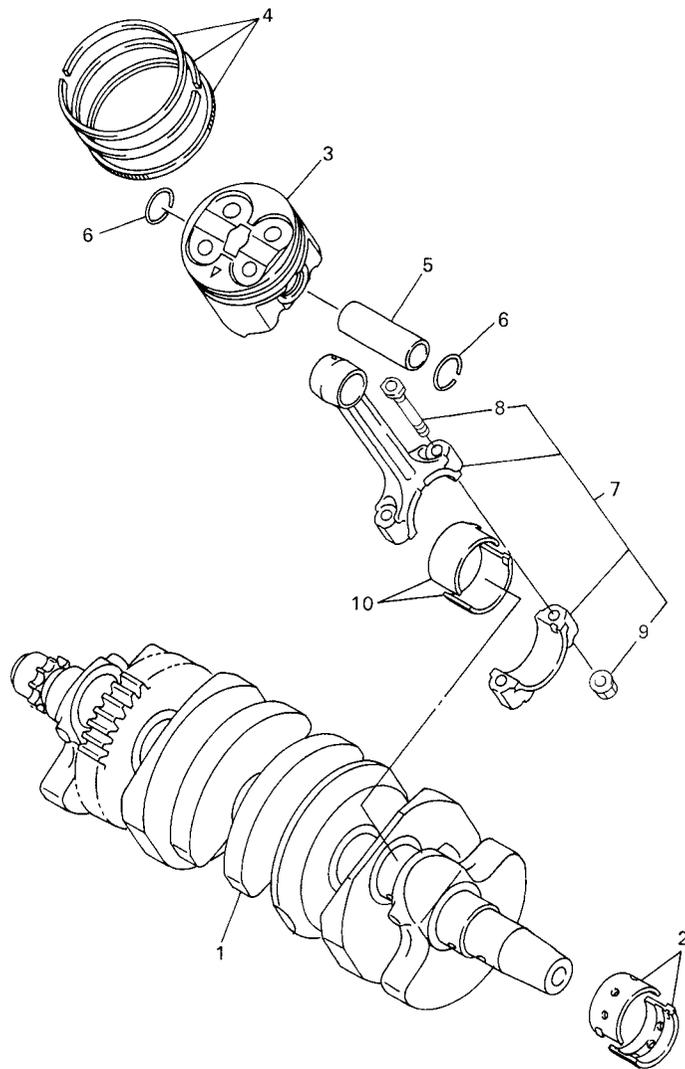


| REF. NO. | PART NO. | DESCRIPTION | 5SLV | 5SLX | REMARKS |
|----------|--------------|-------------------------------|------|------|----------|
| 1 | 5SL-11411-00 | CRANKSHAFT | 1 | 1 | |
| 2 | 5EB-11416-A0 | PLANE BEARING, CRANKSHAFT 1 | 10 | 10 | UR WHITE |
| | 5EB-11416-00 | PLANE BEARING, CRANKSHAFT 1 | 10 | 10 | UR BLUE |
| | 5EB-11416-10 | PLANE BEARING, CRANKSHAFT 1 | 10 | 10 | UR BLACK |
| | 5EB-11416-20 | PLANE BEARING, CRANKSHAFT 1 | 10 | 10 | UR BROWN |
| | 5EB-11416-30 | PLANE BEARING, CRANKSHAFT 1 | 10 | 10 | UR GREEN |
| 3 | 5SL-11631-00 | PISTON (STD) | 4 | 4 | |
| 4 | 5SL-11603-00 | PISTON RING SET (STD) | 4 | 4 | |
| 5 | 5SL-11633-00 | PIN, PISTON | 4 | 4 | |
| 6 | 93450-17129 | CIRCLIP | 8 | 8 | |
| 7 | 5SL-11650-00 | CONNECTING ROD ASSY | 4 | 4 | |
| 8 | 5SL-11654-00 | .BOLT, CONNECTING ROD | 2 | 2 | |
| 9 | 90179-07652 | .NUT | 2 | 2 | |
| 10 | 5SL-11656-00 | PLANE BEARING, CONNECTING ROD | 8 | 8 | UR BLUE |
| | 5SL-11656-10 | PLANE BEARING, CONNECTING ROD | 8 | 8 | UR BLACK |
| | 5SL-11656-20 | PLANE BEARING, CONNECTING ROD | 8 | 8 | UR BROWN |
| | 5SL-11656-30 | PLANE BEARING, CONNECTING ROD | 8 | 8 | UR GREEN |



5EB3351-9020

FIG. 3 VALVE

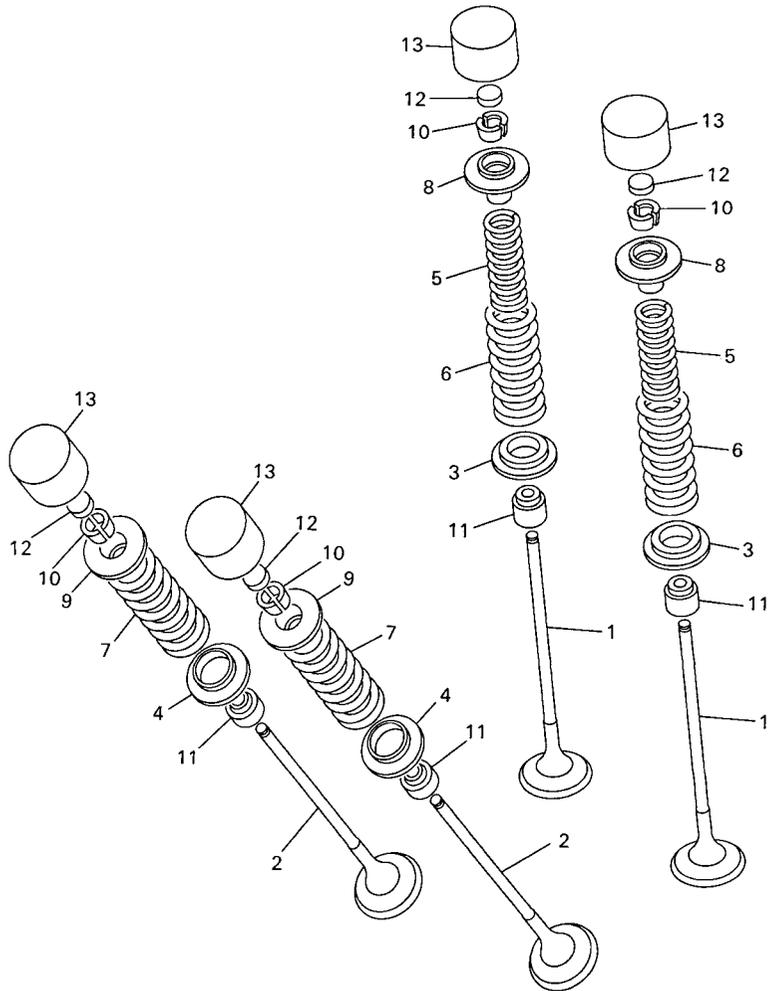


| REF. NO. | PART NO. | DESCRIPTION | 5SLV | 5SLX | REMARKS |
|----------|--------------|-------------------------|------|------|---------|
| 1 | 5SL-12111-10 | VALVE, INTAKE | 8 | 8 | |
| 2 | 5SL-12121-10 | VALVE, EXHAUST | 8 | 8 | |
| 3 | 5SL-12116-00 | SEAT, VALVE SPRING | 8 | 8 | |
| 4 | 5EB-12126-00 | SEAT, VALVE SPRING 2 | 8 | 8 | |
| 5 | 5SL-12113-00 | SPRING, VALVE INNER | 8 | 8 | |
| 6 | 5SL-12114-00 | SPRING, VALVE OUTER | 8 | 8 | |
| 7 | 5EB-12124-01 | SPRING, VALVE OUTER | 8 | 8 | |
| 8 | 5EB-12117-00 | RETAINER, VALVE SPRING | 8 | 8 | |
| 9 | 5EB-12127-00 | RETAINER, VALVE SPRING | 8 | 8 | |
| 10 | 1HX-12118-00 | COTTER, VALVE | 32 | 32 | |
| 11 | 4TV-12119-00 | SEAL, VALVE STEM | 16 | 16 | |
| 12 | 1HX-12168-00 | PAD, ADJUSTING 2 (1.20) | 16 | 16 | UR |
| | 1HX-12168-20 | PAD, ADJUSTING 2 (1.25) | 16 | 16 | UR |
| | 1HX-12168-40 | PAD, ADJUSTING 2 (1.30) | 16 | 16 | UR |
| | 1HX-12168-60 | PAD, ADJUSTING 2 (1.35) | 16 | 16 | UR |
| | 1HX-12168-80 | PAD, ADJUSTING 2 (1.40) | 16 | 16 | UR |
| | 1HX-12168-A0 | PAD, ADJUSTING 2 (1.45) | 16 | 16 | UR |
| | 1HX-12168-F0 | PAD, ADJUSTING 2 (1.50) | 16 | 16 | UR |
| | 1HX-12168-H1 | PAD, ADJUSTING 2 (1.55) | 16 | 16 | UR |
| | 1HX-12168-K1 | PAD, ADJUSTING 2 (1.60) | 16 | 16 | UR |
| | 1HX-12168-M1 | PAD, ADJUSTING 2 (1.65) | 16 | 16 | UR |
| | 1HX-12168-R1 | PAD, ADJUSTING 2 (1.70) | 16 | 16 | UR |
| | 1HX-12168-U1 | PAD, ADJUSTING 2 (1.75) | 16 | 16 | UR |
| | 1HX-12168-W1 | PAD, ADJUSTING 2 (1.80) | 16 | 16 | UR |
| | 1HX-12168-Y1 | PAD, ADJUSTING 2 (1.85) | 16 | 16 | UR |
| | 1HX-12169-11 | PAD, ADJUSTING 2 (1.90) | 16 | 16 | UR |
| | 1HX-12169-31 | PAD, ADJUSTING 2 (1.95) | 16 | 16 | UR |



5EB3351-9030


B4

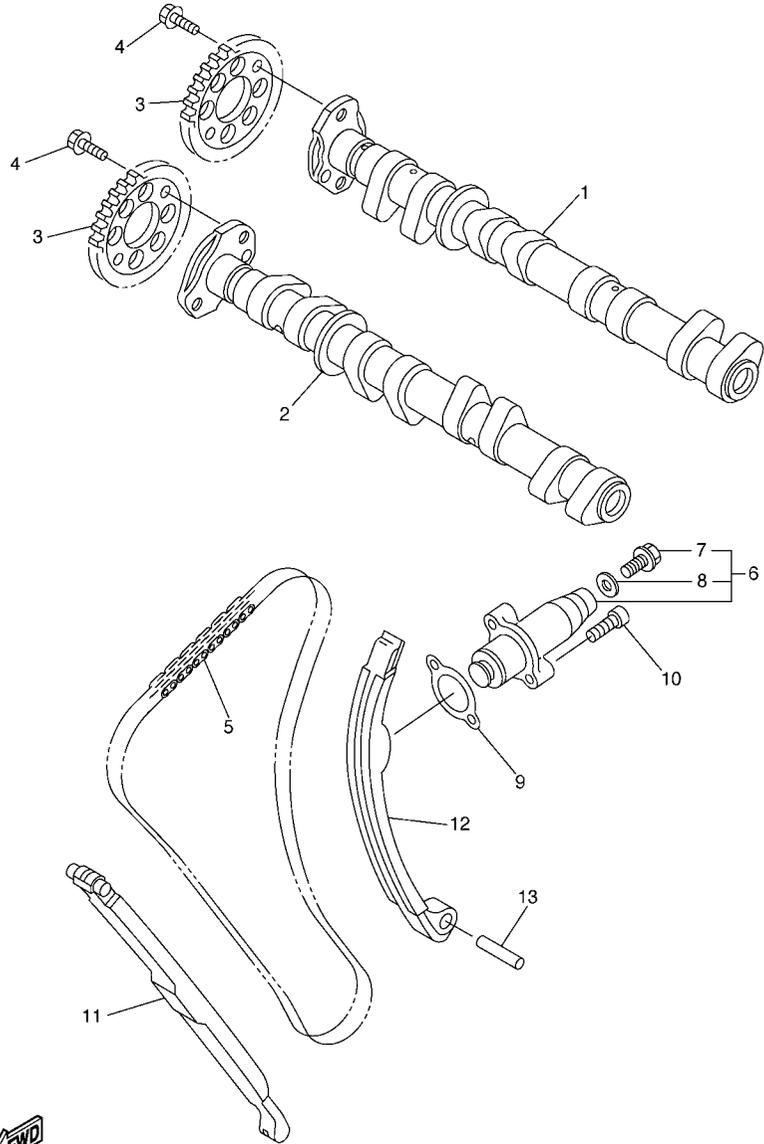

5SLM300-D040

FIG. 4 CAMSHAFT & CHAIN


| REF. NO. | PART NO. | DESCRIPTION | 5SLV | 5SLX | | | | REMARKS |
|----------|--------------|---------------------------|------|------|--|--|--|---------|
| | | | | | | | | |
| 1 | 5SL-12170-00 | CAMSHAFT ASSY 1 | 1 | 1 | | | | |
| 2 | 5SL-12180-00 | CAMSHAFT ASSY 2 | 1 | 1 | | | | |
| 3 | 5EB-12176-00 | SPROCKET, CAM CHAIN | 2 | 2 | | | | |
| 4 | 90105-07004 | BOLT, FLANGE | 4 | 4 | | | | |
| 5 | 94591-49120 | CHAIN | 1 | 1 | | | | |
| 6 | 5SL-12210-10 | TENSIONER ASSY, CAM CHAIN | 1 | 1 | | | | |
| 7 | 5EL-12228-00 | .BOLT | 1 | 1 | | | | |
| 8 | 5SL-12214-00 | .GASKET | 1 | 1 | | | | |
| 9 | 4FM-12213-00 | GASKET, TENSIONER CASE | 1 | 1 | | | | |
| 10 | 91317-06025 | BOLT | 2 | 2 | | | | |
| 11 | 5EB-12251-00 | DAMPER, CHAIN 1 | 1 | 1 | | | | |
| 12 | 5EB-12252-10 | DAMPER, CHAIN 2 | 1 | 1 | | | | |
| 13 | 93607-44190 | PIN, DOWEL | 1 | 1 | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |

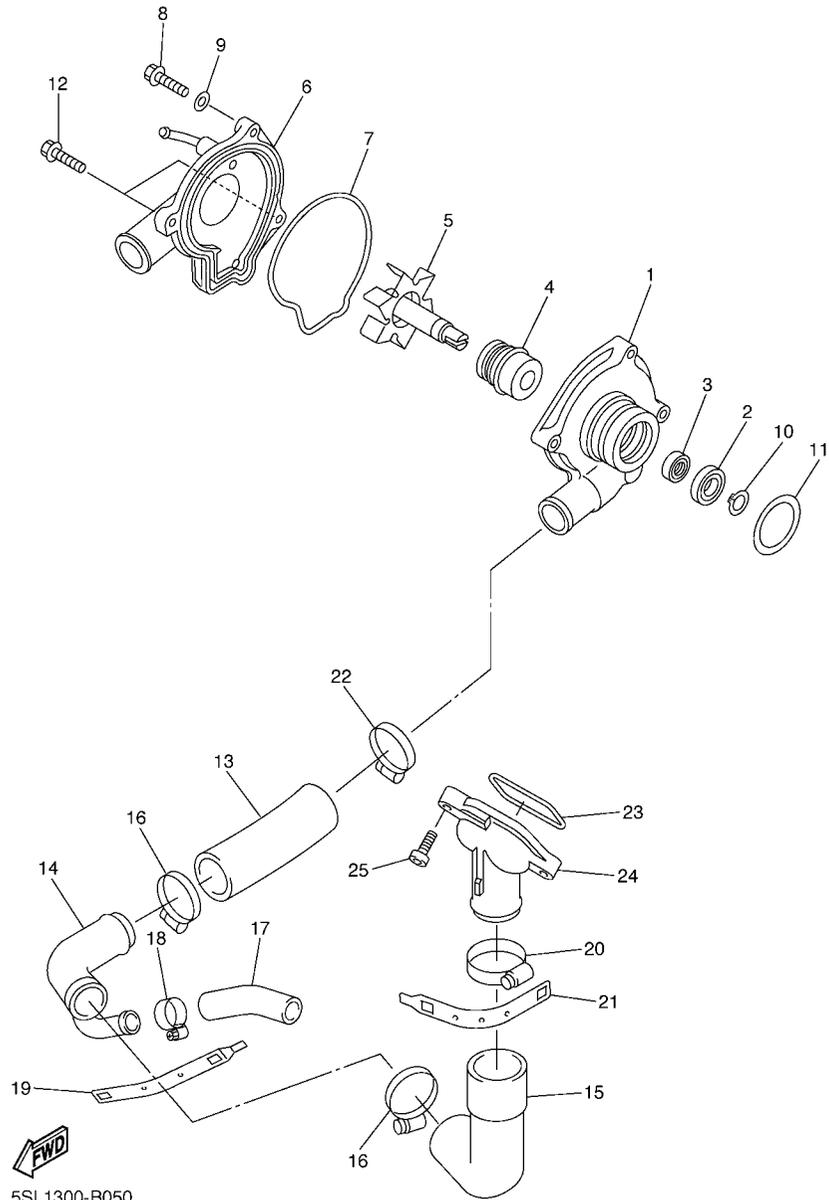

5SL1300-B050

FIG. 5 WATER PUMP


| REF. NO. | PART NO. | DESCRIPTION | 5SLV | 5SLX | REMARKS |
|----------|--------------|---------------------------|------|------|---------|
| 1 | 5EB-12421-00 | HOUSING, WATER PUMP | 1 | 1 | |
| 2 | 93306-00106 | BEARING | 1 | 1 | |
| 3 | 93101-12173 | OIL SEAL | 1 | 1 | |
| 4 | 11H-12438-10 | SEAL, MECHANICAL | 1 | 1 | |
| 5 | 5EB-12450-00 | IMPELLER SHAFT ASSY | 1 | 1 | |
| 6 | 5SL-12422-00 | COVER, HOUSING | 1 | 1 | |
| 7 | 5EB-12439-00 | O-RING | 1 | 1 | |
| 8 | 95024-06020 | BOLT, FLANGE | 2 | 2 | |
| 9 | 90430-06014 | GASKET | 1 | 1 | |
| 10 | 99009-12400 | CIRCLIP | 1 | 1 | |
| 11 | 93210-33133 | O-RING | 1 | 1 | |
| 12 | 90110-06149 | BOLT, HEXAGON SOCKET HEAD | 2 | 2 | |
| 13 | 4NK-12579-00 | HOSE 4 | 1 | 1 | |
| 14 | 5EB-12581-00 | JOINT, HOSE 1 | 1 | 1 | |
| 15 | 5EB-12577-01 | HOSE 2 | 1 | 1 | |
| 16 | 90450-35001 | HOSE CLAMP ASSY | 2 | 2 | |
| 17 | 5SL-12588-01 | HOSE 5 | 1 | 1 | |
| 18 | 90450-22017 | HOSE CLAMP ASSY | 1 | 1 | |
| 19 | 5GV-1246E-00 | COVER 2 | 1 | 1 | |
| 20 | 90450-38040 | HOSE CLAMP ASSY | 1 | 1 | |
| 21 | 5GV-1246A-00 | COVER 1 | 1 | 1 | |
| 22 | 90450-32001 | HOSE CLAMP ASSY | 1 | 1 | |
| 23 | 93210-47675 | O-RING | 1 | 1 | |
| 24 | 5EB-12469-00 | JOINT 1 | 1 | 1 | |
| 25 | 90105-06053 | BOLT, FLANGE | 2 | 2 | |

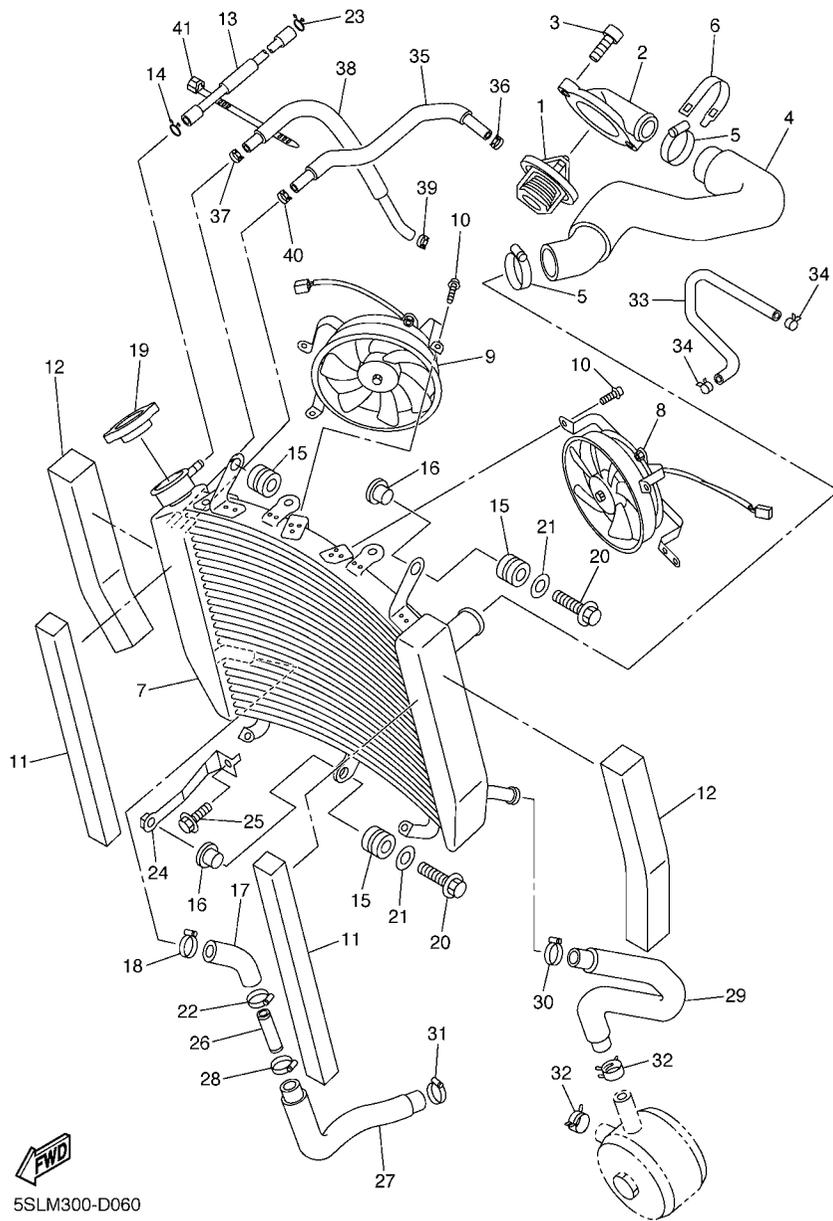

5SLM300-D060

FIG. 6 RADIATOR & HOSE


| REF. NO. | PART NO. | DESCRIPTION | 5SLV | 5SLX | REMARKS |
|----------|--------------|----------------------|------|------|---------|
| 1 | 5SL-12410-00 | THERMOSTAT ASSY | 1 | 1 | |
| 2 | 5EB-12413-00 | COVER, THERMOSTAT | 1 | 1 | |
| 3 | 91317-06020 | BOLT | 2 | 2 | |
| 4 | 5SL-12578-00 | HOSE 3 | 1 | 1 | |
| 5 | 90450-35001 | HOSE CLAMP ASSY | 2 | 2 | |
| 6 | 5GV-1246E-00 | COVER 2 | 1 | 1 | |
| 7 | 5SL-12461-10 | RADIATOR ASSY | 1 | 1 | |
| 8 | 5SL-12405-10 | BLOWER ASSY | 1 | 1 | |
| 9 | 5SL-12405-20 | BLOWER ASSY | 1 | 1 | |
| 10 | 5GJ-12675-00 | BOLT, BLOWER HOLDING | 6 | 6 | |
| 11 | 5SL-12659-00 | DAMPER, AIR SHROUD 2 | 2 | 2 | |
| 12 | 5EB-12668-00 | DAMPER, AIR SHROUD 3 | 2 | 2 | |
| 13 | 90445-08016 | HOSE | 1 | 1 | |
| 14 | 90467-08075 | CLIP | 1 | 1 | |
| 15 | 90480-15363 | GROMMET | 3 | 3 | |
| 16 | 90387-07391 | COLLAR | 2 | 2 | |
| 17 | 5SL-12579-10 | HOSE 4 | 1 | 1 | |
| 18 | 90450-35001 | HOSE CLAMP ASSY | 1 | 1 | |
| 19 | 5SL-12462-00 | CAP, RADIATOR | 1 | 1 | |
| 20 | 90105-06040 | BOLT, FLANGE | 2 | 2 | |
| 21 | 90201-06071 | WASHER, PLATE | 2 | 2 | |
| 22 | 90450-35001 | HOSE CLAMP ASSY | 1 | 1 | |
| 23 | 90467-08075 | CLIP | 1 | 1 | |
| 24 | 5SL-1244E-10 | BRACKET 1 | 1 | 1 | |
| 25 | 95827-06012 | BOLT, FLANGE | 1 | 1 | |
| 26 | 5SL-12582-10 | JOINT, HOSE 2 | 1 | 1 | |
| 27 | 5SL-12551-10 | HOSE 7 | 1 | 1 | |

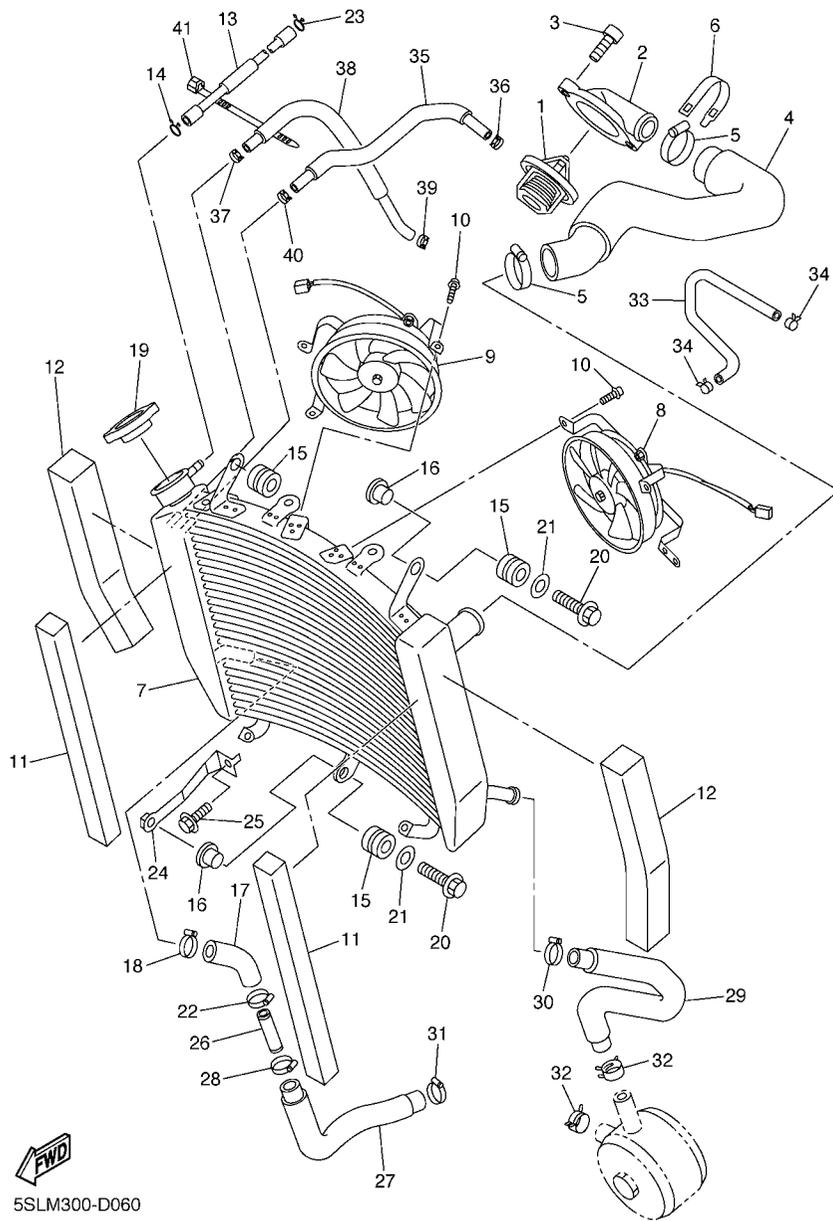

5SLM300-D060

FIG. 6 RADIATOR & HOSE

| REF. NO. | PART NO. | DESCRIPTION | 5SLV | 5SLX | REMARKS |
|----------|--------------|-----------------|------|------|---------|
| 28 | 90450-35001 | HOSE CLAMP ASSY | 1 | 1 | |
| 29 | 5SL-12589-01 | HOSE 6 | 1 | 1 | |
| 30 | 90450-22017 | HOSE CLAMP ASSY | 1 | 1 | |
| 31 | 90450-32001 | HOSE CLAMP ASSY | 1 | 1 | |
| 32 | 90467-200A0 | CLIP | 2 | 2 | |
| 33 | 5SL-1243A-00 | HOSE 1 | 1 | 1 | |
| 34 | 90467-11090 | CLIP | 2 | 2 | |
| 35 | 5SL-1243E-00 | HOSE 2 | 1 | 1 | |
| 36 | 90467-11090 | CLIP | 1 | 1 | |
| 37 | 90467-11090 | CLIP | 1 | 1 | |
| 38 | 5SL-1244G-00 | HOSE, 4 | 1 | 1 | |
| 39 | 90467-11090 | CLIP | 1 | 1 | |
| 40 | 90467-11090 | CLIP | 1 | 1 | |
| 41 | 90464-28002 | CLAMP | 1 | 1 | |


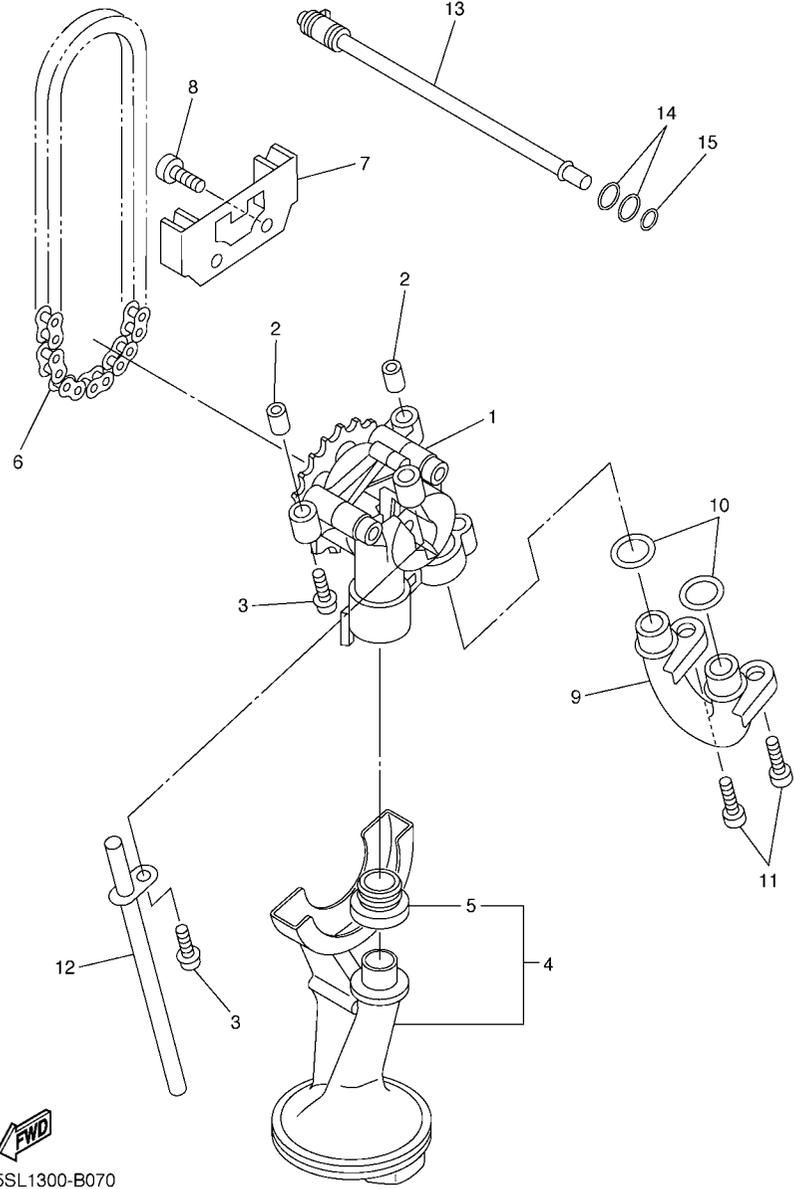



5SL1300-B070

FIG. 7 OIL PUMP

| REF. NO. | PART NO. | DESCRIPTION | 5SLV | 5SLX | REMARKS |
|----------|--------------|---------------------------|------|------|---------|
| | | | | | |
| 1 | 5MT-13300-00 | OIL PUMP ASSY | 1 | 1 | |
| 2 | 91808-17032 | PIN, DOWEL | 2 | 2 | |
| 3 | 90109-06031 | BOLT | 3 | 3 | |
| 4 | 5SL-13410-00 | STRAINER HOUSING ASSY | 1 | 1 | |
| 5 | 5EB-13415-00 | .SEAL, OIL STRAINER | 1 | 1 | |
| 6 | 94580-25080 | CHAIN | 1 | 1 | |
| 7 | 5EB-13898-00 | HOLDER | 1 | 1 | |
| 8 | 90110-06041 | BOLT, HEXAGON SOCKET HEAD | 2 | 2 | |
| 9 | 5JW-13416-00 | PIPE, OIL 1 | 1 | 1 | |
| 10 | 93210-14003 | O-RING | 2 | 2 | |
| 11 | 90110-06041 | BOLT, HEXAGON SOCKET HEAD | 2 | 2 | |
| 12 | 5EB-13161-00 | PIPE, DELIVERY 1 | 1 | 1 | |
| 13 | 5EB-1316E-00 | PIPE, DELIVERY 5 | 1 | 1 | |
| 14 | 93210-09165 | O-RING | 2 | 2 | |
| 15 | 93210-06667 | O-RING | 1 | 1 | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |


B10

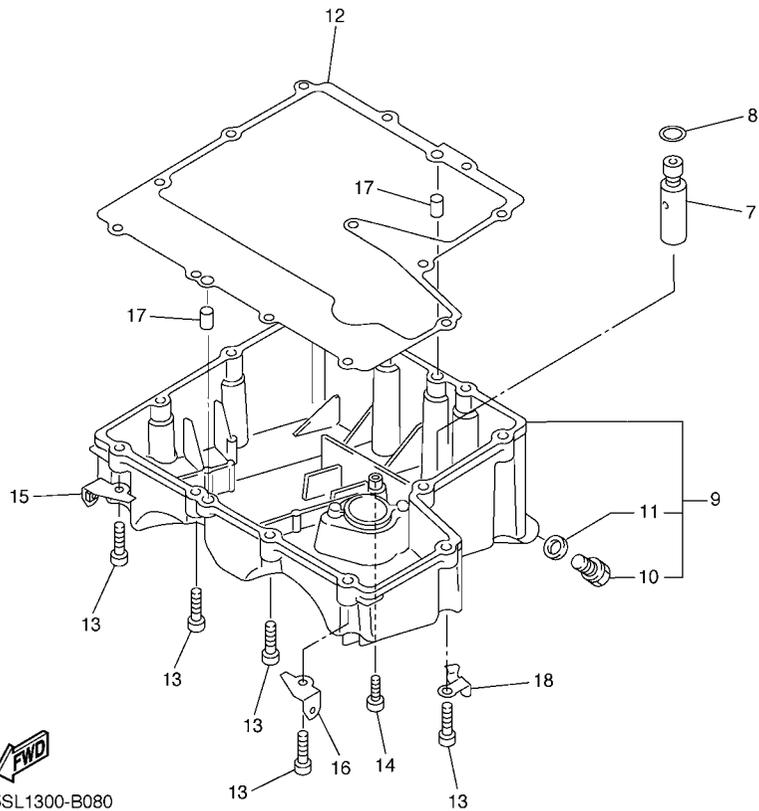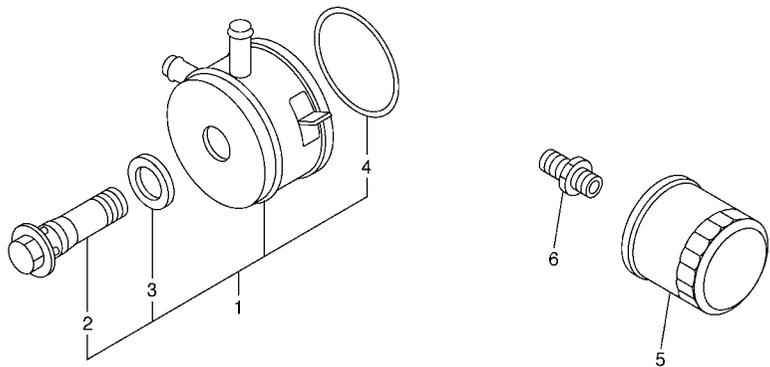


5SL1300-B080

FIG. 8 OIL CLEANER


| REF. NO. | PART NO. | DESCRIPTION | 5SLV | 5SLX | REMARKS |
|----------|--------------|---------------------------|------|------|---------|
| 1 | 5EB-13470-00 | OIL COOLER ASSY | 1 | 1 | |
| 2 | 5EB-12822-00 | .BOLT, UNION | 1 | 1 | |
| 3 | 5EB-13475-00 | .GASKET | 1 | 1 | |
| 4 | 5JW-13473-00 | .O-RING | 1 | 1 | |
| 5 | 5GH-13440-00 | ELEMENT ASSY, OIL CLEANER | 1 | 1 | |
| 6 | 90401-20145 | BOLT, UNION | 1 | 1 | |
| 7 | 3KS-13490-00 | RELIEF VALVE ASSY | 1 | 1 | |
| 8 | 93210-15566 | O-RING | 1 | 1 | |
| 9 | 5SL-13417-00 | COVER, STRAINER | 1 | 1 | |
| 10 | 90340-14132 | .PLUG, STRAIGHT SCREW | 1 | 1 | |
| 11 | 214-11198-01 | .GASKET | 1 | 1 | |
| 12 | 5SL-13414-00 | GASKET, STRAINER COVER | 1 | 1 | |
| 13 | 91317-06025 | BOLT | 12 | 12 | |
| 14 | 90110-06020 | BOLT, HEXAGON SOCKET HEAD | 1 | 1 | |
| 15 | 5EB-2836E-00 | BRACKET 2 | 1 | 1 | |
| 16 | 5EB-2836A-00 | BRACKET 1 | 1 | 1 | |
| 17 | 99530-08012 | PIN, DOWEL | 2 | 2 | |
| 18 | 90465-10030 | CLAMP | 1 | 1 | |

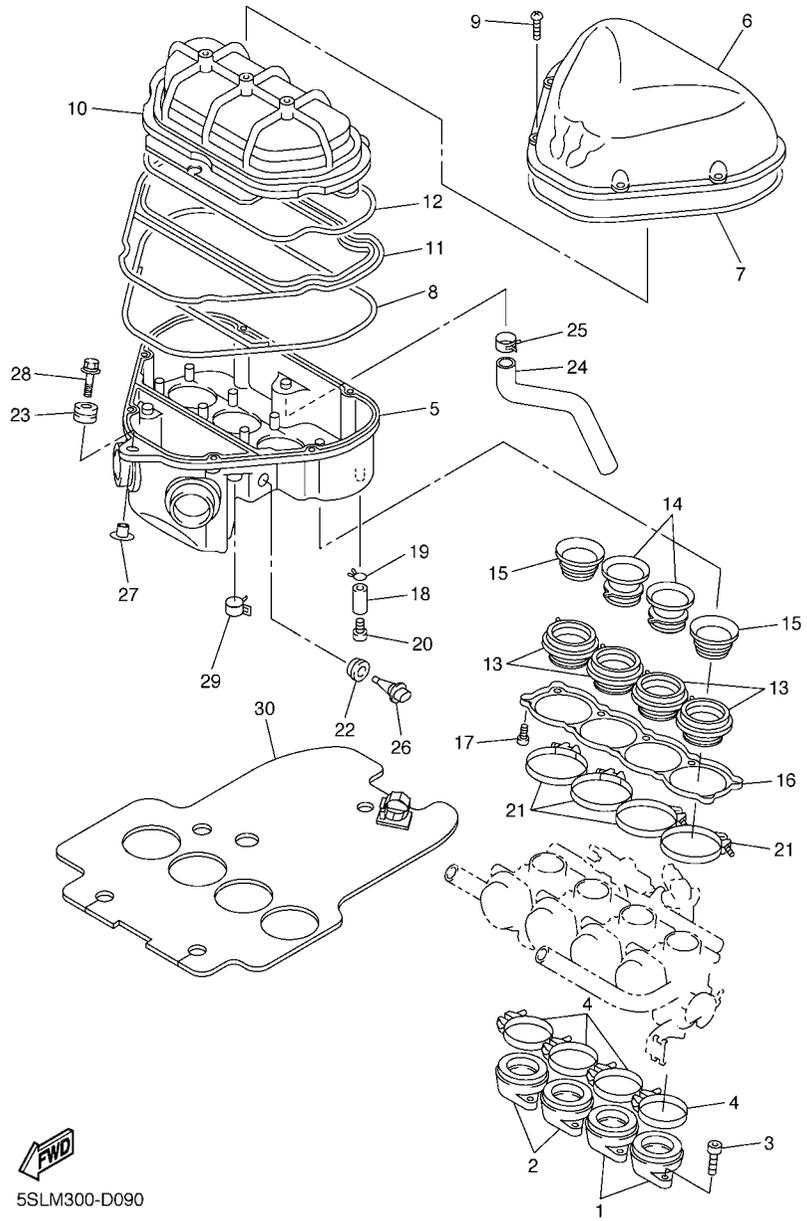

5SLM300-D090

FIG. 9 INTAKE


| REF. NO. | PART NO. | DESCRIPTION | 5SLV | 5SLX | REMARKS |
|----------|--------------|-----------------------------|------|------|---------|
| 1 | 5SL-13586-10 | JOINT, CARBURETOR 1 | 2 | 2 | |
| 2 | 5SL-13596-10 | JOINT, CARBURETOR 2 | 2 | 2 | |
| 3 | 91317-06020 | BOLT | 8 | 8 | |
| 4 | 90450-63003 | HOSE CLAMP ASSY | 4 | 4 | |
| 5 | 5SL-14411-00 | CASE, AIR CLEANER 1 | 1 | 1 | |
| 6 | 5SL-14421-00 | CASE, AIR CLEANER 2 | 1 | 1 | |
| 7 | 5EB-14452-00 | SEAL | 1 | 1 | |
| 8 | 5EB-14462-00 | SEAL | 1 | 1 | |
| 9 | 98507-05025 | SCREW, PAN HEAD | 6 | 6 | |
| 10 | 5SL-14450-00 | ELEMENT ASSY, AIR CLEANER | 1 | 1 | |
| 11 | 5EB-1441F-01 | PARTITION, AIR CLEANER CASE | 1 | 1 | |
| 12 | 5EB-14457-00 | SEAL | 1 | 1 | |
| 13 | 5SL-14453-10 | JOINT, AIR CLEANER 1 | 4 | 4 | |
| 14 | 5SL-14469-10 | FUNNEL, AIR | 2 | 2 | |
| 15 | 5SL-14479-10 | FUNNEL | 2 | 2 | |
| 16 | 5SL-14477-00 | PLATE | 1 | 1 | |
| 17 | 97707-50120 | SCREW, TAPPING | 10 | 10 | |
| 18 | 90445-11795 | HOSE (L30) | 1 | 1 | |
| 19 | 90467-10041 | CLIP | 1 | 1 | |
| 20 | 90338-08174 | PLUG | 1 | 1 | |
| 21 | 90450-53002 | HOSE CLAMP ASSY | 4 | 4 | |
| 22 | 5CA-14435-00 | GROMMET | 1 | 1 | |
| 23 | 90480-12314 | GROMMET | 1 | 1 | |
| 24 | 5SL-15373-00 | PIPE, BREATHER | 1 | 1 | |
| 25 | 90467-15054 | CLIP | 1 | 1 | |
| 26 | 5CA-85886-00 | SENSOR, AIR TEMPRATURE | 1 | 1 | |
| 27 | 90387-065J6 | COLLAR | 1 | 1 | |

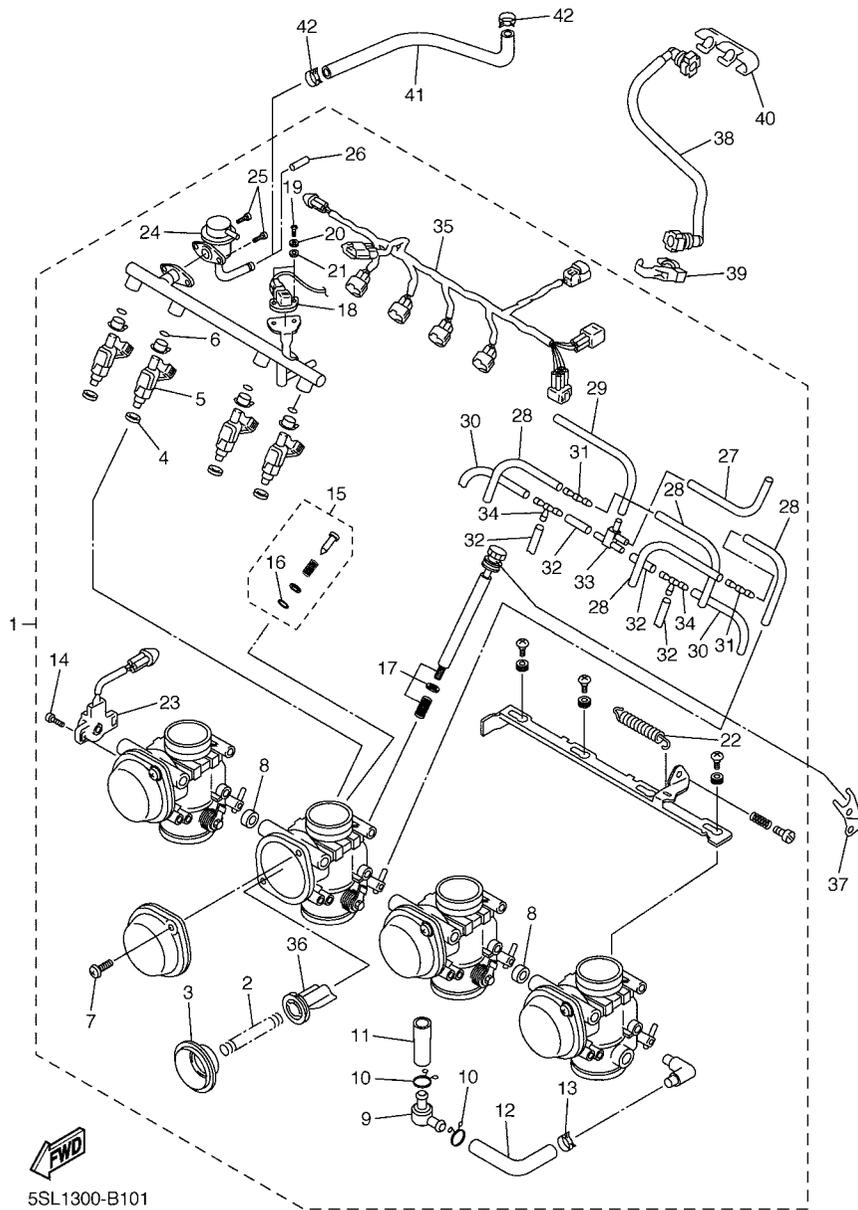

5SL1300-B101

FIG. 10 INTAKE 2

| REF. NO. | PART NO. | DESCRIPTION | 5SLV | 5SLX | REMARKS |
|----------|--------------|-----------------------|------|------|---------|
| 1 | 5SL-13750-30 | THROTTLE BODY ASSY | 1 | 1 | |
| 2 | 4SV-14933-00 | .SPRING, DIAPHRAGM | 4 | 4 | |
| 3 | 5SL-24411-00 | .DIAPHRAGM | 4 | 4 | |
| 4 | 5SL-13556-00 | .GASKET | 4 | 4 | |
| 5 | 5SL-13761-00 | .INJECTOR ASSY | 4 | 4 | |
| 6 | 5FL-14147-00 | .O-RING | 4 | 4 | |
| 7 | 4KM-14216-00 | .SCREW | 8 | 8 | |
| 8 | 5SL-14987-00 | .HOSE | 2 | 2 | |
| 9 | 3LN-24515-00 | .NET, FILTER 2 | 2 | 2 | |
| 10 | 90467-15012 | .CLIP | 4 | 4 | |
| 11 | 5SL-14148-00 | .PIPE | 2 | 2 | |
| 12 | 5SL-14348-00 | .PIPE 1 | 2 | 2 | |
| 13 | 90467-15001 | .CLIP | 2 | 2 | |
| 14 | 8CC-14216-10 | .SCREW | 2 | 2 | |
| 15 | 5JW-14104-00 | .AIR SCREW SET | 4 | 4 | |
| 16 | 3H1-14147-00 | .O-RING | 1 | 1 | |
| 17 | 5SL-14103-00 | .THROTTLE SCREW SET | 1 | 1 | |
| 18 | 5JW-82380-00 | .SENSOR, PRESSURE | 1 | 1 | |
| 19 | 98507-05016 | .SCREW, PAN HEAD | 2 | 2 | |
| 20 | 92907-05100 | .WASHER, SPRING | 2 | 2 | |
| 21 | 92907-05600 | .WASHER, PLATE | 2 | 2 | |
| 22 | 5JW-14589-00 | .SPRING | 1 | 1 | |
| 23 | 5SL-85885-00 | .THROTTLE SENSOR ASSY | 1 | 1 | |
| 24 | 5SL-13906-10 | .REGULATOR, PRESSURE | 1 | 1 | |
| 25 | 98507-05008 | .SCREW, PAN HEAD | 2 | 2 | |
| 26 | 5JW-14118-00 | .CAP | 1 | 1 | |
| 27 | 5SL-14349-00 | .PIPE | 1 | 1 | |

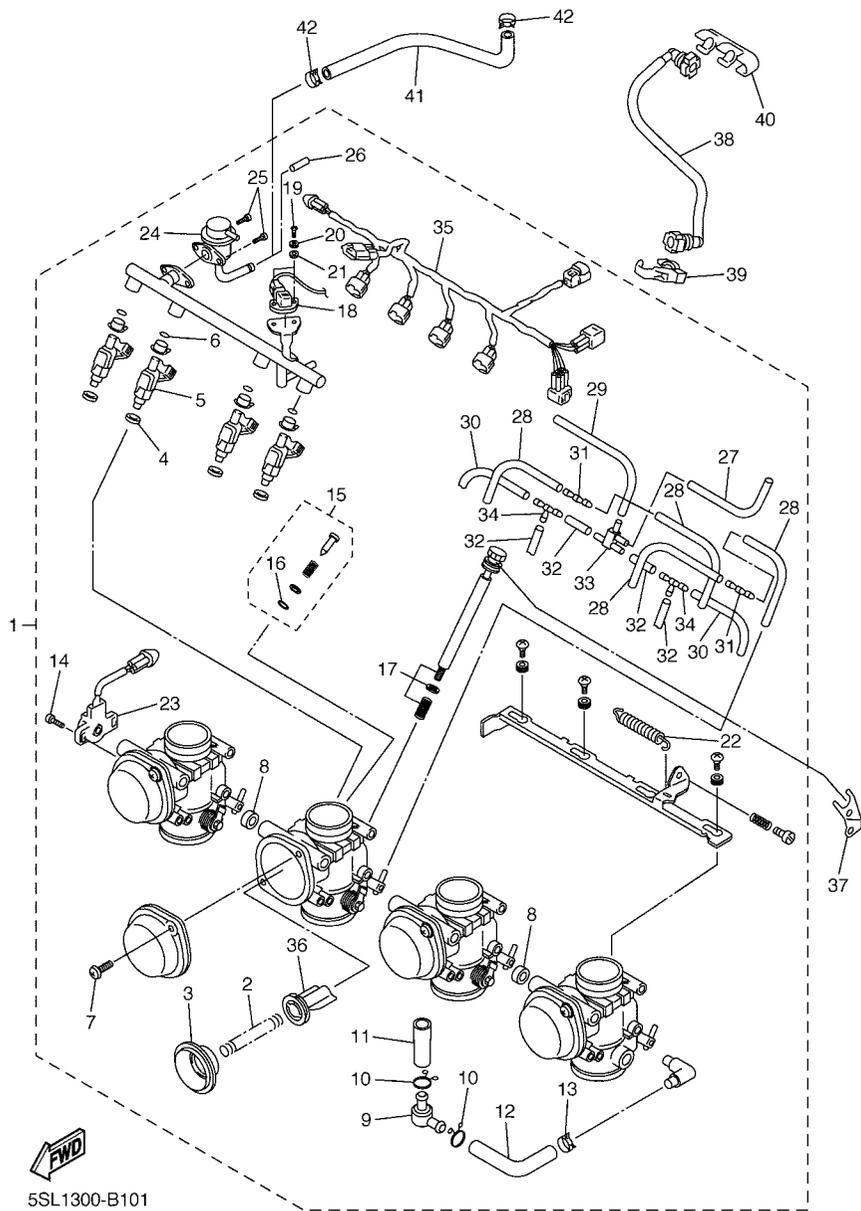


5SL1300-B101

FIG. 10 INTAKE 2


| REF. NO. | PART NO. | DESCRIPTION | 5SLV | 5SLX | REMARKS |
|----------|--------------|--------------------------|------|------|---------|
| 28 | 5PW-14396-00 | .PIPE | 4 | 4 | |
| 29 | 5PW-14349-00 | .PIPE | 1 | 1 | |
| 30 | 68V-13533-00 | .HOSE, VACUUM SENSING 4 | 2 | 2 | |
| 31 | 5PW-14251-00 | .NIPPLE | 2 | 2 | |
| 32 | 5FL-14348-10 | .PIPE 1 | 4 | 4 | |
| 33 | 5PW-1410F-00 | .CONNECTOR | 1 | 1 | |
| 34 | 68V-24376-00 | .PIPE, JOINT 1 | 2 | 2 | |
| 35 | 5SL-82386-00 | .EXTENSION, WIRE HARNESS | 1 | 1 | |
| 36 | 5PW-14112-00 | .VALVE, THROTTLE 1 | 4 | 4 | |
| 37 | 5SL-14413-00 | STAY | 1 | 1 | |
| 38 | 5SL-13971-00 | PIPE, FUEL 1 | 1 | 1 | |
| 39 | 90464-16005 | CLAMP | 1 | 1 | |
| 40 | 90464-16005 | CLAMP | 1 | 1 | |
| 41 | 5SL-13972-00 | PIPE, FUEL 2 | 1 | 1 | |
| 42 | 90467-12003 | CLIP | 2 | 2 | |

FIG. 11 AIR INDUCTION SYSTEM

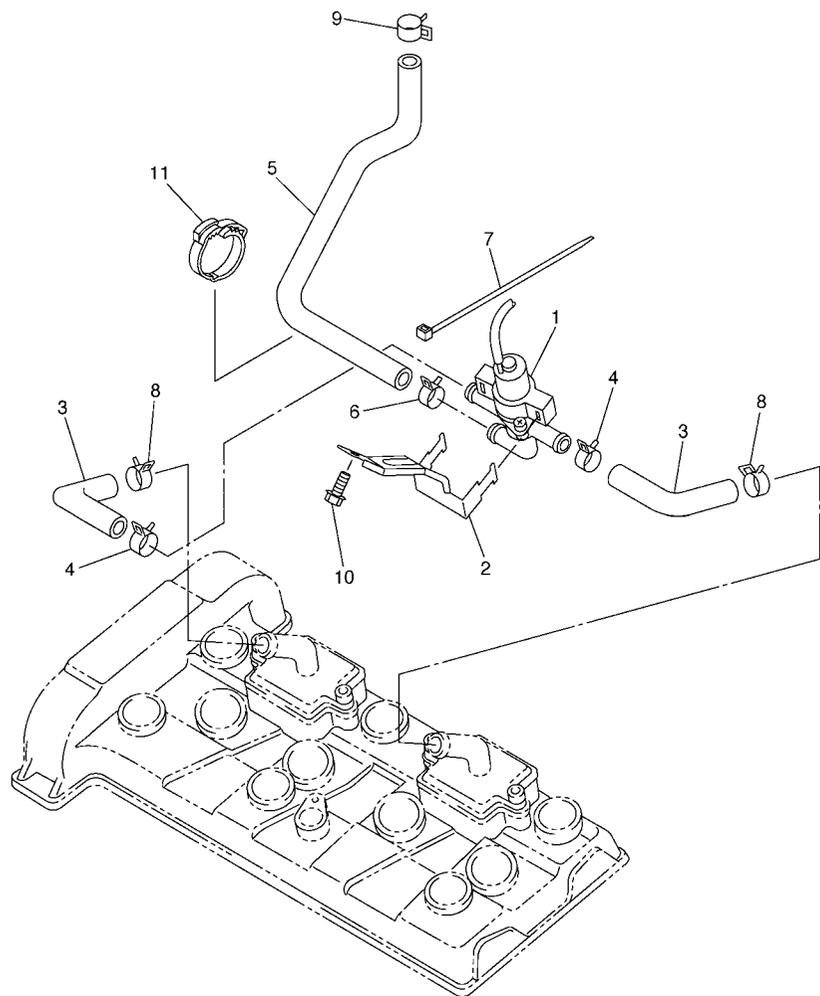

| REF. NO. | PART NO. | DESCRIPTION | 5SLV | 5SLX | | | | REMARKS |
|----------|--------------|---------------------|------|------|--|--|--|---------|
| | | | | | | | | |
| 1 | 5SL-14840-00 | AIR CUT VALVE ASS'Y | 1 | 1 | | | | |
| 2 | 5SL-14834-10 | STAY | 1 | 1 | | | | |
| 3 | 5SL-14881-00 | HOSE, BEND 1 | 2 | 2 | | | | |
| 4 | 90467-18172 | CLIP | 2 | 2 | | | | |
| 5 | 5SL-14882-00 | HOSE, BEND 2 | 1 | 1 | | | | |
| 6 | 90467-18172 | CLIP | 1 | 1 | | | | |
| 7 | 5Y9-12491-00 | CLAMP 1 | 1 | 1 | | | | |
| 8 | 90467-180A0 | CLIP | 2 | 2 | | | | |
| 9 | 90467-17128 | CLIP | 1 | 1 | | | | |
| 10 | 90105-06020 | BOLT, FLANGE | 1 | 1 | | | | |
| 11 | 90464-28003 | CLAMP | 1 | 1 | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |


 5SLM300-D110

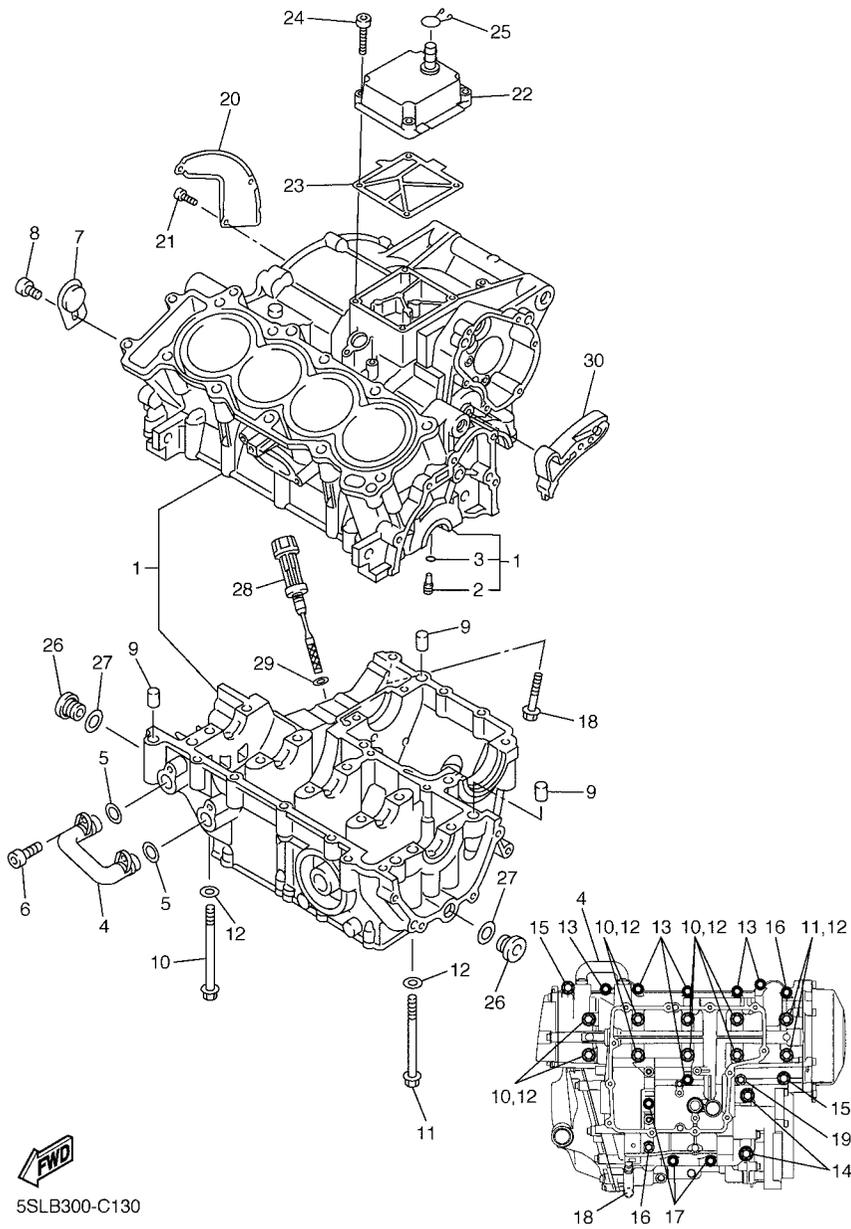

5SLB300-C130

FIG. 13 CRANKCASE


| REF. NO. | PART NO. | DESCRIPTION | 5SLV | 5SLX | REMARKS |
|----------|--------------|---------------------------|------|------|---------|
| 1 | 5SL-15100-01 | CRANKCASE ASSY | 1 | 1 | |
| 2 | 5EB-15155-00 | .NOZZLE 3 | 4 | 4 | |
| 3 | 93210-04092 | .O-RING | 4 | 4 | |
| 4 | 5EB-13418-00 | PIPE, OIL 2 | 1 | 1 | |
| 5 | 93210-14579 | O-RING | 2 | 2 | |
| 6 | 90110-06041 | BOLT, HEXAGON SOCKET HEAD | 2 | 2 | |
| 7 | 5SL-15189-00 | PLUG | 1 | 1 | |
| 8 | 90149-06020 | SCREW | 1 | 1 | |
| 9 | 99530-10014 | PIN, DOWEL | 3 | 3 | |
| 10 | 90105-087A0 | BOLT, FLANGE | 8 | 8 | |
| 11 | 90105-086A9 | BOLT, FLANGE | 2 | 2 | |
| 12 | 90201-087K3 | WASHER, PLATE | 10 | 10 | |
| 13 | 95817-06055 | BOLT, FLANGE | 6 | 6 | |
| 14 | 95817-08065 | BOLT, FLANGE | 2 | 2 | |
| 15 | 90109-065G3 | BOLT | 2 | 2 | |
| 16 | 95817-06065 | BOLT, FLANGE | 2 | 2 | |
| 17 | 95817-06045 | BOLT, FLANGE | 3 | 3 | |
| 18 | 95817-06100 | BOLT, FLANGE | 1 | 1 | |
| 19 | 90105-06006 | BOLT, FLANGE | 1 | 1 | |
| 20 | 5SL-11165-00 | PLATE, BREATHER | 1 | 1 | |
| 21 | 90149-06020 | SCREW | 3 | 3 | |
| 22 | 5VX-15413-01 | COVER | 1 | 1 | |
| 23 | 5SL-15462-00 | GASKET, CRANKCASE COVER 3 | 1 | 1 | |
| 24 | 91314-06025 | BOLT | 4 | 4 | |
| 25 | 90467-14015 | CLIP | 1 | 1 | |
| 26 | 36Y-15189-00 | PLUG | 2 | 2 | |
| 27 | 93210-16325 | O-RING | 2 | 2 | |

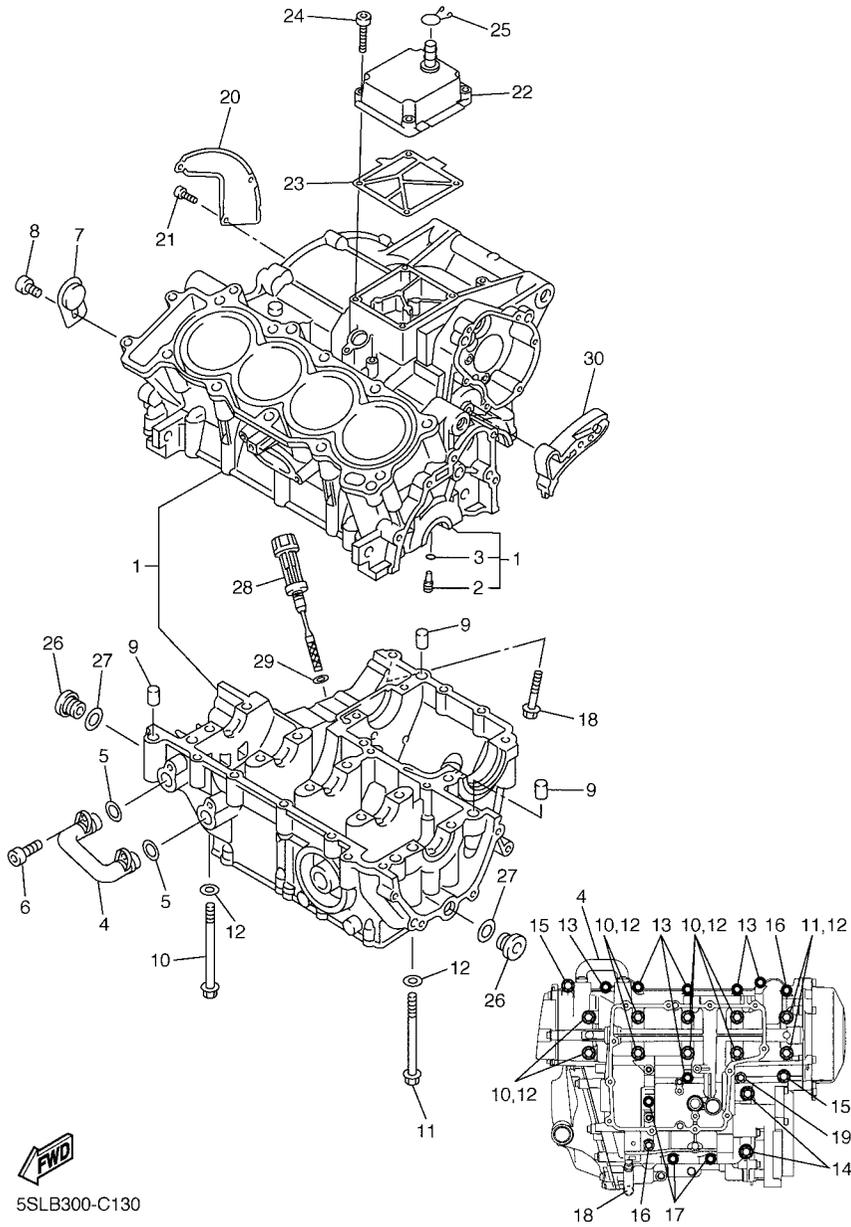

5SLB300-C130

FIG. 13 CRANKCASE

| REF. NO. | PART NO. | DESCRIPTION | 5SLV | 5SLX | | | REMARKS |
|----------|--------------|-----------------|------|------|--|--|---------|
| 28 | 5EB-15362-00 | PLUG, OIL LEVEL | 1 | 1 | | | |
| 29 | 93210-09165 | O-RING | 1 | 1 | | | |
| 30 | 5SL-15377-00 | GUIDE, INLET | 1 | 1 | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |

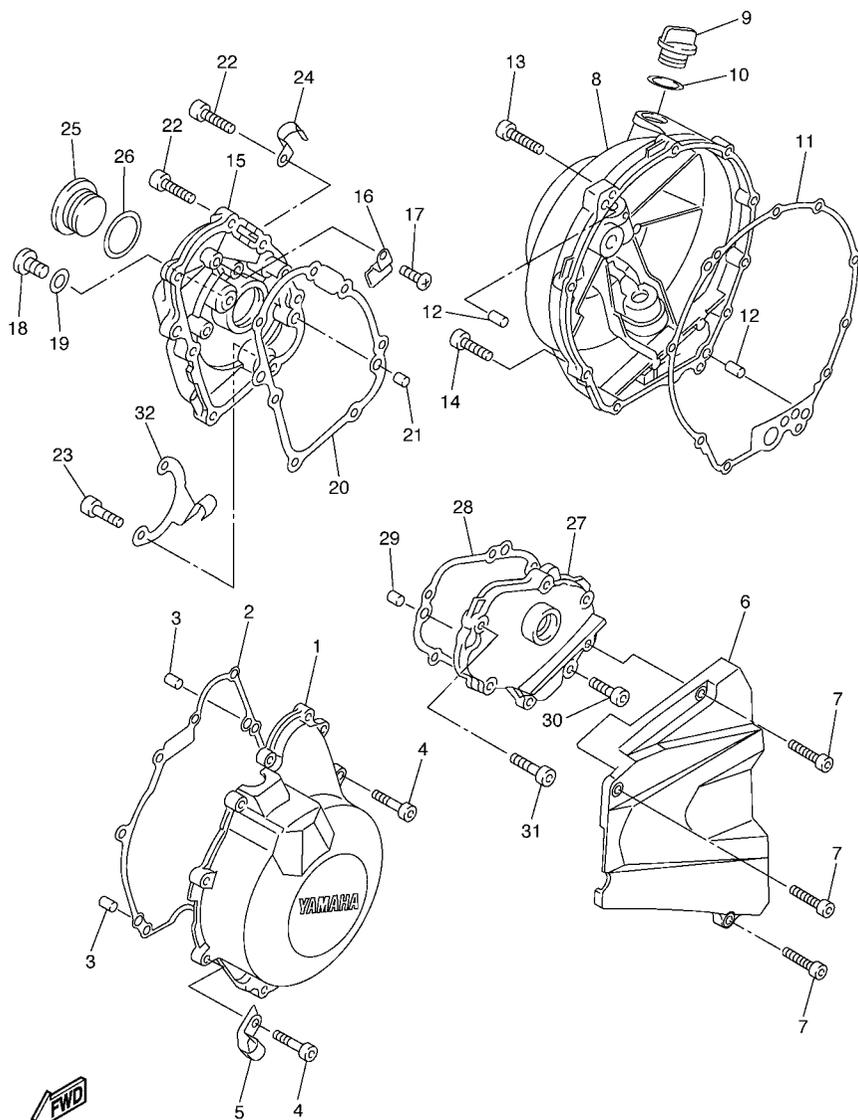


5SL1300-B140

FIG. 14 CRANKCASE COVER 1


| REF. NO. | PART NO. | DESCRIPTION | 5SLV | 5SLX | REMARKS |
|----------|--------------|---------------------------|------|------|---------|
| 1 | 5SL-15411-00 | COVER, CRANKCASE 1 | 1 | 1 | |
| 2 | 5VX-15451-00 | GASKET, CRANKCASE COVER 1 | 1 | 1 | |
| 3 | 99530-08012 | PIN, DOWEL | 2 | 2 | |
| 4 | 91314-06025 | BOLT | 9 | 9 | |
| 5 | 90461-10006 | CLAMP | 1 | 1 | |
| 6 | 5SL-15418-00 | COVER, CHAIN CASE | 1 | 1 | |
| 7 | 91314-06025 | BOLT | 3 | 3 | |
| 8 | 5SL-15421-00 | COVER, CRANKCASE 2 | 1 | 1 | |
| 9 | 3F9-15362-00 | PLUG, OIL LEVEL | 1 | 1 | |
| 10 | 93210-27194 | O-RING | 1 | 1 | |
| 11 | 5SL-15461-00 | GASKET, CRANKCASE COVER 2 | 1 | 1 | |
| 12 | 93608-17263 | PIN, DOWEL | 2 | 2 | |
| 13 | 90109-06031 | BOLT | 9 | 9 | |
| 14 | 90110-06071 | BOLT, HEXAGON SOCKET HEAD | 1 | 1 | |
| 15 | 5SL-15416-00 | COVER, OIL PUMP | 1 | 1 | |
| 16 | 90465-14011 | CLAMP | 1 | 1 | |
| 17 | 90157-06077 | SCREW, PAN HEAD | 1 | 1 | |
| 18 | 92014-08014 | BOLT, BUTTON HEAD | 1 | 1 | |
| 19 | 90430-08143 | GASKET | 1 | 1 | |
| 20 | 5SL-15456-00 | GASKET, OIL PUMP COVER 1 | 1 | 1 | |
| 21 | 99530-08012 | PIN, DOWEL | 2 | 2 | |
| 22 | 90109-06014 | BOLT | 5 | 5 | |
| 23 | 90109-06015 | BOLT | 2 | 2 | |
| 24 | 90465-08395 | CLAMP | 1 | 1 | |
| 25 | 90340-32004 | PLUG, STRAIGHT SCREW | 1 | 1 | |
| 26 | 93210-32172 | O-RING | 1 | 1 | |
| 27 | 5SL-15425-00 | COVER, GENERATOR 2 | 1 | 1 | |

FIG. 15 STARTER

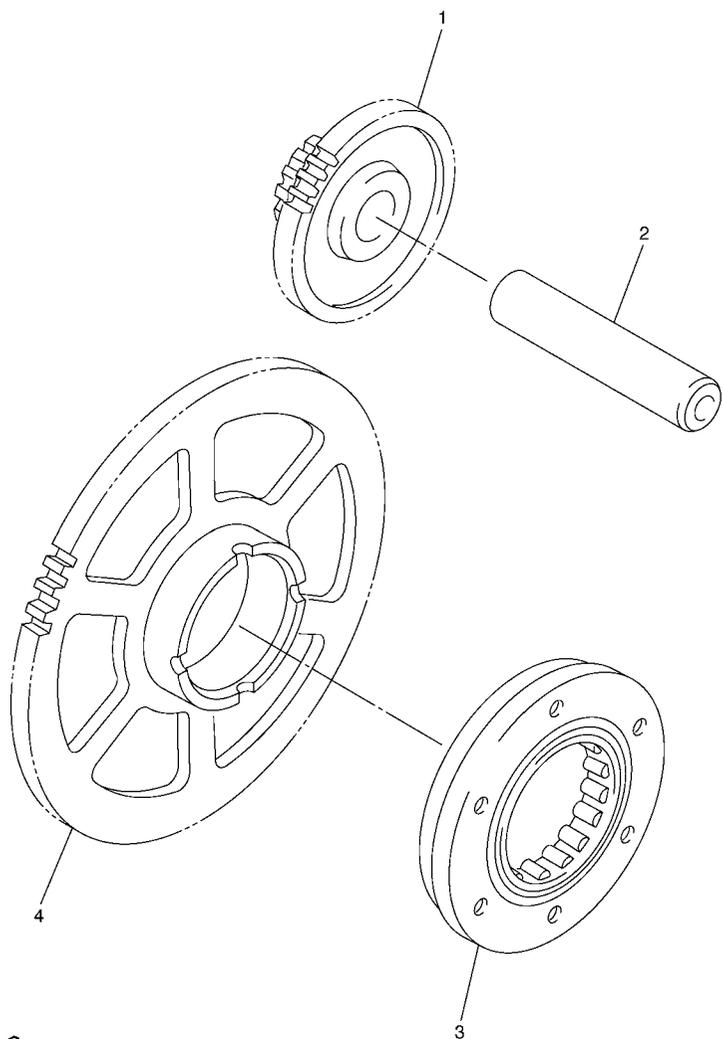

| REF. NO. | PART NO. | DESCRIPTION | 5SLV | 5SLX | | | | REMARKS |
|----------|--------------|----------------------|------|------|--|--|--|---------|
| | | | | | | | | |
| 1 | 5SL-15512-00 | GEAR, IDLER 1 | 1 | 1 | | | | |
| 2 | 5MT-15521-00 | SHAFT 1 | 1 | 1 | | | | |
| 3 | 5SL-15590-00 | STARTER ONE-WAY ASSY | 1 | 1 | | | | |
| 4 | 5MT-15515-00 | GEAR 3 | 1 | 1 | | | | |
| ----- | | | | | | | | |
| ----- | | | | | | | | |
| ----- | | | | | | | | |
| ----- | | | | | | | | |
| ----- | | | | | | | | |
| ----- | | | | | | | | |
| ----- | | | | | | | | |
| ----- | | | | | | | | |



5SL1300-B150

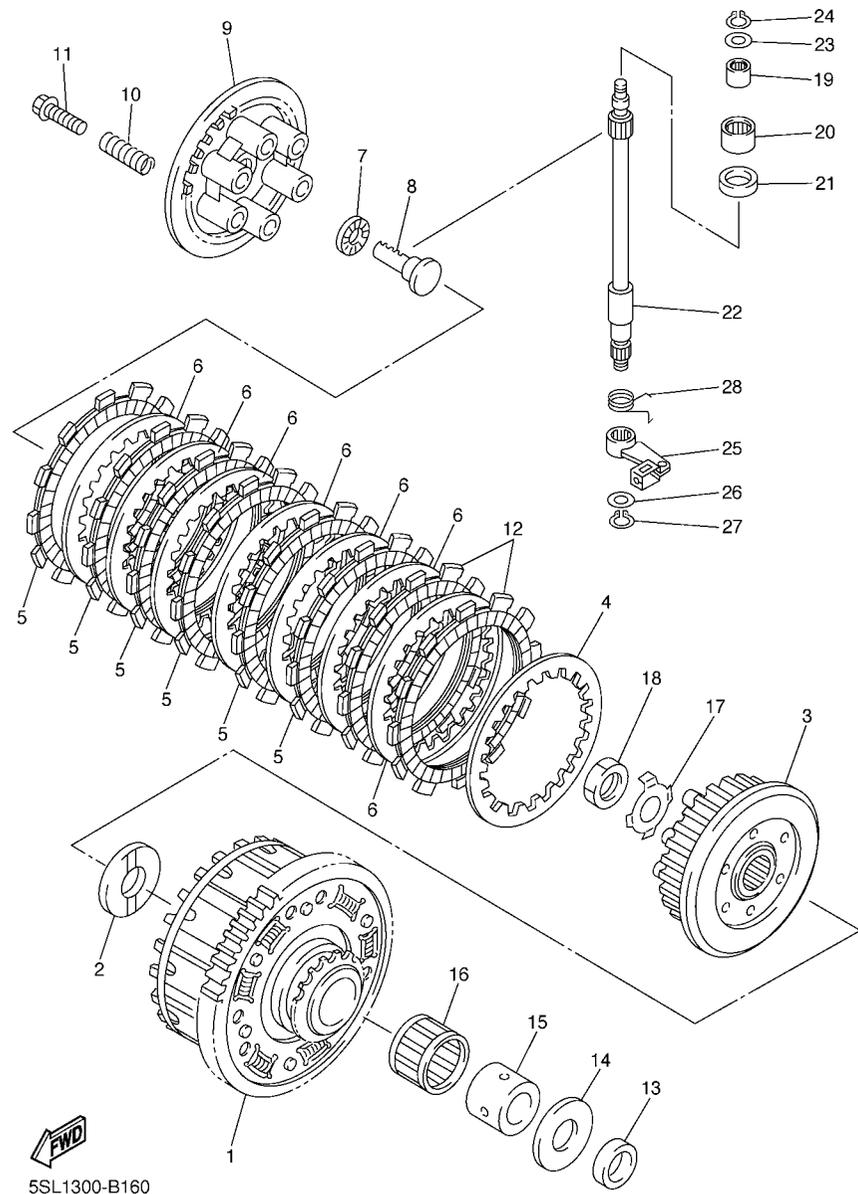

5SL1300-B160

FIG. 16 CLUTCH

| REF. NO. | PART NO. | DESCRIPTION | 5SLV | 5SLX | REMARKS |
|----------|--------------|---------------------------|------|------|---------|
| 1 | 5SL-16150-10 | PRIMARY DRIVEN GEAR COMP. | 1 | 1 | |
| 2 | 5EB-16154-00 | PLATE, THRUST 1 | 1 | 1 | |
| 3 | 5SL-16371-00 | BOSS, CLUTCH | 1 | 1 | |
| 4 | 168-16324-00 | PLATE, CLUTCH 1 (T=2.3) | 1 | 1 | |
| 5 | 4FN-16321-00 | PLATE, FRICTION | 6 | 6 | |
| 6 | 3J2-16324-00 | PLATE, CLUTCH 1 (T=2.0) | 7 | 7 | |
| 7 | 93306-00304 | BEARING | 1 | 1 | |
| 8 | 5EB-16356-01 | ROD, PUSH 1 | 1 | 1 | |
| 9 | 5EB-16351-01 | PLATE, PRESSURE 1 | 1 | 1 | |
| 10 | 90501-237L0 | SPRING, COMPRESSION | 6 | 6 | |
| 11 | 90159-06002 | SCREW, WITH WASHER | 6 | 6 | |
| 12 | 5SL-16321-00 | PLATE, FRICTION | 2 | 2 | |
| 13 | 90201-255A6 | WASHER, PLATE | 1 | 1 | |
| 14 | 1AE-16164-00 | PLATE, THRUST 2 | 1 | 1 | |
| 15 | 90560-25270 | SPACER | 1 | 1 | |
| 16 | 93310-340N8 | BEARING | 1 | 1 | |
| 17 | 90215-20004 | WASHER, LOCK | 1 | 1 | |
| 18 | 90170-20008 | NUT | 1 | 1 | |
| 19 | 93317-11020 | BEARING | 1 | 1 | |
| 20 | 93315-31502 | BEARING | 1 | 1 | |
| 21 | 93102-15212 | OIL SEAL | 1 | 1 | |
| 22 | 5EB-16382-00 | AXLE, PUSH LEVER | 1 | 1 | |
| 23 | 92907-08600 | WASHER, PLATE | 1 | 1 | |
| 24 | 99001-07600 | CIRCLIP | 1 | 1 | |
| 25 | 5SL-16340-00 | PUSH LEVER ASSY | 1 | 1 | |
| 26 | 90201-10614 | WASHER, PLATE | 1 | 1 | |
| 27 | 99001-09600 | CIRCLIP | 1 | 1 | |

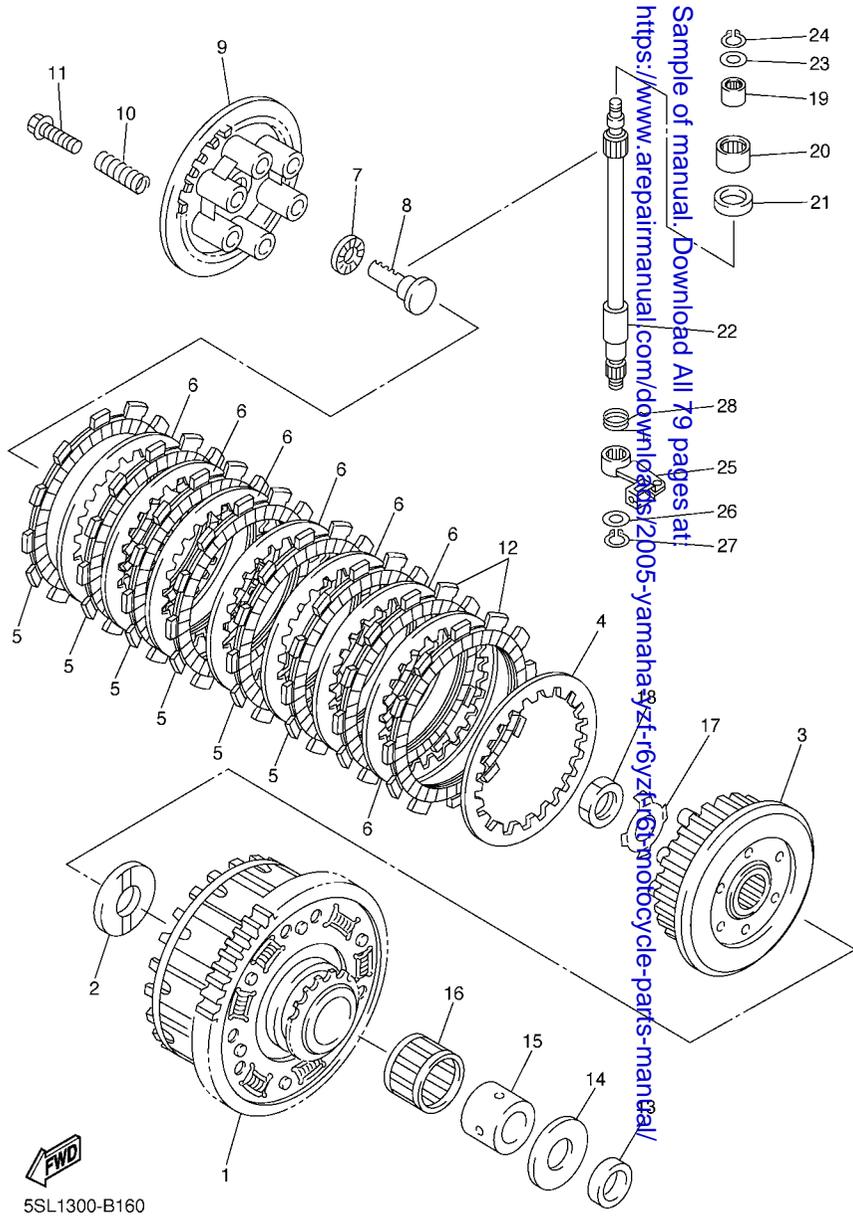

5SL1300-B160

C10

FIG. 16 CLUTCH

| REF. NO. | PART NO. | DESCRIPTION | SSLV / | SSLV | REMARKS |
|----------|-------------|-----------------|--------|------|---------|
| 28 | 90508-165B1 | SPRING, TORSION | 1 | 1 | |
| ----- | | | | | |
| ----- | | | | | |
| ----- | | | | | |
| ----- | | | | | |
| ----- | | | | | |
| ----- | | | | | |
| ----- | | | | | |
| ----- | | | | | |
| ----- | | | | | |
| ----- | | | | | |

Product: 2005 Yamaha YZF-R6/YZF-R6T Motorcycle Parts Manual
 Full Download: <https://www.arepairmanual.com/downloads/2005-yamaha-yzf-r6/yzf-r6-motorcycle-parts-manual/>