



NEW HOLLAND

Product: New Holland MH2.6, MH3.6 Midi Wheel Excavator Service Repair Workshop Manual
Full Download: <https://www.arespairmanual.com/downloads/new-holland-mh2-6mh3-6-midi-wheel-excavator-service-repair-workshop-manual/>

MH2.6 MH3.6

Repair Manual

Sample of manual. Download All 915 pages at:
<https://www.arespairmanual.com/downloads/new-holland-mh2-6mh3-6-midi-wheel-excavator-service-repair-workshop-manual/>

NEW HOLLAND

Repair
Manual

Print No. 87730662A *Tier III*
English

MH2.6 MH3.6

 **NEW HOLLAND**

PROVEN PERFORMANCE

Product: New Holland MH2.6,MH3.6 Midi Wheel Excavator Service Repair Workshop Manual

Full Download: <https://www.arepairmanual.com/downloads/new-holland-mh2-6mh3>

[-6-midi-wheel-excavator-service-repair-workshop-manual/](https://www.arepairmanual.com/downloads/new-holland-mh2-6mh3-6-midi-wheel-excavator-service-repair-workshop-manual/)

TO READER

This manual has been printed for a skilful engineer to supply necessary technical information to carry out service operations on this machine.

Read carefully this manual to collect correct information relevant to repair procedures.

For any question or remark, or in case of any error relevant the contents of this manual, please contact:

NEW HOLLAND

Strada di Settimo, 323
San Mauro Torinese (TO)
10099 - Italy
PRODUCT SUPPORT
Fax ++39 011 0077357

REFERENCES

Beyond this Repair Manual, also refer to documents hereunder listed:

- Operator's Manual
- Parts Catalogue

COMPLETE REPAIR MANUAL

The complete Repair Manual consists of two volumes:

- MH2.6 - MH3.6
Repair Manual "Wheel Excavators"
- MH2.6 - MH3.6
Repair Manual "Engine"

The Repair Manuals for "Wheel Excavators" and "Engine" contain the necessary technical information to carry out service and repair on machine and on engine, necessary tools to carry out those operations and information on service standard, on procedures for connection, disconnection, disassembly and assembly of parts.

The Repair Manual which covers the models MH2.6 - MH3.6 consists of the following volumes, which can be identified through their print number as stated below:

VOLUME	MACHINE TYPE	PRINT NUMBER
Repair Manual "Wheel Excavators"	MH2.6 - MH3.6	87730662A
Repair Manual - "Engine"	MH2.6 - MH3.6	87659057A

Sample of manual. Download All 915 pages at:

<https://www.arepairmanual.com/downloads/new-holland-mh2-6mh3-6-midi-wheel-excavator-service-repair-workshop-manual/>

TO PREVENT ACCIDENTS

The majority of accidents and injuries which occur in industry, at home or on the road, are caused by the failure of some individual to follow simple and fundamental safety rules or precautions. For this reason **MOST ACCIDENTS CAN BE PREVENTED** by recognizing the real cause and taking the necessary precautions, before the accident occurs.

Regardless of the care used in design and construction of any type of equipment, there may be conditions that cannot be completely safeguarded against, without interfering with reasonable accessibility and efficient operation.

A careful operator and/or technician is the best insurance against accidents. The complete observance of one simple rule would prevent many thousands of serious injuries each year.

This rule is: never attempt to clean, lubricate or adjust a machine while it is in motion.

▲ WARNING

Before carrying out any maintenance operation, adjustment and or repair on machines equipped with attachments, controlled hydraulically or mechanically, make sure that the attachment is lowered and safely set on the ground. If it is necessary to have the equipment partially or fully raised to gain access to certain items, be sure the equipment is suitably supported by means other than the hydraulic lift cylinders, cable and /or mechanical device used for controlling the equipment.

CNH S.p.A.

Viale delle Nazioni, 55
41100 MODENA - Italy

All rights reserved.

Reproduction of text or illustrations, in whole or in part, is strictly prohibited.

SAFETY INSTRUCTION



This warning symbol points out important messages involving your safety.

Carefully read the safety rules contained herein and follow advised precautions to avoid potential hazards and to safeguard your safety and personal integrity.

In this manual you will find this symbol together with the following key-words:

WARNING

This symbol warns about the possibility of potential damages to the machine that can involve the operator's safety.

DANGER

With specific warnings about potential dangers for the operator's or other persons integrity directly or indirectly involved.

 
The non compliance with the warning preceded by the above mentioned key-words (**WARNING** and **DANGER**) can cause serious accidents or even the death of the persons involved.

Moreover in the present Manual have been given some instructions preceded by the words **NOTE** and **CAUTION**:

NOTE: it emphasizes and underlines to the operator the correct technique or correct procedure to follow.

CAUTION

It warns the operator of a possible hazard of machine damage in case he does not follow a determined procedure.



SECTION 01 - MAIN OPERATING RULES

1. INTRODUCTION	1
1.1 FOREWORD	1
1.2 MANUAL HANDLING	1

SECTION 02 - SAFETY PRECAUTIONS

1. SAFETY PRECAUTIONS	1
2. SAFETY DECALS	41

SECTION 03 - FEATURES AND DATA

1. FOREWORD	1
2. IDENTIFICATION DATA	2
3. NOISE LEVELS (2000/14/EC)	3
4. SUMMARY PLATE FOR MAINTENANCE OPERATIONS	5
5. WHEELED EXCAVATOR MAIN COMPONENTS	6
5.1 TECHNICAL SPECIFICATIONS	7
5.2 OPERATING WEIGHTS	17
5.3 DIGGING PERFORMANCE	18
5.4 TRANSPORT DIMENSIONS	20
5.5 BUCKET USEFULNESS DEPENDING ON ARM	24
6. FILLING CHART	26

SECTION 04 - UPPER STRUCTURE

1. UPPER STRUCTURE	1
2. MAIN FRAME AND COUNTERWEIGHT	5
3. POWER UNIT	9
3.1 ENGINE	10
4. RADIATOR	12
5. HYDRAULIC PUMPS	14
5.1 MAIN PUMP	15
5.2 DOUBLE PUMP WITH GEARS	49
6. AIR CLEANER	61
7. EXHAUST SILENCER	62
8. HYDRAULIC OIL TANK	64
9. FUEL TANK	66
10. FUEL TRANSFER PUMP	67
11. GUARDS AND COVERS	70
12. CAB	76
13. SWINGING ASSY	88
14. MAIN CONTROL VALVE	100
15. SLEW DEVICE	124
15.1 SLEW HYDRAULIC MOTOR	126
15.2 SLEW REDUCTION UNIT	140
16. CONTROL LEVER	159
17. CONTROL PEDAL	164

18. STEERING UNIT	166
19. SWIVEL JOINT	191
19.1 FEATURES AND DATA.....	193
20. BRAKE PEDAL VALVE	194
21. ACCUMULATORS	208
22. PRESSURE SWITCHES	211
23. SOLENOID VALVES	215

SECTION 05 - UNDERCARRIAGE

1. SLEWING BEARING	2
2. LOWER FRAME	5
3. TRAVEL ASSY	6
3.1 TRAVEL HYDRAULIC MOTOR.....	7
3.2 SPEEDS GEAR BOX.....	23
3.3 STEERING AXLES: FRONT AND REAR	52
3.4 RIGID REAR AXLE.....	150
3.5 DRIVE SHAFT	213
4. WHEELS AND TYRES	214
4.1 TYRES.....	222
5. BLADE	227
6. LATERAL STABILIZERS	228

SECTION 06 - FRONT ATTACHMENT

1. INTRODUCTION	1
2. CYLINDER REMOVAL AND INSTALLATION	6
2.1 BUCKET CYLINDER	6
2.2 ARM CYLINDER.....	10
2.3 POSITIONING CYLINDER	14
2.4 BOOM CYLINDER.....	19
3. MH2.6 - CYLINDERS.....	24
3.1 BUCKET CYLINDER	24
3.2 ARM CYLINDER.....	31
3.3 POSITIONING CYLINDER	38
3.4 BOOM CYLINDER.....	45
4. MH3.6 - CYLINDERS.....	52
4.1 BUCKET CYLINDER	52
4.2 ARM CYLINDER.....	59
4.3 POSITIONING CYLINDER	66
4.4 BOOM CYLINDER.....	73
5. ANTIDROP VALVE.....	81
6. PINS AND BUSHINGS	83
7. BUCKETS	88

SECTION 07 - HYDRAULIC SYSTEM

1. HOSES AND FITTINGS	1
2. HYDRAULIC SYSTEM	8
2.1 MAIN PIPELINES	8

2.2	SUCTION AND DELIVERY PIPELINES.....	9
2.3	RETURN PIPELINES	11
2.4	DRAINING PIPELINES.....	13
2.5	FRONT ATTACHMENT PIPELINES	17
2.6	NIBBLER/BREAKER CONTROL PIPELINES.....	18
2.7	SLEW CONTROL PIPELINES - TRAVEL AND BLADE/STABILIZERS.....	23
2.8	STEERING PIPELINES (MACHINE 4WD).....	25
2.9	STEERING PIPELINES (MACHINE 2WD).....	28
2.10	BRAKE PIPELINES.....	31
2.11	POWER STEERING PIPELINES	35
2.12	LATERAL STABILIZERS AND BLADE CONTROL PIPELINE.....	40
2.13	LOCK VALVES.....	44
2.14	STABILIZERS/BLADE SELECTION VALVE.....	45
2.15	FRONT AXLE LOCK	46
2.16	AXLE LOCK VALVE	48
2.17	PRESSURE RELIEF VALVE.....	48
3.	OPERATION OF CIRCUITS.....	50

SECTION 08 - ELECTRICAL SYSTEM

1.	SAFETY PRECAUTIONS.....	1
2.	FEATURES AND DATA	2
3.	COMPONENTS LOCATION AND OPERATION.....	3
4.	UNDERCARRIAGE ELECTRIC COMPONENTS.....	6
4.1	MACHINE WITH FOUR STEERING WHEELS	6
4.2	MACHINE WITH TWO STEERING WHEELS.....	7
5.	CONTROL UNITS ELECTRIC SYSTEM.....	7
6.	LIGHT AND BEAMS GROUP	8
7.	GAUGES AND CONTROLS.....	9
7.1	DASHBOARDS.....	9
7.2	CONTROL LEVERS.....	11
7.3	SWITCHES AND CONTROL LIGHTS PANEL.....	12
7.4	SWITCHES AND WARNING LAMPS.....	13
7.5	MONITOR PANEL	14
7.6	KEY START SWITCH.....	26
7.7	LEFT CONTROL LEVER.....	27
7.8	RIGHT-HAND CONTROL LEVER.....	28
7.9	CONTROL PANEL AND SWITCHES.....	29
7.10	MACHINE CONTROL CARD	32
7.11	PUMP CONTROL CARD.....	34
8.	ELECTRIC COMPONENTS	36
8.1	THROTTLE LEVER CONTROL	36
8.2	SWIVEL JOINT.....	37
8.3	BATTERIES.....	38
8.4	GENERATOR.....	39
8.5	STARTER.....	40
9.	CONTROL LINE AND WIRING HARNESSSES	41
9.1	CONTROLS ON CONSOLES	41
9.2	CONTROLS FOR SIDE PANEL SWITCHES.....	49
9.3	ANTI-TILTING CHECK CONTROL LINE	51

9.4	WORKING LIGHTS CONTROL LINE.....	52
9.5	TRAFFIC BEAMS CONTROL LINE.....	53
9.6	STEERING COLUMN CONTROLS.....	58

SECTION 09 - TROUBLESHOOTING

1.	INTRODUCTION.....	1
2.	HYDRAULIC SYSTEM TROUBLESHOOTING.....	3
3.	ELECTRICAL SYSTEM TROUBLESHOOTING.....	28

SECTION 10 - PERFORMANCE TEST

1.	INTRODUCTION.....	1
1.1	GENERAL INFORMATION FOR MACHINE TESTING.....	1
2.	STANDARD PERFORMANCES - MH2.6.....	3
2.1	TABLE OF EXCAVATOR STANDARD PERFORMANCES.....	3
2.2	HYDRAULIC COMPONENTS STANDARD PERFORMANCE.....	5
2.3	MAIN PUMP P-Q CURVE.....	6
3.	STANDARD PERFORMANCES - MH3.6.....	7
3.1	TABLE OF EXCAVATOR STANDARD PERFORMANCES.....	7
3.2	HYDRAULIC COMPONENTS STANDARD PERFORMANCE.....	9
3.3	MAIN PUMP P-Q CURVE.....	10
4.	PREPARATION FOR PERFORMANCE TEST.....	11
5.	EXCAVATOR PERFORMANCE TEST.....	13
5.1	ENGINE PERFORMANCE.....	13
5.2	SWING PERFORMANCE.....	14
5.3	FRONT ATTACHMENT PERFORMANCE.....	18
5.4	CONTROL LEVERS.....	21
6.	BOOM/SLEW PERFORMANCE.....	22
6.1	COMBINED SLEW/BOOM TEST.....	22
6.2	STEERING.....	23
6.3	BRAKES SYSTEM.....	24
7.	GEAR BOX.....	27
7.1	GEAR BOX PRESSURE CHECK.....	27
8.	COMPONENTS PERFORMANCE.....	28
8.1	OVERPRESSURE VALVE AND PILOT CONTROL LINE.....	28
8.2	OVERPRESSURE RELIEF VALVES.....	30
8.3	DRIVE SHAFT.....	33
8.4	HYDRAULIC PUMPS - MH2.6.....	35
8.5	HYDRAULIC PUMPS - MH3.6.....	37
8.6	TRAVEL MOTOR.....	39

SECTION 01 - MAIN OPERATING RULES

1. INTRODUCTION	1
1.1 FOREWORD.....	1
1.2 MANUAL HANDLING	1

SECTION 01 - MAIN OPERATING RULES

1. INTRODUCTION

1.1 FOREWORD

This service manual has been prepared in order to increase repair quality, providing to the technicians the elements for a good knowledge of the product and showing the proper procedures to carry out the maintenance operations. We recommend to thoroughly read the content and follow it when necessary.

It is a concise guide. It covers construction features, operation principle, troubleshooting, disassembly and assembly of components and repair action.

Using this manual in systematic and rational way it is possible to reduce the repairing errors and delay that could cause machine stop with a detriment of cost management.

The information quoted in this service manual are supplied also to be used for training aids. Therefore it is advisable to be used in the training of new personnel that will be employed in the machine maintenance.

All the information, illustrations and specifications contained in this service manual are based on the latest product information available at the time of publication.


The Dealer reserves the right to makes changes at any time without notice to this service manual for technical or trading reasons.

1.2 MANUAL HANDLING

Changes and supplements

This service manual is carried out in loose-leaf and therefore can be easily kept up-to-date.

The personnel in charge is responsible for updating the manual and will insert the changes or supplements that the Dealer will issue to its service organisation.

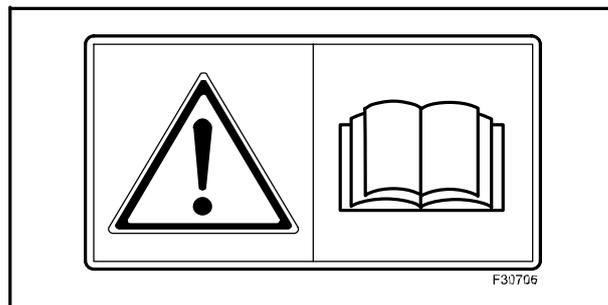

Carefully read the safety rules contained herein and follow advised precautions to avoid potential hazards and to safeguard your safety and personal integrity.

In this manual you will find the following indications:

⚠ WARNING

This symbol warns about the possibility of potential damages to the machine that can involve the operator's safety.

⚠ DANGER

With specific warnings about potential dangers for the operator's or other persons integrity directly or indirectly involved.

The non compliance with the warning preceded by the above mentioned key-words (**WARNING** and **DANGER**) can cause serious accidents or even the death of the persons involved.


Moreover in the present Manual have been given some instructions preceded by the words **NOTE** and **CAUTION**, with following meanings for machine protection:

NOTE: it emphasizes and underlines to the operator the correct technique or correct procedure to follow.

⚠ WARNING

It warns the operator of a possible hazard of machine damage in case he does not follow a determined procedure.

Your safety and that of people around you depends on you. It is essential that you understand this manual for the correct operation, inspection, lubrication and maintenance of this machine.

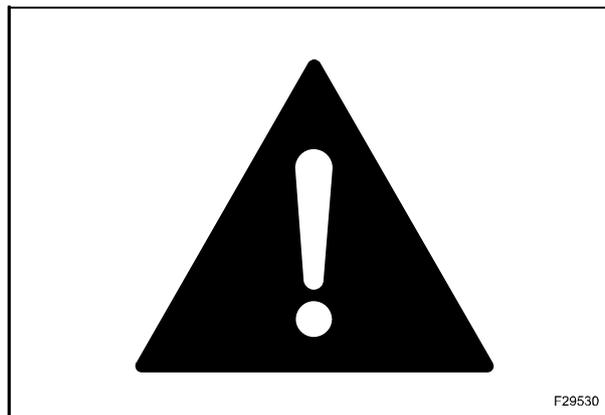

SECTION 02 - SAFETY PRECAUTIONS

1. SAFETY PRECAUTIONS	1
2. SAFETY DECALS.....	41

SECTION 02 - SAFETY PRECAUTIONS

1. SAFETY PRECAUTIONS

GENERAL NOTES

Read the manual carefully before starting, operating, maintaining, fuelling or servicing the machine.

Carefully read the explanation to each and all safety signs in the special section of this manual before starting, operating, maintaining, fuelling or servicing the machine.

Machine-mounted safety plates are colour coded yellow with black borders when they refer to points where special WARNING must be paid and failure to observe them may cause a serious DANGER to the integrity of machine operators.

They are white with red borders and black lettering when they refer to a FORBIDDEN practice.

It is fundamental that all machine operators know very well the meaning of each safety plate as this considerably decreases operating hazards and accidents.

Do not allow unauthorised personnel to operate or service this machine.

Do not wear rings, wrist watches, jewellery, loose or hanging garments, such as ties, torn clothing, scarves, unbuttoned or unzipped jackets that can get caught in moving parts. Wear certified safety clothes such as: hard hat, no-slip footwear, heavy gloves, ear protection, safety glasses, reflector vests, respirators every time the job requires it.

Ask your employer about safety regulations in force and protective equipment.

Always keep the operator's compartment, step plates, grab-rails and handles clean and clear of foreign objects, oil, grease, mud or snow to minimise the danger of slipping or stumbling. Remove mud or grease from your shoes before operating the machine.

Do not jump on or off the machine. Always keep both hands and one foot, or both feet and one hand in contact with steps and/or grab rails.

Do not use controls or hoses as hand holds. Hoses and controls are movable parts and do not provide solid support. Besides, controls may be inadvertently moved and cause unexpected movement of the machine or its attachments.

Never operate the machine or its attachments from any position other than sitting in the driver's seat. Keep head, body, limbs, hands and feet inside the operator's compartment at all times to reduce exposure to external hazards.

Be careful of possible slippery conditions of the steps and hand rails as well as of the ground around the machine. Wear protective boots or shoes with the soles made of highly no-slip rubber.

Do not leave the machine until it has come to a complete stop.

Always check height, width and weight limitations which may be encountered in the working site and ensure the machine does not exceed them.

Assess exact paths of gas ducts, water mains, telephone lines, sewers, overhead and underground electric lines and all other possible obstacles.

Such paths should be opportunely defined by competent Authorities. If necessary, require that the service is interrupted or said installations are moved prior to starting the work.

You must know the working capacity of the machine.

Define the rear upper structure swing area and provide for opportune barriers to prevent access into it.

Never exceed machine lifting capacity.

Remain within the limits shown in the loading capacity chart located on the machine.

START UP

Never start up or set in motion a failed machine. Before getting on, walk around the machine to inspect it. Before operating the machine, make sure that any possible dangerous condition has been properly removed.

Before starting machine, check that steering and attachment controls are in the neutral position and the safety lever is in the LOCK position.

Immediately report any malfunction of parts or systems to the maintenance managers for proper action.

Prior to starting the engine, check, adjust and lock the driver's seat for maximum riding comfort and control accessibility.

Prior to operating the machine and/or its attachments, check that bystanders are outside the machine operating range. Sound horn.

Obey all hand signals, safety indications and signs.

Due to the presence of flammable fluids, never check fuel level, refuel, charge the batteries or use the starting fluid in the presence of smoking materials, open flames or sparks.

Ensure that nobody is within the excavator operating area before starting the machine, swinging the upper structure or moving in any direction.

Adjust all rear-view mirrors for maximum visibility of the area behind the machine.

Ensure that engine speed is appropriate to the job to be carried out.

If any hydraulic control or system exhibits erratic performance or responds abnormally, have the machine checked for air in the system.

Air in these circuits may cause incorrect movements with consequent accident hazard.

Refer to the Operation and Maintenance Instruction Manual about corrective action to be taken.

OPERATION

Do not run the engine of this machine in closed buildings without proper ventilation capable to remove harmful exhaust gases which concentrate in the air.

Keep the driver's seat free from foreign objects, especially if these are not secured. Never use the machine to transport objects, unless proper securing points are provided.

Do not carry riders on the machine.

Study and familiarise with escape routes alternative to normal exit routes.

For your personal safety, do not climb on or off the machine while it is in motion.

Make sure that bystanders are clear of the machine operating range before starting the engine and operating the attachment. Sound horn.

Obey all hand signals, safety indications and signs.

When backing, always look to where the machine is to be moved.

Be alert of the position of bystanders. Should someone enter the work area, stop the machine.

Maintain a safe distance from other machines or obstacles to ensure required visibility conditions.

Always give way to loaded machines.

Maintain a clear vision of the surroundings of the travel or work area at all times.

Keep cab windows clean and repaired.

When pulling loads or towing through a cable or chain, do not start suddenly at full throttle. Take-up slack carefully. Avoid kinking or twisting chains or cables.

Carefully inspect cables or chains for flaws or problems before proceeding.

Do not pull through a kinked chain or cable as the high anomalous stresses existing in this condition may induce failures in the kinked portion. Always wear heavy gloves when handling chains or cables.

Chains and cables should be securely anchored using suitable hooks. Anchor points should be strong enough to withstand the expected load.

Keep anyone clear of anchor points and cables or chains. Do not pull or tow unless the operator's compartments of the machines involved are properly protected against possible backlash in case of cable or chain failure or detachment.

Be alert of soft ground conditions close to newly constructed walls. The fill material and machine weight may cause the wall to collapse under the machine.

In darkness, check area of operation carefully before moving in with the machine. Use all lights provided. Do not move into low visibility areas.

If the engine tends to slow down and stall for whatever reason under load or at idle, immediately report this problem to the maintenance managers for proper action. Do not operate the machine until this condition is corrected.

Regularly check all exhaust system components, as exhaust fumes are toxic for the operator.

Operators must know the performance of the machine they are driving.

When working on slopes or near sudden level drops in the terrain, pay attention not to lose adherence and avoid loose soft ground since overturn or loss of machine control could result.

If noise level is high and exceeds 90 dB(A) over 8 hours at the operator's ear, wear approved ear protection in compliance with local regulations.

Do not operate the machine if you are extremely tired or feel ill.

Be especially careful towards the end of the working shift.

Where removable counterweights are provided, do not operate the machine if they have been removed.

When operating the machine, keep in mind height limits of overhead doors, arches, overhead cables and lines as well as width limits of corridors, roads and narrow passages. Also, get to know load limits of the ground and paving type of the ramps you are to work on.

Beware of fog, smoke or dust that obscure visibility.

Check constantly the work areas to find out the dangerous points. Some examples of dangerous work areas are: inclines, overhangs, trees, demolition rubble, fires, ravines, steep slopes, rough terrain, ditches, crowns, ridge trenches, diggings in traffic areas, crowded parking lots, crowded service areas, fenced zones. In such conditions, proceed with extreme care.

Whenever possible, avoid crossing over obstacles such as very rough terrain, rocks, logs, steps, ditches, railroad tracks. When obstructions must be crossed, do so with extreme care and at a square angle, if possible.

Slow down. Ease up to the break-over point, pass the balance point slowly and ease down the other side also using the attachment, if necessary.

To overcome deep trenches or sinking ground, place the machine perpendicular to the obstacle, drastically reduce ground speed and start crossing using also the attachment if necessary, only after assessing that ground conditions allow the traverse safely and without risks.

The gradient you may attempt to overcome is limited by factors such as ground conditions, load being handled, machine type and speed, and visibility.

There is no substitute for good judgement and experience when working on slopes. Avoid operating the attachment too close to an overhang or high wall, either above or below the machine. Beware of caving edges, falling objects and landslides.

Remember that such hazards are likely to be concealed by bushes, undergrowth and such.

Avoid faggots, bushes, logs and rocks. Never drive over them, nor over any other surface irregularities that discontinue adherence or traction with the ground, especially near slopes or drop-offs.

Be alert to avoid changes in adherence conditions that could cause loss of control. Work with extreme care on ice or frozen ground and on stepped slopes or near drop-offs.

The word "bulldozing" generally refers to work in virgin rough terrain, characterised by the presence of all the perils and risks listed above. We emphasise the danger represented in these conditions by large tree limbs and large roots, which may act as a leverage under the machine when up-rooted and cause their overturn. Position the machine according to the loading and unloading areas in order to slew leftwards to load and to obtain best visibility.

Never use the bucket or attachment to lift persons or carry riders on the machine.

Never use the machine as a work platform or scaffolding. The machine must not be improperly used for works not consistent with its features (such as pushing railway cars, trucks or other machines).

Always pay attention to people within the machine operating range.

Never move or stop the bucket, other loads or the attachment above ground personnel or truck cabs.

Before loading a truck make sure that the driver finds a safe place. Load trucks from side or rear. Use only the type of bucket recommended considering machine type, materials to be handled, material piling up and loading characteristics, ground type and other typical conditions of the work to be performed. When travelling with a loaded bucket, keep it as rolled-back as possible.

Ground speed should be adequate to the load and ground conditions. The load must always be properly arranged in the bucket. Move with extreme care when transporting oversize loads.

Do not lift and move the bucket overhead where persons are standing. When working on slopes avoid travelling with bucket downhill because this could reduce the machine stability. Load the bucket from uphill side. Loads to be raised using the machine should be exclusively hooked to the hitch specially provided.

The excavator is no lifting and transportation means, therefore it should not be used to position loads accurately. Should it be exceptionally used to lift and lay building components, special caution must be taken as follows:

- The machine should necessarily be equipped with the special option supplied by Dealer. Besides, follow carefully safety rules for the excavator used as lifting means.
- Secure the loads to be raised using cables or chains fastened with appropriate hooking mechanisms.
- Nobody should be allowed to remain under the raised load or within the excavator operating range for any reason whatever.

Never exceed specified loading capacity. Incorrect fastening of slings or chains may cause boom/arm failure or failure of the lifting means with consequent bodily injuries and even death.

Always ensure that slings and chains used for lifting are adequate to the load and in good condition.

All loading capacities are referred to the machine on a level surface and should be disregarded when working on a slope.

Avoid travelling across slopes. Proceed from uphill downhill and vice-versa.

If machine starts slipping sideways when on a slope, lower the bucket and thrust bucket teeth into the ground.

Working on slopes is dangerous. Grade the working area if possible. Reduce work cycle time if it is not possible to grade the working area.

Do not move full bucket or a load from uphill downhill as this would reduce machine stability.

Do not work with the bucket turned uphill as counterweights protruding downhill would reduce machine stability on the slope and increase risk of overturning.

We recommend to work on slopes with the bucket downhill, after checking machine stability with the bucket empty and attachment retracted, by slowly swinging the upper structure by 360°.

Position the carriage at a right angle relative to slopes, hanging walls, etc. to exit the working area easily. Be aware when the upper structure is turned by 180°, steering and travel controls are reversed.

Properly judge ground conditions with particular attention to consistency of the area you are going to work on. Keep the machine sufficiently far from the digging border.

Never dig under the machine.

Should it be necessary to dig under the machine, always ensure that digging walls are opportunely propped up against landslide to prevent the machine from falling into the trench.

Do not slew the upper structure, raise the load or brake abruptly if not required. This may cause accidents.

Prior to beginning the work near gas distribution mains or other public utilities:

- Contact the Company Owner of the gas mains or its nearest branch before starting the work. Look up the number in the telephone directory.
-

- Define together which precautions should be taken to guarantee work safety.
- Decrease work speed. Reaction time could be too slow and distance evaluation wrong.
- When working near gas mains or other public utilities installations, appoint a person in charge of signalling duties. This person will have the responsibility of observing the machine, any part of it and/or the load approaching the electric line from a better standpoint with respect to the Operator's position. This signal-man shall directly communicate with the Operator and the Operator must pay special attention to any signals supplied.
- The gas distributing Company, if previously advised and involved in the work, as well as machine Operator, Owner and/or any natural person or legal entity having rent or leased the machine or being responsible at the time by contract or by law, are liable for the adoption of the necessary precautions.

Working near electric lines can be very dangerous, therefore some special precautions must be observed. Within this Manual, "work near electric lines" means when the attachment or load raised by the excavator (in any position) may reach the minimum safety distance established by local or international Safety Regulations.

To work without risks, keep maximum possible distance from electric lines and never trespass minimum safety distance.

Ensure that local or national safety regulations concerning work near electric lines are observed.

Prior to beginning the work near electric lines:

- Contact the Company Owner of the electric lines or its nearest branch before starting the work. Look up the in the telephone directory.
- Define together with the Company representative which precautions should be taken to guarantee work safety.
- All electric lines should be considered as operative live lines even though it might be well known that the line in question is out of work and visibly connected to the ground.

- The Electric Power Company, if previously advised and involved in the work, as well as machine Operator, Owner and/or any natural person or legal entity having rent or leased the machine or being responsible at the time by contract or by law, are liable for the adoption of the necessary precautions.
- Decrease work speed. Reaction time could be too slow and distance evaluation wrong.
- Warn all ground personnel to keep clear of the machine and/or load at all times. If the load has to be guided down for laying, consult the Electric Power Company to know which precautions should be taken.
- Appoint a person in charge to signal instructions. This person will have the responsibility of observing the machine, any part of it and/or the load approaching the electric line from a better standpoint with respect to the Operator's position. This signal-man shall directly communicate with the Operator and the Operator must pay special attention to any signals supplied.

When working in or near pits, in ditches or very high walls, check that the walls are sufficiently propped up to avoid cave-in hazards.

Pay the utmost attention when working near overhang walls or where landslides may take place. Make sure that the support surface is strong enough to prevent landslides.

When digging, there is the risk of cave-ins and landslides.

Always check ground conditions and conditions of the material to be removed. Support everywhere it is required to prevent possible cave-ins or landslides when:

- When digging near recently formed trenches filled with filling materials.
- When digging in bad ground conditions.
- When digging trenches subject to vibration from railroads, working machines or highway traffic.

STOP

When the machine is to be stopped for whatever reason, always check that all controls are in the neutral position and that the safety lever is on the lock position to guarantee risk-free start-up.

Never leave the machine unattended with the engine running.

Before leaving the driver's seat and after ensuring no-one is near the machine, slowly lower the attachment until it rests safely onto the ground. Move possible additional tools in the safe retracted position. Check that all controls are in the neutral position. Move engine controls to the shut-down position. Switch off the key-start switch. Consult the Operation and Maintenance Instruction Manual.

Park the machine in a non-operating and no-traffic area. Park on firm level ground. If this is not possible, position the machine at a right angle to the slope, making sure there is no danger of uncontrolled sliding.

If parking in traffic lanes cannot be avoided, provide prescribed danger signals such as: flags, barriers, flares and other signals. Moreover arrange further danger signals on traffic lane so as to adequately warn the oncoming drivers.

Always switch off the key-start switch before cleaning, repairing or servicing, or parking the machine to prevent accidental unauthorised start-up.

Never lower the attachment or auxiliary tools other than from sitting in the operator's seat. Sound horn. Make sure that nobody is within the machine operating range. Lower the attachment slowly.

Securely block and lock the machine every time you leave it unattended. Return keys to the safe place previously agreed upon.

Perform all necessary operations for stopping as detailed in the Operation and Maintenance Instruction Manual.

Drive the machine far from pits, trenches, rocky hanging walls, areas with overhead electric lines, and slopes before stopping it at the end of the working day.

Align the upper structure to the tracks in order to allow to easily get on and off the driver's compartment.

Move all controls to the position specified for machine stopping. Refer the Operation and Maintenance Instruction Manual.

Never park on an incline without accurately blocking the machine to prevent unexpected movement.

Always follow stopping instructions contained in the Operation and Maintenance Instruction Manual.

MAINTENANCE**General notes**

Carefully read the Operation and Maintenance Instruction Manual before starting, operating, maintaining, fuelling or servicing the machine in any manner.

Read all safety plates mounted on the machine and observe instructions they contain before starting, operating, repairing, fuelling or servicing the machine.

Do not allow unauthorised personnel to operate or service this machine.

Do not carry out any work on the attachment without prior authorisation.

Observe recommended maintenance and repair procedures.

Do not wear rings, wrist watches, jewellery, loose or hanging garments, such as ties, torn clothing, scarves, unbuttoned or unzipped jackets that can get caught in moving parts. Wear certified safety clothes such as: hard hat, no-slip footwear, heavy gloves, ear protection, safety glasses, reflector vests, respirators when required.

Ask your employer about safety regulations in force and protective equipment.

Do not use controls or hoses as hand holds. Hoses and controls are movable parts and do not provide solid support.

Besides, controls may be inadvertently moved and cause unexpected movement of the machine or its attachments. Do not jump on or off the machine. Always keep both hands and one foot, or both feet and one hand in contact with steps and/or grab rails.

Never service the machine with someone sitting in the driver's seat, unless this person is an authorised operator assisting in the maintenance being carried out.

Keep the operator's compartment, step plates, grab rails and handles clear of foreign objects, oil, grease, mud or snow to minimise the danger of slipping or stumbling. Remove mud or grease from your shoes before operating the machine.

Never attempt to operate the machine or its attachments from any position other than sitting in the operator's seat.

Keep the driver's seat free from foreign objects, especially if these are not secured.

Should it be necessary to move the attachment for maintenance purposes, do not raise or lower the attachment from any other position than sitting in the operator's seat. Before starting the machine or moving its attachment, sound the horn and require that nobody remains near the machine.

Raise the attachment slowly.

Always lock all moving components or parts of the machine that must be lifted for maintenance purposes using adequate external means as required by local and national regulations.

Do not allow anyone to pass or stay near or below a raised attachment. If you are not absolutely sure about your safety, do not stay or walk under a raised attachment.

Do not place head, body, limbs, hands, feet or fingers near articulated cutting edges deprived of the necessary guards, unless they are suitably and safely locked.

Never lubricate, repair or adjust the machine with the engine running, except when this is specifically required by the Operation and Maintenance Instruction Manual.

Do not wear loose clothing, jewellery near rotating parts.

When service or maintenance require access to areas that cannot be reached from the ground, use a ladder or step platform conforming to local or national regulations to reach the working area. If such means are not available, use machine grab rails and steps. Always perform all service or maintenance work with the greatest care and attention.

Shop and/or field service platforms or ladders should be manufactured and maintained in accordance with local or national safety regulations in force.

Disconnect batteries and label all controls to warn that service work is in progress, according to local and national safety regulation requirements.

Block the machine and all attachments to be raised according to local and national safety regulation requirements.

Do not check or fill fuel tanks or install batteries near burning or smoking materials and open flames due to the presence of flammable vapours.

The fuel filler pipe nozzle must be constantly kept in contact with the filler neck and this even before fuel starts flowing in. Keep this contact from the beginning to the end of the fuelling operation to avoid possible generation of sparks due to static electricity.

Use a truck or trailer to haul a failed machine. Should it be necessary to tow it, provide for suitable danger signals as required by the local norms and regulations and observe recommendations given in the Operation and Maintenance Instruction Manual. Load/unload the machine on firm level ground providing safe support to the wheels of the truck or trailer.

Use strong access ramps, with adequate height and angle. Keep the trailer flatbed free of mud, oil or slippery materials. Tie the machine securely to the trailer and block carriages and upper structure.

When aligning the pin bores, never insert your finger or hands into the pin bore. Use a suitable tool.

Remove all sharp edges and burrs from re-worked parts.

Use only approved and grounded auxiliary power sources for heaters, battery chargers, pumps and similar equipment to reduce electrical shock hazard.

Lift and handle heavy components using hoisting devices of appropriate capacity. Ensure the parts are supported by appropriate straps and hooks.

Use lifting eyes provided to this aim. Pay attention to bystanders near the lifting area.

Never pour gasoline or diesel fuel into an open container.

Never use gasoline, solvents or other flammable fluids to clean parts. Use only proprietary certified solvents, non-flammable and non-toxic.

When using compressed air to clean parts, wear safety glasses with side shields. Limit pressure to maximum 2 bars (29 psi), in accordance with local and national safety regulations in force.

Do not run the engine of this machine in closed buildings without proper forced ventilation capable to remove toxic exhaust gases concentrating in the air.

Do not smoke, nor allow open flames or sparks nearby while refuelling the unit or handling highly flammable materials.

Do not use open flames as light sources to look for leaks or inspect anywhere on the machine.

Make sure that all mechanical tools provided are in good condition at all times. Never use tools with mushroomed or damaged heads. Always wear eye protections with side shields.

Move with extreme care when working under, on or near the machine or its attachments.

In case of attachment tests during which the engine should be kept running, a qualified operator must sit in the driver's seat at all times while the mechanic is at work. Keep hands and clothes far OFF moving parts.

Stop the engine and move the safety lever to the lock position before starting adjusting or repairing an assembly.

Do not carry out any work on the attachment without prior authorisation. Observe recommended maintenance and repair procedures.

In case of field service, move the machine to level ground and block it. If work on an incline cannot be avoided, securely block the machine and its attachments. Move the machine to level ground as soon as possible.

Do not twist chains and cables. Never use a twisted chain or cable for lifting or pulling. Always wear safety gloves to handle chains or cables.

Be sure chains and cables are firmly fastened and that the anchor point is strong enough to withstand the expected load. Keep all bystanders clear of the anchor point, cables or chains. Do not pull or tow unless the operator's compartments of the machines involved are fitted with proper guards against cable or chain backlash.

Keep the maintenance area clean and dry at all times.

Clean immediately all water and oil spillage.

Do not pile up oily or greasy rags. They represent a major fire hazard. Always store them in closed metal containers.

Before starting the machine or its attachment, check, adjust and lock the operator's seat. Also ensure that nobody is within the machine or attachment operating range before starting or operating the machine and/or its attachments. Sound horn.

Rust inhibitors are volatile and flammable. Prepare parts in well ventilated areas. Keep open flames away. Do not smoke. Store containers in a cool well ventilated place where they could not be reached by unauthorised people.

Do not carry loose objects in your pockets that might fall unnoticed into open compartments.

Wear appropriate safety clothing such as hard hat, safety shoes and gloves, safety glasses when splinters or other particles may be ejected.

Wear the appropriate welder's equipment such as dark safety glasses or mask, hard hat, protective clothing, safety gloves and footwear always while welding or arc-cutting. Wear dark safety glasses when you are near a welding in progress. Do not look the welding arc without proper eye protection.

Become acquainted with all your jacking equipment and their capacity. Ensure that the jacking point on the machine is appropriate for the load applied. Also, be sure the supports under the jack and between the jack and the machine are appropriate and stable. Any equipment supported by a jack represents a possible hazard. Always support the load onto appropriate blocking means as a safety measure before proceeding with service or maintenance work, in compliance with local or national safety regulations.

Metal cables produce steel splinters. Always wear certified protection clothes such as safety gloves and glasses while handling them.

Handle all parts with great care. Keep hands and fingers away from gaps, gears, and similar. Always use and wear certified safety clothes such as safety glasses, gloves and footwear.

The attachment is kept constantly in position by an oil column trapped into the high pressure circuit. Lower the attachment to the ground and relieve pressure from all circuits prior to carrying out any type of maintenance or repair work.

Do not service or repair the machine if it is parked downhill. Consult the Operation and Maintenance Instruction Manual for correct maintenance procedure.

Areas near articulated cutting edges where mechanical parts are in motion are where personal injuries are most likely to occur. Pay attention to prevent possible part movements by means of blocks or by keeping clear of such zones when motion may take place during maintenance or repair.

Move the hydraulic system lock safety lever to the lock position when stopping the machine for whatever reason.

Always install the safety stays for the guard and other hinged covers before performing any maintenance or repair work in the engine compartment.

Transfers and transportation

Before moving or transporting the machine, block upper structure swing to prevent accidental movement.

Pay particular attention during transfer on inclines, both uphill and downhill. Keep the bucket in a position to provide a possible anchor point into the ground in case of slipping.

During transfers on inclines, both uphill and downhill, keep the upper structure aligned with the carriages.

Do not travel across the slope.

Never transfer the machine in the working site, in a crowded area, or near people without having at least one person charged with hand-signals who could guide the Operator.

Sound the horn to inform that you are about to move off.

It is necessary to know load limits of bridges and dimensional limits of tunnels. Such limits must never be exceeded. You should also know machine height, width, and weight. Have a signal-man help you when clearances are limited.

Check distance between boom/arm and dimensional limits during transfer or transportation.

Rough terrain may cause the machine to sway and roll to such an extent that boom/arm could get to contact electric lines or other obstacles. Cross obstacles at a right angle at low speed. Pay attention to machine shaking when the centre of gravity overcomes the obstacle.

Keep the bucket down at all times during transfers.

Drive with the lights on and use appropriate signals and flags.

Get to know and respect local and national regulations.

Consider boom/arm and upper structure dimensions while turning. Use a ramp to load the machine on a trailer. If a ramp is not available, fabricate one using blocks. The ramp should be sufficiently strong to support machine weight. Always load and unload on level surface.

Tow the machine following the instructions contained in the Operation and Maintenance Instruction Manual.

Motor

Do not run the engine in closed buildings without proper ventilation capable to remove harmful exhaust fumes.

Do not place head, body, limbs, feet, hands or fingers near rotating fans or belts. Be especially careful near blower fans.

Loosen the radiator cap very slowly to relieve system pressure before removing it. Always top-up coolant level with the engine off or idling if hot.

See the Operation and Maintenance Instruction Manual.

Keep the exhaust manifold and tube free from combustible matters. Fit the machine with shields and guards when working in the presence of combustible matter free in the air.

Do not refuel with the engine running, especially if hot, as this increases fire hazard in case of fuel spillage.

Never attempt to check or adjust fan belt tensions when the engine is running.

Do not adjust the fuel injection pump when the machine is operating.

Do not lubricate the machine with the engine running.

Do not run the engine with the air intakes open and not protected. If this cannot be avoided for service reasons, place protection meshes on all intakes before servicing the engine.

Electric system

Pay attention to connect connecting cables to correct poles (+ to +) and (- to -) at both ends. Do not short-circuit the terminals. Thoroughly follow instructions given in Operation and Maintenance Instruction Manual.

Always move the key-start switch in the lock position before servicing or repairing the machine.

Batteries contain SULFURIC ACID. Protect the eyes when working near the batteries against possible sprays of the acid solution. Should acid contact skin, eyes, or clothes, RINSE IMMEDIATELY IN WATER FOR AT LEAST 15 MINUTES. Seek for immediate medical assistance.

Battery released gas is highly flammable. Leave the battery compartment cover open during recharging to improve ventilation. Never check battery charge by placing metal objects across the posts. Keep sparks or open flames away from batteries. Do not smoke near the battery to prevent explosion hazard. Before any maintenance or repair, make sure that there are no fuel or electrolyte leaks from the batteries. If any, correct prior to proceeding with further work.

Do not recharge batteries in confined spaces. Ensure proper ventilation is provided to avoid accidental explosions due to build-up of explosive gas released during charging.

Disconnect batteries before working on the electrical system or carrying out any other type of work.

Hydraulic system

Pressure fluid escaping from a very small hole can be almost invisible and still have sufficient force to penetrate the skin. Always check any suspected pressure leaks using a piece of cardboard or wood. Do not use hands. If injured by escaping fluid, obtain medical attention immediately. If proper medication is not carried out immediately serious infection or reaction may develop.

Stop the engine and ensure pressure is relieved from all systems before removing side panels, housings, guards and covers. See the Operation and Maintenance Instruction Manual.

Always use gauges of adequate capacity for pressure testing. Refer to the Operation and Maintenance Instruction Manual or Repair Manual.

Attachments

Always keep head, body, limbs, feet, hands, and fingers away from the bucket and attachments, when in the raised position.

Prior to any maintenance or repair work, install all supports necessary to this aim according to local and national safety regulations.

In case the attachment is to be operated for maintenance or repair purposes, do so exclusively while sitting in the driver's seat. Sound the horn before starting the machine or moving the attachment. Require that nobody remain near the machine. Raise the attachment slowly.

Do not use the machine to transport loose objects, unless proper securing devices are provided.

Tyres and wheels

Always check that inflating pressure of tyres corresponds to the prescribed value suggested by Manufacturer and check periodically its integrity.

If the inflating pressure of tyres has to be changed, carry out this operation keeping at a safety distance.

The tyres inflating pressure has always to be checked with no load and in cold conditions. Never use reconditioned discs wheel as eventual weldings, heat treatments or brazings not executed correctly can weaken the wheels and be therefore cause of successive damages or faults.

Do not perform torch cutting or welding operations on rims with tyres installed. The spare tyre should be inflated only as far as needed to hold the ring parts together: remember that when not installed on

the disc, a tyre inflated to maximum pressure can explode.

When working on tyres, lock previously all wheels front and back ones. After lifting machine with hydraulic jack, prevent its falling down inserting supports according to the safety regulations in force.

Deflate the tyres before removing them.

Before extracting possible foreign bodies jammed in the tread, it is necessary to deflate tyres.

Do not inflate tyres with flammable gas: they may cause explosions and serious personal injuries.

At the end of work shifts check for loose screws and/or rims mounting brackets, if necessary carry out their tightening according to the instruction given in this issue.

RECOGNISE SAFETY INFORMATION


This is your SAFETY ALERT SYMBOL.

When you see this symbol on your machine or in this Manual, be alert of the potential for personal injury.

Follow recommended precautions and safe operating practices.

**ENVIRONMENTAL PROTECTION**

This Manual also contains this symbol accompanying instructions for correct behaviour as regards environmental protection.

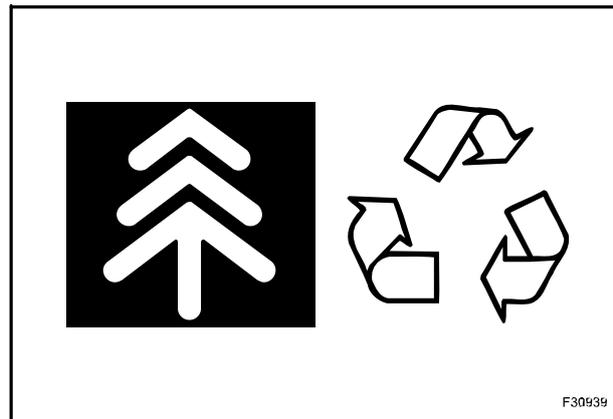

FOLLOW SAFETY INSTRUCTION

Carefully read and follow all safety signs on the machine and all safety messages in this manual.

Safety signs should be installed maintained and replaced when necessary.

If a safety sign or this manual is damaged or missing, order a replacement from your dealer in the same way you order other replacement parts (be sure to state machine model and serial number when ordering).


Learn how to operate the machine and its controls correctly and safely.

Allow only trained, qualified, authorized personnel to operate the machine.

Keep your machine in proper working condition.

Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

The safety messages in this SAFETY PRECAUTIONS chapter are intended to illustrate basic safety procedures of hydraulic excavators. However it is impossible for these safety messages to cover every hazardous situation you may encounter. If you have any questions, you should first consult your supervisor before operating and servicing the machine.

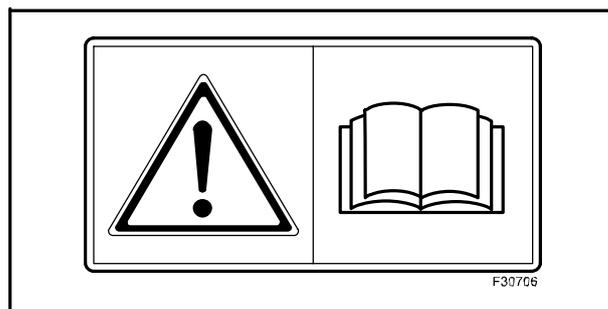

PREPARE FOR EMERGENCIES


Be prepared if a fire starts or an accident occurs.

Keep the first-aid kit and fire extinguisher on hand.

Thoroughly read and understand the label attached to the fire extinguisher to use it properly.

Establish emergency priority procedures to cope with fires and accidents.

Keep emergency numbers for doctors, ambulance service, hospitals and fire department posted near the telephone.

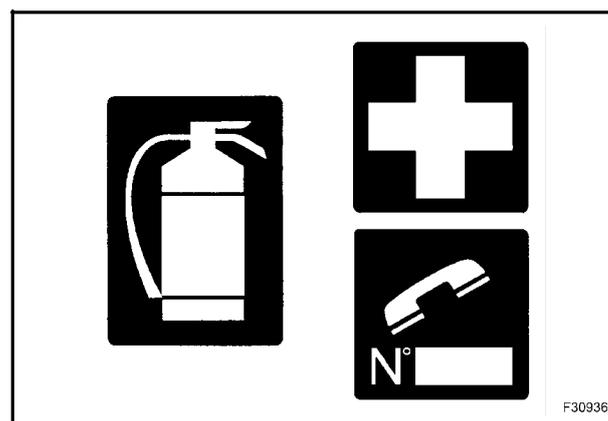

WEAR PROTECTIVE CLOTHING

Wear tight clothing and safety equipment suitable for the job to carry out.


It is necessary to dispose of:

- hard hat,
- safety shoes;
- safety glasses, goggles, or face shield;
- heavy gloves;
- hearing protection;
- reflective clothing;
- water-proof clothing;
- respirator or filter mask.

Make sure to wear clothing and safety equipment suitable for the job to carry out:

- do not leave anything to the case;
- avoid wearing loose clothing, jewelry, or other items that can catch on control levers or other parts of the machine.


To operate the machine in full safety, the operator should be completely careful. Do not wear radio or music headphones while operating machine. Wear close fitting clothing and safety equipment appropriate for the job.

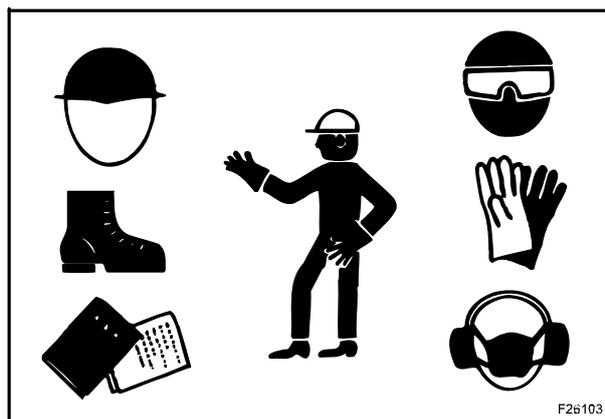

PROTECT AGAINST NOISE

Prolonged exposure to loud noise can cause impairment or loss of hearing.


Wear a suitable hearing protective device such as earmuffs or earplugs to protect against constant or uncomfortably loud noise.

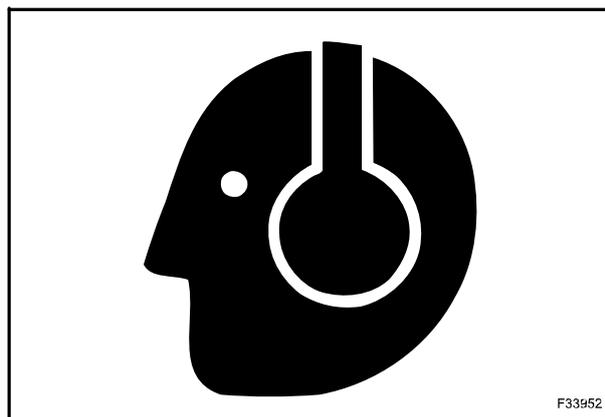

INSPECT THE MACHINE

Inspect the machine carefully every day or work-shift by an attentive visual inspection of machine outside prior to starting it to prevent damages and personal injuries.

In the walk-around inspection, be sure to cover all points detailed in the Chapter MAINTENANCE, paragraph EXTERNAL VISUAL INSPECTION.

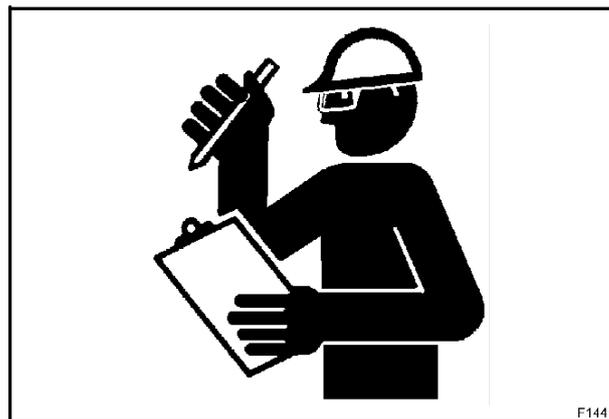

USE HANDHOLDS AND STEPS

Falling is one of the major causes of personal injury.


When you get on and off the machine, always maintain a three-point contact with the steps and handrails and face the machine.

Do not use any controls as hand-holds.

Never jump on or off the machine.

Never mount or dismount a moving machine.

Be careful of slippery conditions on platforms, steps, and handrails when leaving the machine.

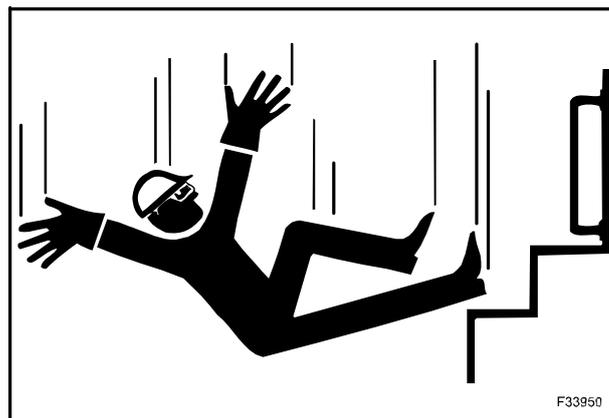

ADJUST THE SEAT

A seat poorly adjusted for operator or work requirements may quickly fatigue the operator leading to improper operations:

- the seat should be adjusted whenever machine operator changes;
- the operator should be able to fully press the pedals and correctly move the control levers with his back resting against the seat back;
- if not, move the seat fore and aft, and check again.

