
 


TABLE OF CONTENTS		
NUMBER	DESCRIPTION	SHEET NUMBER
1	INDEX	1
2	TABLE OF CONTENTS	2
3	SCHEMATIC LEGEND	3
4	TABLE OF CONTENTS	4
5	COMPONENT TABLE	5
6	COMPONENT TABLE	6
7	COMPONENT AND GROUND LOCATION TABLE	7
8	BLANK SHEET	8
9	BLANK SHEET	9
10	BLANK SHEET	10
11	POWER DISTRIBUTION - FUSES F-001 TO F-010	11
12	POWER DISTRIBUTION - FUSES F-011 TO F-020	12
13	POWER DISTRIBUTION - FUSES F-021 TO F-026	13
14	POWER DISTRIBUTION - FUSES F-027 TO F-036	14
15	POWER DISTRIBUTION - FUSES F-037 TO F-040	15
16	POWER DISTRIBUTION - FUSES F-041 TO F-046	16
17	POWER DISTRIBUTION - FUSES F-047 TO F-052	17
18	POWER DISTRIBUTION - FUSES F-053 TO F-060	18
19	POWER DISTRIBUTION - FUSES F-061 TO F-066	19
20	POWER DISTRIBUTION - FUSES F-067 TO F-070	20
21	POWER DISTRIBUTION - FUSES F-071 TO F-076	21
22	POWER DISTRIBUTION - FUSES F-077 TO F-080	22
23	POWER DISTRIBUTION - FUSES F-081 TO F-086	23
24	POWER DISTRIBUTION - FUSES F-087 TO F-090	24
25	POWER DISTRIBUTION - FUSES F-091 TO F-096	25
26	POWER DISTRIBUTION - FUSES F-097 TO F-100	26
27	POWER DISTRIBUTION - FUSES F-101 TO F-106	27
28	POWER DISTRIBUTION - FUSES F-107 TO F-110	28
29	POWER DISTRIBUTION - FUSES F-111 TO F-116	29
30	POWER DISTRIBUTION - FUSES F-117 TO F-120	30
31	POWER DISTRIBUTION - FUSES F-121 TO F-126	31
32	POWER DISTRIBUTION - FUSES F-127 TO F-130	32
33	POWER DISTRIBUTION - FUSES F-131 TO F-136	33
34	POWER DISTRIBUTION - FUSES F-137 TO F-140	34
35	POWER DISTRIBUTION - FUSES F-141 TO F-146	35
36	POWER DISTRIBUTION - FUSES F-147 TO F-150	36
37	POWER DISTRIBUTION - FUSES F-151 TO F-156	37
38	POWER DISTRIBUTION - FUSES F-157 TO F-160	38
39	POWER DISTRIBUTION - FUSES F-161 TO F-166	39
40	POWER DISTRIBUTION - FUSES F-167 TO F-170	40
41	POWER DISTRIBUTION - FUSES F-171 TO F-176	41
42	POWER DISTRIBUTION - FUSES F-177 TO F-180	42
43	POWER DISTRIBUTION - FUSES F-181 TO F-186	43
44	POWER DISTRIBUTION - FUSES F-187 TO F-190	44
45	POWER DISTRIBUTION - FUSES F-191 TO F-196	45
46	POWER DISTRIBUTION - FUSES F-197 TO F-200	46
47	POWER DISTRIBUTION - FUSES F-201 TO F-206	47
48	POWER DISTRIBUTION - FUSES F-207 TO F-210	48
49	POWER DISTRIBUTION - FUSES F-211 TO F-216	49
50	POWER DISTRIBUTION - FUSES F-217 TO F-220	50
51	POWER DISTRIBUTION - FUSES F-221 TO F-226	51
52	POWER DISTRIBUTION - FUSES F-227 TO F-230	52
53	POWER DISTRIBUTION - FUSES F-231 TO F-236	53
54	POWER DISTRIBUTION - FUSES F-237 TO F-240	54
55	POWER DISTRIBUTION - FUSES F-241 TO F-246	55
56	POWER DISTRIBUTION - FUSES F-247 TO F-250	56
57	POWER DISTRIBUTION - FUSES F-251 TO F-256	57
58	POWER DISTRIBUTION - FUSES F-257 TO F-260	58
59	POWER DISTRIBUTION - FUSES F-261 TO F-266	59
60	POWER DISTRIBUTION - FUSES F-267 TO F-270	60
61	POWER DISTRIBUTION - FUSES F-271 TO F-276	61
62	POWER DISTRIBUTION - FUSES F-277 TO F-280	62
63	POWER DISTRIBUTION - FUSES F-281 TO F-286	63
64	POWER DISTRIBUTION - FUSES F-287 TO F-290	64
65	POWER DISTRIBUTION - FUSES F-291 TO F-296	65
66	POWER DISTRIBUTION - FUSES F-297 TO F-300	66
67	POWER DISTRIBUTION - FUSES F-301 TO F-306	67
68	POWER DISTRIBUTION - FUSES F-307 TO F-310	68
69	POWER DISTRIBUTION - FUSES F-311 TO F-316	69
70	POWER DISTRIBUTION - FUSES F-317 TO F-320	70
71	POWER DISTRIBUTION - FUSES F-321 TO F-326	71
72	POWER DISTRIBUTION - FUSES F-327 TO F-330	72
73	POWER DISTRIBUTION - FUSES F-331 TO F-336	73
74	POWER DISTRIBUTION - FUSES F-337 TO F-340	74
75	POWER DISTRIBUTION - FUSES F-341 TO F-346	75
76	POWER DISTRIBUTION - FUSES F-347 TO F-350	76
77	POWER DISTRIBUTION - FUSES F-351 TO F-356	77
78	POWER DISTRIBUTION - FUSES F-357 TO F-360	78
79	POWER DISTRIBUTION - FUSES F-361 TO F-366	79
80	POWER DISTRIBUTION - FUSES F-367 TO F-370	80
81	POWER DISTRIBUTION - FUSES F-371 TO F-376	81
82	POWER DISTRIBUTION - FUSES F-377 TO F-380	82
83	POWER DISTRIBUTION - FUSES F-381 TO F-386	83
84	POWER DISTRIBUTION - FUSES F-387 TO F-390	84
85	POWER DISTRIBUTION - FUSES F-391 TO F-396	85
86	POWER DISTRIBUTION - FUSES F-397 TO F-400	86
87	POWER DISTRIBUTION - FUSES F-401 TO F-406	87
88	POWER DISTRIBUTION - FUSES F-407 TO F-410	88
89	POWER DISTRIBUTION - FUSES F-411 TO F-416	89
90	POWER DISTRIBUTION - FUSES F-417 TO F-420	90
91	POWER DISTRIBUTION - FUSES F-421 TO F-426	91
92	POWER DISTRIBUTION - FUSES F-427 TO F-430	92
93	POWER DISTRIBUTION - FUSES F-431 TO F-436	93
94	POWER DISTRIBUTION - FUSES F-437 TO F-440	94
95	POWER DISTRIBUTION - FUSES F-441 TO F-446	95
96	POWER DISTRIBUTION - FUSES F-447 TO F-450	96
97	POWER DISTRIBUTION - FUSES F-451 TO F-456	97
98	POWER DISTRIBUTION - FUSES F-457 TO F-460	98
99	POWER DISTRIBUTION - FUSES F-461 TO F-466	99
100	POWER DISTRIBUTION - FUSES F-467 TO F-470	100
101	POWER DISTRIBUTION - FUSES F-471 TO F-476	101
102	POWER DISTRIBUTION - FUSES F-477 TO F-480	102
103	POWER DISTRIBUTION - FUSES F-481 TO F-486	103
104	POWER DISTRIBUTION - FUSES F-487 TO F-490	104
105	POWER DISTRIBUTION - FUSES F-491 TO F-496	105
106	POWER DISTRIBUTION - FUSES F-497 TO F-500	106
107	POWER DISTRIBUTION - FUSES F-501 TO F-506	107
108	POWER DISTRIBUTION - FUSES F-507 TO F-510	108
109	POWER DISTRIBUTION - FUSES F-511 TO F-516	109
110	POWER DISTRIBUTION - FUSES F-517 TO F-520	110
111	POWER DISTRIBUTION - FUSES F-521 TO F-526	111
112	POWER DISTRIBUTION - FUSES F-527 TO F-530	112
113	POWER DISTRIBUTION - FUSES F-531 TO F-536	113
114	POWER DISTRIBUTION - FUSES F-537 TO F-540	114
115	POWER DISTRIBUTION - FUSES F-541 TO F-546	115
116	POWER DISTRIBUTION - FUSES F-547 TO F-550	116
117	POWER DISTRIBUTION - FUSES F-551 TO F-556	117
118	POWER DISTRIBUTION - FUSES F-557 TO F-560	118
119	POWER DISTRIBUTION - FUSES F-561 TO F-566	119
120	POWER DISTRIBUTION - FUSES F-567 TO F-570	120
121	POWER DISTRIBUTION - FUSES F-571 TO F-576	121
122	POWER DISTRIBUTION - FUSES F-577 TO F-580	122
123	POWER DISTRIBUTION - FUSES F-581 TO F-586	123
124	POWER DISTRIBUTION - FUSES F-587 TO F-590	124
125	POWER DISTRIBUTION - FUSES F-591 TO F-596	125
126	POWER DISTRIBUTION - FUSES F-597 TO F-600	126
127	POWER DISTRIBUTION - FUSES F-601 TO F-606	127
128	POWER DISTRIBUTION - FUSES F-607 TO F-610	128
129	POWER DISTRIBUTION - FUSES F-611 TO F-616	129
130	POWER DISTRIBUTION - FUSES F-617 TO F-620	130
131	POWER DISTRIBUTION - FUSES F-621 TO F-626	131
132	POWER DISTRIBUTION - FUSES F-627 TO F-630	132
133	POWER DISTRIBUTION - FUSES F-631 TO F-636	133
134	POWER DISTRIBUTION - FUSES F-637 TO F-640	134
135	POWER DISTRIBUTION - FUSES F-641 TO F-646	135
136	POWER DISTRIBUTION - FUSES F-647 TO F-650	136
137	POWER DISTRIBUTION - FUSES F-651 TO F-656	137
138	POWER DISTRIBUTION - FUSES F-657 TO F-660	138
139	POWER DISTRIBUTION - FUSES F-661 TO F-666	139
140	POWER DISTRIBUTION - FUSES F-667 TO F-670	140
141	POWER DISTRIBUTION - FUSES F-671 TO F-676	141
142	POWER DISTRIBUTION - FUSES F-677 TO F-680	142
143	POWER DISTRIBUTION - FUSES F-681 TO F-686	143
144	POWER DISTRIBUTION - FUSES F-687 TO F-690	144
145	POWER DISTRIBUTION - FUSES F-691 TO F-696	145
146	POWER DISTRIBUTION - FUSES F-697 TO F-700	146
147	POWER DISTRIBUTION - FUSES F-701 TO F-706	147
148	POWER DISTRIBUTION - FUSES F-707 TO F-710	148
149	POWER DISTRIBUTION - FUSES F-711 TO F-716	149
150	POWER DISTRIBUTION - FUSES F-717 TO F-720	150
151	POWER DISTRIBUTION - FUSES F-721 TO F-726	151
152	POWER DISTRIBUTION - FUSES F-727 TO F-730	152
153	POWER DISTRIBUTION - FUSES F-731 TO F-736	153
154	POWER DISTRIBUTION - FUSES F-737 TO F-740	154
155	POWER DISTRIBUTION - FUSES F-741 TO F-746	155
156	POWER DISTRIBUTION - FUSES F-747 TO F-750	156
157	POWER DISTRIBUTION - FUSES F-751 TO F-756	157
158	POWER DISTRIBUTION - FUSES F-757 TO F-760	158
159	POWER DISTRIBUTION - FUSES F-761 TO F-766	159
160	POWER DISTRIBUTION - FUSES F-767 TO F-770	160
161	POWER DISTRIBUTION - FUSES F-771 TO F-776	161
162	POWER DISTRIBUTION - FUSES F-777 TO F-780	162
163	POWER DISTRIBUTION - FUSES F-781 TO F-786	163
164	POWER DISTRIBUTION - FUSES F-787 TO F-790	164
165	POWER DISTRIBUTION - FUSES F-791 TO F-796	165
166	POWER DISTRIBUTION - FUSES F-797 TO F-800	166
167	POWER DISTRIBUTION - FUSES F-801 TO F-806	167
168	POWER DISTRIBUTION - FUSES F-807 TO F-810	168
169	POWER DISTRIBUTION - FUSES F-811 TO F-816	169
170	POWER DISTRIBUTION - FUSES F-817 TO F-820	170
171	POWER DISTRIBUTION - FUSES F-821 TO F-826	171
172	POWER DISTRIBUTION - FUSES F-827 TO F-830	172
173	POWER DISTRIBUTION - FUSES F-831 TO F-836	173
174	POWER DISTRIBUTION - FUSES F-837 TO F-840	174
175	POWER DISTRIBUTION - FUSES F-841 TO F-846	175
176	POWER DISTRIBUTION - FUSES F-847 TO F-850	176
177	POWER DISTRIBUTION - FUSES F-851 TO F-856	177
178	POWER DISTRIBUTION - FUSES F-857 TO F-860	178
179	POWER DISTRIBUTION - FUSES F-861 TO F-866	179
180	POWER DISTRIBUTION - FUSES F-867 TO F-870	180
181	POWER DISTRIBUTION - FUSES F-871 TO F-876	181
182	POWER DISTRIBUTION - FUSES F-877 TO F-880	182
183	POWER DISTRIBUTION - FUSES F-881 TO F-886	183
184	POWER DISTRIBUTION - FUSES F-887 TO F-890	184
185	POWER DISTRIBUTION - FUSES F-891 TO F-896	185
186	POWER DISTRIBUTION - FUSES F-897 TO F-900	186
187	POWER DISTRIBUTION - FUSES F-901 TO F-906	187
188	POWER DISTRIBUTION - FUSES F-907 TO F-910	188
189	POWER DISTRIBUTION - FUSES F-911 TO F-916	189
190	POWER DISTRIBUTION - FUSES F-917 TO F-920	190
191	POWER DISTRIBUTION - FUSES F-921 TO F-926	191
192	POWER DISTRIBUTION - FUSES F-927 TO F-930	192
193	POWER DISTRIBUTION - FUSES F-931 TO F-936	193
194	POWER DISTRIBUTION - FUSES F-937 TO F-940	194
195	POWER DISTRIBUTION - FUSES F-941 TO F-946	195
196	POWER DISTRIBUTION - FUSES F-947 TO F-950	196
197	POWER DISTRIBUTION - FUSES F-951 TO F-956	197
198	POWER DISTRIBUTION - FUSES F-957 TO F-960	198
199	POWER DISTRIBUTION - FUSES F-961 TO F-966	199
200	POWER DISTRIBUTION - FUSES F-967 TO F-970	200
201	POWER DISTRIBUTION - FUSES F-971 TO F-976	201
202	POWER DISTRIBUTION - FUSES F-977 TO F-980	202
203	POWER DISTRIBUTION - FUSES F-981 TO F-986	203
204	POWER DISTRIBUTION - FUSES F-987 TO F-990	204
205	POWER DISTRIBUTION - FUSES F-991 TO F-996	205
206	POWER DISTRIBUTION - FUSES F-997 TO F-1000	206
207	POWER DISTRIBUTION - FUSES F-1001 TO F-1006	207
208	POWER DISTRIBUTION - FUSES F-1007 TO F-1010	208
209	POWER DISTRIBUTION - FUSES F-1011 TO F-1016	209
210	POWER DISTRIBUTION - FUSES F-1017 TO F-1020	210
211	POWER DISTRIBUTION - FUSES F-1021 TO F-1026	211
212	POWER DISTRIBUTION - FUSES F-1027 TO F-1030	212
213	POWER DISTRIBUTION - FUSES F-1031 TO F-1036	213
214	POWER DISTRIBUTION - FUSES F-1037 TO F-1040	214
215	POWER DISTRIBUTION - FUSES F-1041 TO F-1046	215
216	POWER DISTRIBUTION - FUSES F-1047 TO F-1050	216
217	POWER DISTRIBUTION - FUSES F-1051 TO F-1056	217
218	POWER DISTRIBUTION - FUSES F-1057 TO F-1060	218
219	POWER DISTRIBUTION - FUSES F-1061 TO F-1066	219
220	POWER DISTRIBUTION - FUSES F-1067 TO F-1070	220
221	POWER DISTRIBUTION - FUSES F-1071 TO F-1076	221
222	POWER DISTRIBUTION - FUSES F-1077 TO F-1080	222
223	POWER DISTRIBUTION - FUSES F-1081 TO F-1086	223
224	POWER DISTRIBUTION - FUSES F-1087 TO F-1090	224
225	POWER DISTRIBUTION - FUSES F-1091 TO F-1096	225
226	POWER DISTRIBUTION - FUSES F-1097 TO F-1100	226
227	POWER DISTRIBUTION - FUSES F-1101 TO F-1106	227
228	POWER DISTRIBUTION - FUSES F-1107 TO F-1110	228
229	POWER DISTRIBUTION - FUSES F-1111 TO F-1116	229
230	POWER DISTRIBUTION - FUSES F-1117 TO F-1120	230
231	POWER DISTRIBUTION - FUSES F-1121 TO F-1126	231
232	POWER DISTRIBUTION - FUSES F-1127 TO F-1130	232
233	POWER DISTRIBUTION - FUSES F-1131 TO F-1136	233
234	POWER DISTRIBUTION - FUSES F-1137 TO F-1140	234
235	POWER DISTRIBUTION - FUSES F-1141 TO F-1146	235
236	POWER DISTRIBUTION - FUSES F-1147 TO F-1150	236
237	POWER DISTRIBUTION - FUSES F-1151 TO F-1156	237
238	POWER DISTRIBUTION - FUSES F-1157 TO F-1160	238
239	POWER DISTRIBUTION - FUSES F-1161 TO F-1166	239
240	POWER DISTRIBUTION - FUSES F-1167 TO F-1170	240
241	POWER DISTRIBUTION - FUSES F-1171 TO F-1176	241
242	POWER DISTRIBUTION - FUSES F-1177 TO F-1180	242
243	POWER DISTRIBUTION - FUSES F-1181 TO F-1186	243
244	POWER DISTRIBUTION - FUSES F-1187 TO F-1190	244
245	POWER DISTRIBUTION - FUSES F-1191 TO F-1196	245
246	POWER DISTRIBUTION - FUSES F-1197 TO F-1200	246
247	POWER DISTRIBUTION - FUSES F-1201 TO F-1206	247
248	POWER DISTRIBUTION - FUSES F-1207 TO F-1210	248
249	POWER DISTRIBUTION - FUSES F-1211 TO F-1216	249
250	POWER DISTRIBUTION - FUSES F-1217 TO F-1220	250
251	POWER DISTRIBUTION - FUSES F-1221 TO F-1226	251
252	POWER DISTRIBUTION - FUSES F-1227 TO F-1230	252
253	POWER DISTRIBUTION - FUSES F-1231 TO F-1236	253
254	POWER DISTRIBUTION - FUSES F-1237 TO F-1240	254
255	POWER DISTRIBUTION - FUSES F-1241 TO F-1246	255
256	POWER DISTRIBUTION - FUSES F-1247 TO F-1250	256
257	POWER DISTRIBUTION - FUSES F-1251 TO F-1256	257
258	POWER DISTRIBUTION - FUSES F-1257 TO F-1260	258
259	POWER DISTRIBUTION - FUSES F-1261 TO F-1266	259
260	POWER DISTRIBUTION - FUSES F-1267 TO F-1270	260
261	POWER DISTRIBUTION - FUSES F-1271 TO F-1276	261
262	POWER DISTRIBUTION - FUSES F-1277 TO F-1280	262
263	POWER DISTRIBUTION - FUSES F-1281 TO F-1286	263
264	POWER DISTRIBUTION - FUSES F-1287 TO F-1290	264
265	POWER DISTRIBUTION - FUSES F-1291 TO F-1296	265
266	POWER DISTRIBUTION - FUSES F-1297 TO F-1300	266
267	POWER DISTRIBUTION - FUSES F-1301 TO F-1306	267
268	POWER DISTRIBUTION - FUSES F-1307 TO F-1310	268
269	POWER DISTRIBUTION - FUSES F-1311 TO F-1316	269
270	POWER DISTRIBUTION - FUSES F-1317 TO F-1320	270
271	POWER DISTRIBUTION - FUSES F-1321 TO F-1326	271
272	POWER DISTRIBUTION - FUSES F-1327 TO F-1330	272
273	POWER DISTRIBUTION - FUSES F-1331 TO F-1336	273
274	POWER DISTRIBUTION - FUSES F-1337 TO F-1340	274
275	POWER DISTRIBUTION - FUSES F-1341 TO F-1346	275
276	POWER DISTRIBUTION - FUSES F-1347 TO F-1350	276
277	POWER DISTRIBUTION - FUSES F-1351 TO F-1356	277
278	POWER DISTRIBUTION - FUSES F-1357 TO F-1360	278
279	POWER DISTRIBUTION - FUSES F-1361 TO F-1366	279
280	POWER DISTRIBUTION - FUSES F-1367 TO F-1370	280
281	POWER DISTRIBUTION - FUSES F-1371 TO F-1376	281
282	POWER DISTRIBUTION - FUSES F-1377 TO F-1380	282
283	POWER DISTRIBUTION - FUSES F-1381 TO F-1386	283
284	POWER DISTRIBUTION - FUSES F-1387 TO F-1390	284
285	POWER DISTRIBUTION - FUSES F-1391 TO F-1396	285
286	POWER DISTRIBUTION - FUSES F-1397 TO F-1400	286
287	POWER DISTRIBUTION - FUSES F-1401 TO F-1406	287
288	POWER DISTRIBUTION - FUSES F-1407 TO F-1410	288
289	POWER DISTRIBUTION - FUSES F-1411 TO F-1416	289
290	POWER DISTRIBUTION - FUSES F-1417 TO F-1420	290
291	POWER DISTRIBUTION - FUSES F-1421 TO F-1426	291
292</		

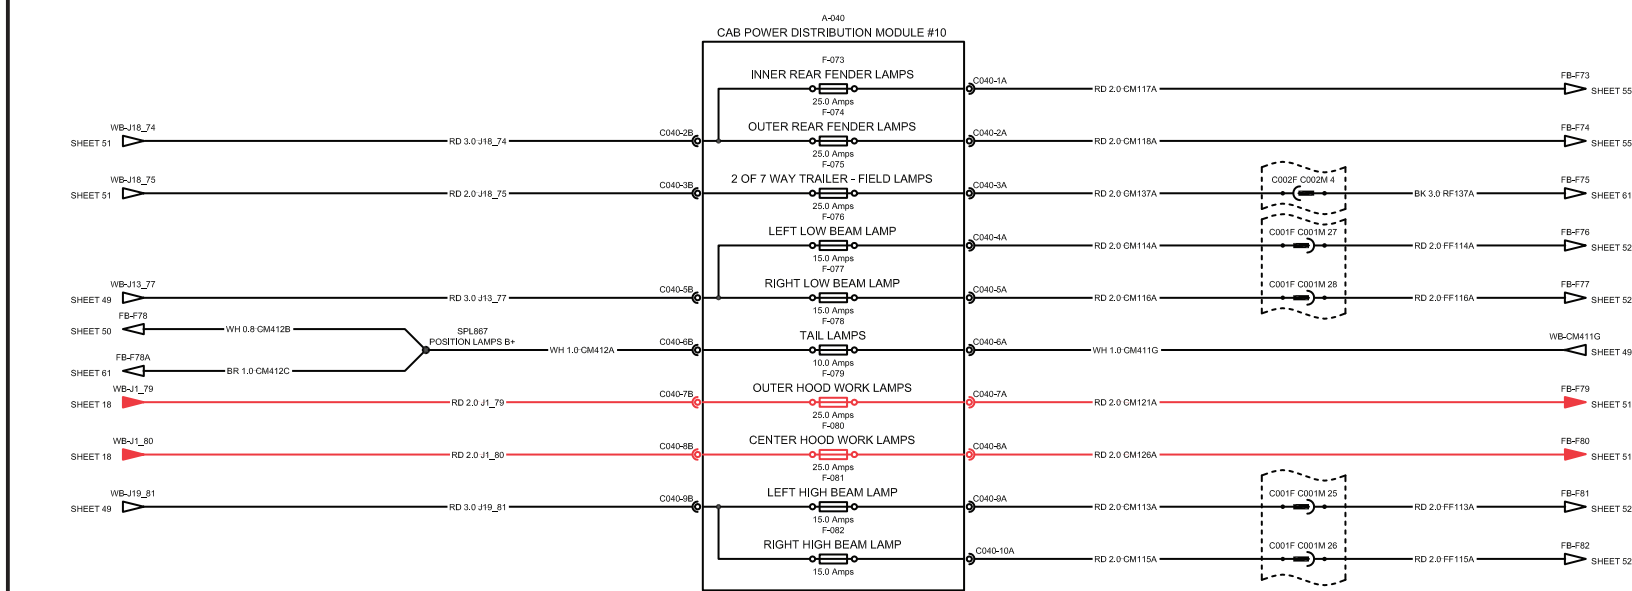 


POWER DISTRIBUTION - FUSES F-073 TO F-082


POWER DISTRIBUTION - FUSES F-083 TO F-088

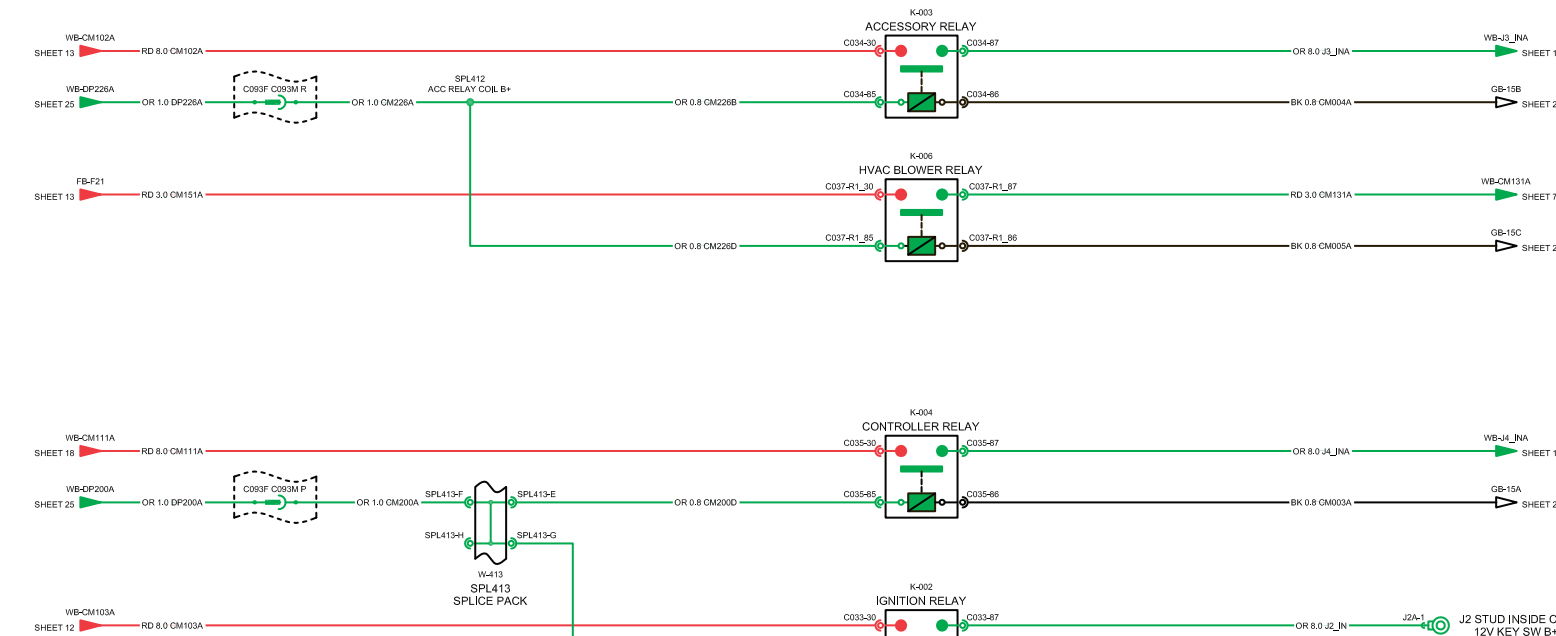

 
POWER DISTRIBUTION - POWER RELAYS

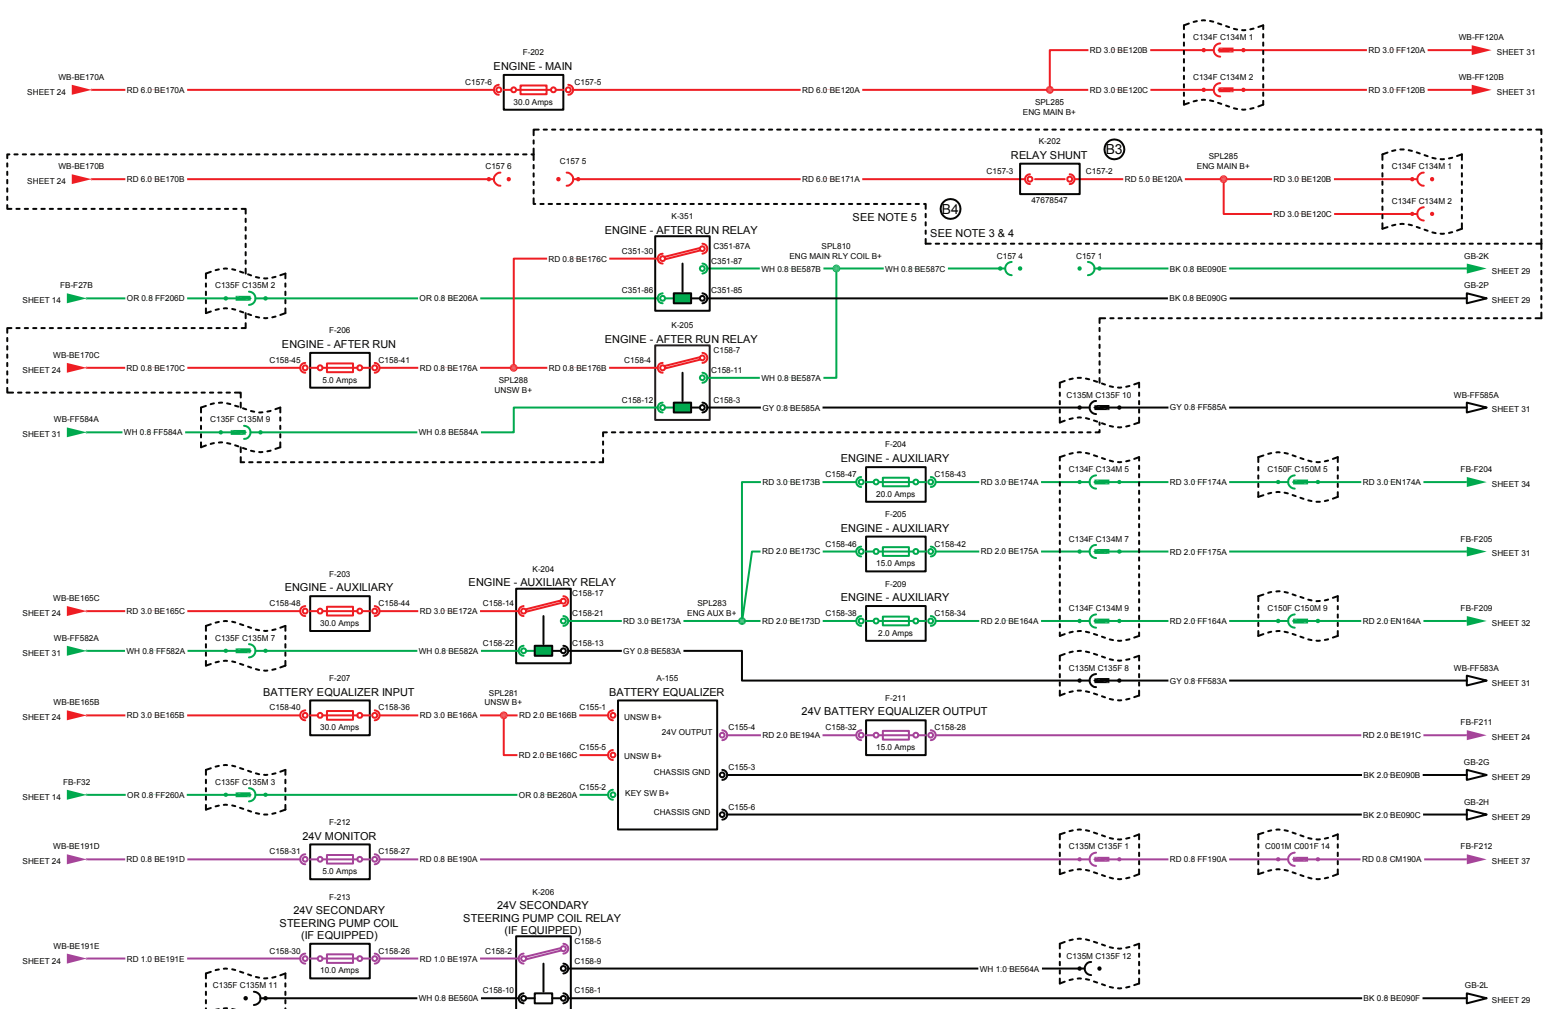


POWER DISTRIBUTION - TIER4B PDM

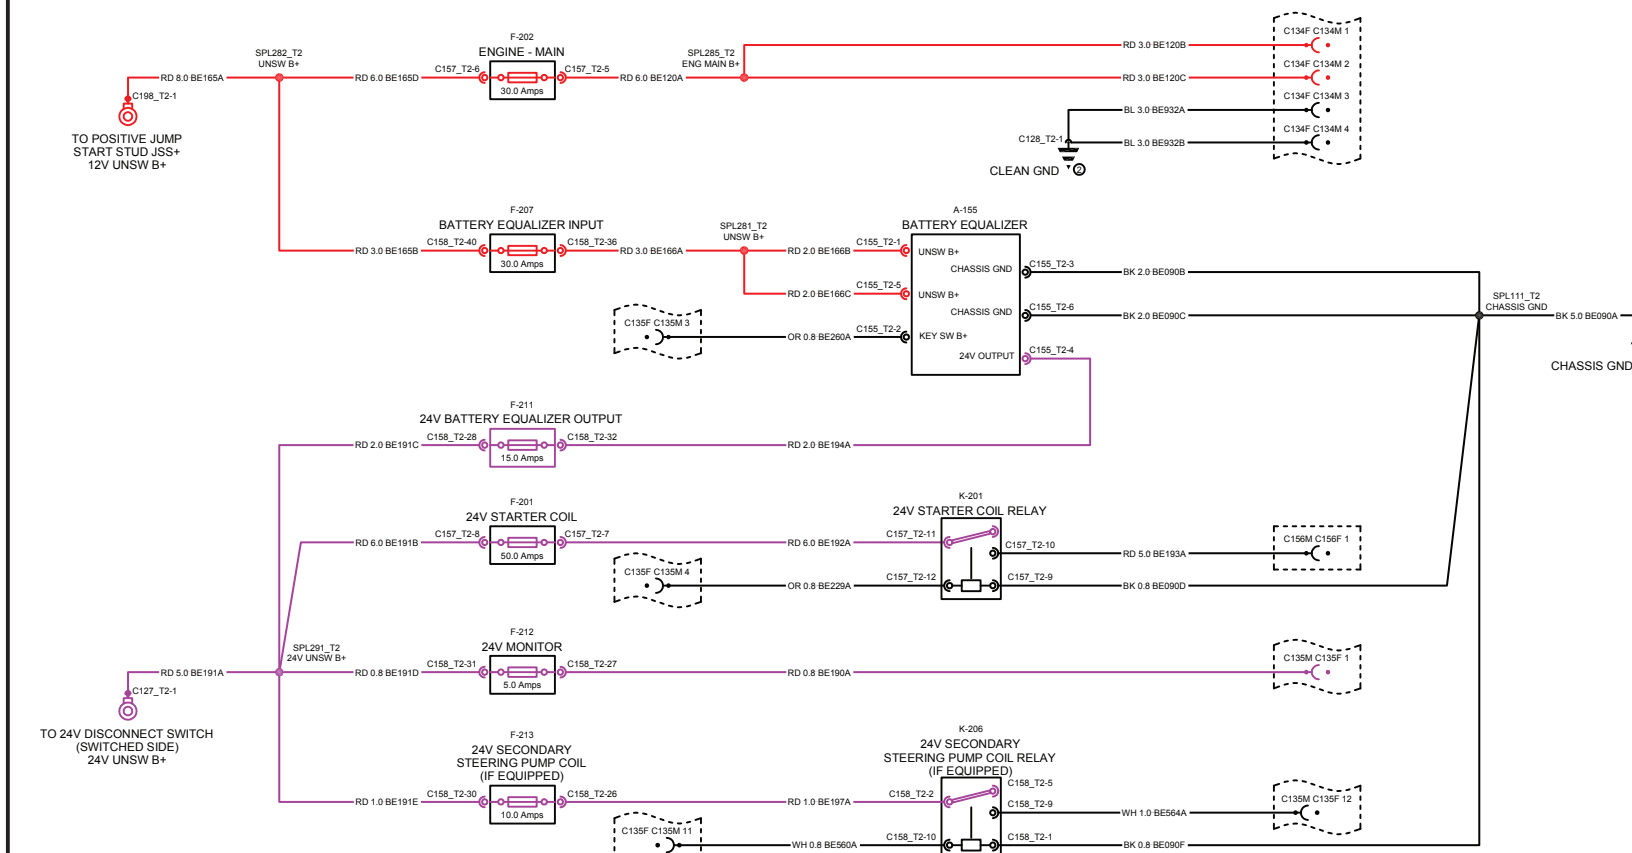 


POWER DISTRIBUTION - TIER2 PDM

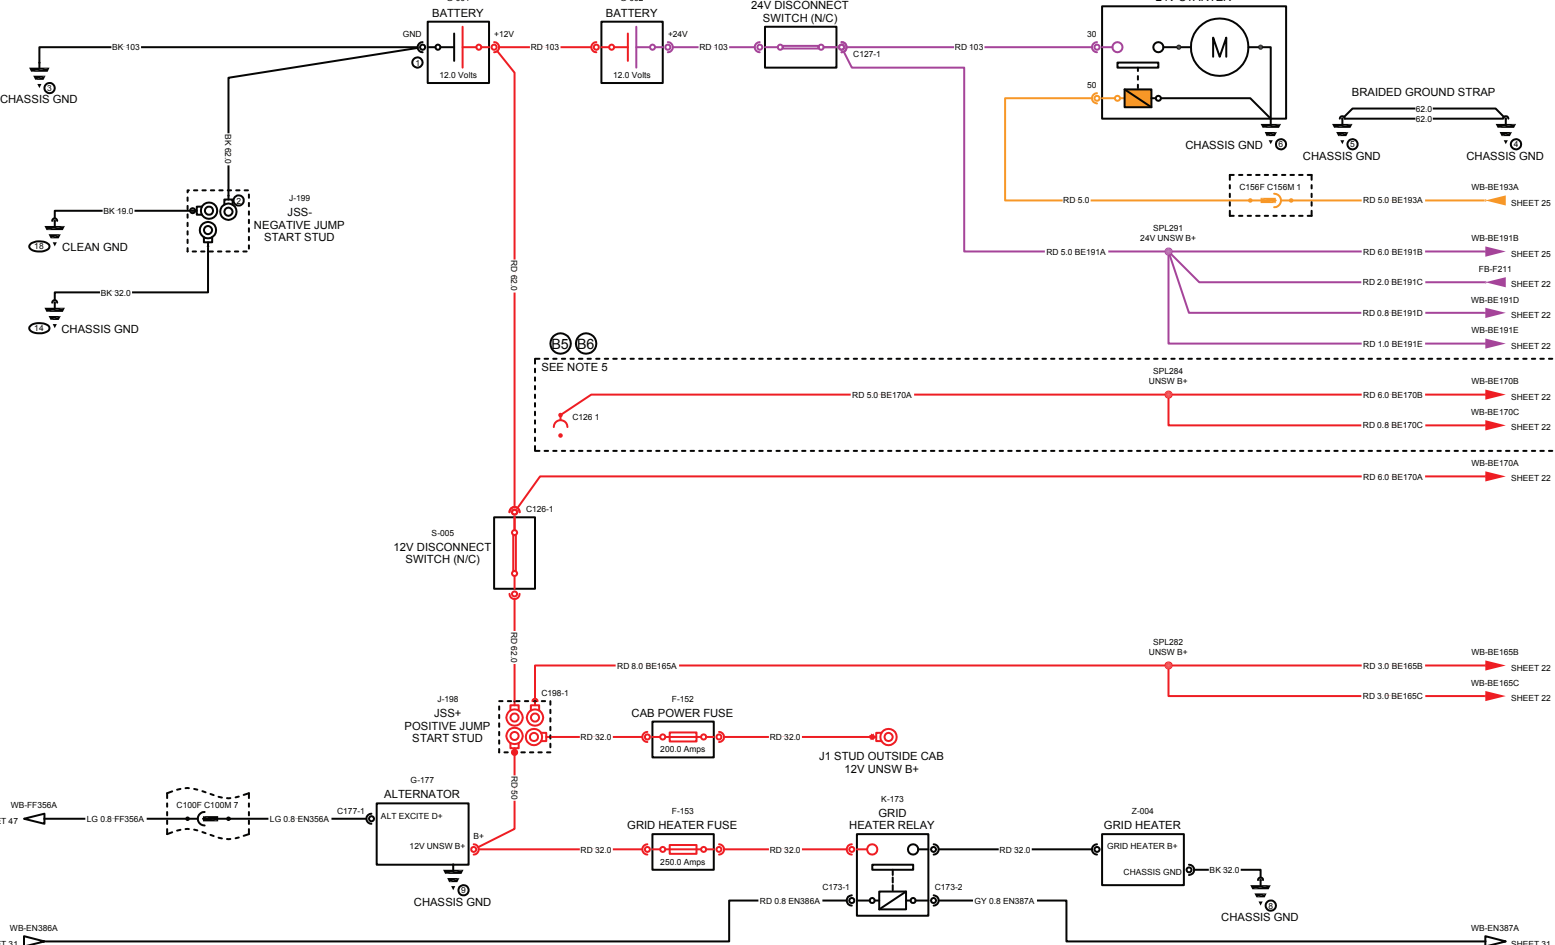 


STARTING AND CHARGING SYSTEM

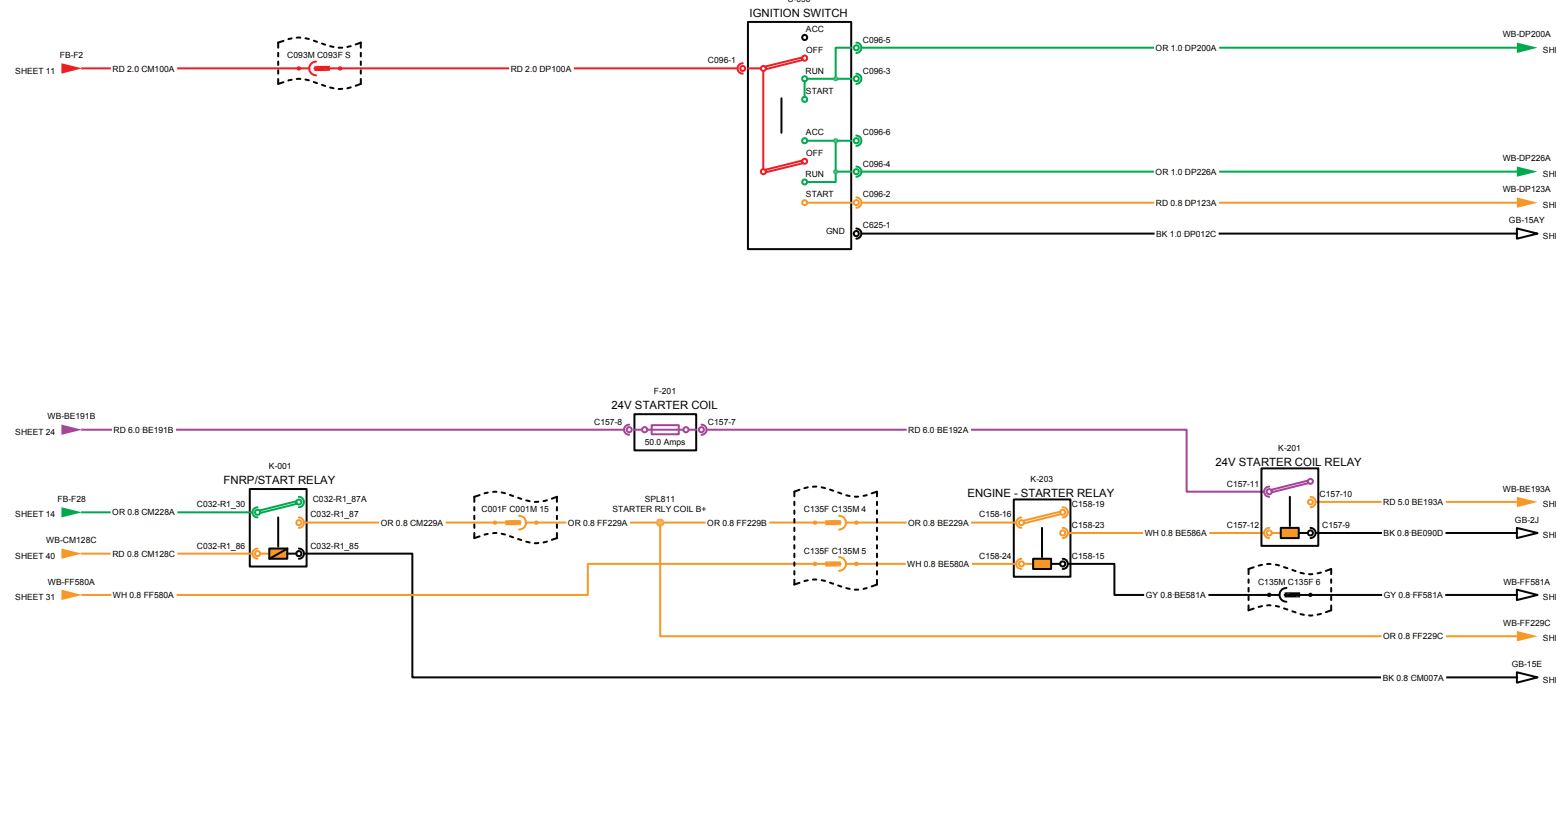 


STARTING AND CHARGING SYSTEM

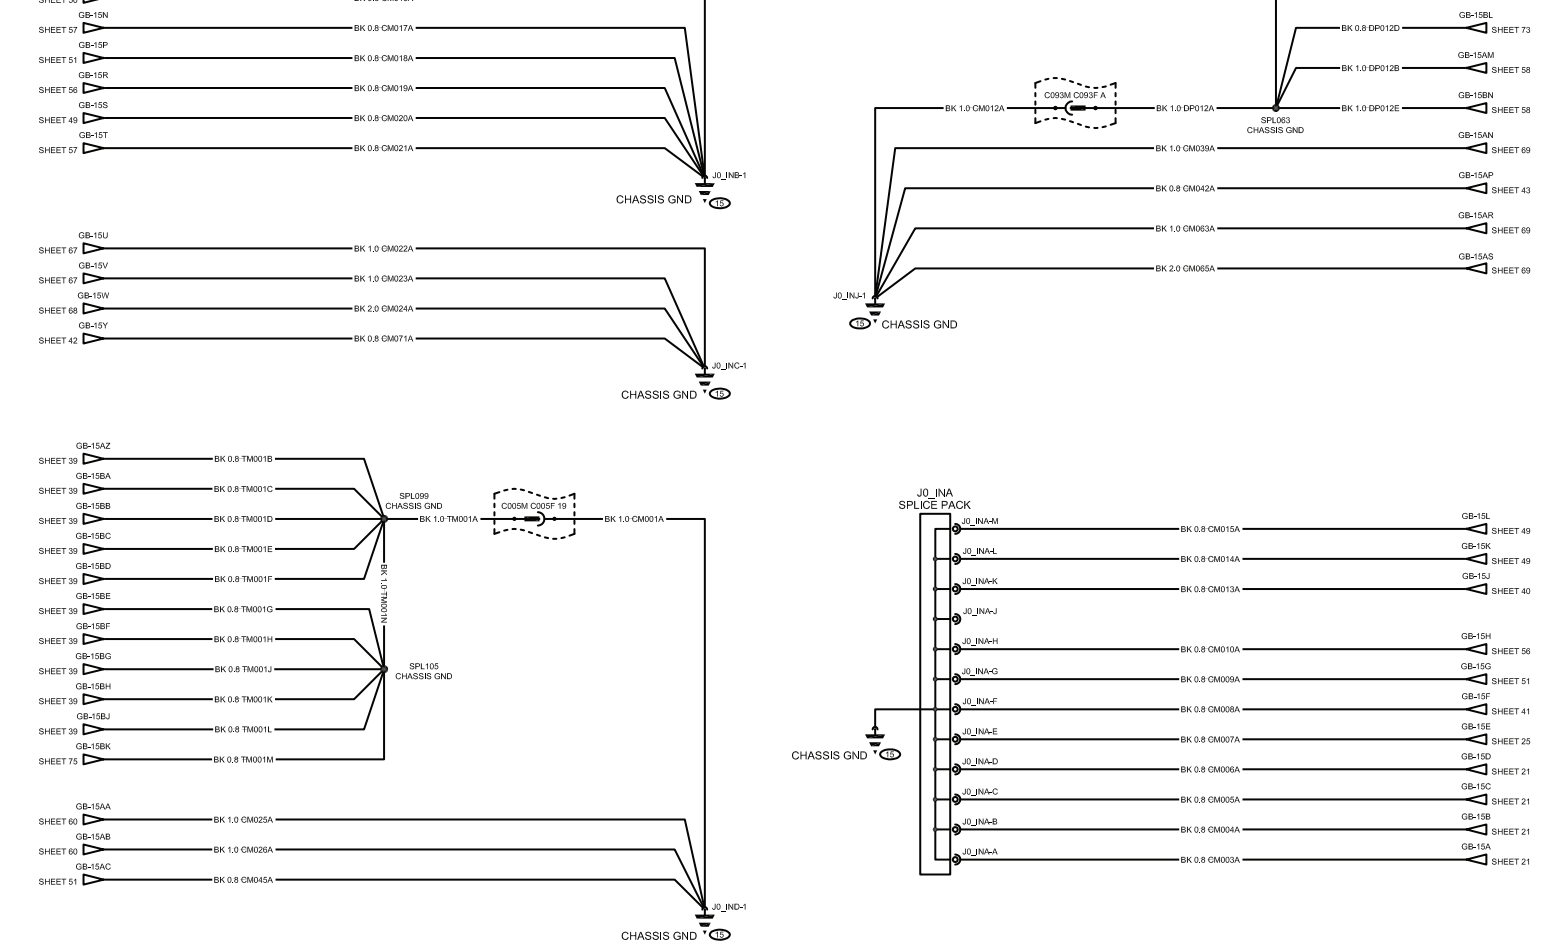 


GROUNDING SYSTEM

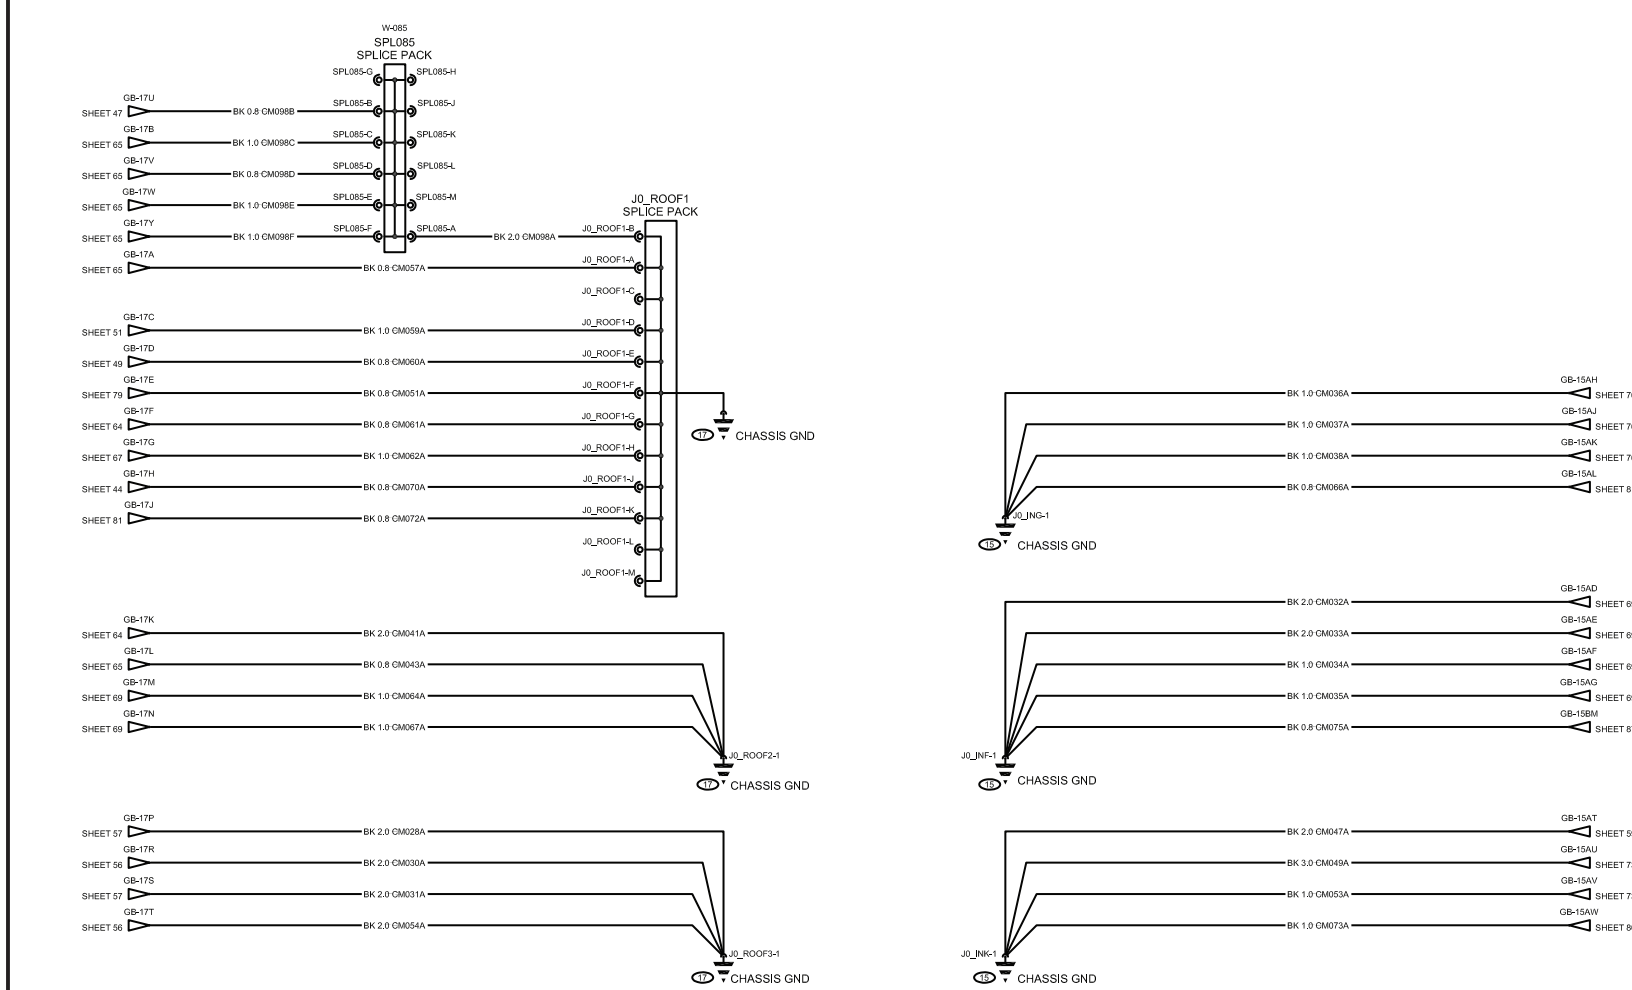 

GROUNDING SYSTEM

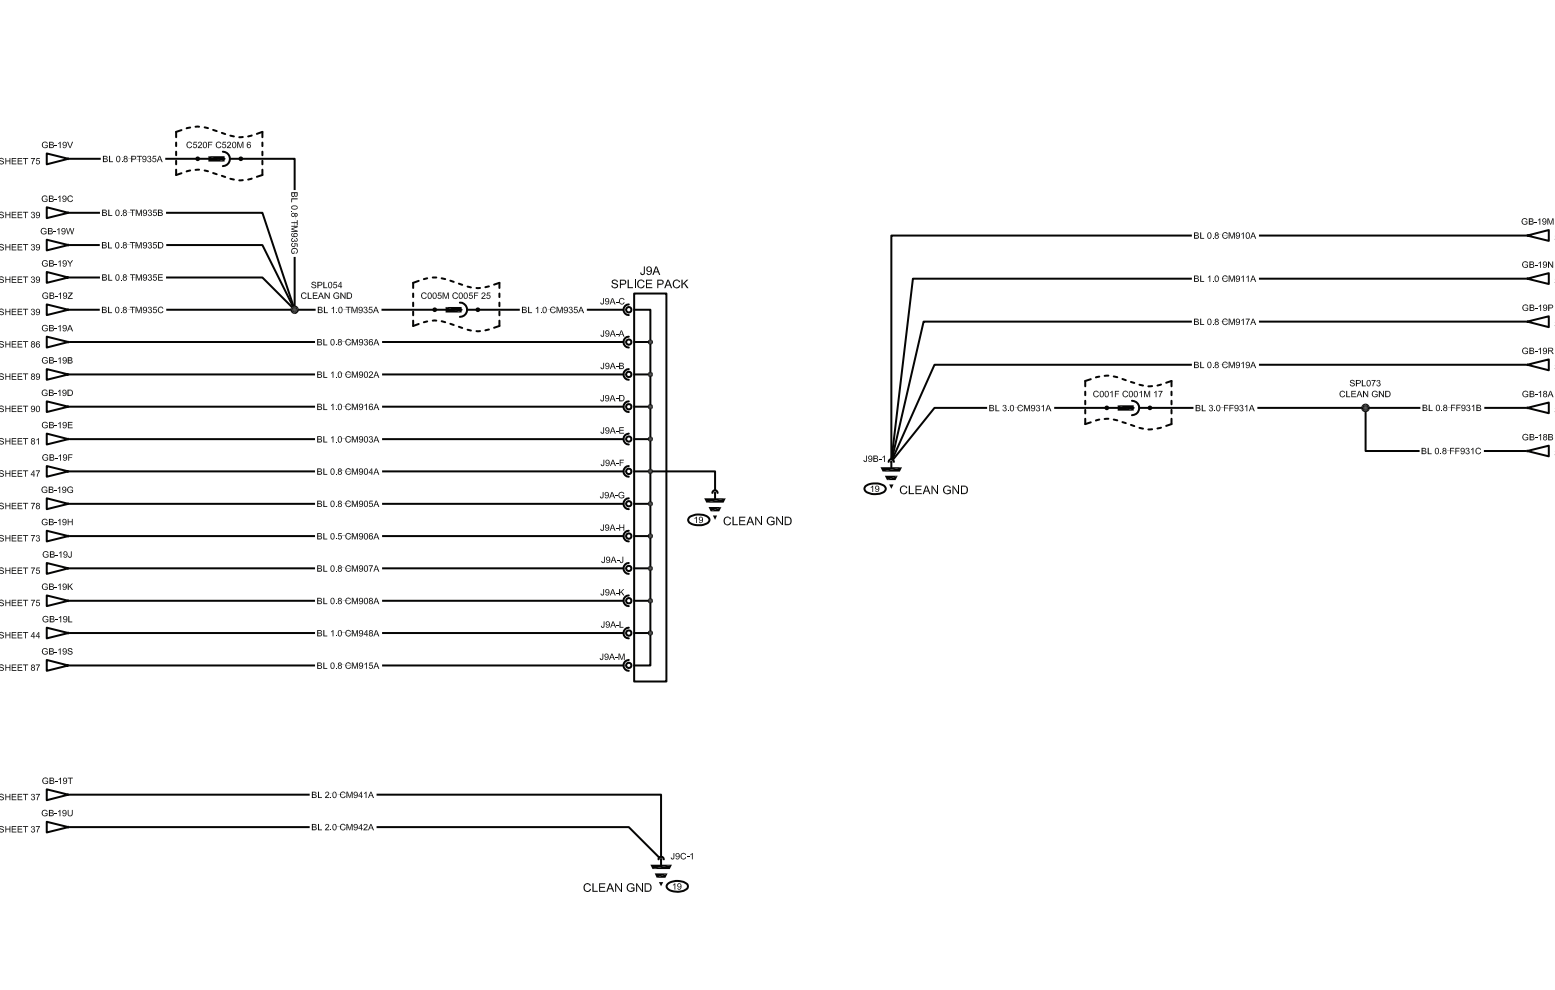 


GROUNDING SYSTEM

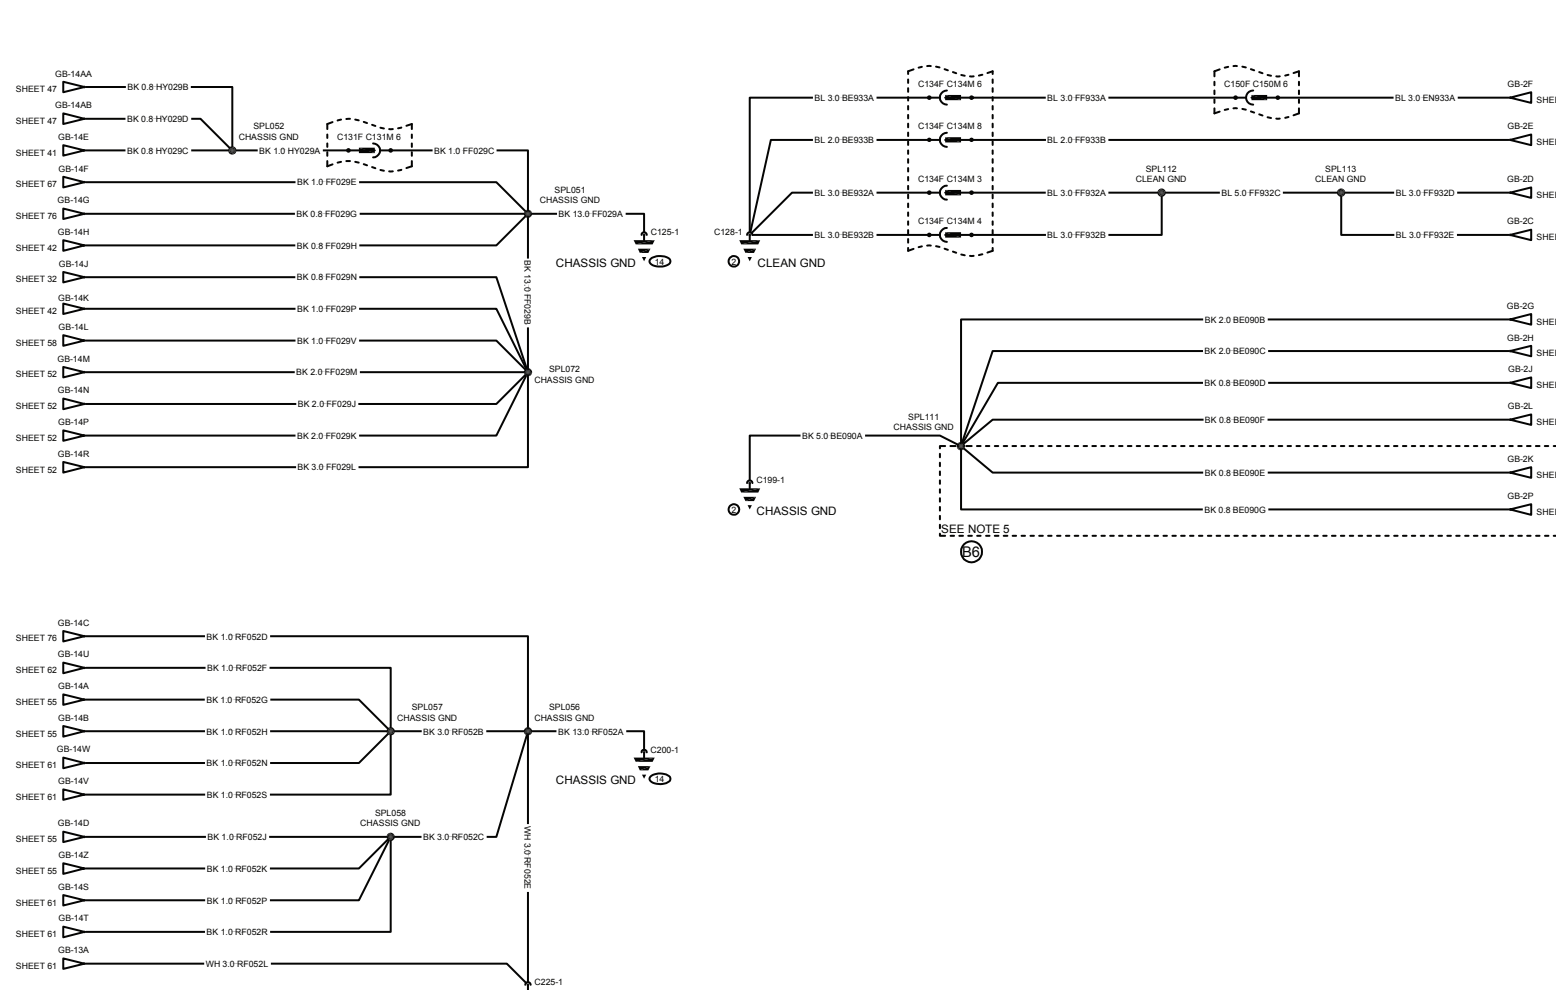 


GROUNDING SYSTEM



 
BLANK SHEET

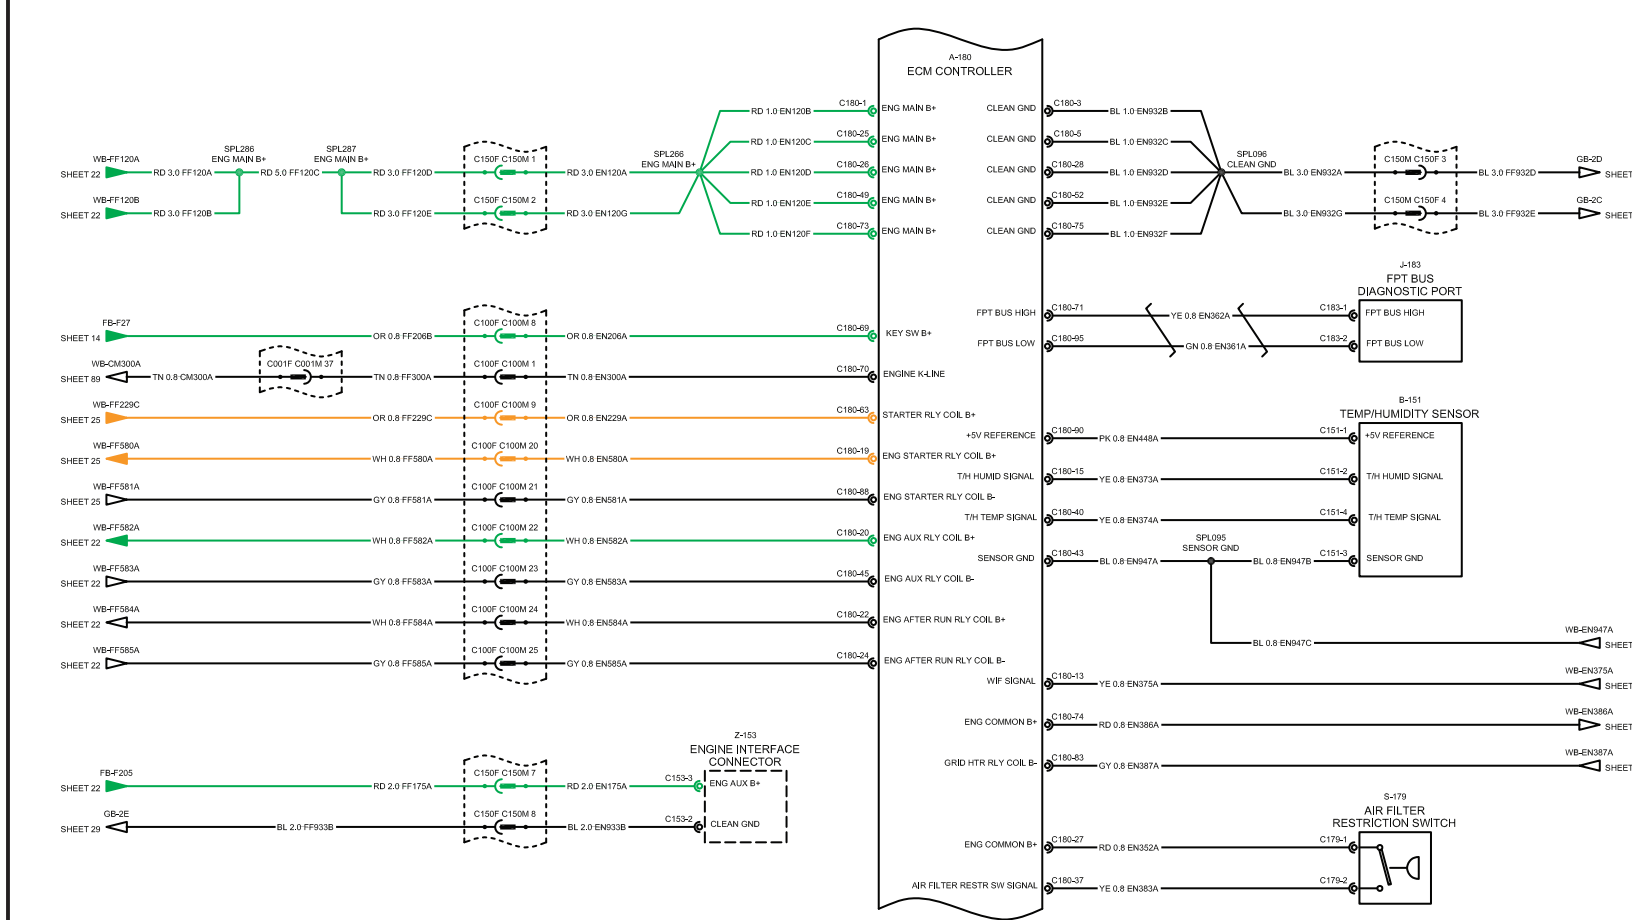


ENGINE - TIER4B C9 SST C13TST

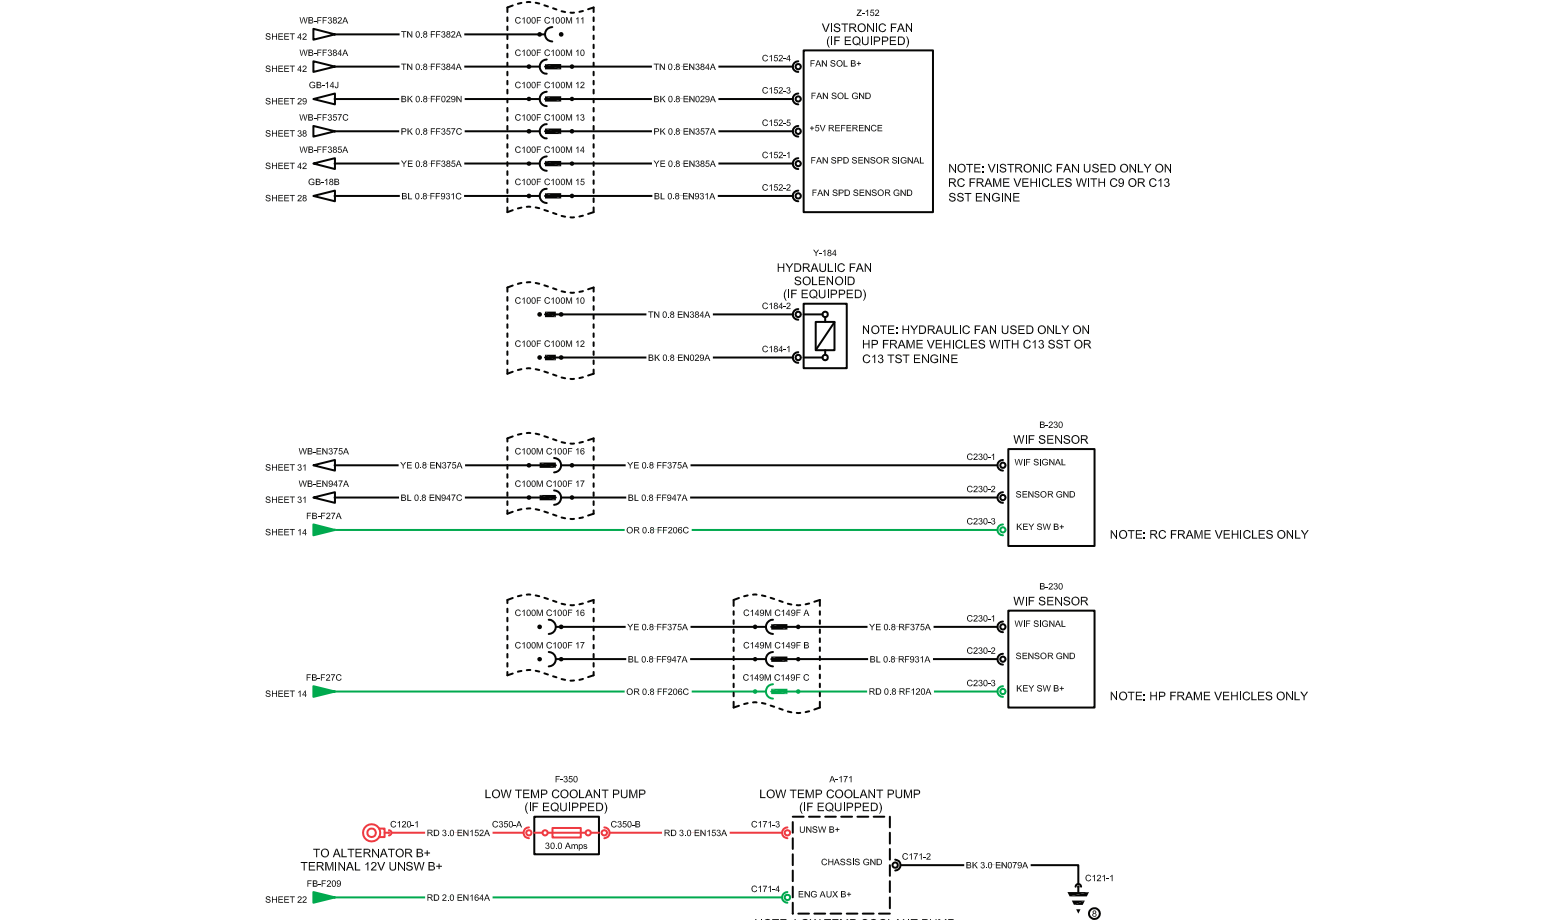 












ENGINE - VARIATIONS

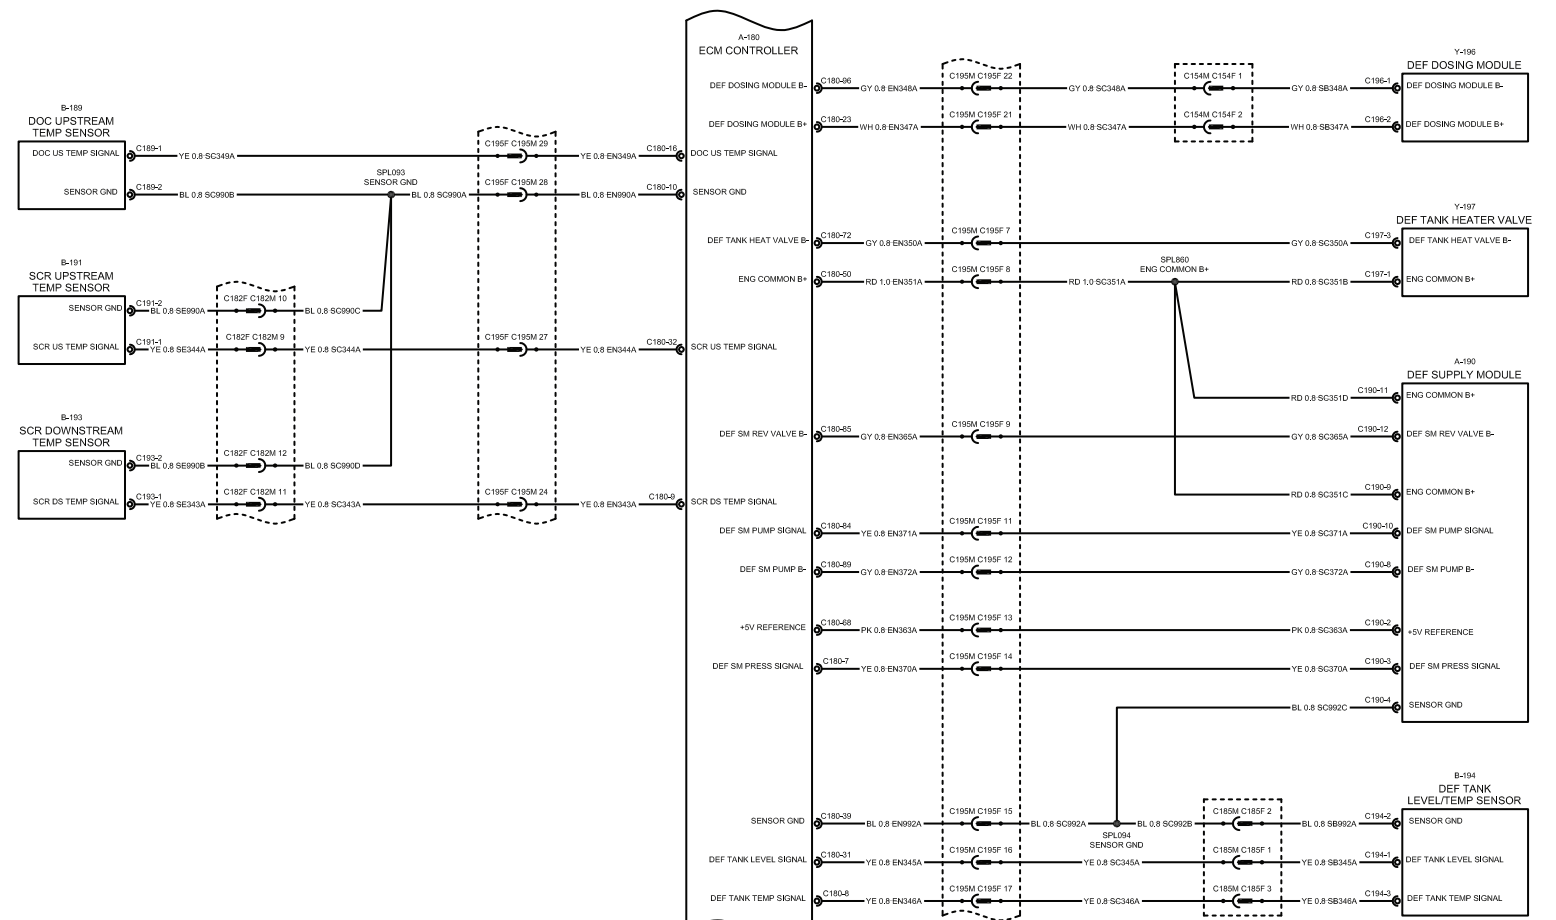 

ENGINE - TIER4B SCR SYSTEM

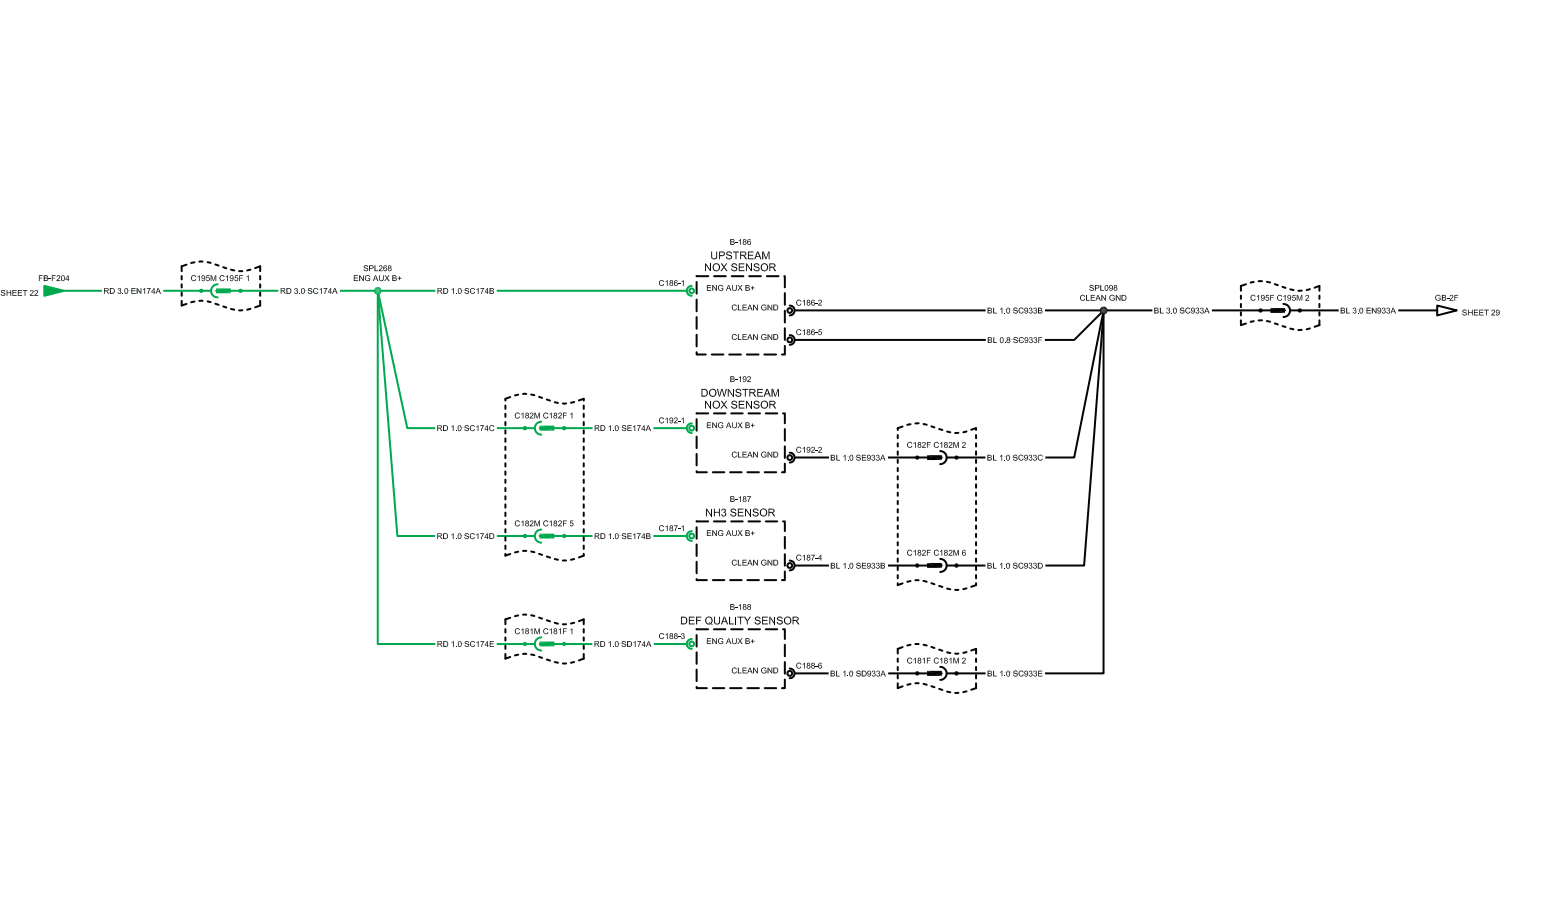 

ENGINE - TIER4B SCR SYSTEM

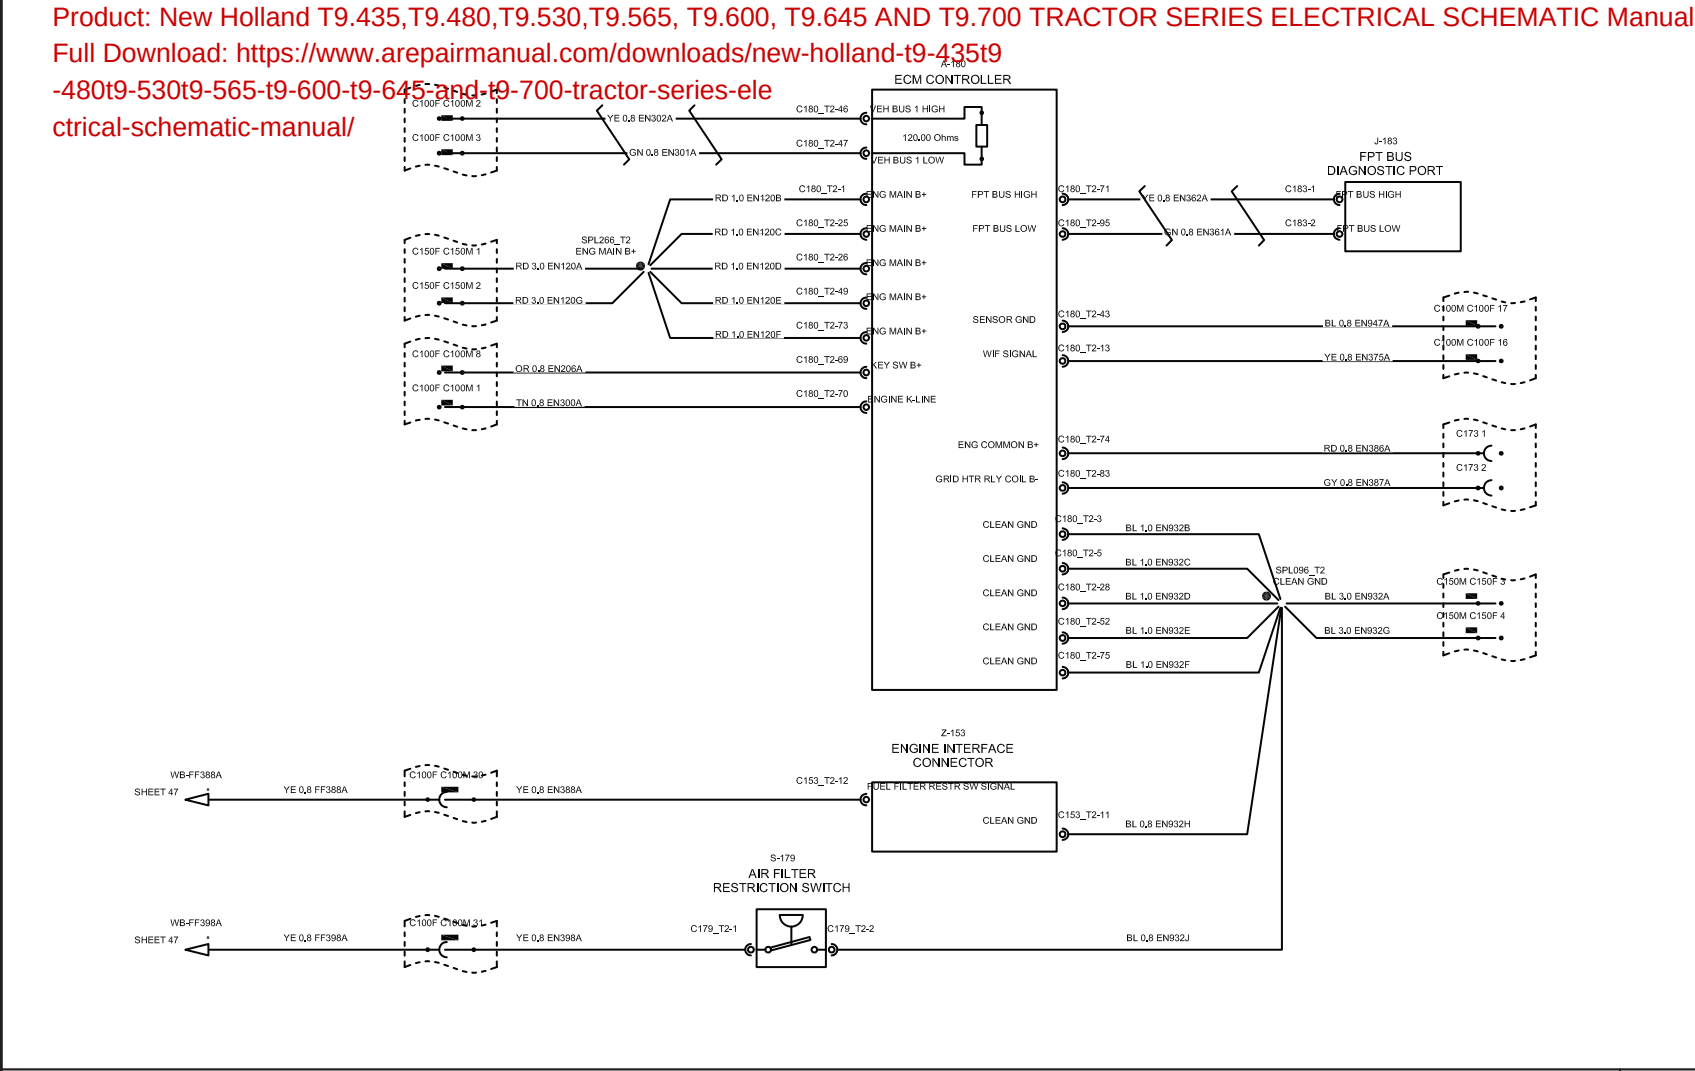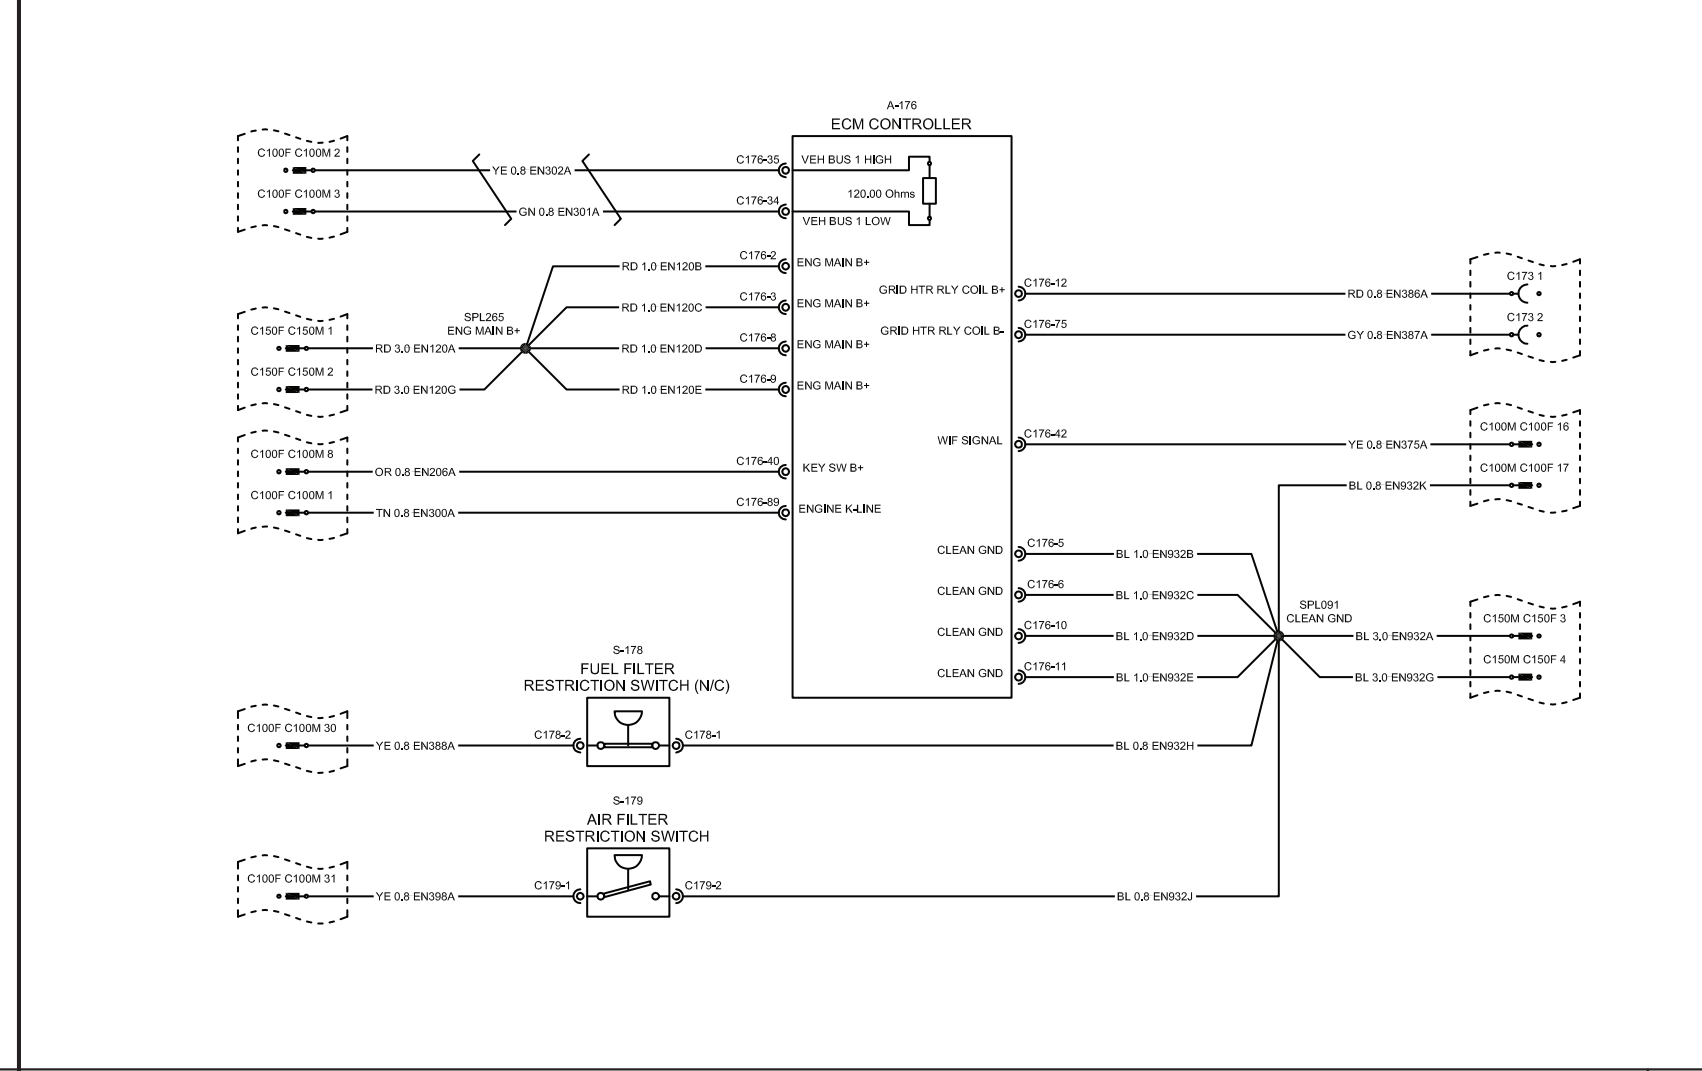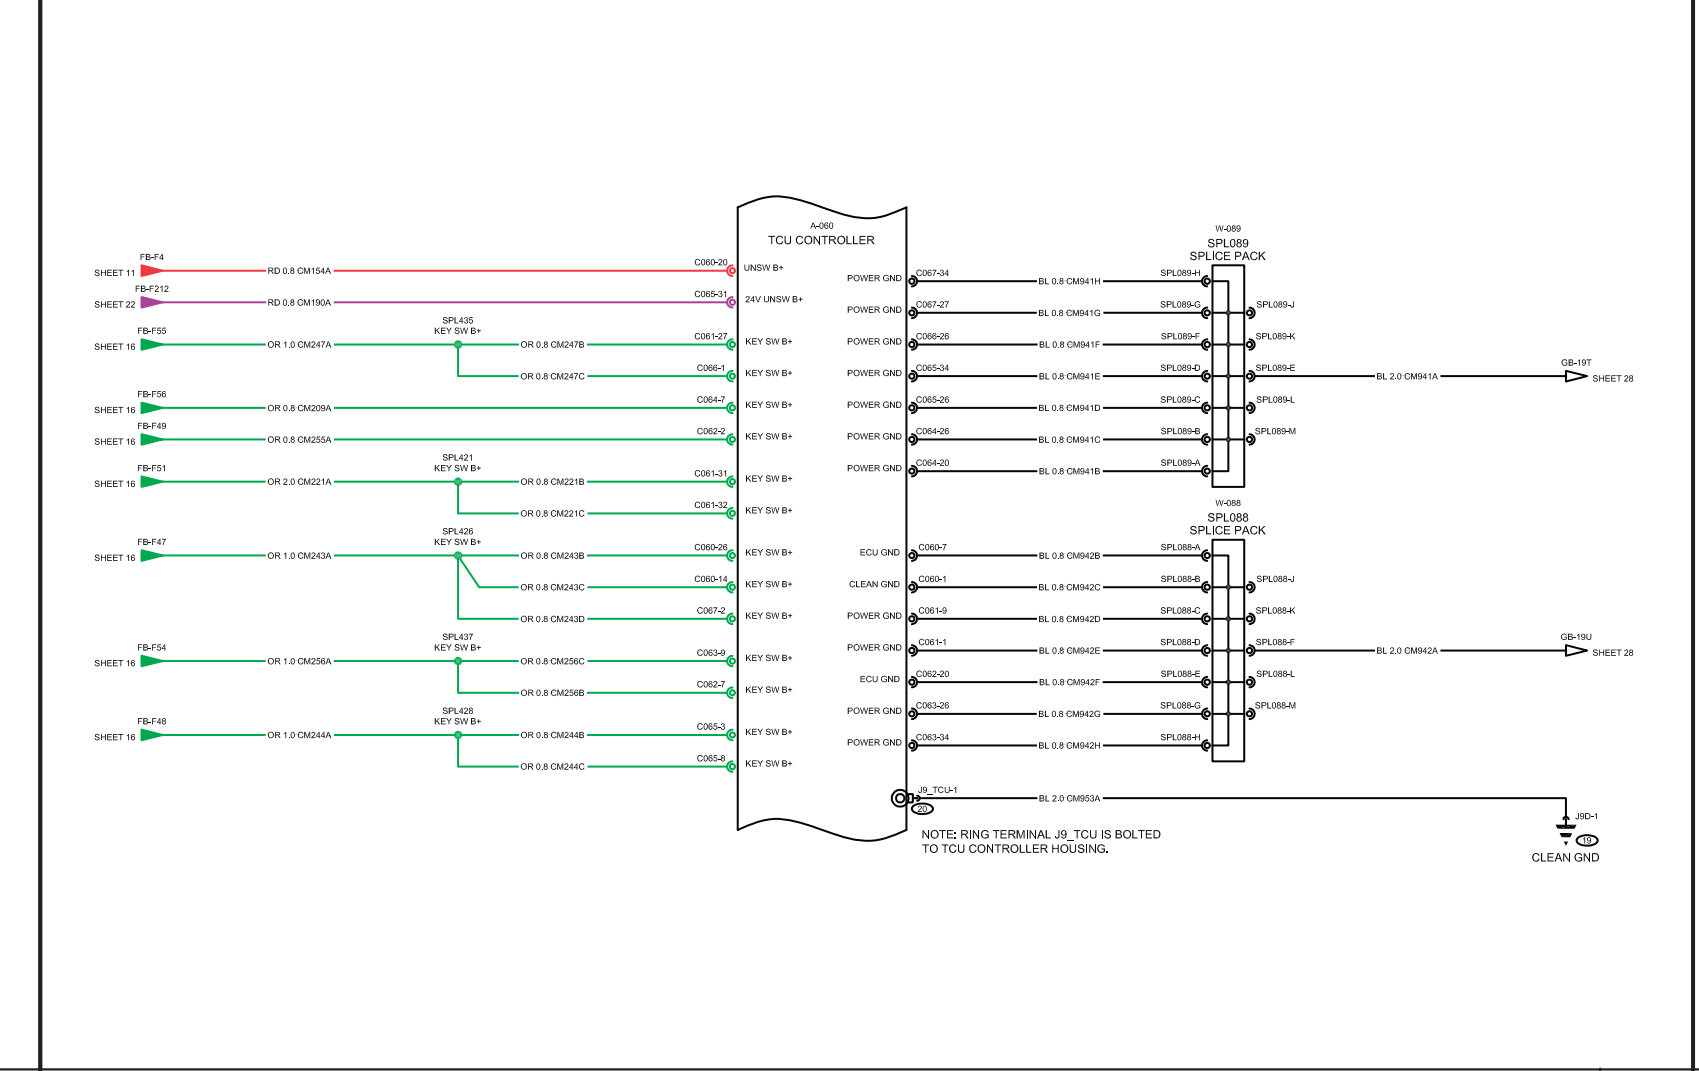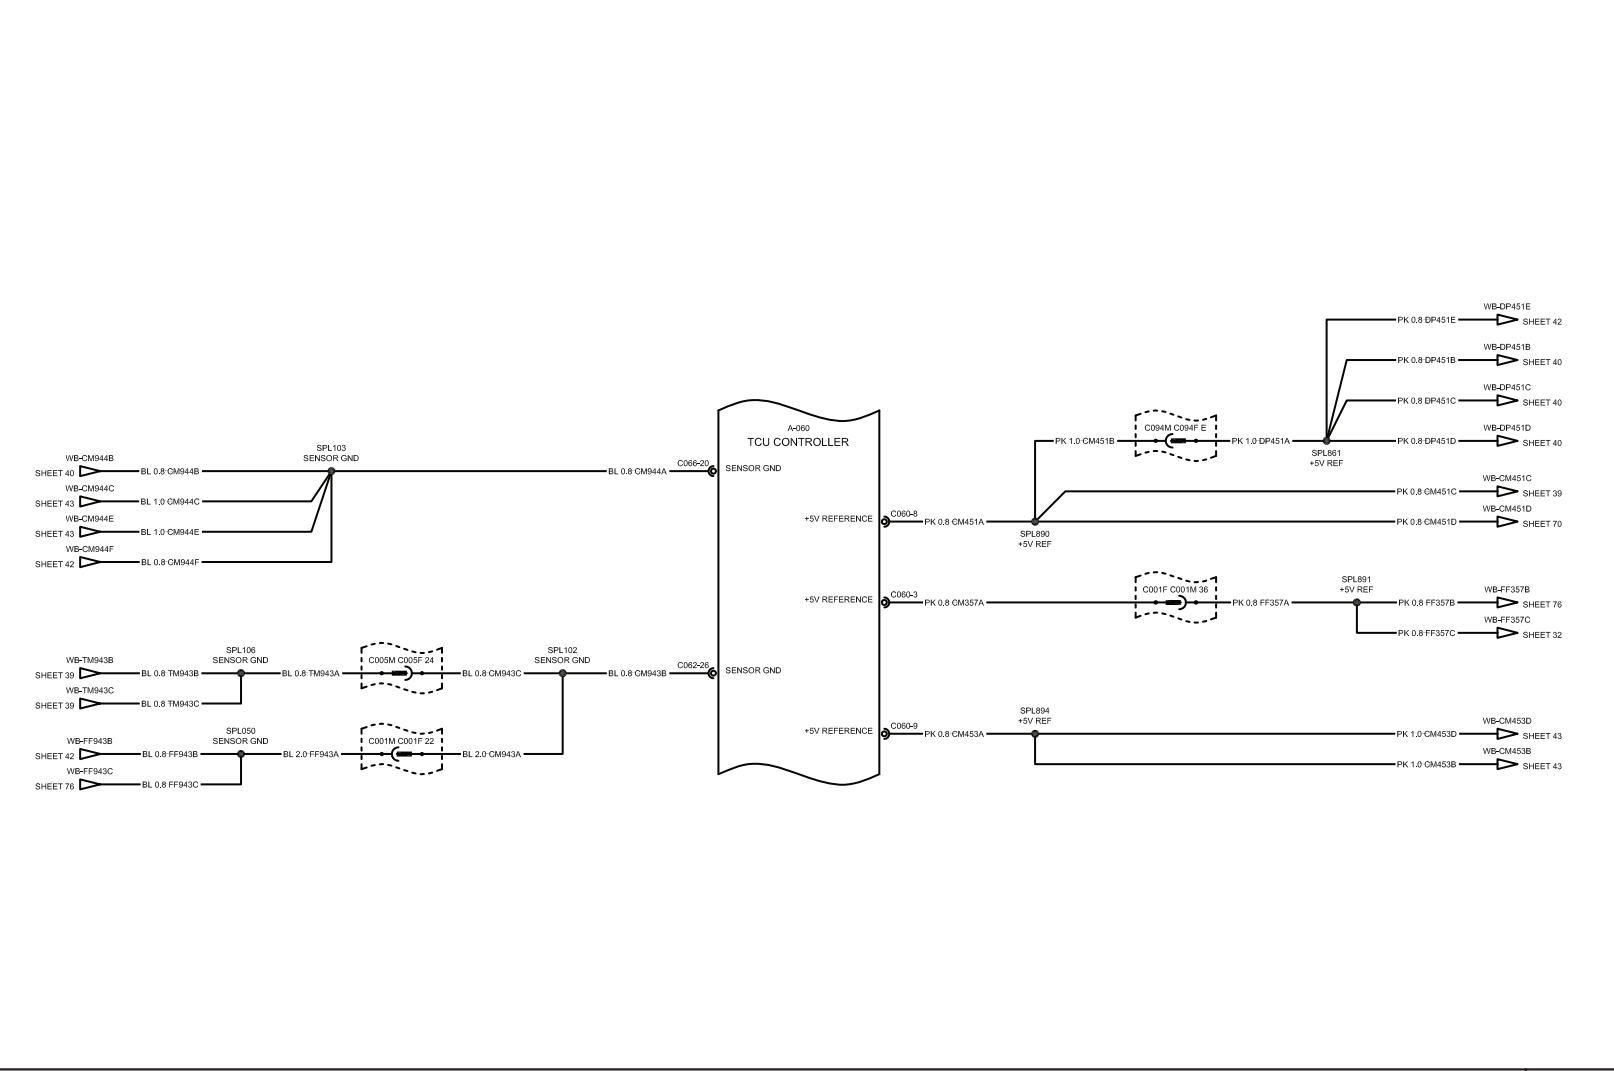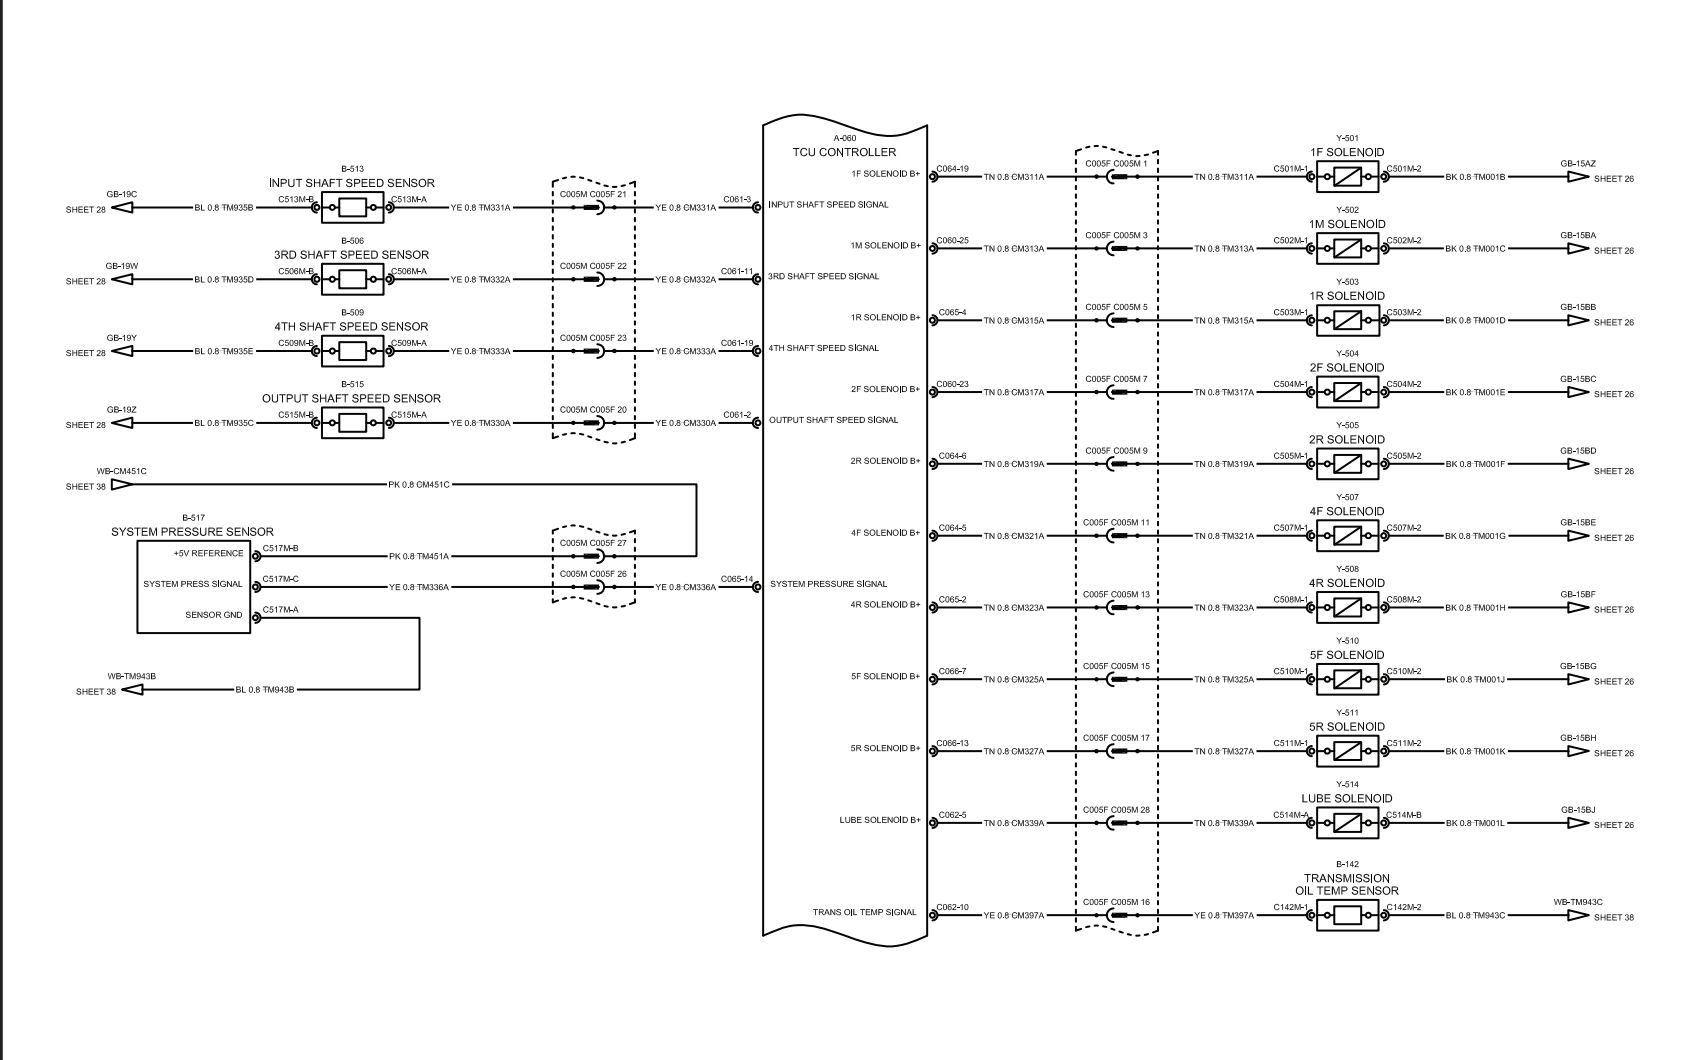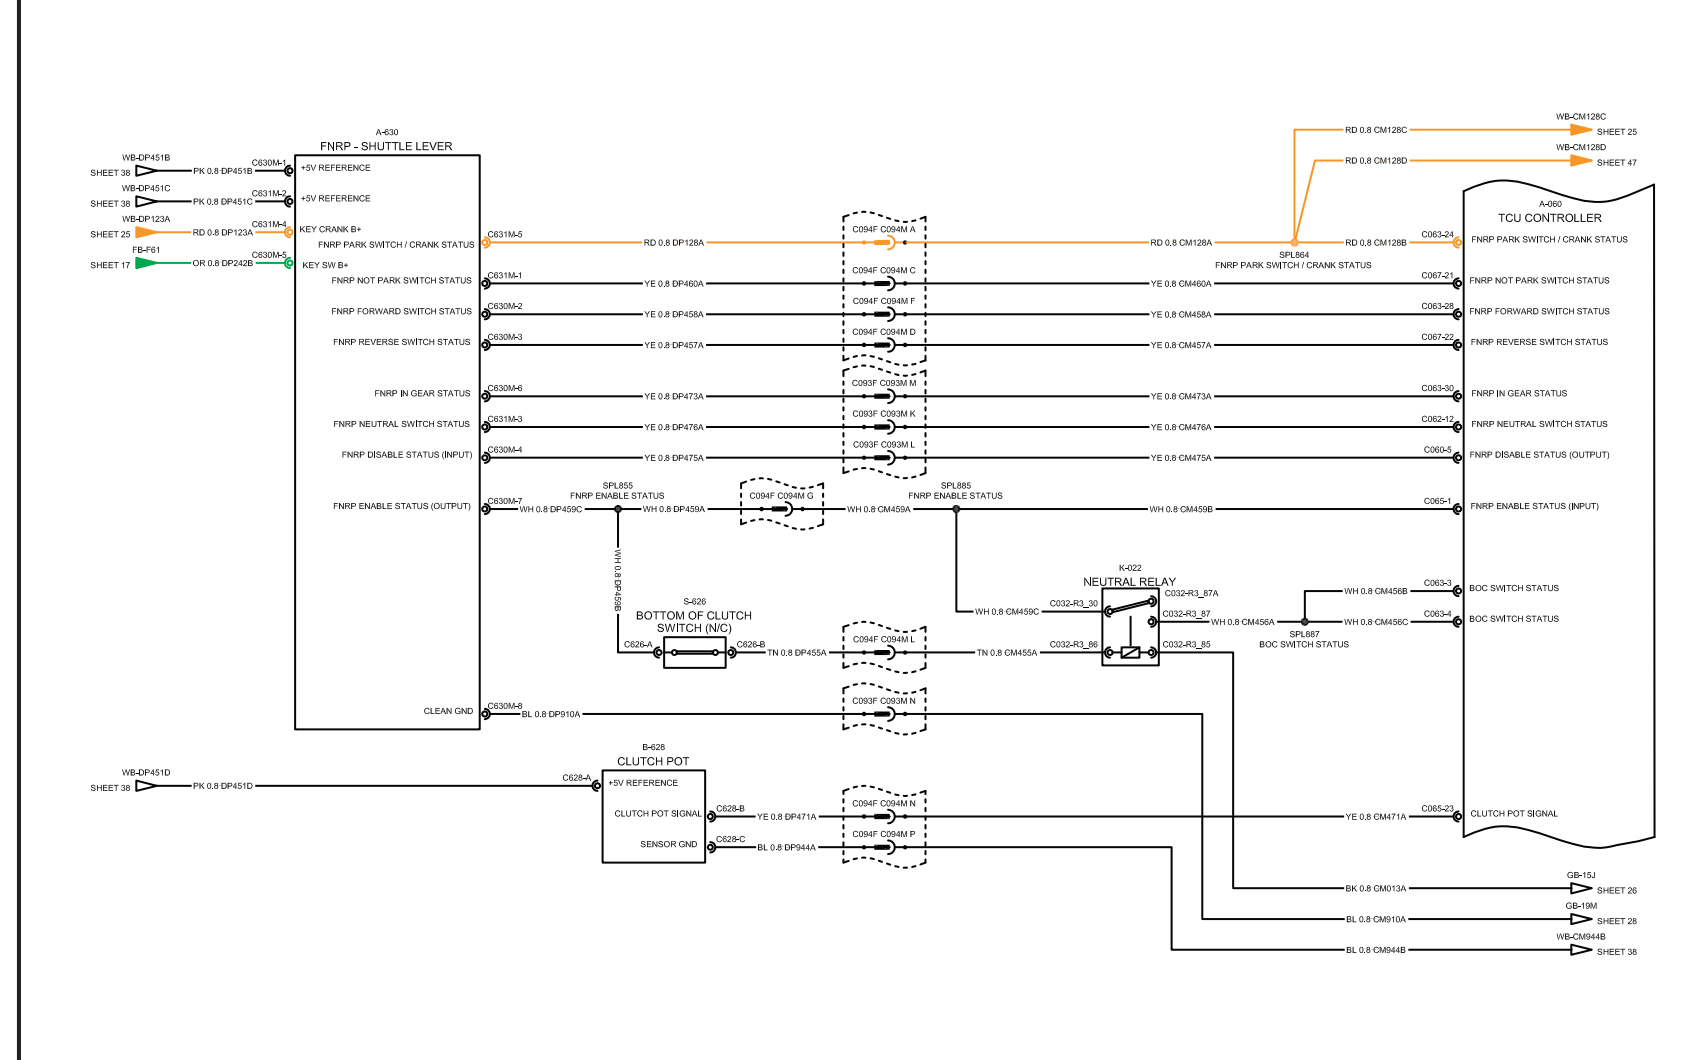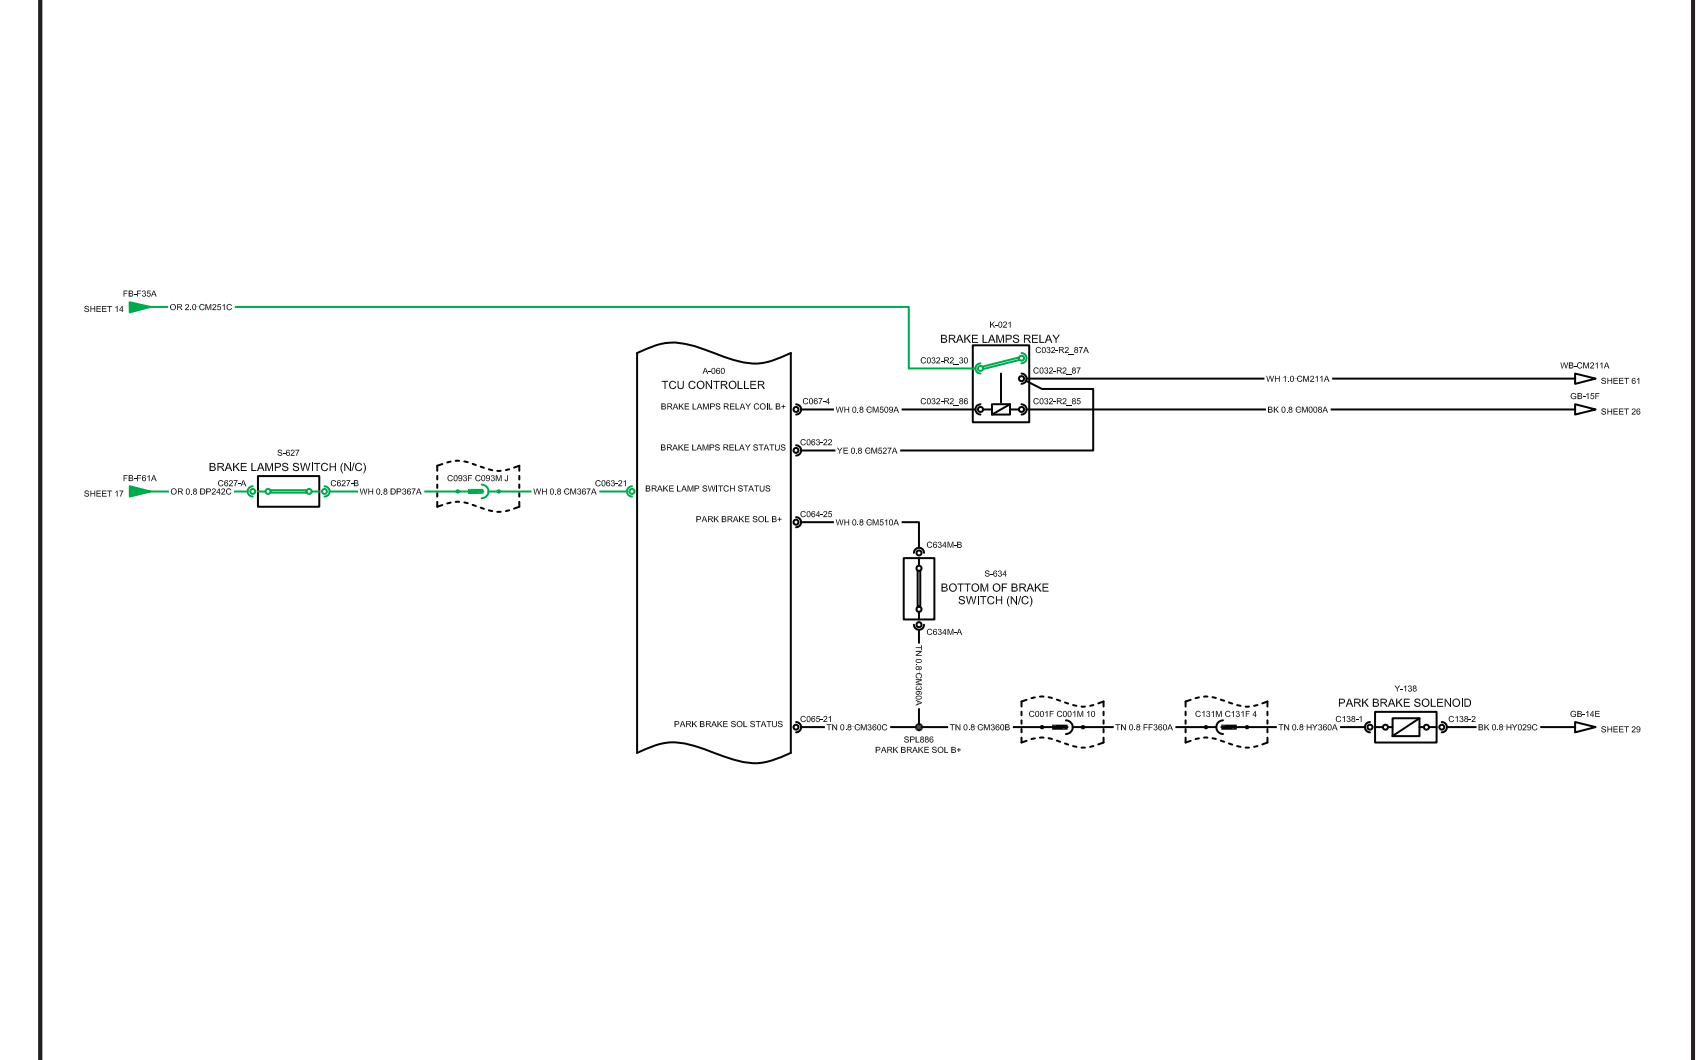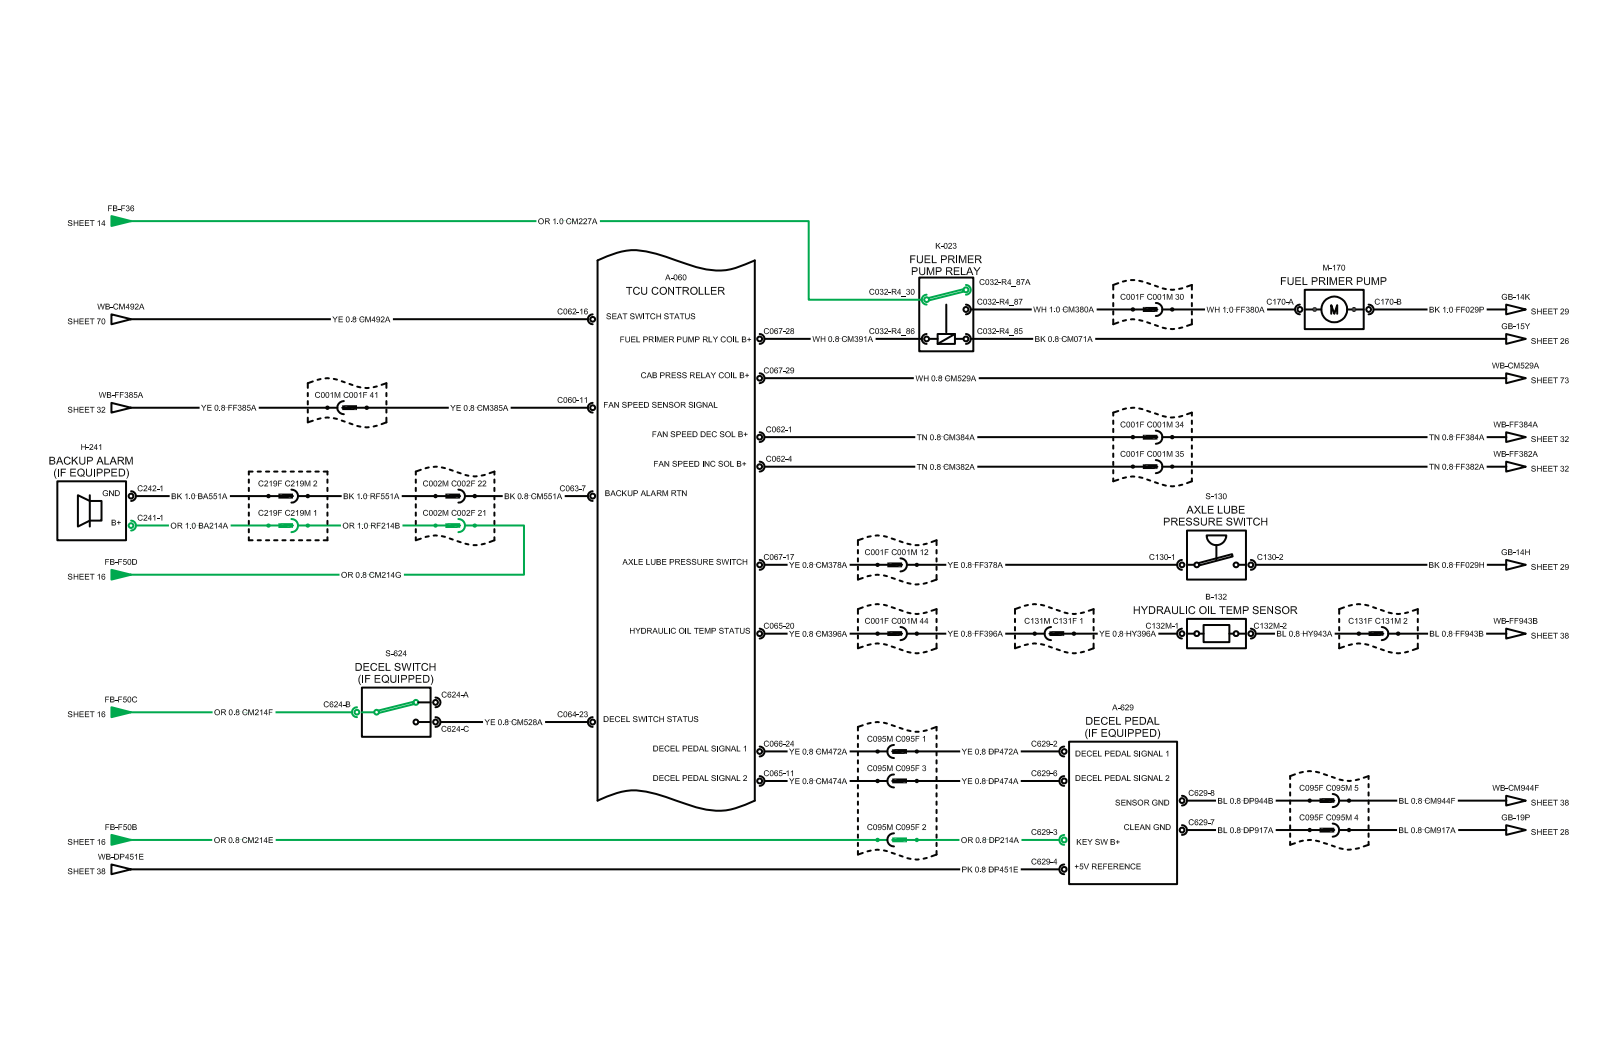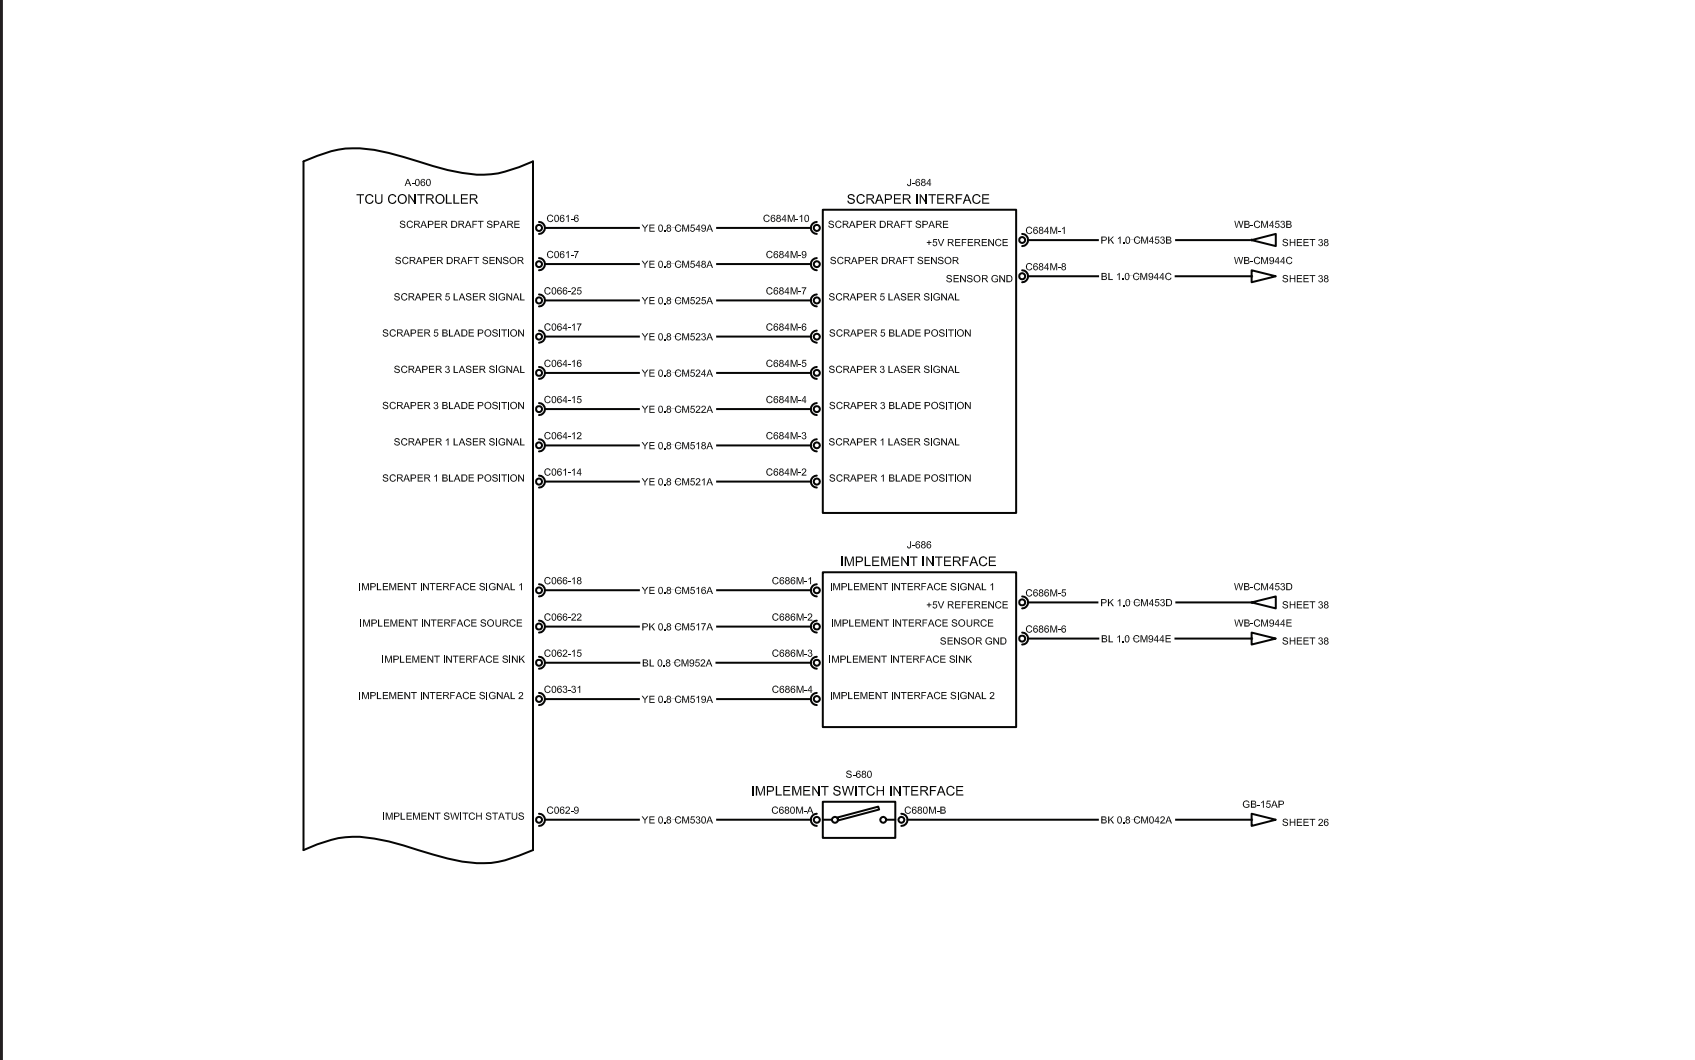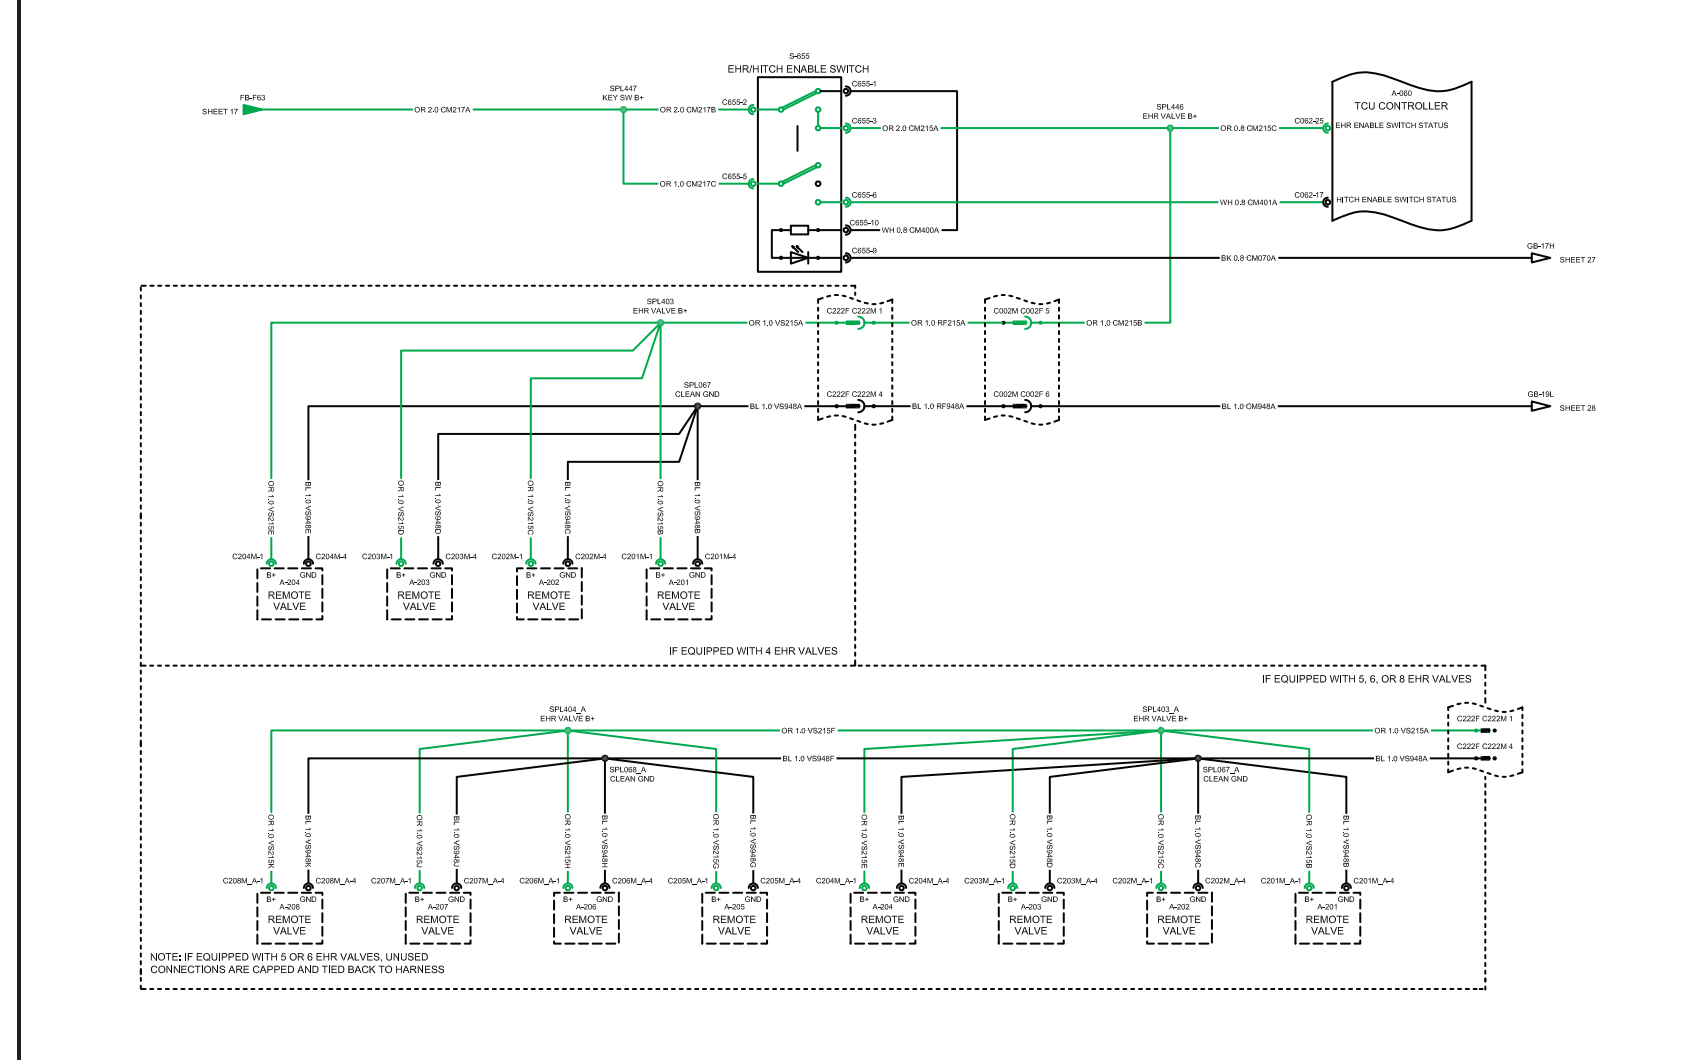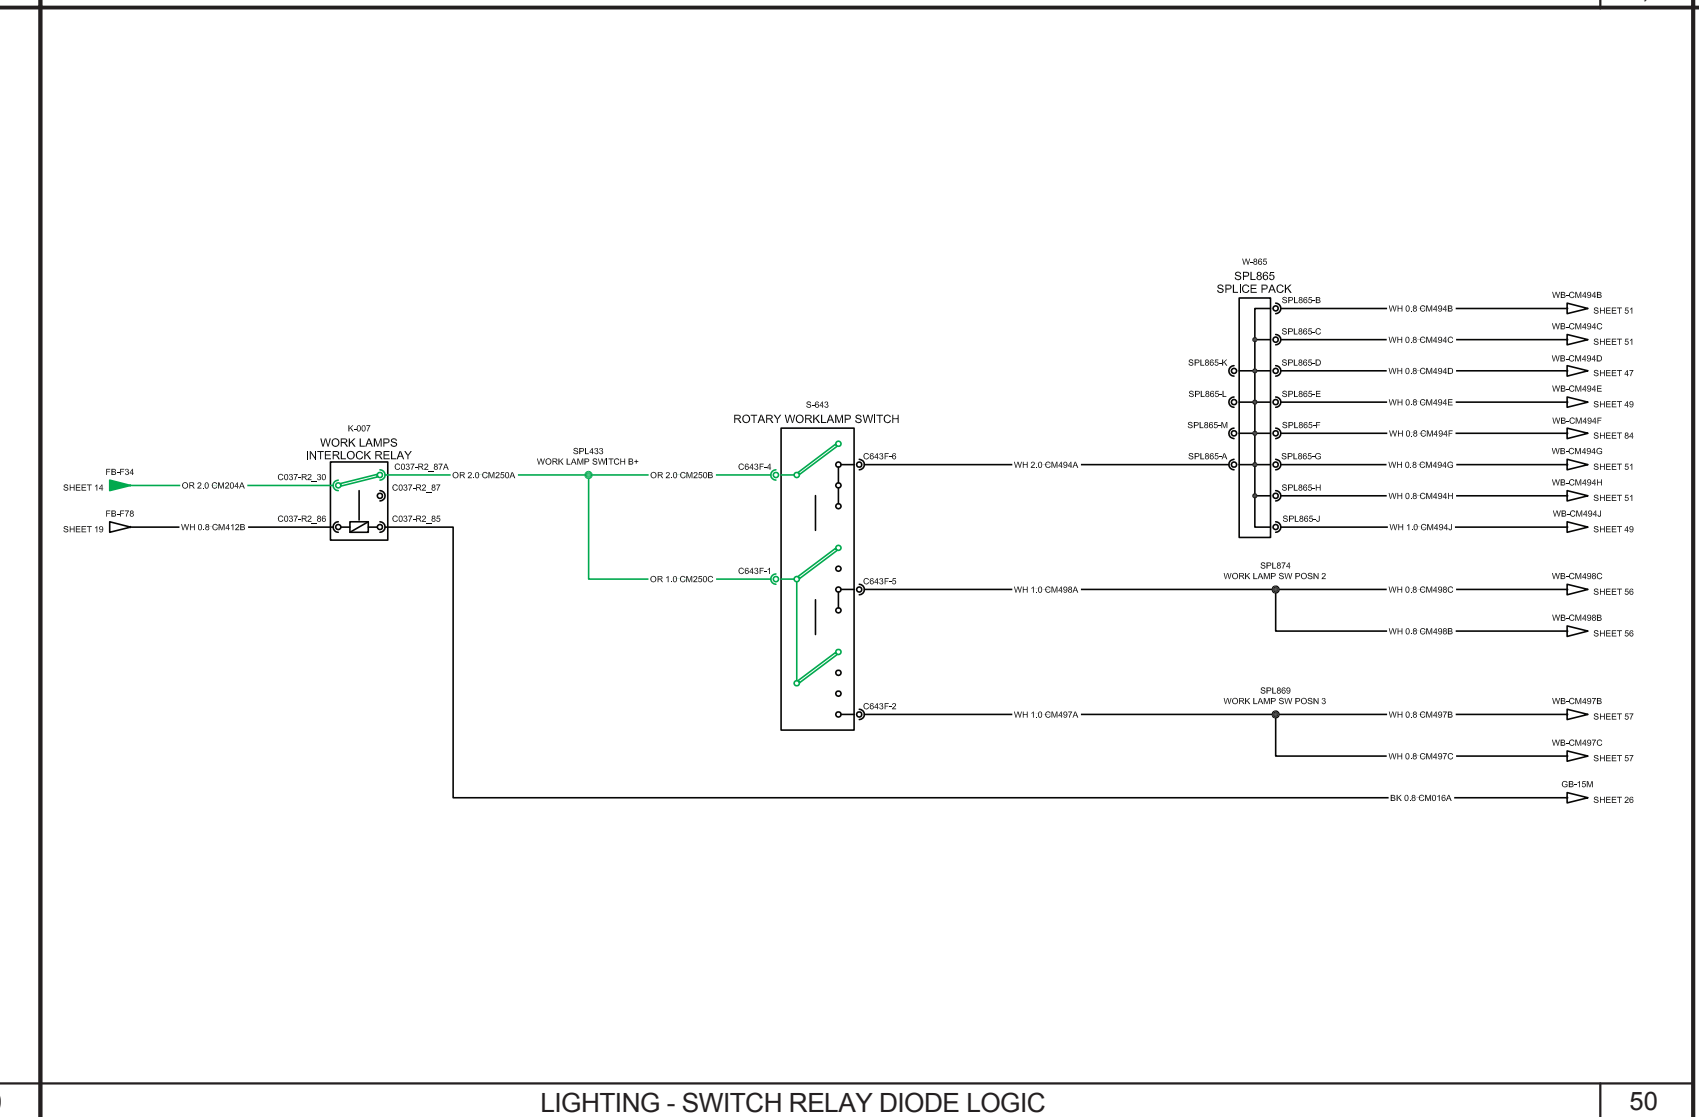           Product: New Holland T9.435,T9.480,T9.530,T9.565, T9.600, T9.645 AND T9.700 TRACTOR SERIES ELECTRICAL SCHEMATIC Manual Full Download: https://www.arepairmanual.com/downloads/new-holland-t9-435t9-480t9-530t9-565-t9-600-t9-645-and-t9-700-tractor-series-electrical-schematic-manual/ 			
ENGINE - TIER2 C13 TST EDC1735	ENGINE - TIER2 C13 TST EDC1735	TCU CONTROLLER - POWER AND GROUND37	TCU CONTROLLER - POWER AND GROUND38
			
TCU CONTROLLER - TRANSMISSION39	TCU CONTROLLER - FNRP INTERFACE40	TCU CONTROLLER - BRAKING41	TCU CONTROLLER - MISCELLANEOUS42
		SHEETS 45 AND 46 ARE BLANK	
TCU CONTROLLER - IMPLEMENT CONTROLS43	HYDRAULIC - EHR VALVES44	45,46	
BLANK SHEET			T9.435, T9.480, T9.530, T9.565, T9.600, T9.645 AND T9.700 TRACTOR SERIES ELECTRICAL SCHEMATIC RAC 47740980 LEGEND - INDICATES CONSTANT POWER - INDICATES POWER WHEN KEY SWITCH IS ON - INDICATES POWER WHEN KEY SWITCH IS IN START POSITION - INDICATES 24 VOLT CIRCUIT
48		LIGHTING - SWITCH RELAY DIODE LOGIC49	50