

T4020, T4030, T4040, T4050 DELUXE/SUPERSTEER REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL	2
SECTION 10 - ENGINE	2
SECTION 18 - CLUTCH	5
SECTION 21 - GEAR TRANSMISSION	6
SECTION 23 - DRIVE LINES	9
SECTION 25 - FRONT AXLE MECHANICAL TRANSMISSION	10
SECTION 27 - REAR AXLE MECHANICAL TRANSMISSION	13
SECTION 31 - MECHANICAL POWER TAKE-OFF	15
SECTION 33 - BRAKING SYSTEM	16
SECTION 35 - HYDRAULIC SYSTEMS	17
SECTION 41 - STEERING	24
SECTION 44 - AXLES AND WHEELS	26
SECTION 50 - CAB AIR CONDITIONING SYSTEM	27
SECTION 55 - ELECTRICAL SYSTEM	29
SECTION 90 - CAB	50

The following pages are the collation of the contents pages from each section and chapter of the T4020, T4030, T4040, T4050 Deluxe and SuperSteer Repair manual. Complete Repair part # 84158071.

The sections used through out all New Holland product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the T4020, T4030, T4040, T4050 Deluxe and SuperSteer Tractors.

Sample of manual. Download All 1838 pages at:

<https://www.arepairmanual.com/downloads/new-holland-t4020-t4030-t4040-t4050-deluxe-and-supersteer-service-repair-manual/>

SECTION 00 - GENERAL

BOOK 1 - 84158072

Chapter 1 - General

CONTENTS

Section	Description	Page
	General Instructions	3
	Health and Safety	5
	Precautionary Statements	15
	Safety	16
	Ecology and the Environment	19
	Minimum Hardware Tightening Torques	20
	Federal Emissions Warranty	22
	California Emission Control Warranty Statement	23
	Consumables	25

SECTION 10 - ENGINE

BOOK 1 - 84158072

Chapter 1 - Engine

CONTENTS

Section	Description	Page
10 000	Specifications	3
	Torque Settings	9
	Special Tools	11
	Sectional Views	12
	Description and Operation	16
	Exhaust Gas Recirculation System (EGR)	16
	Troubleshooting	17

SECTION 10 - ENGINE

BOOK 1 - 84158072

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
10 001 10	Overhaul	21
	Engine	21
	Removal	21
	Installation	32
10 001 54	Disassembly	34
	Assembly	48
	Checks, Measurements and Repairs	74
	Crankcase	74
	Crankshaft	77
	Connecting Rods	79
	Pistons	81
	Valves	84
	Camshaft	88
	Cylinder Head	89
	Low Oil Pressure Indicator	90
	Oil Filter	90
	Cooling System	91
10 102 70	Crankshaft Front Seal Replacement	92
	Removal	92
	Assembly	93
10 102 74	Crankshaft Rear Seal Replacement	94
	Removal	94
	Assembly	95
10 106 12	Valve/Rocker Arm	97
	Removal/Adjustment	97
	Installation	99
10 218 30	Injectors	100
	Removal	100
	Installation	102

SECTION 10 - ENGINE

BOOK 1 - 84158072

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
10 246 14	Bosch Injection Pump	103
	Removal	103
	Installation	104
	Timing	105
	Air Bleeding	107
10 402 10	Coolant Pump	108
	Removal	108
	Installation	110
10 402 30	Thermostatic Valve	111
	Removal	111
	Installation	112
10 406 10	Radiator	113
	Removal	113
	Installation	117
10 414 10	Coolant Pump and Generator Drive Belt	118
	Tension Adjustment	118

SECTION 10 - ENGINE

Chapter 2 - Engine (Models T4020 and T4030)

BOOK 1 - 84158072

CONTENTS

Section	Description	Page
	Specifications	2
	Overhaul	4
10 001 10	Engine	4
	Removal	4
	Installation	20

SECTION 18 - CLUTCH

BOOK 1 - 84158072

Chapter 1 - Clutch

CONTENTS

Section	Description	Page
18 000	Specifications	2
	Main Clutch - LUK 11"/11"	2
	Tightening Torques	3
	Special Tools	3
	Sectional Views	4
	Longitudinal Section of 11"/11" LUK Clutch	4
	Longitudinal Section of 11" LUK Clutch	5
	Troubleshooting	6
	Overhaul	7
18 110 10	Clutch	7
	Removal	7
	Installation	18
18 110 30	11"/11" Dual Disk Clutch	20
	Disassembly	20
	Assembly	24
18 110 30	Single Disk Clutch 11" (fitted with Power-shuttle)	25
	Disassembly	25
	Assembly	25
	Checks, Measurements and Repairs - Dual Disk Clutch	26
	Coplanarity Adjustment of 11"/11" Dual Clutch Release	27
	Coplanarity of 11" Single Plate Clutch Release Levers	28
18 100 40	Gear Clutch Control Adjustments	29
	PTO Clutch Control Adjustments	30
	Sectional Views	31
	Description and Operation	32
	Engaging the PTO Control Clutch	32
	Disengaging the PTO Control Clutch	33
	PTO Clutch Servo Control Adjustment	34
	Adjusting the PTO Engaged Switch	35

SECTION 21 - GEAR TRANSMISSION

BOOK 1 - 84158072

Chapter 1 - Mechanical Transmission

CONTENTS

Section	Description	Page
21 000	Specifications	2
	Torques	3
	Special Tools	5
	Sectional Views	9
	Description and Operation	13
	Gearbox and Shuttle	13
	Creeper Unit	13
	Troubleshooting	13
	Overhaul	15
21 118 10 & 12	Rear Transmission - Gearbox Casing	15
	Removal	15
	Installation	21
21 118 85	Gearbox Transmission Casing	23
	Disassembly	23
	Assembly	31
	Transmission - Gearbox Casing	33
	Gearbox Driving and Driven Shafts End Float Adjustment	33
21 130 10	Gearbox Control Lever	35
	Removal	35
	Installation	35
21 130 11	Range Gear Control Lever	36
	Removal	36
	Installation	36
21 130 52	Shuttle Control Lever	37
	Removal	37
	Installation	37
10 216 10	Fuel Tank	38
	Removal	38
	Installation	39

SECTION 21 - GEAR TRANSMISSION

BOOK 1 - 84158072

Chapter 2 - Mechanical Transmission and Splitter

CONTENTS

Section	Description	Page
21 000	Specifications	2
	Torques	2
	Special Tools	2
	Sectional Views	3
	Description and Operation	6
	Gearbox and Shuttle	6
	Creeper Unit	6
	Splitter	6
	Troubleshooting	7
	Overhaul	8
21 160 31	Splitter Device and Creeper Unit Gearbox, Shafts and Bearings	8
	Removal	8
	Installation	11

SECTION 21 - GEAR TRANSMISSION

BOOK 1 - 84158072

Chapter 3 - Power Shuttle Transmission with HI LO Function

CONTENTS

Section	Description	Page
21 100	Specifications	2
	Torques	4
	Special Tools	5
	Sectional Views	8
	Clutch Control Pressure Test	11
	Description and Operation	13
	Gearbox and Shuttle	13
	Creeper Unit	13
	Power Shuttle Unit	13
	Troubleshooting	13
	Overhaul	14
21 118 85	Gearbox Transmission Casing	14
	Disassembly	14
	Assembly	16
21 134 46	Power Shuttle Control Valve	16
	Disassembly	16
	Assembly	19
21 134 62	Accumulator	20
	Disassembly	20
	Assembly	20
21 134 70	Gearbox Control Valve Solenoid Valve	21
	Removal	21
	Installation	21
21 134 70	Gearbox Control Valve Solenoid Valve	22
	Removal	22
	Installation	22
21 154 34 & 60	Clutch Casing	23
	Disassembly	23
	Assembly	27

SECTION 21 - GEAR TRANSMISSION

BOOK 1 - 84158072

Chapter 4 - Power Shuttle Transmission (8 + 8 and 16 + 16 versions)

CONTENTS

Section	Description	Page
21 000	Specifications	2
	Torques	3
	Sectional Views	4
	Description and Operation	7
	Clutch Control Pressure Test	7

SECTION 23 - DRIVE LINES

BOOK 2 - 84158073

Chapter 1 - Drive Lines

CONTENTS

Section	Description	Page
23 000	Specifications	2
	Bolt Torques	3
	Special Tools	4
	Sectional Views	6
	Description and Operation	9
	4WD Drive Gear with Electrohydraulic Coupling	9
	Drive Gear Housing	10
	Troubleshooting	10
	Overhaul	11
23 101 26	Transmission Shafts and Guard (Supersteer Models)	11
	Disassembly	11
	Assembly	13
23 101 26	Propeller Shafts and Guard (Models T4040 / T4050 Deluxe)	13
	Disassembly	13
	Assembly	14

SECTION 23 - DRIVE LINES

BOOK 2 - 84158073

Chapter 1 - Drive Lines (Continued)

CONTENTS

Section	Description	Page
23 101 40		
23 202 50	Drive Gear Housing Assembly	14
	Removal	14
	Assembly	15
42 23 101	Drive Gear Housing Removed	16
	Disassembly	16
	Assembly	17
23 202 52	Removal	18
	Installation	19

SECTION 25 - FRONT AXLE MECHANICAL TRANSMISSION

BOOK 2 - 84158073

Chapter 1 - Front Axle Mechanical Transmission (Model T4040 Supersteer and T4050 Supersteer)

CONTENTS

Section	Description	Page
25 000	Specifications	3
	Torques	5
	Special Tools	8
	Sectional Views	11
	Description and Operation	14
	Front Differential Lock	15
	Troubleshooting	16
	Overhaul	17
25 100 30	Front Axle Assembly	17
	Removal	17
	Installation	20

SECTION 25 - FRONT AXLE MECHANICAL TRANSMISSION

BOOK 2 - 84158073

Chapter 1 - Front Axle Mechanical Transmission (Model T4040 Supersteer and T4050 Supersteer) (Continued)

CONTENTS

Section	Description	Page
25 102 15	Bevel Drive and Front Axle Differential Housing	21
	Removal	21
	Installation	25
25 102 20	Front Axle Bevel Drive Overhaul	26
	Disassembly	26
	Assembly	27
	Bevel Drive Adjustments	28
	Adjusting the Preloading on the Bevel Drive Shaft Bearings	28
	Determining the Thickness of the Drive Pinion Position Adjustment Shim	29
	Adjustment of the Crown Wheel Bearings and Checking the Backlash Between the Pinion and Crown Wheel	31
25 102 24	Front Axle Differential	35
	Adjustment	35
25 104 34	Front Differential Lock Clutch Unit	36
	Disassembly	36
	Assembly	38
25 108 30	Front Epicyclic Final Drive with Brake	39
	Disassembly	39
	Assembly	41
	Wheel Hub Seal Replacement	42
	Removal	42
	Installation	43
25 108 30	Front Epicyclic Final Drive	43
	Removal	43
	Installation	45
25 108 38	Wheel Hubs and Steering Knuckle	47
	Removal	47
	Installation	47
25 108 46 or 47	Steering Knuckle Pins and Bearings	49
	Replacement	49
44 511 80	Leading Drive Wheels Toe-in Check	50

SECTION 25 - FRONT AXLE MECHANICAL TRANSMISSION

BOOK 2 - 84158073

Chapter 2 - Front Axle Mechanical Transmission (Model T4040 Deluxe and T4050 Deluxe)

CONTENTS

Section	Description	Page
25 000	Specifications	3
	Torques	5
	Tools	7
	Sectional Views	9
	Description and Operation	10
	Front Axle Pivot	10
	Front Differential Lock	11
	Troubleshooting	12
	Overhaul	13
25 100 30	Front Axle Assembly	13
	Removal	13
	Installation	17
25 100 38	Disassembly	17
	Assembly	27
25 104 34	Front Differential Lock Clutch Unit	28
	Disassembly	28
	Assembly	29
25 108 46 or 47	Steering Knuckle Pins and Bearings	30
	Replacement	30
	Stub Axle Adjustment	31
	Bevel Drive Adjustments	33
	Adjusting the Preloading on the Bevel Drive Shaft Bearings	33
	Adjusting the Bevel Crown Wheel Bearings and Checking the Clearance Between the Sides of the Bevel Drive Teeth	37
25 102 24	Front Axle Differential	40
	Adjusting the Backlash Between the Teeth of the Sun and Planet Pinions	40
	LIM-SLIP Self-locking Differential Lock	41
	Operation	41
25 102 27	Removal	41
	Disassembly	42
	Assembly	42

SECTION 25 - FRONT AXLE MECHANICAL TRANSMISSION

BOOK 2 - 84158073

Chapter 2 - Front Axle Mechanical Transmission (Model T4040 Deluxe and T4050 Deluxe) (Continued)

CONTENTS

Section	Description	Page
44 511 80	Leading Drive Wheels Toe-in Check	43
25 108 30	Front Epicyclic Final Drive	44
	Removal	44
	Installation	45
25 108 30	Front Epicyclic Final Drive with Brake	46
	Disassembly	46
	Assembly	48

SECTION 27 - REAR AXLE MECHANICAL TRANSMISSION

BOOK 2 - 84158073

Chapter 1 - Rear Axle Mechanical Transmission

CONTENTS

Section	Description	Page
27 000	Specifications	2
	Torques	3
	Special Tools	5
	Sectional Views	9
	Description and Operation	11
	Hydraulically Controlled Rear Differential Lock	11
	Rear Transmission	12
	Troubleshooting	12
	Overhaul	14

SECTION 27 - REAR AXLE MECHANICAL TRANSMISSION

BOOK 2 - 84158073

Chapter 1 - Rear Axle Mechanical Transmission (Continued)

CONTENTS

Section	Description	Page
27 106 16	Rear Transmission Gearbox	14
	Disassembly	14
	Assembly	18
27 110 10	Adjusting the Position of Differential Lock Engagement Sleeve	21
	Adjusting the Bevel Gear Pair	22
	Adjusting the Bevel Crown Wheel Bearings and Checking the Clearance Between the Sides of the Bevel Drive Teeth	22
	Adjustment of the Clearance Between the Sun and Planet Pinion Teeth	23
27 120 10 or 20	Right-hand or Left-hand Final Drive Casing Assembly	25
	Removal	25
	Installation	27
27 120 34	Drive Wheel Shaft	28
	Disassembly	28
	Assembly	30
27 120 32	Epicyclic Final Drive	30
	Removal	30
	Installation	30

SECTION 31 - MECHANICAL POWER TAKE-OFF

BOOK 2 - 84158073

Chapter 1 - Mechanical Power Take-off

CONTENTS

Section	Description	Page
31 000	Specifications	2
	Special Tools	4
	Bolt Torques	5
	Sectional Views	7
	Description and Operation	9
	Mechanical PTO	9
	PTO Controlled Directly from the Engine Clutch	9
	PTO Synchronized with Gearbox (Mechanically Controlled Models)	10
	PTO Synchronized with Gearbox Power-Shuttle/Dual Command (2 Speed Power Shift) Models	10
	Selecting the Speed with the Lever	11
	Power Take-off Two or Three Speed Selection from the Driving Seat (On Request)	11
	Troubleshooting	11
	Overhaul	12
31 112 20	Mechanical PTO	12
	Removal	12
	Installation	15

SECTION 33 - BRAKING SYSTEM

BOOK 3 - 84158074

Chapter 1 - Braking System

CONTENTS

Section	Description	Page
33 000	Specifications	2
	Torques	3
	Sectional Views	4
	Special Tools	6
	Description and Operation	7
	Service Brakes	7
	Park Brake	7
	Troubleshooting	8
	Overhaul	9
33 202 60	Right or Left Hand Brake	9
	Removal	9
	Installation	9
33 202 46	Brake Hydraulic Pump	11
	Removal	11
	Installation	14
	Service Brakes Control Pedals	15
	Stroke Adjustment (Tractors with Cabs)	15
33 202 04	Brake Hydraulic System	17
	Air Bleeding	17
33 110 40 & 44	Parking Brake Disks	19
	Removal	19
	Installation	20
33 110 08	Hand Brake Control	21
	Stroke Adjustment	21
	Adjusting the Parking Brake ON Switch	21

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 84158074

Chapter 1 - Rear Mechanical Hydraulic Lift

CONTENTS

Operation	Description	Page
	Specifications	2
	Torques	3
	Special Tools	5
	Sectional Views	7
	Description and Operation	12
	Troubleshooting	16
	Overhaul	17
35 110 40	Lift Internal Controls	17
	Disassembly	17
	Assembly	21
	Lift Adjustments	22
	Position Control	22
	Upper Stroke Limit Adjustment	24
	Draft Control	26
35 110 08	Rod Mechanism Adjustments	30
	Position Control Rod	30
	Draft Control Rod	30
	Fast Raise/Lower Device Adjustments	31
	Lift Arm Descent Speed Adjustments	32
	Upper Stroke Limit Adjustment Check	33
	Upper Stroke Limit Adjustment of the Fast Raise/Lower Device	34
35 110 42	Arm Shaft and Lift Cylinder	35
	Disassembly	35
	Assembly	37
35 114 14	Lift Control Valve	39
	Disassembly	39
	Assembly	44
35 114 30	Lift Pressure Relief Valve	45
	Removal	45
35 114 32	Setting	45

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 84158074

Chapter 2 - Open Center System Auxiliary Control Valves

CONTENTS

Operation	Description	Page
	Specifications	2
	Special Tools	2
	Torques	2
	Sectional Views	3
	Description and Operation	5
	General	5
	Lifting	5
	Neutral	5
	Lowering	5
	Float (Only Available on Control Valve li)	5
	Operating Stages of Auxiliary Control Valve for Operation of a Double-acting Cylinder and Single-acting Cylinder	6
	Double-acting Cylinder	6
	Single-acting Cylinder	6
	Operating Stages of Auxiliary Control Valve for the Operation of a Single/Double-acting Cylinder with Automatic Detent Release and Float	7
	Lifting	7
	Lowering	8
	Float Operation	8
	Overhaul	9
35 130 30	Lift Electronic Control Center (Replacement)	9
	Removal	9
	Installation	10
35 204 46	Auxiliary Control Valves	10
	Disassembly	10
	Testing	11
	Adjustment of the Automatic Detent Release Pressure	13

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 84158074

Chapter 3 - Trailer Brake Auxiliary Control Valve

CONTENTS

Operation	Description	Page
	Description and Operation	2
	Fault Finding	9
33 220 40	Trailer Brake Valve	12
	Removal	12
	Installation	12

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 84158074

Chapter 4 - Electronically Controlled Hydraulic Lift

CONTENTS

Section	Description	Page
35 000	Electronically Controlled Hydraulic Lift Data	2
	Electronically Controlled Hydraulic Lift Data	4
	Implement Hitching Device Data	4
	Bolt Torques	5
	Special Tools	5
	Description and Operation	14
	Electronically Controlled Hydraulic Lift Operation	14
	Neutral Phase	14
	Lifting Phase	16
	Lowering Phase	18
35 110 30	Electronically Controlled Hydraulic Lift	20
	Removal	20
	Installation	25
35 110 53	Draft Sensor Support	26
	Removal-Installation (With Lift Removed)	26
35 130 30	Lift Electronic Control Center	27
	Replacement	27

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 84158074

Chapter 4 - Electronically Controlled Hydraulic Lift (Continued)

CONTENTS

Section	Description	Page
35 130 36	Lift Arm Potentiometer	28
	Replacement	28
35 130 56	Draft Sensor	30
	Removal-Installation	30
35 134 42	Electronically Controlled Hydraulic Lift	32
	Disassembly-Assembly	32
	Cylinder Safety Valve Calibration	37
35 138 20	Hydraulic Control Valve	38
	Removal-Installation	38
35 138 24	Hydraulic Control Valve	39
	Disassembly-Assembly	39
	Inspection and Re-fitting	41

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 84158074

Chapter 5 - Non-stop Flow Gear Pump

CONTENT

Operation	Description	Page
	Specifications	2
	Torque	3
	Description and Operation	3
	Sectional Views	3
	Overhaul	5
35 104 30	Lift Oil Pump Models C42, Bosch 25	5
	Disassembly	5
	Assembly Procedure	6

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 84158074

Chapter 6 - Front Power Take-off and Electronic Lift (For T4040 Supersteer And T4050 Supersteer Models)

CONTENTS

Operation	Description	Page
	Main Specifications of Front Electronic Lift	2
	Main Specifications of Electronically Controlled Front Lift	3
	Implement Hitching Device Data	4
	Bolt Torques	5
	Electromagnetically Engaged Front Lift and Power Take-off	12
	Description and Operation	12
	Front Lift	13
	Operation Controls	13
	Adjustments	13
	Front Power Take Off	14
	Driving	14
	Implement Attachment and Power Take-off	15
	Lift Arms	15
	Front Lift Troubleshooting	18
31 140 30	Front Power Take-off Transmission Shaft R.I.	20
31 140 34	Front Power Take-off Drive Shaft D.A.	30
31 140 43	Front Power Take-off Electromagnetic Coupler R.I.	32
31 140 46	Front Power Take-off Electromagnetic Coupler D.A.	35
31 162 52	Front Lift Support R.I.	40

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 84158074

Chapter 7 - Front Lift and Power Take-off (For Models T4030 Deluxe, T4040 Deluxe and T4050 Deluxe)

CONTENT

Operation	Description	Page
	Specifications	3
	Torque Values	5
	Front PTO	5
	Front Lift	6
	Sectional Views	7
	Description and Operation	9
	Front Power Take Off	9
	Front Mechanical Lift	13
	Front Electronic Lift	14
	Safety Switch	14
	Lift Arm Automatic Raise Switch	14
	Lift Arm Down Speed Control Potentiometer	15
	Lift Arm Up Limit Control Potentiometer	15
	Working Depth Control Potentiometer	15
	Pressure/Mixed/Position Control Potentiometer	15
	Lift Arm Up/Down Switch On The Dashboard	16
	Lift Arm Up/Down Switches On The Right-hand Mudguard	16
	External Lift Arm Up/Down Switches	16
	Lift Arms Position Sensor	16
	Accumulator Control Valve	19
	Neutral Phase	20
	Lifting Phase	21
	Lowering Phase	22
	Front Electronic Lift Operating Instructions	23
	Position Control	23
	Pressure Test	24
	Smooth Ride Control	26

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 84158074

Chapter 7 - Front Lift and Power Take-off (For Models T4030 Deluxe, T4040 Deluxe and T4050 Deluxe) (Continued)

CONTENT

Operation	Description	Page
	Calibration	27
	Front Lift	27
	Implement Weight Calibration	27
	Calibrating The Lift Arms Height Sensor	28
	Troubleshooting	30
	Overhaul	32
	Front Lift (Mechanical/Electronic)	32
	Removal - Installation	32
	Front Power Take-off	34
	Removal - Installation	34
	Front Power Take-off	36
	Disassembly	36
	Assembly	37
35 160 52	Front Electronic Lift Control Unit	38
	Removal	38
	Installation	38
35 160 40	Front Electronic Lift Control Valve	39
	Removal	39
	Installation	39
	Fault Code Identification	40
	Fault Code Decoding	40

SECTION 41 - STEERING

BOOK 4 - 87758544

Chapter 1 - Steering

CONTENTS

Operation	Description	Page
	Specifications	3
	Torques	3
	Special Tools	3
	Description and Operation	4
	Operation	4
	Neutral Position	4
	Right-hand Steering Control B, R-HT, E, F	4
	Left-hand Steering Control B, L-HT	6
	Emergency Hydraulic Control C, ER-HT, EL-HT	6
	Cylinder Safety Valve and Backflow Valve	6
	Sectional Views	7
	Troubleshooting	8
	Overhaul	10
41 204 10	Hydrostatic Steering Wheel	10
	Removal	10
	Installation	10
41 204 30	Hydrostatic Steering Control Valve	11
	Removal	11
	Installation	14
41 204 34	Hydrostatic Steering Control Valve	15
	Disassembly	15
	Assembly	30
41 204 38	Power Steering Control Valve - Bench Testing	35
	Checking Rotating Valve Wear	35
	Test Conditions	35
	Checking Return to Neutral Position	37
	Seal Check	37
	Pressure Relief Valve Calibration	37
	Cylinder Safety Valve Calibration	37
	Checking the Hydrostatic Steering Pressure Relief Valve with Control Valve Installed on Tractor	38

SECTION 41 - STEERING

BOOK 4 - 87758544

Chapter 1 - Steering (Continued)

CONTENTS

Operation	Description	Page
41 216 10	Steering Control Cylinder (Models T4040 Supersteer and T4050 Supersteer)	38
	Removal	38
	Installation	39
41 216 18	Disassembly	40
	Assembly	41

SECTION 41 - STEERING

BOOK 4 - 87758544

Chapter 2 - Non-stop Flow Gear Pump

CONTENTS

Operation	Description	Page
	Specifications	2
	Torque	3
	Components	4
	Description and Operation	5
	Troubleshooting	5
	Overhaul	6
41 206 20	Hydrostatic Steering Oil Pump (A31 XRP 2 Pump Model)	6
	Disassembly	6
	Assembly Procedure	7

SECTION 44 - AXLES AND WHEELS

BOOK 4 - 87758544

Chapter 1 - Axles and Wheels

CONTENTS

Section	Description	Page
44 000	Specifications	2
	Specifications	3
	2WD Front Wheel Track Diagram	3
	Torque	4
	Torque	5
	Sectional Views	7
	Special Tools	8
	Troubleshooting	8
	Overhaul	9
44 101 22	Front Axle Hub	9
	Disassembly	9
	Assembly	11
44 101 30	Front Axle	12
	Removal	12
	Installation	15
44 101 46	Stub Axle	16
	Removal	16
	Installation	19
44 511 80	Checking the Alignment of the Leading Wheels	21

SECTION 50 - CAB AIR CONDITIONING SYSTEM

BOOK 4 - 87758544

Chapter 1 - Cab Air Conditioning System

CONTENTS

Operation	Description	Page
	Safety	4
	Description of Operation	5
	Start Up	5
	Adjustment	5
	Switching Off	5
	Special Tools	6
	Specifications	6
	Operating Principles	7
	Simplified Psychrometric Diagram	7
	Main Components of Cab Air Conditioning System	8
	Compressor	9
	Condenser	10
	Dryer Filter	10
	Thermostatic Expansion Valve	11
	Evaporator	12
	Thermostatic Switch (ANTI-FROST)	12
	Cab Heating and Ventilation Controls	13
	Ventilation	13
	Electric Fan	13
	Heating	14
	Air Filter	14
	Ignition Switch	14
	Cab Air Conditioning and Temperature Controls	15
	Air Conditioning and Temperature Control Button	15
	Heater Control Knob	15
	3-Speed Electric Fan Control Knob	15
50 200 03	Function and Cooling Testing	16
	Pressure Variations at Different Altitudes	17
	Maintenance of the Air Conditioning System	18
	Air Conditioning System Fault Diagnosis Summary	19
	Visual Inspection of Components	19

SECTION 50 - CAB AIR CONDITIONING SYSTEM

BOOK 4 - 87758544

Chapter 1 - Cab Air Conditioning System (Continued)

CONTENTS

Operation	Description	Page
	Refrigerant Recovery-recycling and Evacuation-charging Stations	20
	Recovery and Recycling Station (294048)	20
	Recycling, Evacuation and Charging Station (380000315)	21
50 200 04	Drying, Recharging and Refrigeration Check	22
	Recovery of Refrigerant from the Cab Air Conditioning System Using the Recovery/Recycling Station 294048	22
	Recycling of Recovered Refrigerant	23
	Discharge of Recovered Oil	24
	Transfer of Decontaminated Refrigerant From Cylinder (19) to an External Cylinder	24
	Evacuation and Charging the Cab Air Conditioning System Using the Recycling, Evacuation and Charging Station 380000315	24
	Evacuation of the Graduated Cylinder (31) of the Evacuation/Charging Station	24
	Charging the Graduated Cylinder (31) of the Evacuation/Charging Station	24
	Evacuation of the Cab Air Conditioning System (Previously Discharged Using the Recover/Recycling Station)	26
	Charging the Cab Air Conditioning System (After Evacuation) With New Oil	26
	Charging the Cab Air Conditioning System With Refrigerant (After Evacuation)	26
	Summary of the Air Conditioning System Charging Operations	27
50 200 06	Checking for and Removing Gas Leaks	29
	Testing for Leaks With Leak Detector 380000314	29
	Checking for Refrigerant Leaks Using an Electronic Leak Detector	30
	Leak Detector (380000314)	30
	Use	30
	Refrigerant Gas Leak Test	30
	Service	30
50 200 10	Compressor Drive Belt Tension Adjustment	31
	Fitting the Compressor Drive Belt	31
	Checking Compressor Drive Belt Tension	31
	Periodic Checking of Drive Belt	32
	Troubleshooting	33
	Overhaul	37

SECTION 50 - CAB AIR CONDITIONING SYSTEM

BOOK 4 - 87758544

Chapter 1 - Cab Air Conditioning System (Continued)

CONTENTS

Operation	Description	Page
50 206 14	Cab Air Infeed Vents	37
	Removal	37
	Installation	37
50 206 51	Cab Heating/Air Conditioning System	38
	Removal	38
50 206 51	Installation	39
50 206 54	Cab Heating Unit	40
	Disassembly	40
	Assembly	41
50 206 56	Cab Air Conditioning System Evaporator Unit	41
	Disassembly	41
	Assembly	42
50 206 66	Cab Fan Unit	42
	Disassembly	42
	Assembly	43

SECTION 55 - ELECTRICAL SYSTEM

BOOK 4 - 87758544

Chapter 1 - Instrument Panel

CONTENTS

Section	Description	Page
55 100	Instrument Cluster Description	2
	Digital Instrument Cluster	2
	Warning and Indicator Lights	3
	Digital Control Panel Indicators	4
	Transmitters, Sensors & Switches - Locations	7
	Transmitters, Sensors & Switches - Descriptions	13

SECTION 55 - ELECTRICAL SYSTEM

BOOK 4 - 87758544

Chapter 2 - Components

CONTENTS

Section	Description	Page
	Description of Components	2
	Central Console Panel	2
	Rev Counter/Hourmeter	3
	Digital Display	3
	Engine Coolant Temperature Gauge	3
	Fuel Gauge	3
	Multifunction Display	4
	Controls on Right-hand Cab Upright	5
	Key-start Ignition Switch	5
	Maintenance	6
	Bulb/Lamp Replacement	6
	Front Work Lights	6
	Swivel Work Light Bulbs	6
	Front Side and Indicator Light Bulbs	7
	Tail Lights, Brake Lights and Direction Indicator Lamp Bulb Replacement (Versión Without Cab)	7
	License Plate Light Bulb Replacement	8
	Cab Front and Rear Work Lights	8
	Rear Sidelights, Brake and Direction Indicator Light Bulbs Replacement	8
	Replacing the Courtesy Light and Adjustable Reading Light	9
	Courtesy Light	9
	Adjustable Reading Lamp	9
	Work Light Bulb	9