

T5040, T5050, T5060, T5070 REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL	2
SECTION 10 - ENGINE	3
SECTION 18 - CLUTCH	5
SECTION 21 - TRANSMISSIONS	6
SECTION 23 - DRIVE LINES	11
SECTION 25 - FRONT AXLE MECHANICAL TRANSMISSION	12
SECTION 27 - REAR MECHANICAL TRANSMISSION	13
SECTION 31 - POWER TAKE-OFF	15
SECTION 33 - BRAKING SYSTEM	17
SECTION 35 - HYDRAULIC SYSTEMS	19
SECTION 41 - STEERING	27
SECTION 44 - AXLES AND WHEELS	29
SECTION 50 - CAB AIR CONDITIONING SYSTEM	30
SECTION 55 - ELECTRICAL SYSTEM	33
SECTION 90 - BODYWORK AND DRIVING POSITION	57

The following pages are the collation of the contents pages from each section and chapter of the T5040, T5050, T5060, T5070 Repair manual. Complete Repair part # 84195945.

The sections used through out all New Holland product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the T5040, T5050, T5060, T5070 Tractors.

SECTION 00 - GENERAL

BOOK 1 - 87758575

Chapter 1 - General

CONTENTS

Section	Description	Page
	General Instructions	3
	Health and Safety	5
	Precautionary Statements	15
	Safety	16
	Ecology and the Environment	19
	Minimum Hardware Tightening Torques	20
	Federal Emissions Warranty	22
	California Emission Control Warranty Statement	23
	Consumables	25

SECTION 10 - ENGINE

BOOK 1 - 87758575

Chapter 1 - Engine

CONTENTS

Section	Description	Page
	Specifications	3
	Torques	7
	Special Tools	10
	Sectional View	11
	Troubleshooting	12
	Overhaul	16
	Engine	16
	Removal	16
	Installation	36
	Crankshaft Front Seal	38
	Removal	38
	Installation	40
	Crankshaft Rear Seal	41
	Removal	41
	Installation	42
	Valve Tappet and Rocker Arm Clearance	43
	Adjustment	43
	Assembly	45
	Engine Injector	46
	Removal	46
	Installation	48
	Bosch Injection Pump	49
	Removal	49
	Installation	53
	Injector Pump	54
	Disassembly	54
	Assembly	56
	Bosch Injection Pump	59
	Fuel Circuit Air Bleeding	59
	Coolant Pump	60
	Removal	60
	Installation	61

SECTION 10 - ENGINE

BOOK 1 - 87758575

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
	Thermostat Valve	62
	Removal	62
	Installation	63
	Radiator	64
	Removal	64
	Installation	71
	Coolant Pump and Generator Drive Belts	72
	Adjusting Tension	72

SECTION 18 - CLUTCH

BOOK 1 - 87758575

Chapter 1 - Clutch

CONTENTS

Section	Description	Page
	Specifications	2
	Torques	3
	Special Tools	3
	Sectional Views	4
	Longitudinal Section of 12" LUK Clutch	4
	Electrohydraulic Power Take-off	4
	Longitudinal Section of 12"/12" LUK Clutch	4
	Mechanical Power take-off	4
	Longitudinal Section Through Flexible Coupling	5
	Power Shuttle Unit	5
	Troubleshooting	6
	Checks, Measurements and Repairs	7
	12"/12" Dual Clutch	7
	Main Transmission Clutch Release	9
	Adjustment	9
	Clutch	10
	Removal	10
	Installation	11
	Dual Clutch 12"/12"	12
	Test Bench Overhaul and Adjustment	12
	Coplanarity Adjustment of Dual Clutch Release Levers	16
	Single Disk Clutch	17

SECTION 21 - TRANSMISSIONS

BOOK 1 - 87758575

Chapter 1- Shuttle

CONTENTS

Section	Description	Page
	Specifications	2
	Transmission Diagrams	3
	Torques	4
	Special Tools	5
	Sectional Views	5
	Description and Operation	9
	Troubleshooting	9
	Overhaul	10
	Clutch-reverser Casing	10
	Disassembly	10
	Assembly	14

SECTION 21 - TRANSMISSIONS

BOOK 1 - 87758575

Chapter 2 - Reverser and Creeper Unit

CONTENTS

Section	Description	Page
	Specifications	2
	Transmission Diagrams	3
	Torques	4
	Special Tools	5
	Sectional Views	7
	Description and Operation	11
	Troubleshooting	11
	Overhaul	12
	Reverser-clutch Casing and Creeper Unit	12
	Disassembly	12
	Assembly	17
	Installation	18
	End Float Adjustment Between Gearbox Main Shaft and Clutch Casing Output Shaft Synchronizer Support	19

SECTION 21 - TRANSMISSIONS

BOOK 1 - 87758575

Chapter 3 - Power Shuttle Transmission - Version 12 X 12

CONTENTS

Section	Description	Page
	Specifications	3
	Transmission Diagrams	5
	Torques	6
	Special Tools	9
	Sectional Views	11

SECTION 21 - TRANSMISSIONS

BOOK 1 - 87758575

Chapter 3 - Power Shuttle Transmission - Version 12 X 12 (Continued)

CONTENTS

Section	Description	Page
	Description and Operation	15
	Speed Transmission	15
	Power Shuttle Unit	15
	Main Hydraulic Circuit	16
	Power Shuttle Transmission Lubrication Circuit	16
	Power Shuttle Transmission - Clutch A At Rest / Engaged	16
	Diagrams	17
	Overhaul	21
	Range and Gear Position Sensor Adjustment	21
	Gear Lever Status Switch	21
	Range Lever Status Switches	21
	Adjustment Check	22
	Clutch Casing With Power Shuttle	23
	Disassembly	23
	Assembly	28
	Driving Shaft	29
	Disassembly	29
	Main Shaft Removal	30
	Clutch A	30
	Disassembly	30
	Replacing the Seal on the Clutch Casing Internal Hub	33
	Assembly	33
	Clutch B	38
	Disassembly - Assembly	38
	Calibration	40
	Fault Codes	40
	HH Menu Access	40
	Clutch Calibration H1 Menu Transmission	42
	Transmission Fault Codes	45

SECTION 21 - TRANSMISSIONS

BOOK 1 - 87758575

Chapter 4 - Power Shuttle Transmission With Dual Command (2 Speed Power Shift) Function

CONTENTS

Section	Description	Page
	Specifications	3
	Transmission Diagrams	5
	Bolt Torques	6
	Special Tools	8
	Sectional Views	10
	Description and Operation	15
	Speed Transmission	15
	Power Shuttle Unit	15
	Dual Command (2 Speed Power Shift) Unit	15
	Diagrams	16
	Overhaul	22
	Range and Gear Position Sensor Adjustment	22
	Gear Lever Status Switch	22
	Range Lever Status Switches	22
	Adjustment Check	23
	Clutch Casing With Power Shuttle Unit and Dual Command (2 Speed Power Shift) Functions	24
	Removal	24
	Installation	33
	Clutch Casing With Power Shuttle and Dual Command (2 Speed Power Shift) Units	36
	Disassembly	36
	Assembly	43
	Driving Shaft	45
	Disassembly	45
	Assembly	46
	Driven Shaft	46
	Disassembly	46
	Assembly	48
	Clutch	49
	Disassembly	49
	Assembly	52

SECTION 21 - TRANSMISSIONS

BOOK 1 - 87758575

Chapter 4 - Power Shuttle Transmission With Dual Command (2 Speed Power Shift) Function (Continued)

CONTENTS

Section	Description	Page
	Clutch B	56
	Disassembly - Assembly	56
	Calibration	57
	Fault Codes	57
	HH Menu Access	57
	Clutch Calibration H1 Menu Transmission	59
	Transmission Fault Codes	62
	Fault Code Descriptions	63

SECTION 23 - DRIVE LINES

BOOK 2 - 84195946

Chapter 1 - Drive Lines

CONTENTS

Section	Description	Page
	Specifications	2
	Torques	3
	Special Tools	4
	Sectional Views	5
	Description and Operation	6
	Electro-hydraulically Engaged Drive Gear	6
	Troubleshooting	7
	Overhaul	8
	Services Control Valve	8
	Removal	8
	Installation	11
	Services Control Valve (For Tractors Without Power Shuttle)	12
	Disassembly	12
	Assembly	13
	Drive Gear Assembly	14
	Removal	14
	Installation	19
	Drive Gear Housing Removed	20
	Disassembly	20
	Assembly	24

SECTION 25 - FRONT AXLE MECHANICAL TRANSMISSION

BOOK 2 - 84195946

Chapter 1 - Front Axle Mechanical Transmission

CONTENTS

Section	Description	Page
	Specifications	3
	Torques	7
	Special Tools	10
	Sectional Views	12
	Description and Operation	17
	LIM-SLIP Self-locking Differential Operation	17
	Front Differential Lock	18
	Rules for Correctly Installing the Axle Support to the Engine	19
	Troubleshooting	20
	Overhaul	21
	Front Axle	21
	Removal	21
	Installation	24
	Disassembly	25
	Assembly	34
	Front Axle Differential	36
	Overhaul	36
	Front Axle Differential with LIM-SLIP Unit	37
	Removal	37
	Disassembly	38
	Assembly	38
	Front Axle Differential Lock Clutch Assembly	39
	Overhaul	39
	Front Epicyclic Final Drive without Brake	41
	Disassembly	41
	Assembly	42
	Front Epicyclic Final Drive with Brake	44
	Disassembly	44
	Assembly	46
	Wheel Hub Seal with Brake	46
	Replacement	46
	Stub Axle Adjustments	47

SECTION 25 - FRONT AXLE MECHANICAL TRANSMISSION

BOOK 2 - 84195946

Chapter 1 - Front Axle Mechanical Transmission (Continued)

CONTENTS

Section	Description	Page
	Pinion and Crown Wheel Adjustments	49
	Adjusting the Bevel Pinion Shaft Bearing Preload with Shims	49
	Adjusting the Bevel Crown Wheel Bearings and Checking the Clearance Between the Sides of the Bevel Drive Teeth	51

SECTION 27 - REAR MECHANICAL TRANSMISSION

BOOK 2 - 84195946

Chapter 1 - Rear Axle Mechanical Transmission

CONTENTS

Section	Description	Page
	Specifications	3
	Torques	6
	Special Tools	8
	Sectional Views	13
	Description and Operation	19
	Hydraulically Controlled Rear Differential Lock	19
	Troubleshooting	20
	Overhaul	22
	Rear Gearbox - Transmission Casing	22
	Removal	22
	Installation	36
	Disassembly	39
	Assembly	46

SECTION 27 - REAR MECHANICAL TRANSMISSION

BOOK 2 - 84195946

Chapter 1 - Rear Axle Mechanical Transmission (Continued)

CONTENTS

Section	Description	Page
	Gearbox Transmission Casing	49
	Gearbox Driving Shaft End Float Adjustment	49
	Adjusting the Position of Differential Lock Engagement Sleeve	50
	Pinion and Crown Wheel Adjustments	51
	Determining the Bevel Pinion Positioning Adjustment Ring	51
	Adjusting the Bevel Gear Pair	53
	Tapered Roller Bearings Adjustment for Pinion Shaft	53
	Adjusting the Bevel Crown Wheel Bearings and Checking the Clearance Between the Bevel Drive Teeth	54
	Bevel Drive Adjustments	57
	Adjusting the Preloading on the Bevel Drive Bearings	57
	Adjustment of the Clearance Between the Sun and Planet Pinion Teeth	59
	Differential Lock Control Pedal Stroke	61
	Adjustment	61
	Final Drive Casing	61
	Removal	61
	Installation	64
	Epicyclic Final Drive	65
	Disassembly	65
	Drive Wheel Shaft	66
	Disassembly	66
	Assembly	67

SECTION 31 - POWER TAKE-OFF

BOOK 2 - 84195946

Chapter 1 - Mechanical Power Take-off

CONTENTS

Section	Description	Page
	Specifications	2
	Special Tools	3
	Torques	4
	Sectional Views	5
	Description and Operation	10
	Mechanical PTO	10
	PTO Controlled Directly from the Engine Clutch	10
	PTO Synchronized With Gears	11
	Selecting the Speed With the Lever	11
	Cooling System	14
	Troubleshooting	14
	Overhaul	15
	Power Take-off Housing	15
	Removal	15
	Installation	18
	Mechanical Power Take-off Shafts	19
	Disassembly	19
	Assembly	22

SECTION 31 - POWER TAKE-OFF

BOOK 2 - 84195946

Chapter 2 - Electro-Hydraulic PTO

CONTENTS

Section	Description	Page
	Specifications	2
	Torques	5
	Special Tools	6
	Sectional Views	7
	Description and Operation	15
	Electrohydraulic PTO	15
	PTO Independent Electro-hydraulically Controlled Power Take-off (Directly by Flywheel)	15
	Selecting the Speed with the Lever	17
	PTO Synchronized to Gearbox	19
	Rod (4) in the PTO Synchronized with Gearbox Position	20
	540 - 1000 Rpm Electrohydraulic PTO "NASO" Version	21
	540 Rpm PTO with Electrohydraulic Engagement	21
	Hydraulic System	22
	Additional PTO Controls for Cab-version Tractors with Power Shuttle Transmissions ..	25
	External Controls on Mudguards (If Installed)	25
	Modulating Function Selection (If Installed)	26
	Rear PTO Fault Codes	26
	Troubleshooting	27
	Overhaul	28
	Power Take-off Clutch Brake	28
	Removal	28
	Installation	30
	Electro-Hydraulic Power Take-off Housing	30
	Removal	30
	Installation	33
	Disassembly	35
	Assembly	42
	Cooling System	44

SECTION 33 - BRAKING SYSTEM

BOOK 3 - 87758577

Chapter 1 - Braking System

CONTENTS

Section	Description	Page
	Specifications	2
	Torques	3
	Sectional Views	4
	Description and Operation	6
	Service Brakes	6
	Service Brake on Front Axle	6
	Parking Brake	6
	Pilot Valve Operation	8
	Brakes at Rest	8
	Braking Applied on Just One Pedal	8
	Braking Applied on Both Brake Pedals	8
	Troubleshooting	9
	Overhaul	10
	Hand Brake Control	10
	Travel Adjustment	10
	Parking Brake Casing	10
	Disassembly	10
	Assembly	12
	Brakes Hydraulic System	13
	Air Bleed	13
	Tractor Equipped with Hydraulic Trailer Braking Valve	14
	Tractor Equipped with Braking on the Front Axle	14
	Tractor Equipped with Pneumatic Trailer Braking Valve	15
	Service Brake Pump	16
	Removal	16
	Installation	17
	Adjusting the Height of the Service Brakes Pedals	17
	Right or Left Brake	18
	Removal	18
	Installation	21

SECTION 33 - BRAKING SYSTEM

BOOK 3 - 87758577

Chapter 2 - Pneumatic Trailer Brakes

CONTENTS

Section	Description	Page
	Specifications	2
	Torques	3
	Special Tools	3
	Sectional Views	4
	Description and Operation	8
	Brakes Disengaged	8
	Dual Line Braking System	8
	Single Line Braking System	8
	Brakes Engaged	9
	Dual Line Braking System	9
	Single Line Braking System	9
	Description Air Brake Circuit Components	10
	Compressor	10
	Antifreeze Pump	11
	Pressure Regulating Valve	11
	Dual Line Control Valve	11
	Pressure Switch	12
	Tank	13
	Single Line Control Valve	13
	Black Connection	14
	Red / Yellow Connection	14
	ADIC Dashboard	14
	Troubleshooting	16
	Tests and Adjustments	17
	Pressure Testing	17
	Tractor Preparation	17
	Pre-test Procedure	17
	Test	18
	Hand Brake Control Cable Adjustment	19
	Leak Test	19
	Brake Pedal Test Procedure	20
	Pressure Regulator ON/OFF Test Procedure	20

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 87758577

Chapter 1 - Rear Mechanical Hydraulic Lift

CONTENTS

Section	Description	Page
	Specifications	3
	Torques	8
	Special Tools	10
	Sectional Views	11
	Description and Operation	13
	Hydraulic Lift Circuit	13
	Arm Lift Phase	14
	Neutral Phase	15
	Arm Lower Phase	16
	Troubleshooting	17
	Overhaul	19
	Lift Oil Pump	19
	Disassembly - Assembly With Pump Removed to Replace the Seal Kit	19
	Fast Raise/Lower Control	21
	Disassembly - Assembly	21
	Linkage Adjustments	22
	Position Control Rod Adjustments	22
	Draft Control Rod Adjustments	23
	Fast Raise/Lower Device Adjustments	24
	Adjustment of the Upper Stroke Limit of the Fast Raise/Lower Device	25
	Rear Lift External Controls	26
	Disassembly - Assembly	26
	Rear Lift	27
	Removal	27
	Installation	34
	Rear Hydraulic Lift	35
	Disassembly	35
	Assembly	38
	Lift Adjustments	41
	Adjusting Position Control	41
	Lift Arms Maximum Raise Position Adjustment	43
	Adjusting Draft Control	44

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 87758577

Chapter 1 - Rear Mechanical Hydraulic Lift (Continued)

CONTENTS

Section	Description	Page
	Lift Control Valve	49
	Removal	49
	Installation	50
	Disassembly	51
	Assembly	56
	Lift Pressure Relief Valve	57

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 87758577

Chapter 2 - Open Center System Auxiliary Control Valves

CONTENTS

Section	Description	Page
	Specifications	2
	Special Tools	2
	Torques	3
	Sectional Views	4
	Description and Operation	7
	Operation	7
	Lifting	7
	Neutral	7
	Lowering	7
	Float	7
	Operating Stages of Auxiliary Control Valve for Operation of a Single-acting Cylinder	8
	Lifting	8
	Lowering	8
	Operating Stages of Auxiliary Control Valve for Operation of a Double-acting Cylinder	8
	Lifting	8
	Lowering	9
	Operating Stages of Auxiliary Control Valve for the Operation of a Single/ Double-acting Cylinder with Automatic Detent Release and Float	9
	Lifting	9
	Lowering	10
	Float Operation	10
	Overhaul	11
	Auxiliary Control Valves	11
	Disassembly	11
	Assembly	12
	Valve Leakage Test	14
	Adjustment of the Automatic Detent Release Pressure	14

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 87758577

Chapter 3 - Remote Control Auxiliary Control Valves (BOSCH)

CONTENTS

Section	Description	Page
	Specifications	3
	Torques	4
	Special Tools	5
	Sectional Views	6
	Description and Operation	11
	Operation	11
	Lifting	11
	Neutral	11
	Lowering	11
	Float Mode	11
	Flow Control Valve Adjustment	11
	Flow Control Valve	11
	Load Check Valve	11
	Lockout Valve	11
	Control Valve Pin	11
	Pin Centering and Automatic Release Mechanism	11
	Lifting Oil Flow (Cylinder Extension)	13
	Lowering Oil Flow (Cylinder Retraction)	15
	Oil Flow In Neutral	16
	Float Mode Oil Flow	17
	Automatic Release Pressure Regulating Valve Operation	18
	Operation of Two or More Auxiliary Control Valves Simultaneously	19
	Troubleshooting	21
	Overhaul	23
	Auxiliary Control Valves	23
	Disassembly	23
	Assembly	26
	Disassembly - With the Unit Removed	27
	Assembly	31
	Connecting Plate	31
	Disassembly - Assembly	31

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 87758577

Chapter 3 - Remote Control Auxiliary Control Valves (BOSCH) (Continued)

CONTENTS

Section	Description	Page
	Quick Coupler Maintenance	33
	Introduction	33
	Maintenance Operations	33

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 87758577

Chapter 4 - Trailer Brake Auxiliary Control Valve

CONTENTS

Section	Description	Page
	Description and Operation	2
	Trailer Brakes Off	5
	Start of Braking	5
	Braking	6
	Troubleshooting and Testing	11
	Trailer Brake Valve - Italia Version	11
	Troubleshooting	11
	Testing the Setting of the Trailer Brake System Pressure Control Valve Incorporated in the Trailer Brake Control Valve	12
	Troubleshooting	12
	Testing the Hydraulic System for Leakage	12
	Troubleshooting	12
	Checking that Trailer Brake Release Pressure is Nullified When the Parking Brake is Applied	13
	Troubleshooting	13
	Check Calibration on Switches	14
	Troubleshooting	14

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 87758577

Chapter 5 - Supplementary Cylinder

CONTENTS

Section	Description	Page
	Specifications	2
	Sectional Views	2
	Description and Operation	2
	Overhaul	3
	Supplementary Cylinder	3
	Removal - Installation	3
	Disassembly - Assembly	3

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 87758577

Chapter 6 - Electronically Controlled Hydraulic Lift

CONTENTS

Section	Description	Page
	Specifications	3
	Electronically Controlled Hydraulic Lift	3
	Torques	6
	Special Tools	6
	Sectional Views	7
	Description and Operation	10
	EDC Control Mouse	10
	Position Control Lever	10
	Draft Control Ring	10
	Lift, Lower, Fast Ground Entry Button (Fast Raise/Lower)	10
	Position Lever Adjustment Knob	11

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 87758577

Chapter 6 - Electronically Controlled Hydraulic Lift (Continued)

CONTENTS

Section	Description	Page
	Setting Potentiometers Panel	11
	Sensitivity Adjustment Potentiometer	11
	Lowering Speed Adjustment Potentiometer	11
	Height Limit Potentiometer	12
	Slip Limit Setting Potentiometer	12
	Indicator Light Panel	12
	Slip Lamp	12
	Lift Disabled / Failure Warning Light	13
	Arms Lifting and Lowering Warning Lights	13
	Position Mode	13
	Draft Mode	14
	Float Mode	15
	Lift Restoration	15
	Smooth Ride Device	16
	Neutral Phase	17
	Lifting Phase	18
	Lowering Phase	19
	Fault Finding	20
	Lift Fault Codes	20
	Lift Arms Position Display	21
	Transmission Fault Codes Listing	22
	Calibrations	23
	Fault Codes	23
	HH Menu Access	23
	Calibration H1 Menu Lift	25
	Pre-test Procedure	25
	Arm Position Control Potentiometer Calibration	26
	Solenoid Valve Calibration	28
	Overhaul	30
	Transmission, Lift and Services Electronic Control Unit	30
	Disassembly	30
	Assembly	33

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 87758577

Chapter 6 - Electronically Controlled Hydraulic Lift (Continued)

CONTENTS

Section	Description	Page
	EDC Control Mouse, Indicator Light Panel and Ceiling Light	34
	Removal	34
	Installation	36
	Setting Potentiometers Panel	36
	Removal	36
	Installation	38
	Lift Arm Potentiometer	38
	Removal	38
	Installation	39
	Draft Sensor	39
	Removal	39
	Installation	40
	Electronic Draft Control	41
	Removal	41
	Installation	47
	Hydraulic Control Valve	48
	Removal	48
	Installation	49

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 87758577

Chapter 7 - Ventral Control Valves for Walvoil-type Open Center System

CONTENTS

Section	Description	Page
	Specifications	2
	Torques	3
	Sectional Views	5
	Description and Operation	20
	Ventral Control Valve Joystick	20
	Joystick Operation	21
	2nd Control Valve Regenerating Function Disabling Bush	22
	Ventral Control Valve	23
	Operation in the Neutral Phase	24
	Operation 1st Control Valve in Lowering Phase	29
	Operation 1st Control Valve in Floating Phase	29
	Operation 1st Control Valve in Lifting Phase	29
	Operation 2nd Control Valve in Lifting Phase	30
	Operation 2nd Control Valve in Regenerating Phase	30
	Operation 2nd Control Valve in Lowering Phase	30

SECTION 41 - STEERING

BOOK 4 - 87758578

Chapter 1 - Steering

CONTENTS

Section	Description	Page
	Specifications	3
	Torques	6
	Special Tools	6
	Sectional Views	7

SECTION 41 - STEERING

BOOK 4 - 87758578

Chapter 1 - Steering (Continued)

CONTENTS

Section	Description	Page
	Description and Operation	10
	Balancing Valve Components (2WD)	10
	Operation	11
	Neutral Position	11
	Steering To Right	12
	Steering To the Left	12
	Manual Turning To the Right	12
	Manual Turning to the Left	12
	Troubleshooting	13
	Overhaul	15
	Hydrostatic Steering Control Valve	15
	Removal	15
	Installation	20
	Hydrostatic Steering Control Valve With Control Valve Removed	21
	Disassembly	21
	Assembly	27
	Hydrostatic Steering Control Valve	39
	Bench Test	39
	Checking Rotating Valve Wear	39
	Checking Return to Neutral Position	40
	Seal Check	40
	Pressure Relief Valve Calibration	40
	Checking the Hydrostatic Steering Pressure Relief Valve With Control Valve Installed on Tractor	40
	Power Steering Oil Pump	42
	Disassembly - Assembly With Pump Removed to Replace the Seal Kit	42
	Front Axle Steering Cylinder (4WD)	43
	Removal - Installation	43
	Front Axle Steering Cylinder (2WD)	45
	Removal - Installation	45

SECTION 44 - AXLES AND WHEELS

BOOK 4 - 87758578

Chapter 1 - Axles and Wheels

CONTENTS

Section	Description	Page
	Specifications	2
	2WD Front Wheel Track Diagram	3
	Torques	4
	Sectional Views	6
	Special Tools	7
	Troubleshooting	7
	Overhaul	8
	Front Axle Hub	8
	Disassembly	8
	Assembly	10
	Front Axle	11
	Removal	11
	Installation	14
	Stub Axle	14
	Removal	14
	Installation	17
	Checking 2WD Front Wheel Camber and Toe-in	18
	Checking 4WD Front Wheel Alignment	19

SECTION 50 - CAB AIR CONDITIONING SYSTEM

BOOK 4 - 87758578

Chapter 1 - Cab Air Conditioning System

CONTENTS

Section	Description	Page
	Safety	4
	Specifications	5
	Special Tools	6
	Description and Operation	7
	Main Components of the Air Conditioning System	9
	Compressor	9
	Condenser	10
	Receiver/Dryer	10
	Thermostatic Expansion Valve	11
	Thermostatic Switch - DEFROST	12
	Evaporator	13
	Cab Heating and Ventilation Controls	14
	Ventilation	14
	Electric Fan	14
	Air Filter	15
	Heating	15
	Temperature Control Knob (1)	15
	Ignition Switch	15
	Cab Air Conditioning Controls	16
	Air Conditioning and Temperature Control Knobs	16
	Heater Control Knob	16
	3-speed Electric Fan Control Knob	16
	Instructions for Use	17
	Start Up	17
	Adjustment	17
	Switching Off	17
	Air-conditioning System Recovery - Recycling - Evacuation - Charging Station (380000315)	17
	Meaning	17