

TD5030, TD5040 TD5050 SERVICE MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL	2
SECTION 10 - ENGINE	2
SECTION 18 - CLUTCH	7
SECTION 21 - TRANSMISSIONS	8
SECTION 23 - DRIVE LINES	10
SECTION 25 - FWD FRONT AXLE	10
SECTION 27 - REAR AXLE AND TRANSMISSION	12
SECTION 31 - POWER TAKE-OFF	13
SECTION 33 - BRAKING SYSTEM	14
SECTION 35 - HYDRAULIC SYSTEM	15
SECTION 41 - STEERING	18
SECTION 44 - FRONT AXLE AND WHEELS (2WD)	20
SECTION 50 - CAB AIR CONDITIONING SYSTEM	21
SECTION 55 - ELECTRICAL SYSTEM	23
SECTION 90 - PLATFORM, CAB, BODYWORK AND DECALS	28

The following pages are the collation of the contents pages from each section and chapter of the TD5030, TD5040, TD5050 Service manual. Complete Service part # 84221704.

The sections used through out all New Holland product Service manuals may not be used for each product. Each Service manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Service manual and which sections are in each book.

The sections listed above are the sections utilized for the TD5030, TD5040, TD5050 Tractors.

SECTION 00 - GENERAL

BOOK 1 - 84221705

Chapter 1 - General

CONTENTS

Section	Description	Page
	General Instructions	2
	Health and Safety	4
	Precautionary Statements	14
	Safety	15
	Ecology and the Environment	18
	Consumables	20

SECTION 10 - ENGINE

BOOK 1 - 84221705

Chapter 1 - Engine (F5C)

CONTENTS

Section	Description	Page
	Special Tools	2
	Troubleshooting	3
	Overhaul	7
10 001 10	Engine	7
	Removal	7
	Installation	22

SECTION 10 - ENGINE

BOOK 1 - 84221705

Chapter 2 - Engine (NEF)

CONTENTS

Section	Description	Page
	Specifications	5
	General	5
	Fuel System Data	8
	Crankcase/Cylinder Block Data	9
	Crankshaft and Bearings Data	9
	Connecting Rod Data	10
	Piston Data	10
	Valve Timing Gear Data	11
	Tappet Data	12
	Rocker Arm - Valve Data	12
	Cylinder Head Data	13
	Torques	14
	Torque Settings With Angle	15
	Special Tools	16
	Sectional Views	17
	Troubleshooting	22
	Overhaul	26
	Engine	26
	Removal	26
	Installation	42
	Disassembly	44
	Removing the Crankshaft Front Seal	47
	Removing the Crankshaft Rear Seal	48
	Engine Assembly on the Bench	58
	Installing the Bushings	58
	Installing the Tappets	59
	Installing the Camshaft	59
	Installing the Oil Nozzles	60
	Installing the Crankshaft	60
	Installing the Connecting Rod - Piston Assembly	63
	Installing the Piston Connecting Rod Assemblies in the Cylinder Liners	65

SECTION 10 - ENGINE

BOOK 1 - 84221705

Chapter 2 - Engine (NEF) (Continued)

CONTENTS

Section	Description	Page
	Big End Cap Assembly	66
	Installing the Thermostat Valve	67
	Installing the Cylinder Head	68
	Installing the Injectors	70
	Installing the Rocker Arm Assembly	71
	Installing the Timing Gear	71
	Installing the Injection Pump	74
	Installing the Additional Counterweights	75
	Installing the Hydraulic Pump Drive Gear	76
	Installing the Timing Gear Casing	76
	Installing the Crankshaft Rear Seal	77
	Installing the Flywheel	77
	Installing the Oil Pump	78
	Installing the Oil Sump	79
	Installing the Crankshaft Front Seal	79
	Installing the Crankshaft Front Pulley	79
	Installing the Cooling System Union	80
	Installing the Coolant Pump	80
	Installing the Fan-Alternator Pulley	81
	Installing the Auxiliary Member Drive Belt	82
	Installing the Exhaust Manifold - Turbine	83
	Installing the Injector Feed Pipes	83
	Install the Priming Pump - Feed Pipes	83
	Installing the Pipes Between the Fuel Supply and Injection Pumps, Pre-heating System and Tappet Cover	84
	Installing the Starter Motor	85
10 102 70	Crankshaft Front Seal Replacement	86
	Removal	86
	Installation	88
10 102 74	Crankshaft Rear Seal Replacement	89
	Removal	89
	Installation	90

SECTION 10 - ENGINE

BOOK 1 - 84221705

Chapter 2 - Engine (NEF) (Continued)

CONTENTS

Section	Description	Page
10 106 12	Valve-Rocker Arm Clearance	92
	Removal	92
	Installation	94
10 218 30	Engine Injector	95
	Removal	95
	Installation	96
10 246 14	Bosch Injection Pump	97
	Removal	97
	Installation	101
	Timing	103
	Fuel Circuit Air Bleeding	105
10 402 10	Coolant Pump	106
	Removal	106
	Installation	107
10 402 30	Thermostat Valve	108
	Removal	108
	Installation	109
10 406 10	Engine Radiator	110
	Removal	110
	Installation	114
10 414 10	Coolant Pump and Generator Drive Belts	115
	Adjusting Tension	115
	Checks, Measurements and Repairs	117
	Cylinder Block, Liners	117
	Checks and Measurements	117
	Crankshaft	120
	Connecting Rods	122
	Bushings	122
	Checking Connecting Rods	123
	Checking Twisting	123
	Checking Bending	124

SECTION 10 - ENGINE

BOOK 1 - 84221705

Chapter 2 - Engine (NEF) (Continued)

CONTENTS

Section	Description	Page
	Pistons	124
	Normal Dimensions (mm) Piston Data	124
	Measuring the Piston Diameter	125
	Piston Pins	126
	Conditions for Correct Pin-Piston Coupling	126
	Piston Rings	127
	Valves and Camshaft	129
	Valves	129
	Tappets	131
	Camshaft	132
	Cylinder Head	133
	Cylinder Head Mating Surface Check	133
	Cylinder Head Thickness	133
	Cylinder Head Hydraulic Seal Check	133
	Low Oil Pressure Indicator	134
	Functional Checks	134
	Oil Filter	134
	Replacement	134
	Cooling System	135
	Radiator - Flushing and Checks	135
	Coolant Thermometer - Testing	135
	Thermostat Valve - Replacement	135

SECTION 18 - CLUTCH

BOOK 1 - 84221705

Chapter 1 - Clutch

CONTENTS

Section	Description	Page
	Specifications	2
	Torque	5
	Special Tools	6
	Sectional Views	7
	Longitudinal Section of Clutch LUK 11"/11" (Not For All Markets)	8
	Longitudinal Section of the LUK 12"/11" Clutch (Not For All Markets)	8
	Troubleshooting	9
	Overhaul	10
18 110 10	Clutch	10
	Removal	10
	Installation	21
	Checks and Adjustments	22
	Dimensional Checks - Including Disassembly and Assembly	22
	Minimum Permissible Dimensions After Refacing Parts Subject to Wear for VALEO Clutches	26
	11"/11" Dual Clutches	26
	12"/12" Dual Clutches	26
	Adjusting the VALEO Clutch	27
18 100 40	Adjustment of the Main Clutch Control Linkage	29
	PTO Clutch Linkage Adjustment (VALEO Clutch)	30
	PTO Clutch Linkage Adjustment (LUK Clutch)	31
	Single Lever PTO (Not for all markets)	31
	PTO Clutch Linkage Adjustment (LUK Clutch)	31
	Single Lever PTO (Not for All Markets)	31

SECTION 21 - TRANSMISSIONS

BOOK 1 - 84221705

Chapter 1 - Mechanical Transmission (12 x 4)

CONTENTS

Section	Description	Page
	Specifications	2
	Torque	3
	Special Tools	5
	Sectional Views	7
	Description and Operation	10
	Troubleshooting	10

SECTION 21 - TRANSMISSIONS

BOOK 1 - 84221705

Chapter 2 - Reverser

CONTENTS

Section	Description	Page
	Specifications	2
	Synchronizer Reverser Main Data	2
	Gearbox Main Data	2
	Torque	3
	Special Tools	4
	Sectional Views	4
	Description and Operation	6
	Troubleshooting	6
	Synchronizer Reverser	6
	Overhaul	7
	Clutch/Reverser Casing	7
	Disassembly	7
	Assembly	11

SECTION 21 - TRANSMISSIONS

BOOK 1 - 84221705

Chapter 3 - Reverser and Creeper Unit

CONTENTS

Section	Description	Page
	Specifications	2
	Synchronizer Reverser-Creeper Unit Main Data	2
	Creeper Unit Main Data	2
	Gearbox Main Data	2
	Torque	3
	Special Tools	4
	Sectional Views	5
	Description and Operation	7
	Troubleshooting	7
	Overhaul	8
	Clutch Casing - Synchronizer Reverser and Creeper Unit	8
21 110 87	Disassembly	8
	Assembly	14

SECTION 23 - DRIVE LINES

BOOK 1 - 84221705

Chapter 1 - Drive Lines

CONTENTS

Section	Description	Page
	Specifications	2
	Drive Shaft	2
	Torque	3
	Special Tools	3
	Sectional Views	4
	Overhaul	5
	Transmission Shafts and Guard	5
	Disassembly	5
	Assembly	5
	Drive Gear Housing Assembly	6
	Removal	6
	Installation	8
	Transfer Box, Unit Removed	9
23 101 42	Disassembly	9
	Assembly	10

SECTION 25 - FRONT AXLE MECHANICAL TRANSMISSION

BOOK 2 - 84221706

Chapter 1 - Front Axle Mechanical Transmission

CONTENTS

Section	Description	Page
	Specifications	2
	Torques	4
	Special Tools	6
	Sectional Views	7
	Description and Operation	10

SECTION 25 - FRONT AXLE MECHANICAL TRANSMISSION

BOOK 2 - 84221706

Chapter 1 - Front Axle Mechanical Transmission (Continued)

CONTENTS

Section	Description	Page
	Limited-Slip, Self-locking Differential Lock	10
	Operation	10
	No Spin Differential (Optional)	11
	Operation	12
	Overhaul	13
	Complete Front Axle	13
25 100 30	Removal	13
	Installation	17
	Front Axle	18
25 100 38	Removal	18
	Installation	29
25 108 46 or 25 108 47	Steering Knuckle Pins and Bearings	30
	Replacement	30
	Adjustments	31
	Stub Axle Adjustment	31
	Wheel Hub Bearing Adjustment	33
	Bevel Drive Adjustments	34
	Adjustment of the Preload of the Pinion Shaft Bearings	34
	Determining the Thickness of the Drive Pinion Position Adjustment Shim	35
	Adjustment of the Crown Wheel Bearings and Checking the Backlash Between the Pinion And Crown Wheel	36
25 102 24	Front Axle Differential Adjustment	39
	Front Axle Differential With Limited-Slip Unit	40
25 102 27	Removal	40
	Disassembly	40
	Installation	41
	Front Axle Differential With No Spin	42
25 102 26	Removal	42
	Disassembly	42
	Assembly	42
	Checking the Alignment of Steering Drive Wheels	43

SECTION 27 - REAR AXLE AND TRANSMISSION

BOOK 2 - 84221706

Chapter 1 - Rear Axle and Transmission

CONTENTS

Section	Description	Page
	Specifications	2
	Main Specifications of Final Drives	3
	Torque	4
	Special Tools	6
	Sectional Views	8
	Description and Operation	11
	Troubleshooting	11
	Bevel Gear Pinion and Differential	11
	Final Drives	11
	Overhaul	12
	Rear Transmission/Gearbox Case	12
21 118 10 - 21 118 12	Removal	12
	Installation	42
	Transmission/Gearbox Case	43
21 118 85	Removal	43
	Installation	48
	Adjustments	52
	Transmission/Gearbox Case	52
	Adjusting Gearbox Driving Shaft Axial Clearance	52
	Adjusting the Position of the Differential Lock Engagement Sleeve	54
	Bevel Gear Pair	55
	Determining the Bevel Pinion Positioning Adjustment Ring	55
	Adjusting the Taper-roller Bearings For Pinion Shaft	58
	Adjusting the Ring Bevel Gear Bearings and Checking the Clearance Between the Teeth of the Bevel Gear Pair	59
	Adjusting the Bevel Gear Pair	63
	Differential Pinion and Side Gear Backlash Adjustment	63
	Final Drive Removal	65
	Disassembly (Cover)	65
	Driven Gear Retaining Nut Removal	66
	Wheel Shaft Removal (Installation)	66
	Housing	67
	Disassembly	67
	Assembly	68

SECTION 31 - POWER TAKE-OFF

BOOK 2 - 84221706

Chapter 1 - Mechanical Power Take-off

CONTENTS

Section	Description	Page
	Specifications	2
	Torque	4
	Special Tools	5
	Sectional Views	6
	Description of Operation	11
	Mechanical PTO	11
	Independent PTO	11
	Ground Speed PTO	12
	PTO Speed Selector Lever	12
	Single Lever Power Take-Off - (Optional)	13
	Troubleshooting	13
	Overhaul	14
	540/750 Mechanical PTO	14
31 112 20	Removal	14
	Installation	17
31 112 45 - 31 112 48	Disassembly	18
	Assembly	21
	540/1000 Mechanical PTO/ Interchangeable PTO Shaft - N.A. Version)	22
31-114	Disassembly	22
	Assembly	27

SECTION 33 - BRAKING SYSTEM

BOOK 2 - 84221706

Chapter 1 - Braking System

CONTENTS

Section	Description	Page
	Specifications	2
	Torque	3
	Sectional Views	4
	Special Tools	8
	Description of Operation	8
	Service Brakes	8
	Parking Brake	8
	Troubleshooting	9
	Overhaul	10
	Service Brake	10
33 202 60	Removal	10
	Installation	14
	Hydraulic Front Brake Pump (Optional)	16
33 202 50	Removal	16
	Installation	19
	Hydraulic Brake Slave Cylinder	20
33 202 50	Removal	20
	Installation	20
	Hydraulic Front Brake System (Optional)	21
33 202 04	Air Bleeding	21
	Adjustments	23
	Service Brake Pedals	23
33 120 08	Adjusting the Height	23
	Hand Brake Control	24
33 110 08	Adjusting Travel	24

SECTION 35 - HYDRAULIC SYSTEM

BOOK 2 - 84221706

Chapter 1 - Rear Mechanical Hydraulic Lift

CONTENTS

Section	Description	Page
	Specifications	2
	Rear Mechanical Hydraulic Lift	2
	Main Specification of Implement Hitching Device	4
	Main Specification of Hydraulic Pump (All Models)	4
	Lift Hydraulic Pump (Optional) Data	5
	Torque	6
	Special Tools	7
	Sectional Views	8
	Description and Operation	10
	Hydraulic Lift Circuit	10
	Arm Lift Phase	11
	Neutral Phase	12
	Arm Lowering Phase	13
	Troubleshooting	14
	Overhaul	16
	Rear Hydraulic Lift Assembly	16
35 110 30	Removal	16
	Installation	23
35 110 40 - 35 110 42 - 35 110 46	Disassembly	24
	Assembly	27
	Adjusting the Lift	29
	Position Control	30
	Maximum Height of the Lift Arms	31
	Draft Control	33
35 110 08	Adjusting the Linkages	37
	Position Control Linkage	37
	Draft Control Linkage	38
	Lift-O-Matic Device	39
35 110 30	Lift Pressure Relief Valve	40
35 110 32	Calibration	40
	Lift Control Valve Block, Detached	42

SECTION 35 - HYDRAULIC SYSTEM

BOOK 2 - 84221706

Chapter 1 - Rear Mechanical Hydraulic Lift (Continued)

CONTENTS

Section	Description	Page
35 110 14	Disassembly	42
	Assembly	46
	Hydraulic Lift Control Oil Pump	47
35 0101 10	Disassembly	47
	Assembly	48

SECTION 35 - HYDRAULIC SYSTEM

BOOK 2 - 84221706

Chapter 2 - Open Center System Auxiliary Control Valves

CONTENTS

Section	Description	Page
	Specifications	2
	Special Tools	2
	Sectional Views	3
	Description of Operation	4
	Operating Stages of Auxiliary Control Valve for Operation of a Double-acting Cylinder With Automatic Detent Release and Float Position	4
	Float Control Operation	4
	Lifting	5
	Lowering	5
	Operating Stages of Auxiliary Control Valve for Operation of a Double-acting Cylinder	6
	Lifting	6
	Lowering	6
	Operating Stages of Auxiliary Control Valve for Operation of a Single-acting Cylinder	6
	Lifting	6
	Lowering	6

SECTION 35 - HYDRAULIC SYSTEM

BOOK 2 - 84221706

Chapter 2 - Open Center System Auxiliary Control Valves (Continued)

CONTENTS

Section	Description	Page
	Operating Stages of Auxiliary Control Valve Operating a Double-acting Cylinder With Automatic Detent Release	7
	Lifting	7
	Lowering	7
	Overhaul	8
	Convertible Single/Double-acting Auxiliary Control Valve	8
	Disassembly - Assembly (valves removed from tractor)	8
	Convertible Single/Double-acting Auxiliary Control Valve With Float Control and Detent Release	9
	Disassembly - Assembly	9
	Double-acting Auxiliary Control Valve With Float Control and Automatic Detent Release	18
	Disassembly - Assembly	18
	Spool Binding Test	18
	Control Valve Spool Binding Test	18
	Spool Leakage Test	19
	Valve Leakage Test	19
	Adjustment of the Automatic Detent Release Pressure	20

SECTION 35 - HYDRAULIC SYSTEM

BOOK 2 - 84221706

Chapter 3 - Trailer Brake Auxiliary Control Valve

CONTENTS

Section	Description	Page
	Sectional Views	2
	Description and Operation	2
	Hydraulic Diagram of Trailer Brake Auxiliary Control Valve	3
	Description and Operation of Valve Phases	4
	Trailer Brakes Off	4
	Start of Braking	4
	Braking	5
	Trailer Brake Remote Control Valve Linkage Adjustment	7

SECTION 41 - STEERING

BOOK 3 - 84221707

Chapter 1 - Steering

CONTENTS

Section	Description	Page
	Specifications	2
	Torque	3
	Sectional Views	4
	Special Tools	7
	Description of Operation	8
	Neutral Position	8
	Steering to the Right	9
	Steering to the Left	9
	Steering to the Right Manually	9
	Steering to the Left Manually	9
	Troubleshooting	10

SECTION 41 - STEERING

BOOK 3 - 84221707

Chapter 1 - Steering (Continued)

CONTENTS

Section	Description	Page
	Overhaul	12
	Hydrostatic Steering Control Valve	12
41 204 30	Removal	12
	Installation	15
	Hydrostatic Steering Control Valve	15
41 204 34	Disassembly	15
	Assembly	22
	Bench Testing	33
	Checking the Hydrostatic Steering Pressure Relief Valve With Steering Control Valve Installed On Tractor	34
41 206 20	Hydrostatic Steering Oil Pump	35
	Disassembly	36
	Assembly	36
41 216 20	Front Axle Steering Cylinder (2WD)	37
	Removal - Installation	37
	Front Axle Steering Cylinder (FWD)	38
	Removal - Installation	38

SECTION 44 - FRONT AXLE AND WHEELS (2WD)

BOOK 3 - 84221707

Chapter 1 - Axle and Wheels

CONTENTS

Section	Description	Page
44 000	Specifications	2
	Tightening Torques	5
	Special Tools	6
	Troubleshooting	6
44 101 30	Overhaul	7
	Front Axle	7
	Removal	7
	Installation	9
44 101 22	Axle Wheel Hub	10
	Removal	10
	Installation	13
44 101 46	Stub Axle	17
	Removal	17
	Installation	19
44 101 80	Adjustments	21
	Toe-In	21

SECTION 50 - CAB AIR CONDITIONING SYSTEM

BOOK 3 - 84221707

Chapter 1 - Air Conditioning System

CONTENTS

Section	Description	Page
50 000	Safety	3
	Specifications	4
	Special Tools	5
	Description of Operation	6
	Cab Heating and Ventilation Controls	8
	Ventilation	8
	Fan	8
	Air Filter	8
	Heating	9
	Temperature Control Knob	9
	Ignition Switch	9
	Switching on the Air Conditioning and Temperature Control	10
	Air Conditioning and Temperature Control Button	10
	Heating Control Knob	10
	3-Speed Fan Control Knob	10
	Use of the Air Conditioning System	11
	Switching On the Air Conditioning	11
	Adjustment	11
	Switching Off the Air Conditioning System	11
	Components of the Air Conditioning System	12
	Compressor	12
	Condenser	13
	Receiver/Dryer	14
	Thermostatic Expansion Valve	15
	Air Conditioner Temperature Cycling Control Switch	16
	Thermostatic Switch (ANTIFROST)	16
	Evaporator	17
	Refrigerant Recovery-Recycling and Evacuation-Charging Stations	18
	Recovery and Recycling Station (380000559)	18
	Maintenance	18
	Evacuation/Charging Station (380000558)	19

SECTION 50 - CAB AIR CONDITIONING SYSTEM

BOOK 3 - 84221707

Chapter 1 - Air Conditioning System (Continued)

CONTENTS

Section	Description	Page
	Air Conditioning System	20
	Dehydration, Recharging and Refrigeration check	20
	Function Testing of Cab Air Conditioning System	25
	Summary of the Air Conditioning System Charging Operations	26
	Checking for Refrigerant Leaks Using an Electronic Leak Detector	28
	Maintenance of the Air Conditioning System	30
	Troubleshooting	31
	Overhaul	35
	Air Conditioning and Heating Pipes	35
	Removal	35
	Installation	38
	Receiver-Dryer	39
	Removal	39
	Installation	40
	Condenser	41
	Removal	41
	Installation	41
	Compressor	42
	Removal	42
	Installation	43
	Compressor Oil - Type and Quantity	43
	Adjustments	44
	Compressor Drive Belt	44
	Tension Adjustment	44
	Fitting the Compressor Drive Belt	44
	Checking Compressor Drive Belt Tension	44
	Periodic Checking of Drive Belt	44

SECTION 55 - ELECTRICAL SYSTEM

BOOK 3 - 84221707

Chapter 1 - Instrument Cluster

CONTENTS

Section	Description	Page
	Analog Instrument Panel	2
	Warning and Indicator Lights	3
	Fuel Level Gauge	3
	Proofmeter	4
	Engine Coolant Temperature Gauge	4
	Transmitters, Sensors and Switches	5
	Description	5
	Locations	6

SECTION 55 - ELECTRICAL SYSTEM

BOOK 3 - 84221707

Chapter 2 - Components

CONTENTS

Section	Description	Page
55 500	Introduction	2
	Electrical Components Description	2
	Instrument Console Controls	2
	Lights Control Lever	2
	Rear Hood Controls	2
	Starter Switch	2
	In-cab Controls	3
	Fender-Mounted Controls	3
	Heating and Air-conditioning Controls	4
	Radio	4

SECTION 55 - ELECTRICAL SYSTEM

BOOK 3 - 84221707

Chapter 3 - Starting System

CONTENTS

Section	Description	Page
	Specifications	2
	Torques	2
	Description and Operation	3
	Starting Circuit	5
	System Tests	7
	Starting System on Tractor Test	7
	Power Absorption in Starter Motor Circuit	7
	Resistance in Ignition System Circuit (Voltage Drop)	9
	Positive Battery Cable	9
	Starter Motor Earth (Ground)	9
	Battery Earth (Ground) Cable	9
10 201	Starter Motor	10
	Removal and Installation	10
	Overhaul	11
55 201 54	Disassembly	11
	Assembly	11
	Armature Shaft End Play	11
	Starter Motor Test Without Load	12
	Bench Tests	12
	Armature	12
	Field Windings	13
	Bearing Bushings	13
	Driving Pinion	13

SECTION 55 - ELECTRICAL SYSTEM

BOOK 3 - 84221707

Chapter 4 - Charging System

CONTENTS

Section	Description	Page
	Specifications	2
	Torque	2
	Description and Operation	3
	Alternator Functioning	4
	System Testing and Troubleshooting	5
	Precautions	5
	Checking the Battery	5
	Checking the Driving Belt	5
	Checking the Warning Light	6
	Preliminary Tests	6
	Alternator Wire Connections Test	7
	Charging Current and Regulated Voltage Tests	7
	Charging Circuit Voltage Drop Tests	8
	Maximum Alternator Output Test	9
	Alternator Component Tests	10
	Overhaul	11
55 301 10	Removal, Reassembly and Servicing	11
	Removing the Alternator	11
	Rotor and Regulator Field Circuit Test	13
	Checking the Continuity of Three Stator Windings	13
	Checking the Diodes	14
	Excitation Diodes Test	15
	Positive Power Diodes Test	15
	Negative Power Diodes Test	15
	Rotor	16
55 301 12	Disassembly	16
	Electronic Voltage Regulator	17
	Inductor Coil Insulation Test	18
	Check Rotor Inductor Resistance on Slip Rings	19
	Servicing	19
	Installation	20

SECTION 55 - ELECTRICAL SYSTEM

BOOK 3 - 84221707

Chapter 5 - Battery

CONTENTS

Section	Description	Page
55 000	Specifications	2
	Description and Operation	2
	Troubleshooting	3
	Discrepancy	3
	Probable Causes	3
	Overhaul	4
55 301 40	Battery	4
	Removal	4
	Installation	4
	Checks and Services	5
	Relative Density	5
	Servicing the Battery	5
	Dry Charged Batteries	6
	Battery Charging	6
	Normal Charging (Top Up)	6
	Charging Very Flat Batteries	6
	Testing	7
	Performance Tests	8

SECTION 55 - ELECTRICAL SYSTEM

BOOK 3 - 84221707

Chapter 6 - Electrical Circuits

CONTENTS

Section	Description	Page
	Description and Operation	2
	Electrical Diagram Symbols	2
	Electrical Wire Color Coding	3
	Ground Locations	3
	Fuses and Relays Main Box	7
	Fuses and Relay Box (Inside Cab)	8
	General Diagram - Center (With Cab)	9
	General Diagram - Center (Without Cab)	15
	Starting Circuit	21
	Connector Overview	23
	Direction Indicator and Hazard Warning Light Circuit	25
	Connector Overview	27
	Windscreen and Rear Window Wiper/Washer Circuit	31
	Connector Overview	33
	Brake Light Circuit	35
	Connector Overview	37
	Heating and Air-Conditioning System Circuit	41
	Connector Overview	43
	Work Lamp (Without Cab) Circuit	45
	Connector Overview	47
	Work Lamp (With Cab) Circuit	49
	Connector Overview	51
	Side Lights, Main and Dipped Headlights, Parking Light Circuit	53
	Connector Overview	55

SECTION 90 - PLATFORM, CAB, BODYWORK AND DECALS

BOOK 3 - 84221707

Chapter 1 - Cab

CONTENTS

Section	Description	Page
90 000	Overhaul	2
	Control Levers, Seat, Electrical Controls	2
	Disassembly	2
	Assembly	9
	Rear Window, Handle and Lock	10
	Disassembly	10
	Assembly	10
	Lock and Exterior Handle	11
	Disassembly	11
	Assembly	11
	LH Door	12
	Disassembly	12
	Assembly	12
	Front Wiper Motor	13
	Removal	13
	Installation	14
	Cab Windows	15
	Removal	15
	Installation	16
90 150 10	Cab	17
	Removal	17
	Installation	28

SECTION 00 - GENERAL

Chapter 1 - General

CONTENTS

Section	Description	Page
	General Instructions	2
	Health and Safety	4
	Precautionary Statements	14
	Safety	15
	Ecology and the Environment	18
	Consumables	20

GENERAL INSTRUCTIONS

IMPORTANT NOTICE

All maintenance and repair operations described in this manual should be carried out exclusively by the authorized workshops. All instructions detailed should be carefully observed and special equipment indicated should be used if necessary.

Everyone who carries out service operations described without carefully observing these directives will be directly responsible for resulting consequences.

SHIMMING

At each adjustment, select adjusting shims, measure them individually using a micrometer and then sum up recorded values. Do not rely on measuring the whole shimming set, which may be incorrect, or on the rated value indicated for each shim.

ROTATING SHAFT SEALS

To correctly install rotating shaft seals, observe the following instructions:

- Let the seal soak into the same oil as it will seal for at least half an hour before mounting;
- Thoroughly clean the shaft and ensure that the shaft working surface is not damaged;
- Place the sealing lip towards the fluid. In case of a hydrodynamic lip, consider the shaft rotation direction and orient grooves in order that they deviate the fluid towards the inner side of the seal;
- Coat the sealing lip with a thin layer of lubricant (oil rather than grease) and fill the gap between the sealing lip and the dust lip of double lip seals with grease;
- Insert the seal into its seat and press it down using a flat punch. Do not tap the seal with a hammer or a drift;

- Take care to insert the seal perpendicular to its seat while you are pressing it. Once the seal is settled, ensure that it contacts the thrust element, if required;
- To prevent damaging the sealing lip against the shaft, place a suitable protection during installation.

O RINGS

Lubricate the O rings before inserting them into their seats. This will prevent the O rings from roll over and twisting during mounting, which will jeopardize sealing.

SEALERS

Apply silicone/gasket eliminator over the mating surfaces marked with an X.

Before applying the sealer, prepare the surface as follows:

- remove possible scales using a metal brush;
- thoroughly degrease the surfaces using one of the following cleaning agents: trichlorethylene, diesel fuel or a water and soda solution.

BEARINGS

It is advisable to heat the bearings to 80° to 90°C (176° to 194°F) before mounting them on their shafts and cool them down before inserting them into their seats with external tapping.

SPRING PINS

When mounting split socket spring pins, ensure that the pin notch is oriented in the direction of the effort to stress the pin.

Spiral spring pins should not be oriented during installation.