

T1530 SERVICE MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL INFORMATION	2
SECTION 10 - ENGINE	3
SECTION 18 - CLUTCH	10
SECTION 21 - TRANSMISSION	12
SECTION 25 - FWD FRONT AXLE	14
SECTION 27 - DIFFERENTIAL, REAR AXLE	15
SECTION 29 - HYDROSTATIC TRANSMISSION	16
SECTION 31 - POWER TAKE-OFF (PTO) SYSTEMS	20
SECTION 33 - BRAKES	23
SECTION 35 - HYDRAULIC SYSTEM	23
SECTION 41 - STEERING	27
SECTION 44 - WHEELS AND TIRES	29
SECTION 55 - ELECTRICAL SYSTEM	30
SECTION 90 - PLATFORM	38

The following pages are the collation of the contents pages from each section and chapter of the T1530 Service manual. Complete Service part # 84227369.

The sections used through out all New Holland product Service manuals may not be used for each product. Each Service manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Service manual and which sections are in each book.

The sections listed above are the sections utilized for the T1530 Tractors.

SECTION 00 - GENERAL INFORMATION

BOOK 1 - 84227370

Chapter 1 - General Information

CONTENTS

Section	Description	Page
	Introduction	2
	Precautionary Statements	3
	Personal Safety	3
	Machine Safety and Information	3
	Safety	4
	Precautionary Statements	4
	The Tractor	4
	Servicing the Tractor	4
	Operating the Tractor	5
	Driving the Tractor	5
	Operating the PTO	6
	Diesel Fuel	6
	Safety Frame (ROPS)	6
	Safety Decals	7
	Instruction Decals	9
	International Symbols	13
	Specifications	14
	General Dimensions	19
	Minimum Hardware Tightening Torques	22
	Metric Bolt Torque Specifications	23
	Lubricants	24
	Recommended Lubricants and Coolants	24
	Adjustments	25
	Rear Tire Liquid	25

SECTION 10 - ENGINE

BOOK 1 - 84227370

Chapter 1 - Engine

CONTENTS

Section	Description	Page
	Specifications	6
	Metric Bolt Torque Specifications	15
	Special Tools	16
	Compression Test and Tools	17
	Description of Operation - Engine	18
	Troubleshooting	19
	Cylinder Head and Valve Train Components	23
	Separating the Tractor at the Clutch Housing/Engine	24
	Removal	24
	Attaching the Tractor at the Clutch Housing/Engine	34
	Installation	34
	Overhaul - Engine	44
	Engine	44
	Fuel Injector and Glow Plug	44
	Removal	44
	Oil Pressure Switch	44
	Temperature Sending Switch and Alternator	44
	Removal	44
	Fan, Water Pump, and External Oil Tube	45
	Removal	45
	Air Inlet Manifold	45
	Removal	45
	Rocker Arm Shaft and Support Bracket	46
	Removal	46
	Cylinder Head	46
	Removal	46
	Valve Tappet	46
	Removal	46
	Fuel Shutoff Solenoid	47
	Removal	47

SECTION 10 - ENGINE

BOOK 1 - 84227370

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
	Engine Timing Gear Cover, Timing Gears, and Cam Shaft	47
	Timing Gear Cover Removal	47
	Timing Gears and Camshaft	49
	Removal	49
	Oil Sump	50
	Removal	50
	Oil Suction Pipe and Strainer	50
	Removal	50
	Balancer Assembly	51
	Removal	51
	Connecting Rods, Bearings, and Pistons, Rings	51
	Removal	51
	Flywheel	52
	Removal	52
	Backplate and Oil Seal	52
	Removal	52
	Crankshaft and Main Bearings	52
	Removal	52
	Cylinder Head	53
	Disassembly	53
	Inspection and Repair	53
	Valve Seats	54
	Valves	55
	Valve Guides	56
	Valve Springs	57
	Rocker Arms	57
	Push Rods	58
	Cylinder Head	58
	Assembly	58
	Cylinder Block	59

SECTION 10 - ENGINE

BOOK 1 - 84227370

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
	Pistons	59
	Disassembly and Inspection	59
	Piston Rings	62
	Connecting Rods	62
	Pin to Bushing Clearance	63
	Connecting Rod Bearing	64
	Clearance Check	64
	Pistons, Rings, and Connecting Rod	65
	Assembly	65
	Crankshaft - Main Bearing and Thrust Washer	66
	Removal and Inspection	66
	Crankshaft	67
	Bearing (Bushing)	68
	Replacement	68
	Main Bearing	69
	Assembly	69
	Port Block	70
	Removal	70
	Installation	70
	Timing Gear	71
	Camshaft	71
	Disassembly	71
	Inspection	71
	Assembly	72
	Flywheel	72
	Timing Gear Housing	73
	Front Oil Seal and Steering Pump Seal	73
	Replacement	73
	Crankshaft and Bearing Holder	74
	Installation	74

SECTION 10 - ENGINE

BOOK 1 - 84227370

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
	Rear Oil Seal and Backplate	74
	Installation	74
	Flywheel	75
	Installation	75
	Pistons and Connecting Rods	75
	Installation	75
	Balancer Assembly	76
	Installation	76
	Balancer Shims	76
	Oil Suction Pipe and Suction Strainer	77
	Installation	77
	Oil Sump	77
	Installation	77
	Camshaft and Camshaft Gear	77
	Installation	77
	Idle Gear, Oil Pump, and Injection Timing	78
	Installation	78
	Timing Gear Cover	78
	Installation	78
	Crankshaft Pulley	78
	Installation	78
	Fuel Injection Pump	79
	Installation	79
	Hydraulic Oil Pump	79
	Installation	79
	Power Steering Pump	80
	Installation	80
	Head Gasket Selection	80
	Selection Chart	80
	Cylinder Head	81
	Installation	81

SECTION 10 - ENGINE

BOOK 1 - 84227370

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
	Valve Clearance	81
	Adjustment	81
	Valve Cover	82
	Installation	82
	Water Pump and Cooling Fan	82
	Installation	82
	External Oil Tube	82
	Assembly	82
	Glow Plug and Connector	83
	Installation	83
	Fuel Injector	83
	Installation	83
	Fuel Piping	83
	Installation	83
	Alternator and Temperature Sender Switch	84
	Installation	84
	Exhaust Manifold	84
	Installation	84
	Description of Operation - Engine Lubrication System	85
	Oil Filter	88
	Construction and Function	88
	Maintenance	88
	Oil Pump	88
	Removal	88
	Inspection	88
	Installation and Adjustment	89
	Engine Oil Pressure	90
	Check	90
	Oil Pressure Relief Valve	91
	Removal	91
	Installation	91
	Oil Consumption	91

SECTION 10 - ENGINE

BOOK 1 - 84227370

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
	Description of Operation - Cooling System	92
	Maintenance	94
	Coolant	94
	Radiator Cap	94
	Thermostat	95
	Water Pump	95
	Cooling Fan	95
	Overhaul - Cooling System	96
	Radiator	96
	Removal	96
	Inspection and Repair	98
	Water Pump	99
	Removal	99
	Inspection and Repair	100
	Installation	100
	Thermostat	101
	Removal	101
	Inspection and Repair	102
	Installation	102
	Radiator	103
	Installation	103

SECTION 10 - ENGINE

BOOK 1 - 84227370

Chapter 2 - Fuel Systems

CONTENTS

Section	Description	Page
	Specifications	3
	Standards for Adjusting the Injection Pump	4
	Torque Specifications	4
	Special Tools	4
	Description of Operation - Injection Pump	5
	Injection Pump	5
	Troubleshooting - Fuel System	7
	General	7
	Fuel Injectors	10
	Governor	11
	Fuel Variation Mechanism	12
	Delivery Valve Assembly	13
	CTD (Compact Timing Device) Mechanism	13
	Pumping Elements	15
	Delivery Valves	15
	Injection Pump	17
	Removal	17
	Repair	19
	Installation	19
	Fuel Injection Pump	20
	Installation (New Pump or Drive Component)	20
	Injection Pump Timing	21
	Fuel Screw/High Idle	22
	Adjustment	22
	Auto Bleed	23
	Description of Operation - Governor	24
	Governor	24
	Disassembly	26
	Assembly	27
	Adjustments	29
	Injectors	30
	Removal	31

SECTION 10 - ENGINE

BOOK 1 - 84227370

Chapter 2 - Fuel Systems (Continued)

CONTENTS

Section	Description	Page
	Disassembly	32
	Assembly/Adjustment	32
	Engine Breather Valve	33
	Removal	34
	Installation	34
	Troubleshooting - Engine Breather Valve	35

SECTION 18 - CLUTCH

BOOK 1 - 84227370

Chapter 1 - Clutch

CONTENTS

Section	Description	Page
	Specifications	3
	Bolt Torques	4
	Special Tools	4
	Description of Operation	5
	Troubleshooting	7
	Overhaul	8
	Separating the Tractor at the Clutch Housing/Engine	8
	Preparation	8
	Removal	8
	Clutch	15
	Removal	15
	Inspection	15
	Assembly	16

SECTION 18 - CLUTCH

BOOK 1 - 84227370

Chapter 1 - Clutch (Continued)

CONTENTS

Section	Description	Page
	Attaching the Clutch Housing to the Engine	17
	Installation	17
	Flywheel Dimensions	24
	Clutch Release Bearing	25
	Removal	25
	Inspection	26
	Installation	26
	Clutch Linkage Components	26
	Cross Shaft Bushings	26
	Disassembly	26
	Assembly	27
	Pedal Bushings	28
	Removal	28
	Disassembly	28
	Assembly	28
	Installation	28
	Pedal	29
	Adjustment	29
	Clutch Pedal Safety Switch	29
	Adjustment	29

SECTION 21 - TRANSMISSION

BOOK 1 - 84227370

Chapter 1 - SSS 12 x 12 Gear Transmission

CONTENTS

Section	Description	Page
	Specifications	3
	SSS Gear Transmission	3
	Metric Bolt Torque Specifications	4
	Special Tools	5
	Description of Operation	5
	Powerflow	8
	Troubleshooting	12
	Overhaul	13
	Separating the Tractor at Clutch Housing/Transmission Housing	13
	Removal	13
	Main Transmission Input Shaft Retainer	20
	Disassembly	20
	Input Shaft	21
	Disassembly	21
	Reverse Idler Shaft and Gear	22
	Disassembly	22
	Shift Rails	23
	Disassembly	23
	Upper Countershaft	25
	Disassembly	25
	Main Shaft	28
	Disassembly	28
	Shuttle Gears	31
	Disassembly	31
	Inspection	31
	Main Transmission Range Gear Shifter	32
	Disassembly	32
	Inspection	32
	Synchronizers - Shuttle Gears	33
	Shuttle Transmission Gears/ Synchronizer	34
	Disassembly	34
	Inspection	38

SECTION 21 - TRANSMISSION

BOOK 1 - 84227370

Chapter 1 - SSS 12 x 12 Gear Transmission (Continued)

CONTENTS

Section	Description	Page
	Shuttle Transmission Gears/ Synchronizer	40
	Assembly	40
	Main Transmission Range Gear Shifter	43
	Assembly	43
	Shuttle Gears	44
	Assembly	44
	Main Shaft	44
	Assembly	44
	Range Gears	48
	Assembly	48
	Range Gear Shift Fork	50
	Assembly	50
	Countershaft	51
	Assembly	51
	Shift Rails	52
	Assembly	52
	Input Shaft With Retainer	56
	Assembly	56
	End Play Adjustment (Upper Shaft)	58
	Attaching the Transmission / Differential Housing	59
	Attaching the Clutch Housing/Transmission Housing	60

SECTION 25 - FWD FRONT AXLE

BOOK 1 - 84227370

Chapter 1 - FWD Front Axle

CONTENTS

Section	Description	Page
	Specifications	2
	Front to Rear Axle Ratio	2
	Method 1	3
	Method 2: Rolling Test	4
	Bolt Torque Specifications	5
	Special Tools	5
	Description of Operation - FWD Front Axle	6
	FWD Front Axle	6
	Troubleshooting	7
	Lubrication	9
	Lubricate Every 50 Hours	9
	Overhaul - FWD Axle	10
	FWD Axle	10
	Removal	10
	Inspection	10
	Installation	11
	Gear Reduction Drop Box	12
	Disassembly	12
	Inspection	14
	Front Axle and Differential	15
	Disassembly	15
	Inspection	16
	Pinion Shaft	17
	Disassembly	17
	Inspection	17
	Assembly	18
	Differential	19
	Assembly	19
	Ring Gear-to-Pinion Backlash	20
	Axle and Differential	22
	Assembly	22
	Gear Reduction Box	24
	Assembly	24
	Bevel Gear-to-Pinion Backlash	27
	Check	27

SECTION 27 - DIFFERENTIAL, REAR AXLE

BOOK 2 - 84227371

Chapter 1 - Differential, Rear Axle

CONTENTS

Section	Description	Page
	Specifications	2
	Differential Pinion Gear to Shaft Clearance	2
	Bolt Torque Specifications	3
	Metric Bolt Torque Specifications	3
	Special Tools	3
	Description of Operation	4
	Differential	5
	Differential Lock	5
	Rear Axle	6
	Overhaul	7
	Differential	7
	Removal	7
	Disassembly	9
	Inspection	9
	Assembly	10
	Installation	10
	Drive Pinion	12
	Removal	12
	Disassembly	12
	Inspection	13
	Assembly	13
	Rear Axle	16
	Removal	16
	Disassembly	17
	Inspection	20
	Assembly	21
	Final Pinion	25
	Removal	25
	Disassembly	26
	Inspection	28
	Assembly	29
	Installation	31

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 84227371

Chapter 1 - Hydrostatic Transmission

CONTENTS

Section	Description	Page
	Description of Operation - Hydrostatic Transmission	3
	Variable Displacement Pump	5
	Operation	5
	Fixed Displacement Motor	7
	Operation	7
	Fluid Flow	8
	Neutral Position	8
	Forward Position	9
	Reverse Position	10
	Overhaul	11
	Hydrostatic Unit	11
	Removal	11
	Precautions Before Disassembly	12
	Hydrostatic Pump	15
	Disassembly	15
	Hydrostatic Motor	16
	Disassembly	16
	Hydrostatic Motor Shaft	18
	Removal	18
	Swash Plate	19
	Removal	19
	Hydrostatic Transmission	19
	Inspection	19
	Hydrostatic Pump	22
	Assembly	22
	HST Piston Pump Cylinder Block	23
	Assembly	23
	HST Motor Cylinder Block	25
	Assembly	25
	Port Block Feed and Check Valves	26
	Disassembly	26
	Inspection	26

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 84227371

Chapter 1 - Hydrostatic Transmission (Continued)

CONTENTS

Section	Description	Page
	Feed (Check) Valves Servicing	27
	Inspection	27
	Assembly	27
	Charge Pressure Relief Valve	28
	Disassembly	28
	Inspection	28
	Assembly	28
	High Pressure Relief Valve	28
	Removal	28
	Installation	28
	Hydrostatic Pump and Port Block	29
	Assembly	29
	Hydrostatic Motor and Port Block	30
	Assembly	30
	HST Cooler Check Valve	31
	Disassembly	31
	Inspection	31
	Assembly	31
	Pressure Tests	32
	High Pressure Relief Valve	32
	Charge Pressure Relief Valve	34
	Troubleshooting	36
	Specifications	40
	Hydrostatic Transmission	40
	Bolt Torques	40

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 84227371

Chapter 2 - Hydrostatic Transmission Linkage

CONTENTS

Section	Description	Page
	HST Control Linkage	2
	HST Neutralizer (Spring Holder)	3
	Removal	4
	Disassembly	4
	Inspection	4
	Assembly	5
	Installation	7
	HST Neutral Adjustment	8
	Pedal(s) Stop Bolt Adjustment	10
	Forward Pedal	10
	Reverse Pedal	10
	Cruise Control (Optional)	11
	HST Electronic Cruise Control Circuit (Optional)	12
	Cruise Control Switch	12
	Cruise Control Relay	13
	Cruise Control Magnet	13
	Brake Switch Function	13

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 84227371

Chapter 3 - Hydrostatic Gearbox

CONTENTS

Section	Description	Page
	Specifications	3
	Special Tools	3
	Description of Operation	4
	HST Unit	5
	Power Flow	5
	Gearbox	5
	Separating Between Clutch and Center Range Gear Housings	7
	Range Gearbox Disassembly	14
	PTO Input Shaft	14
	Removal	14
	Top Counter Shaft	14
	Removal	14
	Shift Fork and Shift Rail	15
	Removal	15
	Main Shaft	16
	Removal	16
	Transmission Input Shaft	17
	Removal	17
	Inspection	17
	Shift Arm	18
	Assembly	18
	Main Shaft	18
	Assembly	18
	Shifter Fork and Shift Rail	20
	Assembly	20
	Transmission Input Shaft	21
	Assembly	21
	Top Counter Shaft	22
	Assembly	22

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 84227371

Chapter 3 - Hydrostatic Gearbox (Continued)

CONTENTS

Section	Description	Page
	PTO Input Shaft	22
	Assembly	22
	Range Gearbox to Rear Differential Housing	23
	Assembly	23
	Hydrostatic Transmission	24
	Installation	24
	Range Gearbox to Clutch Housing	24
	Assembly	24
	Reassembly of Tractor	26

SECTION 31 - POWER TAKE-OFF (PTO) SYSTEMS

BOOK 2 - 84227371

Chapter 1 - Power Take-Off (PTO) Systems

CONTENTS

Section	Description	Page
	Specifications	3
	PTO Hydraulic System (HST Model Only)	3
	PTO Clutch	3
	Metric Bolt Torque Specifications	4
	Special Tools	5
	Description of Operation	6
	Rear PTO	7
	Power Flow Diagram for the 12 x 12 Synchronized Shuttle Shift Transmission	7
	Power Flow Diagram for the Hydrostatic Transmission (HST)	8
	Hydraulic Fluid Flow	9
	PTO Clutch Assembly (HST)	9

SECTION 31 - POWER TAKE-OFF (PTO) SYSTEMS

BOOK 2 - 84227371

Chapter 1 - Power Take-Off (PTO) Systems (Continued)

CONTENTS

Section	Description	Page
	Troubleshooting (HST)	12
	Troubleshooting (12 x 12)	13
	Pressure Testing (HST)	14
	Test Procedure	14
	Overhaul	16
	PTO System Diverter Valve Assembly (HST)	16
	Removal	16
	Disassembly	17
	Inspection	17
	Assembly	17
	Installation	18
	PTO Clutch Control Valve (HST)	19
	Removal	19
	Disassembly	20
	Inspection	20
	Assembly	20
	Installation	22
	PTO Clutch (HST)	23
	Removal	23
	Disassembly	26
	Inspection	28
	Assembly	30
	Installation	34
	Power Take Off System for 12 x 12 Synchronized Shuttle Shift Transmission	38
	Removal	38
	Inspection	42
	Assembly	43

SECTION 31 - POWER TAKE-OFF (PTO) SYSTEMS

BOOK 2 - 84227371

Chapter 1 - Power Take-Off (PTO) Systems (Continued)

CONTENTS

Section	Description	Page
	One-Way Clutch (12 x 12)	47
	Removal	47
	Disassembly	47
	Inspection	48
	Assembly	48
	Installation	49
	Power Take Off System for Hydrostatic Transmission (HST)	50
	Removal	50
	PTO Input Shaft	51
	Removal	51
	Disassembly	52
	Inspection	52
	Assembly	52
	Installation	53
	PTO Countershaft and Rear PTO Shaft	53
	Removal	53
	Inspection	56
	Assembly	56
	Installation	58

SECTION 33 - BRAKES

BOOK 2 - 84227371

Chapter 1 - Brakes

CONTENTS

Section	Description	Page
	Specifications	2
	Bolt Torque Specifications	3
	Description of Operation	4
	Brakes	4
	Park Brake	6
	Overhaul	7
	Brakes	7
	Removal and Disassembly	7
	Inspection	9
	Assembly and Installation	10
	Adjustment	12

SECTION 35 - HYDRAULIC SYSTEM

BOOK 2 - 84227371

Chapter 1 - Hydraulic System

CONTENTS

Section	Description	Page
	Specifications	5
	Metric Bolt Torque Specifications	6
	Special Tools	7
	Description of Operation	8
	Flow Priority	10
	Hydraulic System	11
	Hydraulic Fluid Filter	11
	Combination System Relief - Diverter Valve Manifold Assembly	12
	Control Valve Assembly (HPL)	14
	Fluid Flow	15
	Neutral Position	15

SECTION 35 - HYDRAULIC SYSTEM

BOOK 2 - 84227371

Chapter 1 - Hydraulic System (Continued)

CONTENTS

Section	Description	Page
	Raising Position	16
	Lowering Position	17
	Bypass Spool - Fluid Flow	18
	Flow Control Valve	19
	Linkage Operation - Single Lever - Position Control	19
	Position Control Operation	20
	Neutral Position To Raise	20
	Raise Position To Neutral Position	20
	Neutral Position To Lowering Position	21
	Dual Lever Position Control (Draft Control)	21
	Top Link Sensing Raise	22
	Top Link Sensing Lower	22
	Varying Draft Control Settings	23
	Combining Position and Draft Control Settings	23
	Troubleshooting	24
	Pressure Testing	26
	Main System Relief Valve	26
	Inlet Restriction	28
	Pump Efficiency	29
	Overhaul - Hydraulic System	31
	Lift Cylinder	31
	Removal	31
	Disassembly	34
	Inspection and Repair	36
	Assembly	36
	Installation	39
	Flow Control Valve	42
	Removal	42
	Disassembly	42
	Inspection	42
	Assembly	42
	Installation	42

SECTION 35 - HYDRAULIC SYSTEM

BOOK 2 - 84227371

Chapter 1 - Hydraulic System (Continued)

CONTENTS

Section	Description	Page
	Hydraulic Control Valve	43
	Removal	43
	Disassembly	46
	Inspection	47
	Assembly	48
	Installation	49
	Combination System Relief Valve and Diverter Valve Assemblies	53
	Removal	53
	Disassembly (HST Model)	54
	Inspection	54
	Assembly	54
	Disassembly (12 x 12 Model)	55
	Inspection	55
	Assembly	55
	Installation	56
	Adjustments	57
	HPL Linkage	57
	Adjustment Procedure	57
	Control Lever	58
	Adjustment Procedure	58
	Description of Operation - Hydraulic Pump and Filter	59
	Hydraulic Pump and Filter	59
	Hydraulic Pump	60
	Removal	60
	Disassembly	62
	Inspection and Repair	62
	Assembly	63
	Installation	64
	Oil Pump Trial Running	66
	Sump Tube and Screen Filter	67
	Removal	67
	Disassembly	68

SECTION 35 - HYDRAULIC SYSTEM

BOOK 2 - 84227371

Chapter 1 - Hydraulic System (Continued)

CONTENTS

Section	Description	Page
	Inspection	68
	Assembly	68
	Description of Operation - Remote Valves	70
	Remote Valves	70
	Rear (Single-Spool) Remote Valve	71
	Front (Two-Spool) Remote Valve	71
	Rear (Single-Spool) Remote System	73
	Fluid Flow	73
	Neutral Position	73
	Remote Cylinder Extending	74
	Remote Cylinder Retracting	75
	Front Remote (Two Spool) Loader Control Valve Fluid Flow Diagrams	5-76
	Bucket Control	76
	Neutral/Lift Control-Neutral	76
	Dumping/Lift Control-Neutral	77
	Dumping Regen/Lift Control-Neutral	78
	Roll Back/Lift Control-Neutral	79
	Neutral/Lift Control-Raising	80
	Neutral/Lift Control-Lowering	81
	Neutral/Lift Control-Float	82
	Overhaul - Front and Rear Remote Valves	83
	Rear (Single-Spool) Remote Valve	83
	Removal	83
	Disassembly	84
	Inspection	84
	Assembly	84
	Front (Two-Spool) Remote Valve	85
	Removal	85
	Disassembly	89
	Inspection	89
	Assembly	89
	Installation	90

SECTION 41 - STEERING

BOOK 3 - 84227372

Chapter 1 - Steering

CONTENTS

Section	Description	Page
	Specifications	3
	Power Steering System	3
	Metric Bolt Torque Specifications	4
	Special Tools	5
	Description of Operation	6
	Power Steering System	6
	Power Steering Control Motor Components	7
	Power Steering Control Motor	8
	Spool and Sleeve	8
	Rotor and Fixed Ring	8
	Drive Shaft	8
	Check Valve and System Relief Valve	9
	Check Valve	9
	Pressure Relief Valve	9
	Power Steering Pump	10
	Steering Cylinder	10
	Power Steering Operation	11
	Fluid Flow - Neutral Position	11
	Fluid Flow - Left Turn	12
	Fluid Flow - Right Turn	13
	Manual Operation	14
	Troubleshooting	15
	Pressure Testing	17
	Pump, Steering Motor, and Relief Valve	17
	Steering Cylinder	18
	Overhaul	19
	Steering Control Motor	19
	Removal	19
	Disassembly	20
	Inspection	22
	Assembly	22
	Installation	26

SECTION 41 - STEERING

BOOK 3 - 84227372

Chapter 1 - Steering (Continued)

CONTENTS

Section	Description	Page
	Steering Cylinder	28
	Removal	28
	Disassembly	29
	Inspection	30
	Assembly	31
	Steering Cylinder	33
	Installation	33
	Pump	35
	Removal	35
	Disassembly	36
	Inspection and Repair	36
	Assembly	36
	Installation	37
	Oil Pump Trial Running	37
	Power Steering Tubes	38

SECTION 44 - WHEELS AND TIRES

BOOK 3 - 84227372

Chapter 1 - Wheels and Tires

CONTENTS

Section	Description	Page
	Wheel Tread Settings	2
	Front Wheel Settings	2
	Rear Wheel Settings	2
	Tractor Weighting	3
	Weighting For Stability	3
	Weighting Limitations	3
	Cast Iron Weights (Optional)	4
	Front Frame Mounted Weights	4
	Optional Front Weight Extension Bracket	4
	Rear Wheel Weights #710470026	5
	Rear Wheel Weight Installation	5
	Ag./R4 Tires	5
	Rear Counter Weight Bracket (Optional) #718740016	6
	Ballasting Box (Optional) #715655006	6
	Liquid Ballast (Optional)	7
	Tire Pressure	7
	Rear Tire Liquid	7
	Wheel Nut Torque Specifications	7

SECTION 55 - ELECTRICAL SYSTEM

BOOK 3 - 84227372

Chapter 1 - Electrical Components

CONTENTS

Section	Description	Page
	Introduction	5
	Component Location and Function	5
	Ground Locations	8
	Description and Testing - Electrical System Components	10
	Battery	10
	Electrolyte Level	10
	Removal	11
	Installation	11
	Main Fuse (40 Amp)	12
	Replacement	12
	Fuse Block	12
	Key Switch	13
	Removal	14
	Key Switch Terminal Identification	14
	Testing	14
	Key Switch Troubleshooting - Connector Wiring	17
	Installation	17
	Light Switch	18
	Removal	18
	Testing	18
	Installation	19
	Headlights	19
	Removal	19
	Inspection	19
	Installation	20
	Taillights	20
	Removal	20
	Inspection	21
	Installation	21