

**THIS MANUAL, 84257310, COVERS THE FOLLOWING TRACTORS:**

**TJ 280, 330, 380, 430, 480, and 530 Series**

**T9010, 9020, 9030, 9040, 9050, and 9060 Series**

**T9020, 9030, 9040, 9050, and 9060 Series After S/N Z7F204001**

**NOTE:** Engine repair information is not contained within this tractor Service Manual. For engine repair, refer to appropriate engine service manual as follows:

**87515682** - For 8.3 & 9.0L 6 Cylinder, 24 Valve CNH Engine with High Pressure Common Rail Fuel System.

**87523643** - For 12.9L 6 Cylinder, Engine.

**87737594** - For 12.9L 6 Cylinder, Turbo Compound Engine.

STANDARD TORQUE SPECIFICATION.....	SECTION 00, CHAPTER 1 (Book 1 - 87525642)
SAFETY.....	SECTION 00, CHAPTER 2 (Book 1 - 87525642)
LUBRICATION AND MAINTENANCE.....	SECTION 00, CHAPTER 3 (Book 1 - 87525642)
ENGINE LUBRICATION .....	00-3-3
Engine Oil Selection .....	00-3-3
Synthetic Lubricants .....	00-3-3
Engine Oil Viscosity/Temperature Usage Recommendation .....	00-3-3
Engine Coolant Solutions .....	00-3-4
LUBRICANTS AND CAPACITIES .....	00-3-5
LUBRICATION AND MAINTENANCE CHART .....	00-3-6
SPECIFICATIONS.....	SECTION 00, CHAPTER 4 (Book 1 - 87525642)
DIESEL ENGINE .....	00-4-3
ENGINE LUBRICATION SYSTEM .....	00-4-3
FUEL SYSTEM .....	00-4-3
AIR INTAKE SYSTEM .....	00-4-3
TRANSMISSION - POWER SHIFT .....	00-4-4
TRANSMISSION - MANUAL SHIFT .....	00-4-4
BRAKES .....	00-4-4
AXLE DIFFERENTIAL AAND FINAL DRIVES .....	00-4-4
POWER TAKEOFF (IF EQUIPPED) .....	00-4-4
HYDRAULIC SYSTEM .....	00-4-5
MEGAFLOW HYDRAULICS (IF EQUIPPED) .....	00-4-5
HITCH SYSTEM (IF EQUIPPED) .....	00-4-5
DRAWBAR .....	00-4-5
TRACTOR WEIGHTS .....	00-4-6
Approximate Base Shipping Weights .....	00-4-6
Approximate Component Weights .....	00-4-6
MAXIMUM TRACTOR OPERATING WEIGHT .....	00-4-6
ENGINE REMOVAL AND INSTALLATION -	
TJ380/430 TRACTORS.....	SECTION 10, CHAPTER 1 (Book 1 - 87525642)
SPECIAL TORQUE VALUES .....	10-1-3
RECOMMENDED TOOLS .....	10-1-3
ENGINE REMOVAL .....	10-1-4
ENGINE INSTALLATION .....	10-1-13

**ENGINE REMOVAL AND INSTALLATION**

TJ280/330 TRACTORS..... SECTION 10, CHAPTER 2 (Book 1 - 87525642)

- SPECIAL TORQUE VALUES ..... 10-2-2
- SPECIAL TOOLS ..... 10-2-2
- ENGINE REMOVAL ..... 10-2-3
- ENGINE INSTALLATION ..... 10-2-10

**ENGINE REMOVAL AND INSTALLATION -**

TJ480/530 TRACTORS..... SECTION 10, CHAPTER 3 (Book 1 - 87525642)

- SPECIAL TORQUE VALUES ..... 10-3-2
- RECOMMENDED TOOLS ..... 10-3-2
- ENGINE REMOVAL ..... 10-3-3
- ENGINE INSTALLATION ..... 10-3-13

**AIR INDUCTION SYSTEM - TJ380/430 TRACTORS..... SECTION 10, CHAPTER 4 (Book 1 - 87525642)**

- SPECIAL TORQUE VALUES ..... 10-4-2
- AIR INDUCTION SYSTEM ..... 10-4-3
- AIR INDUCTION SYSTEM DESCRIPTION ..... 10-4-4
- AIR INDUCTION SYSTEM ..... 10-4-4
- AIR FILTER ELEMENTS ..... 10-4-4
  - PRIMARY AND SECONDARY FILTER ELEMENT REMOVAL ..... 10-4-5
  - PRIMARY FILTER ELEMENT SERVICE ..... 10-4-7
- RESTRICTION INDICATOR SWITCH REMOVAL AND TEST ..... 10-4-8
- AIR CLEANER HOUSING REMOVAL ..... 10-4-9
- ASPIRATOR STRATA TUBE CLEANING ..... 10-4-10
- ASPIRATOR SAFETY CHECK VALVE REMOVAL AND TEST ..... 10-4-11
- ASPIRATOR SAFETY VALVE INSTALLATION ..... 10-4-11
- AIR CLEANER HOUSING INSTALLATION ..... 10-4-12
- RESTRICTION INDICATOR SWITCH INSTALLATION ..... 10-4-13
- SECONDARY AND PRIMARY FILTER ELEMENT INSTALLATION ..... 10-4-13

**AIR INDUCTION SYSTEM - TJ280/330 TRACTORS..... SECTION 10, CHAPTER 5 (Book 1 - 87525642)**

- SPECIAL TORQUE VALUES ..... 10-5-3
- AIR INDUCTION SYSTEM ..... 10-5-4
- AIR FILTER ELEMENTS ..... 10-5-4
- ENGINE AIR INDUCTION SYSTEM ..... 10-5-5
  - Primary And Secondary Filter Element Removal ..... 10-5-5
- PRIMARY FILTER ELEMENT SERVICE ..... 10-5-7
- RESTRICTION INDICATOR SWITCH REMOVAL AND TEST ..... 10-5-7
- AIR CLEANER HOUSING REMOVAL ..... 10-5-8
  - Aspirator Strata Tube Cleaning ..... 10-5-10
- ASPIRATOR SAFETY CHECK VALVE REMOVAL AND TEST ..... 10-5-12
- ASPIRATOR SAFETY CHECK VALVE INSTALLATION ..... 10-5-13
- AIR CLEANER HOUSING INSTALLATION ..... 10-5-14
- RESTRICTION INDICATOR SWITCH INSTALLATION ..... 10-5-15
- SECONDARY AND PRIMARY FILTER ELEMENT INSTALLATION ..... 10-5-16

**AIR INDUCTION SYSTEM - TJ480/530 TRACTORS..... SECTION 10, CHAPTER 6 (Book 1 - 87525642)**

- SPECIAL TORQUE VALUES ..... 10-6-2
- AIR INDUCTION SYSTEM ..... 10-6-3
- AIR FILTER ELEMENTS ..... 10-6-4
  - Primary And Secondary Filter Element Removal ..... 10-6-5
- PRIMARY FILTER ELEMENT SERVICE ..... 10-6-7
- RESTRICTION INDICATOR SWITCH REMOVAL AND TEST ..... 10-6-8
- AIR CLEANER HOUSING REMOVAL ..... 10-6-9
  - ASPIRATOR STRATA TUBE CLEANING ..... 10-6-10
- ASPIRATOR SAFETY CHECK VALVE REMOVAL AND TEST ..... 10-6-11

## TJ AND T9000 MASTER TABLE OF CONTENTS

ASPIRATOR SAFETY VALVE INSTALLATION .....	10-6-11
AIR CLEANER HOUSING INSTALLATION .....	10-6-12
RESTRICTION INDICATOR SWITCH INSTALLATION .....	10-6-13
SECONDARY AND PRIMARY FILTER ELEMENT INSTALLATION .....	10-6-13
VISCOUS FAN DRIVE - TJ280/330/380/430, HYD FAN DRIVE TEST - TJ480/530 .....	SECTION 10, CHAPTER 7 (Book 1 - 87525642)
VISCOUS FAN DRIVE TEST - TJ280, TJ330, TJ380, TJ430 .....	10-7-3
HYDRAULIC FAN DRIVE TEST - TJ480, TJ530 .....	10-7-5
RADIATOR, COOLERS AND CONDENSER REMOVE/INSTALL - TJ280/330 .....	SECTION 10, CHAPTER 8 (Book 1 - 87525642)
SPECIAL TORQUE VALUES .....	10-8-2
GENERAL INFORMATION .....	10-8-3
FUEL COOLER REMOVAL .....	10-8-3
FUEL COOLER INSTALLATION .....	10-8-4
ENGINE AIR TO AIR COOLER REMOVAL .....	10-8-6
AIR TO AIR COOLER INSTALLATION .....	10-8-9
A/C CONDENSER REMOVAL .....	10-8-12
A/C CONDENSER INSTALLATION .....	10-8-13
HYDRAULIC/TRANSMISSION OIL COOLER REMOVAL .....	10-8-15
HYDRAULIC/TRANSMISSION OIL COOLER INSTALLATION .....	10-8-17
RADIATOR AND COOLER ASSEMBLY REMOVAL .....	10-8-20
RADIATOR AND COOLER ASSEMBLY INSTALLATION .....	10-8-27
RADIATOR, COOLERS AND CONDENSER REMOVE/INSTALL - TJ480/530 .....	SECTION 10, CHAPTER 9 (Book 1 - 87525642)
SPECIAL TORQUE VALUES .....	10-9-3
GENERAL INFORMATION .....	10-9-3
FUEL COOLER REMOVAL .....	10-9-4
FUEL COOLER INSTALLATION .....	10-9-4
ENGINE AIR TO AIR COOLER REMOVAL .....	10-9-5
ENGINE AIR TO AIR COOLER INSTALLATION .....	10-9-7
A/C CONDENSER AND HYDRAULIC FAN COOLER REMOVAL .....	10-9-9
A/C CONDENSER AND HYDRAULIC FAN COOLER INSTALLATION .....	10-9-10
RADIATOR AND COOLER ASSEMBLY REMOVAL .....	10-9-12
RADIATOR/COOLER DISASSEMBLY .....	10-9-19
RADIATOR, COOLERS AND CONDENSER REMOVE/INSTALL - TJ380/430 .....	SECTION 10, CHAPTER 10 (Book 1 - 87525642)
SPECIAL TORQUE VALUES .....	10-10-2
GENERAL INFORMATION .....	10-10-3
ENGINE AIR TO AIR COOLER REMOVAL .....	10-10-4
AIR TO AIR COOLER INSTALLATION .....	10-10-6
A/C CONDENSER REMOVAL .....	10-10-7
A/C CONDENSER INSTALLATION .....	10-10-8
HYDRAULIC/TRANSMISSION OIL COOLER REMOVAL .....	10-10-10
HYDRAULIC/TRANSMISSION OIL COOLER INSTALLATION .....	10-10-12
RADIATOR AND COOLER ASSEMBLY REMOVAL .....	10-10-15

## TJ AND T9000 MASTER TABLE OF CONTENTS

---

AIR INDUCTION SYSTEM, T9030, 9040 and 9050 Tractors, S/N Z7F204001 and After.....	SECTION 10, CHAPTER 11 (Book 1A - 87740915)
SPECIAL TORQUE VALUES .....	10-11-2
AIR INDUCTION SYSTEM .....	10-11-3
AIR INDUCTION SYSTEM DESCRIPTION .....	10-11-4
AIR INDUCTION SYSTEM .....	10-11-4
AIR FILTER ELEMENTS .....	10-11-4
PRIMARY AND SECONDARY FILTER ELEMENT REMOVAL .....	10-11-5
PRIMARY FILTER ELEMENT SERVICE .....	10-11-7
RESTRICTION INDICATOR SWITCH REMOVAL AND TEST .....	10-11-8
AIR CLEANER HOUSING REMOVAL .....	10-11-9
ASPIRATOR STRATA TUBE CLEANING .....	10-11-11
ASPIRATOR SAFETY CHECK VALVE REMOVAL AND TEST .....	10-11-12
ASPIRATOR SAFETY VALVE INSTALLATION .....	10-11-12
AIR CLEANER HOUSING INSTALLATION .....	10-11-13
RESTRICTION INDICATOR SWITCH INSTALLATION .....	10-11-14
SECONDARY AND PRIMARY FILTER ELEMENT INSTALLATION .....	10-11-15
ENGINE REMOVAL AND INSTALLATION, T9050 TRACTOR, S/N Z7F204001 AND AFTER .....	SECTION 10, CHAPTER 12 (Book 1A - 87740915)
SPECIAL TORQUE VALUES .....	10-12-3
RECOMMENDED TOOLS .....	10-12-3
ENGINE REMOVAL .....	10-12-4
ENGINE INSTALLATION .....	10-12-15
RADIATOR, COOLERS AND CONDENSER REMOVE AND INSTALL, T9050 TRACTOR .....	SECTION 10, CHAPTER 13 (Book 1A - 87740915)
SPECIAL TORQUE VALUES .....	10-13-3
ENGINE AIR TO AIR COOLER REMOVAL .....	10-13-4
ENGINE AIR TO AIR COOLER INSTALLATION .....	10-13-6
A/C CONDENSER AND HYDRAULIC FAN COOLER REMOVAL .....	10-13-8
A/C CONDENSER AND HYDRAULIC FAN COOLER INSTALLATION .....	10-13-9
RADIATOR AND COOLER ASSEMBLY REMOVAL .....	10-13-11
RADIATOR/COOLER DISASSEMBLY .....	10-13-18
POWERSHIFT TRANSMISSION REMOVE/INSTALL - TJ280/330.....	SECTION 21, CHAPTER 1 (Book 2 - 87525640)
SPECIAL TORQUE VALUES .....	21-1-2
SPECIAL TOOLS .....	21-1-2
TRANSMISSION REMOVAL .....	21-1-3
TRANSMISSION INSTALLATION .....	21-1-9
POWERSHIFT TRANSMISSION REMOVE/INSTALL - TJ380/430/480/530.....	SECTION 21, CHAPTER 2 (Book 2 - 87525640)
SPECIAL TORQUE VALUES .....	21-2-3
SPECIAL TOOLS .....	21-2-3
TRANSMISSION REMOVAL .....	21-2-4
TRANSMISSION INSTALLATION .....	21-2-10
ENGINE/TRANSMISSION DRIVE COUPLER REMOVE/INSTALL - TJ280/330 .....	SECTION 21, CHAPTER 3 (Book 2 - 87525640)
SPECIAL TORQUE VALUES .....	21-3-2
DRIVE COUPLER REMOVAL .....	21-3-3
DRIVE COUPLER INSTALLATION .....	21-3-5

## TJ AND T9000 MASTER TABLE OF CONTENTS

---

ENGINE/TRANSMISSION DRIVE COUPLER REMOVE/INSTALL - TJ480/530 .....	SECTION 21, CHAPTER 4 (Book 2 - 87525640)
SPECIAL TORQUE VALUES .....	21-4-2
DRIVE COUPLER REMOVAL .....	21-4-3
DRIVE COUPLER INSTALLATION .....	21-4-6
16 SPEED POWERSHIFT TRANSMISSION REPAIR.....	SECTION 21, CHAPTER 5 (Book 2 - 87525640)
SPECIFICATIONS .....	21-5-3
SPECIAL TORQUE VALUES .....	21-5-3
SPECIAL TOOLS .....	21-5-4
TRANSMISSION DISASSEMBLY .....	21-5-7
INPUT (FIRST) SHAFT DISASSEMBLY .....	21-5-18
PUMP (SECOND) SHAFT DISASSEMBLY .....	21-5-27
MASTER CLUTCH (FOURTH) SHAFT DISASSEMBLY .....	21-5-33
OUTPUT (FIFTH) SHAFT DISASSEMBLY .....	21-5-41
COUNTER (THIRD) SHAFT DISASSEMBLY .....	21-5-48
CLEANING AND INSPECTION .....	21-5-50
CLUTCH PACK CLEARANCE AND CLUTCH PACK TRAVEL TEST .....	21-5-52
1F, 1R, 2F AND 2R CLUTCH GEAR BEARING PRELOAD TEST .....	21-5-55
INPUT (FIRST) SHAFT ASSEMBLY .....	21-5-58
PUMP (SECOND) SHAFT ASSEMBLY .....	21-5-72
MASTER CLUTCH (FOURTH) SHAFT ASSEMBLY .....	21-5-82
OUTPUT (FIFTH) SHAFT ASSEMBLY .....	21-5-96
COUNTER (THIRD) SHAFT BEARING ASSEMBLY .....	21-5-107
TRANSMISSION ASSEMBLY .....	21-5-110
16 SPEED POWERSHIFT TRANSMISSION - HOW IT WORKS ..	SECTION 21, CHAPTER 6 (Book 2 - 87525640)
GENERAL DESCRIPTION OF OPERATION .....	21-6-3
Regulator Valve .....	21-6-4
Lube Regulator Valve .....	21-6-5
Master Clutch Lube Valve .....	21-6-5
Range Selector Valve .....	21-6-6
MASTER CLUTCH CONTROL VALVE .....	21-6-7
Transmission Power Flow .....	21-6-8
Default Settings .....	21-6-8
Helical-cut Gears .....	21-6-8
Shifting The Powershift Transmission .....	21-6-9
REAR DRIVE LINE AND CARRIER BEARING.....	SECTION 21, CHAPTER 7 (Book 2 - 87525640)
SPECIAL TORQUE VALUES .....	21-7-2
REAR DRIVE LINE AND CARRIER BEARING REMOVAL .....	21-7-3
REAR DRIVE LINE AND CARRIER BEARING INSTALLATION .....	21-7-5
CHARGE PUMP REPAIR FOR 16-SPEED POWERSHIFT TRANSMISSION .....	SECTION 21, CHAPTER 8 (Book 2 - 87525640)
SPECIFICATIONS .....	21-8-3
SPECIAL TORQUE VALUES .....	21-8-3
PUMP DISASSEMBLY .....	21-8-4
PUMP ASSEMBLY .....	21-8-7

## TJ AND T9000 MASTER TABLE OF CONTENTS

---

### 24 SPEED MANUAL TRANSMISSION REMOVAL

AND INSTALLATION .....	SECTION 21, CHAPTER 9 (Book 2 - 87525640)
SPECIAL TOOLS .....	21-9-3
SPECIAL TORQUE VALUES .....	21-9-3
24 SPEED TRANSMISSION REMOVAL .....	21-9-4
24 SPEED TRANSMISSION INSTALLATION .....	21-9-13
MASTER CLUTCH ADJUSTMENT .....	21-9-23
SHIFT LEVER LINKAGE ADJUSTMENT .....	21-9-24

### ENGINE/TRANSMISSION DRIVE COUPLER

REMOVE/INSTALL - TJ380/430 .....	SECTION 21, CHAPTER 10 (Book 2 - 87525640)
SPECIAL TORQUE VALUES .....	21-10-2
DRIVE COUPLER REMOVAL .....	21-10-3
DRIVE COUPLER INSTALLATION .....	21-10-6

### 24 SPEED MANUAL TRANS HOW IT WORKS/

PRESSURE TESTING/REPAIR.....	SECTION 21, CHAPTER 11 (Book 2 - 87525640)
SPECIFICATIONS .....	21-11-4
SPECIAL TORQUE VALUES .....	21-11-5
SPECIAL TOOLS .....	21-11-6
PRESSURE TESTING SPECIFICATIONS .....	21-11-8
GENERAL SETUP PROCEDURE .....	21-11-9
TRANSMISSION PRESSURE TEST PORT LOCATIONS .....	21-11-11
TESTING THE LUBRICATION PRESSURE .....	21-11-13
TRANSMISSION SERIAL NUMBER IDENTIFICATION .....	21-11-14
TRANSMISSION LUBRICATION CIRCUIT .....	21-11-15
TRANSMISSION OIL FLOW CHART .....	21-11-16
DESCRIPTION OF OPERATION .....	21-11-20
TRANSMISSION POWER FLOW .....	21-11-24
STARTING IN A FORWARD SPEED .....	21-11-26
STARTING IN A REVERSE SPEED .....	21-11-27
TROUBLESHOOTING GUIDE .....	21-11-35
NEUTRAL SAFETY SWITCH ADJUSTMENT .....	21-11-40
TRANSMISSION SPEED SENSOR ADJUSTMENT .....	21-11-40
TRANSMISSION DISASSEMBLY .....	21-11-41
SHIFT LEVER SEAL REPLACEMENT .....	21-11-53
INPUT SHAFT DISASSEMBLY .....	21-11-54
INPUT SHAFT ASSEMBLY .....	21-11-59
PUMP SHAFT DISASSEMBLY .....	21-11-72
PUMP SHAFT ASSEMBLY .....	21-11-75
SPEED SHAFT DISASSEMBLY .....	21-11-81
SPEED SHAFT ASSEMBLY .....	21-11-84
CENTER SHAFT DISASSEMBLY .....	21-11-88
CENTER SHAFT ASSEMBLY .....	21-11-90
RANGE SHAFT DISASSEMBLY .....	21-11-94
RANGE SHAFT ASSEMBLY .....	21-11-967
TRANSMISSION ASSEMBLY .....	21-11-100
HIGH-LOW CLUTCH CONTROL ASSEMBLY .....	21-11-118
HIGH-LOW CONTROL VALVE DISASSEMBLY .....	21-11-119
REGULATOR VALVE ASSEMBLY .....	21-11-121
REGULATOR VALVE DISASSEMBLY AND ASSEMBLY .....	21-11-122
MASTER CLUTCH CONTROL VALVE ASSEMBLY .....	21-11-123
MASTER CLUTCH CONTROL VALVE DISASSEMBLY AND ASSEMBLY .....	21-11-124
LOCKOUT VALVE ASSEMBLY .....	21-11-126
LOCKOUT VALVE DISASSEMBLY AND ASSEMBLY .....	21-11-127
MASTER CLUTCH CABLE ADJUSTMENT .....	21-11-128

## TJ AND T9000 MASTER TABLE OF CONTENTS

16-SPEED POWERSHIFT TRANSMISSION - PRESSURE TESTING AND TROUBLESHOOTING .....	SECTION 21, CHAPTER 12 (Book 2A - 87740916)
RECOMMENDED TOOLS .....	21-12-3
SPECIAL TORQUE VALUES .....	21-12-4
TRANSMISSION TROUBLESHOOTING .....	21-12-5
Important General Information .....	21-12-5
Fault Code Retrieval .....	21-12-5
Fault Codes Recorded .....	21-12-6
No Fault Codes Recorded .....	21-12-7
Solenoid Swap Test .....	21-12-8
CLUTCH TEST PORT IDENTIFICATION .....	21-12-9
Transmission Clutch Pressure Test .....	21-12-10
TEST PORT IDENTIFICATION .....	21-12-15
PRESSURE TEST SPECIFICATIONS AND WORKSHEETS .....	21-12-16
LUBE TEST PORT IDENTIFICATION .....	21-12-19
LUBRICATION CIRCUIT PRESSURE TEST .....	21-12-20
MASTER CLUTCH LUBE TEST .....	21-12-22
PTO CLUTCH PRESSURE TEST .....	21-12-23
PTO AND TRANSMISSION PRESSURE TEST REASSEMBLY .....	21-12-25
16 SPEED POWERSHIFT TRANSMISSION, RANGE SELECTOR, PRESSURE REGULATOR AND MASTER CLUTCH VALVE REPAIR .....	SECTION 21, CHAPTER 13 (Book 2A - 87740916)
SPECIAL TORQUE VALUES .....	21-13-3
REGULATOR VALVE DISASSEMBLY .....	21-13-4
CLEANING, INSPECTION AND SOLENOID VALVE TEST .....	21-13-12
REGULATOR VALVE ASSEMBLY .....	21-13-15
RANGE SELECTOR VALVE DYNAMIC TEST .....	21-13-23
RANGE SELECTOR PWM VALVE TEST .....	21-13-26
RANGE SELECTOR VALVE DISASSEMBLY .....	21-13-29
RANGE SELECTOR VALVE ASSEMBLY .....	21-13-32
PTO SYSTEM HOW IT WORKS AND TROUBLESHOOTING .....	SECTION 31, CHAPTER 1 (Book 3 - 87525644)
POWER TAKE OFF, General Information .....	31-1-3
PTO LUBRICATION, General Information .....	31-1-4
PTO CONTROL	
PTO Control Switch .....	31-1-5
To Operate the PTO .....	31-1-5
To Stop the PTO .....	31-1-5
PTO Electrical Circuit .....	31-1-6
PTO Switch in the OFF Position .....	31-1-7
PTO Switch in the ON Position .....	31-1-8
Diode Suppressed PTO Coil .....	31-1-9
Neutral Start Feature .....	31-1-9
PTO VALVE	
Operational Modes .....	31-1-10
PTO Control Valve Operation .....	31-1-12
PTO Clutch Disengaged .....	31-1-13
PTO Modulated Engagement .....	31-1-14
PTO Fully Engaged .....	31-1-15
PTO Clutch Drive .....	31-1-16
PTO Clutch .....	31-1-17
PTO Brake .....	31-1-18
PTO Drop Box and Clutch .....	31-1-19
Engine RPM Speed Circuit .....	31-1-19

## TJ AND T9000 MASTER TABLE OF CONTENTS

---

PTO SYSTEM TROUBLESHOOTING	
PTO Will Not Engage .....	31-1-20
PTO Will Not Disengage .....	31-1-21
PTO CLUTCH REMOVAL AND INSTALLATION -	
TJ380/430/480/530.....	SECTION 31, CHAPTER 2 (Book 3 - 87525644)
SPECIAL TORQUE VALUES .....	31-2-2
PTO CLUTCH ASSEMBLY REMOVAL .....	31-2-3
PTO CLUTCH ASSEMBLY INSTALLATION .....	31-2-9
PTO DRIVE UNIT (CLUTCH) REPAIR .....	SECTION 31, CHAPTER 3 (Book 3 - 87525644)
SPECIAL TORQUE VALUES .....	31-3-3
SPECIFICATIONS .....	31-3-3
PTO DRIVE UNIT DISASSEMBLY .....	31-3-4
PTO DRIVE UNIT ASSEMBLY (EXPLODED VIEW) .....	31-3-13
PTO CLUTCH AND BRAKE ASSEMBLY (EXPLODED VIEW) .....	31-3-14
PTO DRIVE UNIT ASSEMBLY .....	31-3-15
PTO CLUTCH REMOVAL AND INSTALLATION - TJ280/330.....	SECTION 31, CHAPTER 4 (Book 3 - 87525644)
SPECIAL TORQUE VALUES .....	31-4-2
PTO CLUTCH REMOVAL .....	31-4-3
PTO CLUTCH INSTALLATION .....	31-4-5
PTO TRANSFER CASE REMOVAL AND INSTALLATION .....	SECTION 31, CHAPTER 5 (Book 3 - 87525644)
SPECIAL TORQUE VALUES .....	31-5-2
SPECIAL TOOLS .....	31-5-2
TRANSFER CASE REMOVAL .....	31-5-3
TRANSFER CASE INSTALLATION .....	31-5-10
PTO DROPBOX REPAIR.....	SECTION 31, CHAPTER 6 (Book 3 - 87525644)
SPECIFICATIONS .....	31-6-2
SPECIAL TORQUE VALUES .....	31-6-2
PTO DROPBOX DISASSEMBLY .....	31-6-3
EXPLODED VIEW PTO DROPBOX ASSEMBLY .....	31-6-9
PTO DROPBOX ASSEMBLY .....	31-6-10
PTO DRIVELINE HANGER BEARING.....	SECTION 31, CHAPTER (Book 3 - 87525644)
SPECIAL TORQUE VALUES .....	31-7-2
PTO DRIVELINE HANGER BEARING REMOVAL .....	31-7-3
HANGER BEARING ASSEMBLY REPAIR (Exploded View) .....	31-7-5
HANGER BEARING DISASSEMBLY .....	31-7-6
HANGER BEARING ASSEMBLY .....	31-7-7
PTO DRIVELINE HANGER BEARING INSTALLATION .....	31-7-10
PTO CLUTCH VALVE.....	SECTION 31, CHAPTER 8 (Book 3 - 87525644)
SPECIAL TORQUE VALUES .....	31-8-2
PTO VALVE REMOVAL .....	31-8-3
PTO VALVE DISASSEMBLY .....	31-8-4
CLEANING AND INSPECTION .....	31-8-7
PTO VALVE SOLENOID TESTS .....	31-8-8
PTO VALVE SECTIONAL VIEW .....	31-8-9
PTO VALVE ASSEMBLY .....	31-8-10
PTO VALVE INSTALLATION .....	31-8-13

## TJ AND T9000 MASTER TABLE OF CONTENTS

POWER BRAKES SYSTEM - HOW IT WORKS AND TROUBLESHOOTING .....	SECTION 33, CHAPTER 1 (Book 3 - 87525644)
BRAKE SYSTEM .....	33-1-3
General Information .....	33-1-3
General Description .....	33-1-4
Axle Pump .....	33-1-4
Axle Cooling Filter .....	33-1-5
Axle Lube Solenoid Valve .....	33-1-5
Pressure/Lube Control Valve .....	33-1-6
Brake Lubrication and Jet Pump .....	33-1-6
Pressure/Lube Control Valve .....	33-1-7
Regulated Pressure Spool .....	33-1-8
Park Brake/Tow Valve .....	33-1-10
Park Brake Applied .....	33-1-11
Park Brake Released .....	33-1-11
Tow Valve .....	33-1-11
BRAKE CIRCUIT COMPONENTS .....	33-1-12
Brake Pedal .....	33-1-12
Brake Control Valve .....	33-1-13
Brake Clutch Pack .....	33-1-13
Axle Brake Cylinders .....	33-1-13
HYDRAULIC BRAKE CONTROL .....	33-1-14
General Description .....	33-1-14
Brake Valve .....	33-1-14
Service Brake Circuit .....	33-1-15
Emergency Braking .....	33-1-18
BRAKE SYSTEM TROUBLESHOOTING .....	33-1-19
SERVICE BRAKE VALVE .....	SECTION 33, CHAPTER 2 (Book 3 - 87525644)
SPECIAL TORQUE VALUES .....	33-2-2
RECOMMENDED TOOLS .....	33-2-2
SERVICE BRAKE VALVE REMOVAL .....	33-2-3
SERVICE BRAKE VALVE DISASSEMBLY .....	33-2-6
INSPECTION AND CLEANING .....	33-2-8
BRAKE MAL-FUNCTION SWITCH TEST .....	33-2-8
SERVICE BRAKE VALVE EXPLODED VIEW .....	33-2-9
SERVICE BRAKE VALVE SECTIONAL VIEW .....	33-2-10
SERVICE BRAKE VALVE ASSEMBLY .....	33-2-11
SERVICE BRAKE VALVE INSTALLATION .....	33-2-13
<b>2006 AND 2007 MODEL YEAR HYDRAULIC SCHEMATIC .....</b>	<b>POSTER 87522497</b>
<b>2008 MODEL YEAR HYDRAULIC SCHEMATIC .....</b>	<b>POSTER 87722947</b>
HOW TO READ SYMBOLS IN A HYDRAULIC SCHEMATIC .....	SECTION 35, CHAPTER 1 (Book 4 - 87618159)
Introduction .....	35-1-3
Circuit Diagrams .....	35-1-3
Symbol Systems .....	35-1-3
Using Schematic Symbols .....	35-1-3
Reservoirs .....	35-1-3
Lines, Tubes and Hoses .....	35-1-4
Crossing or Joining Lines .....	35-1-5
Pump Symbols .....	35-1-5
Hydraulic Motor Symbols .....	35-1-6
Cylinder Symbols .....	35-1-6

## TJ AND T9000 MASTER TABLE OF CONTENTS

Pressure Control Symbols .....	35-1-7
Normally Closed .....	35-1-7
Normally Open .....	35-1-7
Relief Valve .....	35-1-7
Pressure Reducing Valve .....	35-1-7
Sequence Valve .....	35-1-8
Directional Control Symbols .....	35-1-8
Simplified Symbols .....	35-1-8
One Way Valve .....	35-1-8
By Pass Valve .....	35-1-8
Composite Symbols .....	35-1-8
One Way Valves .....	35-1-8
Two Position Valves .....	35-1-8
Three Position Valves .....	35-1-9
Actuating Controls .....	35-1-9
Flow Control Symbols .....	35-1-9
Restrictors .....	35-1-9
Accessories .....	35-1-10
SIMPLE SCHEMATIC .....	35-1-12
COMMON SYMBOLS .....	35-1-14
Lines and Line Functions .....	35-1-14
Mechanical Devices .....	35-1-14
Pumps and Motors .....	35-1-14
Reservoirs .....	35-1-15
Cylinders .....	35-1-15
Valves .....	35-1-15
Valve Actuators .....	35-1-17
Accessories.....	35-1-17

### HYDRAULIC SYSTEM HOW IT WORKS

WITH TROUBLESHOOTING .....	SECTION 35, CHAPTER 2 (Book 4 - 87618159)
GENERAL INTRODUCTION .....	35-2-3
SPECIFICATIONS .....	35-2-5
MODEL NUMBER LOCATION .....	35-2-7
STANDARD AND HIGH FLOW PFC PISTON PUMPS .....	35-2-8
Principle of Control .....	35-2-8
Engine Start Up .....	35-2-8
Operating Modes .....	35-2-8
Low Pressure Standby .....	35-2-8
Pressure and Flow Delivery and Compensation Principle .....	35-2-8
Increased Flow Demand .....	35-2-9
Decreased Flow Demand .....	35-2-9
High Pressure Standby .....	35-2-9
Return to Low Pressure Standby .....	35-2-9
Destroke Valve .....	35-2-9
Model 480 and 530 Tractor Hydraulic Fan Pump And Motor .....	35-2-10
PRESSURE/FLOW COMPENSATED PUMP .....	35-2-12
PFC CHARGE PRESSURE TEST .....	35-2-14
LOW PRESSURE AND HIGH PRESSURE STANDBY TESTS .....	35-2-16
PFC PISTON PUMP FLOW TEST AT REMOTE COUPLERS .....	35-2-17
MEGAFLOW PUMP LOW PRESSURE AND HIGH PRESSURE STANDBY TESTS .....	35-2-18
MEGAFLOW PFC PISTON PUMP FLOW TEST AT REMOTE COUPLERS .....	35-2-20
REGULATED PRESSURE TEST .....	35-2-21
REGULATED PRESSURE ADJUSTMENT PROCEDURE .....	35-2-22
REGULATED/LUBE PUMP TESTS .....	35-2-23

## TJ AND T9000 MASTER TABLE OF CONTENTS

---

480 and 530 HYDRAULIC FAN PUMP LOW PRESSURE STANDBY, HIGH PRESSURE AND FLOW TESTS .....	35-2-25
480 and 530 HYDRAULIC FAN MOTOR TEST .....	35-2-27
REGULATED PRESSURE / LUBE CONTROL SYSTEM .....	35-2-28
REGULATOR VALVE .....	35-2-29
480 and 530 HYDRAULIC FAN CIRCUIT .....	35-2-30
480 and 530 HYDRAULIC FAN SYSTEM .....	35-2-31
STEERING PRIORITY VALVE .....	35-2-32
HYDRAULIC FAN/MOTOR REMOVAL AND FAN MOTOR/PUMP REPAIR - TJ480/530 .....	SECTION 35, CHAPTER 3 (Book 4 - 87618159)
SPECIAL TORQUE VALUES .....	35-3-3
HYDRAULIC FAN AND FAN MOTOR REMOVAL .....	35-3-4
HYDRAULIC FAN AND FAN MOTOR INSTALLATION .....	35-3-15
HYDRAULIC FAN PUMP REMOVAL .....	35-3-28
HYDRAULIC FAN PUMP INSTALLATION .....	35-3-31
HYDRAULIC FAN MOTOR DISASSEMBLY .....	35-3-35
HYDRAULIC FAN MOTOR ASSEMBLY .....	35-3-39
COMPENSATOR CONTROL VALVE REMOVAL AND DISASSEMBLY .....	35-3-42
COMPENSATOR CONTROL VALVE ASSEMBLY AND INSTALLATION .....	35-3-43
HYDRAULIC FAN PUMP DISASSEMBLY .....	35-3-44
PUMP CLEANING AND INSPECTION .....	35-3-51
PFC PISTON PUMP REMOVAL AND INSTALLATION - TJ380/430/480/530 .....	SECTION 35, CHAPTER 4 (Book 4 - 87618159)
SPECIAL TORQUE VALUES .....	35-4-2
SPECIAL TOOLS .....	35-4-2
PISTON PUMP REMOVAL .....	35-4-3
PISTON PUMP INSTALLATION .....	35-4-8
START-UP PROCEDURE .....	35-4-13
GEAR PUMP REMOVAL AND INSTALLATION - TJ380/430/480/530 .....	SECTION 35, CHAPTER 5 (Book 4 - 87618159)
SPECIAL TORQUE VALUES .....	35-5-2
SPECIAL TOOLS .....	35-5-2
GEAR PUMP REMOVAL .....	35-5-3
GEAR PUMP INSTALLATION .....	35-5-5
PFC AXIAL PISTON PUMP REPAIR .....	SECTION 35, CHAPTER 6 (Book 4 - 87618159)
SPECIFICATIONS .....	35-6-3
SPECIAL TORQUE VALUES .....	35-6-4
PISTON PUMP DISASSEMBLY .....	35-6-5
PRESSURE/FLOW COMPENSATOR DISASSEMBLY .....	35-6-12
PISTON PUMP CLEANING AND INSPECTION .....	35-6-16
PRESSURE/FLOW COMPENSATOR ASSEMBLY EXPLODED VIEW .....	35-6-20
PRESSURE/FLOW COMPENSATOR ASSEMBLY .....	35-6-21
PISTON PUMP ASSEMBLY EXPLODED VIEW .....	35-6-24
PISTON PUMP ASSEMBLY .....	35-6-25

## TJ AND T9000 MASTER TABLE OF CONTENTS

HITCH SYSTEM - HOW IT WORKS .....	SECTION 35, CHAPTER 7 (Book 4 - 87618159)
THREE POINT HITCH .....	35-7-3
ELECTRONIC HITCH CONTROL .....	35-7-4
Operator Controls and Settings .....	35-7-5
ELECTRONIC HITCH CONTROL SYSTEM FEATURES .....	35-7-7
HITCH CONTROL VALVE .....	35-7-14
General .....	35-7-14
Raise and Lower Solenoids .....	35-7-14
Raise and Lower Pilot Spools .....	35-7-14
Raise Spool .....	35-7-14
Lower Poppet .....	35-7-14
Load Check Ball .....	35-7-14
Manual Raise or Lower Control Pins .....	35-7-14
Overload Relief Valve .....	35-7-14
Neutral Function and Troubleshooting .....	35-7-16
Raise Function and Troubleshooting .....	35-7-18
Raise Function and Troubleshooting .....	35-7-19
Lower Function and Troubleshooting .....	35-7-20
Lower Function and Troubleshooting .....	35-7-21
THREE POINT HITCH VALVE.....	SECTION 35, CHAPTER 8 (Book 4 - 87618159)
SPECIAL TORQUE VALUES .....	35-8-2
TPH VALVE REMOVAL .....	35-8-3
TPH VALVE DISASSEMBLY .....	35-8-5
CLEANING AND INSPECTION .....	35-8-9
HITCH VALVE SOLENOID TEST .....	35-8-11
THREE POINT HITCH VALVE .....	35-8-13
TPH VALVE ASSEMBLY .....	35-8-14
TPH VALVE INSTALLATION .....	35-8-18
REMOTE ELECTRONIC HYD SYSTEMS - HOW IT WORKS/TROUBLESHOOTING.....	SECTION 35, CHAPTER 9 (Book 4 - 87618159)
REMOTE HYDRAULIC SYSTEM INTRODUCTION .....	35-9-3
REMOTE SYSTEM CONTROLS (ELECTRONIC) .....	35-9-5
Remote Function Control .....	35-9-6
Full Function Position .....	35-9-6
Neutral Lock Position .....	35-9-6
Float Lock-Out Position .....	35-9-7
Non-Detent Raise Position .....	35-9-7
Hydraulic Motor Position .....	35-9-7
Hydraulic Valve Timer Control .....	35-9-9
Variable Flow Control .....	35-9-9
Remote Valve Load Check Valves .....	35-9-10
REMOTE VALVE PROPORTIONAL CURRENT CONTROL (PCC) SOLENOID OPERATION .....	35-9-11
REMOTE VALVE OPERATION (ELECTRONIC) .....	35-9-12
REMOTE VALVE PROBLEMS AND WHERE TO LOOK .....	35-9-20
ELECTRONIC REMOTE VALVE SYSTEM TESTING .....	35-9-21
FAULT CODE RETRIEVAL .....	35-9-21
REGULATED PRESSURE CHECK .....	35-9-24
REMOTE VALVE HIGH PRESSURE TEST .....	35-9-24
REMOTE VALVE PROPORTIONAL SOLENOID CHECK .....	35-9-26
LOW PRESSURE AND HIGH PRESSURE STANDBY TESTS .....	35-9-27
REMOTE VALVE FLOW TEST .....	35-9-29
REMOTE VALVE SIGNAL CHECK AND HITCH SIGNAL CHECK TEST .....	35-9-31
REMOTE VALVE COUPLER TEST .....	35-9-32
LOAD CHECK INSPECTION .....	35-9-33

## TJ AND T9000 MASTER TABLE OF CONTENTS

HYDRAULIC GEAR (CHARGE) PUMP REPAIR .....	SECTION 35, CHAPTER 10 (Book 4 - 87618159)
SPECIAL TORQUE VALUES .....	35-10-2
PUMP DISASSEMBLY .....	35-10-3
CLEANING AND INSPECTION .....	35-10-7
PUMP ASSEMBLY .....	35-10-8
HYDRAULIC FILTERS .....	SECTION 35, CHAPTER 11 (Book 4 - 87618159)
SPECIFICATIONS .....	35-11-2
SERVICING THE HYDRAULIC AND TRANSMISSION OIL FILTERS .....	35-11-3
REMOTE AUXILIARY VALVE AND COUPLER, REMOVAL/INSTALLATION/REPAIR .....	SECTION 35, CHAPTER 12 (Book 4 - 87618159)
SPECIAL TORQUE VALUES .....	35-12-3
REMOTE AUXILIARY VALVE MANIFOLD SEAL REPLACEMENT .....	35-12-4
REMOTE AUXILIARY VALVE SOLENOID TEST .....	35-12-9
REMOTE AUXILIARY VALVE SOLENOID REMOVAL AND DISASSEMBLY .....	35-12-9
REMOTE AUXILIARY VALVE SOLENOID ASSEMBLY AND INSTALLATION .....	35-12-12
REMOTE AUXILIARY VALVE CONTROL SPOOL REMOVAL .....	35-12-15
REMOTE AUXILIARY VALVE CONTROL SPOOL INSTALLATION .....	35-12-17
REMOTE AUXILIARY VALVE REMOVAL .....	35-12-19
REMOTE AUXILIARY VALVE SECTION DISASSEMBLY .....	35-12-20
LOAD CHECK VALVE DISASSEMBLY .....	35-12-25
REMOTE AUXILIARY VALVE SECTION ASSEMBLY .....	35-12-27
LOAD CHECK VALVE ASSEMBLY .....	35-12-29
REMOTE AUXILIARY VALVE SECTION ASSEMBLY .....	35-12-31
REMOTE AUXILIARY VALVE SECTION INSTALLATION .....	35-12-36
HYDRAULIC GEAR PUMP AND PISTON PUMP REMOVE/INSTALL - TJ280/330 .....	SECTION 35, CHAPTER 13 (Book 4 - 87618159)
SPECIAL TORQUE VALUES .....	35-13-3
RECOMMENDED TOOLS .....	35-13-3
GEAR PUMP REMOVAL .....	35-13-4
GEAR PUMP INSTALLATION .....	35-13-7
PFC PISTON PUMP REMOVAL .....	35-13-9
PFC PISTON PUMP INSTALLATION .....	35-13-14
START-UP PROCEDURE .....	35-13-19
DRAWBAR REMOVAL AND INSTALLATION .....	SECTION 37, CHAPTER 1 (Book 4 - 87618159)
SPECIAL TORQUE VALUES .....	37-1-2
SPECIAL TOOLS .....	37-1-2
DRAWBAR REMOVAL .....	37-1-3
DRAWBAR INSTALLATION .....	37-1-7
CENTER HINGE BEARINGS AND CONNECTING LINK - TJ380/430/480/530 .....	SECTION 39, CHAPTER 1 (Book 4 - 87618159)
SPECIAL TORQUE VALUES .....	39-1-3
SPECIAL TOOL .....	39-1-3
RECOMMENDED TOOLS .....	39-1-3
GENERAL INFORMATION .....	39-1-5
SEPARATING THE FRONT AND REAR FRAMES .....	39-1-5
BOTTOM HINGE BEARING REPLACEMENT .....	39-1-11
CONNECTING LINK FRONT BUSHING REPLACEMENT .....	39-1-19
CONNECTING LINK REMOVAL .....	39-1-21
CONNECTING LINK REAR BEARING REPLACEMENT .....	39-1-22
CONNECTING LINK INSTALLATION .....	39-1-23
CONNECTING THE FRONT AND REAR FRAMES .....	39-1-25

## TJ AND T9000 MASTER TABLE OF CONTENTS

---

### CENTER HINGE BEARINGS AND CONNECTING LINK -

TJ280/330.....	SECTION 39, CHAPTER 2 (Book 4 - 87618159)
SPECIAL TORQUE VALUES .....	39-2-3
SPECIAL TOOL .....	39-2-3
RECOMMENDED TOOLS .....	39-2-3
GENERAL INFORMATION .....	39-2-5
SEPARATING THE FRONT AND REAR FRAMES .....	39-2-5
BOTTOM HINGE BEARING REPLACEMENT .....	39-2-11
CONNECTING LINK FRONT BUSHING REPLACEMENT .....	39-2-19
CONNECTING LINK REMOVAL .....	39-2-21
CONNECTING LINK REAR BEARING REPLACEMENT .....	39-2-22
CONNECTING LINK INSTALLATION .....	39-2-23
CONNECTING THE FRONT AND REAR FRAMES .....	39-2-25

### CENTER HINGE BEARINGS AND CONNECTING LINK,

T9030, 9040, 9050, AND 9060 S/N Z7F204001 AND AFTER....	SECTION 39, CHAPTER 3 (Book 4A - 87740917)
SPECIAL TORQUE VALUES .....	39-3-3
SPECIAL TOOL .....	39-3-3
RECOMMENDED TOOLS .....	39-3-3
GENERAL INFORMATION .....	39-3-5
SEPARATING THE FRONT AND REAR FRAMES .....	39-3-5
BOTTOM HINGE BEARING REPLACEMENT .....	39-3-12
CONNECTING LINK FRONT BUSHING REPLACEMENT .....	39-3-20
CONNECTING LINK REMOVAL .....	39-3-22
CONNECTING LINK REAR BEARING REPLACEMENT .....	39-3-23
CONNECTING LINK INSTALLATION .....	39-3-24
CONNECTING THE FRONT AND REAR FRAMES .....	39-3-26

STEERING COLUMN REPAIR.....	SECTION 41, CHAPTER 1 (Book 5 - 87525646)
TILT STEERING COLUMN DISASSEMBLY .....	41-1-3
TILT STEERING COLUMN ASSEMBLY .....	41-1-5

### CENTER CONSOLE, STEERING COLUMN,

PEDALS AND SWITCHES.....	SECTION 41, CHAPTER 2 (Book 5 - 87525646)
SPECIAL TOOLS .....	41-2-3
SPECIAL TORQUE VALUES .....	41-2-3
STEERING WHEEL REMOVAL .....	41-2-4
TRANSMISSION SHIFT LEVER REMOVAL .....	41-2-4
CENTER CONSOLE COVER REMOVAL .....	41-2-7
CENTER CONSOLE COVER INSTALLATION .....	41-2-9
TRANSMISSION SHIFT INSTALLATION .....	41-2-11
STEERING WHEEL INSTALLATION .....	41-2-14
STEERING COLUMN REMOVAL .....	41-2-15
STEERING COLUMN INSTALLATION .....	41-2-16
TILT STEERING COLUMN RELEASE CABLE REMOVAL .....	41-2-17
TILT STEERING COLUMN RELEASE CABLE INSTALLATION .....	41-2-18
CLUTCH AND BRAKE PEDAL ASSEMBLY REMOVAL .....	41-2-20
CLUTCH AND BRAKE PEDAL ASSEMBLY INSTALLATION .....	41-2-22
DECELERATION SWITCH REMOVAL .....	41-2-25
DECELERATION SWITCH INSTALLATION .....	41-2-26
CLUTCH POTENTIOMETER REMOVAL .....	41-2-27
CLUTCH POTENTIOMETER INSTALLATION .....	41-2-28
CLUTCH POTENTIOMETER CALIBRATION .....	41-2-29
CLUTCH POTENTIOMETER CALIBRATION .....	41-2-31
DIFFERENTIAL LOCK BRAKE SWITCH REMOVAL .....	41-2-34
DIFFERENTIAL LOCK BRAKE SWITCH INSTALLATION .....	41-2-34

## TJ AND T9000 MASTER TABLE OF CONTENTS

HVAC PLENUM ACTUATOR MOTOR AND LOUVER REMOVAL .....	41-2-36
HVAC PLENUM ACTUATOR MOTOR AND LOUVER INSTALLATION .....	41-2-39
TRANSMISSION SHIFT LEVER DISASSEMBLY .....	41-2-42
TRANSMISSION SHIFT LEVER ASSEMBLY .....	41-2-49
STEERING HAND PUMP & PRIORITY/CONTROL VALVE REMOVE/INSTALL - TJ380/430/480/530 AND T9030/40/50/60 TRACTORS.....SECTION 41, CHAPTER 3 (Book 5 - 87525646)	
SPECIAL TOOLS .....	41-3-2
SPECIAL TORQUE VALUES .....	41-3-2
STEERING HAND PUMP REMOVAL .....	41-3-3
STEERING TUBE LINES REMOVAL .....	41-3-5
STEERING PRIORITY/CONTROL VALVE REMOVAL .....	41-3-7
STEERING PRIORITY/CONTROL VALVE INSTALLATION .....	41-3-8
STEERING TUBE LINES INSTALLATION .....	41-3-9
STEERING HAND PUMP INSTALLATION .....	41-3-11
STEERING HAND PUMP & PRIORITY/CONTROL VALVE REMOVE/INSTALL - TJ280/330 AND T9010/20 TRACTORS.....SECTION 41, CHAPTER 4 (Book 5 - 87525646)	
SPECIAL TOOLS .....	41-4-2
SPECIAL TORQUE VALUES .....	41-4-2
STEERING HAND PUMP REMOVAL .....	41-4-3
STEERING TUBE LINES REMOVAL .....	41-4-5
STEERING PRIORITY/CONTROL VALVE REMOVAL .....	41-4-7
STEERING PRIORITY/CONTROL VALVE INSTALLATION .....	41-4-10
STEERING TUBE LINES INSTALLATION .....	41-4-13
STEERING HAND PUMP INSTALLATION .....	41-4-15
STEERING SYSTEM HOW IT WORKS.....SECTION 41, CHAPTER 5 (Book 5 - 87525646)	
ELECTROHYDRAULIC STEERING SYSTEM (EHPS) .....	41-5-3
PRIORITY / STEERING CONTROL VALVE (EHPS) .....	41-5-4
EHPS STEERING SYSTEM .....	41-5-6
Engine Running Steering in Neutral Position .....	41-5-7
Engine Running, Turning Left .....	41-5-9
EHPS Steering System .....	41-5-11
280 AND 330 MODELS STEERING LAYOUT .....	41-5-12
380, 430, 480 AND 530 MODELS STEERING LAYOUT .....	41-5-13
FRONT AXLE REMOVAL AND INSTALLATION - TJ380/430/480/530.....SECTION 44, CHAPTER 1 (Book 5 - 87525646)	
SPECIAL TORQUE VALUES .....	44-1-3
SPECIAL TOOLS .....	44-1-3
RECOMMENDED TOOLS .....	44-1-3
FRONT AXLE REMOVAL .....	44-1-4
FRONT AXLE INSTALLATION .....	44-1-10
FRONT AXLE REMOVAL AND INSTALLATION - TJ280/330.....SECTION 44, CHAPTER 2 (Book 5 - 87525646)	
SPECIAL TORQUE VALUES .....	44-2-3
SPECIAL TOOLS .....	44-2-3
RECOMMENDED TOOLS .....	44-2-3
FRONT AXLE REMOVAL .....	44-2-4
FRONT AXLE INSTALLATION .....	44-2-10

## TJ AND T9000 MASTER TABLE OF CONTENTS

---

### REAR AXLE REMOVAL AND INSTALLATION -

TJ380/430/480/530.....	SECTION 44, CHAPTER 3 (Book 5 - 87525646)
SPECIAL TORQUE VALUES .....	44-3-3
SPECIAL TOOLS .....	44-3-3
RECOMMENDED TOOLS .....	44-3-3
REAR AXLE REMOVAL .....	44-3-4
REAR AXLE INSTALLATION .....	44-3-13

### REAR AXLE REMOVAL AND INSTALLATION - TJ280/330 ..... SECTION 44, CHAPTER 4 (Book 5 - 87525646)

SPECIAL TORQUE VALUES .....	44-4-3
SPECIAL TOOLS .....	44-4-3
RECOMMENDED TOOLS .....	44-4-3
REAR AXLE REMOVAL .....	44-4-4
REAR AXLE INSTALLATION .....	44-4-12

### FRONT AND REAR AXLE REPAIR - 300 SERIES AXLES ..... SECTION 44, CHAPTER 5 (Book 5 - 87525646)

AXLE SPECIFICATIONS .....	44-5-4
SPECIAL TORQUE VALUES .....	44-5-4
SPECIAL TOOLS .....	44-5-5
RECOMMENDED TOOLS .....	44-5-6
GENERAL INFORMATION .....	44-5-12
AXLE FINAL DRIVE REMOVAL .....	44-5-12
FINAL DRIVE DISASSEMBLY .....	44-5-14
PLANETARY CARRIER DISASSEMBLY .....	44-5-18
PLANETARY CARRIER ASSEMBLY .....	44-5-19
FINAL DRIVE HOUSING ASSEMBLY .....	44-5-21
FRONT COVER REMOVAL .....	44-5-26
FRONT COVER DISASSEMBLY .....	44-5-28
FRONT COVER ASSEMBLY .....	44-5-31
RH SIDE BRAKE CARRIER REMOVAL .....	44-5-37
BRAKE CARRIER/BEARING SUPPORT DISASSEMBLY .....	44-5-38
RH BRAKE CARRIER ASSEMBLY PROCEDURES .....	44-5-42
DIFFERENTIAL REMOVAL .....	44-5-47
DIFFERENTIAL CASE DISASSEMBLY PROCEDURES .....	44-5-48
DIFFERENTIAL CASE ASSEMBLY PROCEDURES .....	44-5-51
LH DIFFERENTIAL BEARING CARRIER DISASSEMBLY .....	44-5-57
LH DIFFERENTIAL BEARING CARRIER ASSEMBLY .....	44-5-58
ADJUSTING BEVEL PINION GEAR DEPTH .....	44-5-59
SETTING DIFFERENTIAL CARRIER BEARING PRELOAD .....	44-5-62
SETTING RING/PINION GEAR BACKLASH .....	44-5-65
RH BEARING CARRIER/BRAKE SUPPORT INSTALLATION .....	44-5-69
FRONT COVER INSTALLATION .....	44-5-70
LEAK TESTING THE SERVICE BRAKE .....	44-5-73
LEAK TESTING THE PARK BRAKE .....	44-5-74
LEAK TESTING THE DIFFERENTIAL LOCK .....	44-5-75
FINAL DRIVE INSTALLATION .....	44-5-77

### FRONT AND REAR AXLE REPAIR - 500 SERIES AXLES ..... SECTION 44, CHAPTER 6 (Book 5 - 87525646)

AXLE IDENTIFICATION .....	44-6-4
AXLE SPECIFICATIONS .....	44-6-5
SPECIAL TORQUE VALUES .....	44-6-5
SPECIAL TOOLS .....	44-6-6
RECOMMENDED TOOLS .....	44-6-8
GENERAL INFORMATION .....	44-6-13
AXLE FINAL DRIVE REMOVAL .....	44-6-13
FINAL DRIVE DISASSEMBLY .....	44-6-15

## TJ AND T9000 MASTER TABLE OF CONTENTS

PLANETARY CARRIER DISASSEMBLY .....	44-6-19
PLANETARY CARRIER ASSEMBLY .....	44-6-20
FINAL DRIVE HOUSING ASSEMBLY .....	44-6-22
PINION CARRIER REMOVAL .....	44-6-28
PINION CARRIER DISASSEMBLY .....	44-6-32
PINION CARRIER ASSEMBLY .....	44-6-34
BRAKE CARRIER/BEARING SUPPORT REMOVAL .....	44-6-39
BRAKE CARRIER/BEARING SUPPORT DISASSEMBLY .....	44-6-40
RH BRAKE CARRIER ASSEMBLY PROCEDURES .....	44-6-44
DIFFERENTIAL REMOVAL AND DISASSEMBLY .....	44-6-49
DIFFERENTIAL CASE ASSEMBLY PROCEDURES .....	44-6-53
LH DIFFERENTIAL BEARING SUPPORT DISASSEMBLY .....	44-6-59
LH DIFFERENTIAL BEARING SUPPORT ASSEMBLY .....	44-6-60
ADJUSTING BEVEL PINION GEAR DEPTH .....	44-6-61
SETTING DIFFERENTIAL CARRIER BEARING PRELOAD .....	44-6-64
SETTING RING/PINION GEAR BACKLASH .....	44-6-67
CHECKING FOR CORRECT BEVEL PINION/GEAR TOOTH CONTACT .....	44-6-68
BRAKE CARRIER/BEARING SUPPORT INSTALLATION .....	44-6-70
PERFORMING THE BRAKE LEAK DOWN TEST .....	44-6-73
DIFFERENTIAL LOCK LEAK TEST .....	44-6-74
FINAL DRIVE INSTALLATION .....	44-6-77
FRONT AND REAR AXLE REPAIR - 400 SERIES AXLES .....	SECTION 44, CHAPTER 7 (Book 5 - 87525646)
AXLE IDENTIFICATION .....	44-7-4
AXLE SPECIFICATIONS .....	44-7-5
SPECIAL TORQUE VALUES .....	44-7-5
SPECIAL TOOLS .....	44-7-6
RECOMMENDED TOOLS .....	44-7-7
GENERAL INFORMATION .....	44-7-13
AXLE FINAL DRIVE REMOVAL .....	44-7-13
FINAL DRIVE DISASSEMBLY .....	44-7-15
PLANETARY CARRIER DISASSEMBLY .....	44-7-19
PLANETARY CARRIER ASSEMBLY .....	44-7-20
FINAL DRIVE HOUSING ASSEMBLY .....	44-7-22
FRONT COVER REMOVAL .....	44-7-28
FRONT COVER DISASSEMBLY .....	44-7-31
FRONT COVER ASSEMBLY .....	44-7-33
RH SIDE BRAKE CARRIER REMOVAL .....	44-7-39
BRAKE CARRIER/BEARING SUPPORT DISASSEMBLY .....	44-7-40
RH BRAKE CARRIER ASSEMBLY PROCEDURES .....	44-7-44
DIFFERENTIAL REMOVAL .....	44-7-49
DIFFERENTIAL CASE DISASSEMBLY PROCEDURES .....	44-7-50
DIFFERENTIAL CASE ASSEMBLY PROCEDURES .....	44-7-53
LH DIFFERENTIAL BEARING CARRIER DISASSEMBLY .....	44-7-59
LH DIFFERENTIAL BEARING CARRIER ASSEMBLY .....	44-7-60
ADJUSTING BEVEL PINION GEAR DEPTH .....	44-7-61
SETTING DIFFERENTIAL CARRIER BEARING PRELOAD .....	44-7-64
SETTING RING/PINION GEAR BACKLASH .....	44-7-67
RH BEARING CARRIER/BRAKE SUPPORT INSTALLATION .....	44-7-71
FRONT COVER INSTALLATION .....	44-7-72
LEAK TESTING THE SERVICE BRAKE .....	44-7-75
LEAK TESTING THE PARK BRAKE .....	44-7-76
LEAK TESTING THE DIFFERENTIAL LOCK .....	44-7-77
FINAL DRIVE INSTALLATION .....	44-7-79

## TJ AND T9000 MASTER TABLE OF CONTENTS

AXLE COOLING AND LUBRICATION SYSTEM .....	SECTION 44, CHAPTER 8 (Book 5 - 87525646)
AXLE LUBRICATION CIRCUIT .....	44-8-3
TESTING THE AXLE LUBRICATION CIRCUIT .....	44-8-7
Visual Inspection .....	44-8-7
Axle Lubrication Pressure Test .....	44-8-7
Air Flow Test .....	44-8-7
Axle Pressure Test .....	44-8-7
300 SERIES AXLE LUBRICATION CIRCUIT .....	44-8-8
300 SERIES AXLE LUBRICATION CIRCUIT .....	44-8-9
400 SERIES AXLE LUBRICATION CIRCUIT .....	44-8-10
400 SERIES AXLE LUBRICATION CIRCUIT .....	44-8-11
500 SERIES AXLE LUBRICATION CIRCUIT .....	44-8-12
500 SERIES AXLE LUBRICATION CIRCUIT .....	44-8-13
AIR CONDITIONER SYSTEM SERVICE.....	SECTION 50, CHAPTER 1 (Book 6 - 87525647)
SPECIFICATIONS .....	50-1-4
SPECIAL TORQUES .....	50-1-4
SPECIAL TOOLS .....	50-1-4
SAFETY PROCEDURES .....	50-1-8
AIR CONDITIONER SYSTEM REFRIGERANT RECOVERY .....	50-1-9
RECOVERING PURE 134A REFRIGERANT .....	50-1-11
RECOVERING CONTAMINATED REFRIGERANT WITH OEM1691 .....	50-1-15
Preparing the Tank .....	50-1-15
Recovery Process .....	50-1-17
AIR CONDITIONER SYSTEM EVACUATION AND RECHARGING .....	50-1-22
AIR CONDITIONING TEMPERATURE/PRESSURE CHART .....	50-1-27
LEAK DETECTION .....	50-1-28
Electronic Testing with OEM1437 .....	50-1-29
Florescent Leak Detection .....	50-1-29
Fluorescent Dye Injection .....	50-1-30
Recovery Station Dye Injector Tool with a System in a Vacuum .....	50-1-30
Recovery Station Dye Injector Tool with a Charged System .....	50-1-31
Quick and Easy Dye Injector Tool with a Charged System .....	50-1-32
Compressor Oil Port .....	50-1-33
SP-20 PAG Oil Return Bottle .....	50-1-34
Fluorescent Leak Testing .....	50-1-35
A/C SYSTEM FLUSHING PROCEDURE .....	50-1-36
Required Tools .....	50-1-37
Precautions .....	50-1-38
Component Flushing Procedure with Power Flush 17550 .....	50-1-39
Complete Circuit Flushing Procedure with Power Flush 17550 .....	50-1-42
Back Flushing the Thermal Expansion Valve or Refrigerant Line .....	50-1-46
Post Flushing Procedures .....	50-1-48
Flushing Solvent Disposal .....	50-1-49
A/C SYSTEM COMPONENTS .....	50-1-50
Cab HVAC Box Components - Automatic Temperature Control .....	50-1-50
TJ280/330 and T9010/20 Chassis Components .....	50-1-51
TJ380/430/480/530 and T9030/40/50/60 Chassis Components .....	50-1-53
A/C COMPRESSOR CLUTCH .....	50-1-55
Clutch Removal .....	50-1-55
Exploded View of Clutch .....	50-1-58
Compressor Clutch Replacement .....	50-1-59

## TJ AND T9000 MASTER TABLE OF CONTENTS

A/C COMPRESSOR .....	50-1-63
Oil Level Check or Adjustment .....	50-1-63
Injection Method .....	50-1-63
Dipstick Method .....	50-1-64
Compressor Removal - TJ280/330 and T9010/20 .....	50-1-66
Compressor Installation - TJ280/330 and T9010/20 .....	50-1-68
Compressor Removal - TJ380/430/480/530 and T9030/40/50/60 .....	50-1-70
Compressor Installation - TJ380/430/480/530 and T9030/40/50/60 .....	50-1-71
Compressor Belt Installation and Adjustment - TJ280/330 and T9010/20 .....	50-1-72
THERMAL EXPANSION VALVE TESTING .....	50-1-73
THERMAL EXPANSION VALVE REPLACEMENT .....	50-1-74
CONDENSER AND RECEIVER-DRIER .....	50-1-75
ACCESSING THE HVAC BOX .....	50-1-76
EVAPORATOR TEMPERATURE SENSOR LOCATION .....	50-1-77
BLOWER MOTOR REPLACEMENT .....	50-1-78
HEATER CONTROL VALVE REPLACEMENT .....	50-1-78
EVAPORATOR/HEATER ASSEMBLY .....	50-1-79
Evaporator/Heater Assembly Removal .....	50-1-79
Evaporator/Heater Assembly Installation .....	50-1-82
Post Replacement Procedures .....	50-1-84
EVAPORATOR/HEATER ASSEMBLY SEALING AND CLEANING .....	50-1-85
BLOWER AND EVAPORATOR REFERENCE ILLUSTRATION .....	50-1-86
ATC CONTROLLER, BLOWER DRIVER & STANDARD A/C CONTROLLER REPLACEMENT .....	50-1-87
ACCESSING AND REPLACING THE MODE DOOR MOTOR .....	50-1-88
CAB INTAKE AIR FILTER SERVICE .....	50-1-91
CAB RECIRCULATION AIR FILTER SERVICE .....	50-1-92
CAB PRESSURIZATION TEST .....	50-1-93
CAB PRESSURIZER MOTOR REPLACEMENT .....	50-1-95
VISCOUS FAN DRIVE .....	50-1-95
AIR CONDITIONING SYSTEM -TROUBLESHOOTING .....	SECTION 50, CHAPTER 2 (Book 5 - 87525646)
SAFETY PROCEDURES .....	50-2-4
SPECIAL TOOLS .....	50-2-5
A/C THERMAL OPERATION .....	50-2-6
A/C SYSTEM COMPONENTS .....	50-2-8
Cab HVAC Box Components - Automatic Temperature Control .....	50-2-8
TJ280/330 and T9010/20 Chassis Components .....	50-2-10
TJ380/430/480/530 and T9030/40/50/60 Chassis Components .....	50-2-12
AUTOMATIC TEMPERATURE CONTROL (ATC) OPERATION .....	50-2-14
ATC FAULT CODES .....	50-2-21
ATC Fault Code 111 .....	50-2-21
ATC Fault Code 112 .....	50-2-22
ATC Fault Code 115 .....	50-2-22
ATC Fault Code 116 .....	50-2-23
ATC Fault Code 120 .....	50-2-23
ATC Fault Code 121 .....	50-2-24
ATC Fault Code 122 .....	50-2-24
ATC Fault Code 125 .....	50-2-25
ATC Fault Code 126 .....	50-2-25
ATC Fault Code 127 .....	50-2-26
ATC Fault Code 128 .....	50-2-26
ATC Fault Code 129 .....	50-2-27
ATC Fault Code 130 .....	50-2-27
ATC Fault Code 131 .....	50-2-28
ATC Fault Code 132 .....	50-2-28
ATC Fault Code 133 .....	50-2-29
ATC Fault Code 134 .....	50-2-30

**TJ AND T9000 MASTER TABLE OF CONTENTS**

---

LOCATING SYSTEM PROBLEMS WITHOUT FAULT CODES .....	50-2-31
Controller-Based Resistance Tests .....	50-2-31
ATC CONTROLLER TEST (CONNECTOR J8 TEST POINTS) .....	50-2-33
FIELD REPORTED SYMPTOMS/CAUSES .....	50-2-36
COMPRESSOR AND CLUTCH .....	50-2-37
Operational Check .....	50-2-37
Electrical Test .....	50-2-41
Compressor Clutch Control Circuit Test Procedure .....	50-2-41
HIGH AND LOW PRESSURE SWITCH CLUTCH LATCHING CIRCUIT .....	50-2-44
Electrical Test .....	50-2-46
High Pressure Switch and Circuit Test .....	50-2-46
Low Pressure Switch and Circuit Test .....	50-2-47
HEATER CONTROL VALVE .....	50-2-48
Operational Check .....	50-2-48
Electrical Test .....	50-2-49
Heater Control Valve Power, Signal and Ground Test .....	50-2-49
BLOWER SPEED, TEMPERATURE CONTROL AND MODE DOOR POTS .....	50-2-50
Electrical Test .....	50-2-51
Common Control Potentiometer and Circuit Test Procedure .....	50-2-51
BLOWER AND BLOWER SPEED DRIVER .....	50-2-52
Blower Motor/Blower Driver Power, Signal and Ground Test .....	50-2-53
MODE DOOR CONTROL AND MOTOR .....	50-2-54
Electrical Test .....	50-2-55
Mode Door Motor and Circuit Test .....	50-2-55
CAB AND EVAPORATOR TEMPERATURE SENSORS .....	50-2-56
Electrical Test .....	50-2-57
Cab Temperature Sensor and Circuit Test .....	50-2-59
Evaporator Temperature Sensor and Circuit Test .....	50-2-60
CONTROLLER POWER AND GROUND, ATC SWITCH .....	50-2-62
Controller Power Supply and Ground Test .....	50-2-62
ATC Switch and Circuit Test .....	50-2-63
Defog/Defrost Switch and Circuit Test .....	50-2-63
CAB PRESSURIZER BLOWER .....	50-2-64
Cab Pressurizer Blower & Relay Power Supply and Ground Test .....	50-2-64
ACCESSING THE HVAC BOX .....	50-2-65
<b>2006 MODEL YEAR POWERSHIFT NAO ELECTRICAL SCHEMATIC .....</b>	<b>POSTER 87517739</b>
<b>2007 MODEL YEAR POWERSHIFT NAO ELECTRICAL SCHEMATIC .....</b>	<b>POSTER 87710064</b>
<b>2008 MODEL YEAR POWERSHIFT NAO ELECTRICAL SCHEMATIC .....</b>	<b>POSTER 87708840</b>

## TJ AND T9000 MASTER TABLE OF CONTENTS

---

AIR CONDITIONING SYSTEM -TROUBLESHOOTING, MODELS T9020, 9030, 9040, 9050 AND 9060 AFTER SERIAL NUMBER Z7F204001 .....	SECTION 50, CHAPTER 3 (Book 6A - 87740918)
SAFETY PROCEDURES .....	50-3-4
SPECIAL TOOLS .....	50-3-5
A/C THERMAL OPERATION .....	50-3-6
A/C SYSTEM COMPONENTS .....	50-3-8
Cab HVAC Box Components - Automatic Temperature Control .....	50-3-8
T9020 Chassis Components .....	50-3-10
T9030, 9040 and 9050 Chassis Components .....	50-3-12
T9060 Chassis Components .....	50-3-13
AUTOMATIC TEMPERATURE CONTROL (ATC) OPERATION .....	50-3-15
ATC FAULT CODES .....	50-3-22
ATC Fault Code 111 .....	50-3-22
ATC Fault Code 112 .....	50-3-23
ATC Fault Code 115 .....	50-3-23
ATC Fault Code 116 .....	50-3-24
ATC Fault Code 120 .....	50-3-24
ATC Fault Code 121 .....	50-3-25
ATC Fault Code 122 .....	50-3-25
ATC Fault Code 125 .....	50-3-26
ATC Fault Code 126 .....	50-3-26
ATC Fault Code 127 .....	50-3-27
ATC Fault Code 128 .....	50-3-27
ATC Fault Code 129 .....	50-3-28
ATC Fault Code 130 .....	50-3-28
ATC Fault Code 131 .....	50-3-29
ATC Fault Code 132 .....	50-3-29
ATC Fault Code 133 .....	50-3-30
ATC Fault Code 134 .....	50-3-31
LOCATING SYSTEM PROBLEMS WITHOUT FAULT CODES .....	50-3-32
Controller-Based Resistance Tests .....	50-3-32
ATC CONTROLLER TEST (CONNECTOR J8 TEST POINTS) .....	50-3-34
FIELD REPORTED SYMPTOMS/CAUSES .....	50-3-37
COMPRESSOR AND CLUTCH .....	50-3-38
Operational Check .....	50-3-38
Electrical Test .....	50-3-43
Compressor Clutch Control Circuit Test Procedure .....	50-3-43
HIGH AND LOW PRESSURE SWITCH CLUTCH LATCHING CIRCUIT .....	50-3-46
Electrical Test .....	50-3-48
High Pressure Switch and Circuit Test .....	50-3-48
Low Pressure Switch and Circuit Test .....	50-3-49
HEATER CONTROL VALVE .....	50-3-50
Operational Check .....	50-3-50
Electrical Test .....	50-3-51
Heater Control Valve Power, Signal and Ground Test .....	50-3-51
BLOWER SPEED, TEMPERATURE CONTROL AND MODE DOOR POTS .....	50-3-52
Electrical Test .....	50-3-53
Common Control Potentiometer and Circuit Test Procedure .....	50-3-53
BLOWER AND BLOWER SPEED DRIVER .....	50-3-54
Blower Motor/Blower Driver Power, Signal and Ground Test .....	50-3-55
MODE DOOR CONTROL AND MOTOR .....	50-3-56
Electrical Test .....	50-3-57
Mode Door Motor and Circuit Test .....	50-3-57
CAB AND EVAPORATOR TEMPERATURE SENSORS .....	50-3-58
Electrical Test .....	50-3-59
Cab Temperature Sensor and Circuit Test .....	50-3-61

## TJ AND T9000 MASTER TABLE OF CONTENTS

Evaporator Temperature Sensor and Circuit Test .....	50-3-62
CONTROLLER POWER AND GROUND, ATC SWITCH .....	50-3-64
Controller Power Supply and Ground Test .....	50-3-64
ATC Switch and Circuit Test .....	50-3-65
Defog/Defrost Switch and Circuit Test .....	50-3-65
CAB PRESSURIZER BLOWER .....	50-3-66
Cab Pressurizer Blower & Relay Power Supply and Ground Test .....	50-3-66
ACCESSING THE HVAC BOX .....	50-3-67
ELECTRICAL SYSTEM - HOW IT WORKS AND TROUBLESHOOTING .....	SECTION 55, CHAPTER 1 (Book 7 - 87525648)
SPECIAL TOOLS .....	55-1-3
FUSE AND RELAY IDENTIFICATION DELUXE CAB POWERSHIFT TRANSMISSION .....	55-1-4
FUSE AND RELAY IDENTIFICATION DELUXE CAB 24 SPEED TRANSMISSION .....	55-1-6
INSTRUMENTATION AND CONTROLS .....	55-1-8
AUXILIARY AUTO MODE SWITCH (IF EQUIPPED) .....	55-1-11
CONNECTOR AND COMPONENT LOCATION .....	55-1-13
ELECTRICAL SYSTEMS SCHEMATICS AND DIAGNOSTICS .....	55-1-89
AUDIO SYSTEM CIRCUIT OPERATION .....	55-1-90
CHARGING SYSTEM .....	55-1-95
POWER MIRROR SYSTEM .....	55-1-99
POWER SEAT SYSTEM .....	55-1-107
STARTING SYSTEM .....	55-1-112
WIPER / WASHER SYSTEM .....	55-1-121
ELECTRONIC CONTROLLER CONFIG/CALIBRATION/ FAULT CODE RETRIVAL .....	SECTION 55, CHAPTER 2 (Book 7 - 87525648)
INSTRUMENTATION PROGRAMMING .....	55-2-3
Operation Setup .....	55-2-3
Unit of Measure .....	55-2-4
Tire Radius .....	55-2-4
Radar Calibration .....	55-2-7
Controller Configuration .....	55-2-10
ARMREST CONTROLLER CALIBRATION .....	55-2-15
Hitch Menu .....	55-2-16
Throttle Menu .....	55-2-18
Remote Valve Menu .....	55-2-18
TRANSMISSION CONTROLLER CALIBRATION .....	55-2-23
Trans View Mode .....	55-2-25
Trans Setup Mode .....	55-2-33
Clutch Calibration Procedure .....	55-2-35
Calibration Error Messages .....	55-2-40
Gear Default Mode .....	55-2-41
HITCH CONTROLLER CALIBRATION .....	55-2-43
Hitch Setting Menu .....	55-2-49
Hitch View Menu .....	55-2-51
REMOTE HYDRAULICS CONTROLLER CALIBRATION .....	55-2-52
Aux Setup Menu .....	55-2-57
Aux Calibration Menu .....	55-2-58
Aux 67 Mode Lever Menu .....	55-2-72
FAULT CODE RETRIEVAL .....	55-2-74

## TJ AND T9000 MASTER TABLE OF CONTENTS

---

ELECTRONIC CONTROLLER CONFIGURATION, CALIBRATION AND FAULT CODE RETRIEVAL FOR T9020, 9030, 9040, 9050, AND 9060 SERIES TRACTORS, S/N Z7F204001 and After .... SECTION 55, CHAPTER 2A (Book 7A - 87740919)	
INSTRUMENTATION PROGRAMMING .....	55-2A-3
Operation Setup .....	55-2A-3
Unit of Measure .....	55-2A-4
Tire Radius .....	55-2A-4
Radar Calibration .....	55-2A-7
Controller Configuration .....	55-2A-10
ARMREST CONTROLLER CALIBRATION .....	55-2A-15
Hitch Menu .....	55-2A-16
Throttle Menu .....	55-2A-19
Remote Valve Menu .....	55-2A-19
Exit Calibration .....	55-2A-25
TRANSMISSION CONTROLLER CALIBRATION .....	55-2A-26
Trans View Mode .....	55-2A-28
Trans Setup Mode .....	55-2A-36
Clutch Calibration Procedure .....	55-2A-39
Calibration Error Messages .....	55-2A-44
Gear Default Mode .....	55-2A-45
HITCH CONTROLLER CALIBRATION .....	55-2A-47
Hitch Setting Menu .....	55-2A-53
Hitch View Menu .....	55-2A-55
REMOTE HYDRAULICS CONTROLLER CALIBRATION .....	55-2A-56
Aux Setup Menu .....	55-2A-61
Aux Calibration Menu .....	55-2A-62
Aux 67 Mode Lever Menu .....	55-2A-76
FAULT CODE RETRIEVAL .....	55-2A-78
HITCH CONTROLLER FAULT CODES ..... SECTION 55, CHAPTER 3 (Book 7 - 87525648)	
FAULT CODE HITCH 1020 .....	55-3-5
FAULT CODE HITCH 1030 .....	55-3-6
FAULT CODE HITCH 3010 .....	55-3-7
FAULT CODE HITCH 3020 .....	55-3-9
FAULT CODE HITCH 3030 .....	55-3-10
FAULT CODE HITCH 4019 .....	55-3-11
FAULT CODE HITCH 4029 .....	55-3-12
FAULT CODE HITCH 4039 .....	55-3-13
FAULT CODE HITCH 4049 .....	55-3-14
FAULT CODE HITCH 6014 .....	55-3-15
FAULT CODE HITCH 6015 .....	55-3-16
FAULT CODE HITCH 6024 .....	55-3-17
FAULT CODE HITCH 6025 .....	55-3-18
FAULT CODE HITCH 8001 .....	55-3-19
FAULT CODE HITCH 8002 .....	55-3-20
FAULT CODE HITCH 9301 .....	55-3-21
FAULT CODE HITCH 9302 .....	55-3-22
FAULT CODE HITCH 9303 .....	55-3-23
FAULT CODE HITCH 9304 .....	55-3-24
FAULT CODE HITCH 9306 .....	55-3-25
FAULT CODE HITCH 9307 .....	55-3-26
FAULT CODE HITCH 9308 .....	55-3-27
FAULT CODE HITCH 9309 .....	55-3-28
FAULT CODE HITCH 9310 .....	55-3-29
FAULT CODE HITCH 9311 .....	55-3-30
FAULT CODE HITCH 9312 .....	55-3-31
FAULT CODE HITCH 9313 .....	55-3-32

## TJ AND T9000 MASTER TABLE OF CONTENTS

FAULT CODE HITCH 9314 .....	55-3-33
FAULT CODE HITCH 9315 .....	55-3-34
FAULT CODE HITCH 9316 .....	55-3-35
FAULT CODE HITCH 9317 .....	55-3-36
FAULT CODE HITCH 9318 .....	55-3-37
FAULT CODE HITCH 9319 .....	55-3-38
FAULT CODE HITCH 9320 .....	55-3-39
FAULT CODE HITCH 9321 .....	55-3-40
FAULT CODE HITCH 10030 .....	55-3-41
FAULT CODE HITCH 10060 .....	55-3-42
FAULT CODE HITCH 10061 .....	55-3-43
FAULT CODE HITCH 10071 .....	55-3-44
FAULT CODE HITCH 10072 .....	55-3-45
FAULT CODE HITCH 10090 .....	55-3-46
FAULT CODE HITCH 11010 .....	55-3-47
FAULT CODE HITCH 11020 .....	55-3-48
FAULT CODE HITCH 11030 .....	55-3-49
FAULT CODE HITCH 11050 .....	55-3-50
FAULT CODE HITCH 11069 .....	55-3-51
FAULT CODE HITCH 11070 .....	55-3-52
FAULT CODE HITCH 12011 .....	55-3-53
FAULT CODE HITCH 12031 .....	55-3-56
FAULT CODE HITCH 12041 .....	55-3-58
FAULT CODE HITCH 52230 .....	55-3-61
FAULT CODE HITCH 52260 .....	55-3-62
FAULT CODE HITCH 65535 .....	55-3-63
TRANSMISSION CONTROLLER FAULT CODES .....	SECTION 55, CHAPTER 4 (Book 7 - 87525648)
(TJ 280, 330, 380, 430, 480, and 530 Series and T9010, 20, 30, 40, 50, and 9060 Series Before S/N Z7F204001)	
FAULT CODE TRANS 11 .....	55-4-4
FAULT CODE TRANS 12 .....	55-4-5
FAULT CODE TRANS 24 .....	55-4-6
FAULT CODE TRANS 37 .....	55-4-7
FAULT CODE TRANS 38 .....	55-4-8
FAULT CODE TRANS 47 .....	55-4-9
FAULT CODE TRANS 48 .....	55-4-11
FAULT CODE TRANS 50 .....	55-4-12
FAULT CODE TRANS 51 .....	55-4-13
FAULT CODE TRANS 52 .....	55-4-14
FAULT CODE TRANS 53 .....	55-4-15
FAULT CODE TRANS 54 .....	55-4-17
FAULT CODE TRANS 59 .....	55-4-19
FAULT CODE TRANS 60 .....	55-4-20
FAULT CODE TRANS 66 .....	55-4-22
FAULT CODE TRANS 67 .....	55-4-23
FAULT CODE TRANS 68 .....	55-4-24
FAULT CODE TRANS 69 .....	55-4-25
FAULT CODE TRANS 70 .....	55-4-26
FAULT CODE TRANS 77 .....	55-4-27
FAULT CODE TRANS 80 .....	55-4-28
FAULT CODE TRANS 81 .....	55-4-30
FAULT CODE TRANS 83 .....	55-4-32
FAULT CODE TRANS 103 .....	55-4-33
FAULT CODE TRANS 104 .....	55-4-34
FAULT CODE TRANS 105 .....	55-4-35
FAULT CODE TRANS 106 .....	55-4-36
FAULT CODE TRANS 107 .....	55-4-37

## TJ AND T9000 MASTER TABLE OF CONTENTS

FAULT CODE TRANS 108 .....	55-4-38
FAULT CODE TRANS 109 .....	55-4-39
FAULT CODE TRANS 110 .....	55-4-40
FAULT CODE TRANS 112 .....	55-4-41
FAULT CODE TRANS 113 .....	55-4-42
FAULT CODE TRANS 114 .....	55-4-43
FAULT CODE TRANS 115 .....	55-4-44
FAULT CODE TRANS 116 .....	55-4-45
FAULT CODE TRANS 117 .....	55-4-46
FAULT CODE TRANS 118 .....	55-4-47
FAULT CODE TRANS 119 .....	55-4-48
FAULT CODE TRANS 120 .....	55-4-49
FAULT CODE TRANS 122 .....	55-4-50
FAULT CODE TRANS 123 .....	55-4-51
FAULT CODE TRANS 125 .....	55-4-52
FAULT CODE TRANS 126 .....	55-4-53
FAULT CODE TRANS 127 .....	55-4-54
FAULT CODE TRANS 128 .....	55-4-55
FAULT CODE TRANS 129 .....	55-4-56
FAULT CODE TRANS 130 .....	55-4-57
FAULT CODE TRANS 131 .....	55-4-58
FAULT CODE TRANS 132 .....	55-4-59
FAULT CODE TRANS 133 .....	55-4-60
FAULT CODE TRANS 135 .....	55-4-61
FAULT CODE TRANS 136 .....	55-4-63
FAULT CODE TRANS 146 .....	55-4-65
FAULT CODE TRANS 147 .....	55-4-66
FAULT CODE TRANS 148 .....	55-4-68
ARMREST CONTROLLER FAULT CODES .....	SECTION 55, CHAPTER 5 (Book 7 - 87525648)
(TJ 280, 330, 380, 430, 480, and 530 Series and T9010, 20, 30, 40, 50, and 9060 Series Before S/N Z7F204001)	
FAULT CODE ARM 19 .....	55-5-4
FAULT CODE ARM 29 .....	55-5-5
FAULT CODE ARM 39 .....	55-5-6
FAULT CODE ARM 49 .....	55-5-7
FAULT CODE ARM 59 .....	55-5-8
FAULT CODE ARM 69 .....	55-5-9
FAULT CODE ARM 79 .....	55-5-10
FAULT CODE ARM 89 .....	55-5-11
FAULT CODE ARM 99 .....	55-5-12
FAULT CODE ARM 109 .....	55-5-13
FAULT CODE ARM 119 .....	55-5-14
FAULT CODE ARM 129 .....	55-5-15
FAULT CODE ARM 139 .....	55-5-16
FAULT CODE ARM 149 .....	55-5-17
FAULT CODE ARM 159 .....	55-5-18
FAULT CODE ARM 169 .....	55-5-19
FAULT CODE ARM 1019 .....	55-5-20
FAULT CODE ARM 1029 .....	55-5-21
FAULT CODE ARM 1039 .....	55-5-22
FAULT CODE ARM 1049 .....	55-5-23
FAULT CODE ARM 1059 .....	55-5-24
FAULT CODE ARM 1069 .....	55-5-25
FAULT CODE ARM 1079 .....	55-5-26
FAULT CODE ARM 1109 .....	55-5-27
FAULT CODE ARM 1119 .....	55-5-28
FAULT CODE ARM 1129 .....	55-5-29

## TJ AND T9000 MASTER TABLE OF CONTENTS

---

FAULT CODE ARM 1139 .....	55-5-30
FAULT CODE ARM 8011 .....	55-5-31
FAULT CODE ARM 9011 .....	55-5-32
FAULT CODE ARM 9012 .....	55-5-33
FAULT CODE ARM 9013 .....	55-5-34
FAULT CODE ARM 9014 .....	55-5-35
FAULT CODE ARM 9015 .....	55-5-36
FAULT CODE ARM 9021 .....	55-5-37
FAULT CODE ARM 9031 .....	55-5-38
FAULT CODE ARM 10091 .....	55-5-39
FAULT CODE ARM 12013 .....	55-5-40
FAULT CODE ARM 12081 .....	55-5-42
FAULT CODE ARM 65535 .....	55-5-44
REMOTE HYDRAULICS CONTROLLER FAULT CODES ..... SECTION 55, CHAPTER 6 (Book 8 - 87525649)	
FAULT CODE AUX - 1030 .....	55-6-5
FAULT CODE AUX 1040 .....	55-6-6
FAULT CODE AUX 1050 .....	55-6-7
FAULT CODE AUX 1060 .....	55-6-8
FAULT CODE AUX 1090 .....	55-6-9
FAULT CODE AUX 1100 .....	55-6-10
FAULT CODE AUX 8011 .....	55-6-11
FAULT CODE AUX 8012 .....	55-6-12
FAULT CODE AUX 9009 .....	55-6-13
FAULT CODE AUX 9019 .....	55-6-14
FAULT CODE AUX 9029 .....	55-6-15
FAULT CODE AUX 11010 .....	55-6-16
FAULT CODE AUX 11020 .....	55-6-17
FAULT CODE AUX 11030 .....	55-6-18
FAULT CODE AUX 11040 .....	55-6-19
FAULT CODE AUX 11060 .....	55-6-20
FAULT CODE AUX 11070 .....	55-6-21
FAULT CODE AUX 11080 .....	55-6-22
FAULT CODE AUX 11090 .....	55-6-23
FAULT CODE AUX 11100 .....	55-6-24
FAULT CODE AUX 11110 .....	55-6-25
FAULT CODE AUX 12011 .....	55-6-26
FAULT CODE AUX 12041 .....	55-6-29
FAULT CODE AUX 51011 .....	55-6-32
FAULT CODE AUX 51012 .....	55-6-33
FAULT CODE AUX 51029 .....	55-6-34
FAULT CODE AUX 51031 .....	55-6-35
FAULT CODE AUX 51032 .....	55-6-36
FAULT CODE AUX 51039 .....	55-6-37
FAULT CODE AUX 51041 .....	55-6-38
FAULT CODE AUX 51042 .....	55-6-39
FAULT CODE AUX 51049 .....	55-6-40
FAULT CODE AUX 51053 .....	55-6-41
FAULT CODE AUX 51054 .....	55-6-42
FAULT CODE AUX 51055 .....	55-6-43
FAULT CODE AUX 51056 .....	55-6-45
FAULT CODE AUX 51063 .....	55-6-47
FAULT CODE AUX 51064 .....	55-6-48
FAULT CODE AUX 51065 .....	55-6-49

## TJ AND T9000 MASTER TABLE OF CONTENTS

---

FAULT CODE AUX 51066 .....	55-6-51
FAULT CODE AUX 51073 .....	55-6-53
FAULT CODE AUX 51074 .....	55-6-54
FAULT CODE AUX 51075 .....	55-6-55
FAULT CODE AUX 51076 .....	55-6-57
FAULT CODE AUX 51083 .....	55-6-59
FAULT CODE AUX 51084 .....	55-6-60
FAULT CODE AUX 51085 .....	55-6-61
FAULT CODE AUX 51086 .....	55-6-63
FAULT CODE AUX 51093 .....	55-6-65
FAULT CODE AUX 51094 .....	55-6-66
FAULT CODE AUX 51095 .....	55-6-67
FAULT CODE AUX 51096 .....	55-6-69
FAULT CODE AUX 51101 .....	55-6-71
FAULT CODE AUX 51103 .....	55-6-72
FAULT CODE AUX 51105 .....	55-6-73
FAULT CODE AUX 51107 .....	55-6-74
FAULT CODE AUX 51109 .....	55-6-75
FAULT CODE AUX 51112 .....	55-6-76
FAULT CODE AUX 51114 .....	55-6-77
FAULT CODE AUX 51116 .....	55-6-78
FAULT CODE AUX 51118 .....	55-6-79
FAULT CODE AUX 51121 .....	55-6-80
FAULT CODE AUX 51123 .....	55-6-81
FAULT CODE AUX 51125 .....	55-6-82
FAULT CODE AUX 51127 .....	55-6-83
FAULT CODE AUX 51129 .....	55-6-84
FAULT CODE AUX 51132 .....	55-6-85
FAULT CODE AUX 51134 .....	55-6-86
FAULT CODE AUX 51136 .....	55-6-87
FAULT CODE AUX 51138 .....	55-6-88
FAULT CODE AUX 51141 .....	55-6-89
FAULT CODE AUX 51143 .....	55-6-90
FAULT CODE AUX 51145 .....	55-6-91
FAULT CODE AUX 51147 .....	55-6-92
FAULT CODE AUX 51149 .....	55-6-93
FAULT CODE AUX 51250 .....	55-6-94
FAULT CODE AUX 51261 .....	55-6-95
FAULT CODE AUX 51262 .....	55-6-96
FAULT CODE AUX 51401 .....	55-6-97
FAULT CODE AUX 51402 .....	55-6-98
FAULT CODE AUX 51411 .....	55-6-99
FAULT CODE AUX 51412 .....	55-6-100
FAULT CODE AUX 65535 .....	55-6-101

## TJ AND T9000 MASTER TABLE OF CONTENTS

---

INSTRUMENTATION CONTROLLER FAULT CODES .....	SECTION 55, CHAPTER 7 (Book 8 - 87525649)
(TJ 280, 330, 380, 430, 480, and 530 Series and T9010, 20, 30, 40, 50, and 9060 Series Before S/N Z7F204001)	
FAULT CODE INST 1015 .....	55-7-4
FAULT CODE INST 3010 .....	55-7-5
FAULT CODE INST 3020 .....	55-7-6
FAULT CODE INST 3022 .....	55-7-7
FAULT CODE INST 5010 .....	55-7-7
FAULT CODE INST 5011 .....	55-7-7
FAULT CODE INST 10031 .....	55-7-8
FAULT CODE INST 10032 .....	55-7-9
FAULT CODE INST 10033 .....	55-7-9
FAULT CODE INST 10034 .....	55-7-10
FAULT CODE INST 10035 .....	55-7-10
FAULT CODE INST 10036 .....	55-7-11
FAULT CODE INST 10037 .....	55-7-11
FAULT CODE INST 10038 .....	55-7-12
FAULT CODE INST 11011 .....	55-7-13
FAULT CODE INST 12011 .....	55-7-15
FAULT CODE INST 12021 .....	55-7-18
FAULT CODE INST 12022 .....	55-7-20
FAULT CODE INST 12023 .....	55-7-22
FAULT CODE INST 12031 .....	55-7-25
FAULT CODE INST 12043 .....	55-7-28
FAULT CODE INST 12051 .....	55-7-30
FAULT CODE INST 12061 .....	55-7-31
FAULT CODE INST 12071 .....	55-7-34
FAULT CODE INST 12091 .....	55-7-37
FAULT CODE INST 12101 .....	55-7-40
FAULT CODE INST 12111 .....	55-7-42
FAULT CODE INST 12121 .....	55-7-44
FAULT CODE INST 13010 .....	55-7-45
FAULT CODE INST 13011 .....	55-7-45
FAULT CODE INST 13012 .....	55-7-45
FAULT CODE INST 13021 .....	55-7-46
FAULT CODE INST 13022 .....	55-7-47
FAULT CODE INST 13031 .....	55-7-49
FAULT CODE INST 13032 .....	55-7-50
FAULT CODE INST 13040 .....	55-7-51
FAULT CODE INST 13044 .....	55-7-52
FAULT CODE INST 13051 .....	55-7-53
FAULT CODE INST 13052 .....	55-7-53
FAULT CODE INST 53001 .....	55-7-54
FAULT CODE INST 53002 .....	55-7-54
FAULT CODE INST 65535 .....	55-7-54

## TJ AND T9000 MASTER TABLE OF CONTENTS

---

### AUX67 CONTROLLER FAULT CODES

(FOR REMOTE VALVE SECTIONS 6 & 7)..... SECTION 55, CHAPTER 8 (Book 8 - 87525649)

FAULT CODE AUX67 8012 .....	55-8-5
FAULT CODE AUX67 9009 .....	55-8-6
FAULT CODE AUX67 9019 .....	55-8-7
FAULT CODE AUX67 9029 .....	55-8-8
FAULT CODE AUX67 9039 .....	55-8-9
FAULT CODE AUX67 11011 .....	55-8-10
FAULT CODE AUX67 11012 .....	55-8-11
FAULT CODE AUX67 11021 .....	55-8-12
FAULT CODE AUX67 11022 .....	55-8-12
FAULT CODE AUX67 11061 .....	55-8-14
FAULT CODE AUX67 11062 .....	55-8-15
FAULT CODE AUX67 11071 .....	55-8-16
FAULT CODE AUX67 11072 .....	55-8-17
FAULT CODE AUX67 11081 .....	55-8-18
FAULT CODE AUX67 11082 .....	55-8-19
FAULT CODE AUX67 11091 .....	55-8-20
FAULT CODE AUX67 11092 .....	55-8-21
FAULT CODE AUX67 11111 .....	55-8-22
FAULT CODE AUX67 11112 .....	55-8-23
FAULT CODE AUX67 11121 .....	55-8-24
FAULT CODE AUX67 11122 .....	55-8-25
FAULT CODE AUX67 11131 .....	55-8-26
FAULT CODE AUX67 11132 .....	55-8-27
FAULT CODE AUX67 11141 .....	55-8-28
FAULT CODE AUX67 11142 .....	55-8-29
FAULT CODE AUX67 12022 .....	55-8-30
FAULT CODE AUX67 12023 .....	55-8-31
FAULT CODE AUX67 12041 .....	55-8-32
FAULT CODE AUX67 51011 .....	55-8-35
FAULT CODE AUX67 51012 .....	55-8-36
FAULT CODE AUX67 51029 .....	55-8-37
FAULT CODE AUX67 51039 .....	55-8-38
FAULT CODE AUX67 51049 .....	55-8-39
FAULT CODE AUX67 51053 .....	55-8-40
FAULT CODE AUX67 51054 .....	55-8-41
FAULT CODE AUX67 51055 .....	55-8-42
FAULT CODE AUX67 51056 .....	55-8-43
FAULT CODE AUX67 51063 .....	55-8-44
FAULT CODE AUX67 51064 .....	55-8-45
FAULT CODE AUX67 510565 .....	55-8-46
FAULT CODE AUX67 51066 .....	55-8-47
FAULT CODE AUX67 51261 .....	55-8-48
FAULT CODE AUX67 51262 .....	55-8-49
FAULT CODE AUX67 51301 .....	55-8-50
FAULT CODE AUX67 51302 .....	55-8-51
FAULT CODE AUX67 51401 .....	55-8-52
FAULT CODE AUX67 51402 .....	55-8-53
FAULT CODE AUX67 51509 .....	55-8-54
FAULT CODE AUX67 65535 .....	55-8-55

BATTERY SERVICING AND TESTING .....	SECTION 55, CHAPTER 9 (Book 8 - 87525649)
SAFETY RULES .....	55-9-3
SPECIFICATIONS .....	55-9-4
ACCESS TO BATTERIES .....	55-9-5
TJ280/330 and T9010/9020 Tractors .....	55-9-5
TJ380/430/480/530 and T9030/40/50/60 Tractors .....	55-9-6
REMOVAL AND INSTALLATION OF BATTERIES .....	55-9-7
To remove batteries .....	55-9-7
To install batteries .....	55-9-7
BATTERY MAINTENANCE .....	55-9-7
Electrolyte Level .....	55-9-7
Inspecting And Cleaning A Battery .....	55-9-7
Battery Condition Check .....	55-9-8
Specific Gravity Check .....	55-9-8
Procedure .....	55-9-10
Three Minute Charge Test .....	55-9-11
Testing Battery Cells With Cadmium Probes .....	55-9-12
Battery Leakage Test .....	55-9-14
Battery Fast Charging .....	55-9-14
Battery Charging .....	55-9-15
Activating Charged Batteries.....	55-9-15
TRANSMISSION CONTROLLER FAULT CODES .....	SECTION 55, CHAPTER 10 (Book 9 - 84257313 (T9020, 30, 40, 50, and 9060 Series After S/N Z7F204001))
FAULT CODE TRANS 11 .....	55-10-4
FAULT CODE TRANS 12 .....	55-10-5
FAULT CODE TRANS 24 .....	55-10-6
FAULT CODE TRANS 37 .....	55-10-7
FAULT CODE TRANS 38 .....	55-10-8
FAULT CODE TRANS 47 .....	55-10-9
FAULT CODE TRANS 48 .....	55-10-11
FAULT CODE TRANS 50 .....	55-10-12
FAULT CODE TRANS 51 .....	55-10-13
FAULT CODE TRANS 52 .....	55-10-14
FAULT CODE TRANS 53 .....	55-10-15
FAULT CODE TRANS 54 .....	55-10-17
FAULT CODE TRANS 59 .....	55-10-19
FAULT CODE TRANS 60 .....	55-10-20
FAULT CODE TRANS 66 .....	55-10-22
FAULT CODE TRANS 67 .....	55-10-23
FAULT CODE TRANS 68 .....	55-10-24
FAULT CODE TRANS 69 .....	55-10-25
FAULT CODE TRANS 70 .....	55-10-26
FAULT CODE TRANS 73 .....	55-10-27
FAULT CODE TRANS 74 .....	55-10-28
FAULT CODE TRANS 75 .....	55-10-29
FAULT CODE TRANS 76 .....	55-10-30
FAULT CODE TRANS 77 .....	55-10-31
FAULT CODE TRANS 80 .....	55-10-32
FAULT CODE TRANS 81 .....	55-10-34
FAULT CODE TRANS 83 .....	55-10-36
FAULT CODE TRANS 103 .....	55-10-37
FAULT CODE TRANS 104 .....	55-10-38
FAULT CODE TRANS 105 .....	55-10-39
FAULT CODE TRANS 106 .....	55-10-40
FAULT CODE TRANS 107 .....	55-10-41
FAULT CODE TRANS 102 .....	55-10-42