

# T1510-T1520 SERVICE MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL INFORMATION .....	2
SECTION 10 - ENGINE .....	3
SECTION 18 - CLUTCH .....	11
SECTION 21 - GEAR TRANSMISSION .....	13
SECTION 25 - FWD FRONT AXLE .....	15
SECTION 27 - DIFFERENTIAL, REAR AXLE .....	17
SECTION 29 - HYDROSTATIC TRANSMISSION .....	18
SECTION 31 - POWER TAKE-OFF SYSTEMS .....	20
SECTION 33 - BRAKES .....	22
SECTION 35 - HYDRAULIC SYSTEM .....	22
SECTION 41 - STEERING .....	26
SECTION 44 - WHEELS, TIRES AND 2WD AXLE .....	28
SECTION 55 - ELECTRICAL SYSTEM .....	29
SECTION 90 - PLATFORM .....	38

The following pages are the collation of the contents pages from each section and chapter of the T1510-T1520 Service manual. Complete Service part # 84260810.

The sections used through out all New Holland product Service manuals may not be used for each product. Each Service manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Service manual and which sections are in each book.

## SECTION 00 - GENERAL INFORMATION

BOOK 1 - 84260811

### Chapter 1 - General Information

#### CONTENTS

Section	Description	Page
	Introduction .....	2
	Precautionary Statements .....	3
	Personal Safety .....	3
	Machine Safety and Information .....	3
	Safety .....	4
	Precautionary Statements .....	4
	The Tractor .....	4
	Servicing the Tractor .....	4
	Operating the Tractor .....	5
	Driving the Tractor .....	5
	Operating the PTO .....	6
	Diesel Fuel .....	6
	Safety Frame (ROPS) .....	6
	International Symbols .....	8
	Specifications .....	9
	General Dimensions .....	15
	Minimum Hardware Tightening Torques .....	18
	Metric Bolt Torque Specifications .....	19
	Lubricants .....	20
	Recommended Lubricants and Coolants .....	20
	Adjustments .....	21
	Tire Inflation Pressure .....	21

---

# SECTION 10 - ENGINE

BOOK 1 - 84260811

## Chapter 1 - Engine

### CONTENTS

Section	Description	Page
	Specifications .....	6
	Metric Bolt Torque Specifications .....	13
	Engine Bolt Torque Specifications .....	14
	Engine Fuel System Bolt Torque Specifications .....	14
	Special Tools .....	15
	Compression Test and Tools .....	16
	Description of Operation - Engine .....	17
	Cylinder Head and Valve Train Components .....	18
	Cylinder Block Assembly .....	18
	Troubleshooting .....	20
	Overhaul - Engine .....	25
	Engine .....	25
	Preparation .....	25
	Fuel Injector and Glow Plug .....	26
	Removal .....	26
	Oil Pressure Switch .....	26
	Removal .....	26
	Temperature Sending Switch and Alternator .....	27
	Removal .....	27
	Fan, Water Pump, and External Oil Tube .....	27
	Removal .....	27
	Head Cover .....	27
	Removal .....	27
	Rocker Arm Shaft and Support Bracket .....	28
	Removal .....	28
	Cylinder Head .....	28
	Removal .....	28
	Valve Tappet .....	29
	Removal .....	29
	Fuel Shutoff Solenoid .....	29
	Removal .....	29
	Timing Gear Cover .....	29
	Removal .....	29

---

# SECTION 10 - ENGINE

BOOK 1 - 84260811

## Chapter 1 - Engine (Continued)

### CONTENTS

Section	Description	Page
	Timing Gears and Camshaft .....	31
	Removal .....	31
	Oil Sump .....	31
	Removal .....	31
	Oil Suction Tube and Strainer .....	32
	Removal .....	32
	Connecting Rods, Bearings, Pistons, and Rings .....	32
	Removal .....	32
	Flywheel .....	33
	Removal .....	33
	Backplate and Oil Seal .....	33
	Removal .....	33
	Crankshaft and Main Bearings .....	33
	Removal .....	33
	Cylinder Head .....	34
	Disassembly .....	34
	Inspection and Repair .....	34
	Valve Seats .....	35
	Inspection and Repair .....	35
	Valves .....	36
	Inspection and Repair .....	36
	Valve Guides .....	37
	Inspection and Repair .....	37
	Valve Springs .....	38
	Inspection and Replacement .....	38
	Rocker Arms .....	38
	Inspection and Replacement .....	38
	Push Rods .....	39
	Inspection and Replacement .....	39
	Cylinder Head .....	40
	Assembly .....	40
	Cylinder Block .....	40
	Inspection .....	40

---

# SECTION 10 - ENGINE

BOOK 1 - 84260811

## Chapter 1 - Engine (Continued)

### CONTENTS

Section	Description	Page
	Pistons .....	41
	Disassembly and Inspection .....	41
	Piston Rings .....	43
	Disassembly and Inspection .....	43
	Connecting Rods .....	43
	Disassembly and Inspection .....	43
	Pin to Bushing Clearance .....	44
	Connecting Rod Bearing Oil Clearance Check .....	45
	Pistons, Rings, and Connecting Rod .....	46
	Assembly .....	46
	Main Bearing and Thrust Washer .....	47
	Removal and Inspection .....	47
	Crankshaft .....	47
	Inspection .....	47
	Crankshaft Bearing (Bushing) .....	48
	Inspection .....	48
	Replacement .....	49
	Main Bearing and Thrust Washer .....	49
	Assembly .....	49
	Port Block .....	51
	Removal .....	51
	Installation .....	51
	Timing Gear .....	51
	Inspection .....	51
	Standard .....	51
	Allowable Limit .....	51
	Camshaft .....	52
	Disassembly .....	52
	Inspection .....	52
	Assembly .....	52
	Flywheel .....	53
	Inspection and Repair .....	53

---

# SECTION 10 - ENGINE

BOOK 1 - 84260811

## Chapter 1 - Engine (Continued)

### CONTENTS

Section	Description	Page
	Timing Gear Housing .....	53
	Front Oil Seal and Steering Pump Seal .....	53
	Replacement .....	53
	Crankshaft and Bearing Holder .....	54
	Installation .....	54
	Standard Thrust .....	54
	Allowable Limit .....	54
	Rear Oil Seal and Backplate .....	54
	Installation .....	54
	Flywheel .....	55
	Installation .....	55
	Pistons and Connecting Rods .....	55
	Installation .....	55
	Oil Suction Tube and Suction Strainer .....	56
	Installation .....	56
	Oil Sump .....	56
	Installation .....	56
	Camshaft and Camshaft Gear .....	56
	Installation .....	56
	Idler Gear, Oil Pump, and Injection Timing .....	57
	Installation .....	57
	Timing Gear Cover .....	57
	Installation .....	57
	Crankshaft Pulley .....	57
	Installation .....	57
	Fuel Injection Pump .....	58
	Installation .....	58
	Power Steering Pump .....	58
	Installation .....	58
	Head Gasket Selection .....	59
	Cylinder Head .....	59
	Assembly .....	59

---

# SECTION 10 - ENGINE

BOOK 1 - 84260811

## Chapter 1 - Engine (Continued)

### CONTENTS

Section	Description	Page
	Valve Clearance Adjustment .....	60
	Head Cover .....	60
	Installation .....	60
	Water Pump and Cooling Fan .....	61
	Installation .....	61
	External Oil Tube .....	61
	Installation .....	61
	Glow Plug and Connector .....	61
	Installation .....	61
	Fuel Injector .....	62
	Installation .....	62
	Fuel Tubing .....	62
	Installation .....	62
	Alternator and Temperature Sender Switch .....	62
	Installation .....	62
	Exhaust Manifold .....	63
	Installation .....	63
	Description of Operation - Engine Lubrication System .....	63
	Oil Filter .....	66
	Construction and Function .....	66
	Maintenance .....	66
	Oil Pump .....	66
	Removal .....	66
	Inspection .....	66
	Installation and Adjustment .....	67
	Engine Oil Pressure Check .....	67
	Oil Pressure Relief Valve .....	69
	Removal .....	69
	Installation .....	69
	Oil Consumption .....	69

---

# SECTION 10 - ENGINE

BOOK 1 - 84260811

## Chapter 1 - Engine (Continued)

### CONTENTS

<b>Section</b>	<b>Description</b>	<b>Page</b>
	Description of Operation - Cooling System .....	70
	Maintenance .....	71
	Coolant .....	71
	Radiator Cap .....	71
	Thermostat .....	72
	Water Pump .....	72
	Cooling Fan .....	72
	Overhaul - Cooling System .....	73
	Radiator .....	73
	Removal .....	73
	Inspection and Repair .....	74
	Installation .....	74
	Water Pump .....	76
	Removal .....	76
	Inspection and Repair .....	77
	Installation .....	77
	Thermostat .....	78
	Removal .....	78
	Inspection and Repair .....	79
	Installation .....	79
	Separating the Tractor at the Clutch Housing/Engine .....	80
	Preparation .....	80
	Removal .....	80
	Attaching the Clutch Housing to the Engine .....	87
	Installation .....	87

---

# SECTION 10 - ENGINE

BOOK 1 - 84260811

## Chapter 2 - Fuel System

### CONTENTS

<b>Section</b>	<b>Description</b>	<b>Page</b>
	Specifications .....	10-3
	Special Tools .....	10-5
	Description of Operation - Injection Pump .....	10-6
	Troubleshooting .....	10-7
	General .....	10-7
	Governor System .....	10-10
	Injectors .....	10-11
	Breather Valve .....	10-12
	Fuel Variation Mechanism .....	10-13
	Delivery Valve Assembly .....	10-14
	CTD (Compact Timing Device) Mechanism .....	10-14
	Delivery Valves .....	10-17
	Fuel Delivery .....	10-17
	Injection Pump .....	10-20
	Removal .....	10-20
	Repair .....	10-21
	Installation .....	10-21
	Original Pump and Drive Components .....	10-22
	Installation .....	10-22
	New Pump or Drive Component .....	10-23
	Installation .....	10-23
	Injection Pump Timing .....	10-24
	Bleeding the Fuel System .....	10-24
	Fuel Settings Adjustments .....	10-26
	Fuel Screw/High Idle .....	10-26
	Description of Operation - Governor .....	10-27
	Governor .....	10-29
	Disassembly .....	10-29
	Assembly .....	10-30

---

# SECTION 10 - ENGINE

BOOK 1 - 84260811

## Chapter 2 - Fuel System (Continued)

### CONTENTS

<b>Section</b>	<b>Description</b>	<b>Page</b>
	Description of Operation - Injectors .....	10-32
	Injectors .....	10-34
	Removal .....	10-34
	Disassembly .....	10-35
	Assembly and Adjustment .....	10-35
	Description of Operation - Engine Breather Valve .....	10-36
	Breather Valve .....	10-37
	Removal .....	10-37
	Installation .....	10-37

---

# SECTION 18 - CLUTCH

BOOK 1 - 84260811

## Chapter 1 - Single Clutch

### CONTENTS

<b>Section</b>	<b>Description</b>	<b>Page</b>
	Description of Operation - Single Clutch .....	2
	2WD 9 x 3 Gear Transmission .....	2
	HST Models .....	2
	HST Drive Transmission .....	2
	Clutch Pedal Assembly .....	3
	Overhaul - Single Clutch .....	4
	Single Clutch .....	4
	Removal .....	4
	Inspection .....	4
	Installation .....	5
	Adjustments - Single Clutch .....	6
	Free-play Adjustment - HST Models Only .....	6
	Clutch Stop - HST and 9 x 3 Transmission Models .....	7
	Troubleshooting .....	8
	Specifications .....	9
	Bolt Torques .....	10
	Special Tools .....	10

---

# SECTION 18 - CLUTCH

BOOK 1 - 84260811

## Chapter 2 - Double Clutch

### CONTENTS

Section	Description	Page
	Description of Operation - Double Clutch .....	2
	9 x 3 Gear Transmission Models .....	2
	Overhaul - Double Clutch .....	2
	Double Clutch .....	2
	Disassembly .....	2
	Inspection .....	3
	Assembly .....	4
	Adjustments - Double Clutch .....	5
	Free-play Adjustment - 9 x 3 Gear Transmission Models with Double Clutch .....	6
	Clutch Stop - 9 x 3 Transmission Models .....	7
	Servicing Clutch-related Components .....	8
	Clutch Pilot Bearing .....	8
	Removal .....	8
	Installation .....	8
	Clutch Release Bearing .....	9
	Removal .....	9
	Inspection .....	9
	Installation .....	10
	Clutch Linkage Components .....	10
	Clutch Cross Shaft Bushings .....	10
	Removal .....	10
	Installation .....	10
	Clutch Pedal Bushings .....	11
	Removal .....	11
	Installation .....	11
	Troubleshooting .....	12
	Specifications .....	13
	Bolt Torques .....	14
	Special Tools .....	14

---

# SECTION 21 - GEAR TRANSMISSION

BOOK 2 - 84260812

## Chapter 1 - Gear Transmission 9 x 3

### CONTENTS

Section	Description	Page
	Specifications .....	3
	9 x 3 Gear Transmission .....	3
	General Bolt Torque Specifications .....	4
	Special Tools .....	5
	Description of Operation .....	6
	9 x 3 Gear Transmission .....	6
	Transmission Assembly .....	14
	Removal .....	14
	Single Clutch Input Shaft .....	14
	Removal .....	14
	Double Clutch Input Shaft .....	14
	Removal .....	14
	Single and Double Clutch .....	14
	Main Gear Shifter Rod .....	14
	Removal .....	14
	Main Shaft .....	15
	Removal .....	15
	Reverse Idler Shaft .....	15
	Removal .....	15
	Single Clutch Countershaft .....	16
	Removal .....	16
	Double Clutch Countershaft .....	16
	Removal .....	16
	Single Clutch PTO Countershaft .....	17
	Removal .....	17
	Double Clutch PTO Countershaft .....	17
	Removal .....	17
	Double Clutch FWD Drive Shaft .....	17
	Removal .....	17
	FWD Shift Rod .....	18
	Removal .....	18

---

# SECTION 21 - GEAR TRANSMISSION

BOOK 2 - 84260812

## Chapter 1 - Gear Transmission 9 x 3 (Continued)

### CONTENTS

Section	Description	Page
	Rear Main Shaft .....	18
	Removal .....	18
	Range Gear Shifter Rod .....	19
	Removal .....	19
	Drive Pinion .....	20
	Removal .....	20
	Inspection .....	20
	Pre-installation Instructions .....	20
	Drive Pinion .....	21
	Installation .....	21
	Range Gear Shifter Rod .....	21
	Installation .....	21
	Rear Main Shaft .....	21
	Installation .....	21
	FWD Drive Shaft .....	22
	Installation .....	22
	FWD Shift Rod .....	22
	Installation .....	22
	Single Clutch PTO Countershaft .....	23
	Installation .....	23
	Double Clutch PTO Countershaft .....	23
	Installation .....	23
	Single Clutch Countershaft .....	23
	Installation .....	23
	Double Clutch Countershaft .....	24
	Installation .....	24
	Reverse Idler .....	24
	Installation .....	24
	Main Shaft .....	24
	Installation .....	24
	Main Gear Shifter Rod .....	25
	Installation .....	25

---

## SECTION 21 - GEAR TRANSMISSION

BOOK 2 - 84260812

### Chapter 1 - Gear Transmission 9 x 3 (Continued)

#### CONTENTS

Section	Description	Page
	Main Transmission Shift Lever .....	25
	Removal and Overhaul .....	25
	Installation .....	26
	Single Clutch Input Shaft .....	26
	Installation .....	26
	Double Clutch Input Shaft .....	27
	Installation .....	27
	Separating the Tractor .....	28
	9 x 3 Gear Transmission .....	28
	Removal .....	28
	Installation .....	29

## SECTION 25 - FWD FRONT AXLE

BOOK 2 - 84260812

### Chapter 1 - FWD Front Axle

#### CONTENTS

Section	Description	Page
	Specifications .....	3
	Four Wheel Drive .....	3
	Bolt Torque Specifications .....	4
	Special Tools .....	5
	Description of Operation - Front-Wheel Drive Front Axle .....	6
	Troubleshooting .....	8
	Overhaul .....	8
	Front-Wheel Drive Front Axle .....	8
	Removal .....	8

---

## SECTION 25 - FWD FRONT AXLE

BOOK 2 - 84260812

### Chapter 1 - FWD Front Axle (Continued)

#### CONTENTS

Section	Description	Page
	Reduction Gear - Drop Box .....	10
	Disassembly .....	10
	Front Axle and Differential .....	11
	Disassembly .....	11
	Drive Pinion .....	12
	Disassembly .....	12
	Front Axle .....	13
	Inspection and Repair .....	13
	Bearing Clearance .....	13
	Differential .....	13
	Inspection and Repair .....	13
	Gear Reduction - Drop Box .....	14
	Inspection and Repair .....	14
	Drive Pinion .....	14
	Assembly .....	14
	Differential Gear .....	15
	Assembly .....	15
	Ring Gear-to-Pinion Backlash Check and Adjustment .....	16
	Axle and Differential .....	18
	Assembly .....	18
	Reduction Gear Box .....	19
	Assembly .....	19
	Idler Case Vertical Shimming Procedure .....	22
	Bevel Gear-to-Pinion Backlash Check .....	23
	Front Axle - 4WD .....	24
	Removal .....	24
	Installation .....	25
	Front Wheel Toe-in .....	28
	Checking Toe-In .....	28
	Adjusting Toe-In .....	28

---

# SECTION 27 - DIFFERENTIAL, REAR AXLE

BOOK 2 - 84260812

## Chapter 1 - Differential, Rear Axle

### CONTENTS

Section	Description	Page
	Specifications .....	2
	Ring Gear and Pinion Gear Pattern Specification and Adjustment .....	2
	Bolt Torque Specifications .....	3
	Special Tools .....	3
	Description of Operation .....	4
	Differential Assembly .....	5
	Differential Lock .....	6
	Overhaul .....	7
	Differential .....	7
	Removal .....	7
	Disassembly .....	9
	Inspection .....	9
	Drive Pinion .....	10
	Removal .....	10
	Disassembly (with HST Transmission) .....	10
	Disassembly (with 9 x 3 Transmission) .....	11
	Assembly and Installation .....	12
	Differential .....	14
	Assembly and Installation .....	14
	Rear Axle .....	17
	Removal .....	17
	Disassembly .....	17
	Inspection .....	17
	Assembly .....	18
	Axle Seal .....	19
	Installation .....	19
	Rear Axle/Center Housing .....	21
	Removal .....	21
	Installation .....	23

---

# SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 84260812

## Chapter 1 - Hydrostatic Transmission

### CONTENTS

Section	Description	Page
	Specifications .....	3
	Hydrostatic Transmission .....	3
	Bolt Torques .....	3
	Description of Operation - Hydrostatic Transmission .....	4
	Troubleshooting .....	5
	Variable Displacement Pump .....	7
	Operation .....	7
	Fixed Displacement Motor .....	8
	Operation .....	8
	Fluid Flow .....	9
	Neutral Position .....	9
	Forward Position .....	10
	Reverse Position .....	11
	Overhaul .....	12
	Hydrostatic Unit .....	12
	Removal .....	12
	Precautions Before Disassembly .....	13
	Hydrostatic Pump .....	16
	Disassembly .....	16
	Hydrostatic Motor .....	17
	Disassembly .....	17
	Hydrostatic Motor Shaft .....	19
	Removal .....	19
	Charge Pump .....	19
	Removal .....	19
	Swash Plate .....	20
	Removal .....	20
	Hydrostatic Transmission .....	20
	Inspection .....	20
	Hydrostatic Pump .....	24
	Assembly .....	24
	HST Piston Pump Cylinder Block .....	26
	Assembly .....	26
	HST Motor Cylinder Block .....	27
	Assembly .....	27

---

# SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 84260812

## Chapter 1 - Hydrostatic Transmission (Continued)

### CONTENTS

Section	Description	Page
	Port Block .....	28
	Disassembly .....	28
	Inspection .....	28
	Assembly .....	29
	Charge Pump Relief Valve .....	30
	Disassembly .....	30
	Inspection .....	30
	Assembly .....	30
	High Pressure Relief Valve .....	30
	Removal .....	30
	Installation .....	30
	Hydrostatic Pump and Port Block .....	31
	Assembly .....	31
	Hydrostatic Motor and Port Block .....	32
	Assembly .....	32
	HST Cooler Check Valve .....	33
	Disassembly .....	33
	Inspection .....	33
	Assembly .....	33
	Pressure Tests .....	34
	High Pressure Relief Valve .....	34
	Charge Pump Relief Valve .....	36

---

# SECTION 31 - POWER TAKE-OFF SYSTEMS

BOOK 3 - 84260813

## Chapter 1 - Power Take-off Systems

### CONTENTS

Section	Description	Page
	Specifications .....	3
	Bolt Torque Specifications .....	4
	Description of Operation .....	5
	Transmission Drive Power Take-Off .....	5
	9 x 3 Gear Transmission - Single Clutch (T1510 - 2WD Only) .....	5
	Transmission Drive Power Take-Off: 4WD (9x3) .....	7
	Live Power Take-Off .....	7
	Power Take-Off Drive - Hydrostatic Transmission .....	8
	Overhaul - Power Take-Off .....	9
	Power Take-Off .....	9
	Removal .....	9
	Output Shaft .....	9
	Removal .....	9
	Center Countershaft .....	10
	Removal .....	10
	One-Way Clutch .....	10
	Disassembly .....	10
	Rear Countershaft .....	11
	Removal .....	11
	9x3 Transmission .....	11
	HST Transmission .....	11
	Front Countershaft .....	12
	Removal .....	12
	Shifter .....	12
	Removal .....	12
	Assembly .....	14
	Front Countershaft .....	15
	Assembly .....	15
	Rear Countershaft .....	15
	Assembly .....	15
	HST Transmission .....	15
	9x3 Transmission .....	16

---

# SECTION 31 - POWER TAKE-OFF SYSTEMS

BOOK 3 - 84260813

## Chapter 1 - Power Take-off Systems (Continued)

### CONTENTS

Section	Description	Page
	Center Countershaft .....	17
	One-Way Clutch .....	17
	Assembly .....	17
	Installation .....	18
	Output Shaft .....	19
	Assembly .....	19
	Description of Operation - Mid-Mount Power Take-Off .....	20
	Overhaul - Mid-Mount PTO .....	21
	Mid-Mount PTO .....	21
	Countershaft .....	21
	Removal .....	21
	Shifter Arm .....	22
	Removal .....	22
	Gearbox .....	23
	Disassembly .....	23
	Mid-Mount PTO Gear Shifter Removal .....	23
	Mid-Mount PTO Output Shaft Removal .....	23
	Inspection .....	24
	Assembly .....	24
	Output Shaft Installation .....	24
	Gear Shifter Installation .....	24
	Shifter Arm .....	25
	Assembly .....	25
	Countershaft .....	25
	Assembly .....	25
	Rear PTO Components .....	25
	Assembly .....	25

---

## SECTION 33 - BRAKES

BOOK 3 - 84260813

### Chapter 1 - Brakes

#### CONTENTS

Section	Description	Page
	Specifications .....	2
	Rear Axle and Brakes .....	3
	Brake Operation .....	3
	Parking Brake .....	4
	Brakes and Final Pinion Overhaul .....	4
	Removal .....	4
	Inspection .....	5
	Assembly and Installation .....	5
	Brake Linkage Adjustment .....	6

## SECTION 35 - HYDRAULIC SYSTEM

BOOK 3 - 84260813

### Chapter 1 - Hydraulic System

#### CONTENTS

Section	Description	Page
	Specifications .....	4
	Bolt Torque Specifications .....	5
	Special Tools .....	6
	Troubleshooting .....	7
	Description of Operation - Hydraulic System .....	8
	Hydraulic Fluid Filter .....	9
	Combination System Relief - Diverter Valve Manifold Assembly .....	9
	Control Valve Assembly (HPL) .....	10
	Neutral Position - Fluid Flow .....	11
	Raising Position - Fluid Flow .....	12
	Lowering Position - Fluid Flow .....	13

---

# SECTION 35 - HYDRAULIC SYSTEM

BOOK 3 - 84260813

## Chapter 1 - Hydraulic System (Continued)

### CONTENTS

Section	Description	Page
	Bypass Spool - Fluid Flow - Closed Position .....	14
	Bypass Spool - Fluid Flow - Open Position .....	14
	Unload Valve .....	14
	Flow Control Valve .....	15
	Linkage Operation - Single Lever - Position Control .....	15
	Position Control Operation - Neutral Position to Raise .....	15
	Raise Position to Neutral Position .....	16
	Neutral Position to Lowering Position .....	16
	Overhaul - Lift Cylinder .....	16
	Lift Cylinder .....	16
	Removal .....	16
	Disassembly .....	18
	Inspection and Repair .....	20
	Assembly .....	20
	Flow Control Valve .....	23
	Removal .....	23
	Disassembly .....	23
	Inspection .....	23
	Assembly .....	23
	Hydraulic Control Valve .....	23
	Removal .....	23
	Disassembly .....	23
	Inspection .....	25
	Assembly .....	26
	Installation .....	27
	Combination System Relief Valve and Diverter Valve Assembly .....	27
	Removal .....	27
	Disassembly .....	28
	Inspection .....	28
	Assembly .....	28

---

# SECTION 35 - HYDRAULIC SYSTEM

BOOK 3 - 84260813

## Chapter 1 - Hydraulic System (Continued)

### CONTENTS

Section	Description	Page
	Adjustments .....	29
	HPL Linkage Adjustments .....	29
	Adjustment Procedure .....	30
	Control Lever .....	31
	Adjustment .....	31
	Description of Operation - Hydraulic Pump and Filter .....	32
	Hydraulic Pump .....	32
	Pump Flow .....	32
	Disassembly .....	33
	Inspection and Repair .....	33
	Assembly .....	33
	Break-in Procedure .....	34
	Description of Operation - Remote Valves .....	35
	Single-spool Rear Remote Valve .....	35
	Rear (Single-spool) Remote Valve .....	35
	Fluid Flow - Neutral Position - Rear (Single-spool) Remote System .....	36
	Fluid Flow - Remote Cylinder Extending - Rear (Single-spool) Remote System ...	37
	Fluid Flow - Remote Cylinder Retracting - Rear (Single-spool) Remote System ...	38
	Overhaul - Rear (Single-spool) Remote Valve .....	39
	Rear (Single-spool) Remote Valve .....	39
	Removal .....	39
	Disassembly .....	39
	Inspection .....	40
	Assembly .....	40
	Front (Two-spool) Remote Valve .....	41
	Fluid Flow - Bucket Control - Neutral and Lift Control - Neutral .....	42
	Front (Two-spool) Remote Control System .....	42
	Fluid Flow - Bucket Control - Neutral and Lift Control - Neutral .....	42
	Fluid Flow - Bucket Control - Dumping and Lift Control - Neutral .....	43
	Fluid Flow - Bucket Control - Dumping Regen and Lift Control - Neutral .....	44
	Fluid Flow - Bucket Control - Roll Back and Lift Control - Neutral .....	45

---

# SECTION 35 - HYDRAULIC SYSTEM

BOOK 3 - 84260813

## Chapter 1 - Hydraulic System (Continued)

### CONTENTS

Section	Description	Page
	Fluid Flow - Bucket Control - Neutral and Lift Control - Raising . . . . .	46
	Fluid Flow - Bucket Control - Neutral and Lift Control - Lowering . . . . .	47
	Fluid Flow - Bucket Control - Neutral and Lift Control - Float . . . . .	48
	Front (Two-spool) Remote Control Valve . . . . .	49
	Removal . . . . .	49
	Disassembly . . . . .	49
	Inspection . . . . .	51
	Assembly . . . . .	53
	Relief Valve . . . . .	54
	Disassembly . . . . .	54
	Inspection . . . . .	54
	Assembly . . . . .	54
	Adjustment . . . . .	54
	Pressure Testing . . . . .	55
	Main System Relief Valve . . . . .	55
	Front (Two-spool) Remote Control Valve . . . . .	56
	Inlet Restriction Test . . . . .	57
	Pump Efficiency Test . . . . .	58

---

# SECTION 41 - STEERING

BOOK 3 - 84260813

## Chapter 1 - Steering

### CONTENTS

Section	Description	Page
	Specifications .....	3
	Special Tools .....	4
	Bolt Torque Specifications .....	5
	Troubleshooting .....	6
	Description of Operation .....	8
	Power Steering System .....	8
	Power Steering Control Motor .....	10
	Spool and Sleeve .....	10
	Drive Shaft .....	11
	Gerotor Pump .....	11
	Check Valve .....	11
	Relief Valve .....	11
	Power Steering Control Valve .....	12
	Spool and Sleeve .....	12
	Drive Shaft .....	13
	Gerotor Pump .....	13
	Check Valve .....	13
	Relief Valve .....	13
	Power Steering Pump .....	14
	Power Steering Cylinder .....	15
	Power Steering Operation .....	16
	Fluid Flow - Neutral Position .....	16
	Fluid Flow - Left Turn .....	17
	Fluid Flow - Right Turn .....	18
	Power Steering Manual Operation .....	19
	Overhaul .....	20
	Steering Control Motor .....	20
	Removal .....	20
	Disassembly .....	21
	T1520 Prior to Serial Numbers: Z8NGK1152 (9x3) and Z8NGL1147 (HST) .....	21
	Inspection .....	27

---

# SECTION 41 - STEERING

BOOK 3 - 84260813

## Chapter 1 - Steering (Continued)

### CONTENTS

Section	Description	Page
	Assembly .....	28
	Disassembly .....	34
	All T1510 and T1520 on and above serial numbers: Z8NGK1152 (9x3) and Z8NGL1147 (HST) .....	34
	Inspection .....	37
	Assembly .....	38
	Installation .....	43
	Steering Cylinder .....	43
	Removal .....	43
	Disassembly .....	44
	Inspection .....	45
	Assembly .....	45
	Installation .....	45
	Power Steering Pump .....	46
	Removal .....	46
	Power Steering Lines .....	46
	Removal .....	47
	Inspection .....	47
	Assembly .....	49
	Steering Column .....	49
	Removal and Disassembly .....	49
	Assembly and Installation .....	51
	Pressure Testing .....	52
	Pump, Steering Motor, and Relief Valve .....	52
	Test .....	52
	Test Results .....	52
	Steering Cylinder .....	53
	Test .....	53
	Test Results .....	53

---

# SECTION 44 - WHEELS, TIRES AND 2WD AXLE

BOOK 3 - 84260813

## Chapter 1 - 2WD Front Axle and Related Parts

### CONTENTS

Section	Description	Page
	Description of Operation .....	3
	Two-Wheel Drive .....	3
	Two-Wheel Drive Components .....	4
	Overhaul .....	5
	Front Wheel Hub .....	5
	Removal and Disassembly .....	5
	Spindle .....	5
	Removal and Disassembly .....	5
	Front Wheel Hub and Spindle .....	6
	Inspection and Repair .....	6
	Spindle .....	6
	Assembly and Installation .....	6
	Front Wheel Hub .....	7
	Assembly and Installation .....	7
	Front Axle – 2WD .....	8
	Removal .....	8
	Front Axle Pivot .....	9
	Inspection .....	9
	Installation .....	9
	Troubleshooting .....	10
	Specifications .....	11
	Two Wheel Drive .....	11
	Bolt Torque Specifications .....	12
	Wheels and Tires – Tread Settings and Ballasting .....	13
	2WD Tread Setting .....	13
	FWD Tread Setting .....	13
	Rear Axle Tread Setting .....	14
	Tractor Weighting .....	14
	Weighting for Stability .....	14

---

## SECTION 44 - WHEELS, TIRES AND 2WD AXLE

BOOK 3 - 84260813

### Chapter 1 - 2WD Front Axle and Related Parts (Continued)

#### CONTENTS

Section	Description	Page
	Weighting Limitations .....	14
	Rear Wheel Weight Installation .....	16
	Liquid Ballast .....	17
	Tire Pressure .....	17
	Wheel Nut Torque Specifications .....	17

## SECTION 55 - ELECTRICAL SYSTEM

BOOK 4 - 84260814

### Chapter 1 - Electrical Components

#### CONTENTS

Section	Description	Page
	Introduction .....	5
	Component Location and Function .....	5
	Ground Locations .....	8
	Description and Testing - Electrical System Components .....	10
	Battery .....	10
	Electrolyte Level .....	10
	Removal .....	11
	Installation .....	11
	Main Fuse (40 Amp) .....	12
	Replacement .....	12
	Fuse Block .....	12
	Key Switch .....	13
	(T1520 Prior To Serial Numbers Z8NGK1151 and Z8NGL1146) .....	13
	Removal .....	14
	Testing .....	14

## SECTION 55 - ELECTRICAL SYSTEM

BOOK 4 - 84260814

### Chapter 1 - Electrical Components (Continued)

#### CONTENTS

Section	Description	Page
	Heat Position .....	15
	Installation .....	17
	Key Switch .....	18
	(All T1510 and T1520 On and Above Serial Numbers Z8NGK1151 and Z8NGL1146) .....	18
	Description .....	18
	Removal .....	19
	Testing .....	19
	Key Switch Troubleshooting - Connector Wiring .....	21
	Installation .....	21
	Light Switch .....	22
	Removal .....	22
	Testing .....	22
	Installation .....	23
	Headlights .....	23
	Removal .....	23
	Inspection .....	23
	Installation .....	24
	Taillights .....	24
	Removal .....	24
	Inspection .....	25
	Installation .....	25
	Hazard/Turn Signal Combination Switch .....	25
	Removal .....	25
	Testing .....	26
	Installation .....	27
	Hazard/Turn Signal Lights .....	28
	Removal .....	28
	Inspection .....	28
	Installation .....	28