

CR6090, CR7090, CR8080, CR8090, and CR9090 COMBINES

84571052

ELECTRICAL SCHEMATIC, NORTH AMERICA

MODEL YEAR 2012 PRODUCTION

Page 1 of 10

Schematic Sheet Index

Component	Page/Sheet	Component	Page/Sheet
STARTING	Page 1, Sheet 1	CAMERAS	Page 5, Sheet 37
STARTING	Page 1, Sheet 2	GPS SERVICE SOCKETS	Page 5, Sheet 38
SELECT EUROPEAN MODELS (12V) STARTING	Page 1, Sheet 4	LIGHTING (INTERIOR)	Page 5, Sheet 39
ENGINE	Page 1, Sheet 5	LIGHTING (FRONT MARKER)	Page 5, Sheet 40
ENGINE	Page 1, Sheet 6	LIGHTING (REAR MARKER)	Page 5, Sheet 41
DRIVES	Page 1, Sheet 7	LIGHTING (FLASHER)	Page 5, Sheet 42
DRIVES	Page 1, Sheet 8	LIGHTING (FLIP UP)	Page 5, Sheet 43
DRIVES	Page 2, Sheet 9	STONE TRAP	Page 5, Sheet 44
HEADER	Page 2, Sheet 10	LIGHTING (LICENSE PLATE, REAR AUSTRIA)	Page 5, Sheet 45
HEADER	Page 2, Sheet 11	LIGHTING (BEACON, HEADER)	Page 5, Sheet 46
HEADER	Page 2, Sheet 12	LIGHTING (UNLOAD TUBE, LOWER WORK)	Page 5, Sheet 47
FEEDER (1)	Page 2, Sheet 13	LIGHTING (UNLOAD TUBE, UPPER WORK)	Page 5, Sheet 48
FEEDER (2)	Page 2, Sheet 14	LIGHTING (MID, OUTER WORK)	Page 5, Sheet 49
FEEDER (3)	Page 2, Sheet 15	LIGHTING (INNER WORK)	Page 5, Sheet 50
THRESHOLD (1)	Page 2, Sheet 16	LIGHTING (REAR, SIDE WORK)	Page 5, Sheet 51
THRESHOLD (2)	Page 2, Sheet 17	LIGHTING (SERVICE)	Page 5, Sheet 52
FEEDER ASP	Page 3, Sheet 18	HYDRAULIC	Page 5, Sheet 53
CLEANING (1)	Page 3, Sheet 19	NEF ENGINE STARTER CIRCUIT	Page 5, Sheet 54
CLEANING (2)	Page 3, Sheet 20	MIRRORS	Page 5, Sheet 55
UNLOAD	Page 3, Sheet 21	WASHER WIPER	Page 5, Sheet 56
UNLOAD	Page 3, Sheet 22	ACCESSORY (1)	Page 5, Sheet 57
AUTO GUIDANCE (1)	Page 3, Sheet 23	ACCESSORY (2)	Page 5, Sheet 58
AUTO GUIDANCE (2)	Page 3, Sheet 24	A/C (MANUAL)	Page 5, Sheet 59
YIELD SENSOR, MOISTURE SENSOR	Page 3, Sheet 25	A/C (AUTOMATIC)	Page 5, Sheet 60
MOC	Page 3, Sheet 26	ENGINE	Page 5, Sheet 61
ENGINE ECU TWIN STAGE TURBO	Page 3, Sheet 27	A/C	Page 5, Sheet 62
DISTRIBUTION (1)	Page 3, Sheet 28	A/C	Page 5, Sheet 63
DISTRIBUTION (2)	Page 3, Sheet 29	HYDROSTATIC PUMP CONTROL	Page 5, Sheet 64
DISTRIBUTION (3)	Page 3, Sheet 30	SPREADING	Page 5, Sheet 65
DISTRIBUTION (CCM POWER RELAYS)	Page 3, Sheet 31	OPTIONS, SPARE	Page 5, Sheet 66
DISTRIBUTION (KEY SWITCH)	Page 3, Sheet 32	DOU CONTROL	Page 5, Sheet 67
CAN NETWORK (1)	Page 3, Sheet 33	ACTIVE SPREADING (1)	Page 5, Sheet 68
CAN NETWORK (2)	Page 3, Sheet 34	ACTIVE SPREADING (2)	Page 5, Sheet 69
CLEANING (2)	Page 5, Sheet 35	FUSE CHART	Page 5, Sheet 70
		FUSE CHART	Page 5, Sheet 71

GROUND LOCATIONS

LEGEND

UNSWITCHED POWER

SWITCHED POWER

STARTING SEQUENCE

24 VOLT SYSTEM

24 VOLT SWITCHED POWER

WIRING REFERENCES

LEGEND









WIRE COLOR

CIRCUIT NUMBER

HARNESS CODE

COMPONENT LEGEND

Label	Component
A	Electronics
B	Sensors
C	Diodes
D	Lights
E	Fuses
F	Generators
G	Audio
H	Outlets
I	Relays
J	Relays
K	Relays
L	Relays
M	Relays
N	Relays
O	Relays
P	Relays
Q	Relays
R	Relays
S	Relays
T	Relays
U	Relays
V	Relays
W	Relays
X	Relays
Y	Relays

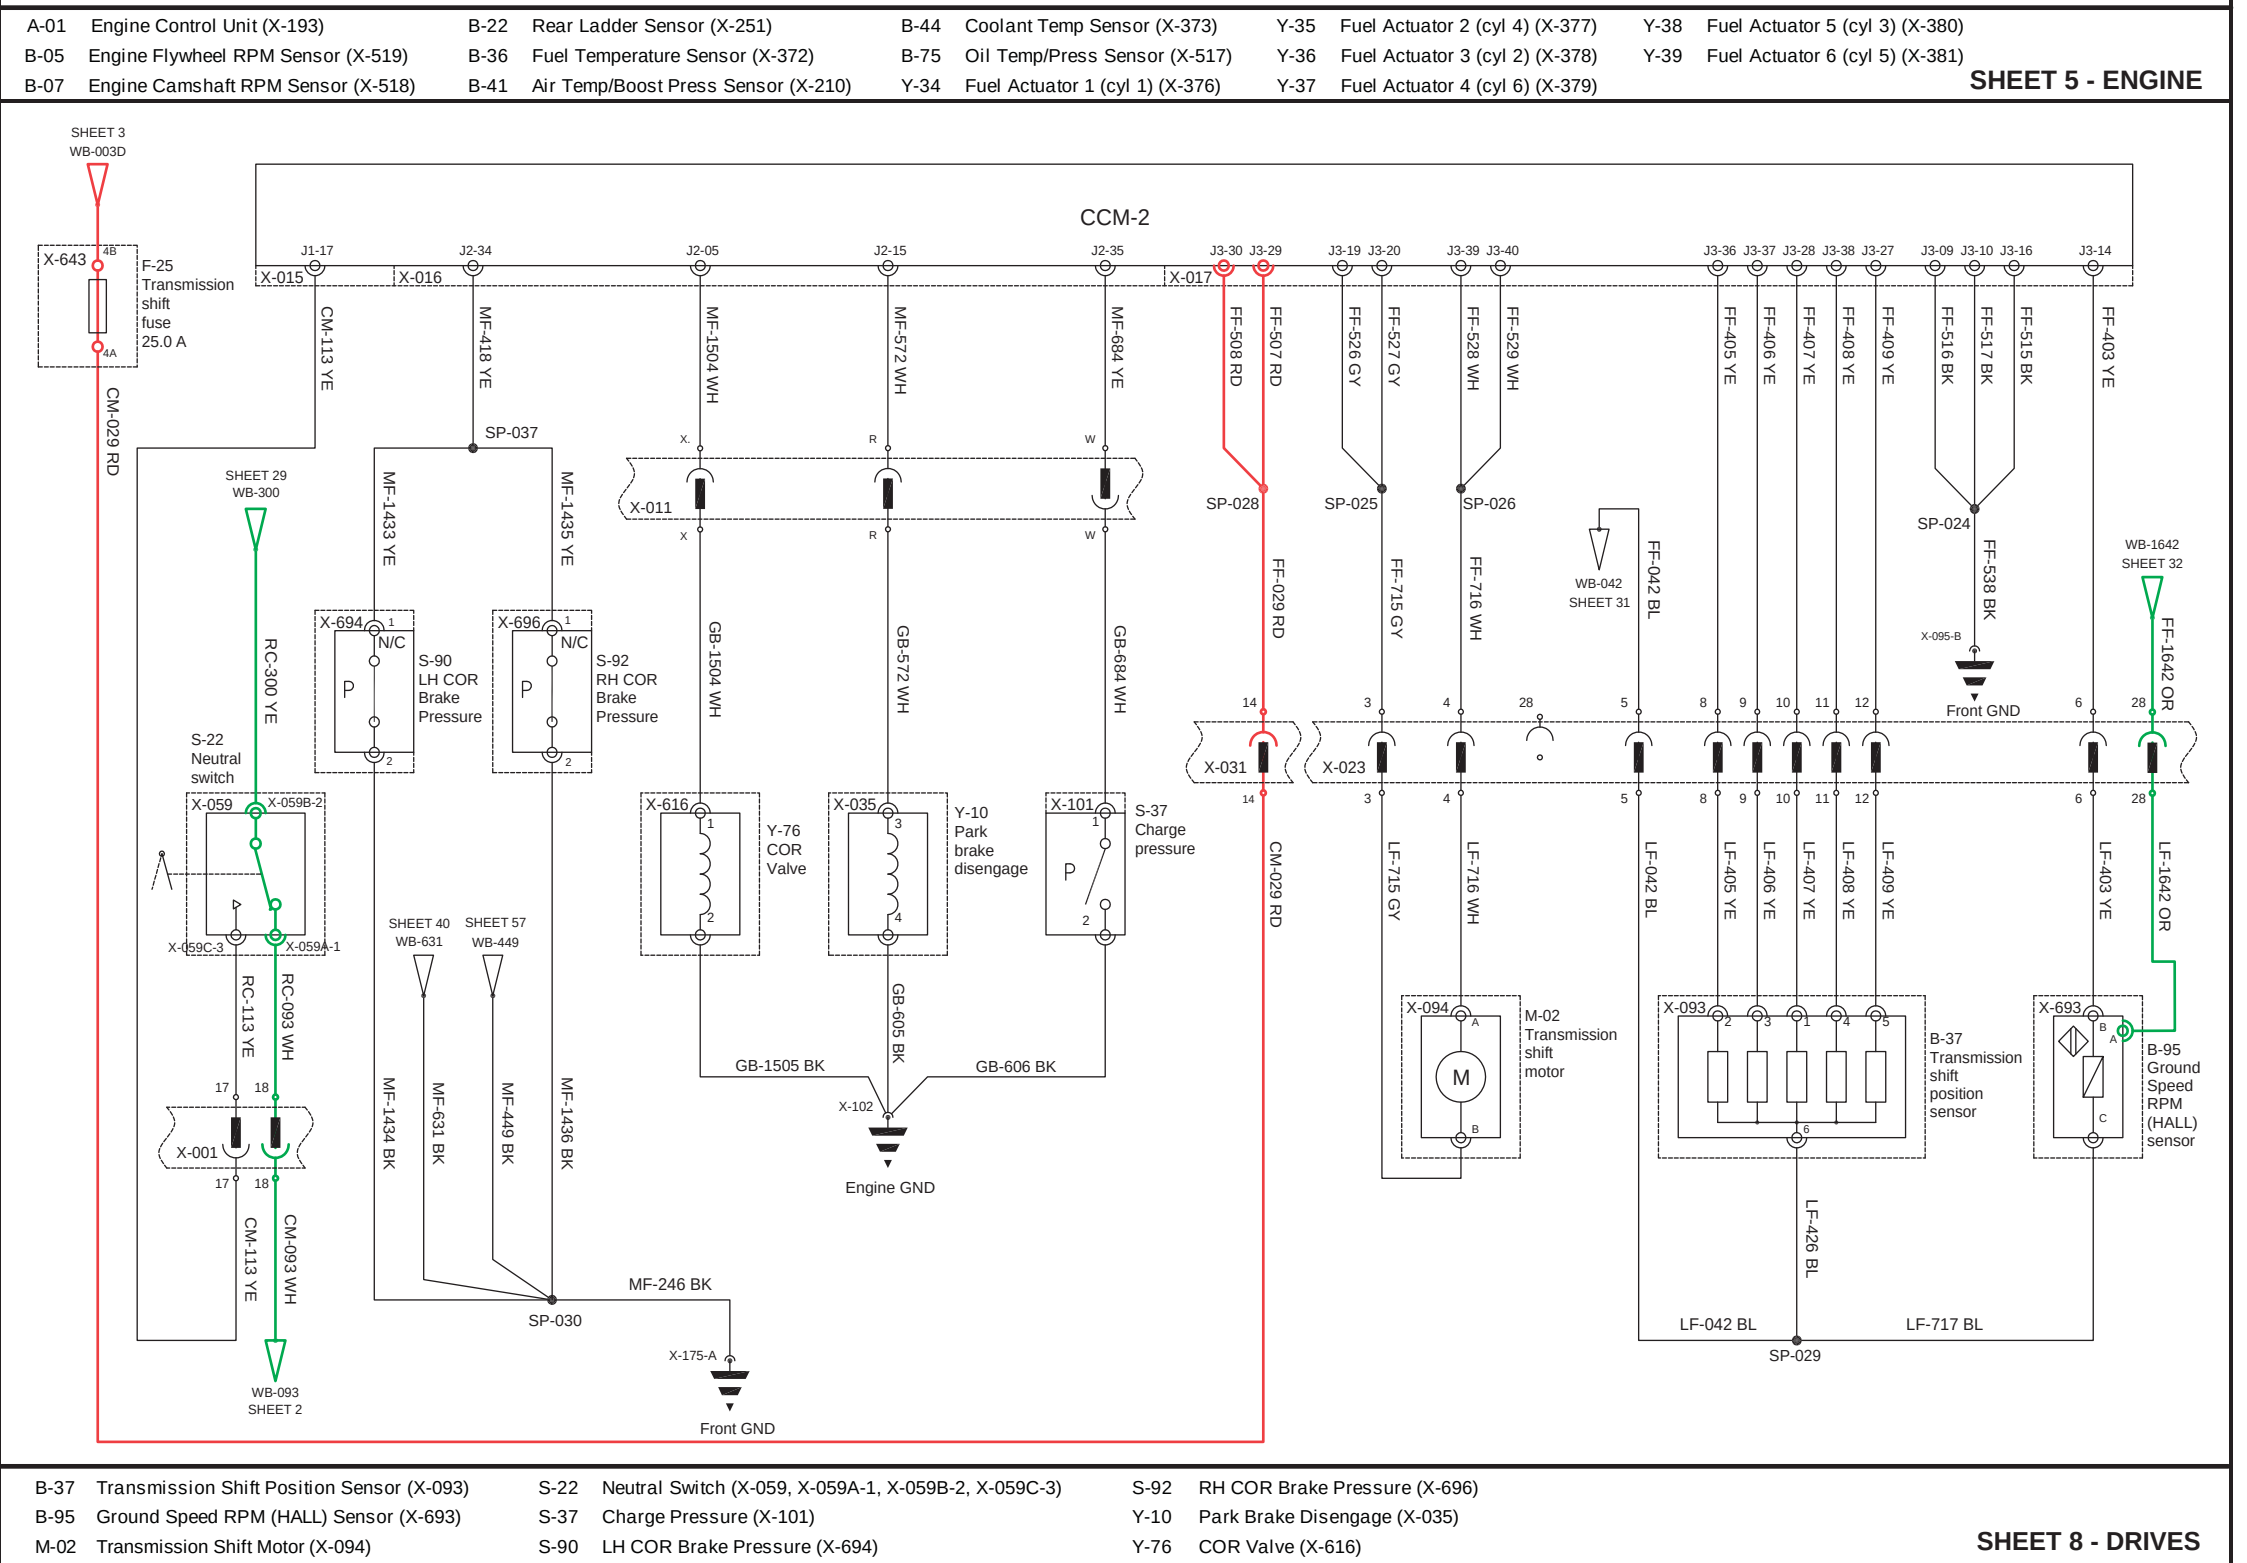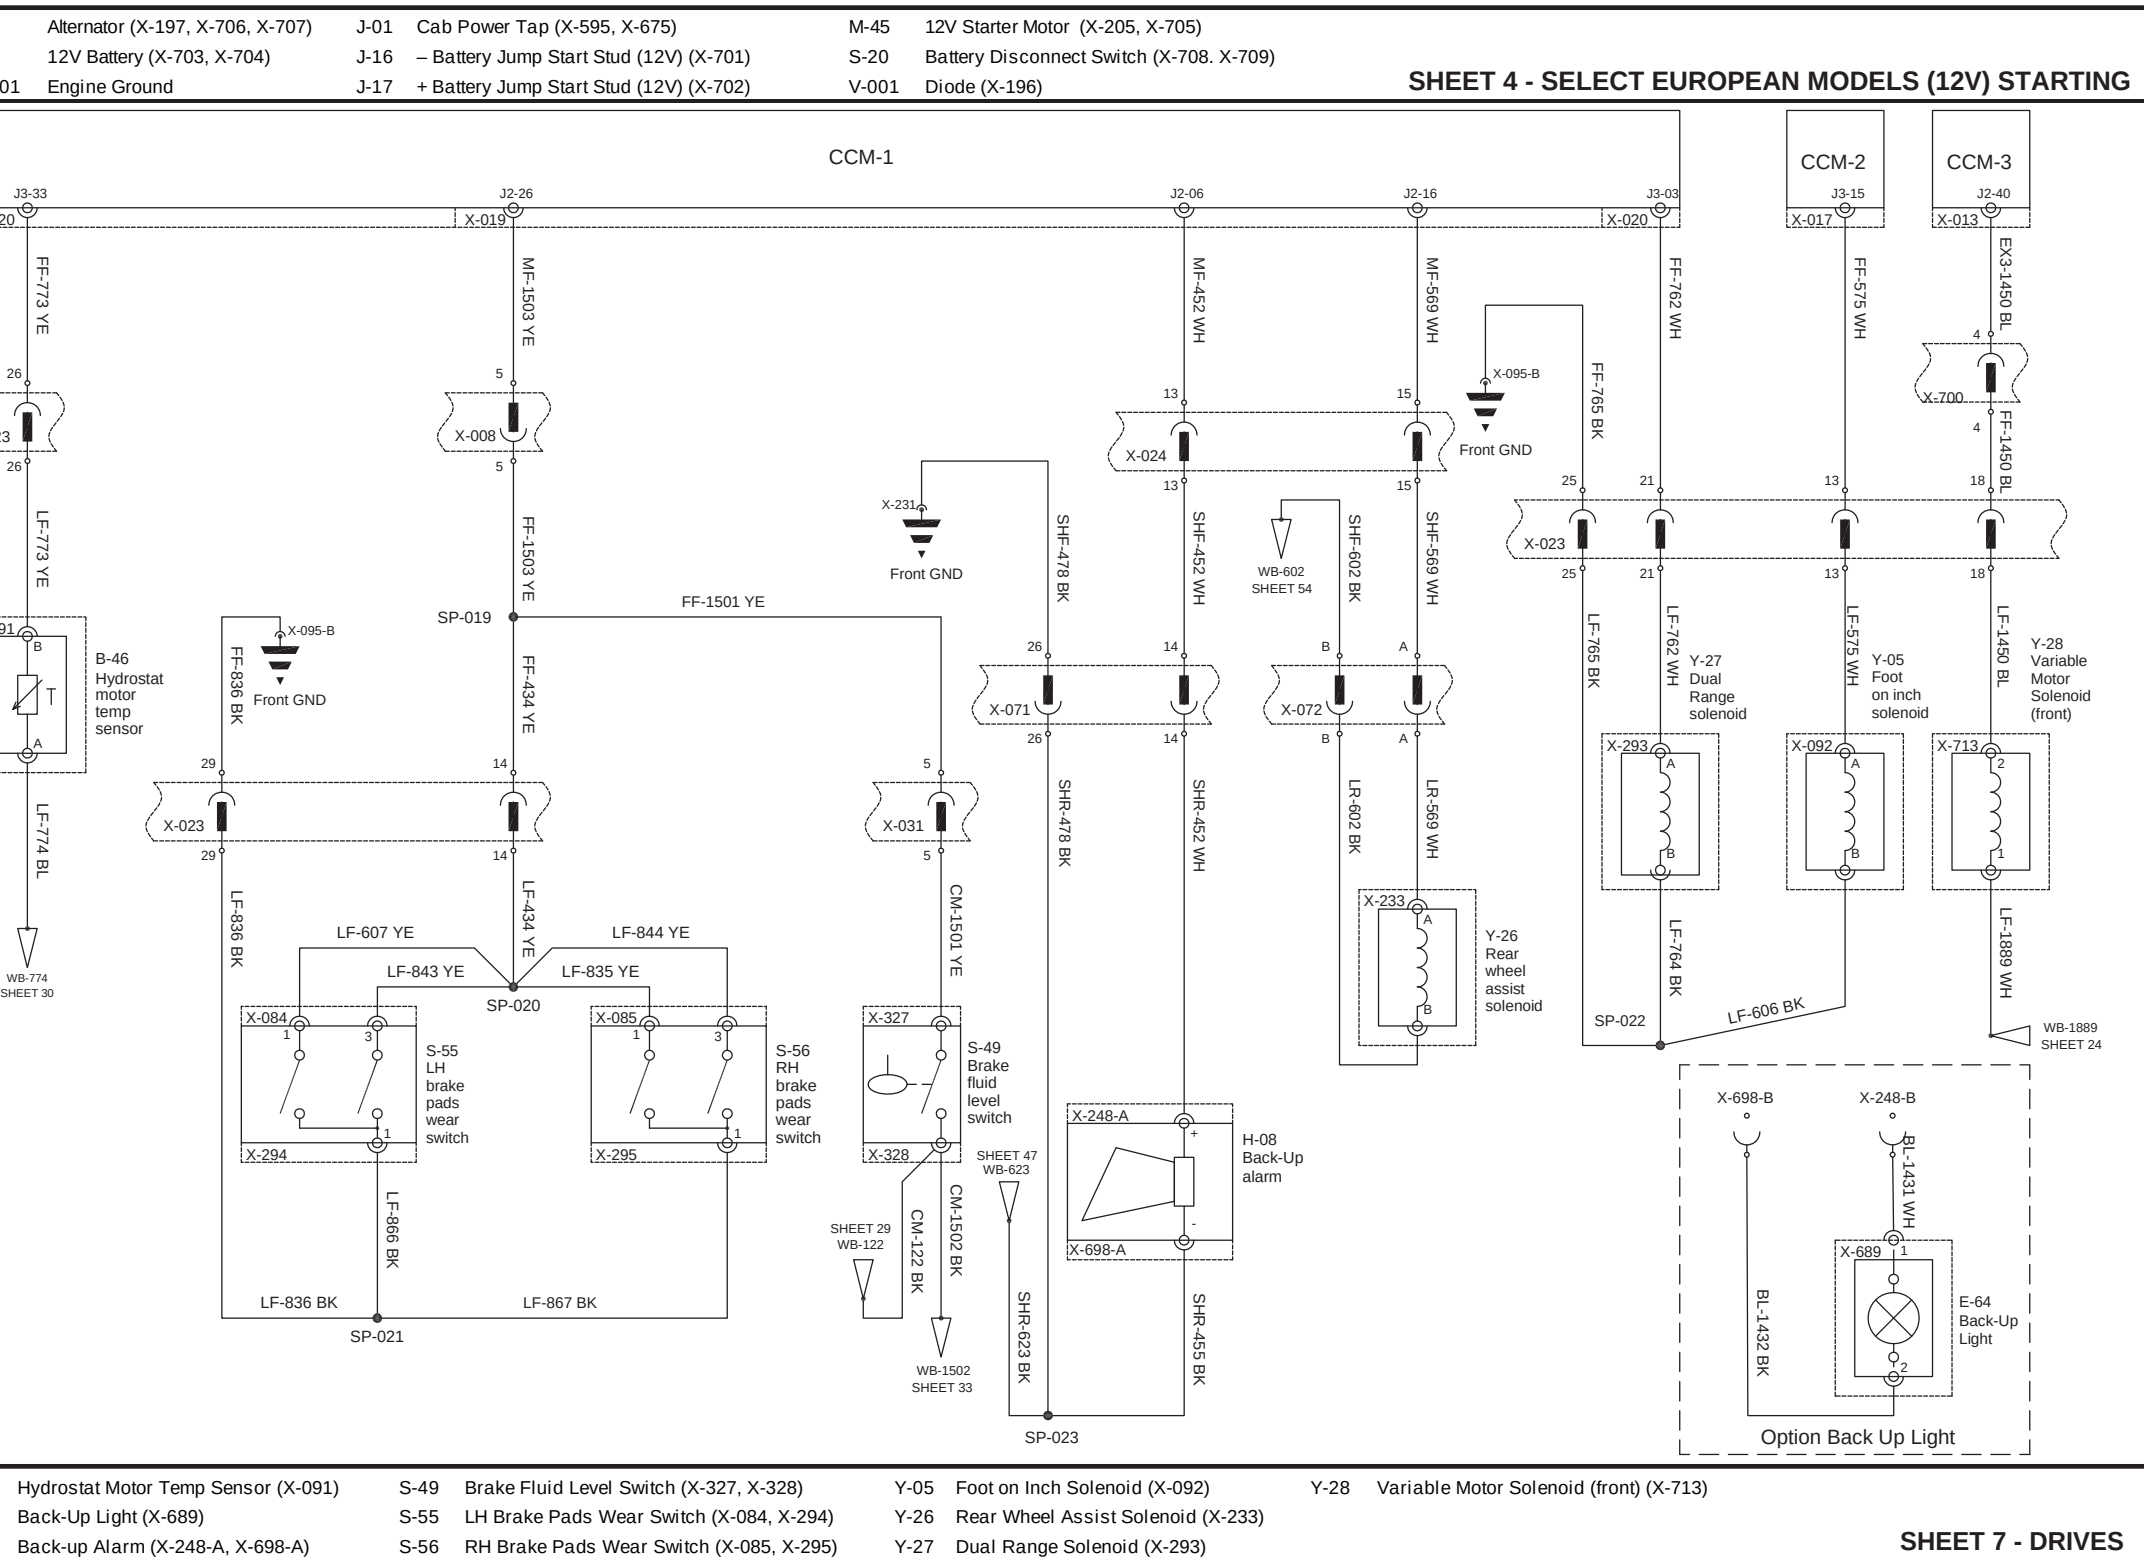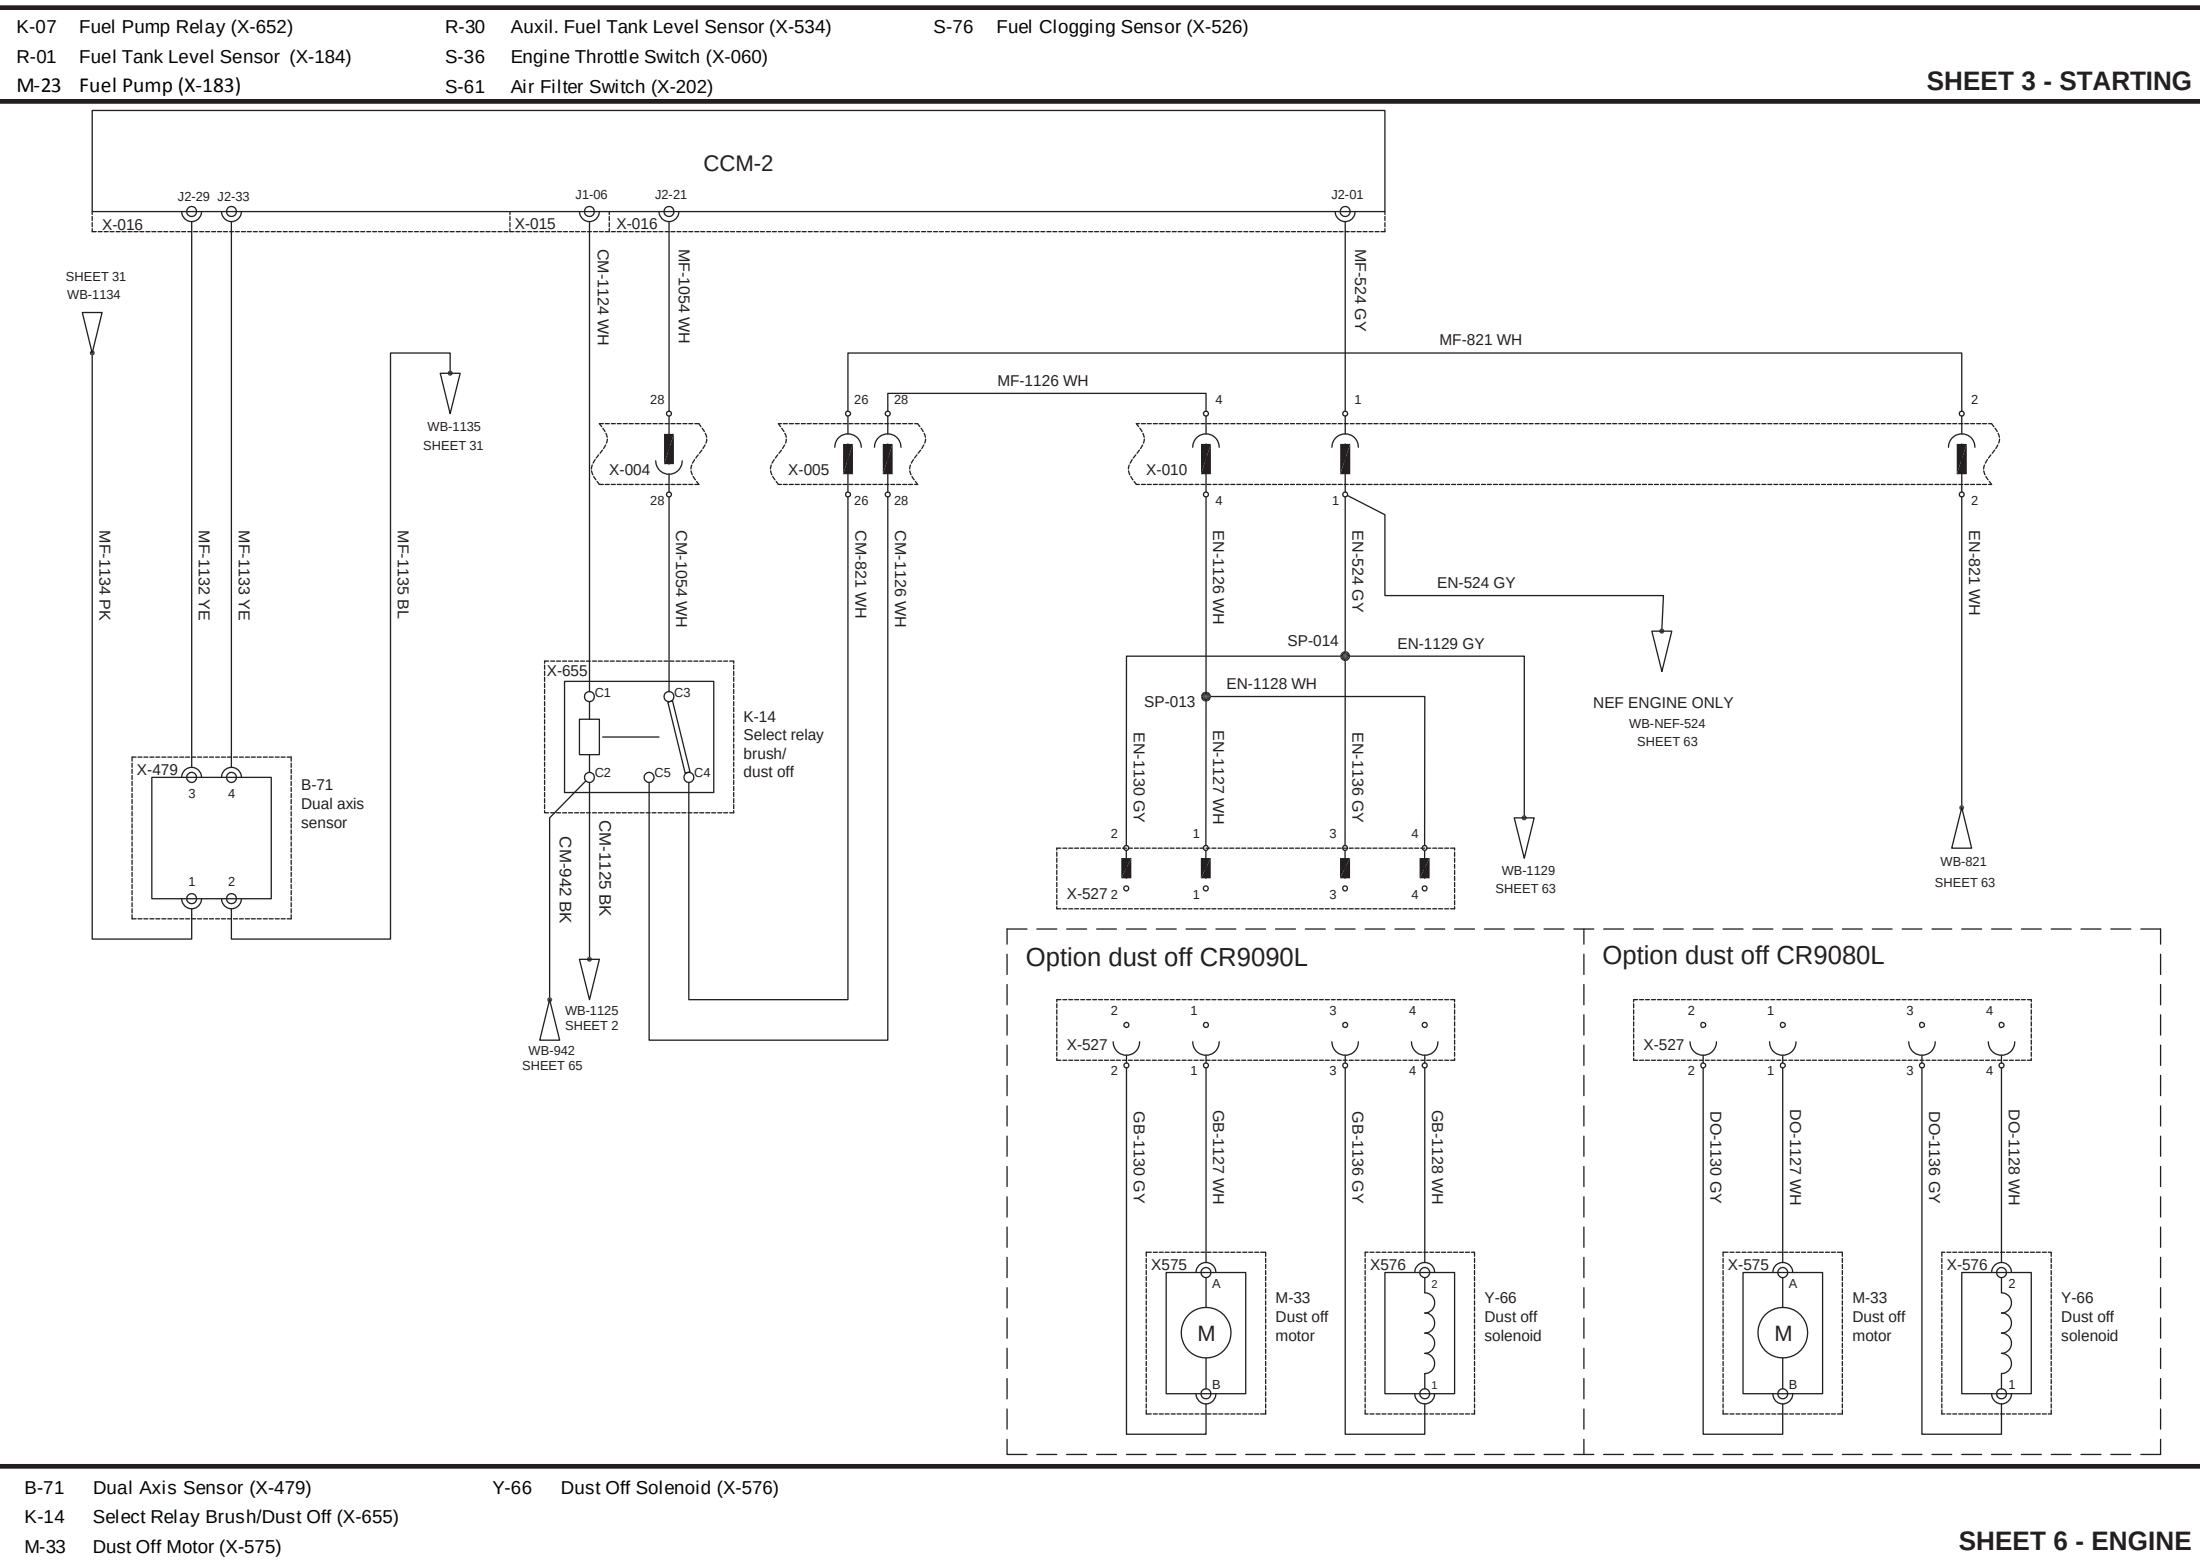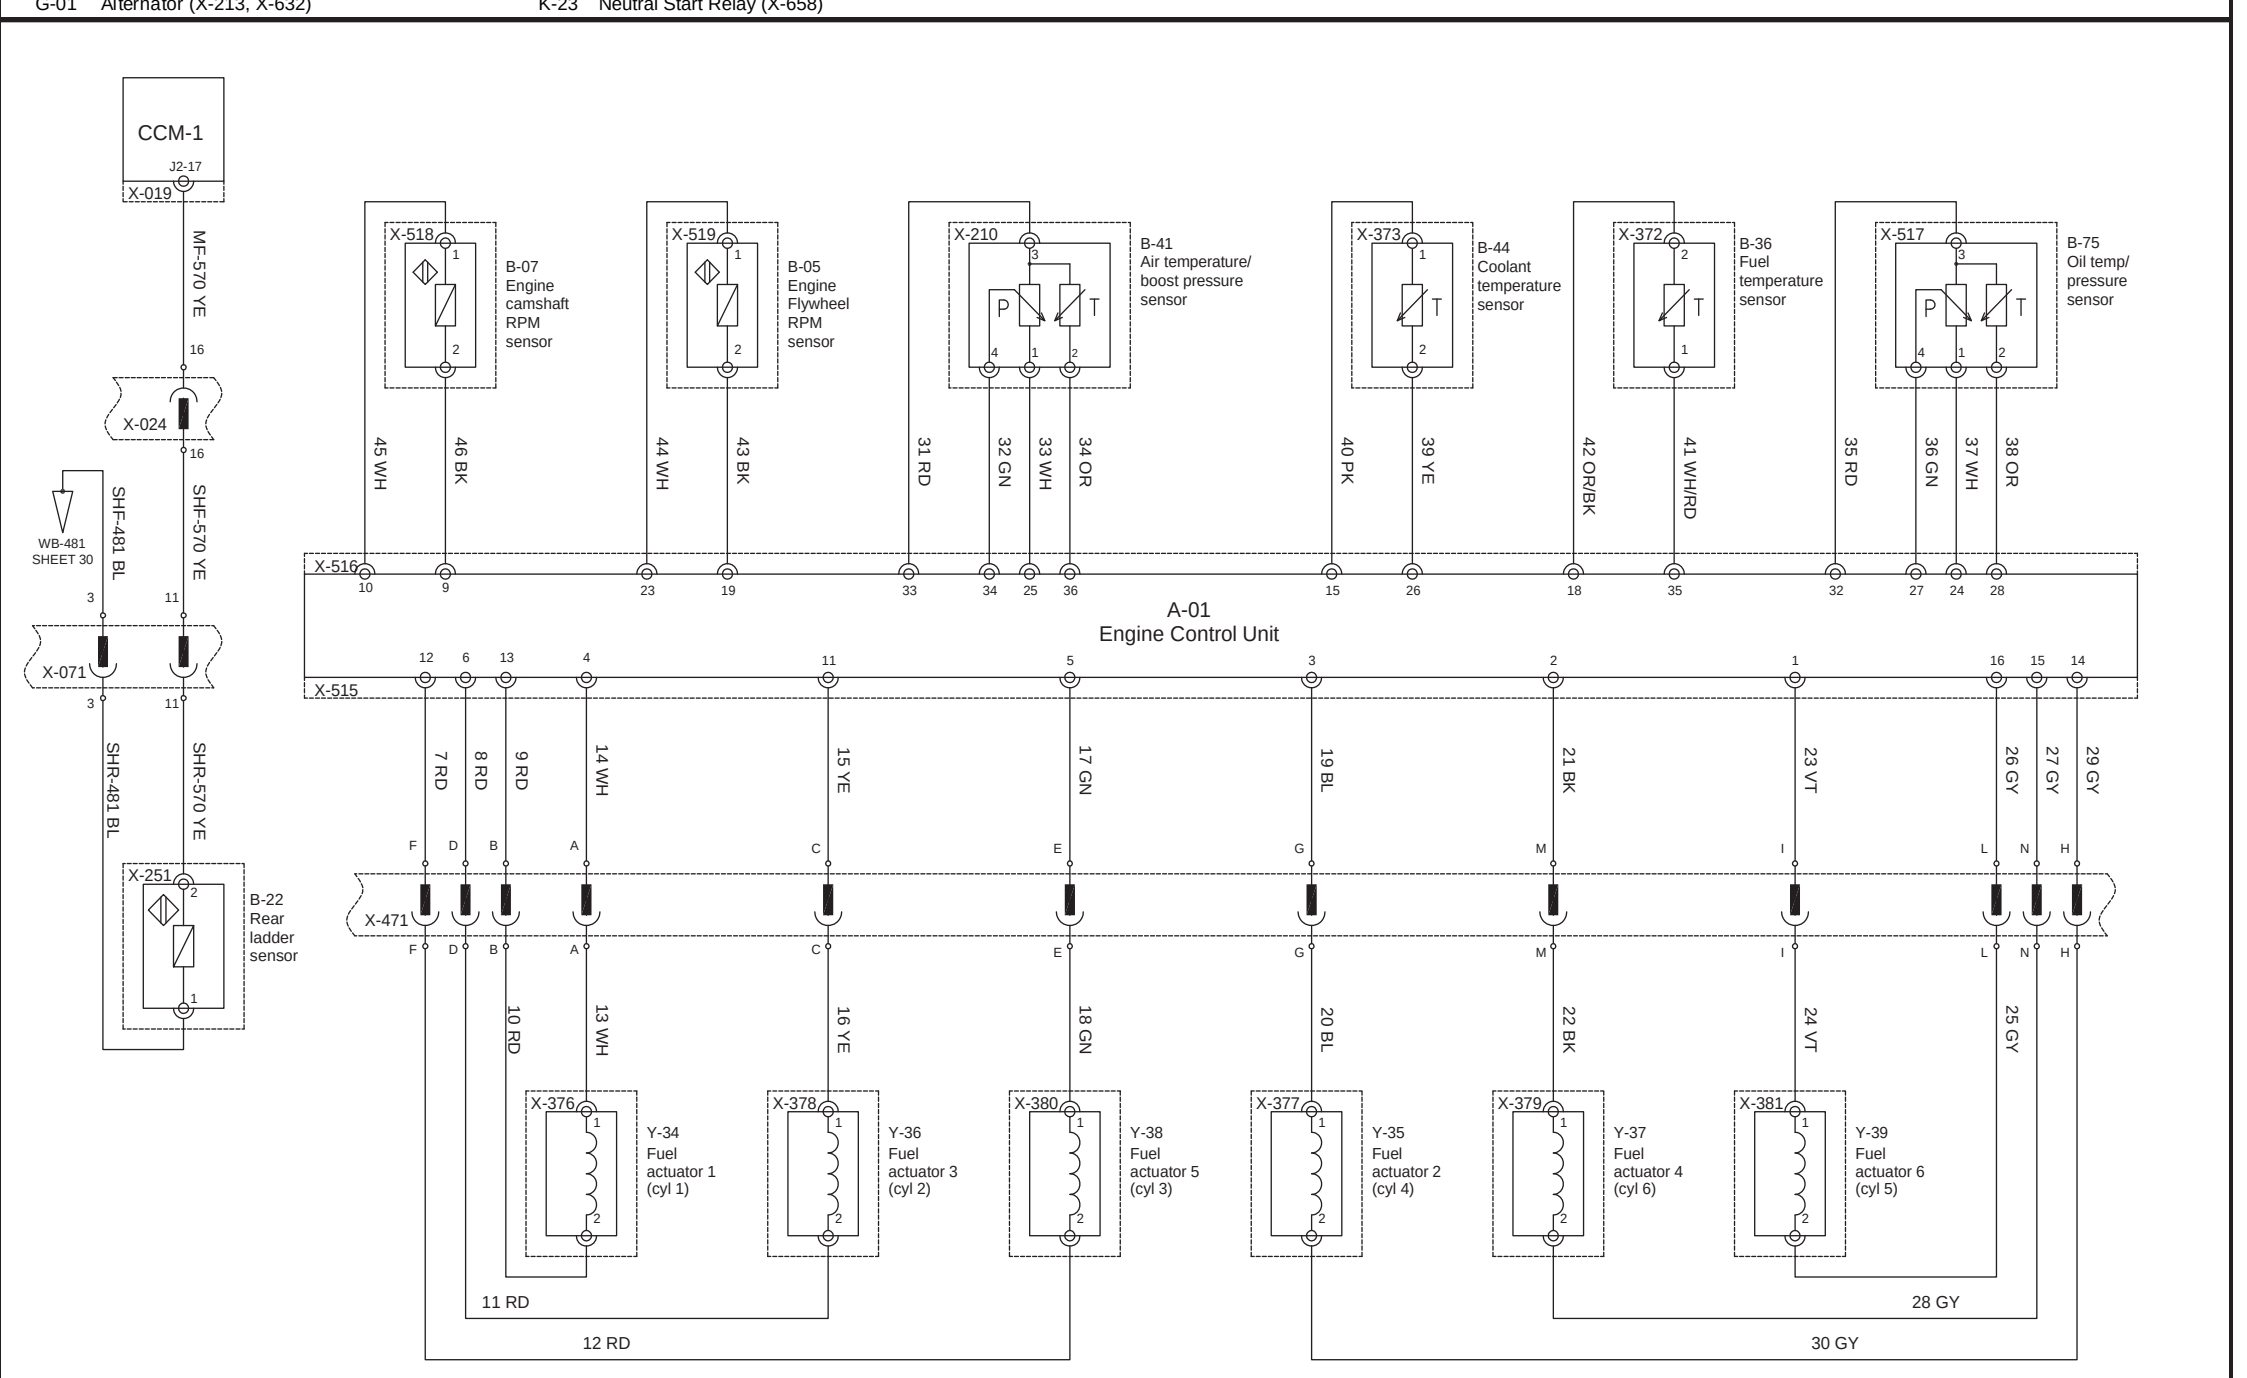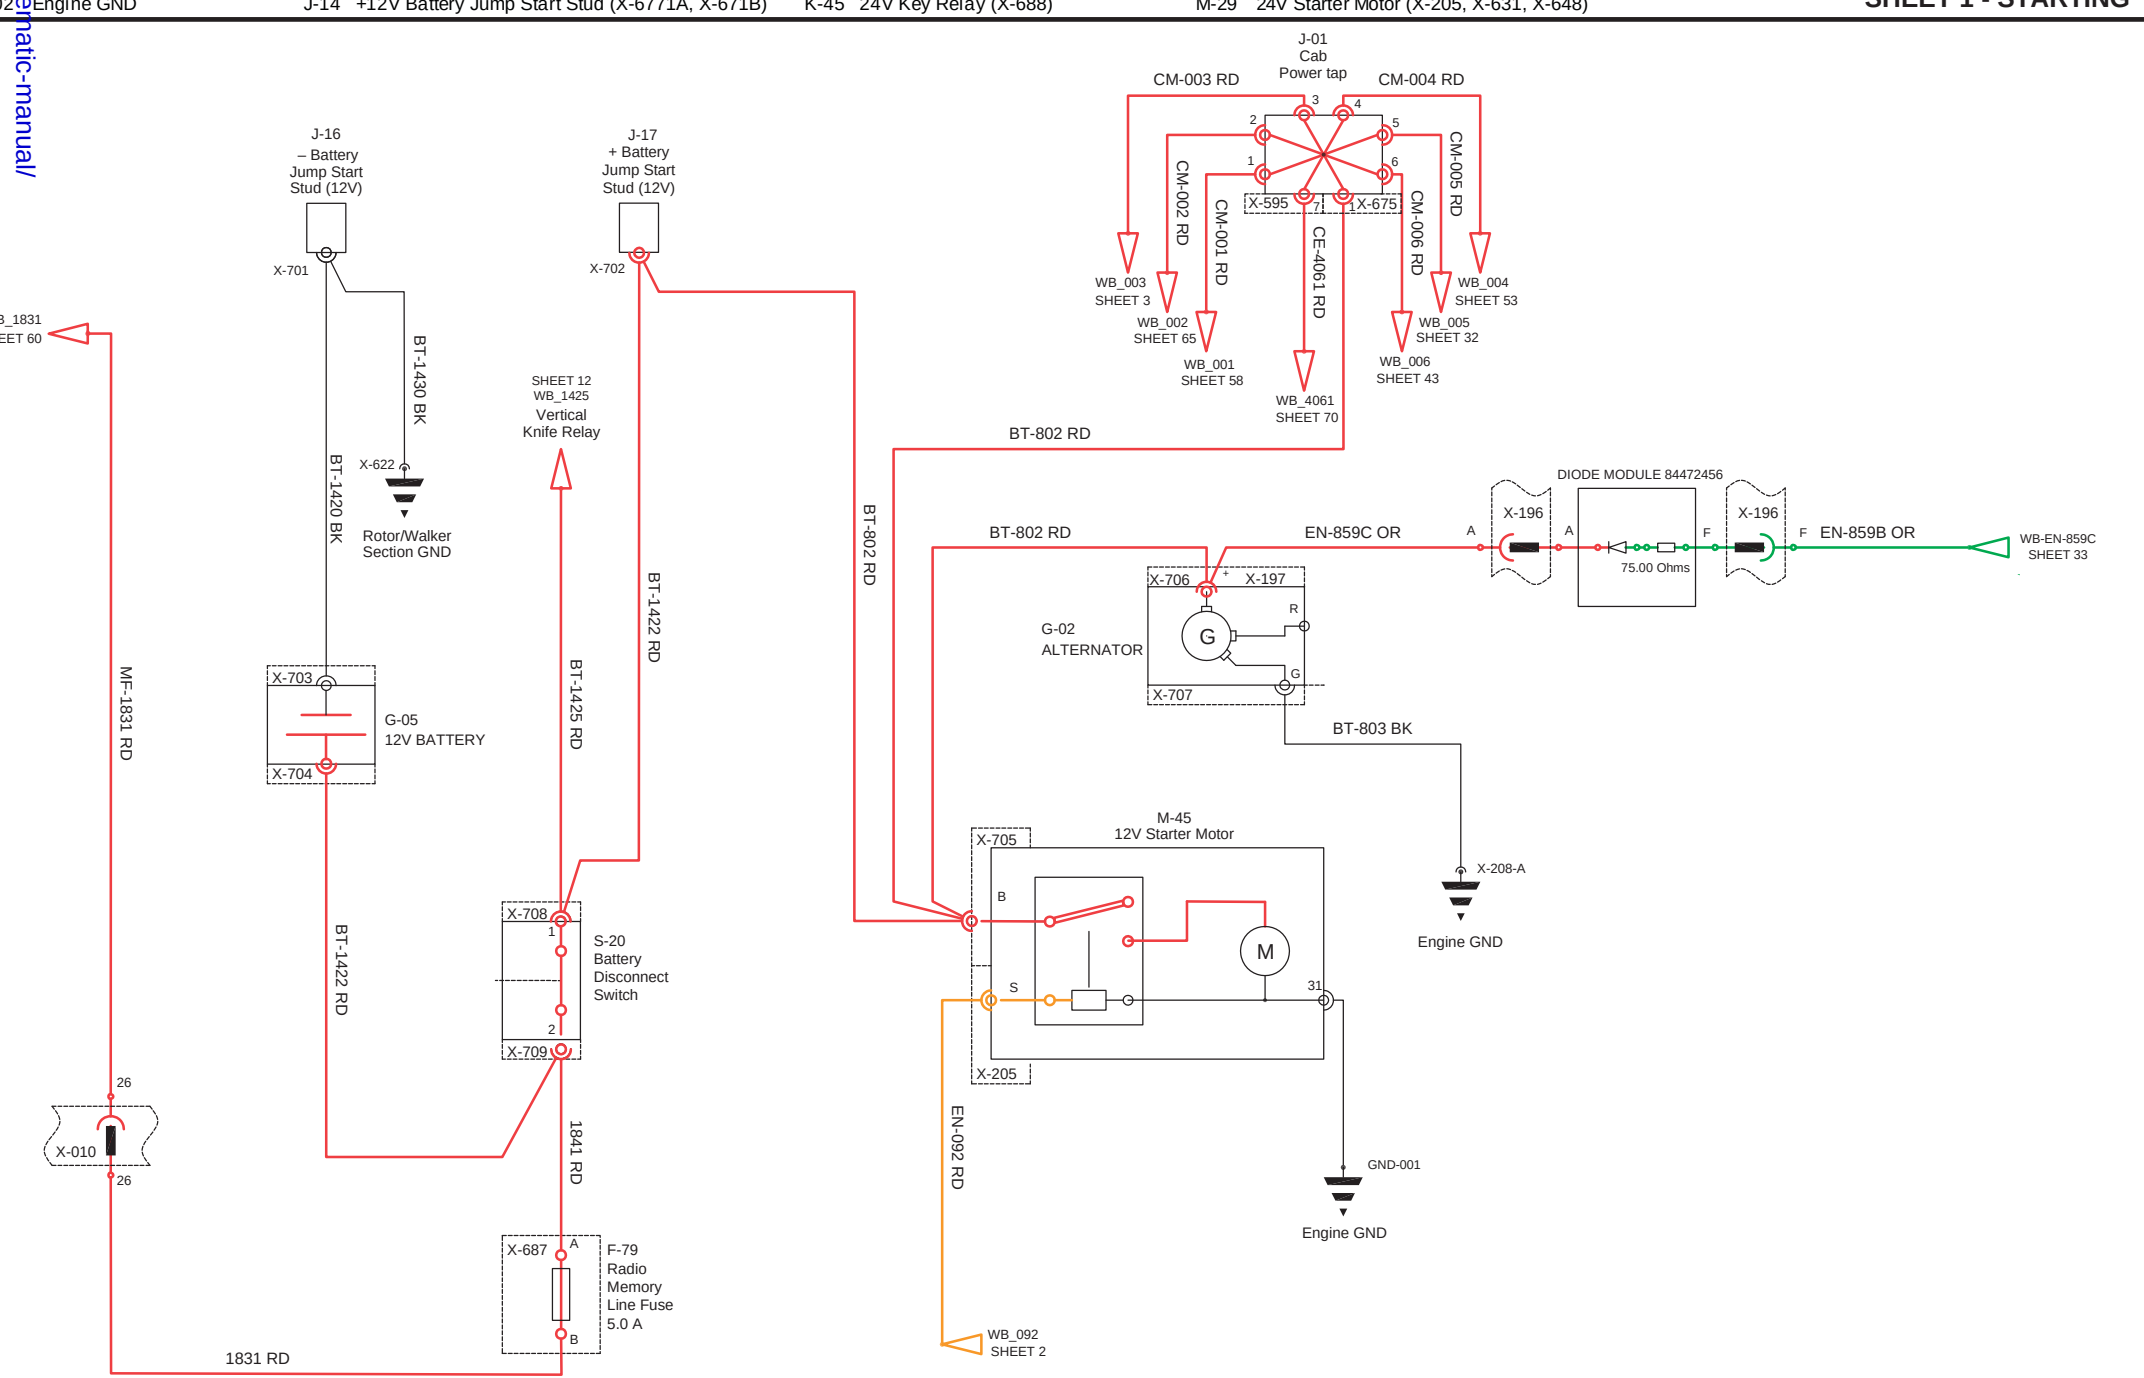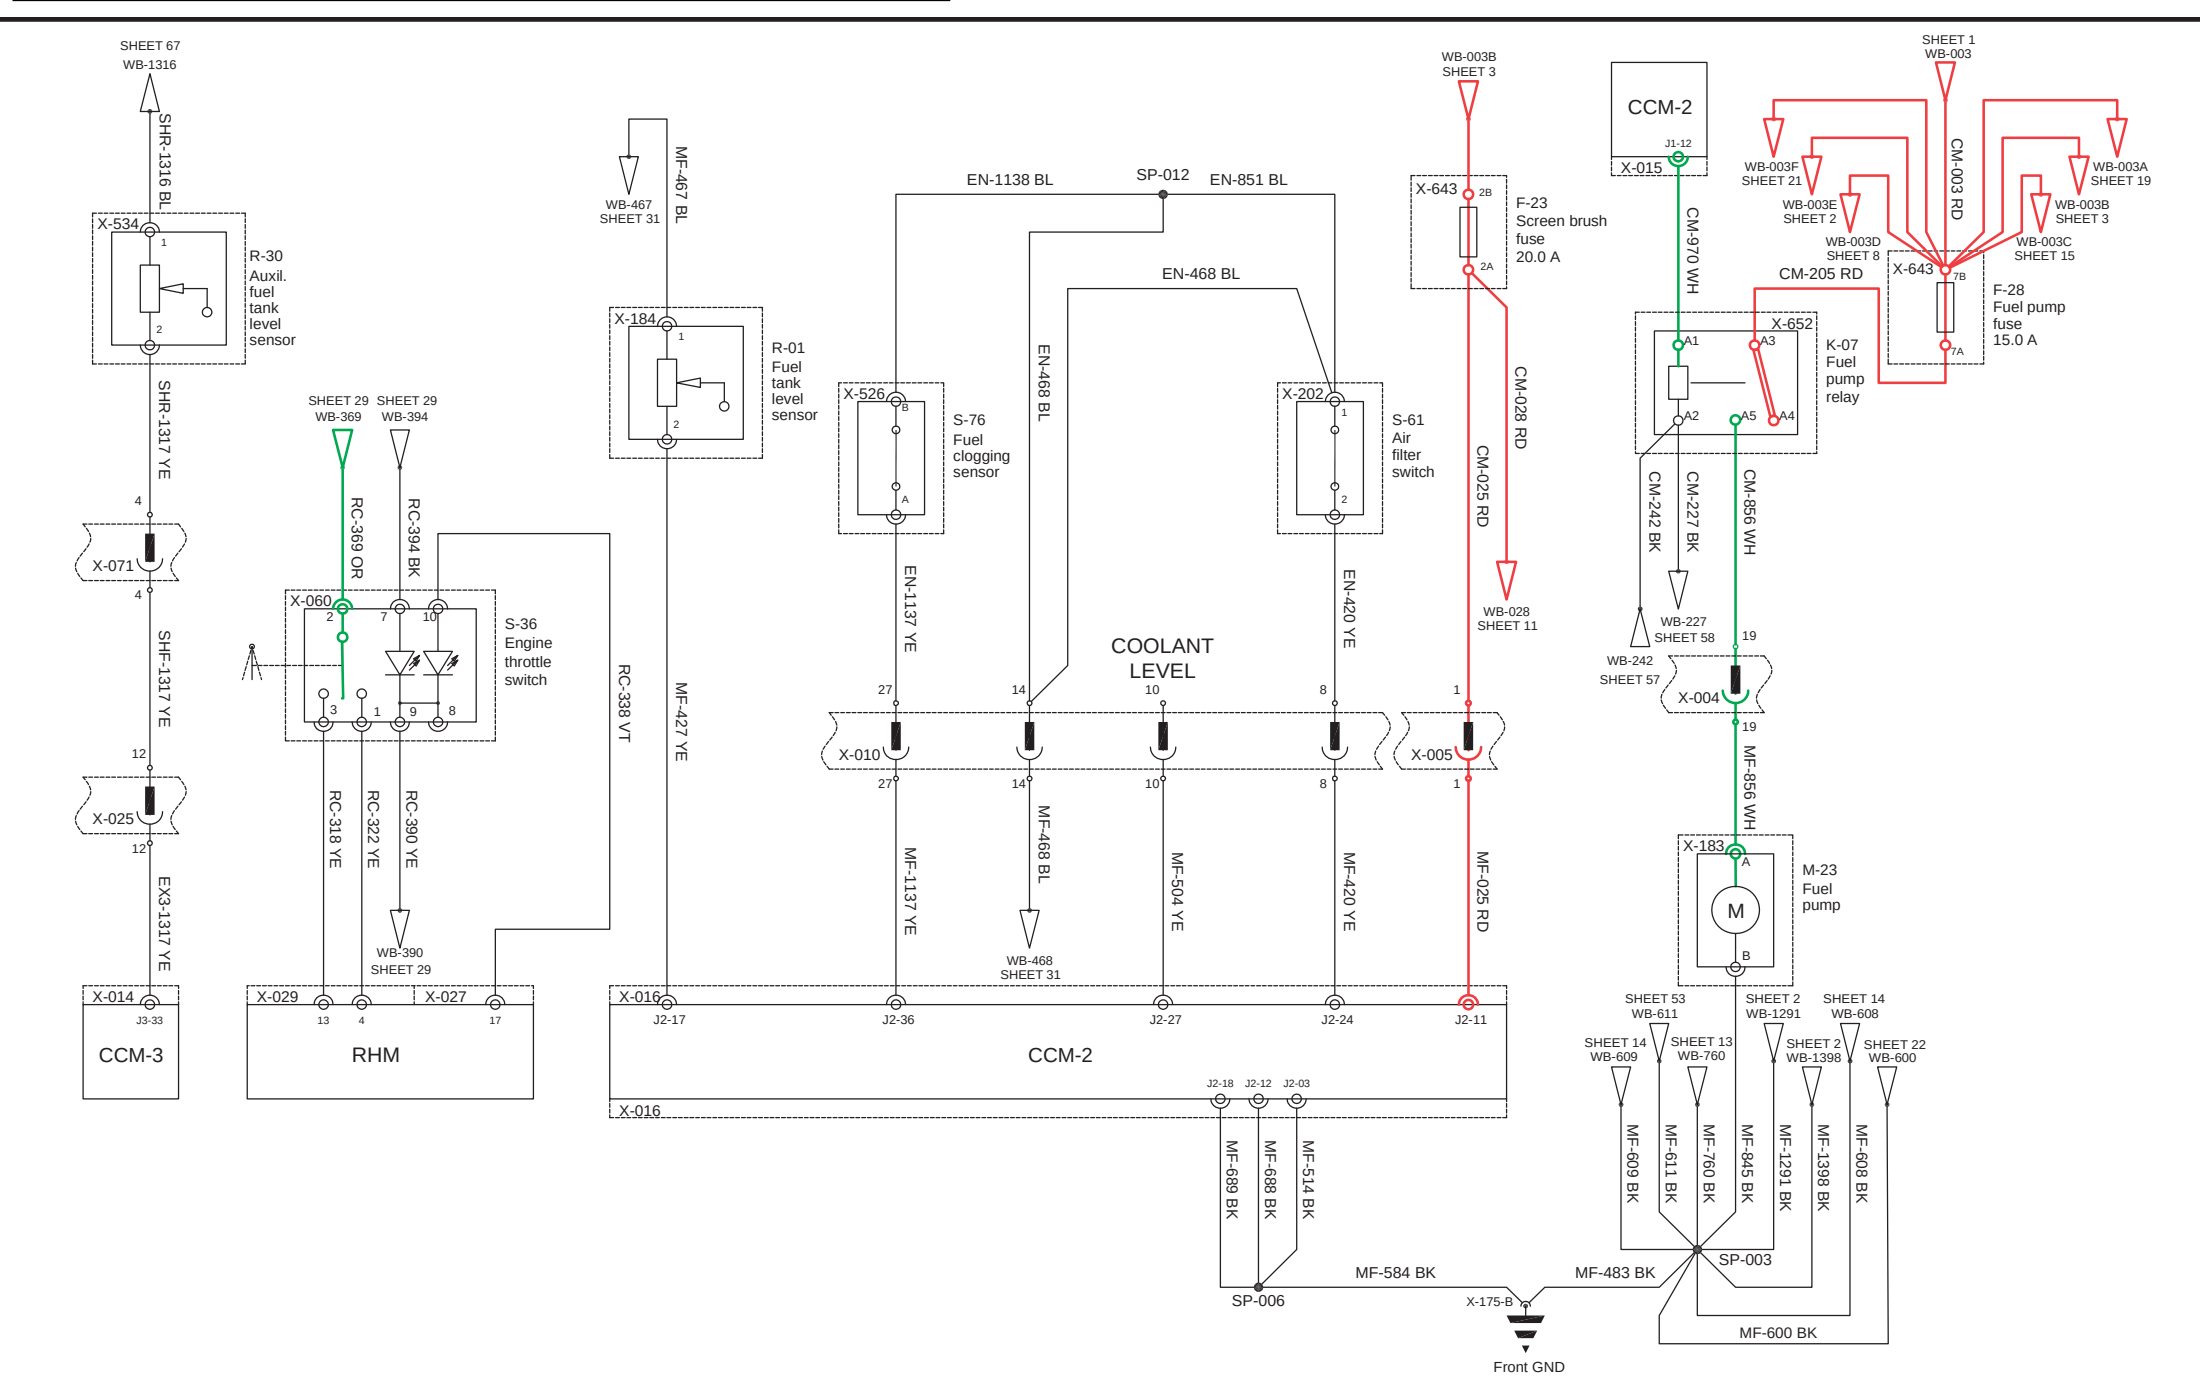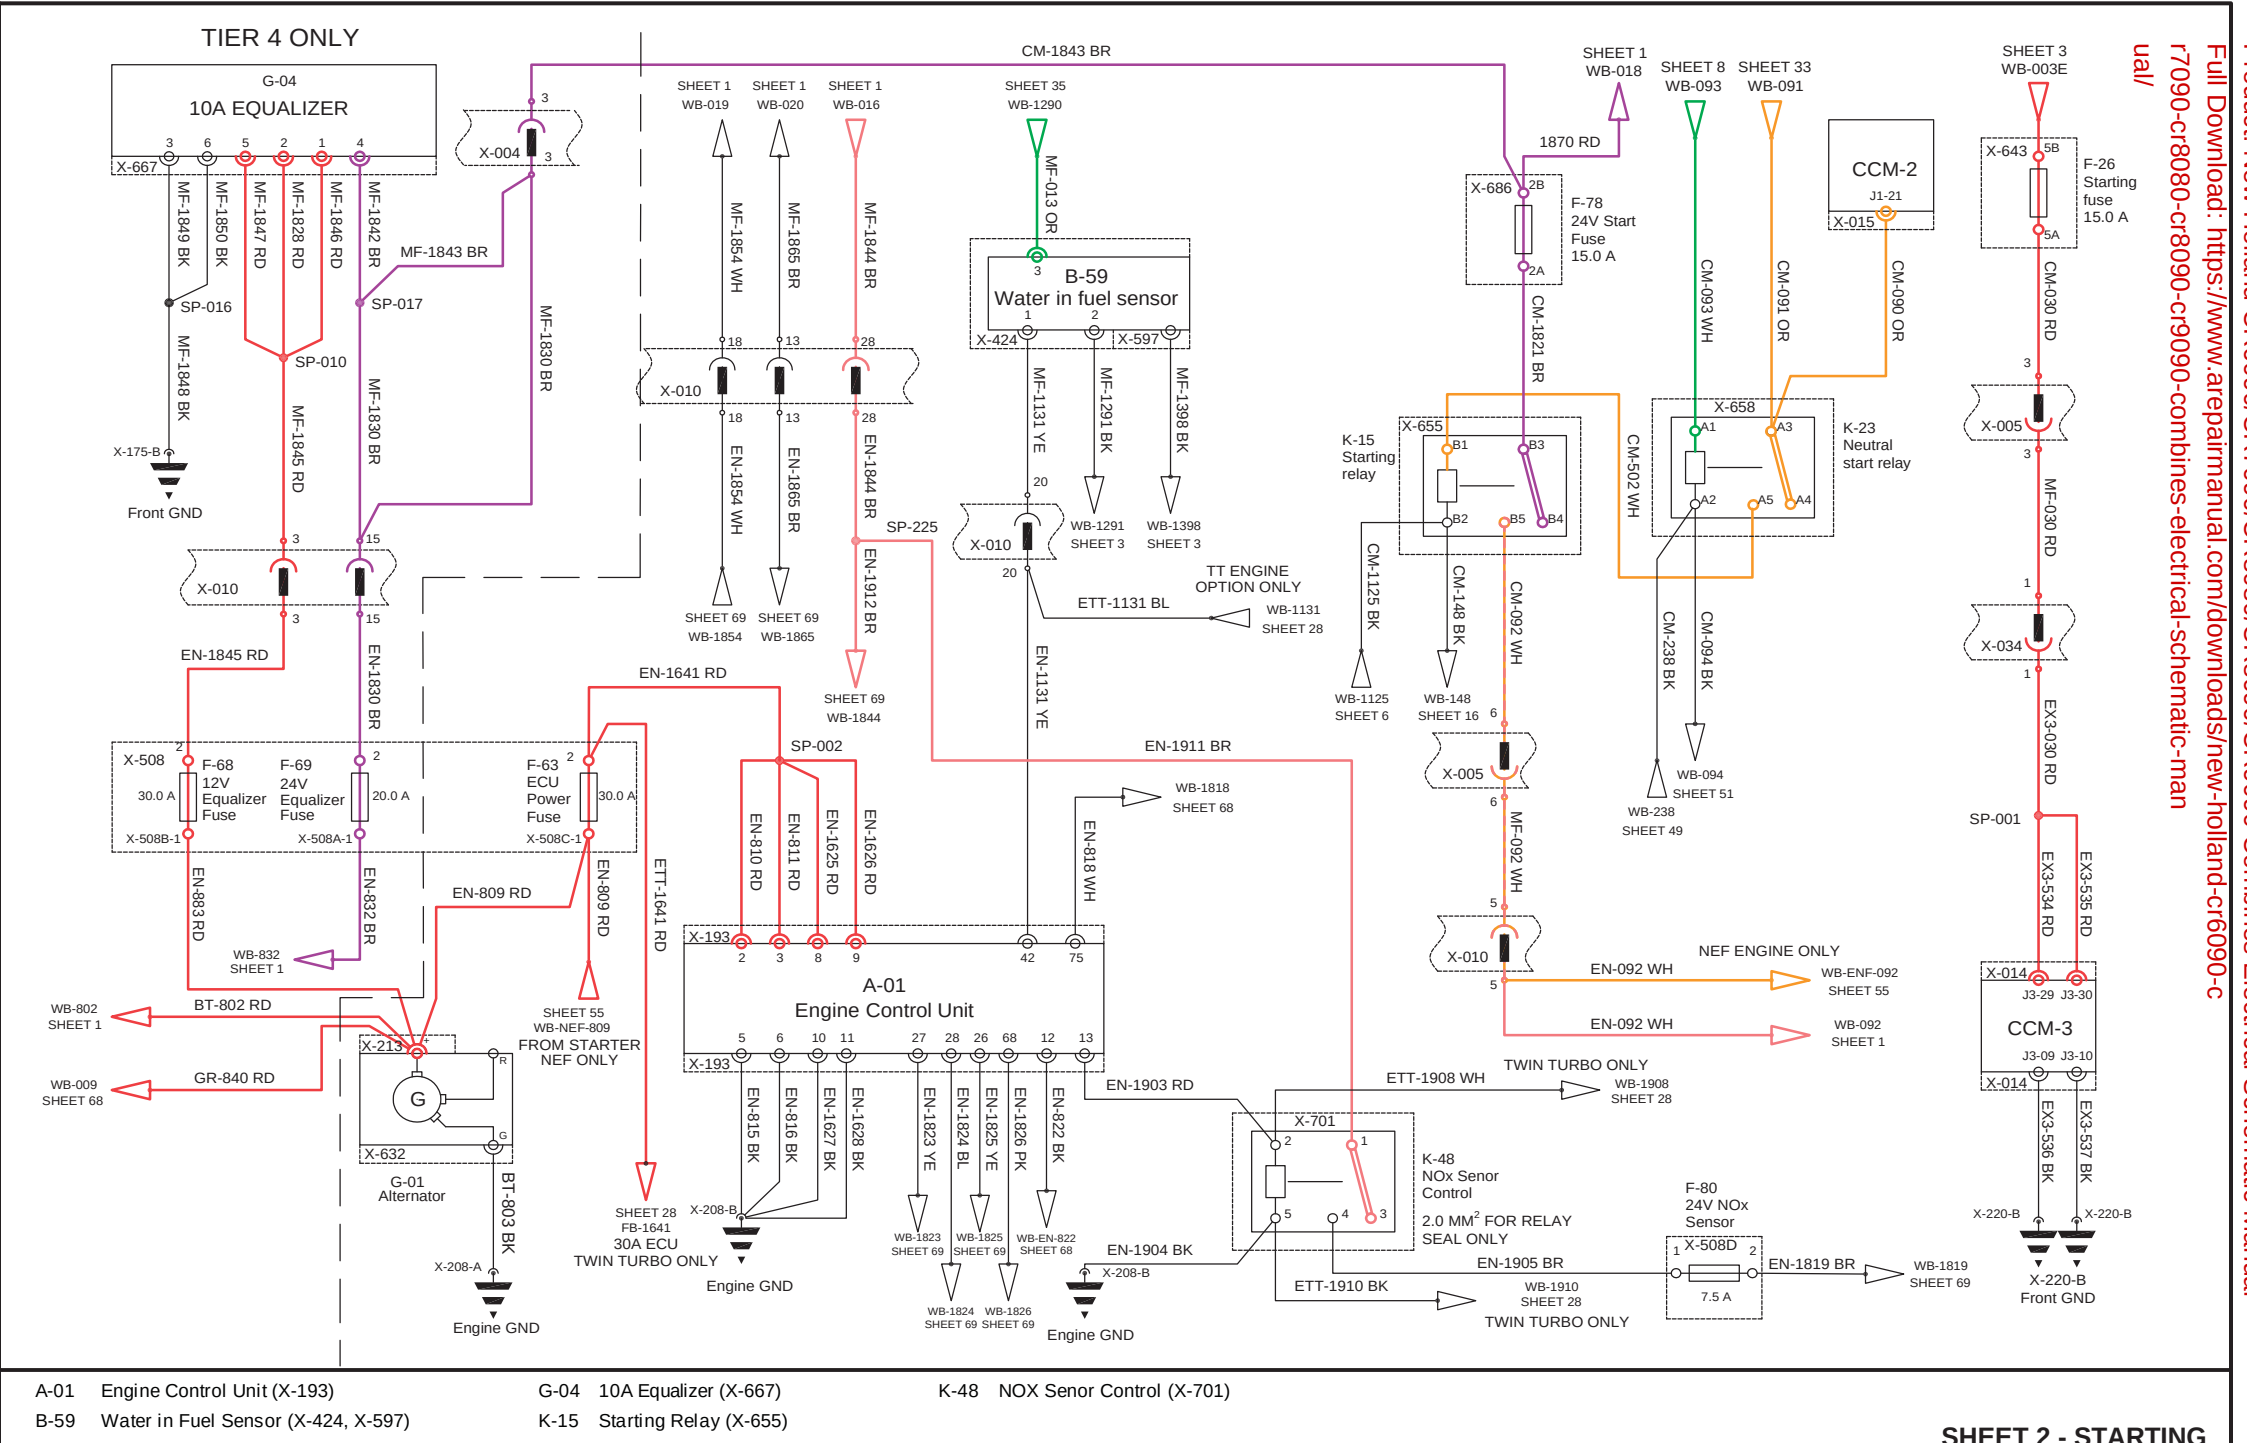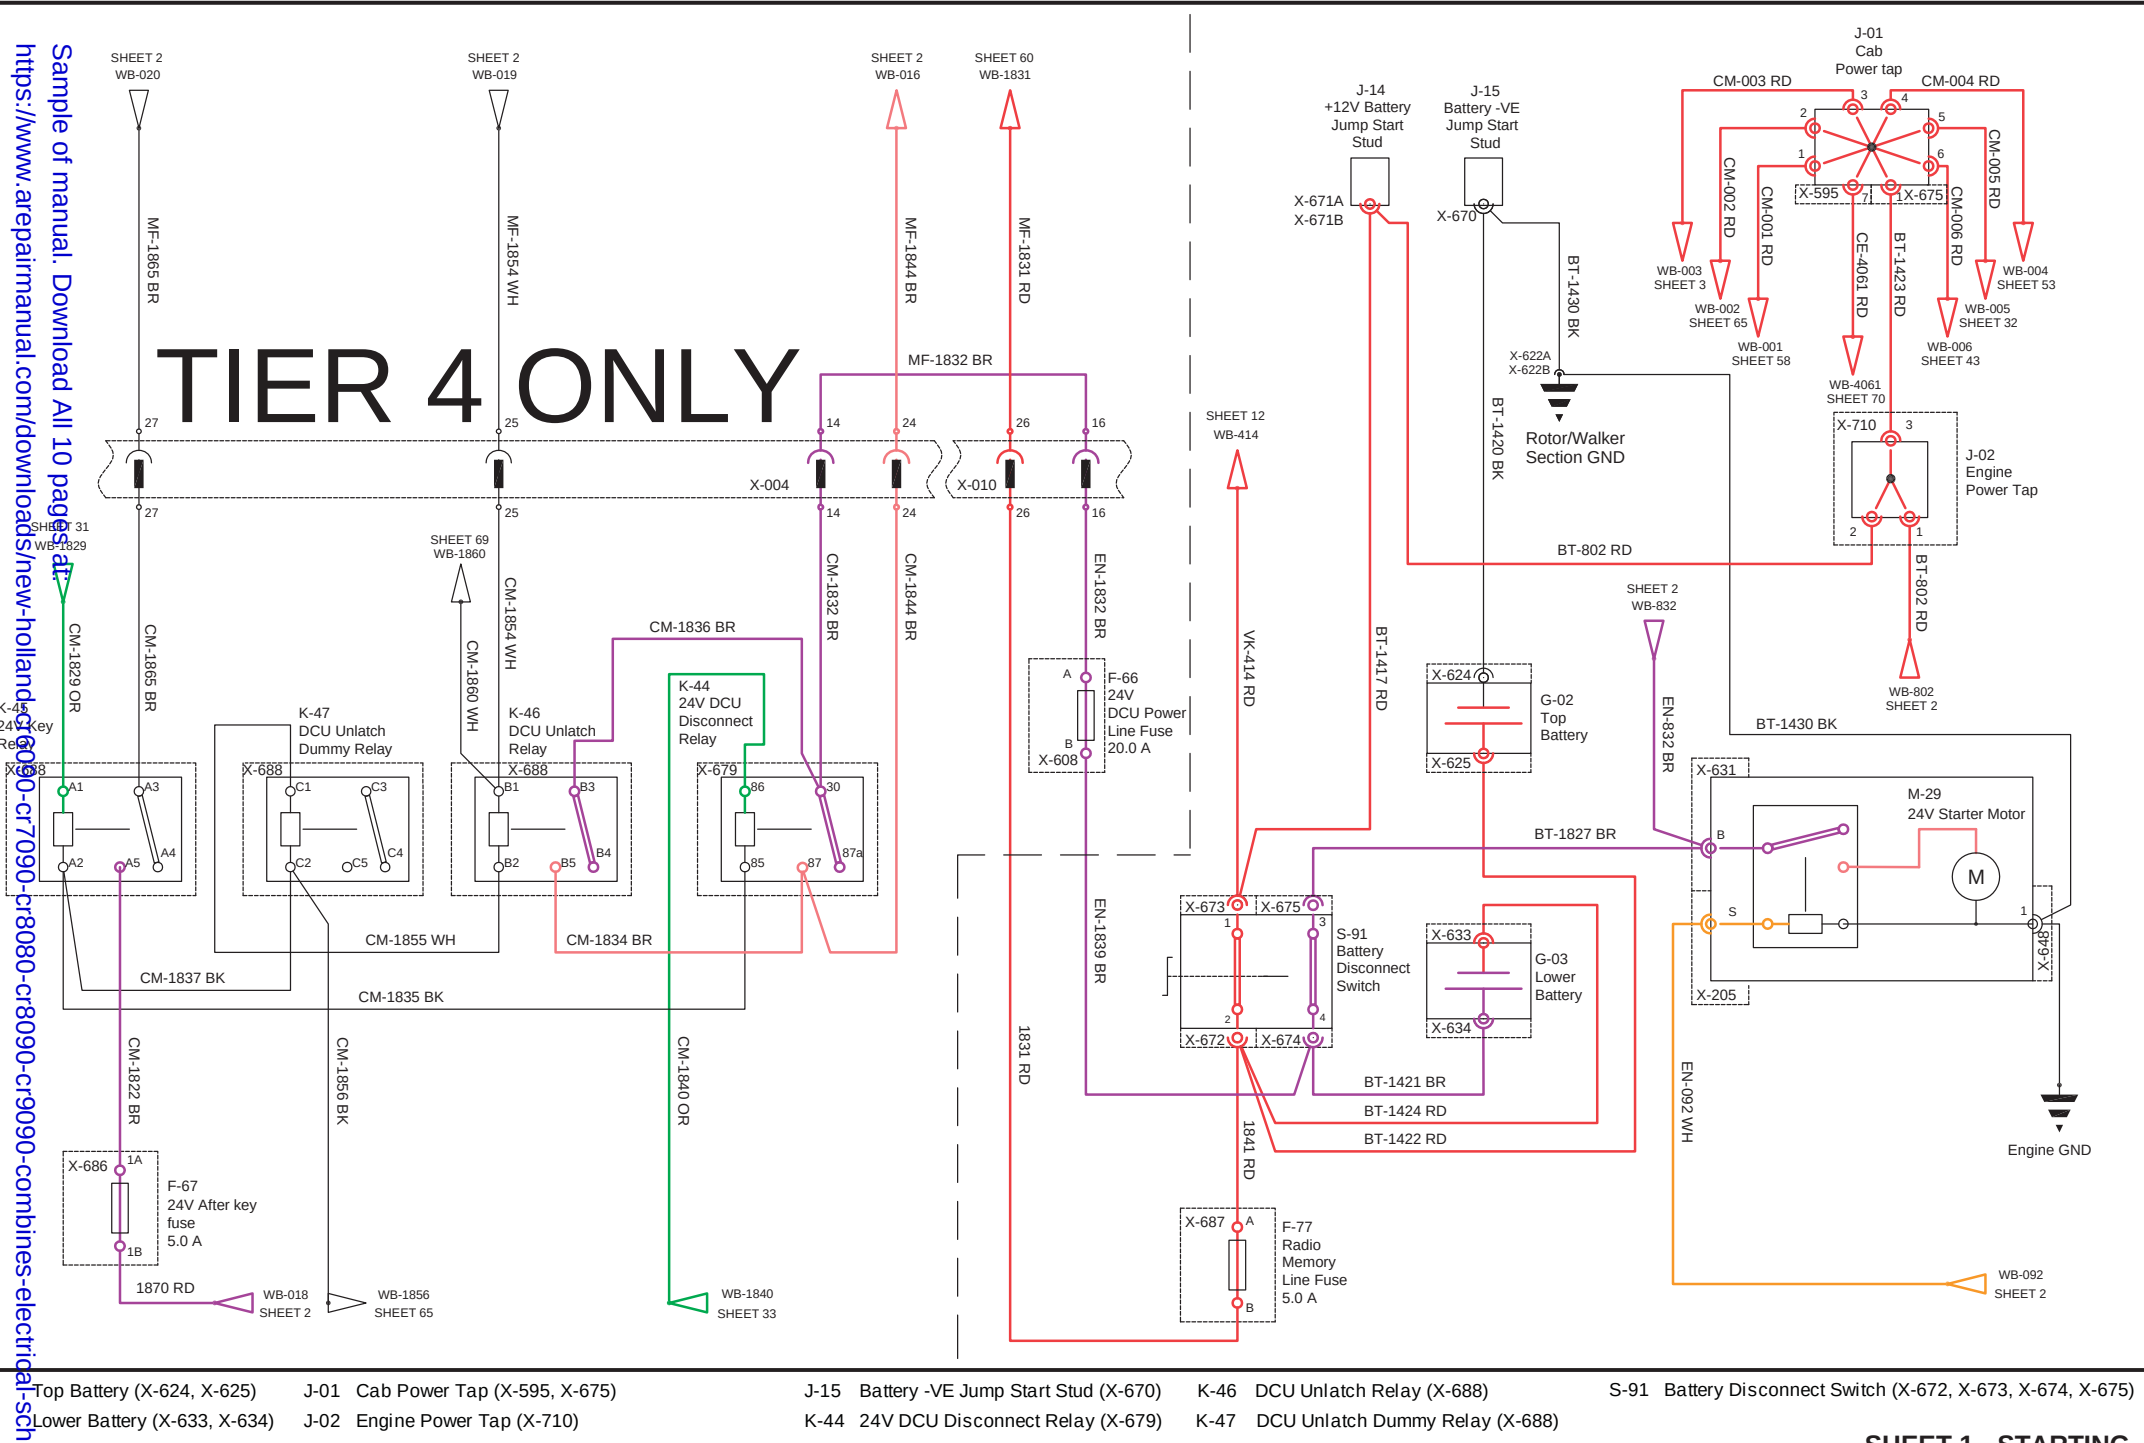

ELECTRICAL SCHEMATIC, NORTH AMERICA
MODEL YEAR 2012 PRODUCTIONELECTRICAL SCHEMATIC, NORTH AMERICA
MODEL YEAR 2012 PRODUCTION

SCHEMATIC SHEET INDEX

WIRING SYMBOLS

WB-468 SHEET 2

WB-097 SHEET 15

X-008 127

JUMP FROM ANOTHER SHEET

JUMP TO ANOTHER SHEET

CONNECTOR

TWISTED WIRE PAIR (NETWORK)

ENGINE POWER TAP

FUSE

BATTERY DISCONNECT SWITCH

SWITCH

ALARM

SWITCH WITH PUSH BUTTON CONTACT

ASP SENSOR

TEMPERATURE SENSOR

RPM SENSOR

POTENTIOMETER

RELAY

LIGHT

GROUND

NOX SENSOR

PRESSURE SWITCH

BATTERY

ELECTRIC MOTOR

SOLENOID

ALTERNATOR

KEY SWITCH

DIODE MODULE

GROUND LOCATIONS

Frame GND

Engine GND

Cab GND

Front GND

Rotor/Walker Section GND

T4 Engine GND

Grid Heater GND

LEGEND

UNSWITCHED POWER

SWITCHED POWER

STARTING SEQUENCE

24 VOLT SYSTEM

24 VOLT SWITCHED POWER

WIRING REFERENCES

Color	Color Code	Function
Black	BK	Ground, Chassis
Blue	BL	Printed Circuit Ground
White	WH	Increasing Activation
Gray	GY	Decreasing Activation
Orange	OR	Power After Ignition
Yellow	YE	Signal Wires
Red	RD	Battery Voltage
Violet	VT	Lighting
Pink	PK	Reference Voltage


COMPONENT LEGEND

Label Prefix	Component Type
A	Electronics
D	Sensors
B	Diodes
E	Lights
F	Fuses
G	Generators
H	Audio
J	Juilets
K	Relays
M	Motors
Q	Circuit Breakers
R	Resistive
S	Switches
Y	Splice Blocks
S	Solenoids


WIRE COLOR

CIRCUIT NUMBER


HARNES CODE

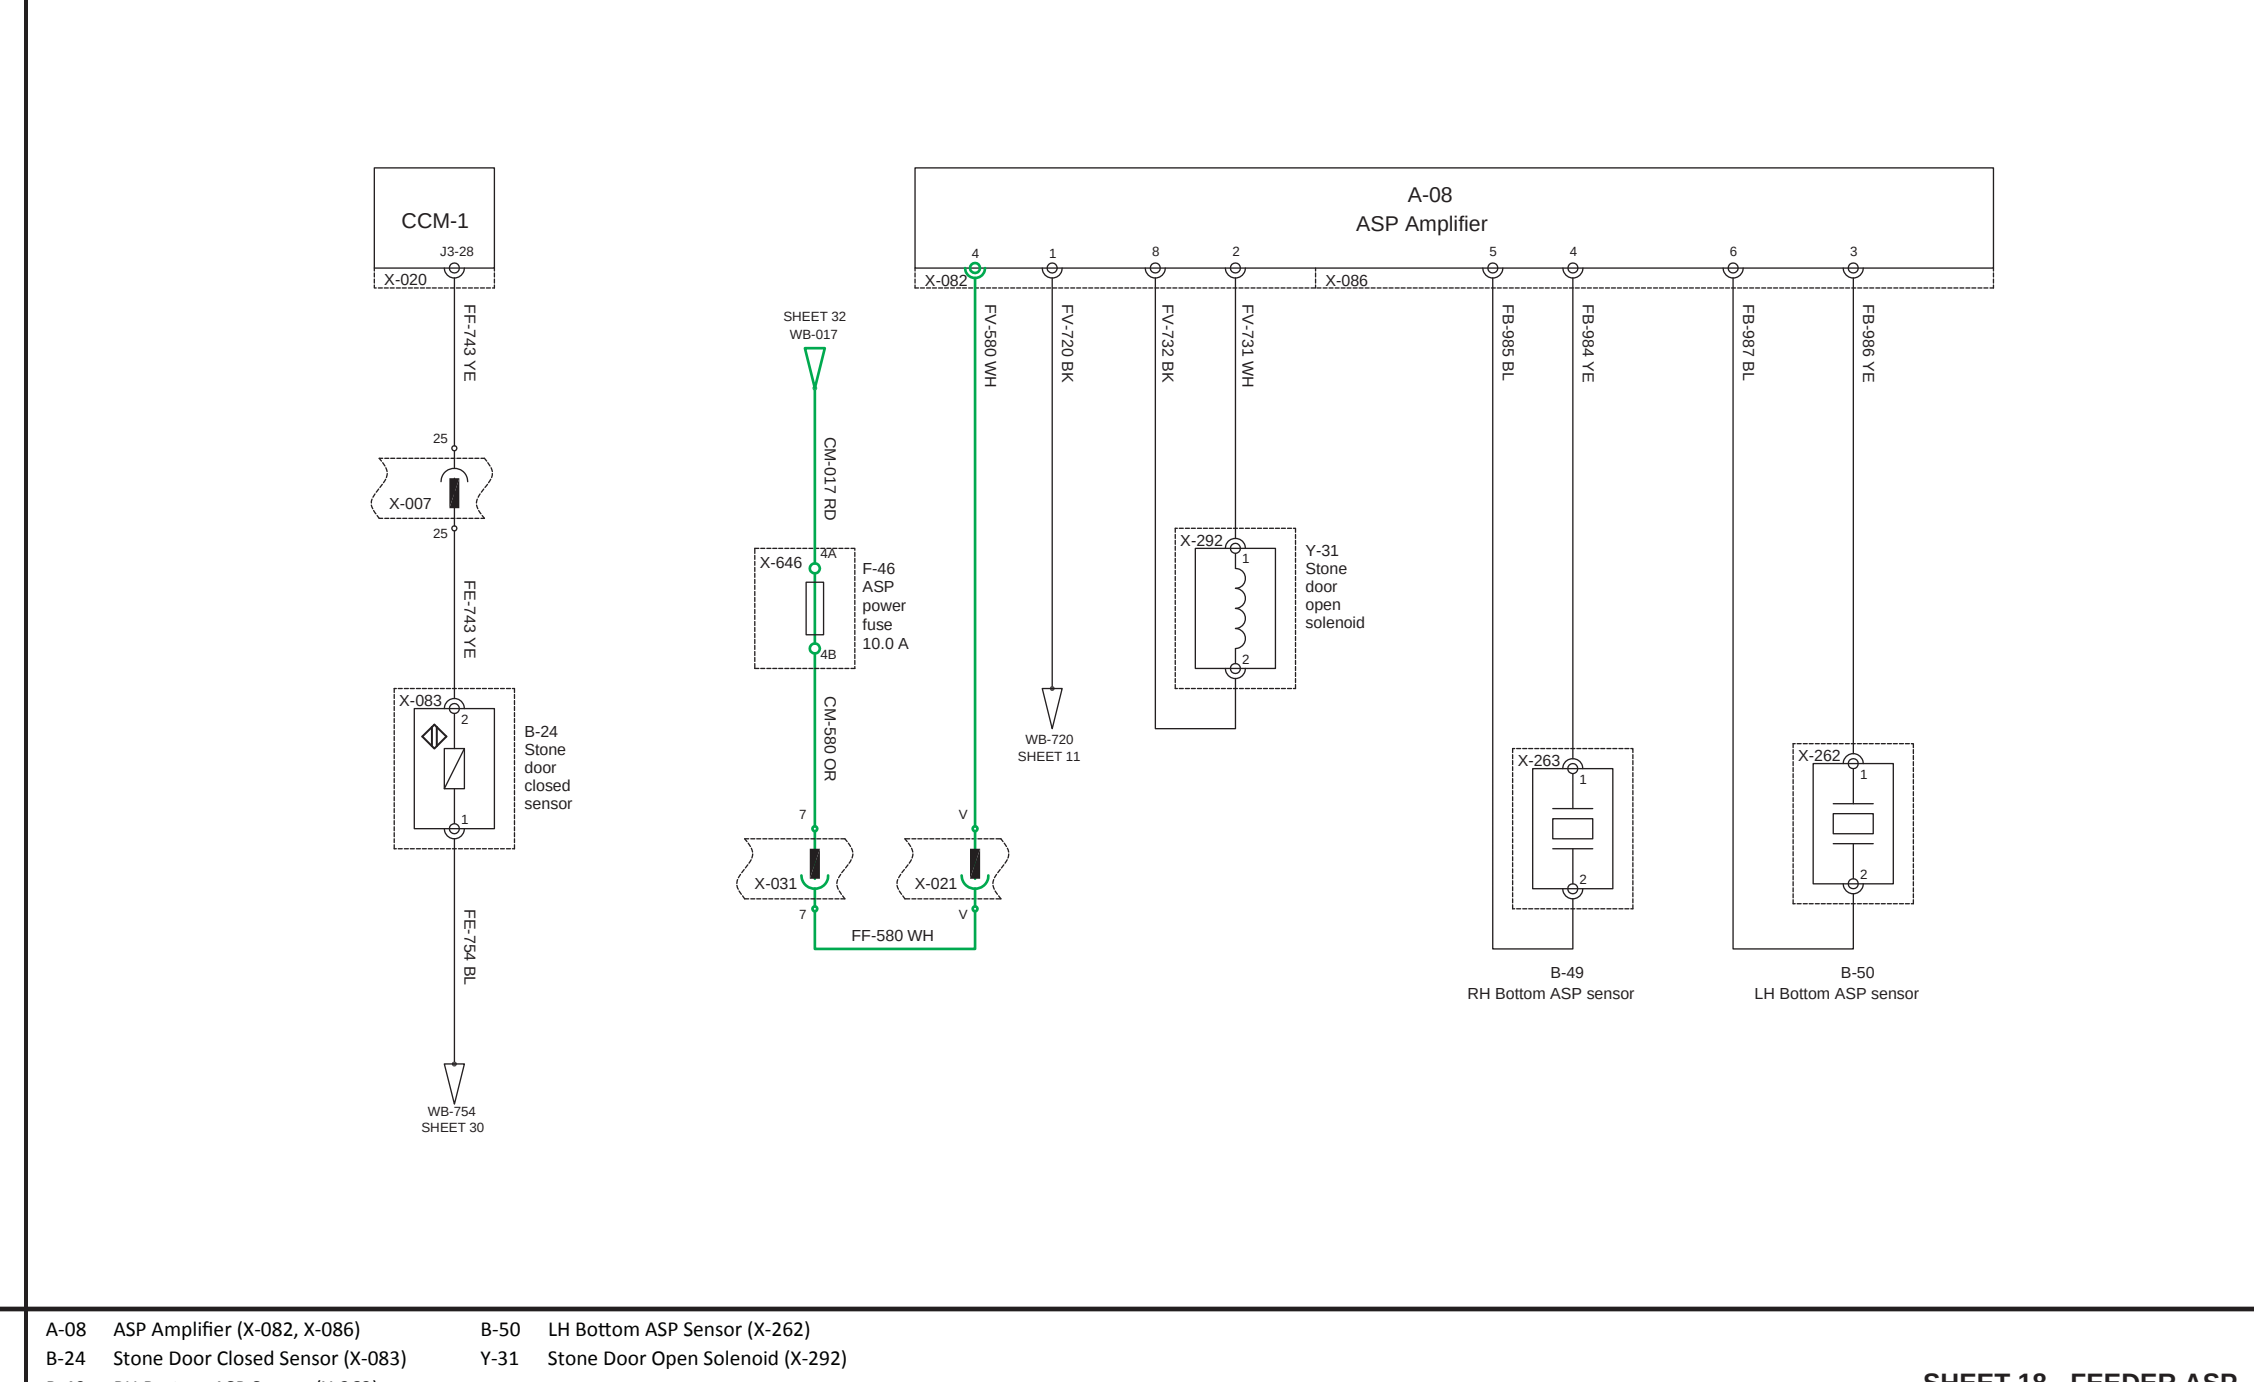




SHEET 18 - FEEDER ASP

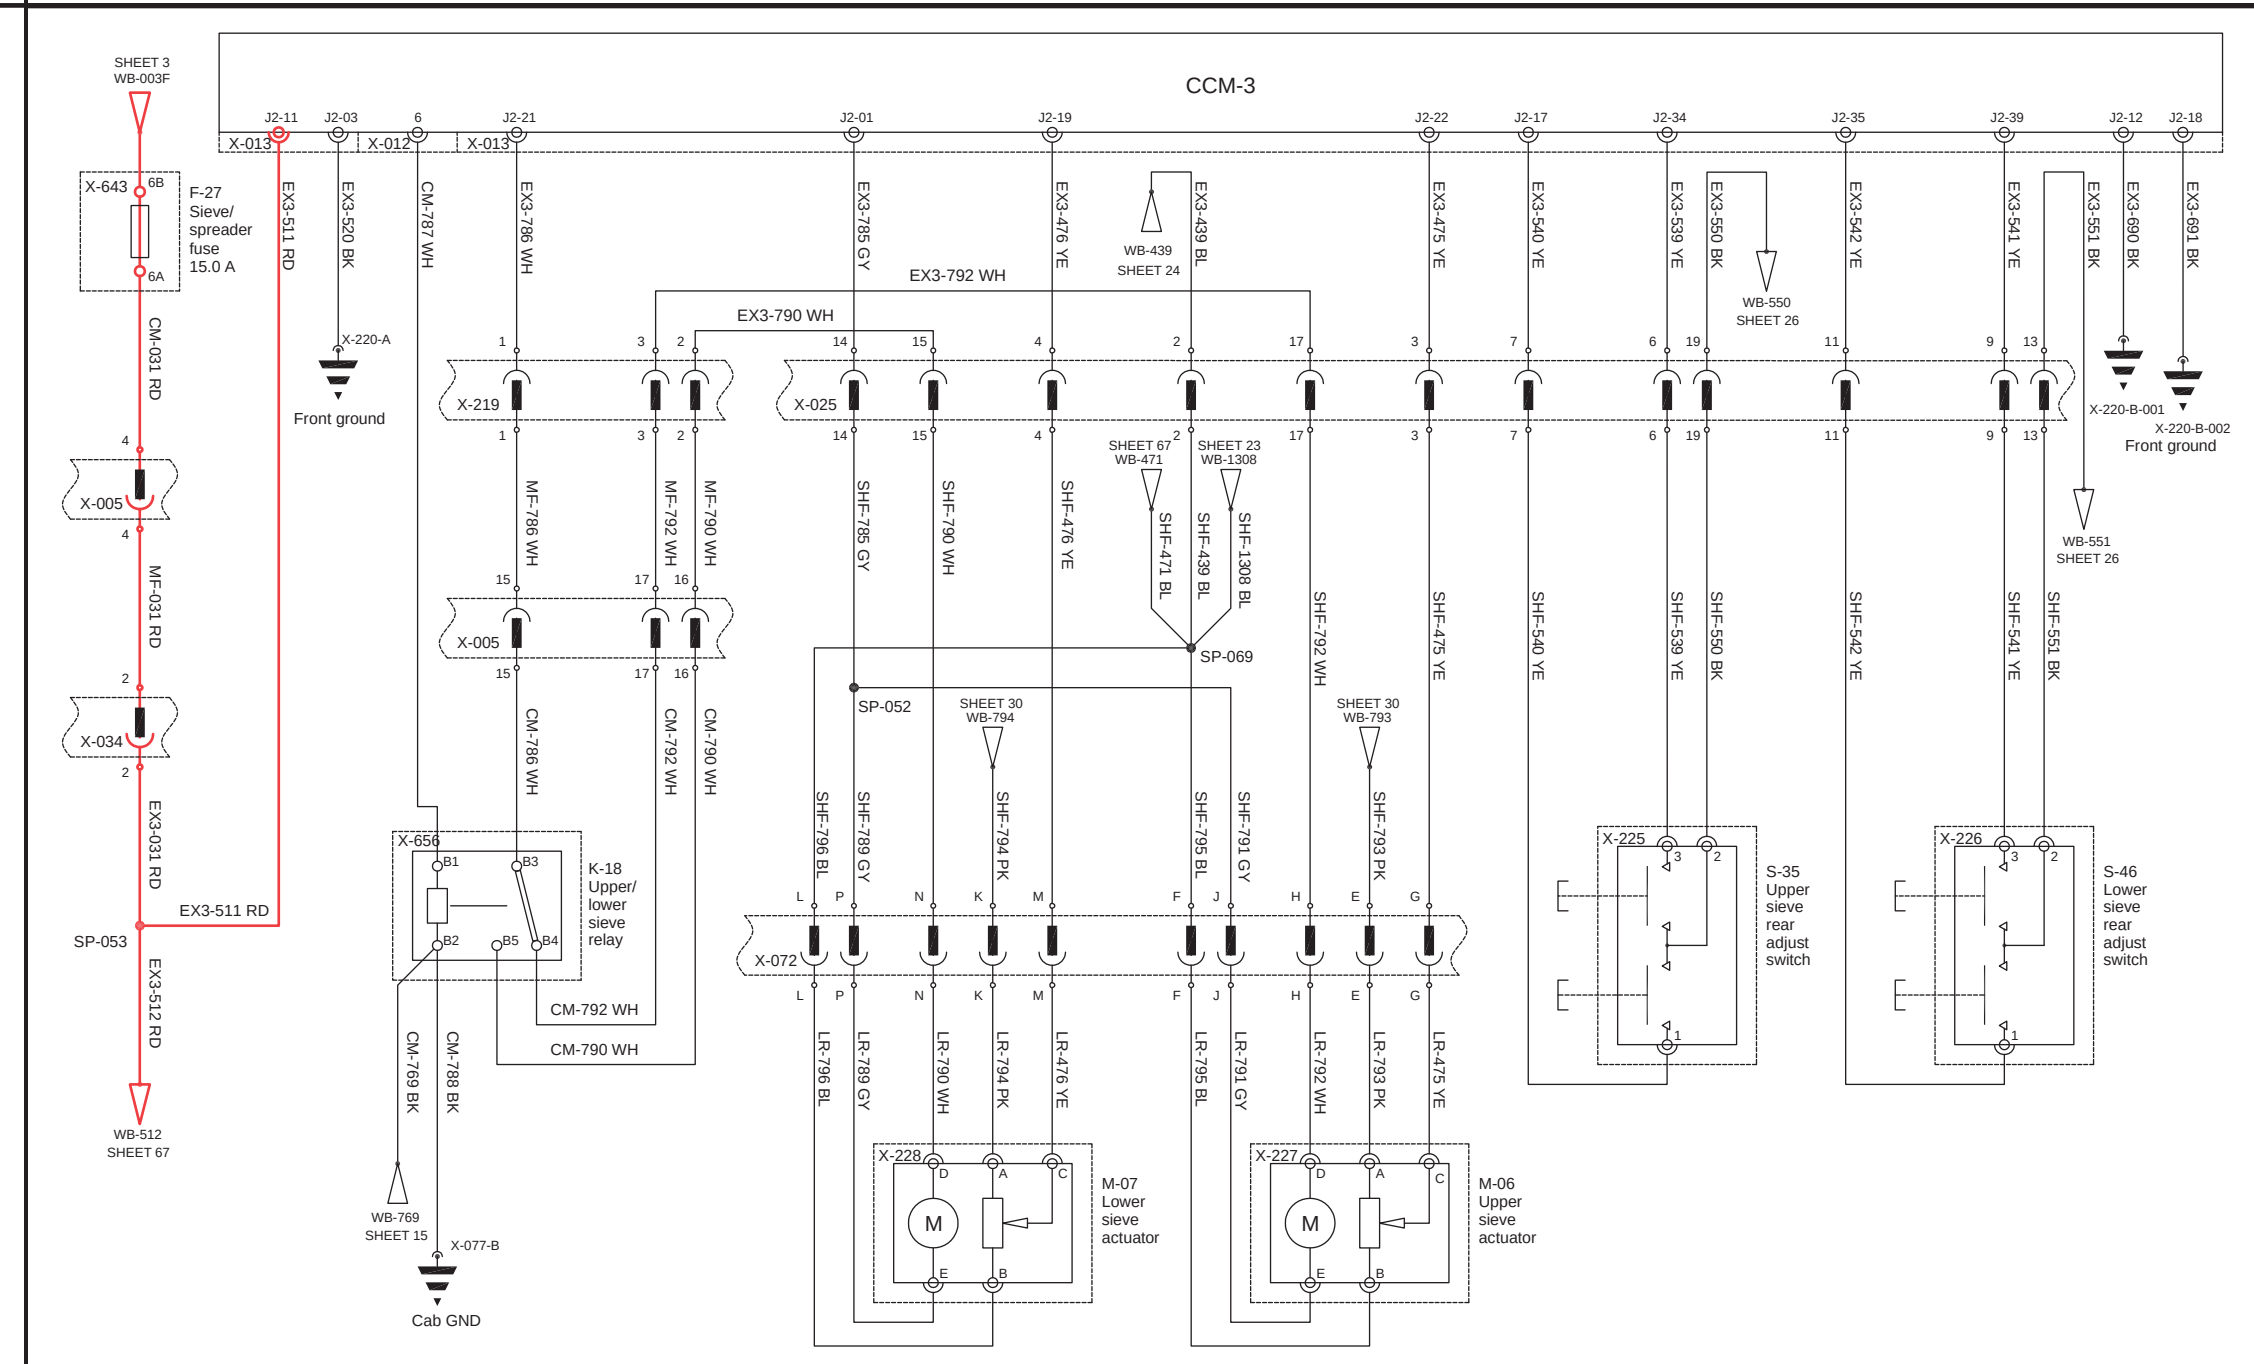

SHEET 21 - CLEANING (3)

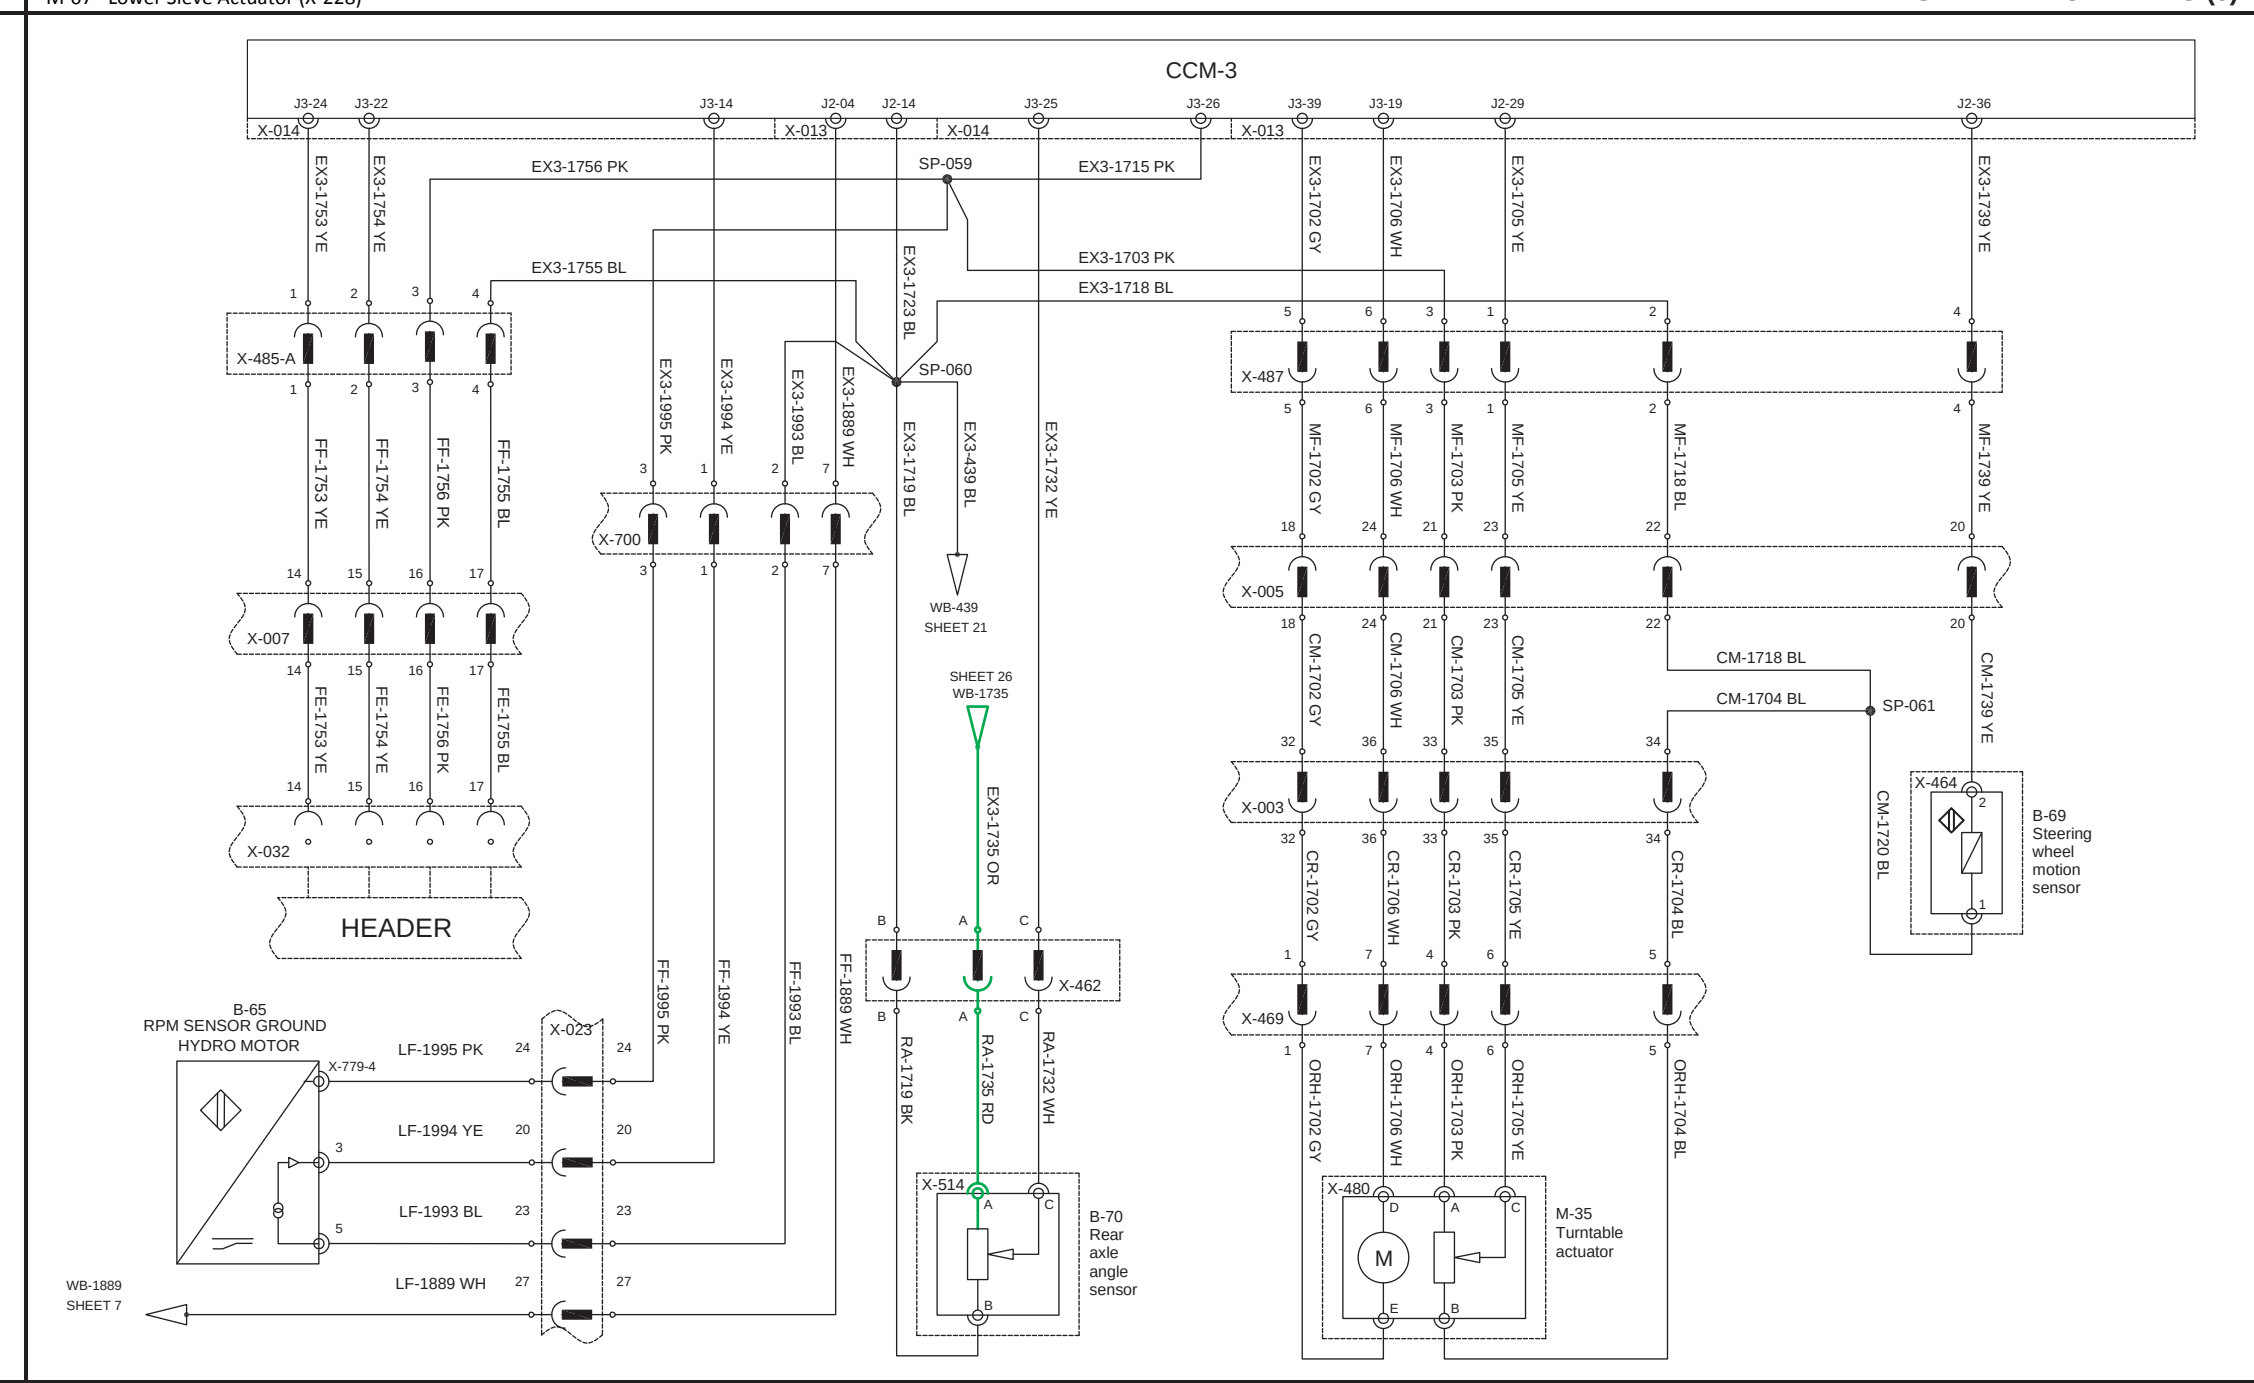

SHEET 24 - AUTO GUIDANCE (1)

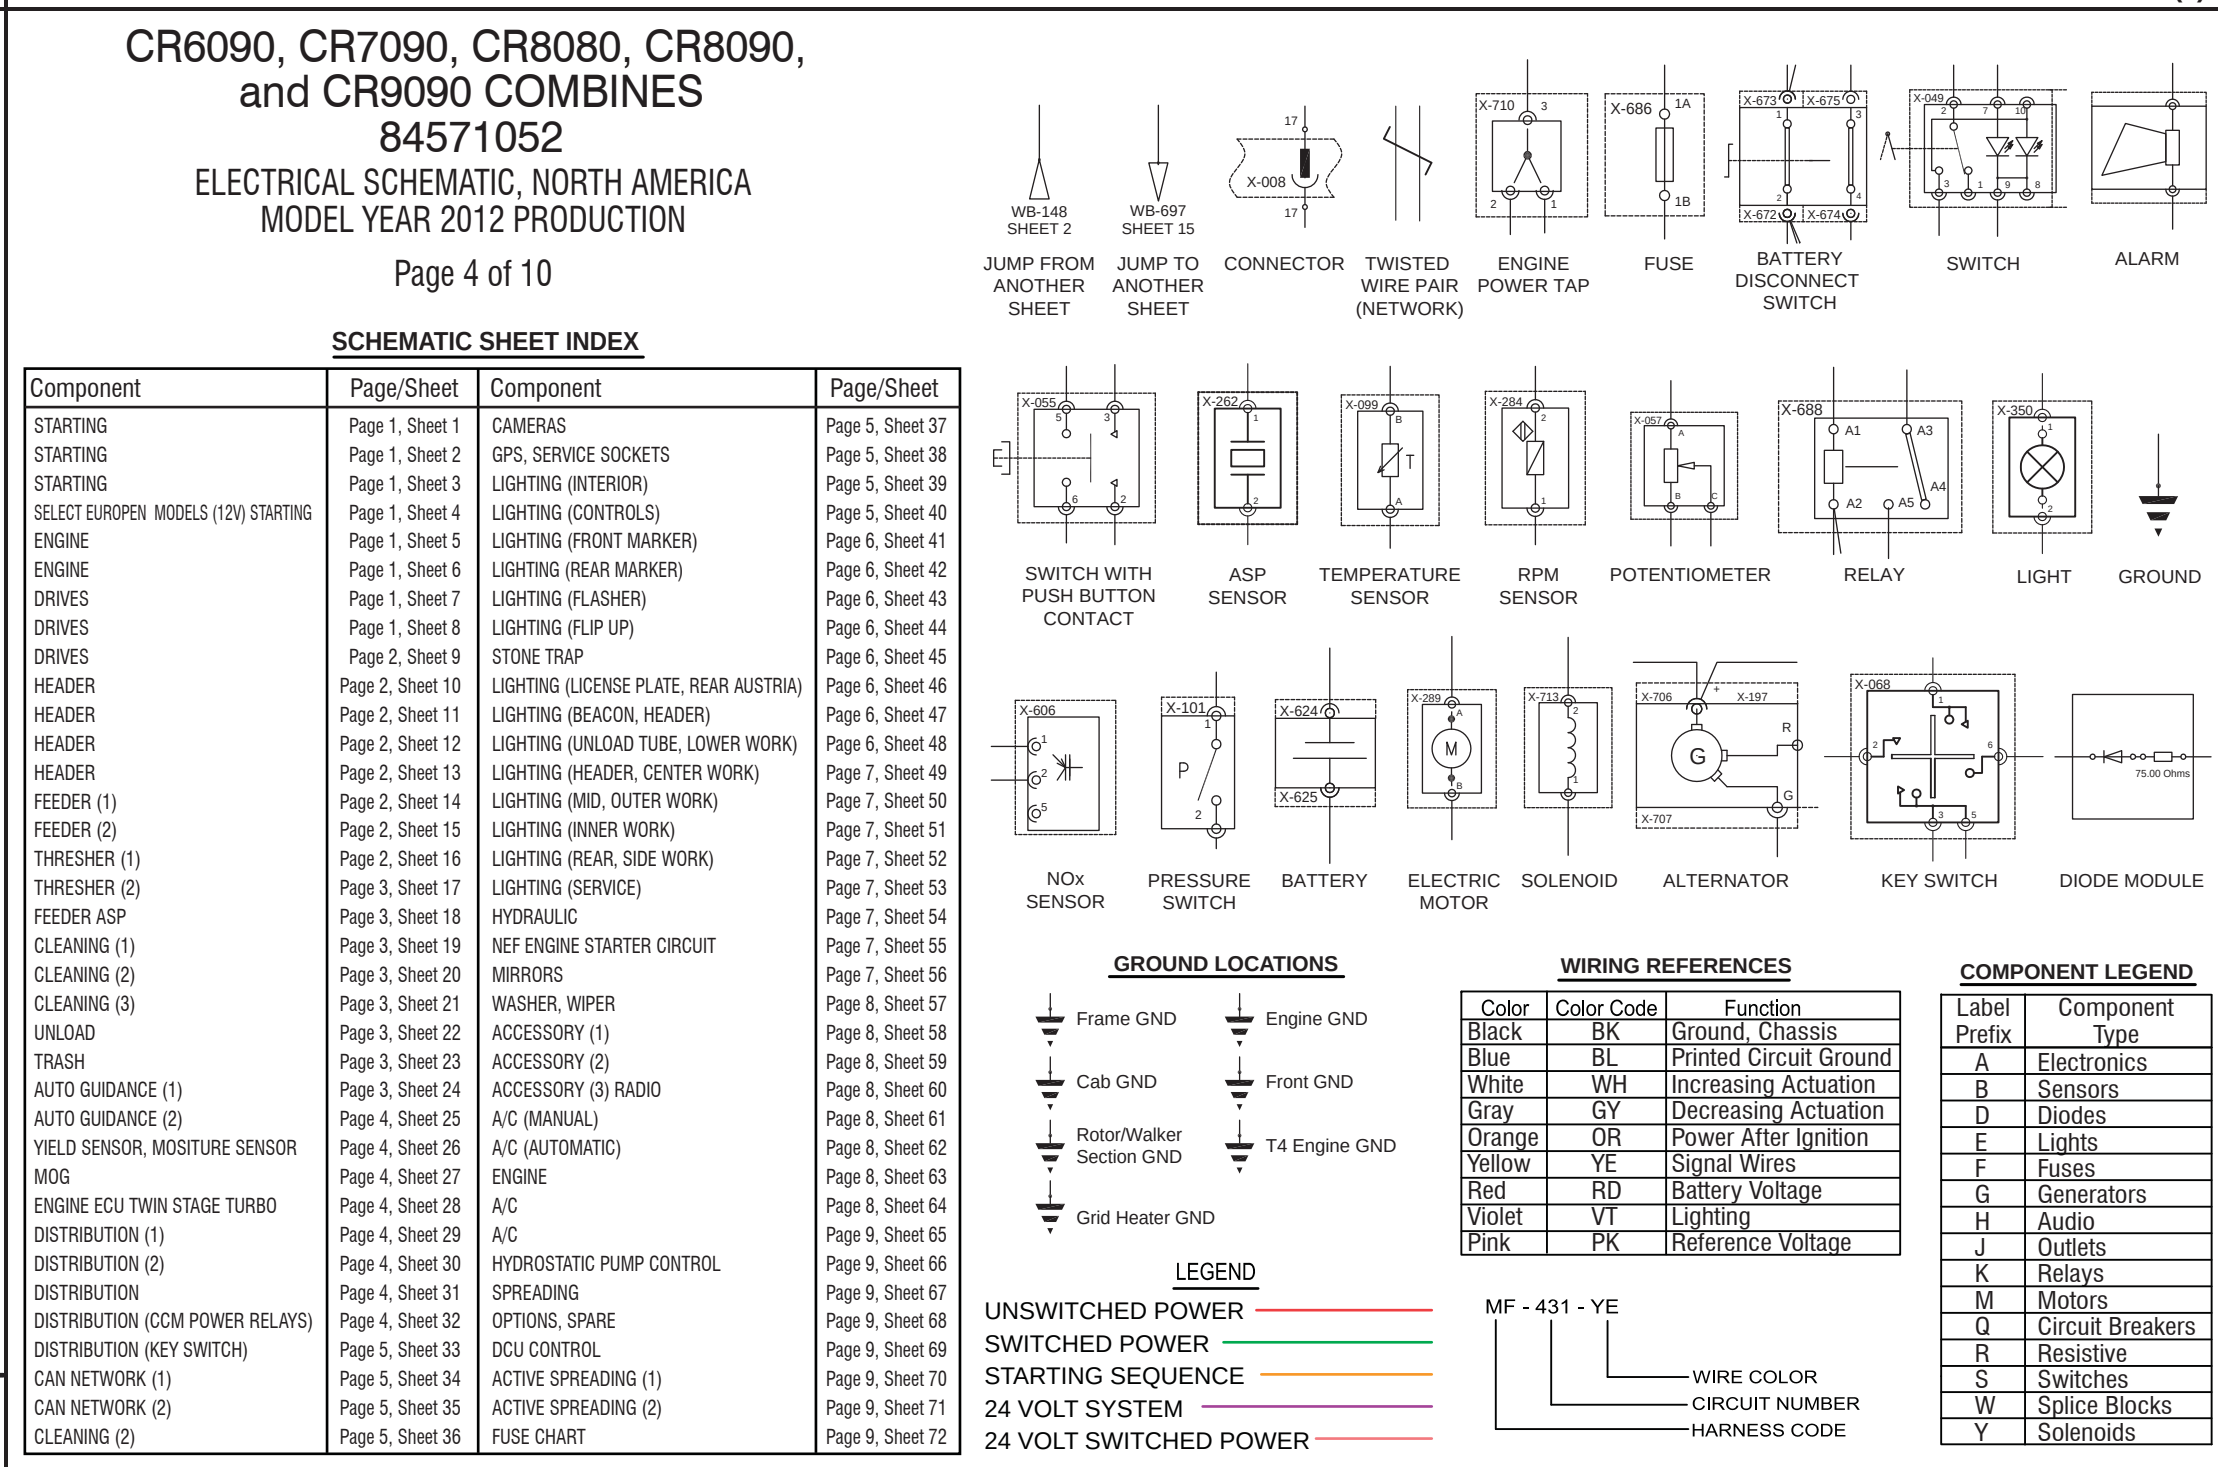  

84571052
ELECTRICAL SCHEMATIC, NORTH AMERICA
MODEL YEAR 2012 PRODUCTION

SCHEMATIC SHEET INDEX

Component	Page/Sheet	Component	Page/Sheet
STARTING	Page 1, Sheet 1	CAMERAS	Page 5, Sheet 37
STARTING	Page 1, Sheet 2	GPS, SERVICE SOCKETS	Page 5, Sheet 38
STARTING	Page 1, Sheet 3	LIGHTING (INTERIOR)	Page 5, Sheet 39
SELECT EUROPE MODELS (12V) STARTING ENGINE	Page 1, Sheet 4	LIGHTING (CONTROLS)	Page 5, Sheet 40
ENGINE	Page 1, Sheet 5	LIGHTING (FRONT MARKER)	Page 6, Sheet 41
ENGINE	Page 1, Sheet 6	LIGHTING (REAR MARKER)	Page 6, Sheet 42
DRIVES	Page 1, Sheet 7	LIGHTING (FLASHERS)	Page 6, Sheet 43
DRIVES	Page 1, Sheet 8	LIGHTING (FLIP UP)	Page 6, Sheet 44
DRIVES	Page 2, Sheet 9	STONE TRAP	Page 6, Sheet 45
HEADER	Page 2, Sheet 10	LIGHTING (LICENSE PLATE, REAR AUSTRIA)	Page 6, Sheet 46
HEADER	Page 2, Sheet 11	LIGHTING (BEACON, HEADER)	Page 6, Sheet 47
HEADER	Page 2, Sheet 12	LIGHTING (UNLOAD TRUCK, LOWER WORK)	Page 6, Sheet 48
HEADER	Page 2, Sheet 13	LIGHTING (HEADLIGHT, CENTER WORK)	Page 7, Sheet 49
FEEDER (1)	Page 2, Sheet 14	LIGHTING (MID, OUTER WORK)	Page 7, Sheet 50
FEEDER (2)	Page 2, Sheet 15	LIGHTING (INNER WORK)	Page 7, Sheet 51
THRESHER (1)	Page 2, Sheet 16	LIGHTING (REAR, SIDE WORK)	Page 7, Sheet 52
THRESHER (2)	Page 3, Sheet 17	LIGHTING (SERVICE)	Page 7, Sheet 53
FEEDER/ASP	Page 3, Sheet 18	HYDRAULIC	Page 7, Sheet 54
CLEANING (1)	Page 3, Sheet 19	NEW ENGINE STARTER CIRCUIT	Page 7, Sheet 55
CLEANING (2)	Page 3, Sheet 20	MIRRORS	Page 7, Sheet 56
CLEANING (3)	Page 3, Sheet 21	WASHER, WIPER	Page 8, Sheet 57
UNLOAD	Page 3, Sheet 22	ACCESSORY (1)	Page 8, Sheet 58
UNLOAD	Page 3, Sheet 23	ACCESSORY (2)	Page 8, Sheet 59
AUTO GUIDANCE (1)	Page 3, Sheet 24	ACCESSORY (3) RADIO	Page 8, Sheet 60
AUTO GUIDANCE (2)	Page 4, Sheet 25	A/C (MANUAL)	Page 8, Sheet 61
YIELD SENSOR, MISTURE SENSOR	Page 4, Sheet 26	A/C (AUTOMATIC)	Page 8, Sheet 62
MOG	Page 4, Sheet 27	ENGINE	Page 8, Sheet 63
ENGINE ECO TWIN STAGE TURBO	Page 4, Sheet 28	A/C	Page 8, Sheet 64
DISTRIBUTION (1)	Page 4, Sheet 29	A/C	Page 8, Sheet 65
DISTRIBUTION (2)	Page 4, Sheet 30	HYDROSTATIC PUMP CONTROL	Page 9, Sheet 66
DISTRIBUTION	Page 4, Sheet 31	SPREADING	Page 9, Sheet 67
DISTRIBUTION (CCM POWER RELAYS)	Page 4, Sheet 32	OPTIONS, SPARE	Page 9, Sheet 68
DISTRIBUTION (HYD SWITCH)	Page 4, Sheet 33	DCU CONTROL	Page 9, Sheet 69
CAN NETWORK (1)	Page 5, Sheet 34	ACTIVE SPREADING (1)	Page 9, Sheet 70
CAN NETWORK (2)	Page 5, Sheet 35	ACTIVE SPREADING (2)	Page 9, Sheet 71
CLEANING (2)	Page 5, Sheet 36	FUSE CHART	Page 9, Sheet 72

GROUND LOCATIONS

WIRING REFERENCES

Color	Color Code	Function
Black	BK	Ground, Chassis
Blue	BL	Printed Circuit Board
White	WH	Increasing Actuation
Gray	GY	Decreasing Actuation
Orange	OR	Power After Ignition
Yellow	YE	Wiring Wires
Red	RD	Battery Voltage
Violet	VI	Lighting
Pink	PK	Reference Voltage

LEGEND

UNSWITCHED POWER _____

SWITCHED POWER _____

STARTING SEQUENCE _____

24 VOLT SYSTEM _____

24 VOLT SWITCHED POWER _____

MF - 431 - YE


_____ WIRE COLOR

_____ CIRCUIT NUMBER

_____ HARNESS CODE


COMPONENT LEGEND

Label Prefix	Component Type
A	Electronics
B	Sensors
D	Diodes
F	Lights
F	Fuses
G	Generators
H	Audio
J	Outlets
K	Relays
M	Motors
Q	Circuit Breakers
R	Resistive
S	Switches
W	Splice Blocks
Y	Solenoids

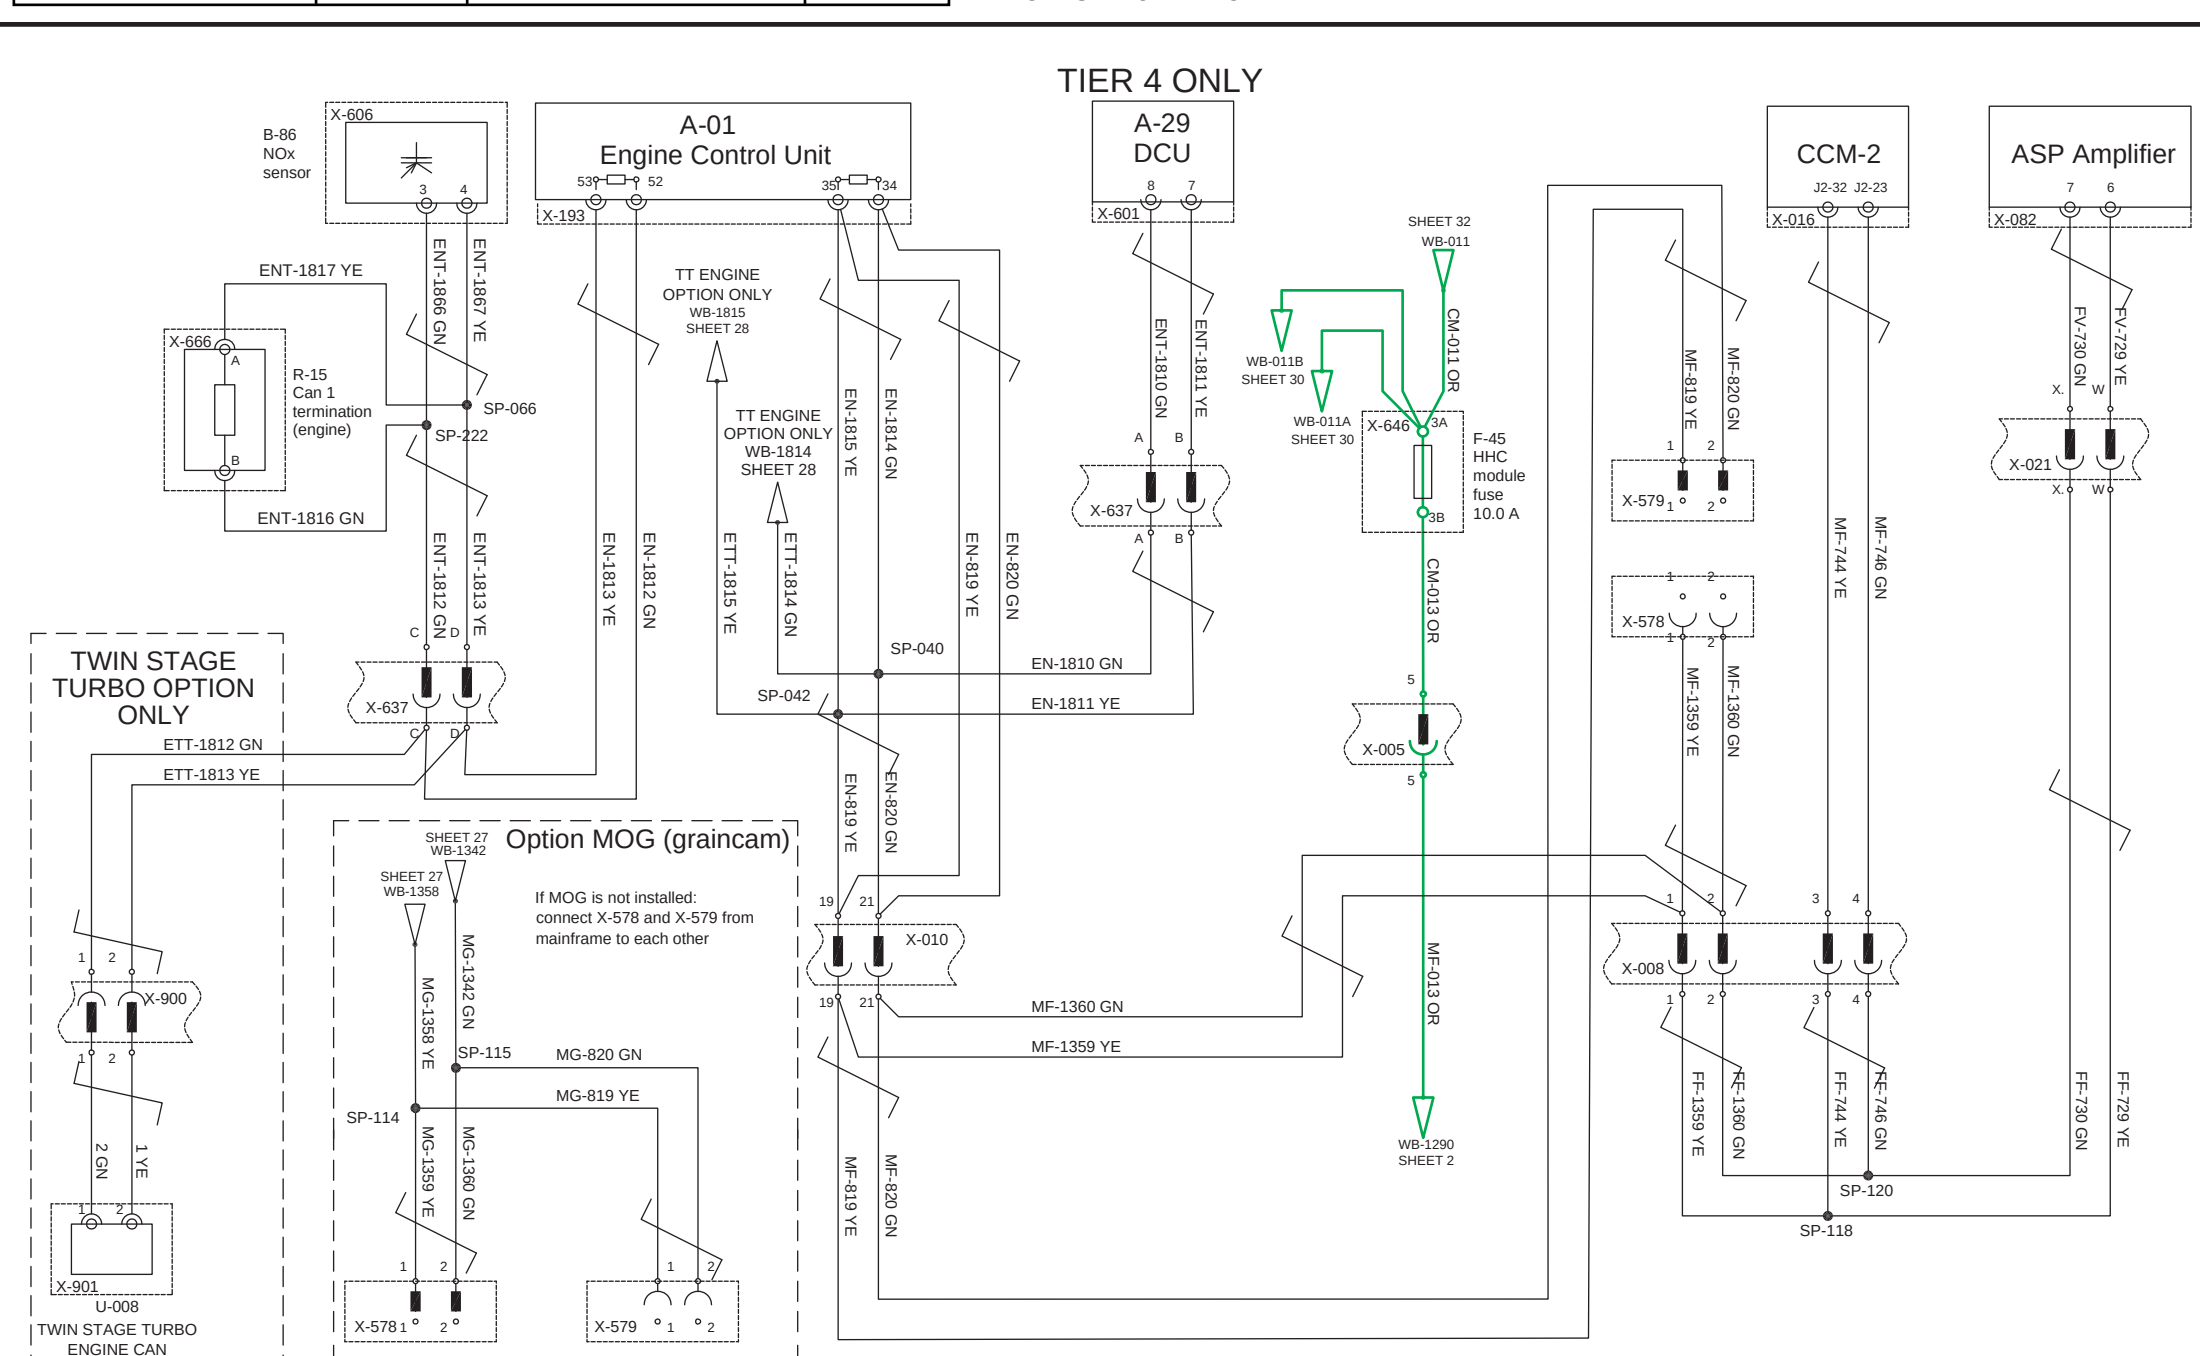


A-01 Engine Control Unit (X-193)
A-08 ASP Amplifier (X-082, X-086)
R-15 Can 1 Termination (Engine) (X-666)

SHEET 35 - CAN NETWORK (2)

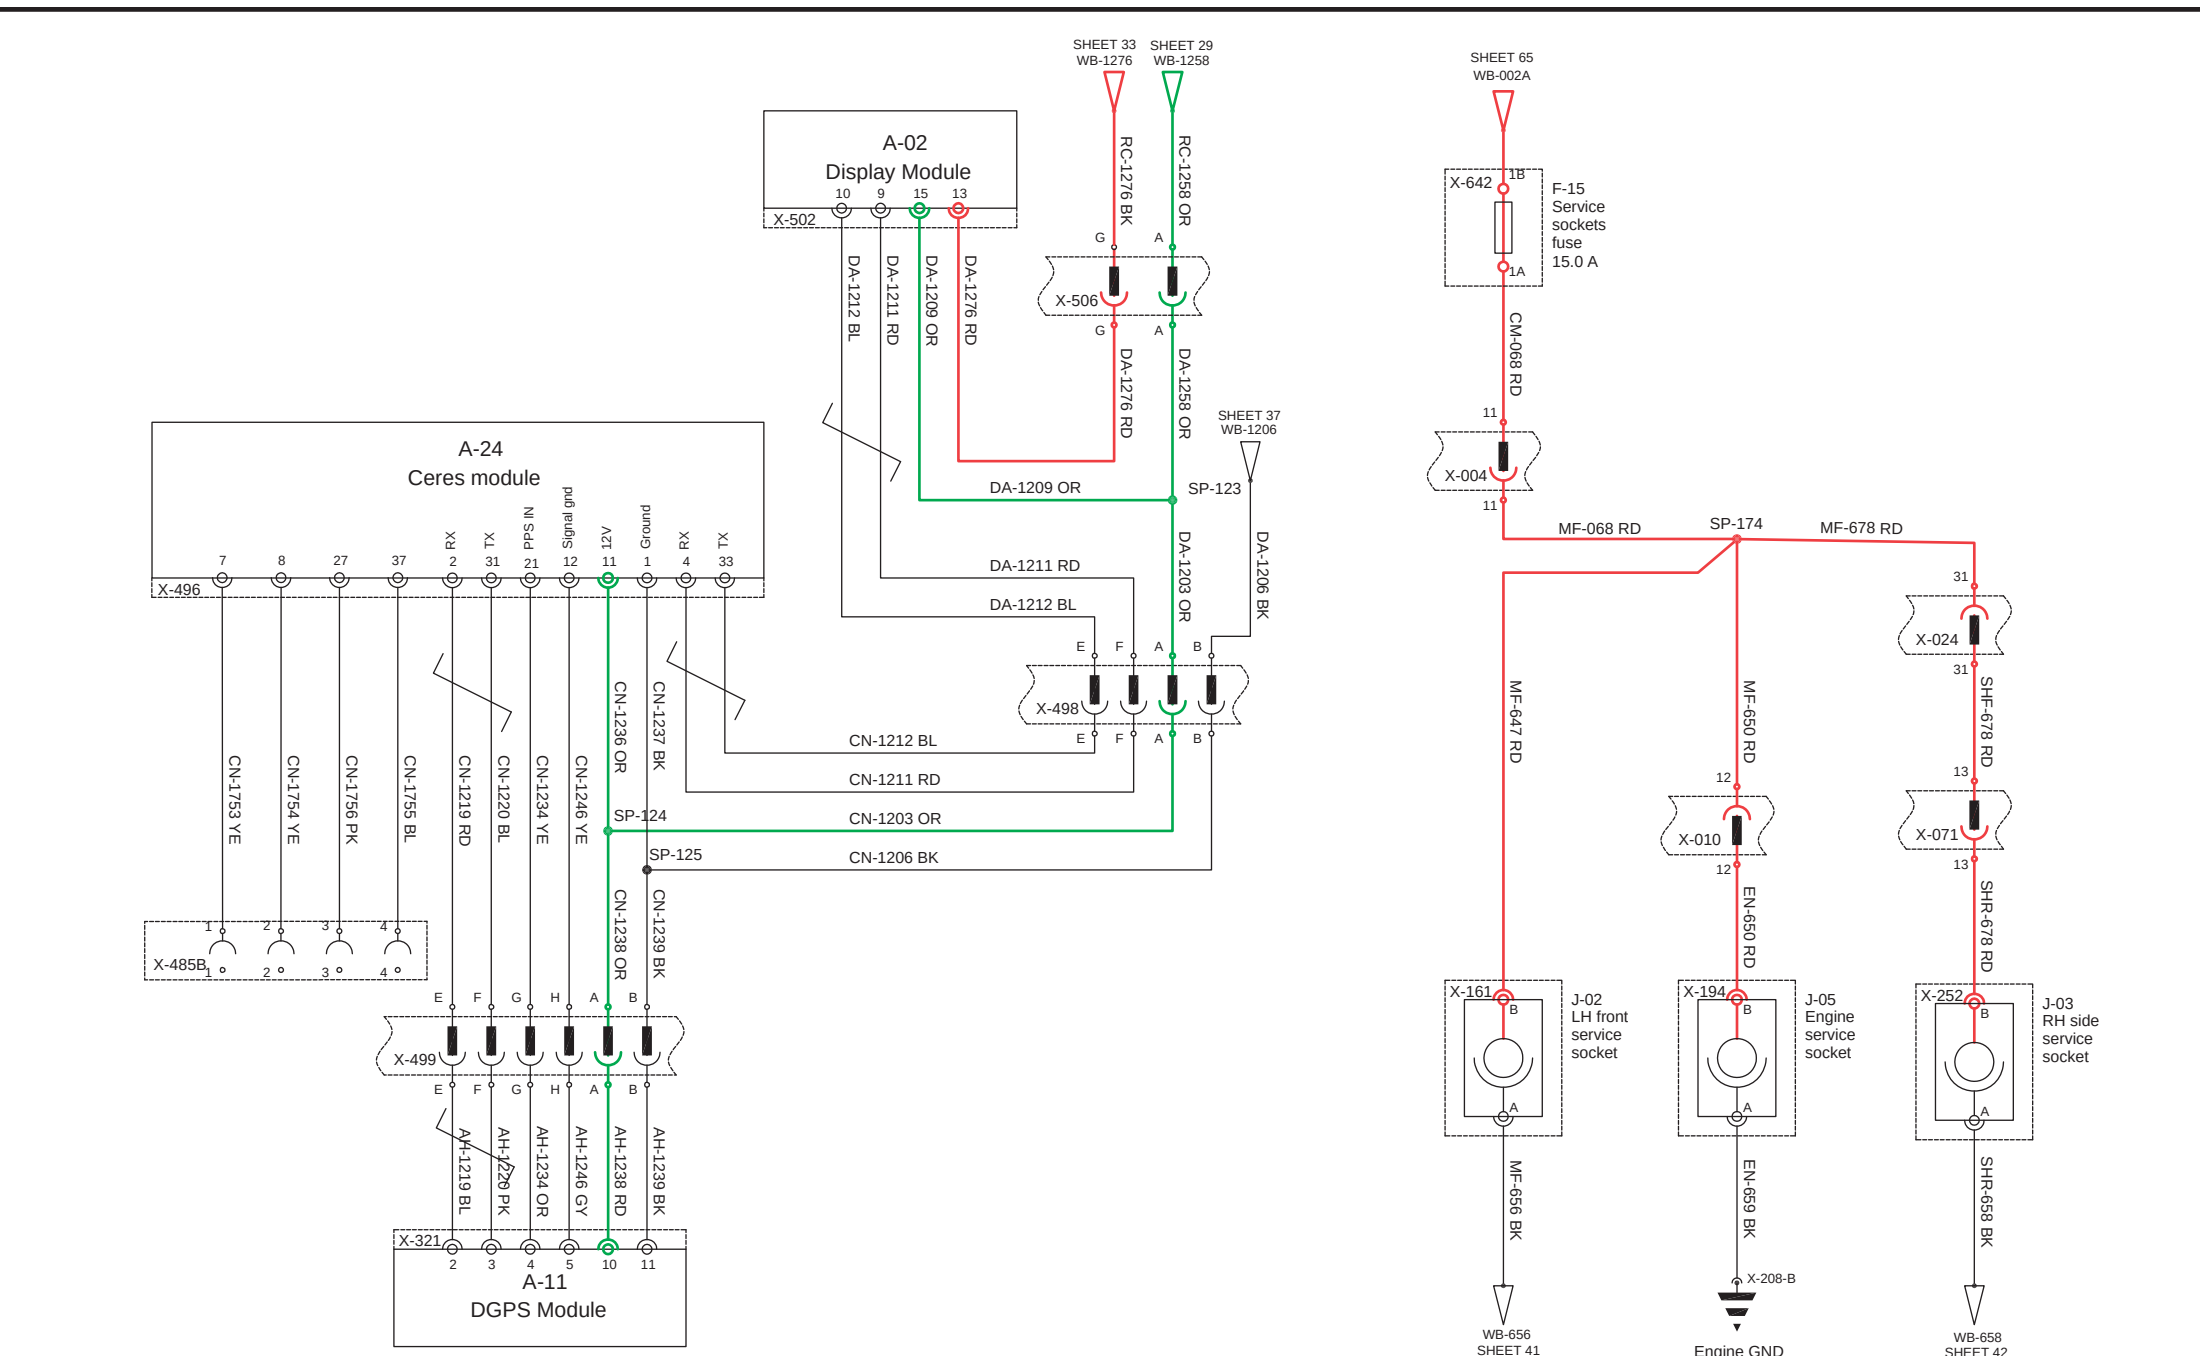


A-02	Display Module (X-502)	J-02	LH Front Service Socket (X-161)
A-11	DGPS Module (X-321)	J-03	RH Side Service Socket (X-252)
A-74	Cores Module (X-496)	L-05	Engine Service Socket (X-194)

SHEET 38 - GPS SERVICE SOCKETS

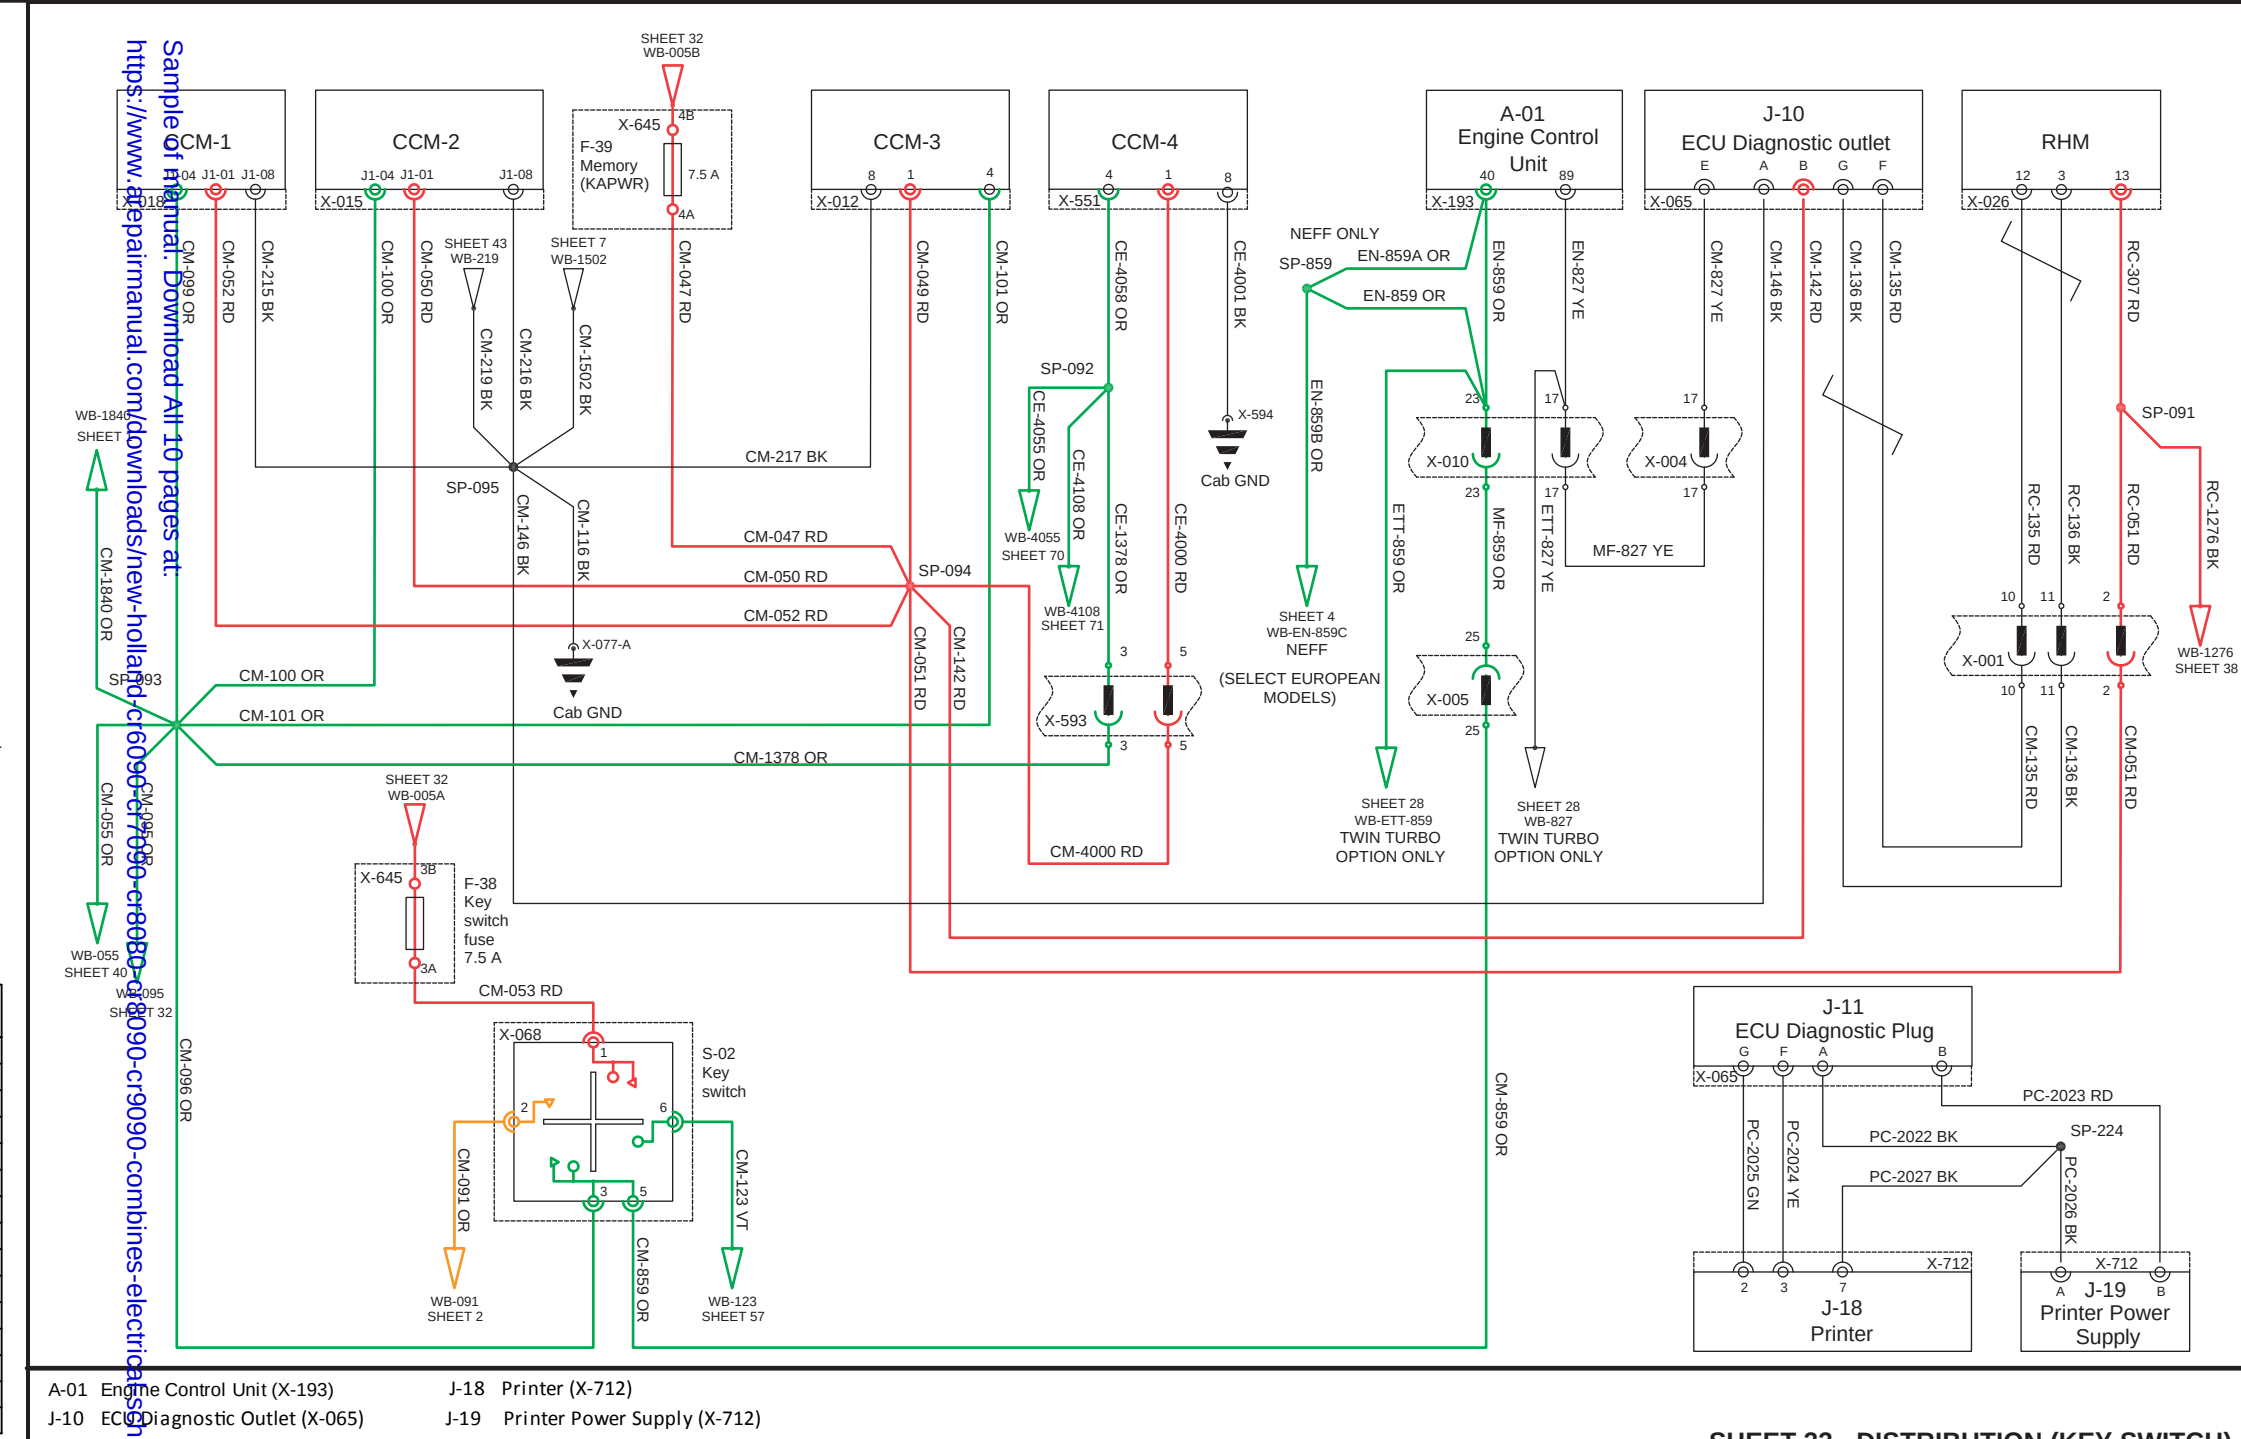


J-10 ECU Diagnostic Outlet (X-065) J-19 Printer Power Supply (X-712)
J-11 ECU Diagnostic Plug (X-065) S-02 Key Switch (X-068)

SHEET 33 - DISTRIBUTION (KEY SWITCH)

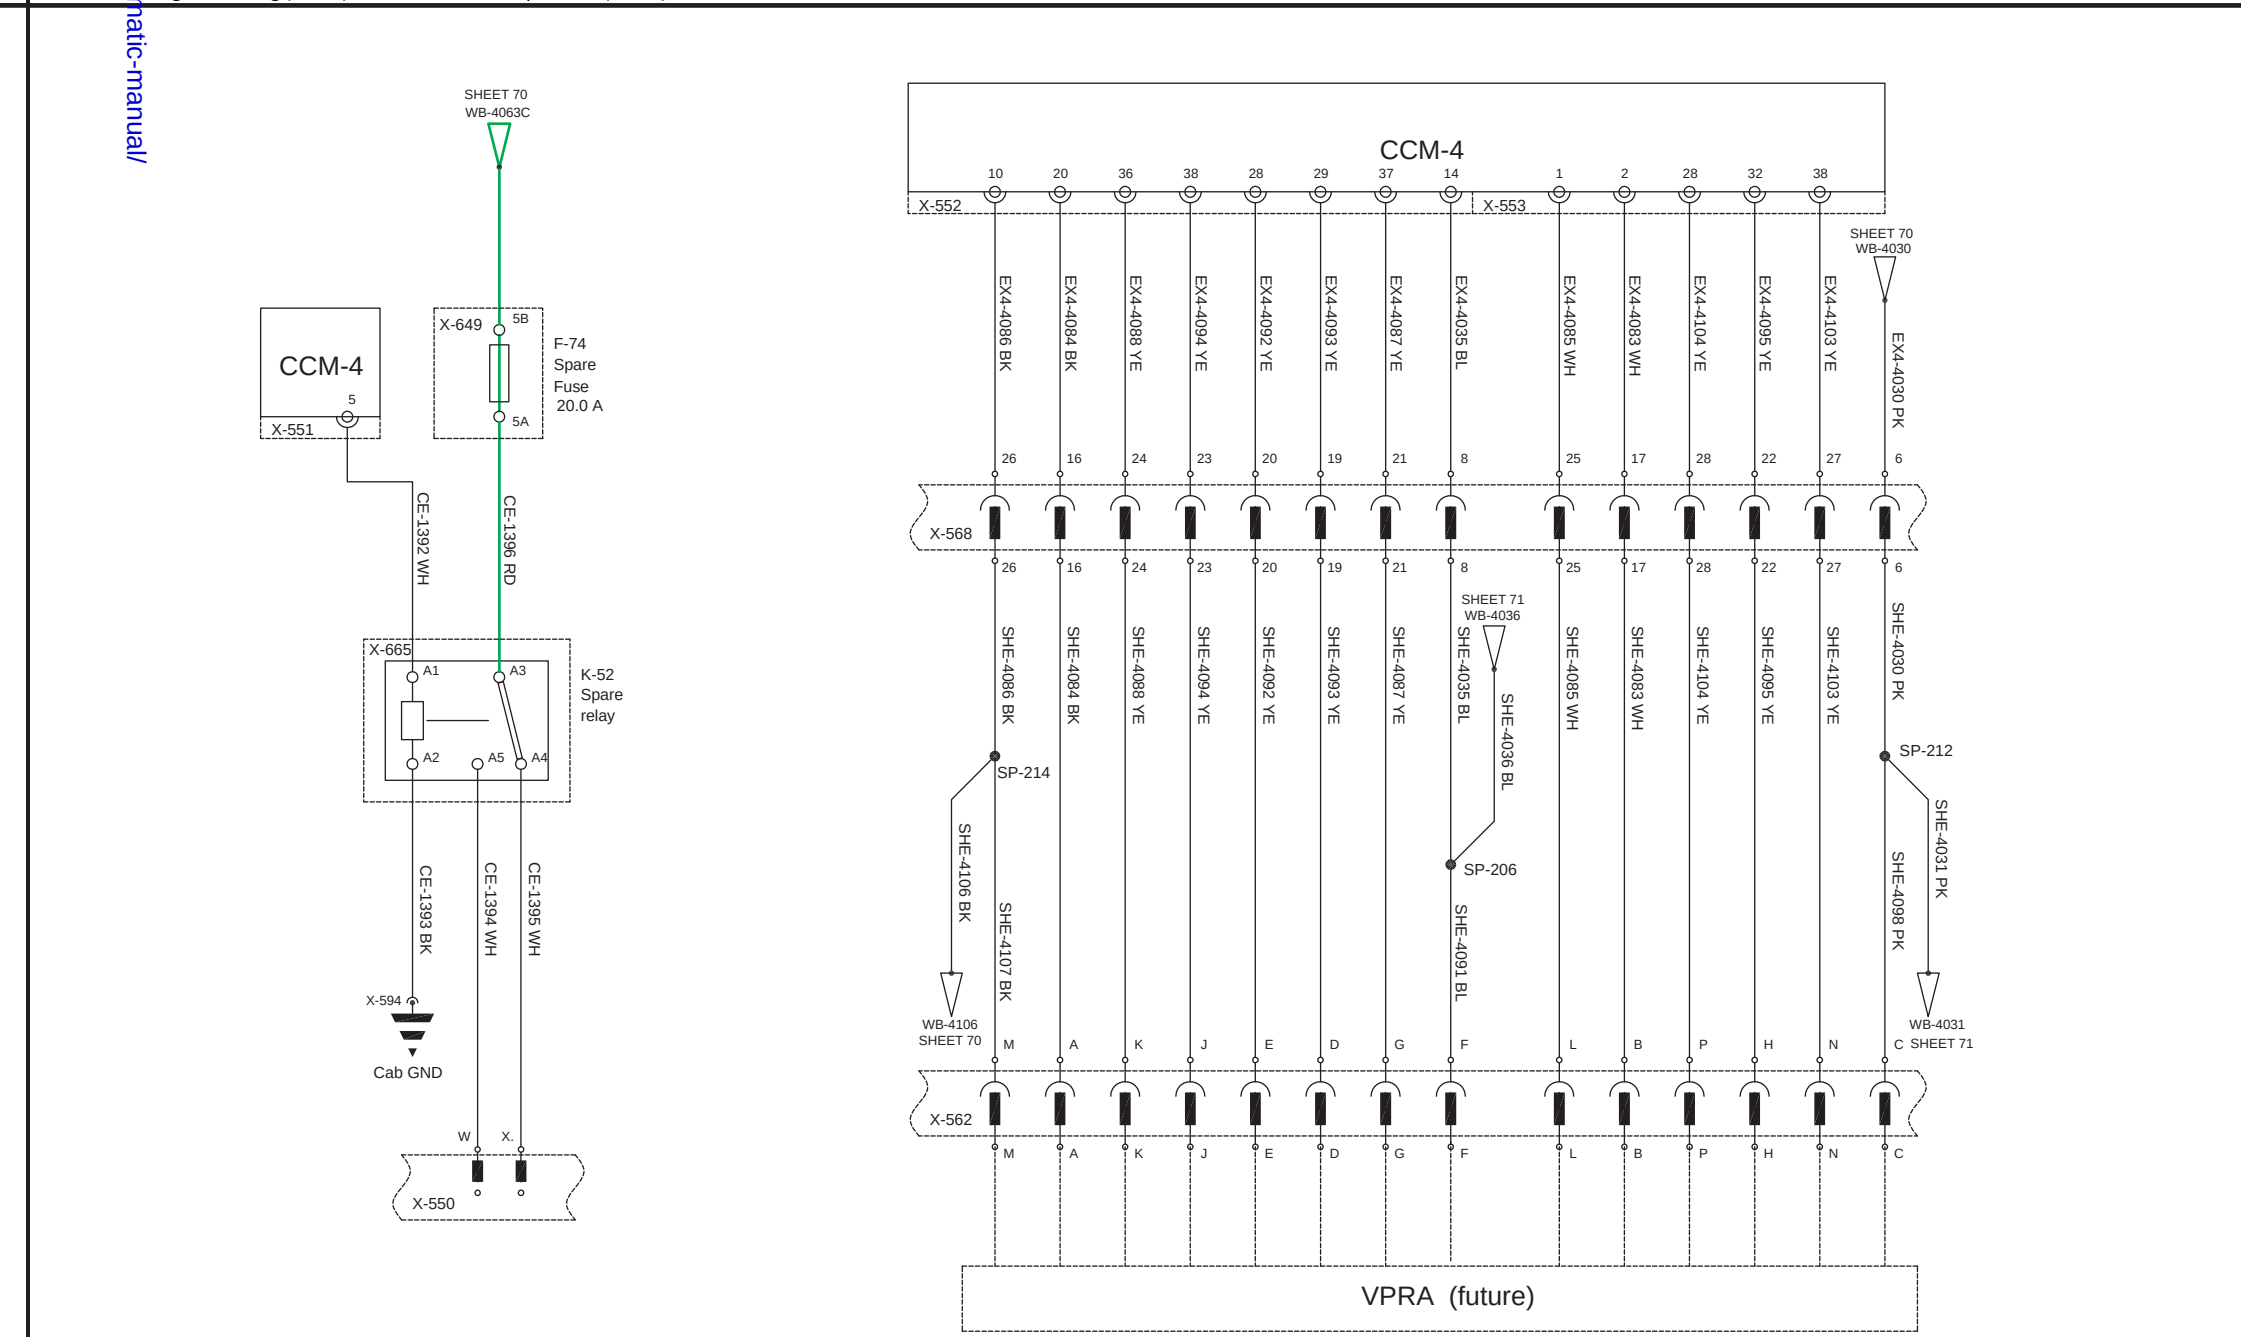


K-52 Spare Relay (X-665) SHEET 36 - CLEANING (2)

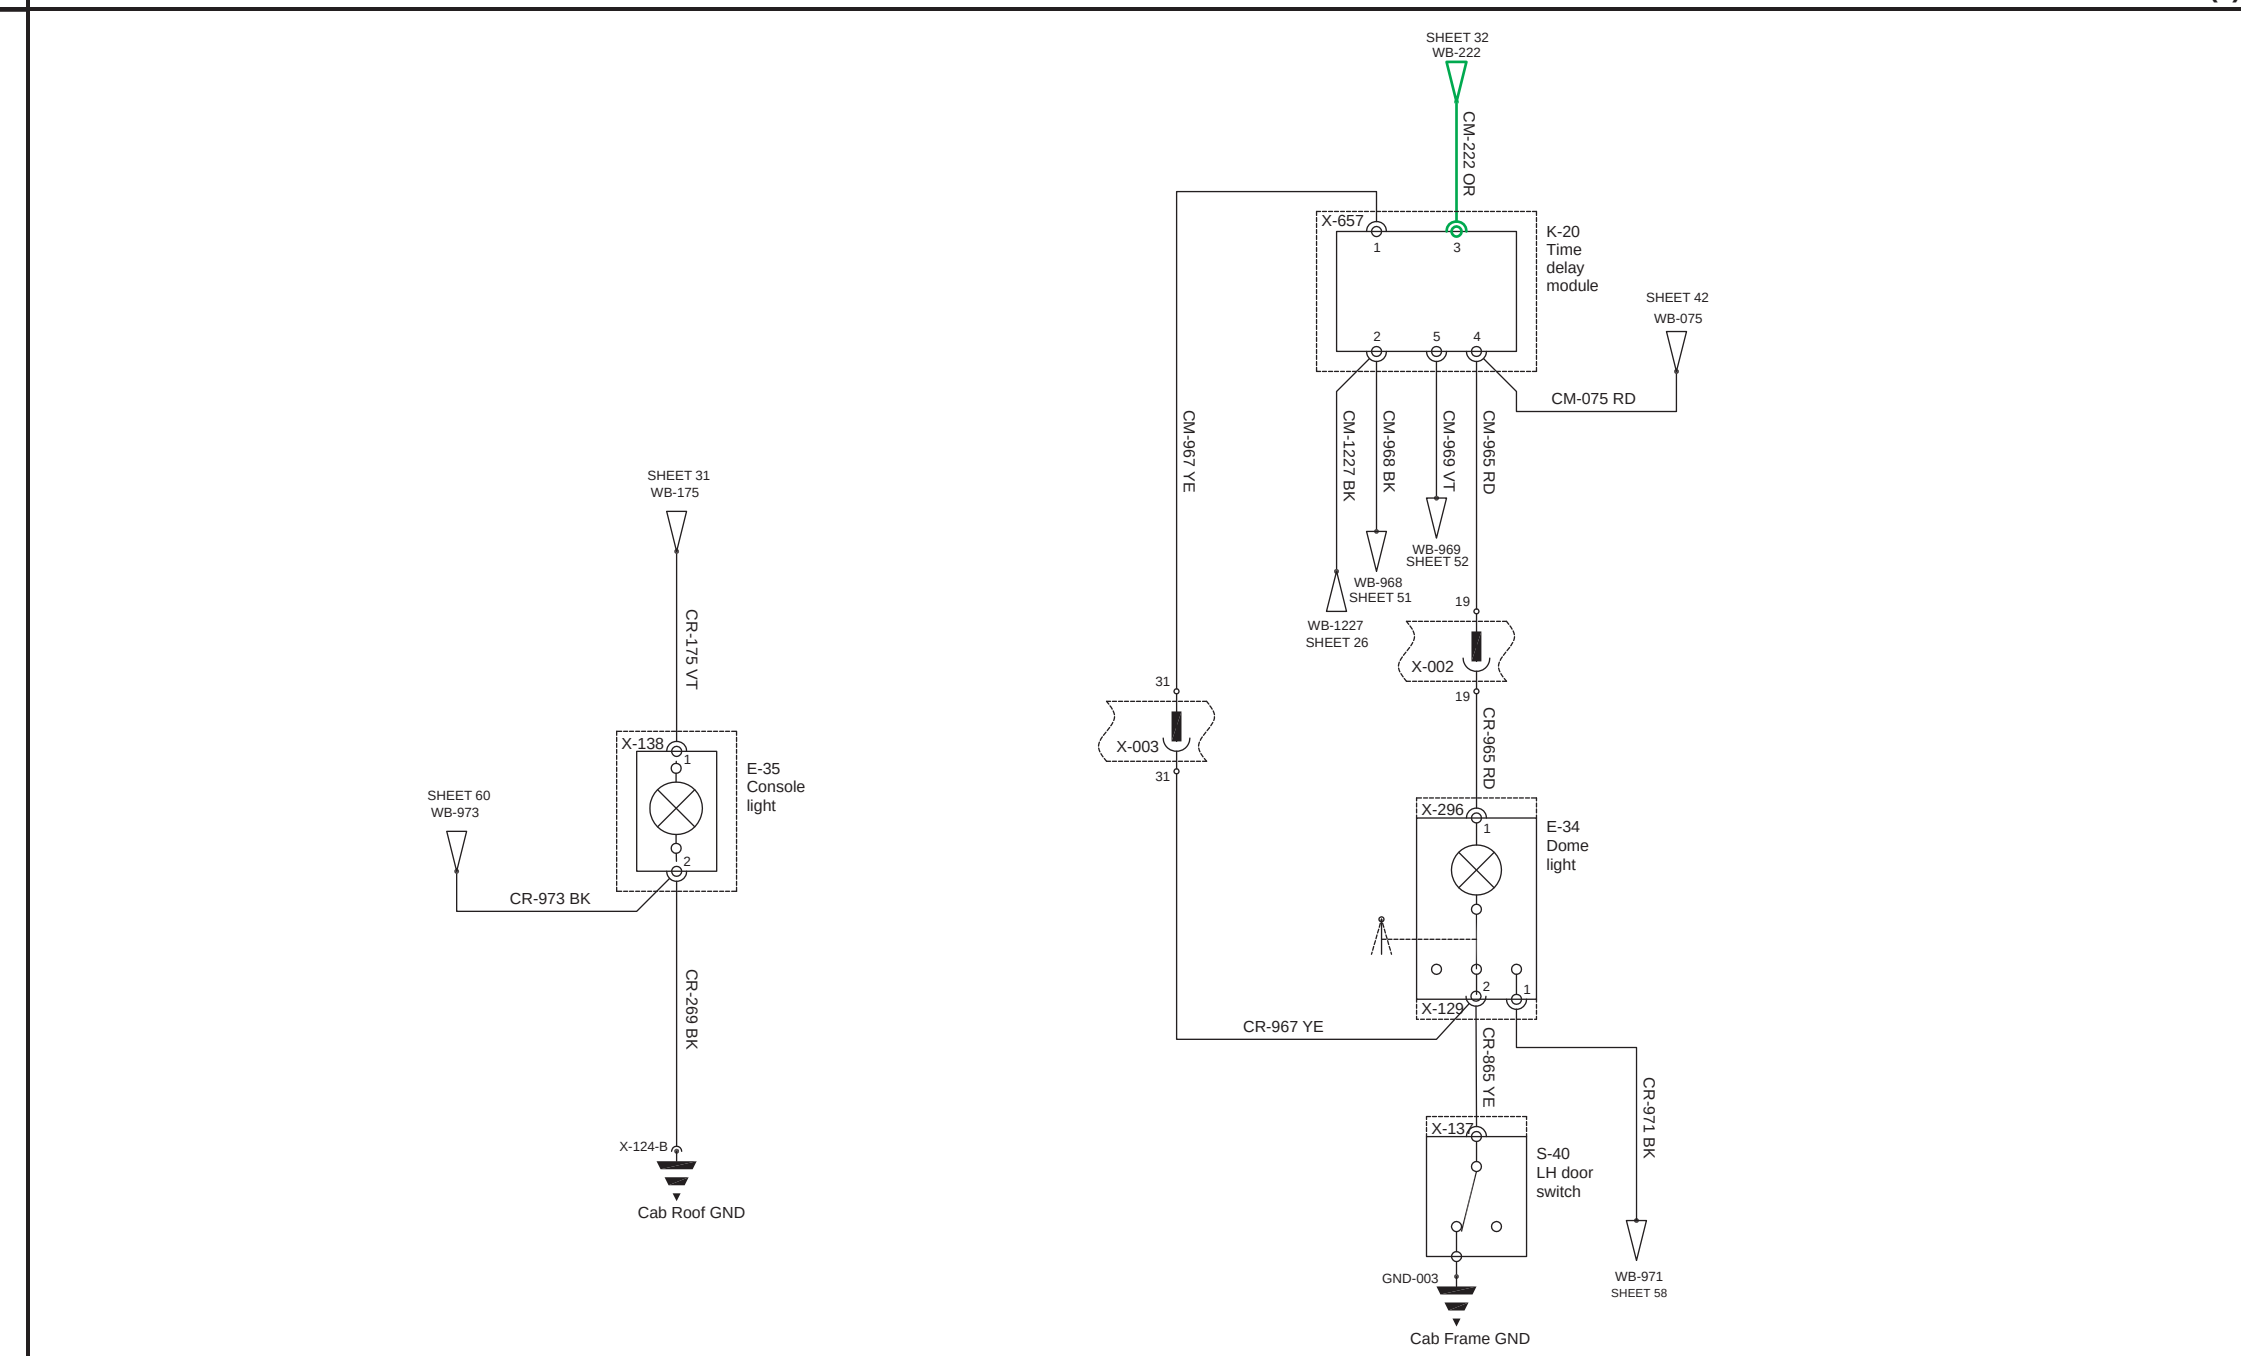


E-34	Dome Light (X-296)	K-20	Time Delay Module (X-657)
E-35	Console Light (X-138)	S-40	LH Door Switch (X-137)
GND-003	Cab Frame GND		


SHEET 39 - LIGHTING (INTERIOR)

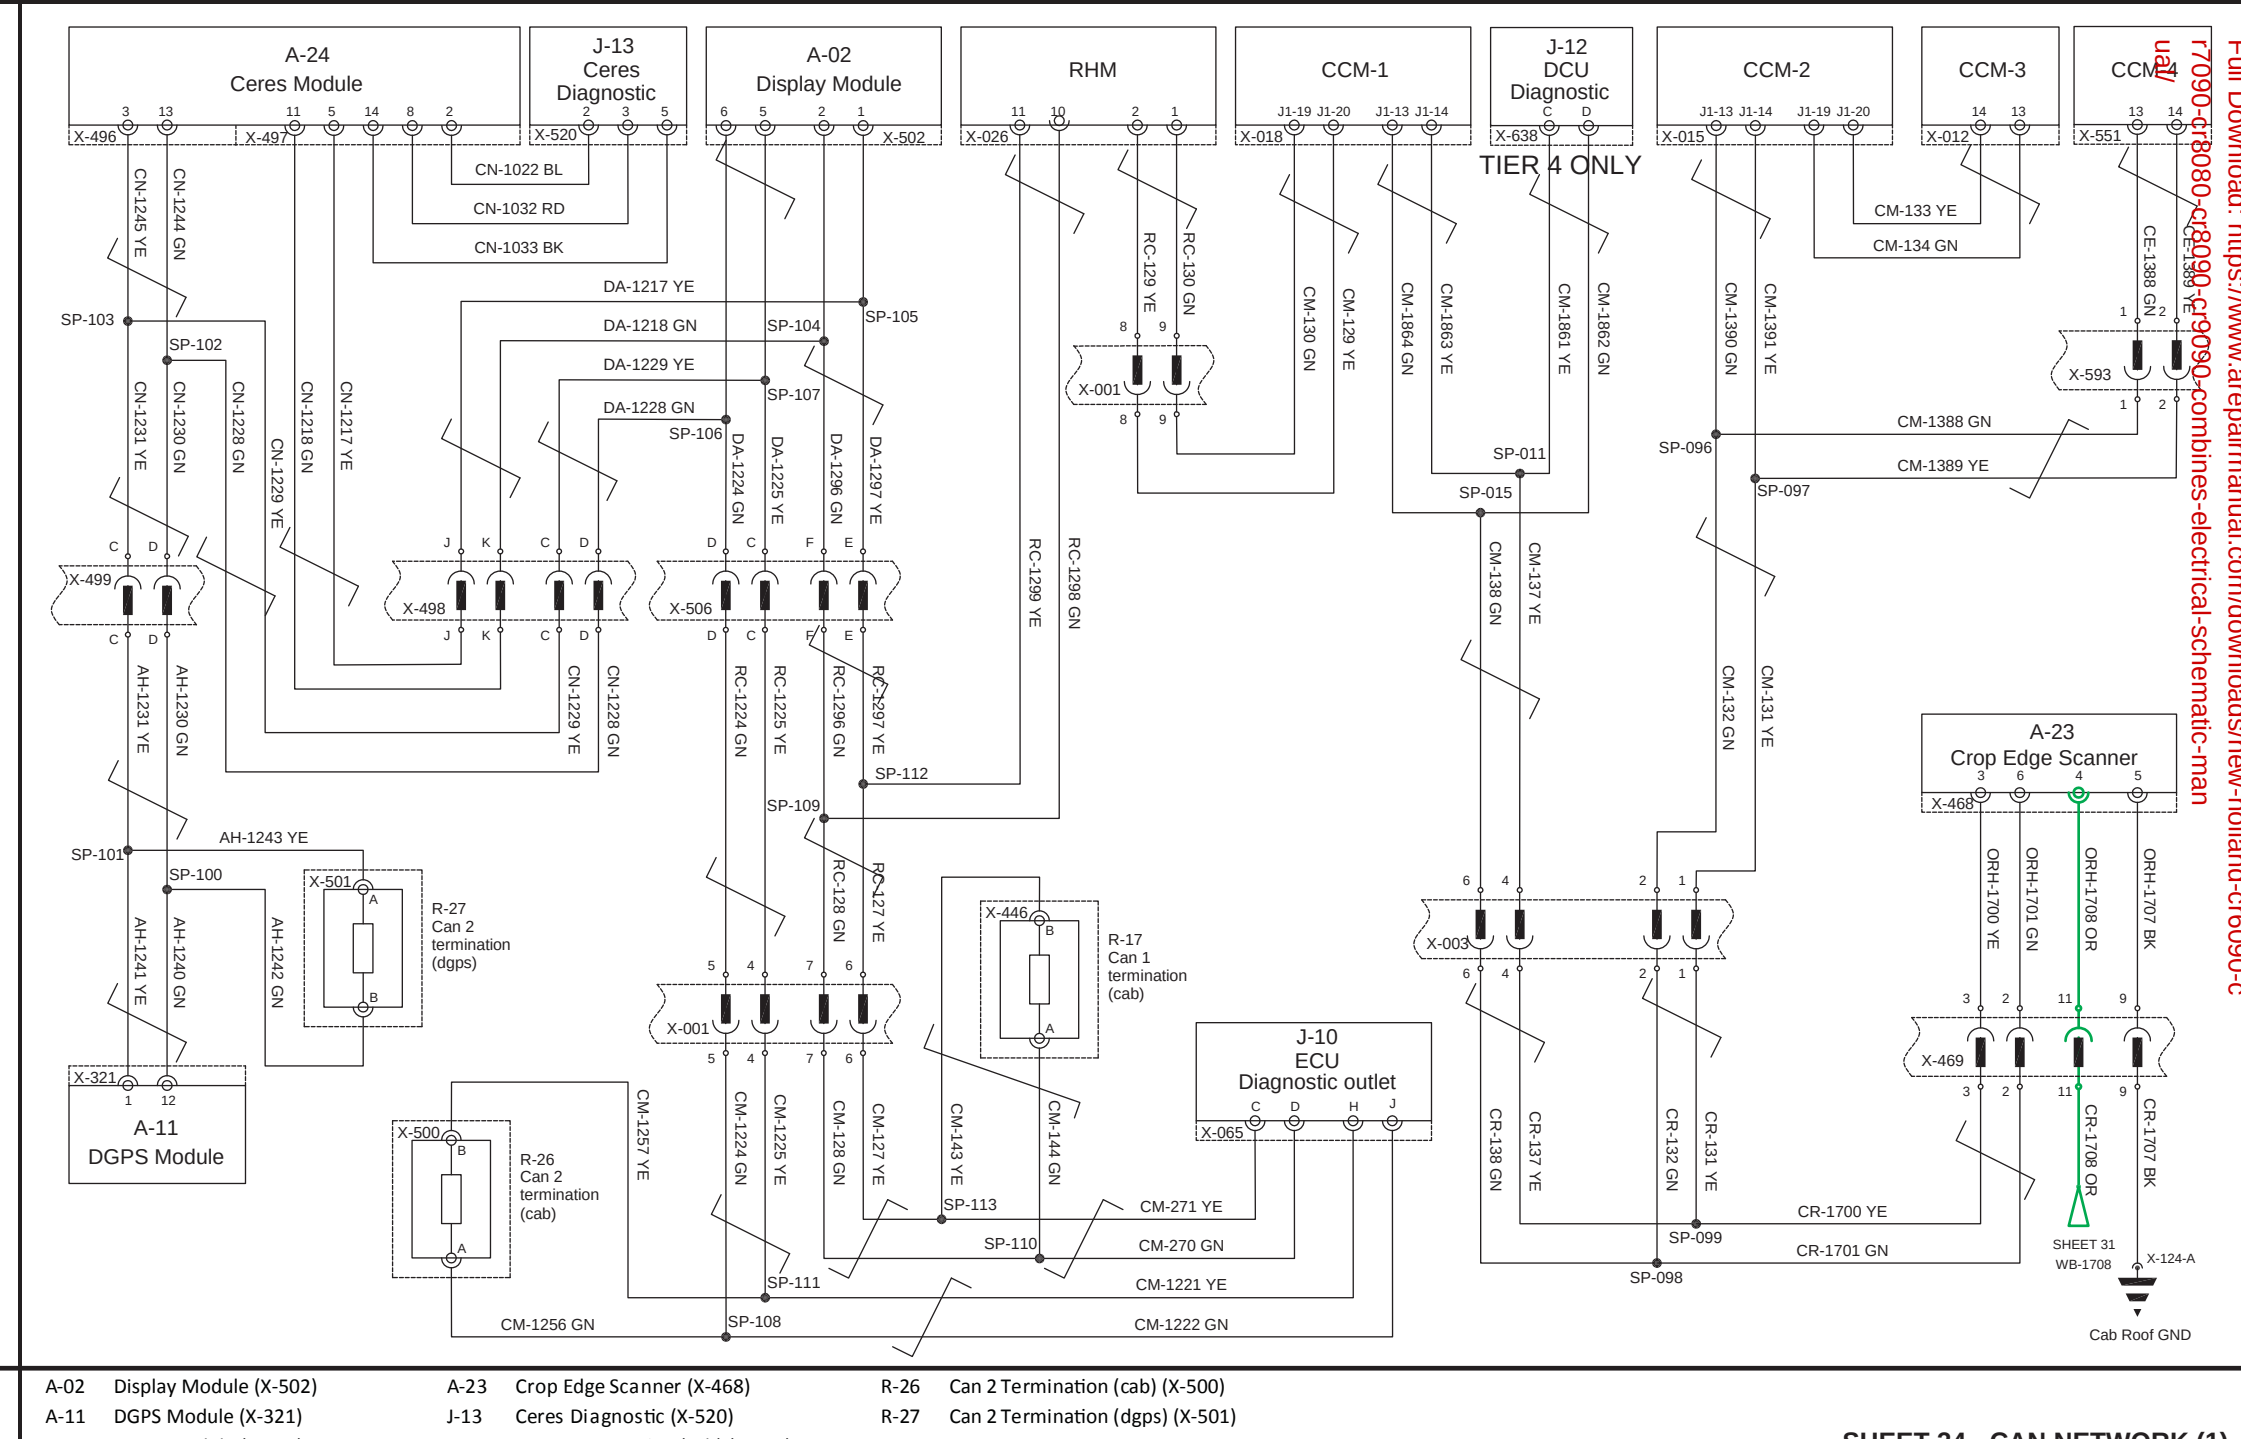

A-11 DGPS Module (X-321) J-13 Ceres Diagnostic (X-520) R-27 Can 2 Termination (dgps) (X-501)
 A-24 Ceres Module (X-496) R-17 Can 1 Termination (cab) (X-446) **SHEET 34 - CAN NETWORK (1)**

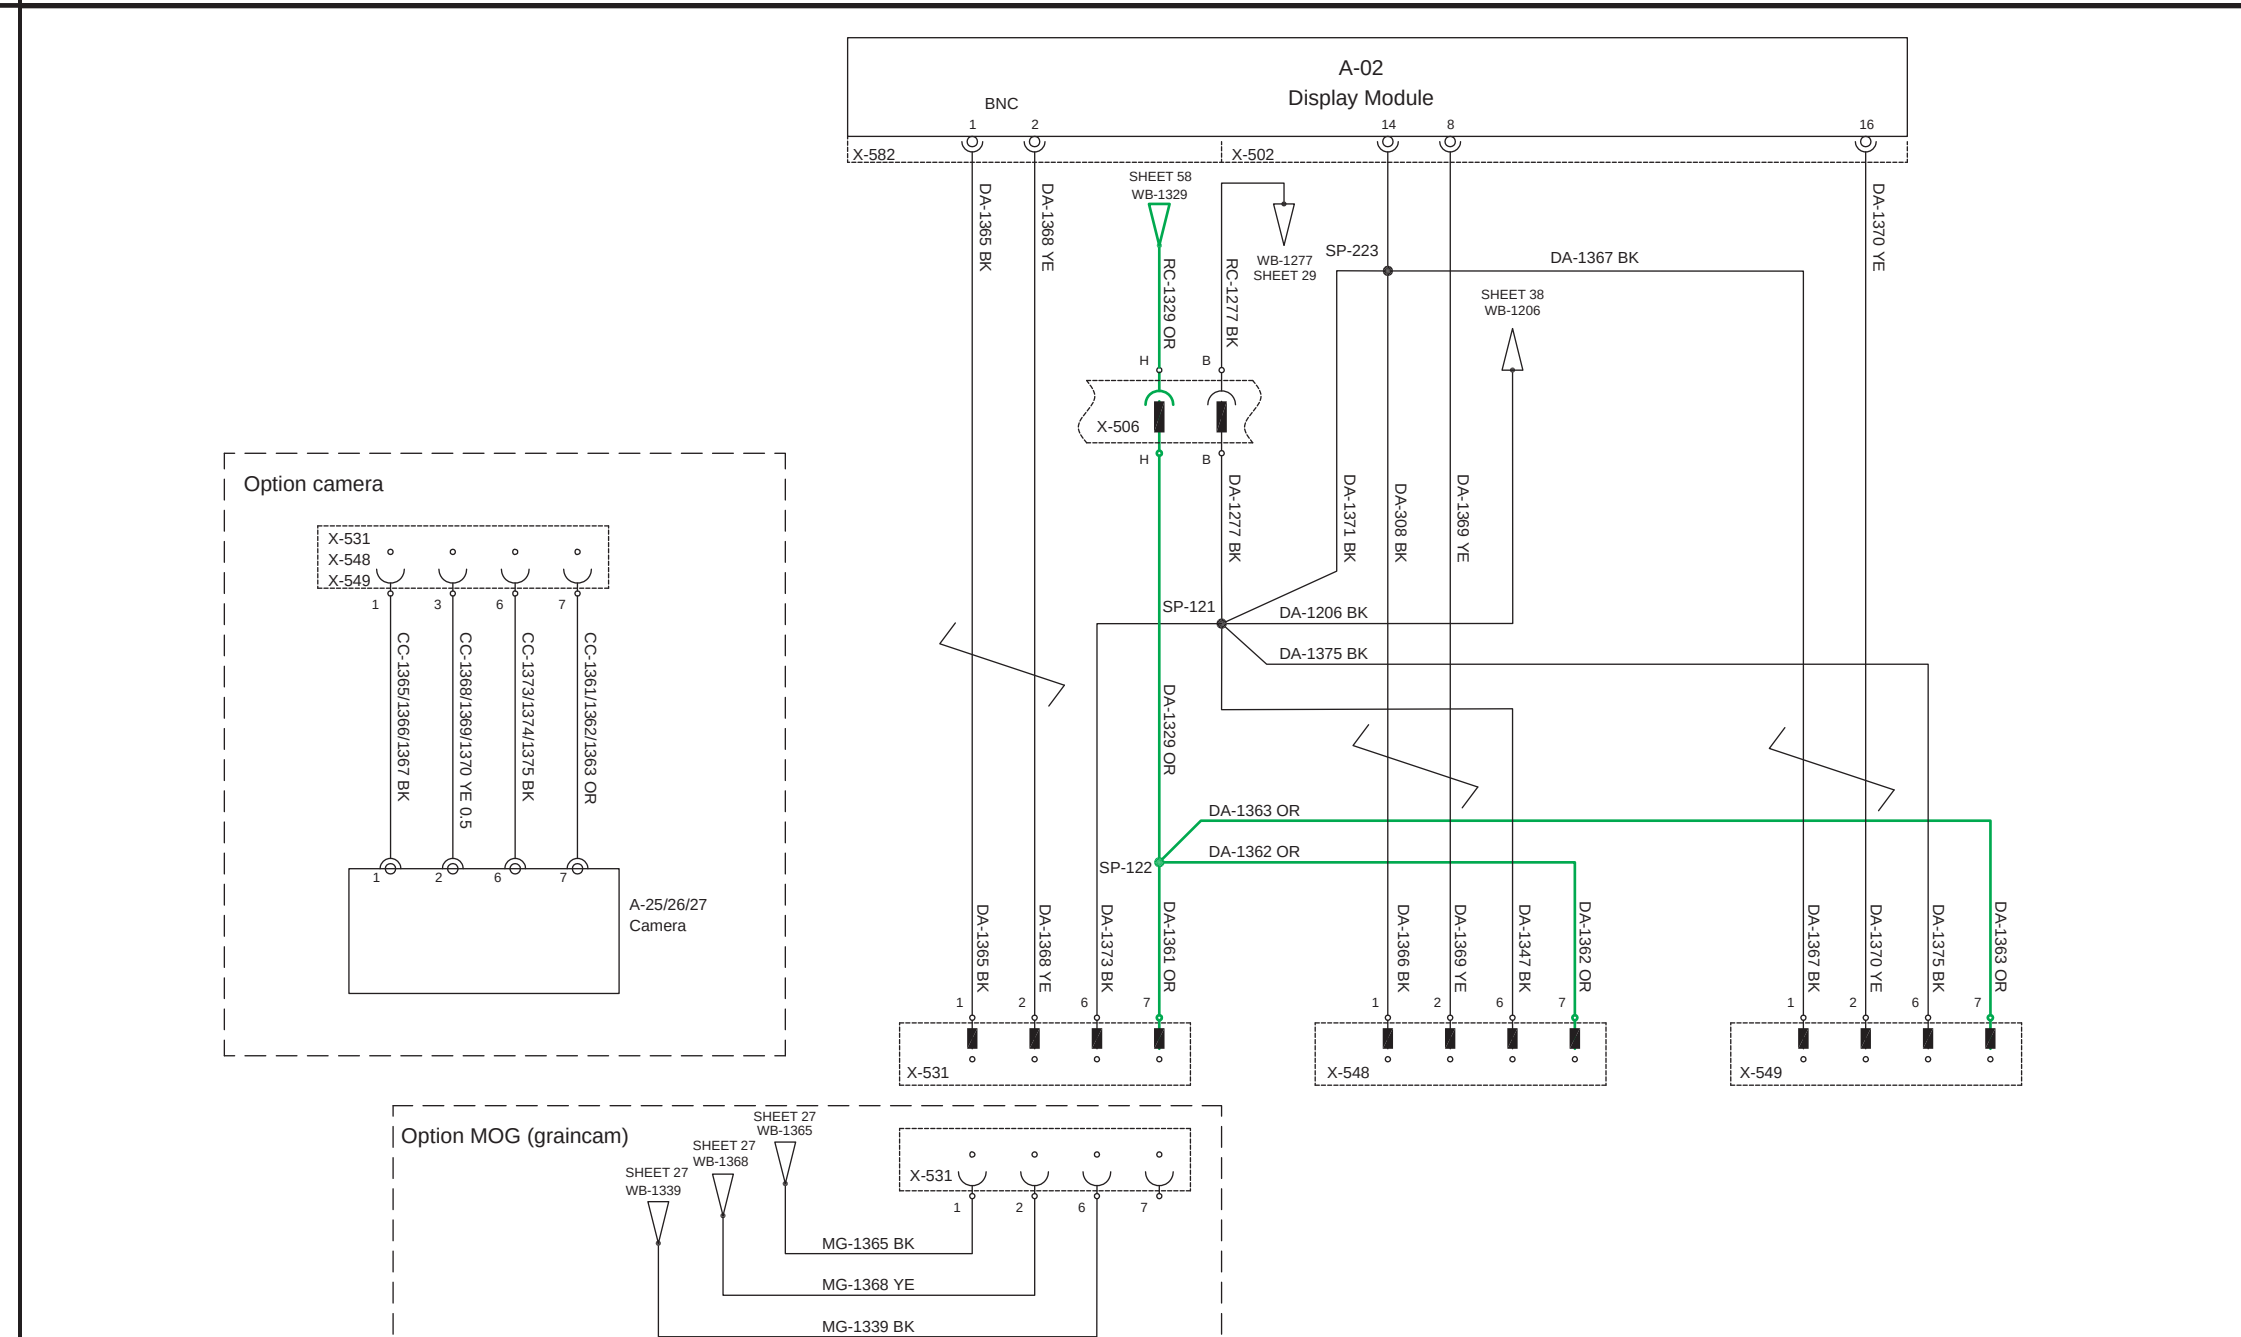

A-02 Display Module (X-502)
A-25/26/27 Camera (X-531, X-548, X-549)

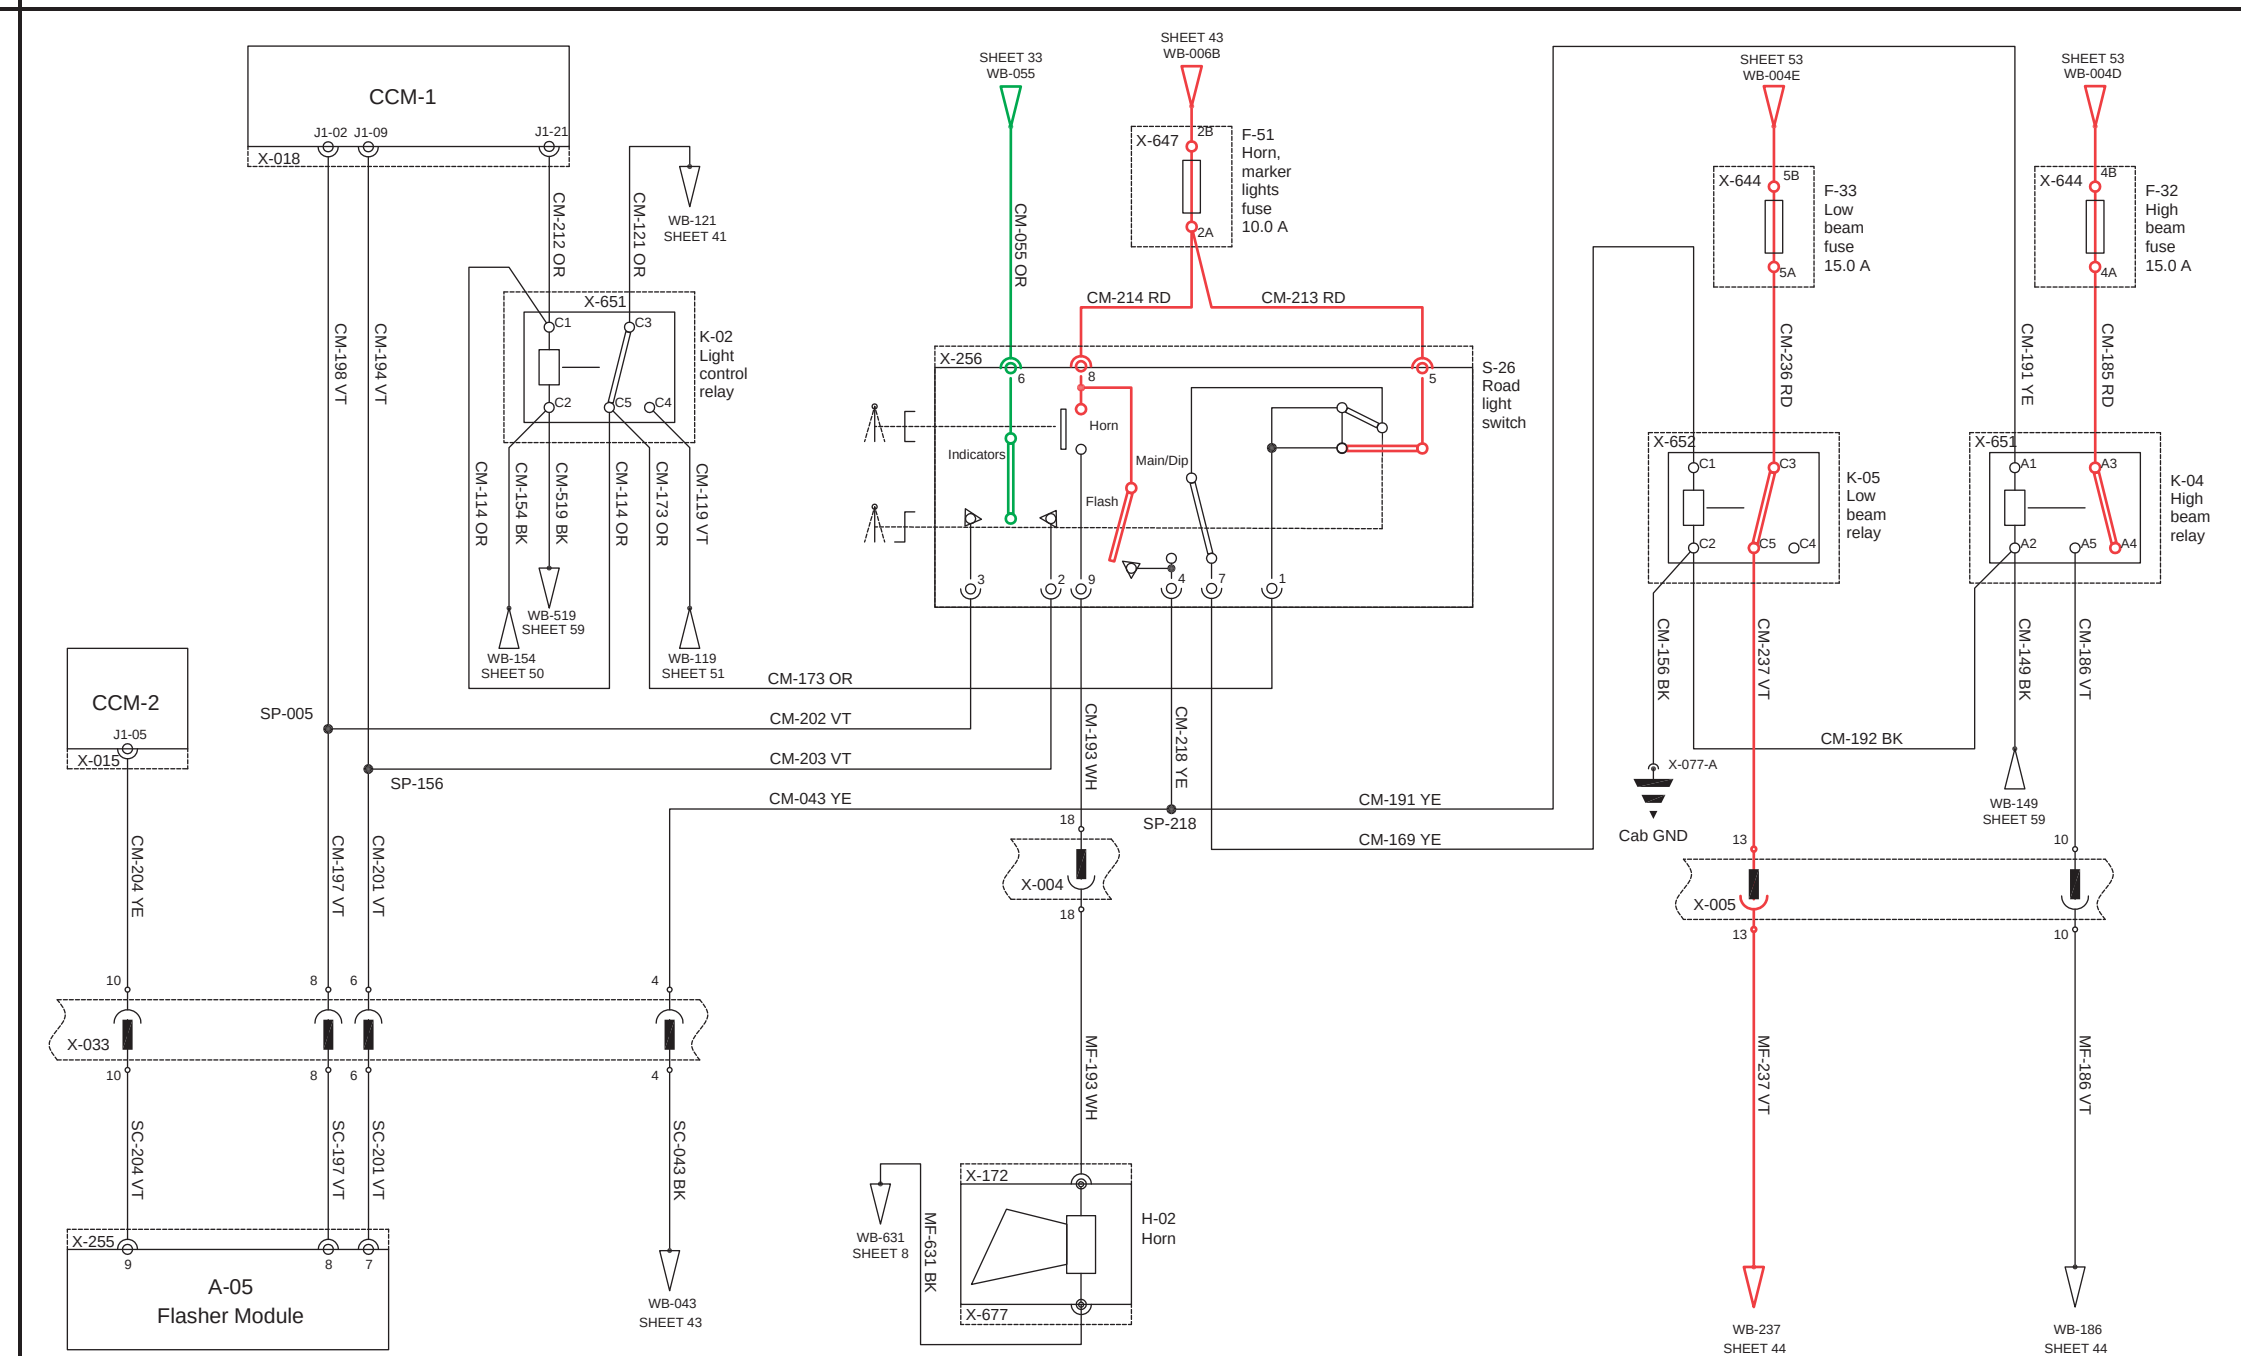

A-05	Flasher Module (X-255)	K-04	High Beam Relay (X-651)
H-02	Horn (X-172, X-677)	K-05	Low Beam Relay (X-652)
K-02	Light Control Relay (X-651)	S-26	Road Light Switch (X-256)

SHEET 40 - LIGHTING (CONTROLS)