

Product: New Holland LS140/LS150 Skid Steer Loader Service Repair Manual

Full Download: <https://www.arepairmanual.com/downloads/new-holland-ls140-ls150-skid-steer-loader-service-repair-manual/>

Please cut where indicated and insert the label into the plastic pocket on the spine of the binder.



**SKID-STEER
REPAIR
LS140, LS150**

Vol. 1
87036977



**SKID-STEER
REPAIR
LS140, LS150**

Vol. 1
87036977



87036995

Sample of manual. Download All 806 pages at:

<https://www.arepairmanual.com/downloads/new-holland-ls140-ls150-skid-steer-loader-service-repair-manual/>

LS140, LS150 REPAIR MANUAL

COMPLETE CONTENTS

SECTION 00 - GENERAL INFORMATION	2
SECTION 10 - ENGINE	3
SECTION 29 - HYDROSTATIC TRANSMISSION	7
SECTION 33 - BRAKES AND CONTROLS	9
SECTION 35 - HYDRAULIC SYSTEM	9
SECTION 37 - TOWING HOOKS AND BALLASTING	11
SECTION 39 - FRAMES	12
SECTION 44 - AXLES AND WHEELS	12
SECTION 50 - CAB CLIMATE CONTROL	13
SECTION 55 - ELECTRICAL SYSTEM	13
SECTION 82 - FRONT LOADER (BOOM AND MOUNTING PLATE)	19
SECTION 88 - ACCESSORIES	20
SECTION 90 - PLATFORMS, CAB, BODYWORK, AND DECALS	20

The following pages are the collation of the contents pages from each section and chapter of the LS140, LS150 Repair manual. Complete Repair part # 87036977.

The sections used through out all New Holland product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the LS140, LS150 Skid Steer.

SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87042550

CONTENTS

Section	Description	Page
	Introduction	2
	About Improvements	2
	Company Policy	3
	Parts and Accessories	3
	Model Codes	3
	Precautionary Statements	4
	Safety Precaution Information	5
	General Safety Information	7
	Machine Model and Serial Number Location	9
	Engine Model and Serial Number Location	9
	Hardware Torque Specifications	10
	Installation of Adjustable Fittings in Straight Thread O Ring Bosses	12
	Standard Torque Data for Hydraulic Tubes and Fittings	12
	Pipe Thread Fitting Torque	13
	Lubricants and Coolants	13
	Sealants	13
	Properly Support a Raised Machine	14
	Properly Support Boom on Boom Lock Pins	14
	Raising Boom Without Hydraulic Oil Flow	14
	Raising Boom Without Battery Voltage (12V)	15
	Reattaching Cylinders After Repair with Boom Resting on Boom Lock Pins	17
	Major Unit Overhaul	18
	Cab and Boom Tilt Procedure	19
	Craning the Skid Steer	26
	Special Tools	29
	Specifications	30
	Dimensions	33

SECTION 10 - ENGINE

BOOK 1 - 87042550

Chapter 1 - LS140-N843 (Before Engine S/N 93206) LS150-N843H (Before Engine S/N 91509)

CONTENTS

Section	Description	Page
10 000	General Engine Information	3
	General Description	3
	Engine Component Descriptions	3
	Engine Model and Serial Number Location	5
	Safety Precautions	6
	General Engine Specifications	7
	Troubleshooting	9
	Specifications - Service Standards	12
	Torque Specifications	17
	Engine Components Electrical Diagram	18
10 001 10	Engine Removal	19
	Engine Disassembly Sequence	25
	Engine Component Maintenance	33
10 101 55	Valve Seat	36
10 101 56	Cylinder Block	39
10 105 22	Piston and Piston Rings	40
	Connecting Rod	44
10 103 10	Bearing Holder	48
	Front Crankshaft Bearing (Bushing)	50
10 103 30	Crankshaft	52
10 103 76	Flywheel and Ring Gear	54
10 106 40	Camshaft Assembly	55
10 106 66	Camshaft Gear and Bearing Assembly	55
	Timing Gear	56
10 304 41	Oil Pump	56
	Port Block	57
10 304 10	Oil Filter	58
10 402 28	Water Pump Assembly and Thermostat Housing	59
10 402 30	Thermostat	59
10 230 24	Governor	60
	Governor Operation	61
10 304 38	Engine Reassembly Sequence	63
	Crankshaft and Bearing Holder Assembly	64

SECTION 10 - ENGINE

BOOK 1 - 87042550

Chapter 1 - LS140-N843 (Before Engine S/N 93206) LS150-N843H (Before Engine S/N 91509) (Continued)

CONTENTS

Section	Description	Page
	Rear Oil Seal	65
	Backplate/Flywheel Housing	65
	Flywheel	65
	Piston and Connecting Rod	66
	Oil Intake and Oil Strainer	66
	Oil Sump	66
	Dipstick and Tube	66
	Front Plate	67
	Idler Gear and Oil Pump Assembly	67
	Timing Gear Case Installation	68
	Crankshaft Pulley	69
	Injection Pump Installation	69
	Spill Timing Procedure	70
29 100 50	Reinstallation of Engine into Skid Steer Frame	79
	How to Operate the Engine After Overhaul	81
	Cooling System	82
	Cooling System Operation	82
	Water Pump Assembly and Thermostat Housing	83
	Radiator	85
	Fuel System	86
	Fuel Specifications	86
	Diesel Fuel	86
	Diesel Fuel Storage	86
	Fuel System Components	87
	Fuel Guage	88
	Cold Start Aid	89
	Fuel Filter System	89
	Priming the Fuel System	90
	Fuel System Testing	91
	Fuel System Components	94
10 236 08	Fuel Injection Timing	102
	Miscellaneous Engine Electrical	105
	Special Tools	107

SECTION 10 - ENGINE

BOOK 1 - 87042550

Chapter 2 - LS140-N843 (Tier II Engine S/N 93206 and After) LS150-N843H (Tier II Engine S/N 91509 and After)

CONTENTS

Section	Description	Page
10 000	General Engine Information	3
	General Description	3
	Engine Component Descriptions	3
	Engine Model and Serial Number Location	5
	Safety Precautions	6
	General Engine Specifications	7
	Troubleshooting	9
	Specifications - Service Standards	12
	Torque Specifications	17
	Engine Components Electrical Diagram	18
10 001 10	Engine Removal	19
	Engine Disassembly Sequence	25
	Engine Component Maintenance	33
10 101 55	Valve Seat	36
10 101 56	Cylinder Block	39
10 105 22	Piston and Piston Rings	40
	Connecting Rod	44
10 103 10	Bearing Holder	48
	Front Crankshaft Bearing (Bushing)	50
10 103 30	Crankshaft	52
10 103 76	Flywheel and Ring Gear	54
10 106 40	Camshaft Assembly	55
10 106 66	Camshaft Gear and Bearing Assembly	55
	Timing Gear	56
10 304 41	Oil Pump	56
	Port Block	57
10 304 10	Oil Filter	58
10 402 28	Water Pump Assembly and Thermostat Housing	59
10 402 30	Thermostat	59
10 230 24	Governor	60
	Governor Operation	61

SECTION 10 - ENGINE

BOOK 1 - 87042550

Chapter 2 - LS140-N843 (Tier II Engine S/N 93206 and After) LS150-N843H (Tier II Engine S/N 91509 and After) (Continued)

CONTENTS

Section	Description	Page
10 304 38	Engine Reassembly Sequence	63
	Crankshaft and Bearing Holder Assembly	64
	Rear Oil Seal	65
	Backplate/Flywheel Housing	65
	Flywheel	65
	Piston and Connecting Rod	66
	Oil Intake and Oil Strainer	66
	Oil Sump	66
	Dipstick and Tube	66
	Front Plate	67
	Idler Gear and Oil Pump Assembly	67
	Timing Gear Case Installation	68
	Crankshaft Pulley	69
	Injection Pump Installation	69
29 100 50	Reinstallation of Engine into Skid Steer Frame	76
	How to Operate the Engine After Overhaul	78
	Cooling System	79
	Cooling System Operation	79
	Water Pump Assembly and Thermostat Housing	80
	Radiator	82
	Fuel System	83
	Fuel Specifications	83
	Diesel Fuel	83
	Diesel Fuel Storage	83
	Fuel System Components	84
	Fuel Guage	85
	Cold Start Aid	86
	Fuel Filter System	86
	Priming the Fuel System	87
	Fuel System Testing	88
	Fuel System Components	91
	Miscellaneous Engine Electrical	99
	Special Tools	101

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87036979

Chapter 1 - Neutralizer, Pumps, Motors

CONTENTS

Section	Description	Page
29 100	General Information	29-3
	Operation	29-3
	Specifications	29-5
29 100 01	Troubleshooting	29-6
	Hydrostatic Drive System Testing	29-8
	Hydrostatic System Oil Flow	29-11
	Hydrostatic Charge System Pressure Test	29-14
	Hydrostatic Pump Case Drain Test	29-16
	Hydrostatic Pump High Pressure Test	29-19
	Hydrostatic Pump Efficiency Test	29-21
	Hydrostatic Motor Case Drain Test	29-23
	Hydrostatic Motor Efficiency Test	29-24
	Hydraulic, Hydrostatic System Air Ingress Test	29-26
	Hydrostatic Pumps	29-27
29 100 40	Hydrostatic Pump Removal	29-27
29 100 46	Hydrostatic Pump Disassembly	29-31
	Hydrostatic Pump Parts Inspection	29-37
	Hydrostatic Pump Reassembly	29-40
	Hydrostatic Pump Reinstallation	29-46
	Hydrostatic Motor	29-48
29 100 60	Hydrostatic Motor Removal	29-48
29 100 66	Hydrostatic Motor Disassembly	29-52
	Hydrostatic Motor Parts Inspection	29-55
	Hydrostatic Motor Reassembly	29-59
	Hydrostatic Motor Reinstallation	29-63
	Hydraulic System Cleaning Procedure	29-66
	Start-up Procedure After Rebuild (After Pump or Motor Replacement)	29-69
	Charge Check Valve	29-71
29 100 36	Charge Check Valve Removal and Replacement	29-71

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87036979

Chapter 1 - Neutralizer, Pumps, Motors (Continued)

CONTENTS

Section	Description	Page
29 100	Steering System	29-73
	Hydrostatic System Controls	29-73
	Neutralizer Assembly	29-75
	Left Control Handle With No Boom Control	29-81
29 100 10	Left Control Handle With No Boom Control Removal	29-81
	Left Control Handle With No Boom Control Disassembly	29-81
	Left Control Handle With No Boom Control Inspection	29-82
	Left Control Handle With No Boom Control Reassembly	29-82
	Left Control Handle With No Boom Control Reinstallation	29-82
29 100 11	Left Control Handle With Boom Control	29-84
	Left Control Handle With Boom Control Removal	29-84
	Left Control Handle With Boom Control Disassembly	29-85
	Left Control Handle With Boom Control Inspection	29-86
	Left Control Handle With Boom Control Reassembly	29-87
	Left Control Handle With Boom Control Reinstallation	29-88
	Right Control Handle With Auxiliary or Bucket Control	29-90
29 100 15	Right Control Handle With Auxiliary or Bucket Control Removal	29-90
	Right Control Handle With Auxiliary or Bucket Control Disassembly	29-91
	Right Control Handle With Auxiliary or Bucket Control Inspection	29-93
	Right Control Handle With Auxiliary or Bucket Control Reassembly	29-94
	Right Control Handle With Auxiliary or Bucket Control Reinstallation	29-97
29 130 06	Drive Control Adjustment Procedure	29-99
29 130 06	Neutral Adjustment	29-100

SECTION 33 - BRAKES AND CONTROLS

BOOK 2 - 87036979

Chapter 1 - Parking Brake

CONTENTS

Section	Description	Page
33 000	General Information	33-2
	Specifications	33-4
	Troubleshooting	33-5
	Testing	33-7
33 110	Parking Brake	33-8
	Parking Brake Removal and Inspection	33-9

SECTION 35 - HYDRAULIC SYSTEM

BOOK 3 - 87036980

Chapter 1 - Valves, Gear Pump, Cylinders, and Pedal Controls

CONTENTS

Section	Description	Page
35 000	General Information	35-3
	Hydraulic System Compatibility	35-4
	Boom Cylinder Pivot Pins	35-6
	Boom Cylinder Pivot Pin Location and Machine Usage	35-6
	Control Valve Power Beyond	35-7
	Specifications	35-8
	Troubleshooting	35-10
	Auxiliary Boom Hydraulics Troubleshooting	35-14
	Hydraulic System Testing	35-16
	Hydraulic System Oil Flow (Neutral Position)	35-22
	Control Valve - Bucket Spool Shifted	35-23
	Control Valve - Boom Spool Shifted	35-24
	Control Valve - Auxiliary Spool Shifted	35-25
35 710 02	Main System Pressure Tests	35-26
	Checking Main System Pressure at Boom Cylinders	35-29

SECTION 35 - HYDRAULIC SYSTEM

BOOK 3 - 87036980

Chapter 1 - Valves, Gear Pump, Cylinders, and Pedal Controls (Continued)

CONTENTS

Section	Description	Page
	Checking Main System Pressure at Bucket Cylinders	35-30
	Checking Main System Pressure at Auxiliary Boom Hydraulic Quick Couplers	35-31
	Boom Circuit Relief Valve Test	35-32
	Gear Pump Flow Efficiency Test	35-34
	Boom and Bucket Spool Lock Solenoid Test	35-37
	Hydraulic, Hydrostatic System Air Ingress Test	35-40
	Control Valve Specifications	35-41
35 724 50	Control Valve Removal	35-42
35 724 54	Control Valve Disassembly and Inspection	35-44
	Control Valve Parts Inspection	35-48
	Control Valve Reassembly	35-49
	Control Valve Reinstallation	35-53
	Hydraulic Pump Specifications	35-54
35 710 10	Hydraulic Pump Removal	35-55
35 710 20	Hydraulic Pump Disassembly	35-57
	Hydraulic Pump Parts Inspection	35-58
	Hydraulic Pump Reassembly	35-60
	Hydraulic Pump Installation	35-63
	Cylinders, Boom and Bucket	35-64
35 710 10	Boom Cylinder Removal	35-65
35 730 18	Boom Cylinder Disassembly	35-67
	Boom Cylinder Parts Inspection	35-68
	Boom Cylinder Reassembly	35-70
	Boom Cylinder Reinstallation	35-71
35 730 10	Bucket Cylinder Removal	35-72
35 730 13	Bucket Cylinder Disassembly	35-73
	Bucket Cylinder Parts Inspection	35-74
	Bucket Cylinder Reassembly	35-74
	Bucket Cylinder Reinstallation	35-75
	Pedal Controls	35-76
35 724 16	Pedal Removal (With Boom and Bucket Pedal Controls)	35-76

SECTION 35 - HYDRAULIC SYSTEM

BOOK 3 - 87036980

Chapter 1 - Valves, Gear Pump, Cylinders, and Pedal Controls (Continued)

CONTENTS

Section	Description	Page
	Pedal Inspection (With Boom and Bucket Pedal Controls)	35-76
	Pedal Reinstallation (With Boom and Bucket Pedal Controls)	35-78
35 724 16	Pedal Removal (With Boom and Bucket Hand Controls)	35-81
	Pedal Inspection (With Boom and Bucket Hand Controls)	35-82
	Pedal Reinstallation (With Boom and Bucket Hand Controls)	35-83
35 300	Hydraulic Cooling, Filter, Reservoir System	35-86
35 705	Filter System	35-87
35 705 04	Filter Removal	35-87
35 705 05	Base Removal	35-87
	Reassembly	35-88
	Oil Cooler	35-88
35 300 10	Oil Cooler Removal	35-88
	Oil Cooler Reassembly	35-89
35 300	Oil Reservoir	35-90
35 300 10	Oil Reservoir Removal	35-91
	Oil Reservoir Reinstallation	35-92

SECTION 37 - TOWING HOOKS AND BALLASTING

BOOK 3 - 87036980

Chapter 1 - Rear Counterweights

CONTENTS

Section	Description	Page
37 140 10	Rear Counterweights	37-2
37 140 12	Rear Counterweight Support Removal	37-2

SECTION 39 - FRAMES

BOOK 3 - 87036980

Chapter 1 - Lower Main, ROPS

CONTENTS

Section	Description	Page
	General Information	39-2
	Cab and ROPS	39-3
90 152 46	Cab and ROPS Removal	39-3
	Cab and ROPS Reinstallation	39-10

SECTION 44 - AXLES AND WHEELS

BOOK 3 - 87036980

Chapter 1 - Axles

CONTENTS

Section	Description	Page
44 100	General Information	44-2
	Specifications	44-4
	Troubleshooting	44-5
	Testing	44-7
44 106	Axles	44-8
44 106 10	Axle Housing Assembly Removal	44-8
44 106 16	Axle Disassembly	44-9
	Axle Parts Inspection	44-11
	Axle Reassembly	44-12
	Axle Housing Reinstallation	44-14
	Final Drive	44-16
44 106 48	Final Drive Removal	44-16
	Final Drive Parts Inspection	44-23
	Final Drive Reassembly	44-24
44 511	Tires/Wheels	44-30
	Tire and Track Installation	44-31
	Loader Boom Stop Adjustment	44-32

SECTION 50 - CAB CLIMATE CONTROL

BOOK 3 - 87036980

Chapter 1 - Heater/Defroster

CONTENTS

Section	Description	Page
50 100	Heater/Defroster (Cab)	50-2
	Evaluation Procedure	50-8
	Estimated Performance Guidelines	50-8
	Heater/Defroster System Troubleshooting	50-9
	Cab Heater/Defroster Wire Schematic	50-18
	Heater Control Wire Diagram	50-18

SECTION 55 - ELECTRICAL SYSTEM

BOOK 4 - 87036981

Chapter 1 - Advanced Warning System, Circuits, Alternator, and Starter

CONTENTS

Section	Description	Page
55 000	General Electrical Information	55-6
	Definition of Terms	55-7
	Adapting Attachments Requiring 12V Electrical Power	55-9
	Specifications	55-12
	Electrical Diagram	55-15
55 418	Advanced Warning System	55-19
	Electronic Instrument Cluster (EIC)	55-19
	(EIC) Electronic Instrument Cluster Front Panel	55-20
	EIC Functional Groups	55-21
	Engine Preheat	55-26
	Automatic Shutdown	55-26
	Operating Mode	55-27
	Broken Alternator/Water Pump Belt Warning	55-29
	Fuel Level	55-30

SECTION 55 - ELECTRICAL SYSTEM

BOOK 4 - 87036981

Chapter 1 - Advanced Warning System, Circuits, Alternator, and Starter (Continued)

CONTENTS

Section	Description	Page
	EIC Interlocks	55-30
	EIC Lock Mode	55-31
	EIC Engine Preheat	55-32
	Troubleshooting	55-33
	Advanced Warning System (AWS)	55-36
	EIC Board Self Test	55-37
	Diagnostic and Setup Modes	55-38
	Arrow, Open Book, and Audible Alarm Test	55-40
	Diagnostic Mode EIC Circuit Tests	55-40
	EIC Setup Mode	55-44
	Electronic Instrument Cluster (EIC) and Starter Circuits	55-52
	Blown Fuse Symptom and Testing	55-52
	Testing Other EIC Functions	55-54
	EIC Board Reading Accuracy	55-57
	EIC Board Claims Warranty	55-59
	Electrical Circuits	55-60
	Seat Switch Circuit to EIC Board	55-61
	Seat Belt Switch Circuit to EIC Board	55-62
	Ignition Switch Circuit to EIC Board	55-63
	Cranking Circuit (Starter Motor)	55-64
	“Service/Run” Switch in the “Run” Position	55-65
	Cranking Circuit Ground	55-66
	Operating Conditions “Service/Run” Switch in the “Service” position	55-66
	Service/Run” Switch in the “Service” position	55-67
	Cranking Circuit Ground	55-68
	Start Relay Operation	55-68
	Start Relay Circuit	55-69
	Start Relay Ground Circuit	55-70
	Start Interlock Relay Operation	55-70
	Start Interlock Circuit	55-71

SECTION 55 - ELECTRICAL SYSTEM

BOOK 4 - 87036981

Chapter 1 - Advanced Warning System, Circuits, Alternator, and Starter (Continued)

CONTENTS

Section	Description	Page
	Start Interlock Ground Circuit	55-72
	Start Circuit	55-72
55 100	Removal, Installation and Wiring of Electrical Components	55-73
	Battery	55-74
55 301 40	Battery Removal	55-74
	Battery Installation	55-74
55 418 10	EIC (Electronic Instrument Cluster) Board Removal	55-75
	EIC (Electronic Instrument Cluster) Wiring	55-76
	EIC (Electronic Instrument Cluster) Board Installation	55-76
	Ignition (Key) Switch Wiring	55-78
55 201 10	Ignition (Key) Switch Removal	55-78
	Ignition (Key) Switch Installation	55-78
	Cab Fuse Panel Wiring	55-79
	Cab Fuse Block and Panel Removal	55-80
	Cab Fuse Block and Panel Installation	55-80
	Service/Run Switch Wiring	55-81
	Service/Run Switch - Service Position	55-81
	Service/Run Switch - Run Position	55-81
55 418 30	Service/Run Switch Removal	55-82
	Service/Run Switch Installation	55-82
	Seat and Seat Belt Switch Wiring	55-83
55 201 15	Seat Switch Removal	55-83
	Seat Switch Installation	55-84
	Seat Belt Buckle and Switch Assembly Removal	55-84
	Seat Belt Buckle Installation	55-84
	Road Light and Work Light Switch Wiring	55-85
55 404 20	Road Light and Work Light Switch Removal	55-86
	Road Light and Work Light Switch Installation	55-86
	Engine Fuse and Relay Panel	55-87
	Accessory Relay Wiring	55-88

SECTION 55 - ELECTRICAL SYSTEM

BOOK 4 - 87036981

Chapter 1 - Advanced Warning System, Circuits, Alternator, and Starter (Continued)

CONTENTS

Section	Description	Page
	Accessory Relay Removal	55-88
	Accessory Relay Installation	55-88
	Preheat Circuit Breaker Wiring	55-89
55 100 24	Preheat Circuit Breaker Removal	55-89
	Preheat Circuit Breaker Installation	55-89
	Start Interlock Relay Wiring	55-90
55 100 34	Start Interlock Relay Removal	55-91
	Start Interlock Relay Installation	55-91
	Engine Fuse Panel Wiring	55-92
	Engine Fuse Block Removal	55-93
	Engine Fuse Block Installation	55-93
	Alternator Excite Resistor Wiring	55-94
55 301 16	Alternator Excite Resistor Removal	55-94
	Alternator Excite Resistor Installation	55-94
	Start Relay Wiring	55-95
55 100 34	Start Relay Removal	55-95
	Start Relay Installation	55-95
	Preheat Relay Wiring	55-96
55 100 34	Preheat Relay Removal	55-97
	Preheat Relay Installation	55-97
	Preheat Glow Plug Removal	55-98
	Preheat Glow Plug Installation	55-98
	Fuel System Components	55-99
	Electric Fuel Pump	55-101
10 210 21	Electric Fuel Pump Removal	55-102
10 223	Fuel Shutoff Solenoid	55-102
	Fuel Shutoff Solenoid Testing	55-102
10 223 10	Replacement of Fuel Shutoff Solenoid	55-103
55 414 14	Air Filter Restriction Indicator Switch Removal	55-104
	Air Filter Restriction Indicator Switch Installation	55-104

SECTION 55 - ELECTRICAL SYSTEM

BOOK 4 - 87036981

Chapter 1 - Advanced Warning System, Circuits, Alternator, and Starter (Continued)

CONTENTS

Section	Description	Page
55 414 10	Engine Coolant Temperature Sender Removal	55-104
	Engine Coolant Temperature Sender Installation	55-104
55 414 12	Engine Oil Pressure Switch Removal	55-105
	Engine Oil Pressure Switch Installation	55-105
55 414 28	Hydrostatic Charge Pressure Switch Removal	55-105
	Hydrostatic Charge Pressure Switch Installation	55-105
55 414 24	Hydraulic Oil Filter Restriction Switch Removal	55-106
	Hydraulic Oil Filter Restriction Switch Installation	55-106
55 414 20	Hydraulic Oil Temperature Sender Removal	55-106
	Hydraulic Oil Temperature Sender Installation	55-107
	Boom/Bucket Control Valve Spool Lock Solenoids	55-108
35 724 90	Boom/Bucket Control Valve Spool Lock Solenoids Removal	55-108
	Boom/Bucket Control Valve Spool Lock Solenoids Installation	55-108
	Wire Harness	55-109
55 100 74	Main Wire Harness Removal	55-109
	Main Wire Harness Installation	55-114
55 404	Road/Work Lights	55-118
55 301	Alternator (40 Amp Version)	55-122
	Charging Circuit	55-122
	Alternator Service Specifications	55-124
	Alternator System Testing and Troubleshooting	55-125
	Service Precautions	55-128
	Initial Tests	55-128
55 301 10	Alternator Removal	55-133
55 301 12	Alternator Disassembly	55-134
	Alternator Reinstallation	55-140
55 201	Starter	55-141
	Starter Motor Troubleshooting	55-141
55 201 50	Starter Motor Removal	55-143
	Starter Motor Disassembly	55-148

SECTION 55 - ELECTRICAL SYSTEM

BOOK 4 - 87036981

Chapter 1 - Advanced Warning System, Circuits, Alternator, and Starter (Continued)

CONTENTS

Section	Description	Page
	Starter Inspection and Repair	55-152
	Starter Reassembly	55-158
	Starter Reinstallation	55-161
	Miscellaneous Engine Components	55-162
	Glow Plug	55-162
	Glow Plug Troubleshooting	55-162
	Oil Pressure Switch	55-163
	Fuel Shut-off Solenoid	55-163

SECTION 82 - FRONT LOADER (Boom And Mounting Plate)

BOOK 4 - 87036981

Chapter 1 - Buckets

CONTENTS

Section	Description	Page
82 100	General Information	82-2
	Buckets	82-2
82 100 77	Boom Lock Pins and Linkage	82-3
	Boom	82-3
82 100 70	Attachment Mounting Plate	82-4
	Boom and Cylinder Pivot Pins	82-5
	Boom and Cylinder Pivot Pin Location and Machine Usage	82-5
	Boom and Cylinder Pivot Pins Size	82-6
82 100 30	Pallet Fork	82-7
82 100 20	Utility Fork	82-8
82 100 12	Bucket Cutting Edge (Replacement)	82-9
82 100	Bucket Latch Plate Installation Procedure	82-10
82 100	Dirt Tooth Kit Installation	82-13
	Bucket Tooth Spacing	82-14
	Boom Lock Pin/Linkage	82-16
82 100 77	Boom Lock Pin/Linkage Removal	82-16
	Boom Lock Pin/Linkage Reinstallation	82-17
	Boom, Upper and Lower Link	82-19
	Boom, Upper and Lower Link Removal	82-19
82 100 70	Front Boom Mounting Plate Pivot Hub Replacement	82-25
	Boom, Upper and Lower Link Reinstallation	82-27
	Attachment Mounting Plate	82-32
82 100 70	Attachment Mounting Plate Removal	82-32
	Repair/Rebuild Mounting Plate	82-32
82 100 74	Latch Lever and Pin Removal/Repair	82-32
	Attachment Mounting Plate Parts Inspection	82-34
	Checking Procedure for Buckets and Attachments	82-38
	Checking Procedure	82-40
	Checking the Loader Faceplate	82-41

SECTION 88 - ACCESSORIES

BOOK 4 - 87036981

Chapter 1 - Dealer Installed Options

CONTENTS

Section	Description	Page
88 100	General Information	88-2
	Adapting Attachments Requiring 12V Electrical Power	88-2
	Hydraulic System Compatibility	88-5
90 000	Arm Pads For Cab Side Panels	88-7
90 000	Armrests for Deluxe Seat	88-8
90 000	Forearm Rests	88-9
55 000	Back-up Alarm	88-10
10 300	Block Heater (Engine)	88-11
55 000	Electric Power Supply (12 Volt, 15 Amp)	88-12
10 254	Exhaust (Engine)	88-13
10 254	Aspirator Precleaner Muffler	88-13
55 000	Horn	88-15
90 000	Shoulder Belt (Seat)	88-16
88 000	Slow-moving Vehicle (SMV) Sign Kit	88-17
55 000	Warning Light (Rotary Beacon)	88-18
55 000	Warning Lights (Four-way Flashers/Turn Signal/Horn)	88-21

SECTION 90 - PLATFORMS, CAB, BODYWORK, AND DECALS

BOOK 4 - 87036981

Chapter 1 - Cab and Seat

CONTENTS

Section	Description	Page
	General Information	90-2
	Seat and Seat Pan Support	90-2
90 120 10	Seat Removal	90-4
90 120 12	Seat Pan Support Removal	90-4
	Seat, Switch and Pan Reinstallation	90-6
90 108	Safety Decals	90-8

NEW HOLLAND CONSTRUCTION LS140 LS150

Section 00 -
General Information

Section 10 -
Engine

REPAIR MANUAL



NEW HOLLAND

LS140, LS150 REPAIR MANUAL CONTENTS



SECTION 00 - GENERAL INFORMATION

SECTION 10 - ENGINE

SECTION 29 - HYDROSTATIC TRANSMISSION

SECTION 33 - BRAKES AND CONTROLS

SECTION 35 - HYDRAULIC SYSTEM

SECTION 37 - TOWING HOOKS AND BALLASTING

SECTION 39 - FRAMES

SECTION 44 - AXLES AND WHEELS

SECTION 50 - CAB CLIMATE CONTROL

SECTION 55 - ELECTRICAL SYSTEM

SECTION 82 - FRONT LOADER (BOOM AND MOUNTING PLATE)

SECTION 88 - ACCESSORIES

SECTION 90 - PLATFORMS, CAB, BODYWORK, AND DECALS

The sections used through out all New Holland product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the LS140, LS150 Skid Steer.

SECTION 00 - GENERAL INFORMATION

CONTENTS

Section	Description	Page
	Introduction	2
	About Improvements	2
	Company Policy	3
	Parts and Accessories	3
	Model Codes	3
	Precautionary Statements	4
	Safety Precaution Information	5
	General Safety Information	7
	Machine Model and Serial Number Location	9
	Engine Model and Serial Number Location	9
	Hardware Torque Specifications	10
	Installation of Adjustable Fittings in Straight Thread O Ring Bosses	12
	Standard Torque Data for Hydraulic Tubes and Fittings	12
	Pipe Thread Fitting Torque	13
	Lubricants and Coolants	13
	Sealants	13
	Properly Support a Raised Machine	14
	Properly Support Boom on Boom Lock Pins	14
	Raising Boom Without Hydraulic Oil Flow	14
	Raising Boom Without Battery Voltage (12V)	15
	Reattaching Cylinders After Repair with Boom Resting on Boom Lock Pins	17
	Major Unit Overhaul	18
	Cab and Boom Tilt Procedure	19
	Craning the Skid Steer	26
	Special Tools	29
	Specifications	30
	Dimensions	33

INTRODUCTION

This service manual provides the technical information needed to properly service and maintain the Models LS140 and LS150 skid steers. Use it in conjunction with the operator's manual which is supplied with the skid steer. Keep both manuals available for ready reference.

The LS140 and LS150 have many similarities with the major differences being engine horsepower and lifting capacity.

Whenever working on New Holland equipment, left and right sides of the machine are determined by standing behind the unit, looking in the direction of travel.

The easiest and least time-consuming removal, disassembly, and reassembly procedures are detailed in the manual. Modifying these procedures is not recommended.

New Holland skid steers are designed with emphasis on safety for operator protection. However, careless and negligent operation can still result in serious injury to persons or damage to property. Be sure to read and follow all safety instructions in this manual.

Your New Holland dealer is interested in your obtaining the most from your investment and will be glad to answer any questions you may have about your skid steer. When major service is required, your dealer's staff of trained service technicians is ready to serve you.

When in need of parts, always order genuine New Holland service parts from your New Holland dealer. Be prepared to give your dealer the model and serial number of the engine and skid steer (the location of these numbers is described later in this section). Record the serial numbers here.

Skid Steer Model _____

Skid Steer Serial Number _____

Engine Model _____

Engine Serial Number _____

CAUTION

This symbol is used throughout this book whenever your own personal safety is involved. Take time to be careful!

ABOUT IMPROVEMENTS

New Holland is continually striving to improve its products. We must, therefore, reserve the right to make improvements or changes when it becomes practical and possible to do so, without incurring any obligation to make changes or additions to the equipment sold previously.

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE.

COMPANY POLICY

Company policy, which is one of continuous improvement, reserves the right to make changes in design and specifications at any time without notice and without obligation to modify units previously built.

All data given in this book is subject to production variations. Dimensions and weights are approximate only and the illustrations do not necessarily show skid steers in standard condition.

PARTS AND ACCESSORIES

Genuine NEW HOLLAND parts and accessories have been specifically designed for NEW HOLLAND MACHINES.

We would like to point out that "NON-GENUINE" parts and accessories have not been examined and released by NEW HOLLAND. The installation and or use of such products could have negative effects upon the design characteristics of your machine and thereby affect its safety. NEW HOLLAND is not liable for any damage caused by the use of "NON-GENUINE" NEW HOLLAND parts and accessories.

MODEL CODES

The range of Skid Steers described in this manual is identified in the text by the engine horsepower Pferdestarke. (PS). The skid steers listed below may not be available in all countries or markets.

ENGINE	PS	MODEL
N843	30	LS140
N843H	36	LS150

PRECAUTIONARY STATEMENTS

PERSONAL SAFETY

Throughout this manual and on machine decals, you will find precautionary statements (“**CAUTION**”, “**WARNING**”, and “**DANGER**”) followed by specific instructions. These precautions are intended for the personal safety of you and those working with you. Please take the time to read them.

⚠ CAUTION ⚠

The word “**CAUTION**” is used where a safe behavioral practice according to operating and maintenance instructions and common safety practices will protect the operator and others from accident involvement.

⚠ WARNING ⚠

The word “**WARNING**” denotes a potential or hidden hazard which has a potential for serious injury. It is used to warn operators and others to exercise every appropriate means to avoid a surprise involvement with machinery.

⚠ DANGER ⚠

The word “**DANGER**” denotes a forbidden practice in connection with a serious hazard.

FAILURE TO FOLLOW THE “**CAUTION**”, “**WARNING**”, AND “**DANGER**” INSTRUCTIONS MAY RESULT IN SERIOUS BODILY INJURY OR DEATH.

MACHINE SAFETY

Additional precautionary statement (“**IMPORTANT**”) is followed by specific instructions. This statement is intended for machine safety.

IMPORTANT: *The word “**IMPORTANT**” is used to inform the reader of something he needs to know to prevent minor machine damage if a certain procedure is not followed.*

SAFETY PRECAUTION INFORMATION

▲ CAUTION ▲

Unsafe operating practices and improper use of the skid steer and its attachments on the part of the operator can result in injuries. Observe the following safety precautions at all times:

1. For servicing, the skid steer should be on level terrain, engine stopped with the wheels blocked or the entire skid steer solidly supported with the wheels off the ground before servicing any component of the drivetrain.
2. For servicing under the operator's seat, raise the seat and pan assembly to the raised latched position and securely latch.
3. Do not operate the skid steer unless the seat is latched in the operate position.
4. Do not service the skid steer with a raised boom unless the boom is resting on the boom lock pins.
5. Do not service the skid steer with the engine running unless the skid steer is properly and securely supported with all four wheels off the ground.
6. Use caution when servicing the unit around moving parts.
7. Do not tilt the boom and cab without proper instruction.
8. Do not tilt the boom and cab without using the proper cab tilting tool.
9. Reinstall all shields removed for service.
10. Never loosen any hydraulic connections before relieving the pressure in the hydraulic system.
11. Wear eye protection such as goggles, etc.
12. Wear ear protection such as earplugs, etc. When you feel the noise level is uncomfortable.
13. If any servicing or adjustments require the battery to be disconnected, disconnect the (-) negative ground cable.
14. When servicing electrical components, disconnect the (-) negative ground cable.
15. If the electronic instrument cluster (EIC) requires removal from the dash area of the skid steer, disconnect the (-) negative ground battery cable. this will shut off power

to the eic and prevent damage to the eic board or blowing the 5-amp fuses if the board is accidentally grounded.

16. If welding is required on the skid steer, disconnect the (-) negative ground cable. Failure to disconnect the battery may result in damage to the EIC (electronic instrument cluster) monitoring system and other electrical components.
17. If welding is required on an attachment, remove the attachment from the skid steer.
18. Give complete and undivided attention to the job at hand so that complete control of the skid steer is maintained at all times.
19. Drive slowly over rough ground and on slopes; keep alert for holes, ditches and other irregularities that may cause the skid steer to overturn.
20. Avoid steep hillside operation which could cause the skid steer to overturn.
21. Never transport a loaded bucket at full height. Operate the skid steer with the load as low as possible until it becomes necessary to raise the boom to discharge the load into a truck, container, etc.
22. Reduce speed when turning so there is no danger of the skid steer overturning.
23. Never drive up or back up a hill or incline with a raised boom or the skid steer could overturn.
24. Always look behind you before backing up the skid steer.
25. Maintain proper transmission oil level to prevent loss of hydrostatic braking.
26. Do not allow passengers to ride on the skid steer at any time.
27. Do not allow children to operate the skid steer or ride on the skid steer at any time.
28. Do not allow anyone to operate the skid steer without proper instruction. OSHA requires that all operators be instructed on the proper operation of the machine before they operate the unit.
29. Do not operate the skid steer in any position other than while in the operator's seat with the seat belt securely fastened.

30. Before starting the engine, be sure that all operating controls are in neutral and the parking brake is engaged.
31. Never operate the skid steer engine in a closed building without adequate ventilation.
32. Refuel the skid steer outdoors with the engine shut off. replace the fuel cap securely. Use an approved fuel container. Do not smoke when handling fuel. Avoid spilling fuel.
33. After operating the engine, never touch the muffler, exhaust pipe, engine or radiator until they have had time to cool.
34. Dress appropriately - wear relatively tight-fitting clothing when operating the skid steer. Loose or torn clothing can catch in moving parts or controls.
35. Before servicing the skid steer, or any of its attached equipment, be sure that the attachments are lowered to the ground or that the boom arms are supported by the boom lock pins.
36. Do not work under overhangs, electric wires, or where there is danger of a slide.
37. Wear an approved safety hat when operating the machine and while in any work area.
38. When driving the skid steer on a road or highway, use warning lights or warning devices as may be required by local or state government regulations. headlights, warning lights and smv signs are available through your new holland dealer.
39. Keep the skid steer clean. do not allow trash, debris or other articles to accumulate in the cab, floor or foot control pedal area that may hinder safe machine operation.
40. Never operate the skid steer with any of the shielding removed.
41. Never operate the skid steer without windows and/or screens in place.
42. Never extend any part of the body outside of the operator's area.
43. Always properly tie down the skid steer to a truck or trailer before transport.
44. Make sure all bystanders are at a safe distance away from the skid steer before starting the engine.
45. Do not allow anyone near the skid steer while the engine is running and the skid steer is operational.
46. When using the skid steer to crane objects, do not allow anyone to ride on objects being craned.
47. Do not use the skid steer as a work platform for supporting materials.
48. Do not lift personnel or allow personnel to work while standing in the bucket or on other attachments. This is not a man-lift.

OSHA requirements now make it the employer's responsibility to fully instruct each operator in the proper and safe operation of all operative equipment. Both employer and employee should thoroughly familiarize themselves with the following sections.

————— **CAUTION** —————

Some pictures in this manual show safety shields removed or open to show parts being serviced or for clarity. All shields should be closed or replaced prior to operating the machine.

————— **DANGER** —————

Fasten seat belt before starting engine!
This skid steer is a very stable unit but it can be upset if stopped suddenly when the bucket is raised and loaded.
Therefore, do not start the engine before securely fastening the seat belt, and carry the load low.

GENERAL SAFETY INFORMATION**HANDLE FLUIDS SAFELY**

When you work around fuel or other flammable material, do not smoke or work near heaters or other fire hazards.

Do not store flammable material in open containers.

Store flammable fluids away from fire hazards.

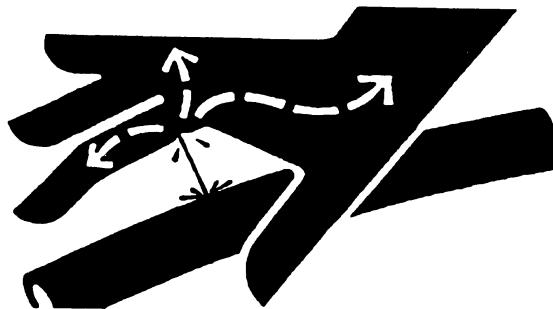
Do not incinerate or puncture pressurized containers.

Make sure machine is clean of dirt, grease, oil, and debris.

Do not store oily rags; they can ignite and burn spontaneously.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

**USE CARE AROUND HIGH-PRESSURE FLUID LINES**

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines.

Tighten all line connections before applying pressure.

Check for leaks with a piece of cardboard.

Protect hands and body from high-pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source.

AVOID HEATING NEAR PRESSURIZED FLUID LINES

Flammable spray can be generated by heating near pressurized fluid lines, resulting in severe burns to yourself and bystanders.

Do not heat by welding, soldering, or using a torch near pressurized fluid lines.

Pressurized lines can be accidentally cut or damaged when heat goes beyond the immediate flame area.

USE CARE IN HANDLING AND SERVICING BATTERIES**Prevent Battery Explosions**

Keep sparks, lighted matches, and open flame away from the top of the battery. Battery gas can explode.

Never check battery charge by placing a metal object across the posts. Use a voltmeter or hydrometer.

Do not charge a frozen battery; it may explode. Warm the battery to 16° C (60° F).

⚠ WARNING ⚠

If any servicing or adjustments require the battery to be disconnected, or welding is required on the skid steer, disconnect the (-) negative ground cable. Failure to disconnect the battery may result in damage to the eic (electronic instrument cluster) monitoring system and other electrical components.

If welding on an attachment is required, first remove the attachment from the skid steer boom attaching plate.