

Please cut where indicated and insert the label into the plastic pocket on the spine of the binder.



LS160, LS170 REPAIR MANUAL

COMPLETE CONTENTS

SECTION 00 - GENERAL INFORMATION	2
SECTION 10 - ENGINE	3
SECTION 27 - REAR DRIVE AXLE (GEARBOXES)	7
SECTION 29 - HYDROSTATIC TRANSMISSION	8
SECTION 33 - BRAKES AND CONTROLS	10
SECTION 35 - HYDRAULIC SYSTEM	10
SECTION 37 - TOWING HOOKS AND BALLASTING	12
SECTION 39 - FRAMES	13
SECTION 44 - AXLES AND WHEELS	13
SECTION 50 - CAB CLIMATE CONTROL	14
SECTION 55 - ELECTRICAL SYSTEM	14
SECTION 82 - FRONT LOADER (BOOM AND MOUNTING PLATE)	19
SECTION 88 - ACCESSORIES	20
SECTION 90 - PLATFORMS, CAB, BODYWORK, AND DECALS	21

The following pages are the collation of the contents pages from each section and chapter of the LS160, LS170 Repair manual. Complete Repair part # 87036983.

The sections used through out all New Holland product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the LS160, LS170 Skid Steer.

SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87042552

CONTENTS

Section	Description	Page
	Introduction	2
	About Improvements	2
	Company Policy	3
	Parts and Accessories	3
	Model Codes	3
	Precautionary Statements	4
	Safety Precaution Information	5
	General Safety Information	7
	Machine Model and Serial Number Location	9
	Engine Model and Serial Number Location	9
	Hardware Torque Specifications	10
	Installation of Adjustable Fittings in Straight Thread O Ring Bosses	12
	Standard Torque Data for Hydraulic Tubes and Fittings	12
	Pipe Thread Fitting Torque	13
	Lubricants and Coolants	13
	Sealants	13
	Properly Support a Raised Machine	14
	Properly Support Boom on Boom Lock Pins	14
	Raising Boom Without Hydraulic Oil Flow	14
	Raising Boom Without Battery Voltage (12V)	16
	Reattaching Cylinders After Repair with Boom Resting on Boom Lock Pins	17
	Major Unit Overhaul	18
	Cab and Boom Tilt Procedure	19
	Craning the Skid Steer	25
	Special Tools	28
	Specifications	29
	Dimensions	35

SECTION 10 - ENGINE

BOOK 1 - 87042552

Chapter 1 - LS160 - N844 (Before Engine S/N 124735) LS170 - N844T (All)

CONTENTS

Section	Description	Page
10 000	General Engine Information	3
	General Description	3
	Engine Component Descriptions	3
	Engine Model and Serial Number Location	5
	Turbocharger Lubrication	5
	Safety Precautions	6
	General Engine Specifications	7
	Troubleshooting	11
	LS170 - Excessive Oil Consumption	15
	Specifications - Service Standards	17
	Torque Specifications	21
	Engine Components Electrical Diagram	22
10 001 10	Engine Removal	23
10 001 53	Engine Disassembly Sequence	28
	Engine Component Maintenance	36
10 101 55	Valve Seat	39
10 101 56	Cylinder Block	41
10 105 22	Piston and Piston Rings	42
	Connecting Rod	45
10 103 10	Bearing Holder	47
	Crankshaft Bearing (Bushing)	48
10 103 30	Crankshaft	50
10 103 76	Flywheel and Ring Gear	52
10 106 40	Camshaft Assembly	52
10 106 66	Camshaft Gear and Bearing Assembly	53
	Timing Gear	53
10 304 41	Oil Pump	54
10 304 10	Oil Filter	56
10 402 28	Water Pump Assembly and Thermostat Housing	56
10 402 30	Thermostat	56
10 230 24	Governor	58
	Governor Operation	60

SECTION 10 - ENGINE

BOOK 1 - 87042552

Chapter 1 - LS160 - N844 (Before Engine S/N 124735) LS170 - N844T (All) (Continued)

CONTENTS

Section	Description	Page
10 304 38	Engine Reassembly Sequence	62
	Crankshaft and Bearing Holder Assembly	63
	Rear Oil Seal	63
	Backplate/Flywheel Housing	64
	Flywheel	64
	Piston and Connecting Rod	65
	Oil Intake and Oil Strainer	65
	Oil Sump	65
	Dipstick and Tube	65
	Front Plate	65
	Idler Gear and Oil Pump Assembly	65
	Timing Gear Case Installation	67
	Crankshaft Pulley	67
	Injection Pump Installation	67
	Adjusting the Fuel Injection Timing	68
	Spill Timing Procedure	69
29 100 50	Reinstallation of Engine into Skid Steer Frame	76
	How to Operate the Engine After Overhaul	78
	Cooling System	79
	Cooling System Operation	79
	Water Pump Assembly and Thermostat Housing	80
	Radiator	81
	Fuel System	82
	Fuel Specifications	82
	Diesel Fuel	82
	Diesel Fuel Storage	83
	Fuel System Components	83
	Fuel Gauge	84
	Cold Start Aid	85
	Fuel Filter System	85
	Priming the Fuel System	86

SECTION 10 - ENGINE

BOOK 1 - 87042552

Chapter 1 - LS160 - N844 (Before Engine S/N 124735) LS170 - N844T (All) (Continued)

CONTENTS

Section	Description	Page
	Fuel System Testing	87
	Fuel System Components	90
10 236 08	Fuel Injection Timing	96
	Turbocharger - LS170 N844T Engine	101
10 250 30	Turbocharger Removal	103
	Miscellaneous Engine Electrical	116
10 223 10	Shut-off Solenoid	117
	Special Tools	119

SECTION 10 - ENGINE

BOOK 1 - 87042552

Chapter 2 - LS160 - N844 (Tier II Engine, S/N 124735 and after)

CONTENTS

Section	Description	Page
10 000	General Engine Information	3
	General Description	3
	Engine Component Descriptions	3
	Engine Model and Serial Number Location	5
	Safety Precautions	6
	General Engine Specifications	7
	Troubleshooting	9
	Specifications - Service Standards	13
	Torque Specifications	17
	Engine Components Electrical Diagram	18
10 001 10	Engine Removal	19
10 001 53	Engine Disassembly Sequence	24
	Engine Component Maintenance	32
10 101 55	Valve Seat	35
10 101 56	Cylinder Block	37

SECTION 10 - ENGINE

BOOK 1 - 87042552

Chapter 2 - LS160 - N844 (Tier II Engine, S/N 124735 and after) (Continued)

CONTENTS

Section	Description	Page
10 105 22	Piston and Piston Rings	37
	Connecting Rod	40
10 103 10	Bearing Holder	42
	Front Crankshaft Bearing (Bushing)	43
10 103 30	Crankshaft	45
10 103 76	Flywheel and Ring Gear	47
10 106 40	Camshaft Assembly	47
10 106 66	Camshaft Gear and Bearing Assembly	48
	Timing Gear	48
10 304 41	Oil Pump	49
10 304 10	Oil Filter	51
10 402 28	Water Pump Assembly and Thermostat Housing	51
10 402 30	Thermostat	51
10 230 24	Governor	53
	Governor Operation	55
10 304 38	Engine Reassembly Sequence	57
	Crankshaft and Bearing Holder Assembly	58
	Rear Oil Seal	58
	Backplate/Flywheel Housing	59
	Flywheel	59
	Piston and Connecting Rod	59
	Oil Intake and Oil Strainer	60
	Oil Sump	60
	Dipstick and Tube	60
	Front Plate	60
	Idler Gear and Oil Pump Assembly	60
	Timing Gear Case Installation	62
	Crankshaft Pulley	62
	Injection Pump Installation	62
	Adjusting the Fuel Injection Timing	63
29 100 50	Reinstallation of Engine into Skid Steer Frame	67
	How to Operate the Engine After Overhaul	69
	Cooling System	70

SECTION 10 - ENGINE

BOOK 1 - 87042552

Chapter 2 - LS160 - N844 (Tier II Engine, S/N 124735 and after) (Continued)

CONTENTS

Section	Description	Page
	Cooling System Operation	70
	Water Pump Assembly and Thermostat Housing	71
	Radiator	72
	Fuel System	74
	Fuel Specifications	74
	Diesel Fuel	74
	Diesel Fuel Storage	74
	Fuel System Components	75
	Fuel Guage	76
	Cold Start Aid	77
	Fuel Filter System	77
	Priming the Fuel System	78
	Fuel System Testing	79
	Fuel System Components	82
10 223 10	Shut-off Solenoid	90
	Special Tools	92

SECTION 27 - REAR DRIVE AXLE (GEARBOXES)

BOOK 2 - 87036985

Chapter 1 - Gearboxes

CONTENTS

Section	Description	Page
27 000	General Information	27-2
	Specifications	27-4
	Troubleshooting	27-5
	Testing	27-7
27 126	Gearboxes	27-8
27 126 40	Gearbox Removal and Inspection	27-8
27 126 48	Gearbox Disassembly	27-12
	Gearbox Parts Inspection	27-13
	Gearbox Resassembly	27-14
27 126 40	Gearbox Resinstallation	27-16

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87036985

Chapter 1 - Neutralizer, Pumps, Motors

CONTENTS

Section	Description	Page
29 100	General Information	29-3
	Operation	29-3
	Specifications	29-5
29 100 01	Troubleshooting	29-6
	Hydrostatic Drive System Testing	29-8
	Hydrostatic System Oil Flow	29-11
	Hydrostatic Charge System Pressure Test	29-14
	Hydrostatic Pump Case Drain Test	29-15
	Hydrostatic Pump High Pressure Test	29-18
	Hydrostatic Pump Efficiency Test	29-20
	Hydrostatic Motor Case Drain Test	29-22
	Hydrostatic Motor Efficiency Test	29-23
	Hydraulic, Hydrostatic System Air Ingress Test	29-25
	Hydrostatic Pumps	29-27
29 100 40	Hydrostatic Pump Removal	29-27
29 100 46	Hydrostatic Pump Disassembly	29-31
	Hydrostatic Pump Parts Inspection	29-36
	Hydrostatic Pump Reassembly	29-41
	Hydraulic System Pump Installation (Without High Flow)	29-47
	Hydraulic System Pump/High Flow Pump Installation	29-49
	Hydrostatic Pump Reinstallation	29-54
	Hydrostatic Motor	29-58
29 100 60	Hydrostatic Motor Removal	29-58
29 100 66	Hydrostatic Motor Disassembly	29-62
	Hydrostatic Motor Parts Inspection	29-67
	Hydrostatic Motor Reassembly	29-70
	Hydrostatic Motor Reinstallation	29-79
	Hydraulic System Cleaning Procedure	29-85
	Start-up Procedure After Rebuild (After Pump or Motor Replacement)	29-88
	Charge Check Valve	29-90
29 100 36	Charge Check Valve Removal and Replacement	29-90

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87036985

Chapter 1 - Neutralizer, Pumps, Motors (Continued)

CONTENTS

Section	Description	Page
29 100	Steering System	29-91
	Hydrostatic System Controls	29-91
29 130 30	Neutralizer Assembly	29-93
	Left Control Handle With No Boom Hand Control	29-97
29 100 10	Left Control Handle With No Boom Hand Control Removal	29-97
29 100 10	Left Control Handle With No Boom Hand Control Disassembly	29-97
	Left Control Handle With No Boom Hand Control Inspection	29-98
	Left Control Handle With No Boom Hand Control Reassembly	29-98
	Left Control Handle With No Boom Hand Control Reinstallation	29-98
29 100 11	Left Control Handle With Boom Hand Control	29-100
	Left Control Handle With Boom Hand Control Removal	29-100
29 100 10	Left Control Handle With Boom Hand Control Disassembly	29-101
	Left Control Handle With Boom Hand Control Inspection	29-102
	Left Control Handle With Boom Hand Control Reassembly	29-103
	Left Control Handle With Boom Hand Control Reinstallation	29-104
	Right Control Handle With Auxiliary or Bucket Control	29-106
29 100 15	Right Control Handle With Auxiliary or Bucket Control Removal	29-106
29 100 15	Right Control Handle With Auxiliary or Bucket Control Disassembly	29-107
	Right Control Handle With Auxiliary or Bucket Control Inspection	29-109
	Right Control Handle With Auxiliary or Bucket Control Reassembly	29-110
	Right Control Handle With Auxiliary or Bucket Control Reinstallation	29-113
29 130 06	Drive Control Adjustment Procedure	29-115
29 130 06	Neutral Adjustment	29-116

SECTION 33 - BRAKES AND CONTROLS

BOOK 2 - 87036985

Chapter 1 - Parking Brake

CONTENTS

Section	Description	Page
33 000	General Information	33-2
	Specifications	33-4
	Troubleshooting	33-5
	Testing	33-7
33 110	Parking Brake	33-8
	Parking Brake Removal and Inspection	33-9

SECTION 35 - HYDRAULIC SYSTEM

BOOK 3 - 87036986

Chapter 1 - Valves, Gear Pump, Cylinders, and Pedal Controls

CONTENTS

Section	Description	Page
35 000	General Information	35-3
	Hydraulic System Compatibility	35-4
	Boom Cylinder Pivot Pins	35-6
	Boom Cylinder Pivot Pin Location and Machine Usage	35-6
	Control Valve Power Beyond	35-7
	Specifications	35-8
	Troubleshooting	35-12
	Auxiliary Boom Hydraulics Troubleshooting	35-16
	Hydraulic System Testing	35-18
	Hydraulic System Oil Flow	35-24
	Control Valve - Bucket Spool Shifted	35-25
	Control Valve - Boom Spool Shifted	35-26
	Control Valve - Auxiliary Spool Shifted	35-27
35 710 02	Main System Pressure Tests	35-28
	Checking Main System Pressure at Boom Cylinders	35-30
	Checking Main System Pressure at Bucket Cylinders	35-31

SECTION 35 - HYDRAULIC SYSTEM

BOOK 3 - 87036986

Chapter 1 - Valves, Gear Pump, Cylinders, and Pedal Controls (Continued)

CONTENTS

Section	Description	Page
	Checking Main System Pressure at Auxiliary Boom Hydraulic Quick Couplers	35-32
	Boom Circuit Relief Valve Test	35-33
	Gear Pump Flow Efficiency Test	35-35
	Boom and Bucket Spool Lock Solenoid Test	35-39
	Hydraulic, Hydrostatic System Air Ingress Test	35-41
	Control Valve Specifications	35-43
35 724 50	Control Valve Removal	35-44
35 724 54	Control Valve Disassembly and Inspection	35-45
	Control Valve Parts Inspection	35-49
	Control Valve Reassembly	35-50
	Control Valve Reinstallation	35-53
	Hydraulic Pump Specifications	35-54
35 710 10	Hydraulic Pump Removal	35-55
35 710 20	Hydraulic System Pump Removal/Disassembly (Without High Flow)	35-56
35 710 20	Hydraulic System Pump and High Flow Removal/Disassembly	35-56
	High Flow Pump Parts Inspection	35-58
	Hydraulic System Pump Parts Inspection	35-59
	Hydraulic System Pump Reassembly/Installation (Without High Flow)	35-61
	Hydraulic System Pump and High Flow Pump Reassembly/Installation	35-64
	New Hydraulic System Pump Installation (Without High Flow)	35-70
	New Hydraulic System Pump/High Flow Pump Installation	35-72
	Gear Pump Start-Up Procedure	35-78
	Cylinders, Boom and Bucket	35-79
35 710 10	Boom Cylinder Removal	35-81
35 730 18	Boom Cylinder Disassembly	35-83
	Boom Cylinder Parts Inspection	35-84
	Boom Cylinder Reassembly	35-85
	Boom Cylinder Reinstallation	35-87
35 730 10	Bucket Cylinder Removal	35-87
35 730 13	Bucket Cylinder Disassembly	35-88
	Bucket Cylinder Parts Inspection	35-89
	Bucket Cylinder Reassembly	35-90

SECTION 35 - HYDRAULIC SYSTEM

BOOK 3 - 87036986

Chapter 1 - Valves, Gear Pump, Cylinders, and Pedal Controls (Continued)

CONTENTS

Section	Description	Page
	Bucket Cylinder Reinstallation	35-92
	Pedal Controls	35-93
35 724 16	Pedal Removal (With Boom and Bucket Pedal Controls)	35-93
	Pedal Inspection (With Boom and Bucket Pedal Controls)	35-93
	Pedal Reinstallation (With Boom and Bucket Pedal Controls)	35-95
35 724 16	Pedal Removal (With Boom and Bucket Hand Controls)	35-98
	Pedal Inspection (With Boom and Bucket Hand Controls)	35-99
	Pedal Reinstallation (With Boom and Bucket Hand Controls)	35-100
35 300	Hydraulic Cooling, Filter, Reservoir System	35-103
35 705	Filter System	35-104
35 705 04	Filter Removal	35-104
35 705 05	Base Removal	35-104
	Reassembly	35-105
	Oil Cooler	35-105
35 300 10	Oil Cooler Removal	35-105
	Oil Cooler Reassembly	35-106
35 300	Oil Reservoir	35-106
35 300 10	Oil Reservoir Removal	35-107
	Oil Reservoir Reinstallation	35-108
	Adapting Attachments	35-109

SECTION 37 - TOWING HOOKS AND BALLASTING

BOOK 3 - 87036986

Chapter 1 - Rear Counterweights

CONTENTS

Section	Description	Page
37 140 10	Rear Counterweights	37-2
37 140 12	Rear Counterweight Support Removal	37-2

SECTION 39 - FRAMES

BOOK 3 - 87036986

Chapter 1 - Lower Main, ROPS

CONTENTS

Section	Description	Page
	General Information	39-2
	ROPS	39-2
	ROPS Frame	39-2
90 152 46	ROPS Removal	39-2
	ROPS Reinstallation	39-8

SECTION 44 - AXLES AND WHEELS

BOOK 3 - 87036986

Chapter 1 - Axles

CONTENTS

Section	Description	Page
44 100	General Information	44-2
	Specifications	44-4
	Troubleshooting	44-5
	Testing	44-7
44 106	Axles	44-8
44 106 10	Axle Housing Assembly Removal	44-8
44 106 16	Axle Disassembly	44-9
	Axle Parts Inspection	44-11
	Axle Reassembly	44-12
	Axle Housing Reinstallation	44-14
	Final Drive	44-15
44 106 48	Drive Chain and Sprocket Removal	44-15
	Final Drive Parts Inspection	44-19
	Final Drive Reassembly	44-20
44 511	Tires/Wheels	44-22
	Tire and Track Installation	44-23

SECTION 50 - CAB CLIMATE CONTROL

BOOK 3 - 87036986

Chapter 1 - Heater/Defroster

CONTENTS

Section	Description	Page
50 100	Heater/Defroster (Cab)	50-2
	Evaluation Procedure	50-10
	Estimated Performance Guidelines	50-10
	Heater/Defroster System Troubleshooting	50-11
	Cab Heater/Defroster Wire Schematic	50-20
	Heater Control Wire Diagram	50-20

SECTION 55 - ELECTRICAL SYSTEM

BOOK 4 - 87036987

Chapter 1 - Advanced Warning System, Circuits, Alternator, and Starter

CONTENTS

Section	Description	Page
55 000	General Electrical Information	55-6
	Definition of Terms	55-7
	Adapting Attachments Requiring 12V Electrical Power	55-9
	Specifications	55-12
	Electrical Diagram	55-15
55 418	Advanced Warning System	55-19
	Electronic Instrument Cluster (EIC)	55-19
	(EIC) Electronic Instrument Cluster Front Panel	55-20
	EIC Functional Groups	55-21
	Engine Preheat	55-26
	Automatic Shutdown	55-26
	Operating Mode	55-27
	Broken Alternator/Water Pump Belt Warning	55-29
	Fuel Level	55-30

SECTION 55 - ELECTRICAL SYSTEM

BOOK 4 - 87036987

Chapter 1 - Advanced Warning System, Circuits, Alternator, and Starter (Continued)

CONTENTS

Section	Description	Page
	EIC Interlocks	55-30
	EIC Lock Mode	55-31
	EIC Engine Preheat	55-32
	Troubleshooting	55-33
	Advanced Warning System (AWS)	55-36
	EIC Board Self Test	55-37
	Diagnostic and Setup Modes	55-38
	Arrow, Open Book, and Audible Alarm Test	55-40
	Diagnostic Mode EIC Circuit Tests	55-40
	EIC Setup Mode	55-44
	Electronic Instrument Cluster (EIC) and Starter Circuits	55-52
	Blown Fuse Symptom and Testing	55-52
	Testing Other EIC Functions	55-54
	EIC Board Reading Accuracy	55-57
	EIC Board Claims Warranty	55-59
	Electrical Circuits	55-60
	Seat Switch Circuit to EIC Board	55-61
	Seat Belt Switch Circuit to EIC Board	55-62
	Ignition Switch Circuit to EIC Board	55-63
	Cranking Circuit (Starter Motor)	55-64
	“Service/Run” Switch in the “Run” Position	55-65
	Cranking Circuit Ground	55-66
	Operating Conditions “Service/Run” Switch in the “Service” position	55-66
	Service/Run” Switch in the “Service” position	55-67
	Cranking Circuit Ground	55-68
	Start Relay Operation	55-68
	Start Relay Circuit	55-69
	Start Relay Ground Circuit	55-70
	Start Interlock Relay Operation	55-70
	Start Interlock Circuit	55-71
	Start Interlock Ground Circuit	55-72

SECTION 55 - ELECTRICAL SYSTEM

BOOK 4 - 87036987

Chapter 1 - Advanced Warning System, Circuits, Alternator, and Starter (Continued)

CONTENTS

Section	Description	Page
	Start Circuit	55-72
55 100	Removal, Installation and Wiring of Electrical Components	55-73
	Battery	55-74
55 301 40	Battery Removal	55-74
	Battery Installation	55-74
55 418 10	EIC (Electronic Instrument Cluster) Board Removal	55-75
	EIC (Electronic Instrument Cluster) Wiring	55-76
	EIC (Electronic Instrument Cluster) Board Installation	55-77
	Ignition (Key) Switch Wiring	55-78
55 201 10	Ignition (Key) Switch Removal	55-78
	Ignition (Key) Switch Installation	55-78
	Cab Fuse Panel Wiring	55-79
	Cab Fuse Block and Panel Removal	55-80
	Cab Fuse Block and Panel Installation	55-80
	Service/Run Switch Wiring	55-81
	Service/Run Switch - Service Position	55-81
	Service/Run Switch - Run Position	55-81
55 418 30	Service/Run Switch Removal	55-82
	Service/Run Switch Installation	55-82
	Seat and Seat Belt Switch Wiring	55-83
55 201 15	Seat Switch Removal	55-83
	Seat Switch Installation	55-84
	Seat Belt Buckle and Switch Assembly Removal	55-84
	Seat Belt Buckle Installation	55-84
	Road Light and Work Light Switch Wiring	55-85
55 404 20	Road Light and Work Light Switch Removal	55-86
	Road Light and Work Light Switch Installation	55-86
	Engine Fuse and Relay Panel	55-87
	Accessory Relay Wiring	55-88
	Accessory Relay Removal	55-88
	Accessory Relay Installation	55-88

SECTION 55 - ELECTRICAL SYSTEM

BOOK 4 - 87036987

Chapter 1 - Advanced Warning System, Circuits, Alternator, and Starter (Continued)

CONTENTS

Section	Description	Page
	Preheat Circuit Breaker Wiring	55-89
55 100 24	Preheat Circuit Breaker Removal	55-89
	Preheat Circuit Breaker Installation	55-89
	Start Interlock Relay Wiring	55-90
55 100 34	Start Interlock Relay Removal	55-91
	Start Interlock Relay Installation	55-91
	Engine Fuse Panel Wiring	55-92
	Engine Fuse Block Removal	55-93
	Engine Fuse Block Installation	55-93
	Alternator Excite Resistor Wiring	55-94
55 301 16	Alternator Excite Resistor Removal	55-94
	Alternator Excite Resistor Installation	55-94
	Start Relay Wiring	55-95
55 100 34	Start Relay Removal	55-95
	Start Relay Installation	55-95
	Preheat Relay Wiring	55-96
55 100 34	Preheat Relay Removal	55-97
	Preheat Relay Installation	55-97
	Preheat Glow Plug Removal	55-98
	Preheat Glow Plug Installation	55-98
	Fuel System Components	55-99
	Electric Fuel Pump	55-101
10 210 21	Electric Fuel Pump Removal	55-102
10 223	Fuel Shutoff Solenoid	55-102
	Fuel Shutoff Solenoid Testing	55-102
10 223 10	Replacement of Fuel Shutoff Solenoid	55-103
55 414 14	Air Filter Restriction Indicator Switch Removal	55-104
	Air Filter Restriction Indicator Switch Installation	55-104
55 414 10	Engine Coolant Temperature Sender Removal	55-104
	Engine Coolant Temperature Sender Installation	55-104
55 414 12	Engine Oil Pressure Switch Removal	55-105

SECTION 55 - ELECTRICAL SYSTEM

BOOK 4 - 87036987

Chapter 1 - Advanced Warning System, Circuits, Alternator, and Starter (Continued)

CONTENTS

Section	Description	Page
	Engine Oil Pressure Switch Installation	55-105
55 414 28	Hydrostatic Charge Pressure Switch Removal	55-105
	Hydrostatic Charge Pressure Switch Installation	55-105
55 414 24	Hydraulic Oil Filter Restriction Switch Removal	55-106
	Hydraulic Oil Filter Restriction Switch Installation	55-106
55 414 20	Hydraulic Oil Temperature Sender Removal	55-106
	Hydraulic Oil Temperature Sender Installation	55-107
	Boom/Bucket Control Valve Spool Lock Solenoids	55-108
35 724 90	Boom/Bucket Control Valve Spool Lock Solenoids Removal	55-108
	Boom/Bucket Control Valve Spool Lock Solenoids Installation	55-109
	Wire Harness	55-110
55 100 74	Main Wire Harness Removal	55-110
	Main Wire Harness Installation	55-115
55 404	Road/Work Lights	55-119
55 301	Alternator (40 Amp Version)	55-123
	Charging Circuit	55-123
	Alternator Service Specifications	55-125
	Alternator System Testing and Troubleshooting	55-126
55 301 10	Alternator Removal	55-130
55 301 12	Alternator Disassembly	55-131
	Alternator Reinstallation	55-138
55 201	Starter	55-139
	Starter Motor Troubleshooting	55-139
55 201 50	Starter Motor Removal	55-141
	Starter Motor Disassembly	55-146
	Starter Inspection and Repair	55-150
	Starter Reassembly	55-155
	Starter Reinstallation	55-159

SECTION 82 - FRONT LOADER (BOOM AND MOUNTING PLATE)

BOOK 4 - 87036987

Chapter 1 - Buckets

CONTENTS

Section	Description	Page
82 100	General Information	82-2
	Buckets	82-2
82 100 77	Boom Lock Pins and Linkage	82-3
	Boom	82-3
82 100 70	Attachment Mounting Plate	82-4
	Boom and Cylinder Pivot Pins	82-4
	Boom and Cylinder Pivot Pin Location and Machine Usage	82-4
	Boom and Cylinder Pivot Pins Size	82-5
82 100 30	Pallet Fork	82-6
82 100 20	Utility Fork	82-7
82 100 12	Bucket Cutting Edge (Replacement)	82-8
82 100	Bucket Latch Plate Installation Procedure	82-9
82 100	Dirt Tooth Kit Installation	82-11
	Bucket Tooth Spacing	82-13
	Boom Lock Pin/Linkage	82-15
82 100 77	Boom Lock Pin/Linkage Removal	82-15
	Boom Lock Pin/Linkage Reinstallation	82-16
	Boom, Upper and Lower Link	82-18
	Boom, Upper and Lower Link Removal	82-18
82 100 70	Front Boom Mounting Plate Pivot Hub Replacement	82-24
	Boom, Upper and Lower Link Reinstallation	82-25
	Attachment Mounting Plate	82-29
82 100 70	Attachment Mounting Plate Removal	82-29
	Repair/Rebuild Mounting Plate	82-30
82 100 74	Latch Lever and Pin Removal/Repair	82-30
	Attachment Mounting Plate Parts Inspection	82-32
	Checking Procedure for Buckets and Attachments	82-36
	Checking Procedure	82-38
	Checking the Loader Faceplate	82-39

SECTION 88 - ACCESSORIES

BOOK 4 - 87036987

Chapter 1 - Dealer Installed Options

CONTENTS

Section	Description	Page
88 100	General Information	88-2
	Adapting Attachments Requiring 12V Electrical Power	88-2
	Hydraulic System Compatibility	88-5
90 000	Arm Pads For Cab Side Panels	88-7
90 000	Armrests for Deluxe Seat	88-7
90 000	Forearm Rests	88-8
55 000	Back-up Alarm	88-9
10 300	Block Heater (Engine)	88-10
55 000	Electric Power Supply (12 Volt, 15 Amp)	88-11
10 254	Exhaust (Engine)	88-12
10 254	Aspirator Precleaner Muffler	88-12
35 000	High Flow Hydraulics	88-14
	High Flow Hydraulics Troubleshooting	88-16
	High Flow Hydraulics Component Replacement	88-18
55 000	Horn	88-25
90 000	Shoulder Belt (Seat)	88-26
88 000	Slow-moving Vehicle (SMV) Sign Kit	88-27
55 000	Warning Light (Rotary Beacon)	88-28
55 000	Warning Lights (Four-way Flashers/Turn Signal/Horn)	88-31

SECTION 90 - PLATFORM, CAB, BODYWORK, AND DECALS

BOOK 4 - 87036987

Chapter 1 - Cab and Seat

CONTENTS

Section	Description	Page
	General Information	90-2
	Seat and Seat Pan Support	90-2
90 152	Cab Inner Shell	90-3
90 120 10	Seat Removal	90-3
90 120 12	Seat Pan Support Removal	90-3
	Seat, Switch and Pan Reinstallation	90-5
	Cab Inner Shell	90-7
90 152 34	Cab Inner Shell Removal	90-7
90 152	Cab Inner Shell Reinstallation	90-14
90 108	Safety Decals	90-22

SECTION 00 - GENERAL INFORMATION

CONTENTS

Section	Description	Page
	Introduction	2
	About Improvements	2
	Company Policy	3
	Parts and Accessories	3
	Model Codes	3
	Precautionary Statements	4
	Safety Precaution Information	5
	General Safety Information	7
	Machine Model and Serial Number Location	9
	Engine Model and Serial Number Location	9
	Hardware Torque Specifications	10
	Installation of Adjustable Fittings in Straight Thread O Ring Bosses	12
	Standard Torque Data for Hydraulic Tubes and Fittings	12
	Pipe Thread Fitting Torque	13
	Lubricants and Coolants	13
	Sealants	13
	Properly Support a Raised Machine	14
	Properly Support Boom on Boom Lock Pins	14
	Raising Boom Without Hydraulic Oil Flow	14
	Raising Boom Without Battery Voltage (12V)	16
	Reattaching Cylinders After Repair with Boom Resting on Boom Lock Pins	17
	Major Unit Overhaul	18
	Cab and Boom Tilt Procedure	19
	Craning the Skid Steer	25
	Special Tools	28
	Specifications	29
	Dimensions	35

SECTION 00 - GENERAL INFORMATION

INTRODUCTION

This service manual provides the technical information needed to properly service and maintain the Models LS160 and LS170 skid steers. Use it in conjunction with the operator's manual which is supplied with the skid steer. Keep both manuals available for ready reference.

The L160 and L170 have many similarities with the major differences being engine horsepower and lifting capacity.

Whenever working on New Holland equipment, left and right sides of the machine are determined by standing behind the unit, looking in the direction of travel.

The easiest and least time-consuming removal, disassembly, and reassembly procedures are detailed in the manual. Modifying these procedures is not recommended.

New Holland skid steers are designed with emphasis on safety for operator protection. However, careless and negligent operation can still result in serious injury to persons or damage to property. Be sure to read and follow all safety instructions in this manual.

Your New Holland dealer is interested in your obtaining the most from your investment and will be glad to answer any questions you may have about your skid steer. When major service is required, your dealer's staff of trained service technicians is ready to serve you.

When in need of parts, always order genuine New Holland service parts from your New Holland dealer. Be prepared to give your dealer the model and serial number of the engine and skid steer (the location of these numbers is described later in this section). Record the serial numbers here.

Skid Steer Model _____

Skid Steer Serial Number _____

Engine Model _____

Engine Serial Number _____

_____  **CAUTION**  _____

This symbol is used throughout this book whenever your own personal safety is involved. Take time to be careful!

ABOUT IMPROVEMENTS

New Holland is continually striving to improve its products. We must, therefore, reserve the right to make improvements or changes when it becomes practical and possible to do so, without incurring any obligation to make changes or additions to the equipment sold previously.

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE.

COMPANY POLICY

Company policy, which is one of continuous improvement, reserves the right to make changes in design and specifications at any time without notice and without obligation to modify units previously built.

All data given in this book is subject to production variations. Dimensions and weights are approximate only and the illustrations do not necessarily show skid steers in standard condition.

PARTS AND ACCESSORIES

Genuine NEW HOLLAND parts and accessories have been specifically designed for NEW HOLLAND MACHINES.

We would like to point out that "NON-GENUINE" parts and accessories have not been examined and released by NEW HOLLAND. The installation and or use of such products could have negative effects upon the design characteristics of your machine and thereby affect its safety. NEW HOLLAND is not liable for any damage caused by the use of "NON-GENUINE" NEW HOLLAND parts and accessories.

MODEL CODES

The range of Skid Steers described in this manual is identified in the text by the engine horsepower Pferdestärke. (PS). The skid steers listed below may not be available in all countries or markets.

ENGINE	PS	MODEL
N844	40	LS160
N844T	50	LS170

PRECAUTIONARY STATEMENTS

PERSONAL SAFETY

Throughout this manual and on machine decals, you will find precautionary statements (“**CAUTION**”, “**WARNING**”, and “**DANGER**”) followed by specific instructions. These precautions are intended for the personal safety of you and those working with you. Please take the time to read them.

CAUTION

The word “**CAUTION**” is used where a safe behavioral practice according to operating and maintenance instructions and common safety practices will protect the operator and others from accident involvement.

WARNING

The word “**WARNING**” denotes a potential or hidden hazard which has a potential for serious injury. It is used to warn operators and others to exercise every appropriate means to avoid a surprise involvement with machinery.

DANGER

The word “**DANGER**” denotes a forbidden practice in connection with a serious hazard.

Failure to follow the “**CAUTION**”, “**WARNING**”, and “**DANGER**” instructions may result in serious bodily injury or death.

MACHINE SAFETY

Additional precautionary statement (“**IMPORTANT**”) is followed by specific instructions. This statement is intended for machine safety.

***IMPORTANT:** The word “IMPORTANT” is used to inform the reader of something he needs to know to prevent minor machine damage if a certain procedure is not followed.*

SAFETY PRECAUTIONS



Unsafe operating practices and improper use of the skid steer and its attachments on the part of the operator can result in injuries. Observe the following safety precautions at all times:

1. For servicing, the skid steer should be on level terrain, engine stopped with the wheels blocked or the entire skid steer solidly supported with the wheels off the ground before servicing any component of the drivetrain.
2. For servicing under the operator's seat, raise the seat and pan assembly up to the raised latched position and securely latch.
3. Do not operate the skid steer unless the seat is latched in the operate position.
4. Do not service the skid steer with a raised boom unless the boom is resting on the boom lock pins.
5. Do not service the skid steer with the engine running unless the skid steer is properly and securely supported with all four wheels off the ground.
6. Use caution when servicing the unit around moving parts.
7. Do not tilt the boom and cab without proper instruction.
8. Do not tilt the boom and cab without using the proper cab tilting tool.
9. Reinstall all shields removed for service.
10. Never loosen any hydraulic connections before relieving the pressure in the hydraulic system.
11. Wear eye protection such as goggles, etc.
12. Wear ear protection such as ear plugs, etc. When you feel the noise level is uncomfortable.
13. If any servicing or adjustments require the battery to be disconnected, disconnect the (-) negative ground cable.
14. When servicing electrical components, disconnect the (-) negative ground cable.
15. If the electronic instrument cluster (eic) requires removal from the dash area or the skid steer, disconnect the (-) negative ground battery cable. This will shut off power to the eic and prevent damage to the eic board or blowing the 5-amp fuses if the board is accidentally grounded.
16. If welding is required on the skid steer, disconnect the (-) negative ground cable. Failure to disconnect the battery may result in damage to the EIC (Electronic Instrument Cluster) monitoring system and other electrical components.
17. If welding is required on an attachment, remove the attachment from the skid steer.
18. Give complete and undivided attention to the job at hand so that complete control of the skid steer is maintained at all times.
19. Drive slowly over rough ground and on slopes; keep alert for holes, ditches and other irregularities that may cause the skid steer to overturn.
20. Avoid steep hillside operation which could cause the skid steer to overturn.
21. Never transport a loaded bucket at full height. Operate the skid steer with the load as low as possible until it becomes necessary to raise the boom to discharge the load into a truck, container, etc.
22. Reduce speed when turning so there is no danger of the skid steer overturning.
23. Never drive up or back up a hill or incline with a raised boom or the skid steer could overturn.
24. Always look behind you before backing the skid steer.
25. Maintain proper transmission oil level to prevent loss of hydrostatic braking.
26. Do not allow passengers to ride on the skid steer at any time.
27. Do not allow children to operate the skid steer or ride on the skid steer at any time.
28. Do not allow anyone to operate the skid steer without proper instruction. OSHA requires that all operators be instructed on the proper operation of the machine before they operate the unit.
29. Do not operate the skid steer in any position other than while in the operator's seat with the seat belt securely fastened.

SECTION 00 - GENERAL INFORMATION

30. Before starting the engine, be sure that all operating controls are in neutral and the parking brake is engaged.
31. Never operate the skid steer engine in a closed building without adequate ventilation.
32. Refuel the skid steer outdoors with the engine shut off. Replace the fuel cap securely. Use an approved fuel container. Do not smoke when handling fuel. Avoid spilling fuel.
33. After operating the engine, never touch the muffler, exhaust pipe, engine or radiator until they have had time to cool.
34. Dress appropriately - wear relatively tight-fitting clothing when operating the skid steer. Loose or torn clothing can catch in moving parts or controls.
35. Before servicing the skid steer or any of its attached equipment, be sure that the attachments are lowered to the ground or that the boom arms are supported by the boom lock pins.
36. Do not work under overhangs, electric wires, or where there is danger of a slide.
37. Wear an approved safety hat when operating the machine and while in any work area.
38. When driving the skid steer on a road or highway, use warning lights or warning devices as may be required by local or state government regulations. Headlights, warning lights and smv signs are available through your new holland dealer.
39. Keep the skid steer clean. Do not allow trash, debris or other articles to accumulate in the cab, floor or foot control pedal area that may hinder safe machine operation.
40. Never operate the skid steer with any of the shielding removed.
41. Never operate the skid steer without windows and/or screens in place.
42. Never extend any part of the body outside of the operator's area.
43. Always properly tie down the skid steer to a truck or trailer before transport.
44. Make sure all bystanders are at a safe distance away from the skid steer before starting the engine.
45. Do not allow anyone near the skid steer while the engine is running and the skid steer is operational.
46. When using the skid steer to crane objects, do not allow any person to ride on objects being craned.
47. Do not use the skid steer as a work platform for supporting materials.
48. Do not lift personnel or allow personnel to work while standing in the bucket or on other attachments. This is not a man-lift.

OSHA requirements now make it the employer's responsibility to fully instruct each operator in the proper and safe operation of all operative equipment. Both employer and employee should thoroughly familiarize themselves with the following sections.



CAUTION



Some pictures in this manual show safety shields removed or open to show parts being serviced or for clarity. All shields should be closed or replaced prior to operating the machine.



DANGER



Fasten seat belt before starting engine!

This skid steer is a very stable unit but it can be upset if stopped suddenly when the bucket is raised and loaded.

Therefore, do not start the engine before securely fastening the seat belt, and carry the load low.

GENERAL SAFETY INFORMATION

HANDLE FLUIDS SAFELY

When you work around fuel or other flammable material, do not smoke, work near heaters or other fire hazards.

Do not store flammable material in open containers.

Store flammable fluids away from fire hazards.


Do not incinerate or puncture pressurized containers.

Make sure machine is clean of trash, grease, oil, and debris.

Do not store oily rags; they can ignite and burn spontaneously.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

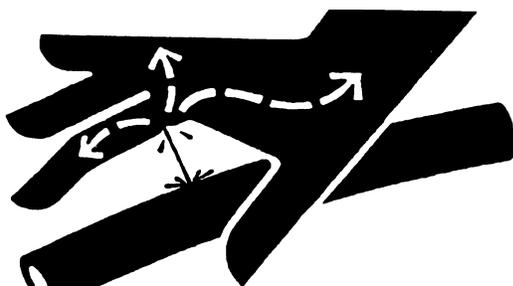

USE CARE AROUND HIGH-PRESSURE FLUID LINES

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines.

Tighten all line connections before applying pressure.

Check for leaks with a piece of cardboard.

Protect hands and body from high-pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source.

AVOID HEATING NEAR PRESSURIZED FLUID LINES

Flammable spray can be generated by heating near pressurized fluid lines, resulting in severe burns to yourself and bystanders.

Do not heat by welding, soldering, or using a torch near pressurized fluid lines.

Pressurized lines can be accidentally cut or damaged when heat goes beyond the immediate flame area.

USE CARE IN HANDLING AND SERVICING BATTERIES

Prevent Battery Explosions

Keep sparks, lighted matches, and open flame away from the top of the battery. Battery gas can explode.

Never check battery charge by placing a metal object across the posts. Use a voltmeter or hydrometer.

Do not charge a frozen battery; it may explode. Warm the battery to 60° F (16° C).



WARNING



If any servicing or adjustments require the battery to be disconnected, or welding is required on the skid steer, disconnect the (-) negative ground cable. Failure to disconnect the battery may result in damage to the eic (electronic instrument cluster) monitoring system and other electrical components.



WARNING



If welding on an attachment is required, first remove the attachment from the skid steer boom attaching plate.

WARNING

Engine starting with a booster battery requires extreme care as batteries produce explosive gases. The slightest spark can cause an explosion.

Follow these safety tips:

1. **Always shield your eyes when charging or working near a battery. Always provide good ventilation.**
2. **Cover the battery with a piece of carpet or other heavy material. Do not remove the battery vent caps.**
3. **Connect one cable to the (+) positive terminal of the weak battery. Connect the other end of the cable to the (+) positive terminal of the stronger battery.**
4. **Connect the second cable to the (-) negative terminal of the stronger battery.**
5. **Connect the remaining (-) negative cable end to the engine block or starter ground terminal.**
6. **Reverse this procedure when disconnecting the booster.**

USE SAFE SERVICE PROCEDURES

Wear Protective Clothing

Do not wear loose clothing.

Wear close-fitting clothing.

Wear safety glasses or face shield as required.

Wear other safety equipment appropriate to the job.

Wear earplugs or earmuffs as required.

SERVICE MACHINES SAFELY

Use caution when working around moving parts.

If servicing requires the boom to be in the raised position, support the boom on the boom locks and remove any attachment from the boom mounting

plate. If servicing requires the complete skid steer to be in the supported position, support all four wheels off the ground using adequate jack stands or blocks.

If servicing requires the engine to be operated, raise the machine and properly support the unit with adequate jack stands or blocking with all four wheels off the ground.

CAUTION

Before servicing the skid steer or any of its attached equipment, be sure that the attachments are lowered to the ground or the boom arms are supported by the boom lock pins.

USE PROPER TOOLS

Use tools appropriate for the job.

If tilting of the cab is required, use the proper tools and follow the procedure for tilting the cab in Section 1 of this manual.

REVIEW SAFETY EQUIPMENT, SIGNS AND SHIELDS

Replace missing or damaged safety decals.

Reinstall all shielding removed for servicing.

Replace any damaged or missing shielding.

CONTROLS

Operate unit and check machine functions for proper operation.

Check seat belt for proper operation, wear, and damage - Replace as needed.

Check operator restraint system - EIC for proper operation.

Check boom and bucket spool locks for proper operation.

Check mechanical boom locks for proper operation.

Check parking brake for proper operation and adjustment.