

SERVICE MANUAL

**TS100A / TS110A / TS115A / TS125A
TS130A / TS135A**

I/5

Print No. 6045515107



NEW HOLLAND

Repair Manual - TS-A Plus and TS-A Delta Series Tractors

604.55.151.07 (Includes 604.55.151.04 + Supps .05 & .06)

CONTENTS - VOLUME 1

GENERAL

SECTION 00

General Information

Chapter 1

| Section | Description | Page |
|---------|---|------|
| 00 000 | General Instructions | 2 |
| | Health and Safety | 5 |
| | Ecology and the Environment | 13 |
| | Product Identification | 14 |
| | International Symbols | 17 |
| | General Dimensions | 18 |
| | Vehicle Weights | 22 |
| | Capacities | 24 |
| | General Hardware Tightening Torques | 25 |

SEPARATING THE TRACTOR

SECTION 01

Separating front axle and front support from the engine

Chapter 1

| Section | Description | Page |
|---------|---|------|
| | Torque Values | 2 |
| | Special Tools | 2 |
| 10 001 | Separating Front Axle and Front Support from the Engine | 3 |
| 10 001 | Installing Front Axle and Front Support to the Engine | 9 |
| | Front Axle to Front Support Shim Calculation | 14 |

Separating Engine and Front Support from the Transmission Chapter 2

| Section | Description | Page |
|---------|---|------|
| | Torque Values | 2 |
| | Special Tools | 2 |
| | Separating Engine and Front Support from the Transmission | 4 |
| | Installing Engine and Front Support to the Transmission | 11 |

Contents Continued:

Separating Transmission, Engine and Front Support from the Rear Axle

Chapter 3

| Section | Description | Page |
|----------------|--|-------------|
| | Torque Values | 2 |
| | Special Tools | 2 |
| | Separating Transmission, Engine and Front Support from the Rear Axle | 3 |
| | Installing Transmission, Engine and Front Support to the Rear Axle | 8 |

Engine Removal

Chapter 4

| Section | Description | Page |
|----------------|---------------------------|-------------|
| | Torque Values | 2 |
| | Special Tools | 2 |
| | Engine Removal | 3 |
| | Engine Installation | 12 |

Transmission Removal

Chapter 5

| Section | Description | Page |
|----------------|---------------------------------|-------------|
| | Torque Values | 2 |
| | Special Tools | 2 |
| | Transmission Removal | 3 |
| | Transmission Installation | 6 |

Cab Removal

Chapter 6

| Section | Description | Page |
|----------------|--|-------------|
| | Torque Values (Tractors with Cab Suspension) | 2 |
| | Torque Values (Tractors with Standard Cab) | 3 |
| | Special Tools | 3 |
| 90 150 | Cab Removal | 4 |
| 90 150 | Cab Installation | 13 |

ENGINE

SECTION 10

Engine - 4 Cylinder Electronic

Chapter 1

| Section | Description | Page |
|----------------|-------------------------------------|-------------|
| 10 000 | General specifications | 2 |
| | Assembly Clearances - Data | 4 |
| | Torque wrench settings | 7 |
| | Tools | 13 |
| | Cooling system | 14 |
| | Lubrication system | 15 |
| | Lubrication system components | 16 |
| | Engine overhaul | 17 |

Contents Continued:

| | |
|---|----|
| Bushings | 29 |
| Assembly on the workbench | 30 |
| Fitting engine components | 35 |
| Checks, dimensions and repairs (cylinder liner block) | 52 |
| Checks, dimensions and repairs – crankshaft, bearings | 54 |
| Timing system | 59 |
| Bushings | 60 |
| Checks, dimensions and repairs – pistons | 61 |
| Connecting rod – piston assembly | 70 |
| Valves | 72 |
| Valve guides | 73 |
| Valve seats | 73 |
| Valve springs | 75 |
| Fitting the cylinder head | 76 |
| Fuel supply gear pump | 79 |
| CP3 high–pressure pump | 80 |
| Rail (pressure accumulator) | 85 |
| Pressure relief valve | 86 |
| Electro–injector | 87 |
| Pressure limiter for fuel return | 88 |

Engine - 6 Cylinder Electronic

Chapter 2

| Section | Description | Page |
|----------------|---|-------------|
| 10 000 | General specifications | 2 |
| | Assembly Clearances – Data | 4 |
| | Torque wrench settings | 8 |
| | Tools | 13 |
| | Cooling system | 14 |
| | Lubrication system | 15 |
| | Camshaft timing operations | 16 |
| | Fitting the cylinder head | 17 |
| | Cylinder block repairs | 19 |
| | Crankshaft | 21 |
| | Timing system | 24 |
| | Bushings | 25 |
| | Checks, dimensions – connecting rod–piston assembly | 26 |
| | Valves | 28 |
| | Valve guides | 28 |
| | Valve seats | 28 |
| | Spindle – Rocker arms | 30 |
| | Rail (pressure accumulator) | 31 |

Engine - 4 Cylinder Mechanical

Chapter 3

| Section | Description | Page |
|----------------|---|-------------|
| | General specifications | 2 |
| | Assembly Clearances - Data | 4 |
| | Torque wrench settings | 7 |
| | Tools | 11 |
| | Mechanical Grid Heater Operation | 11 |
| | Cooling system | 12 |
| | Lubrication system | 13 |
| | Lubrication system components | 14 |
| | Engine overhaul with rotary mechanical pump | 15 |
| | Disassembly at the bench | 16 |
| | Assembly at the bench | 29 |
| | Checks and measurements | 51 |
| | Crankshaft | 53 |
| | Timing system | 58 |
| | Bushings | 59 |
| | Checks, dimensions and repairs - connecting rod/piston assembly | 60 |
| | Cylinder head | 69 |
| | Valves | 71 |
| | Valve guides | 72 |
| | Valve seats | 72 |
| | Valve springs | 74 |
| | Fitting the cylinder head | 74 |
| | Spindle - Rocker arms | 75 |
| | Rotary fuel pump - disassembly, assembly and timing procedure | 77 |

Engine - 6 Cylinder Mechanical

Chapter 4

| Section | Description | Page |
|----------------|--|-------------|
| | General specifications | 2 |
| | Assembly Clearances - Data | 4 |
| | Torque wrench settings | 7 |
| | Tools | 11 |
| | Mechanical Grid Heater Operation | 11 |
| | Cooling system | 12 |
| | Lubrication system | 13 |
| | Camshaft timing operations | 14 |
| | Fitting the cylinder head | 15 |
| | Cylinder block repairs | 16 |
| | Crankshaft | 18 |

Contents Continued:

| | |
|---|----|
| Timing system | 21 |
| Bushings | 21 |
| Checks, dimensions – connecting rod–piston assembly | 22 |
| Valves | 25 |
| Valve guides | 25 |
| Valve seats | 25 |
| Spindle – Rocker arms | 26 |
| Rotary fuel pump disassembly, assembly and timing procedure | 28 |

Cooling

Chapter 5

| Section | Description | Page |
|----------------|---|-------------|
| | Specifications | 2 |
| | Torque Values | 2 |
| | Description and Operation | 3 |
| | Troubleshooting | 7 |
| | Cooling System Drain | 8 |
| | Cooling System Refill | 9 |
| 10 406 | Radiator Removal | 9 |
| 10 406 | Radiator Installation | 12 |
| | Radiator Inspection and Repair | 14 |
| 10 402 | Thermostat Removal – Engines with Common Rail Fuel Injection | 14 |
| 10 402 | Thermostat Installation – Engines with Common Rail Fuel Injection | 15 |
| 10 402 | Thermostat Removal – Engines with Mechanical Fuel Injection | 16 |
| 10 402 | Thermostat Installation – Engines with Mechanical Fuel Injection | 17 |
| | Thermostat Inspection | 18 |
| | Coolant Temperature Sensor Removal – Engines with Common Rail Fuel Injection | 19 |
| | Coolant Temperature Sensor Installation – Engines with Common Rail Fuel Injection .. | 19 |
| | Coolant Temperature Sender Removal – Engines with Mechanical Fuel Injection | 19 |
| | Coolant Temperature Sender Installation – Engines with Mechanical Fuel Injection | 19 |
| 10 414 | Viscous Fan Assembly Removal | 20 |
| 10 414 | Viscous Fan Assembly Installation | 21 |
| | Fan Blade Removal | 22 |
| | Fan Blade Installation | 22 |
| | Fan Belt Removal | 22 |
| | Fan Belt Installation | 22 |
| 10 414 | Spring-loaded Automatic Fan Belt Tensioner Removal | 22 |
| 10 414 | Spring-loaded Automatic Fan Belt Tensioner Installation | 23 |
| | Fan Belt Tensioner Inspection and Repair | 23 |
| 10 402 | Coolant Pump Removal | 23 |
| 10 402 | Coolant Pump Installation | 23 |

Contents Continued:

Fuel Tank Removal

Chapter 6

| Section | Description | Page |
|---------|------------------------------|------|
| 10 216 | Fuel Tank Removal | 2 |
| 10 216 | Fuel Tank Installation | 3 |

Fuel Injection Pump - 4 Cylinder TS-A Delta Models (06-2005) with Delphi Pumps

Chapter 7

| Section | Description | Page |
|---------|---------------------------------|------|
| | Specifications | 1 |
| | Tightening Torques | 1 |
| | Special Tools | 1 |
| | Description and Operation | 2 |
| | Pump Removal | 4 |
| | Pump Installation | 6 |

CLUTCHES

SECTION 18

Clutches

Chapter 1

| Section | Description | Page |
|---------|--|------|
| 18 000 | Specifications, Tightening Torques and Special Tools | 1 |
| | Fault Finding | 2 |
| | Description and Operation | 4 |
| 18 110 | Clutch Overhaul - Removal | 5 |
| | Clutch Inspection and Repair | 5 |
| | Hydraulic Release Bearing / Slave Cylinder Assembly Overhaul. | 6 |

TRANSMISSION SYSTEM

SECTION 21

16 x 16 Transmission

Chapter 1

| Section | Description | Page |
|---------|---|------|
| | Specifications | 2 |
| | Torque Values | 3 |
| | Special Tools | 7 |
| | Description And Operation | 9 |
| | Fault Finding Diagrams | 41 |
| | Transmission Disassembly/Assembly Information | 50 |
| | Transmission Disassembly | 52 |
| | Front Section Removal | 53 |
| | Middle Section Removal | 57 |
| | Rear Section Removal | 59 |
| | Front Section Disassembly/Assembly | 62 |
| | Middle Section Disassembly/Assembly | 77 |

Contents Continued:

| | |
|--|-----|
| Rear Section Disassembly/Assembly | 85 |
| Transmission Top Cover Overhaul | 105 |
| Transmission Control Valve Overhaul | 107 |
| Synchroniser Inspection | 111 |
| Transmission Housing Transfer Tubes Removal/Installation | 112 |
| Transmission Assembly | 113 |
| Forward/Reverse Synchroniser End-Float Adjustment | 117 |
| Adjustment of Forward/Reverse and Main (1-4/5-8) Synchronisers | 122 |
| High/Low Range Cable adjustment | 123 |
| Adjustment of the High/Low Synchroniser | 124 |

24 x 24 Transmission

Chapter 2

| Section | Description | Page |
|----------------|--|-------------|
| | Specifications | 2 |
| | Torque Values | 4 |
| | Special Tools | 6 |
| | Description And Operation | 8 |
| | Fault Finding | 33 |
| | C1/C2 Clutch Housing Removal | 36 |
| | C1/C2 Clutch Housing Disassembly | 38 |
| | C1/C2 Clutch Components Inspection | 46 |
| | C1/C2 Clutch Housing Assembly | 46 |
| | C1/C2 Clutch Plate Set Adjustment | 54 |
| | C1 Clutch Cluster Gear Shaft End Float Adjustment | 55 |
| | C1/C2 Clutch Housing Installation | 57 |
| | Lubrication Oil Control Valve Disassembly/assembly | 60 |
| | Transmission Disassembly | 61 |
| | Front Section Removal | 63 |
| | Rear Section Removal | 64 |
| | Middle Section Removal | 66 |
| | Transmission Component Disassembly/Assembly | 68 |
| | Front Section | 72 |
| | Rear Section | 73 |
| | Middle Section | 76 |
| | Transmission Assembly | 81 |
| | Middle Section Installation | 81 |
| | Rear Section Installation | 83 |
| | Front Section Installation | 85 |
| | Output Shaft End Float Adjustments | 89 |
| | Gearshift Cable Adjustments | 91 |

12 x 12 Transmission

Chapter 3

| Section | Description | Page |
|----------------|---|-------------|
| | Specifications | 2 |
| | Torque Values | 3 |
| | Special Tools | 5 |
| | Description And Operation | 7 |
| | Fault Finding | 19 |
| | Transmission Disassembly | 21 |
| | Front Section Removal | 24 |
| | Rear Section Removal | 25 |
| | Middle Section Removal | 27 |
| | Transmission Component Disassembly/Assembly | 29 |
| | Front Section | 32 |
| | Rear Section | 34 |
| | Middle Section | 37 |
| | Transmission Assembly | 42 |
| | Middle Section Installation | 42 |
| | Rear Section Installation | 44 |
| | Front Section Installation | 46 |
| | Output Shaft End Float Adjustment | 51 |
| | Gearshift Cable Adjustments | 53 |

Reduction Units

Chapter 4

| Section | Description | Page |
|----------------|---|-------------|
| 21 000 | Specifications | 2 |
| | Sectional Views | 2 |
| | Description and Operation | 4 |
| | Fault Finding | 7 |
| | Refer to the rear axle section for the removal of creeper components | |

DRIVE LINES

SECTION 23

Drive Lines

Chapter 1

| Section | Description | Page |
|----------------|--|-------------|
| 23 000 | Specifications | 2 |
| | Torque Values | 3 |
| | Special Tools | 4 |
| | Description and Operation | 5 |
| | Fault Finding | 12 |
| 23 101 | Standard Front Axle Four Wheel Driveshaft Removal | 13 |
| 23 101 | Standard Front Axle Four Wheel Driveshaft Installation | 14 |

Contents Continued:

| | | |
|---------------|--|----|
| 23 101 | SuperSteer Front Axle Four Wheel Driveshaft Removal | 16 |
| 23 101 | SuperSteer Front Axle Four Wheel Driveshaft Installation | 17 |
| 23 202 | Four Wheel Drive Clutch Removal | 18 |
| 23 202 | Four Wheel Drive Multi-Wet Plate Clutch Disassembly | 21 |
| 23 202 | Four Wheel Drive Multi-Wet Plate Clutch Assembly/Adjustments | 24 |
| 23 202 | Four Wheel Drive Dog Clutch Disassembly | 29 |
| 23 202 | Four Wheel Drive Dog Clutch Assembly | 31 |
| 23 202 | Four Wheel Drive Clutch Installation | 32 |
| | Four Wheel Driveshaft Oil Supply Manifold Removal | 35 |
| | Four Wheel Driveshaft Oil Supply Manifold Installation | 36 |

MECHANICAL FRONT AXLE

SECTION 25

Mechanical Front Axle

Chapter 1

| Section | Description | Page |
|----------------|---|-------------|
| 25 000 | Specifications | 2 |
| | Torque Values | 4 |
| | Special Tools | 6 |
| | Sectional Views | 9 |
| | Description and Operation | 9 |
| | Troubleshooting | 12 |
| 25 100 | Standard Axle Removal | 13 |
| 25 100 | Standard Axle Installation | 16 |
| | Hub Cassette Seal Removal / Installation | 19 |
| | Front Axle Overhaul - All Options | 23 |
| | Multi-Wet Plate Clutch Differential Lock - Disassembly | 29 |
| | Multi-Wet Plate Clutch Differential Lock - Assembly | 33 |
| | Crown Wheel / Differential - Disassembly - Multi-Wet Plate Clutch Differential Lock | 35 |
| | Crown Wheel / Differential - Assembly / Adjustments Multi-Wet Plate Clutch Differential Lock | 38 |
| | Dog Clutch Differential Lock - Disassembly / Assembly | 43 |
| | Crown Wheel / Differential - Disassembly / Assembly - Dog Clutch Differential Lock | 45 |
| | Pinion Shaft Removal - Standard Front Axle | 47 |
| | Pinion Shaft Installation / Adjustments - Standard Front Axle | 49 |
| | Pinion Shaft Removal - SuperSteer and Suspended Front Axle | 56 |
| | Pinion Shaft Installation / Adjustments - SuperSteer and Suspended Front Axle | 58 |
| | Crown Wheel Adjustments - Multi-Wet Plate Clutch Differential Lock | 64 |
| | Differential Bearing Preload - Multi-Wet Plate Clutch Differential Lock | 65 |
| | Crown Wheel Adjustments - Dog Clutch Differential Lock | 66 |
| | Differential Bearing Preload - Dog Clutch Differential Lock | 68 |
| | Limited Slip Self Locking Differential - Description and Operation | 69 |
| | Limited Slip Self Locking Differential - Overhaul | 70 |
| | Axle Assembly - All Options | 73 |
| | Swivel Pin & Potentiometer - Removal / Installation | 74 |
| | Stub Axle Adjustments | 77 |
| | Checking the Alignment of Steering & Drive Wheels | 79 |
| | Refer to Brake Section Of Repair Manual For Overhaul Of Front Axle Brakes Where Fitted | |

Front Axle Suspension

Chapter 2

| Section | Description | Page |
|----------------|--|-------------|
| 25 000 | Specifications | 2 |
| | Tightening Torques | 2 |
| | Description and Operation | 3 |
| | System Schematics | 8 |
| | Suspended Front Axle Calibration Procedure | 17 |
| | Fault Code Listing | 20 |
| | Suspension Control Valve Assembly-Removal | 22 |
| | Suspension Control Valve Assembly-Overhaul | 22 |

Supersteer Front Axle

Chapter 3

| Section | Description | Page |
|------------------|------------------------------------|-------------|
| | Specifications | 2 |
| | Torque Values | 3 |
| | Special Tools | 4 |
| | Description and Operation | 5 |
| 25 100 33 | SuperSteer Axle Removal | 7 |
| 25 100 33 | SuperSteer Axle Installation | 10 |
| | Swivel Bearing Adjustment | 14 |

MECHANICAL REAR WHEEL DRIVE (Rear Axle)

SECTION 27

Mechanical Rear Wheel Drive

Chapter 1

| Section | Description | Page |
|----------------|--|-------------|
| 27 000 | Specifications | 1 |
| | Torque Values | 3 |
| | Special Tools | 6 |
| | Sectional Views | 9 |
| | Description and Operation | 12 |
| | Troubleshooting | 15 |
| | Rear Axle Disassembly | 18 |
| | Rear Axle Assembly / Adjustments | 29 |
| | Rear Pinion and Crown Wheel Adjustments | 32 |
| | Hydraulic Pump Idler Gear Bearing Adjustment | 44 |
| | Hydraulic Differential Lock Control Unit (Multi-Wet plate clutch) Inspection | 50 |
| | Hydraulic Differential Lock Control Unit (Multi-Wet plate clutch) Disassembly | 50 |
| | Hydraulic Differential Lock Control Unit (Multi-Wet plate clutch) Assembly/Adjustments | 54 |
| | Final Drive Case (Left or Right Hand) Removal | 60 |
| | Final Drive Case (Left or Right Hand) Installation | 63 |
| | Drive Wheel Shaft Removal/Installation | 66 |
| | Planetary Gear Set Removal/Installation | 69 |

Contents Continued:

50 Km/h Drive (17th Gear)

Chapter 2

| Section | Description | Page |
|----------------|---|-------------|
| 27 000 | Specifications | 2 |
| | Torque Values | 3 |
| | Special Tools | 4 |
| | Sectional Views | 5 |
| | Description And Operation | 7 |
| | Fault Finding | 10 |
| | 50 Km/h Clutch (17th Gear) Removal | 11 |
| | 50 Km/h Clutch (17th Gear) Disassembly | 17 |
| | 50 Km/h Clutch (17th Gear) Assembly | 20 |
| | 50 Km/h Clutch (17th Gear) Installation | 23 |
| | 50 Km/h Solenoid Valve Block Removal | 29 |
| | 50 Km/h Solenoid Valve Block Disassembly/Assembly | 30 |
| | 50 Km/h Solenoid Valve Block Installation | 30 |

CONTENTS - VOLUME 2

POWER TAKE-OFF

SECTION 31

Shiftable Rear Power Take-Off

Chapter 1

| Section | Description | Page |
|---------|---|------|
| 31 000 | Specifications | 2 |
| | Special Tools | 3 |
| | 540/750/1000 RPM PTO Sectional View and Torque Values | 4 |
| | 540/1000 RPM PTO Sectional Views and Tightening Values | 5 |
| | Description and Operation | 6 |
| | PTO Functionality | 12 |
| | Fault Finding | 20 |
| | Power Take-Off (PTO) Removal | 21 |
| | Power Take-Off (PTO) Installation | 23 |
| | Power Take-Off (PTO) 540/750/1000 RPM Disassembly | 25 |
| | Power Take-Off (PTO) 540/750/1000 RPM Assembly | 33 |
| | 2 Speed Shaft Change PTO - Initial PTO shaft set up | .. |
| | <i>For tractors with Driveline Serial Number up to 009017242 only</i> | 41 |
| | <i>For tractors with Driveline Serial Number from 009017243 only</i> | 43 |

Ground Speed Power Take-Off (PTO)

Chapter 2

| Section | Description | Page |
|---------|--|------|
| 31 000 | Specifications | 2 |
| | Description and Operation | 3 |
| | Fault Finding | 7 |
| | Ground Speed PTO Selector Cable Adjustment | 8 |
| | Ground Speed PTO Switch Adjustment | 8 |
| | PTO Clutch Oil Supply Cut-Off Valve Adjustment | 8 |
| | Refer to the rear axle section for the removal of ground speed PTO components ... | |

BRAKES

SECTION 33

Tractor Brakes

Chapter 1

| Section | Description | Page |
|---------|--|------|
| 33 000 | Specifications | 2 |
| | Special Tools | 3 |
| | Torque Values | 4 |
| | Sectional Views | 5 |
| | Description and Operation | 7 |
| | Fault Finding | 14 |
| 33 202 | Rear Service Brake Piston (Left or Right Hand) Removal | 16 |

Contents Continued:

| | | |
|---------------|--|----|
| | Rear Service Brake Inspection | 17 |
| 33 202 | Rear Service Brake Piston (Left or Right Hand) Installation | 18 |
| | Front Service Brake Valve Removal | 20 |
| | Front Service Brake Valve Installation | 22 |
| 33 204 | Front Service Brake (Left or Right Hand) Disassembly | 24 |
| 33 204 | Front Service Brake (Left or Right Hand) Assembly | 29 |
| 33 202 | Hydraulic Brake Master Cylinder Removal (All Models) | 34 |
| 33 202 | Hydraulic Brake Master Cylinder Installation (All Models) | 36 |
| 33 202 | Hydraulic Brake System Air Bleeding | 38 |
| | Front Service Brake Valve Removal – Models with integrated front lift | 42 |
| | Front Service Brake Valve Installation – Models with integrated front lift | 44 |
| | Brake Pedal Switch Removal | 46 |
| | Brake Pedal Switch Installation | 47 |
| | Brake Pedal Linkage Adjustment | 48 |
| | Brake Pedal Switch Adjustment | 49 |
| 33 110 | Parking Brake Removal | 49 |
| 33 110 | Parking Brake Disassembly | 50 |
| 33 110 | Parking Brake Assembly | 51 |
| 33 110 | Parking Brake Installation | 53 |
| | Parking Brake Cable Adjustment | 55 |
| | Additional Information – Brake Overhaul | 56 |

Air Trailer Brakes

Chapter 2

| Section | Description | Page |
|----------------|---------------------------------|-------------|
| 33 000 | Specifications | 1 |
| | Tightening Torques | 2 |
| | Description and Operation | 3 |
| | Fault Finding | 13 |
| 33 000 | Removal and Installation | 15 |
| 33 000 | Overhaul | 21 |
| | Pressure Testing | 31 |

HYDRAULIC SYSTEMS

SECTION 35

Introduction and Hydraulic Circuits

Chapter 1

| Section | Description | Page |
|----------------|---|-------------|
| 35 000 | Introduction and Circuit Identification | 2 |
| | Variable Displacement Pump High Pressure Hydraulic Circuits | 7 |
| | Fixed Displacement Pump High Pressure Hydraulic Circuit | 23 |
| | Low Pressure Hydraulic Circuits | |
| | Tractors with 16 x 16 Transmission | 28 |
| | Tractors with 24 x 24 Transmission | 37 |
| | Tractors with 12 x 12 Transmission | 43 |
| | General Hydraulic Fault Finding | 47 |
| | Initial Fault Finding Check | 47 |
| | Transmission Low Pressure Warning Light 'ON' | 51 |
| | Charge Pressure Light | 51 |
| | Intake Filter Restriction Warning Light | 51 |
| | Power Steering | 52 |
| | Trailer Brakes | 52 |
| | Hydraulic Lift | 53 |
| | Remote Control Valves | 54 |

Variable Flow Hydraulic Pump Assembly

Chapter 2

| Section | Description | Page |
|----------------|--|-------------|
| 35 000 | Specifications | 2 |
| | Tightening Torques | 3 |
| | Description and Operation | 4 |
| | Hydraulic Circuit Operation | 12 |
| | Generating Low Pressure Standby | 14 |
| | Regulating Low Pressure Standby | 16 |
| | High Pressure Circuit High Demand | 18 |
| | High Pressure Circuit Low Demand | 20 |
| | Limiting Maximum System Pressure | 22 |
| | Low Pressure Regulating valve operation | 24 |
| | Fault Finding | 27 |
| | Initial Fault Finding Check | 27 |
| | Transmission Low Pressure Warning Light 'ON' | 28 |
| | Charge Pressure Light | 29 |
| | Intake Filter Restriction Warning Light | 29 |
| | Power Steering | 30 |
| | Trailer Brakes | 30 |

Contents Continued:

| | | |
|---------------|--|----|
| | Hydraulic Lift | 31 |
| | Remote Control Valves | 32 |
| | Pump Pressure and Flow Testing | 34 |
| 35 106 | Overhaul | 35 |
| | Steering Pump Overhaul | 36 |
| | Pressure and Flow Compensating Valve | 38 |
| | Pump Removal and Installation | 40 |
| | Charge Pump Overhaul | 44 |
| | Variable Flow Piston Pump Overhaul | 46 |

Hydraulic Lift Assembly with Electronic Draft Control

Chapter 3

| Section | Description | Page |
|---------------|---|------|
| | | |
| 35 000 | Specifications | 2 |
| | Special Tools | 2 |
| | Tightening Torques | 3 |
| | Description and Operation | 4 |
| | Principal of Draft Control | 4 |
| | Components | 7 |
| | Operator Controls | 9 |
| | Operation of Draft Control | 13 |
| | Hydraulic Operation of Lift Control Valve | 16 |
| | Electronic Draft Control Calibration | 26 |
| | Electronic Draft Control Error Codes | 27 |
| | Overhaul | |
| 35 138 | Electronic Draft Control Valve - Removal | 29 |
| 35 138 | Electronic Draft Control Valve - Installation | 30 |
| 35 138 | Disassembly | 31 |
| 35 130 | Load Sensing Pin Replacement | 36 |

Mechanical Rear Hydraulic Lift

Chapter 4

| Section | Description | Page |
|------------------|---|------|
| | Specifications | 2 |
| | Torque Values | 5 |
| | Special Tools | 7 |
| | Description and Operation | 8 |
| | Troubleshooting | 18 |
| 35 110 30 | Mechanical Rear Hydraulic Lift Removal | 20 |
| 35 110 30 | Mechanical Rear Hydraulic Lift Installation | 23 |
| | Mechanical Rear Hydraulic Lift Disassembly | 26 |
| | Mechanical Rear Hydraulic Lift Assembly | 30 |
| | Mechanical Rear Hydraulic Lift Adjustments | 36 |
| | Mechanical Rear Hydraulic Lift External Cable Adjustments | 42 |

Contents Continued:

| | |
|--|----|
| Lift-O-Matic Upper Stroke Height Limit Adjuster | 45 |
| Mechanical Rear Hydraulic Lift Control Valve Disassembly | 46 |
| Mechanical Rear Hydraulic Lift Control Valve Assembly | 51 |

Fixed Displacement Gear Pump

Chapter 5

| Section | Description | Page |
|----------------|---|---------------|
| 35 000 | Specifications | 1 |
| | Torque Values | 2 |
| | Description and Operation | 3 |
| | Troubleshooting | See Chapter 9 |
| | Hydraulic Lift System Oil Pump Removal | 5 |
| | Hydraulic Lift System Oil Pump Installation | 9 |
| | Steering / Low Pressure Oil Pump Removal | 12 |
| | Steering / Low Pressure Oil Pump Installation | 14 |
| | Hydraulic Lift System Oil Pump Disassembly / Assembly | 16 |
| | Steering / Low Pressure Oil Pump Disassembly / Assembly | 18 |
| | Hydraulic Oil Pump Inspection | 20 |

Trailer Brake Auxiliary Valves

Chapter 6

| Section | Description | Page |
|----------------|---|-------------|
| 35 000 | Specifications | 2 |
| | Torques | 2 |
| | Description and Operation | 3 |
| 33 220 | Italian Trailer Brakes | 10 |
| | Trailer Brake Valve Removal | 21 |
| | Trailer Brake Valve Installation | 22 |
| | Italian Trailer Brake Solenoid Valve Block Removal | 23 |
| | Italian Trailer Brake Solenoid Valve Block Installation | 23 |

Mechanical Remote Control Valves

Chapter 7

| Section | Description | Page |
|----------------|--|-------------|
| | Special Tools | 2 |
| | Specifications | 2 |
| | Torque Values | 2 |
| | Fault Finding | 3 |
| | Description and Operation – Mechanical Remote Control Valves | 4 |
| | Oil Flow In Neutral | 10 |
| | Oil Flow in Raising (Cylinder Extend) | 12 |
| | Oil Flow in Lowering (Cylinder Retract) | 14 |
| | Oil Flow in Float | 16 |
| | Operation of Detent Pressure Regulating Valve | 18 |

Contents Continued:

| | |
|--|----|
| Operation of Two or More Control Valves Simultaneously | 21 |
| Remote Control Valve Removal | 23 |
| Remote Control Valve Installation | 26 |
| Remote Control Valve Cable Adjustment | 29 |
| Remote Control Valve Disassembly | 30 |
| Remote Control Valve Assembly | 36 |

Electronic Remote Control Valves

Chapter 8

| Section | Description | Page |
|---------------|---|------|
| 35 000 | Special Tools | 2 |
| | Specifications | 2 |
| | Tightening Torques | 2 |
| | Fault Finding | 3 |
| | Electro-Hydraulic Remote Valve Fault Code list | 4 |
| | Description and Operation - Electro-Hydraulic Remote Valves | 7 |
| | Re-Calibrating Remote Valve Levers | 23 |
| | Oil Flow In Neutral | 25 |
| | Oil Flow in Raising (Cylinder Extend) | 27 |
| | Oil Flow in Lowering (Cylinder Retract) | 29 |
| | Oil Flow in Float | 31 |
| | Operation of Two or More Control Valves Simultaneously | 33 |
| | Overhaul - Electro-Hydraulic Remote Valves | 35 |
| | Electro-Hydraulic Remote Valves Number Programming | 36 |
| | Electro-Hydraulic Remote Valves Removal and Installation | 38 |
| | Electro-Hydraulic Remote Valve Disassembly | 39 |

Hydraulic Pressure Testing

Chapter 9

| Section | Description | Page |
|---------------|--|------|
| 35 000 | Introduction | 3 |
| | Special Tools | 4 |
| | Specifications | 5 |
| | Initial Fault Finding | 7 |
| | Transmission / Steering Low Pressure Warning Symbol / Light - Displayed (Variable Displacement Closed Centre Systems) | 8 |
| | Transmission Low Pressure Warning Symbol / Light - Displayed (Fixed Displacement Closed Centre Systems) | 10 |
| | Charge Pressure Warning Symbol / Light - Displayed (Variable Displacement Closed Centre Systems) | 12 |
| | Intake Oil Filter Warning Symbol / Light On | 14 |
| | Power Steering Not Working or Working Incorrectly | 16 |

Contents Continued:

| | |
|--|----|
| Trailer Brakes Not Working | 16 |
| Electronic Draft Control Not Working Correctly | 17 |
| Pump Pressure and Flow Testing | 19 |
| Low Pressure Standby | 19 |
| High Pressure Standby | 20 |
| Charge Pressure Test | 21 |
| Variable Flow Piston Pump Flow Test | 22 |
| Hydraulic Oil Pump Air Ingress Test | 22 |
| Lift Ram Pressure Test | 24 |
| Steering / Low Pressure Hydraulic Pump Test | 25 |
| Steering Test | 25 |
| Steering Circuit Pressure Test | 25 |
| Steering Relief Valve Pressure Test | 26 |
| Low Pressure System Test | 27 |
| Low Pressure Component Tests | 28 |
| 50 Kph Clutch Pressure Test | 30 |
| Low Pressure Component Leak Test (Variable Displacement Closed Centre Systems) . | 31 |
| Fixed Displacement Pump - Lift Pressure Regulating Valve | 32 |
| 16 x 16 Transmission Pressure Testing | 33 |
| 24 x 24 Transmission Pressure Testing | 41 |
| Cooler By-pass Valve - Lubrication Pressure | 46 |
| Trailer Brake Testing and Troubleshooting | 46 |
| Trailer Braking System Pressure Test (All Models) | 46 |
| Trailer Brake System Leak Test (All Models) | 47 |
| Trailer Brake Valve Electro-Hydraulic Operation Diagram (Italy Only) | 48 |
| Trailer Brake Disengagement Pressure Test (Italy Only) | 49 |
| Parking Brake Engagement Test (Italy Only) | 50 |
| Trailer Brake Circuit Safety Switch Test (Italy Only) | 50 |

External Lift Rams

Chapter 10

| Section | Description | Page |
|----------------|---------------------------------|-------------|
| 35 000 | Specifications | 2 |
| | Sectional Views | 2 |
| | Description and Operation | 4 |
| 35 116 | Removal | 4 |
| | Disassembly | 5 |
| | Reassembly | 6 |
| | Installation | 6 |

Contents Continued:

Front Loader

Chapter 11

| Section | Description | Page |
|---------|--|------|
| 35 000 | Specifications, Tightening Torques and Special Tools | 1 |
| | Installation Instructions | 12 |
| | Hydraulics – Operation | 25 |
| | Electrical Wiring Diagrams | 63 |
| | Loader and Hydraulic System Overhaul | 71 |
| | Faultfinding | 82 |

Mid Mount Remote Valves

Chapter 12

| Section | Description | Page |
|---------|------------------------------------|------|
| 35 000 | Specifications | 2 |
| | Torque Values | 3 |
| | Description and Operation | 4 |
| | Mid Mount Valve Removal | 12 |
| | Mid Mount Valve Disassembly | 12 |
| | Mid Mount Valve Overhaul | 13 |
| | Mid Mount Valve Installation | 16 |
| | Third Mid Mount Valve | 17 |
| | Description and Operation | 17 |
| | Removal | 19 |
| | Disassembly | 19 |
| | Re-assembly | 20 |

Hydraulic Front Lift and Power Take-Off (PTO)

Chapter 13

| Section | Description | Page |
|---------|---|------|
| 35 000 | Specifications | 2 |
| | Torque Values | 2 |
| | Special Tools | 6 |
| | Sectional Views | 7 |
| | Description and Operation | 9 |
| | Fault Finding | 13 |
| | Hydraulic Front Lift Removal | 14 |
| | Hydraulic Front Lift Disassembly | 16 |
| | Hydraulic Front Lift Assembly | 17 |
| | Hydraulic Front Lift Installation | 19 |
| | Hydraulic Front Lift Ram Removal | 20 |
| | Hydraulic Front Lift Ram Installation | 22 |
| | Front PTO Control Housing Removal | 24 |
| | Front PTO Control Housing Disassembly | 29 |
| | Front PTO Control Housing Assembly | 32 |

Contents Continued:

| | |
|--|----|
| Front PTO Control Housing Installation | 35 |
| Front PTO Clutch Removal | 38 |
| Front PTO Clutch Disassembly | 39 |
| Front PTO Clutch Assembly | 42 |
| Front PTO Clutch Installation | 46 |
| Front PTO Reduction Gearbox Removal | 47 |
| Front PTO Reduction Gearbox Disassembly | 49 |
| Front PTO Reduction Gearbox Assembly | 51 |
| Front PTO Reduction Gearbox Installation | 54 |

TS-A Delta Models Hydraulic Circuits

Chapter 14

| Section | Description | Page |
|----------------|---|-------------|
| 35 000 | Introduction and Circuit Identification | 2 |
| | Fixed Displacement Pump High Pressure Hydraulic Circuit | 9 |
| | Low Pressure Hydraulic Circuits | |
| | Tractors with 12 x 12Transmission | 14 |
| | Tractors with 16 x 16Transmission | 19 |
| | Tractors with 24 x 24Transmission | 29 |
| | General Hydraulic Fault Finding | 35 |
| | Initial Fault Finding Check | 35 |
| | Transmission Low Pressure Warning Light 'ON' | 36 |
| | Intake Filter Restriction Warning Light | 36 |
| | Power Steering | 37 |
| | Trailer Brakes | 37 |
| | Hydraulic Lift | 38 |
| | Remote Control Valves | 38 |

TS-A Delta - Open centre system remote control valves

Chapter 15

| Section | Description | Page |
|----------------|---|---------------|
| | Data - Tools | 1 |
| | Tightening Torques | 2 |
| | Cross-sectional views | 3 |
| | Description and Operation | 4 |
| | Mechanical Remote Valve Disassembly | 11 |
| | Mechanical Remote Valve Installation | 14 |
| | Mechanical Remote Valve Cable Adjustment | 17 |
| | Mechanical Remote Valve Slice Disassembly | 18 |
| | Troubleshooting | See Chapter14 |

TS-A Delta Mid Mount Remote Valves

Chapter 16

| Section | Description | Page |
|----------------|------------------------------------|-------------|
| | Specifications | 2 |
| | Torque Values | 2 |
| | Description and Operation | 3 |
| | Mid Mount Valve Removal | 10 |
| | Mid Mount Valve Disassembly | 10 |
| | Mid Mount Valve Overhaul | 12 |
| | Mid Mount Valve Installation | 15 |
| | Third Mid Mount Valve | 17 |
| | Description and Operation | 17 |
| | Removal | 19 |
| | Disassembly | 19 |
| | Re-assembly | 19 |

**Integrated Hydraulic Front Lift and Power Take-Off (PTO)
(All Models from 06-2005)**

Chapter 17

| Section | Description | Page |
|----------------|--|-------------|
| Section | Description | Page |
| | Specifications | 2 |
| | Torque Values | 2 |
| | Special Tools | 5 |
| | Sectional Views | 6 |
| | Description and Operation – Front Lift | 8 |
| | Description and Operation – Power Take Off | 11 |
| | Fault Finding | 14 |
| | Hydraulic Front Lift Removal | 15 |
| | Hydraulic Front Lift Disassembly | 16 |
| | Front PTO Control Housing Removal | 17 |
| | Front PTO Control Housing Disassembly | 21 |
| | Front PTO Control Housing Assembly | 24 |
| | Front PTO Control Housing Installation | 27 |
| | Front PTO Clutch Removal | 31 |
| | Front PTO Clutch Disassembly | 32 |
| | Front PTO Clutch Assembly | 35 |
| | Front PTO Clutch Installation | 39 |
| | Front PTO Reduction Gearbox Removal | 40 |
| | Front PTO Reduction Gearbox Disassembly | 42 |
| | Front PTO Reduction Gearbox Assembly | 44 |
| | Front PTO Reduction Gearbox Installation | 47 |

STEERING SYSTEMS

SECTION 41

Hydrostatic Steering Systems

Chapter 1

| Section | Description | Page |
|----------------|---|-------------|
| 41 000 | Specifications | 2 |
| | Tightening Torques | 3 |
| | Special Tools | 4 |
| | Description and Operation | 5 |
| | Fault Finding | 9 |
| | System Testing | 10 |
| 41 204 | Steering Motor – Removal and Installation | 15 |
| | Steering Motor Overhaul | 16 |
| | Steering Column – Removal and installation | 23 |
| 41 216 | Two Wheel Drive Steering Cylinder – Removal and Installation | 25 |
| | Two Wheel Drive Steering Cylinder – Overhaul | 26 |
| | Four Wheel Drive Steering Cylinder – Removal and Installation | 27 |
| | Four Wheel Drive Steering Cylinder – Overhaul | 28 |

Fast Steer System

Chapter 2

| Section | Description | Page |
|----------------|--|-------------|
| 41 000 | Specifications | 2 |
| | Tightening Torques | 3 |
| | Description and Operation | 4 |
| | Fast Steer Valve Components | 7 |
| | Fast Steer Hydraulic Operation | 8 |
| | Operating and Monitoring System | 8 |
| | Fast Steer Hydraulic Circuit | 10 |
| | Fast Steer Valve Removal | 13 |
| | Fast Steer Valve Disassembly | 13 |
| | Fast Steer Valve Inspection | 14 |
| | Fast Steer Valve Re-Assembly | 15 |
| | Fast Steer Valve Installation | 15 |
| | Steering Column Removal and Installation | 16 |
| | Fast Steer Error Codes | 18 |
| | Fast Steer H routines | 19 |
| | Fast Steer Wiring | 24 |

FRONT AXLE AND WHEELS
2 Wheel Drive Front Axle

SECTION 44
Chapter 1

| Section | Description | Page |
|--------------------|--|-------------|
| 44 000 | Specifications | 2 |
| | Tightening Torques | 3 |
| | Special Tools | 4 |
| | Troubleshooting | 4 |
| | Description and Operation | 5 |
| | Sectional Views | 6 |
| 44 101 | Front Axle | 7 |
| | Removal | 7 |
| | Installation | 9 |
| | Front Wheel Hub and Spindle Assembly | 10 |
| | Removal | 11 |
| | Overhaul | 12 |
| | Installation | 12 |
| | Spindle Assembly | 13 |
| | Removal | 13 |
| | Overhaul | 14 |
| Installation | 15 | |
| 44511 | Front Wheel Settings | 16 |
| | Wheel Camber Tests | 16 |
| | Track Width Adjustment | 16 |
| | Axle Centre Beam and Front Support | 17 |
| | Removal | 17 |
| | Overhaul | 17 |
| | Installation | 18 |
| 44 511 | Front Wheel Toe-in | 19 |

CONTENTS - VOLUME 3

AUXILIARY UNITS

SECTION 50

Air Conditioning

Chapter 1

| Section | Description | Page |
|---------------|---|------|
| 50 000 | Specifications | 2 |
| | Tightening Torques | 2 |
| | Special Tools | 2 |
| | Safety Precautions | 3 |
| | Description and Operation | 4 |
| | Fault Finding and System Testing | 15 |
| | Leak Testing, Charging, Discharging and System Flushing | 32 |
| | Flushing the System | 34 |
| | Evacuating the System | 35 |
| | Charging the System | 36 |
| | Component Overhaul (excluding compressor) | 37 |
| 50 200 | Compressor Removal and Installation | 46 |
| 50 200 | Compressor Overhaul | 46 |

ELECTRICAL SYSTEM

SECTION 55

Electrical Introduction

Chapter 1

| Section | Description | Page |
|---------------|---|------|
| 55 100 | Specifications | 1 |
| | Electrical System and Fuses Description | 2 |
| | Fuses and Relays | 5 |
| | Controllers | 17 |
| | Diagnostic Connectors | 19 |
| | System Precautions For Battery Charging and Welding | 20 |
| | Temporary Wiring Repair | 21 |
| | System Diagrams | 23 |

Electronic Instrument Cluster

Chapter 2

| Section | Description | Page |
|---------|---|------|
| 55 000 | Introduction | 2 |
| | Senders, Sensors & Switches | 10 |
| | Error Codes | 22 |
| | Enhanced Keypad and Performance Monitor | 28 |
| | Programming the Displays | 32 |

Starting System

Chapter 3

| Section | Description | Page |
|---------|---------------------------------|------|
| 55 000 | Specifications | 1 |
| | Tightening Torques | 1 |
| | Description and Operation | 2 |
| | Fault Finding | 5 |
| | System Testing | 7 |
| 55 201 | Removal and Installation | 8 |
| | Overhaul | 9 |
| | Bench Tests | 11 |

Charging System

Chapter 4

| Section | Description | Page |
|---------|--|------|
| 55 000 | Specifications | 1 |
| | Tightening Torques | 1 |
| | Description and Operation | 2 |
| | Fault Finding | 5 |
| 55 301 | Removal, Installation and Overhaul | 11 |

Battery

Chapter 5

| Section | Description | Page |
|---------|--|------|
| 55 000 | Specifications | 1 |
| | Description and Operation | 1 |
| 55 300 | Removal and Installation | 2 |
| | Battery Maintenance and Testing | 3 |
| | Battery Charging | 4 |
| | Common Causes of Battery Failure | 6 |

Wiring Diagrams

Chapter 6

| Description | Page |
|--|-------------|
| Wiring diagram circuit descriptions (All Models) | 1 |
| How to use the linear wiring diagrams | 2 |
| Symbols | 4 |
| Component identification and wiring diagram location key | 5 |
| Wiring Diagrams: | |
| 16x16 Transmission, W/Cab, W/Electronic Engine | 13 |
| 16x16 Transmission, W/Cab, W/Mechanical Engine | 71 |
| 24x24 Transmission, W/Cab, W/Electronic Engine | 129 |
| 24x24 Transmission, W/Cab, W/Mechanical Engine | 187 |
| 16x16 Transmission, L/Cab, W/Electronic Engine | 245 |
| 16x16 Transmission, L/Cab, W/Mechanical Engine | 303 |
| 24x24 Transmission, L/Cab, W/Electronic Engine | 361 |
| 24x24 Transmission, L/Cab, W/Mechanical Engine | 419 |
| 12x12 Transmission, W/Cab, W/Mechanical Engine | 477 |
| 12x12 Transmission, L/Cab, W/Mechanical Engine | 535 |
| 16x16 Transmission, W/Cab, W/Electronic Engine, W/EHR's | 593 |
| Wire identification key | 652 |

CONTENTS - VOLUME 4

ELECTRICAL SYSTEM

SECTION 55

Connectors and Harnesses

Chapter 7

| Section | Description | Page |
|----------------|---|-------------|
| 55 000 | Wiring Harnesses | 2 |
| | Main Connectors | 3 |
| | Wire Identification and colour coding | 4 |
| | Lighting Harness | 5 |
| | Front Main 4 Cylinder Mechanical (Engine) Harness | 9 |
| | Front Main 6 Cylinder Electronic (Engine) Harness | 15 |
| | Front Electrical (Engine) Harness (with Electronic engine only) | 21 |
| | Rear Main 16x16 (Transmission) Harness, | 26 |
| | Rear Main 24x24 (Transmission) Harness, | 35 |
| | Cab Main 16x16 / 24x24 Harness | 43 |
| | Cab Switch Panel Harness (16x16 and 24x24) | 61 |
| | Cab Switch Panel Harness (12x12) | 65 |
| | Electronic Remotes Harness | 69 |
| | Fender Harness | 74 |
| | Cab Roof Harness | 78 |
| | Cab Main 12x12 Harness | 86 |
| | Rear Main 12x12 (Transmission) Harness, | 97 |
| | Less Cab Main 16x16 & 24x24 Harness | 102 |
| | Less Cab Main 12x12 Harness | 117 |
| | Cab Roof Harness - Low Profile Cab (from 06-2005) | 127 |

Calibration Procedures

Chapter 8

| Section | Description | Page |
|----------------|---|-------------|
| 55 100 | Set Up Procedures | 1 |
| | Calibration Error Codes ('U' Codes) | 3 |
| | 16x16 Transmission - Clutch and Synchroniser Calibration | 5 |
| | 16x16 Transmission - Manual Adjustment of C3/C4 Clutches | 9 |
| | 24x24 Transmission - Clutch and Synchroniser Calibration | 11 |
| | Electronic Draft Control - Calibration of Lift Lever/Arm Potentiometers | 14 |
| | Electronic Draft Control - Calibration of EDC Valve Solenoids | 16 |
| | Ground Speed Display Calibration | 18 |
| | Suspended Front Axle Calibration | 22 |
| | Electro-Hydraulic Remote Valve Lever Calibration | 24 |
| | Electro-Hydraulic Remote Valve Renumbering procedure | 26 |
| | P.T.O. Torque Sensor Calibration | 28 |
| | P.T.O. Clutch Calibration | 30 |
| | Steering Angle Calibration | 32 |

Fault Codes

Chapter 9

| Section | Description | Page |
|----------------|--|-------------|
| 55 000 | Introduction | 2 |
| | Special Tools | 3 |
| | Wiring Harness Repairs | 3 |
| | Digital Multi-Meter - Basic Operation | 6 |
| | Electrical Test Procedures | 9 |
| | Circuit Components - Basic Description | 12 |
| | Controller Area Network (CAN) System | 22 |
| | Fault Code Displays | 23 |
| | H-Menu Diagnostic Mode | 24 |
| | Fault Code Lists | 25 |
| | Fault Code Charts | |
| | U-Codes | 45 |
| | 0001-1000 (General Fault Codes) | 59 |
| | 1001-2000 (Electronic Draft Control) | 73 |
| | 2001-3000 (Transmission) | 207 |

CONTENTS - VOLUME 5

ELECTRICAL SYSTEM

SECTION 55

Fault Codes

Chapter 9

| | |
|---|-----|
| 3001-4000 (Engine) | 423 |
| 5001-6000 (Rear Power Take-off) | 763 |
| 6001-7000 (Four Wheel Drive) | 813 |
| 7001-8000 (Differential Lock) | 829 |
| 8001-9000 (Front Power Take-off) | 855 |
| 9001-10000 (Front HPL) | 877 |
| 10001-11000 (Front Axle Suspension) | 885 |
| 14001-15000 (Analog Digital Instrument Cluster) | 909 |
| 4001-5000 (Electro-Hydraulic Remotes (EHR's)) | 987 |

Additional Fault Code Charts

Chapter 9a

| Section | Description | Page |
|---------|---|------|
| | U-Codes | 3 |
| | 1001-2000 (Electronic Draft Control) | 6 |
| | 2001-3000 (Transmission) | 11 |
| | 3001-4000 (Engine) | 61 |
| | 5001-6000 (Rear Power Take-off) | 70 |
| | 8001-9000 (Front Power Take-off) | 76 |
| | 10001-11000 (Front Axle Suspension) | 78 |
| | 14001-15000 (Analog Digital Instrument Cluster) | 80 |
| | 15001-16000 (Fast Steer System) | 85 |

Diagnostic 'H' Routines

Chapter 10

| Section | Description | Page |
|---------------|--|------|
| 55 000 | Introduction | 2 |
| | HA/HB Controller H Routines | 9 |
| | DA/DB Controller H Routines | 35 |
| | JA Controller H Routines | 87 |
| | DD Controller (Options) H Routines | 93 |
| | GA Controller H Routines | 127 |

| Section | Description | Page |
|----------------|---|-------------|
| 55 100 | Specifications | 1 |
| | Electrical System and Fuses Description | 2 |
| | Fuses and Relays | 4 |
| | Controllers | 17 |
| | Diagnostic Connectors | 19 |
| | System Precautions For Battery Charging and Welding | 20 |
| | Temporary Wiring Repair | 21 |