

TC29DA, TC33DA REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL INFORMATION	2
SECTION 10 - ENGINE	3
SECTION 18 - CLUTCH	10
SECTION 21 - GEAR TRANSMISSION	11
SECTION 25 - FWD AXLE	14
SECTION 27 - DIFFERENTIAL, REAR AXLE	17
SECTION 29 - HYDROSTATIC TRANSMISSION	18
SECTION 31 - POWER TAKE-OFF SYSTEMS	22
SECTION 33 - BRAKES	24
SECTION 35 - HYDRAULIC SYSTEM	24
SECTION 41 - STEERING SYSTEMS	27
SECTION 44 - WHEELS AND TIRES	29
SECTION 55 - ELECTRICAL SYSTEM	30
SECTION 90 - PLATFORM	36

The following pages are the collation of the contents pages from each section and chapter of the TC29DA, TC33DA Repair manual. Complete Repair part # 87057407.

The sections used through out all New Holland product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the TC29DA, TC33DA Tractors.

SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87057408

Chapter 1 - General Information

CONTENTS

Section	Description	Page
	Personal Safety	2
	Machine Safety	2
	Safety	3
	Precautionary Statements	3
	Servicing the Tractor	3
	Operating the Tractor	4
	Driving the Tractor	4
	Operating the PTO	5
	Diesel Fuel	5
	Safety Frame (ROPS)	5
	Safety Decals	6
	Instruction Decals	7
	Ecology and the Environment	11
	Specifications	13
	General Dimensions	19
	Tightening Torques	22
00 400	Lubrication and Maintenance	24
	Lubrication	24
	Liquid Ballast (Optional)	26
	Tire Pressure	26
	Rear Tire Liquid	26

SECTION 10 - ENGINE

BOOK 1 - 87057408

Chapter 1 - Engine Systems

CONTENTS

Section	Description	Page
	Specifications	6
	Engine Bolt Torque Specifications	14
	Engine Fuel System Bolt Torque Specifications	14
	Metric Bolt Torque Specifications	15
	Special Tools	16
	Compression Test and Tools	16
	Description of Operation - General Information	17
	Cylinder Head and Valve Train Components	18
	Cylinder Block Assembly	18
	Troubleshooting	20
	Overhaul	24
	Engine	24
	Preparation	24
	Fuel Injector and Glow Plug	25
	Removal	25
	Oil Pressure Switch	26
	Removal	26
	Temperature Sending Switch and Alternator	26
	Removal	26
	Fan, Water Pump and External Oil Tube	26
	Removal	26
	Head Cover	27
	Removal	27
	Rocker Arm Shaft and Support Bracket	27
	Removal	27
10 101	Cylinder Head	28
	Removal	28
	Valve Tappet	28
	Removal	28
	Fuel Shutoff Solenoid	28
	Removal	28
	Timing Gear Cover	29
	Removal	29

SECTION 10 - ENGINE

BOOK 1 - 87057408

Chapter 1 - Engine Systems (Continued)

CONTENTS

Section	Description	Page
10 106	Timing Gears and Camshaft	31
	Removal	31
10 102	Oil Sump	31
	Removal	31
	Oil Suction Pipe and Strainer	32
	Removal	32
	Connecting Rods, Bearings, Pistons and Rings	32
	Removal	32
10 103	Flywheel	33
	Removal	33
	Backplate and Oil Seal	33
	Removal	33
	Crankshaft and Main Bearings	33
	Removal	33
10 101	Cylinder Head	34
	Disassembly	34
	Inspection and Repair	34
	Valve Seats	35
	Inspection and Repair	35
	Valves	36
	Inspection and Replacement	36
	Valve Guides	37
	Inspection and Replacement	37
	Valve Springs	38
	Inspection and Replacement	38
	Rocker Arms	38
	Inspection and Replacement	38
	Push Rods	39
	Inspection and Replacement	39
	Cylinder Head	40
	Assembly	40
	Cylinder Block	40
	Inspection	40

SECTION 10 - ENGINE

BOOK 1 - 87057408

Chapter 1 - Engine Systems (Continued)

CONTENTS

Section	Description	Page
10 105	Pistons	41
	Disassembly and Inspection	41
	Piston Rings	43
	Disassembly and Inspection	43
	Connecting Rods	43
	Disassembly and Inspection	43
	Connecting Rod Bearing Oil Clearance Check	45
	Pistons, Rings and Connecting Rod	46
	Assembly	46
10 103	Main Bearing and Thrust Washer	47
	Removal and Inspection	47
	Crankshaft	47
	Inspection	47
	Crankshaft Bearing (Bushing)	48
	Inspection	48
	Replacement	49
	Crankshaft Main Bearing and Thrust Washer	49
	Assembly	49
	Port Block	50
	Removal	50
	Installation	50
10 106	Timing Gear	50
	Inspection	50
	Camshaft	51
	Disassembly	51
	Inspection	51
	Assembly	51
10 103	Flywheel	52
	Inspection and Repair	52
10 102	Timing Gear Housing	52
	Front Oil Seal and Steering Pump Seal	52
	Replacement	52

SECTION 10 - ENGINE

BOOK 1 - 87057408

Chapter 1 - Engine Systems (Continued)

CONTENTS

Section	Description	Page
10 103	Crankshaft and Bearing Holder	53
	Installation	53
	Rear Oil Seal and Backplate	53
	Installation	53
	Flywheel	54
	Installation	54
10 105	Pistons and Connecting Rods	54
	Installation	54
	Oil Suction Pipe and Suction Strainer	55
	Installation	55
	Oil Sump	55
	Installation	55
10 106	Camshaft and Camshaft Gear	56
	Installation	56
10 106	Idler Gear, Oil Pump and Injection Timing	56
	Installation	56
	Timing Gear Cover	56
	Installation	56
	Crankshaft Pulley	57
	Installation	57
	Fuel Injection Pump	57
	Installation	57
	Power Steering Pump	57
	Installation	57
10 101	Head Gasket Selection	58
	Cylinder Head	58
	Assembly	58
10 106	Valve Clearance Adjustment	59
	Head Cover	59
	Installation	59
	Water Pump and Cooling Fan	59
	Installation	59

SECTION 10 - ENGINE

BOOK 1 - 87057408

Chapter 1 - Engine Systems (Continued)

CONTENTS

Section	Description	Page
	External Oil Tube	60
	Installation	60
	Glow Plug and Connector	60
	Installation	60
	Fuel Injector	60
	Installation	60
10 218	Fuel Piping	61
	Installation	61
	Alternator and Temperature Sender Switch	61
	Installation	61
	Exhaust Manifold	61
	Installation	61
10 304	Description of Operation - Engine Lubrication System	62
10 206	Oil Filter	65
	Construction and Function	65
	Maintenance	65
10 304	Oil Pump	65
	Removal	65
	Inspection	65
	Installation and Adjustment	66
	Engine Oil Pressure Check	67
	Oil Pressure Relief Valve	68
	Removal	68
	Installation	68
	Oil Consumption	68
10 400	Description of Operation - Cooling System	69
	Maintenance	71
	Coolant	71
	Radiator Cap	71
10 402	Thermostat	72
10 402	Water Pump	72
10 414	Cooling Fan	72
	Overhaul	73

SECTION 10 - ENGINE

BOOK 1 - 87057408

Chapter 1 - Engine Systems (Continued)

CONTENTS

Section	Description	Page
10 406	Radiator	73
	Removal	73
	Inspection and Repair	75
	Installation	75
10 402	Water Pump	77
	Removal	77
	Inspection and Repair	78
	Installation	78
10 402	Thermostat	79
	Removal	79
	Inspection and Repair	80
	Installation	80

SECTION 10 - ENGINE

BOOK 1 - 87057408

Chapter 2 - Fuel System

CONTENTS

Section	Description	Page
	Specifications	3
	Fuel Injection Pump Specifications	4
	Special Tools	4
	Troubleshooting - General	5
	Troubleshooting - Fuel Injectors	8
	Troubleshooting - Governor	9
10 242	Description of Operation - Injection Pump	10
	Effective Stroke	11
10 244	Fuel Variation Mechanism	11
	Delivery Valve	12

SECTION 10 - ENGINE

BOOK 1 - 87057408

Chapter 2 - Fuel System (Continued)

CONTENTS

Section	Description	Page
	Injection Quantity Adjustment Mechanism	13
10 244	CTD (Compact Timing Device) Mechanism	13
10 214	Delivery Valves	15
10 214	Injection Pump	17
	Removal	17
	Repair	18
	Installation	19
	Timing and Governor Adjustment	20
10 230	Original Pump and Drive Components	20
	Installation	20
	New Pump or Drive Component	21
	Installation	21
	Spill-Timing Procedure	22
	Bleeding the Fuel System	26
	Fuel Setting - Adjustment	28
	Fuel Screw/High Idle	28
10 230	Description of Operation - Governor	29
	Governor	31
	Disassembly	31
	Assembly	32
10 218	Description of Operation - Injectors	34
	Injectors	35
	Removal	35
	Disassembly	36
	Assembly and Adjustment	36
	Engine Breather Valve	37
	Removal	38
	Installation	38
	Troubleshooting	39

SECTION 18 - CLUTCH

BOOK 1 - 87057408

Chapter 1 - Clutch

CONTENTS

Section	Description	Page
	Troubleshooting	3
	Specifications	4
	Special Tools	5
	Description of Operation - Single Clutch	6
	HST Transmission	6
	Adjustments	8
	Free-Play	8
	Overhaul	9
	Single Clutch	9
	Removal	9
	Inspection	9
	Installation	10
	Adjustment	11
	Release Lever Height	11
	Description of Operation - Double Clutch	13
	9 x 3 Gear Transmission	13
	Adjustments	14
	Free-Play	14
	PTO Clutch	14
	Overhaul	15
	Double Clutch	15
	Disassembly	15
	Inspection	16
	Assembly	16
	Double Clutch Adjustments	17
	Servicing Clutch-Related Components	18
	Clutch Pilot Bearing (9 x 3 Transmission Only)	18
	Removal	18
	Installation	18

SECTION 18 - CLUTCH

BOOK 1 - 87057408

Chapter 1 - Clutch (Continued)

CONTENTS

Section	Description	Page
	Clutch Dimensions	19
	Clutch Release Bearing	21
	Removal	21
	Inspection	21
	Assembly	22
	Clutch Linkage Components	22
	Clutch Cross Shaft Bushings	22
	Removal	22
	Assembly	23
	Clutch Pedal Bushings	24
	Removal	24
	Assembly	24

SECTION 21 - GEAR TRANSMISSION

BOOK 2 - 87057409

Chapter 1 - Gear Transmission

CONTENTS

Section	Description	Page
	Specifications	3
	General Bolt Torque Specifications	4
	Special Tools	5
	Description of Operation	6
	Powerflow	8
	Initial Power Flow - Transmission Input	10
	Initial Power Flow - PTO Input	11
	FWD Power Flow	12
21 110 10	Overhaul	13

SECTION 21 - GEAR TRANSMISSION

BOOK 2 - 87057409

Chapter 1 - Gear Transmission (Continued)

CONTENTS

Section	Description	Page
21 114	Separating the Tractor at Clutch Housing/Engine	13
	Separating Clutch Housing/Transmission	20
	Separating Transmission/Differential	20
	Clutch Housing	21
21 148 63	Disassembly	21
	Shift Rails	22
	Removal	22
	Main Shaft and Gears	22
	Removal	22
	PTO Countershaft and Gears	23
	Removal	23
	Countershaft and Gears	23
	Removal	23
	Reverse Idler Shaft and Gear	24
	Removal	24
	FWD Shift Rail	24
	Removal	24
	FWD Driveshaft and Gear	25
	Removal	25
	Rear Main Shaft and Gears	25
	Removal	25
	Range Gear Shift Rail, Arm and Fork	25
	Removal	25
	Drive Pinion and Gears	25
	Removal	25
	Inspection	26
	Assembly	26
	Preparation	26
	Drive Pinion and Gears	27
	Installation	27
	Range Gear Shift Rail, Arm and Fork	27
	Installation	27

SECTION 21 - GEAR TRANSMISSION

BOOK 2 - 87057409

Chapter 1 - Gear Transmission (Continued)

CONTENTS

Section	Description	Page
	Rear Main Shaft and Gears	28
	Installation	28
	FWD Driveshaft and Gear	28
	Installation	28
	FWD Shift Rail	29
	Installation	29
	Reverse Idler Shaft and Gear	29
	Installation	29
	Countershaft and Gears	30
	Installation	30
	PTO Countershaft and Gears	30
	Installation	30
	Main Shaft and Gears	32
	Installation	32
	Shift Rails	33
	Installation	33
	Clutch Housing	34
	Assembly	34
	Transmission Differential	35
	Assembly	35
	Clutch Housing/Transmission	36
	Assembly	36
	Clutch Housing/Engine	37
	Assembly	37
	Overhaul - Main Shift Lever	45

SECTION 25 - FWD AXLE

BOOK 2 - 87057409

Chapter 1 - SuperSteer

CONTENTS

Section	Description	Page
	Specifications	3
	Front to Rear Axle Ratio	3
	Special Tools	6
25 100	Description of Operation - SuperSteer, Front Axle and Sensitrack	6
	Automatic Position (Engaged)	7
	Automatic Position (Disengaged)	7
	Full Time Front Wheel Drive (Locked Down)	7
	SuperSteer Front Axle	8
	Sensitrack	10
	Removal	10
	Disassembly	11
	Inspection and Repair	11
	Assembly	12
	Cable Adjustment	15
	Installation	15
25 100	SuperSteer Axle	16
	Removal	16
	SuperSteer Axle Components	19
25 108	Reduction Gear - Drop Box	20
	Removal	20
	Disassembly	22
	Reduction Gear Box Assembly	23
	Seal Installation	23
	Front Axle and Differential	25
25 102	Disassembly	25
	Drive Pinion	26
	Disassembly	26
	Front Axle	26
	Inspection and Repair	26
	Differential	27
	Inspection	27

SECTION 25 - FWD AXLE

BOOK 2 - 87057409

Chapter 1 - SuperSteer (Continued)

CONTENTS

Section	Description	Page
	Front Axle and Differential	27
	Assembly	27
	Differential Gear	28
	Assembly	28
	Axle and Differential	28
	Assembly	28
	Ring Gear-To-Pinion	29
	Backlash Check and Adjustment	29
	SuperSteer Axle	33
	Installation	33
	Crankshaft Pulley	34
	Installation	34
	Steering Stops	35
	Adjustment	35

SECTION 25 - FWD AXLE

BOOK 2 - 87057409

Chapter 2 - Standard FWD Axle

CONTENTS

Section	Description	Page
	Specifications	2
	Four Wheel Drive	2
	Bolt Torque Specifications	3
	Troubleshooting	4
	Description of Operation	5
	Standard Front-Wheel Drive Axle	5
	Removal	7
25 102	Front Axle and Differential	8
	Disassembly	8
	Drive Pinion	9
	Disassembly	9
	Front Axle	10
	Inspection and Repair	10
	Differential	11
	Inspection and Repair	11
	Front Axle and Differential	11
	Assembly	11
	Differential Gear	12
	Assembly	12
	Axle and Differential	12
	Assembly	12
	Ring Gear-To-Pinion	13
	Backlash Check and Adjustment	13
	Front Wheel Drive Axle	15
	Installation	15
	Reduction Gear – Drop Box	17
	Disassembly	17
	Reduction Gear Box	19
	Assembly	19
	Steering Stops	21
	Adjustment	21

SECTION 27 - DIFFERENTIAL, REAR AXLE

BOOK 2 - 87057409

Chapter 1 - Differential, Rear Axle

CONTENTS

Section	Description	Page
	Specifications	2
	Ring Gear and Pinion Gear Pattern Specification and Adjustment	2
	Bolt Torque Specifications	3
	Special Tools	3
	Introduction	4
27 110	Description of Operation - Differential Assembly	5
27 110	Differential Lock	6
	Overhaul	7
27 106	Differential	7
	Removal	7
	Disassembly	9
	Inspection	9
	Drive Pinion	10
	Removal	10
	Disassembly (with HST Transmission)	10
	Disassembly (with 9 x 3 Transmission)	11
	Assembly and Installation	12
	Differential	13
	Assembly and Installation	13
	Description of Operation - Rear Axle	15
	Overhaul	16
	Rear Axle	16
	Removal	16
27 126	Disassembly	17
	Inspection	20
	Assembly	20

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87057409

Chapter 1 - Hydrostatic Transmission

CONTENTS

Section	Description	Page
	Specifications	5
	Hydrostatic Transmission	5
	Bolt Torques	5
	Special Tools	8
	Troubleshooting	9
	Description of Operation	10
29 202	Hydrostatic Transmission – TC29DA and TC33DA	10
29 212	Variable Displacement Pump	12
29 212	Fixed Displacement Motor	13
	Fluid Flow	14
	Neutral Position	14
	Forward Position	15
	Reverse Position	16
	HST Charge Circuit	17
	Overhaul	18
	Separating the Tractor Between the Engine and Clutch Housing	18
	Attaching the Tractor at Engine and Clutch Housing	21
	Separating the Tractor Between the Hydrostatic Transmission and the Rear Axle Center Housing	22
	Hydrostatic Unit	22
	Removal	22
	Hydrostatic Gearbox	23
	Removal	23
	Hydrostatic Unit and Gearbox	23
	Installation	23
29 202	Hydrostatic Pump	26
	Disassembly	26
	Hydrostatic Motor	27
	Disassembly	27
	Hydrostatic Motor Shaft	29
	Disassembly	29

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87057409

Chapter 1 - Hydrostatic Transmission (Continued)

CONTENTS

Section	Description	Page
	Charge Pump	29
	Disassembly	29
	Swash Plate	30
	Disassembly	30
	Inspection	30
	Hydrostatic Pump	32
	Assembly	32
	HST Piston Pump Cylinder Block	33
	Assembly	33
	HST Motor Cylinder Block	35
	Assembly	35
29 130	Port Block - Neutral and Feed Valves	36
	Disassembly	36
	Inspection	36
	Assembly	36
	Neutral Valve	37
	Disassembly	37
	Inspection	37
	Assembly	37
	Charge Pump Relief Valve	37
	Disassembly	37
	Inspection	37
	Assembly	37
	High Pressure Relief Valve	38
	Removal	38
	Installation	38
	Hydrostatic Pump and Port Block	38
	Assembly	38
	Motor and Port Block	40
	Assembly	40
	HST Cooler Check Valve	41
	Disassembly	41

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87057409

Chapter 1 - Hydrostatic Transmission (Continued)

CONTENTS

Section	Description	Page
	Inspection	41
	Assembly	41
	Pressure Tests	42
	High Pressure Relief Valve	42
	Charge Pump Relief Valve	43
	Description of Operation	44
29 300	Hydrostatic Transmission Gearbox	44
	HST	45
	Gearbox Power Flow	45
	Overhaul	49
	Gearbox	49
	Removal	49
	Gearbox Case	50
	Removal	50
	PTO Input Shaft	50
	Disassembly	50
	Transmission Input Shaft	50
	Disassembly	50
	FWD Shift Rod	51
	Disassembly	51
	FWD Drive Shaft	51
	Disassembly	51
	Rear Main Shaft	51
	Disassembly	51
	Range Gear Shifter Rod	52
	Disassembly	52
	Drive Pinion Shaft	52
	Disassembly	52
	PTO Countershaft	52
	Disassembly	52
	Gearbox Components	53
	Inspection	53

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87057409

Chapter 1 - Hydrostatic Transmission (Continued)

CONTENTS

Section	Description	Page
	Drive Pinion	54
	Assembly	54
	PTO Countershaft	54
	Assembly	54
	Range Gear Shifter Rod	54
	Assembly	54
	Rear Main Shaft	55
	Assembly	55
	FWD Main Shaft	55
	Assembly	55
	FWD Shift Rod	55
	Assembly	55
	Transmission Input Shaft	56
	Assembly	56
	PTO Input Shaft	56
	Assembly	56
	Gearbox	56
	Assembly	56
	Adjustments	57
	Rear PTO Link	57
	Adjust	57
	Mid-PTO Link	57
	Adjust	57
	Range Gear Link	57
	Adjust	57
29 200	HST Neutral Position	58
	Adjust	58
	Treadle Forward Stop	59
	Adjust	59
	Treadle Rear Stop Adjustment	59
	Cruise Control Adjustment	59

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87057409

Chapter 1 - Hydrostatic Transmission (Continued)

CONTENTS

Section	Description	Page
	HST Neutralizer	59
	Removal	60
	Disassembly	60
	Inspection	60
	Assembly	61
	Installation	61

SECTION 31 - POWER TAKE-OFF SYSTEMS

BOOK 3 - 87057410

Chapter 1 - Power Take-Off Systems

CONTENTS

Section	Description	Page
	Description of Operation	2
	Live Power Take-Off	2
	Power Take-Off Drive - Hydrostatic Transmission	3
	Overhaul	4
	Power Take-Off	4
	Removal	4
	Output Shaft	4
	Removal	4
	Rear Countershaft	5
	Removal	5
	Front Countershaft	5
	Removal	5
	Shifter	5
	Removal	5
	Assembly	7
	Front Countershaft	8

SECTION 31 - POWER TAKE-OFF SYSTEMS

BOOK 3 - 87057410

Chapter 1 - Power Take-Off Systems (Continued)

CONTENTS

Section	Description	Page
	Assembly	8
	Rear Countershaft	8
	Assembly	8
	Center Countershaft	8
	Assembly	8
	Output Shaft	9
	Assembly	9
	Description of Operation	10
	Mid-Mount Power Take-Off	10
	Overhaul	10
	Countershaft	12
	Removal	12
	Shifter Arm	12
	Removal	12
	Gear Box	13
	Disassembly	13
	Gear Shifter	13
	Removal	13
	Output Shaft	13
	Removal	13
	Inspection	14
	Gear Box	14
	Assembly	14
	Output Shaft	14
	Installation	14
	Gear Shifter	14
	Installation	14
	Shifter Arm	15
	Assembly	15
	Countershaft	15
	Assembly	15
	Rear PTO Components Assembly	15
	Specifications	16

SECTION 33 - BRAKES

BOOK 3 - 87057410

Chapter 1 - Brakes

CONTENTS

Section	Description	Page
	Description of Operation	2
33 120	Brakes	2
33 110	Parking Brake	4
33 120	Overhaul	5
	Brakes	5
	Removal	5
	Inspection	7
	Assembly	8
	Brake Adjustment	10
	Specifications	11

SECTION 35 - HYDRAULIC SYSTEM

BOOK 3 - 87057410

Chapter 1 - Hydraulic System

CONTENTS

Section	Description	Page
35 000	Description of Operation	4
	Hydraulic Fluid Filter	5
35 080	Combination System Relief - Diverter Valve Manifold	5
35 200	Control Valve (HPL)	6
	Fluid Flow	7
	Flow Priority	7
35 210	Neutral Position	8
	Raising Position	9
	Lowering Position	10
35 200	Bypass Spool - Closed Position	11
	Bypass Spool - Open Position	11
35 183	Flow Control Valve	12

SECTION 35 - HYDRAULIC SYSTEM

BOOK 3 - 87057410

Chapter 1 - Hydraulic System (Continued)

CONTENTS

Section	Description	Page
35 108	Linkage Operation - Single Lever - Position Control	12
	Position Control Operation	13
	Neutral Position to Raise Position	13
	Raise Position to Neutral Position	13
	Neutral Position to Lowering Position	13
	Overhaul	14
35 110	Lift Cylinder	14
	Removal	14
	Disassembly	15
	Inspection	17
	Assembly	17
	Flow Control Valve	20
	Removal	20
	Disassembly	20
	Inspection	20
	Assembly	20
35 200	Hydraulic Control Valve (HPL)	21
	Removal	21
	Disassembly	21
	Inspection	22
	Assembly	23
	Installation	24
35 180	Combination System Relief Valve and Diverter Valve	25
	Removal	25
	Disassembly	25
	Inspection	25
	Assembly	25
	Adjustments	26
35 124	HPL Linkage	26
	Adjustment Procedure	26
	Control Lever	26

SECTION 35 - HYDRAULIC SYSTEM

BOOK 3 - 87057410

Chapter 1 - Hydraulic System (Continued)

CONTENTS

Section	Description	Page
	Description of Operation	27
35 304	Hydraulic Pump and Filter	27
	Overhaul	27
	Hydraulic Pump	27
	Disassembly	28
	Inspection	28
	Assembly	28
	Description of Operation	29
35 204	Remote Valves	29
	Rear (Single Spool) Remote Valve	30
	Front (Double Spool) Remote Valve	30
	Fluid Flow	32
	Neutral Position - Rear (Single Spool) Remote System	32
	Remote Cylinder Extending - Rear (Single Spool) Remote System	33
	Remote Cylinder Retracting - Rear (Single Spool) Remote System	34
35 184	Fluid Flow	35
	Front (Double Spool) Remote Control System Bucket Control - Neutral and Lift Control - Neutral	35
	Bucket Control - Dumping and Lift Control - Neutral - Front (Double Spool) Remote Control System	36
	Bucket Control - Dumping Regen and Lift Control - Neutral - Front (Double Spool) Remote Control System	37
	Bucket Control - Rollback and Lift Control - Neutral - Front (Double Spool) Remote Control System	38
	Bucket Control - Neutral and Lift Control - Raising - Front (Double Spool) Remote Control System	39
	Bucket Control - Neutral and Lift Control - Lowering - Front (Double Spool) Remote Control System	40
	Bucket Control - Neutral and Lift Control - Float - Front (Double Spool) Remote Control System	41
	Overhaul	42
35 204	Rear (Single Spool) Remote Valve	42
	Removal	42

SECTION 35 - HYDRAULIC SYSTEM

BOOK 3 - 87057410

Chapter 1 - Hydraulic System (Continued)

CONTENTS

Section	Description	Page
	Disassembly	42
	Inspection	43
	Assembly	43
	Front (Double Spool) Remote Control Valve	43
	Removal	43
	Disassembly	44
	Inspection	46
	Assembly	46
	Troubleshooting	47
	Pressure Testing	49
	Main System Relief Valve	49
	Inlet Restriction Test	50
	Pump Efficiency Test	51
	Specifications	52
	Special Tools	53
	Bolt Torque Specifications	54

SECTION 41 - STEERING SYSTEMS

BOOK 3 - 87057410

Chapter 1 - Power Steering

CONTENTS

Section	Description	Page
	Specifications	3
	Metric Bolt Torque Specifications	4
	Special Tools	5
	Description of Operation - Power Steering System	6
	Description of Operation - SuperSteer	7

SECTION 41 - STEERING SYSTEMS

BOOK 3 - 87057410

Chapter 1 - Power Steering (Continued)

CONTENTS

Section	Description	Page
41 204	Power-Steering Control Motor	9
41 206	Power Steering Pump	11
41 216	FWD Power Steering Cylinder	11
41 206	FWD Power Steering Operation	12
41 200	FWD Manual Operation	15
	SuperSteer Power Steering Operation	16
	SuperSteer Manual Operation	19
	Troubleshooting	20
	Overhaul	22
41 204	Power Steering Control Motor	22
	Removal	22
	Disassembly	23
	Inspection	28
	Assembly	29
	Installation	35
41 216	FWD Steering Cylinder	36
	Removal	36
	Disassembly	36
	Inspection	37
	Assembly	37
	Installation	37
41 216	SuperSteer Steering Cylinder	38
	Removal	38
	Disassembly	39
	Inspection	40
	Assembly	40
	Installation	41
41 206	Power Steering Pump	43
	Removal	43
	Disassembly	44
	Inspection and Repair	44
	Assembly	44
	Power Steering Tubes	45

SECTION 41 - STEERING SYSTEMS

BOOK 3 - 87057410

Chapter 1 - Power Steering (Continued)

CONTENTS

Section	Description	Page
	Steering Column	46
	Removal and Disassembly	46
	Assembly and Installation	49
	Adjustable Steering Column	50
	Disassembly	52
	Inspection	53
	Assembly	54
	Pressure Testing	56
	Pump, Steering Motor and Relief Valve	56
	Steering Cylinder	57
	Steering Stops	57

SECTION 44 - WHEELS AND TIRES

BOOK 3 - 87057410

Chapter 1 - Wheels and Tires

CONTENTS

Section	Description	Page
	Wheels and Tires	2
	FWD Tread Setting	2
	Front Wheel Settings	3
	Rear Wheel Settings	3
	Rear Axle Tread Setting	4
	Tractor Weighting	4
	Weighting for Stability	4
	Weighting Limitations	4
	Rear Wheel Weight Installation	6
	Liquid Ballast	7
	Tire Pressure	7
	Rear Tire Liquid	7
	Wheel Nut Torque Specification	8

SECTION 55 - ELECTRICAL SYSTEM

BOOK 4 - 87057411

Chapter 1 - Electrical Components

CONTENTS

Section	Description	Page
	Description of Electrical System	4
	Component Location and Function	4
	Wiring Harnesses	5
	Grounds	6
	Battery and Fuses	7
	Battery	7
	Description	7
	Checking the Battery Electrolyte Level	7
	Removal	8
	Installation	8
	Fuse Block	9
	Description	9
	Main Fuse	9
	Description	9
	Electrical System Components – Description and Testing	10
	Key Switch	10
	Description	10
	Testing	10
	Light Switch	12
	Description	12
	Removal	13
	Terminal Identification	14
	Testing	14
	Hazard Light Switch	14
	Description	14
	Removal	15
	Testing	16
	Installation	17
	Turn Signal Switch	18
	Description	18
	Removal	18
	Testing	19
	Installation	20