

FX30, FX40, FX50, FX60 REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL INFORMATION	2
SECTION 10 - ENGINE	3
SECTION 14 - LIVE P.T.O.	10
SECTION 21 - TRANSMISSION	13
SECTION 23 - 4WD LINES	14
SECTION 25 - FRONT MECHANICAL DRIVE	14
SECTION 29 - HYDROSTATIC SYSTEM	15
SECTION 33 - BRAKES AND CONTROL	16
SECTION 35 - HYDRAULIC SYSTEM	16
SECTION 50 - CAB CLIMATE CONTROL	20
SECTION 55 - ELECTRICAL SYSTEM	20
SECTION 60 - PRODUCT FEEDING	24
SECTION 64 - CHOPPING	26
SECTION 70 - EJECTION	27

The following pages are the collation of the contents pages from each section and chapter of the FX30, FX40, FX50 and FX60 Repair manual. Complete Repair part # 87342121.

The sections used through out all New Holland product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book. The sections listed above are the sections utilized for the FX30, FX40, FX50 and FX60 Forage Harvesters.

SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87342122

CONTENT

Section	Description	Page
	Introduction	2
	Important information	2
	General instructions	3
	Shimming	3
	Rotating shaft seals	3
	O-ring seals	3
	Sealing compounds	3
	Bearings	3
	Cotter pins	3
	Protecting the electronic / electrical systems during charging or welding	4
	Spare parts	5
	Tools	5
	Safety regulations	6
	Accident prevention	6
	Safety rules	6
	General guidelines	6
	Start-up	8
	Engine	8
	Electrical system	8
	Hydraulic systems	8
	Wheels and Tyres	9
	Removal and Re-fitting	9
	Explanation of machine serial number	10
	Conversion chart	11
	Hardware tightening torques	12
	Drive line and components	14
	Lubricants to be used	16

SECTION 10 - ENGINE

BOOK 1 - 87342122

Chapter 1 - IVECO Engine F3A - General

Model
FX 30

IVECO Engine
F3AE0684D*B001

CONTENTS

Section	Description	Page
	Walk around the engine	2
	Left Side View	2
	Right Side View	3
	Front View	4
	Rear View	5
	Top View	6
	The iveco engine	7
	Engine block and cylinder liners	9
	Crankshaft	9
	Crankshaft sealing rings	10
	Connecting rods	10
	Pistons	10
	Camshaft	11
	Timing system	11
	Flywheel	12
	Auxiliary drivebelt	13
	Lubrication	14
	Oil filter	15
	External Coil	15
	Upstream Mount	15
	Filter Septum	15
	Downstream Mount	15
	Structural Parts	15
	Oil sump	16
	Cooling	16
	Electronically controlled injection system	17
	Electronic Control Unit	17
	Pump injector	18
	Filling Stage	18
	Injection Stage	18
	Flow-back Stage	19

SECTION 10 - ENGINE

BOOK 1 - 87342122

Chapter 2 - IVECO Engine - F3A

Model IVECO Engine
FX 30 F3AE0684D*B001

CONTENTS

Section	Description	Page
	General specifications	3
	Fuel system data	7
	Main data	8
	Torque settings	17
	Plan of tightening sequence	22
	Sub-Cranckcase	22
	Cylinder head	23
	Exhaust manifold	23
	Turbocharger	23
	Heat exchanger	24
	Engine oil sump	24
	Rocker arm cover	24
	Tools	25
	Mechanical troubleshooting	29
	Preliminary conditions	29
Op. 10 001 54	Engine - Disassembly – Assembly	33
	General notes	43
	Cranckshaft	44
	Pistons, Pistons rings and Connecting rods	48
	Cylinder head	50
	Oil pump and , timing system intermediate gears	51
	Engine flywheel	53
	Camshaft	54
	Injectors pump	55
	Rocker arm shaft	55
	Completing the engine	59
	Assembly diagram for Fan drive belt – Water pump – Alternator	63
	Cranckcase, Cylinder liners	64
	Cranckshaft, Bearings	67

SECTION 10 - ENGINE

BOOK 1 - 87342122

Chapter 2 - IVECO Engine - F3A (Continued)

Section	Description	Page
	Selecting main and big end bearing shells	70
	Main journals	72
	Crankpins	72
	Selecting small end bearings (pins with nominal diameter)	72
	Selecting the main bearing shells (pins with nominal diameter)	74
	Selecting the main bearing shells (pins with nominal diameter)	76
	Selecting the main bearing shells (ground pins)	77
	Selecting the big end bearing shells (pins with nominal diameter)	79
	Selecting the big end bearing shells (ground pins)	81
	Checking main journal assembly clearance	83
	Tightening sequence of the screws fixing the sub-crankcase under the crankcase.	84
	Remove the sub-crankcase	84
	Checking crankshaft end float	84
	Pistons	85
	Connecting rods	88
	Piston and Connecting rod - Assembly	91
	Cylinder head	95
	Tappets and Camshaft	98
	Valve springs, Rocker arm shaft and Rocker arms	103
	Lubrication system	106
	Cooling circuit	111
	Fuel supply	112
Op. 10 101 53	Replacing the valve guides	115
Op. 10 101 60	Injector case - Replacement	116
Op. 10 102 70	Crankshaft front cover seal - Replacement	119
Op. 10 106 12	Adjusting clearance of rocker arms to valves and pre-load of pump injector rocker arms	120
Op. 10 218 30	Pump injector - Removal - Refitting	122
Op. 10 246 14	Bleeding the fuel supply system	125
Op. 10 402 11	Water pump - Removal-Refitting	126
Op. 10 402 30	Thermostat - Removal - Refitting	127

SECTION 10 - ENGINE

BOOK 1 - 87342122

Chapter 3 - IVECO Engine F3B - General

Model	IVECO Engine
FX 40	F3BE0684A*B001
FX 50	F3BE0684D*B001

CONTENTS

Section	Description	Page
	Engine description	3
	Engine main components	3
	Crankshaft	4
	Crankcase gas ring	4
	Connecting rods	5
	Pistons	5
	Cylinder head	6
	Camshaft	6
	Intake valve control	6
	Exhaust valve control	6
	Injector-pump control	6
	Camshaft drive	7
	Camshaft driving	7
	Engine flywheel	8
	Auxiliary component control	9
	Oil sump	9
	Oil filter	10
	Fuel supply	11
	Main components of the ms6.2 edc system	11
	Pump injector	11
	Operation	12
	Filling phase	12
	Injection phase	12
	Pressure reduction phase	13

SECTION 10 - ENGINE

BOOK 1 - 87342122

Chapter 3 - IVECO Engine F3B - General (Continued)

Section	Description	Page
	MS6.2 electronic control unit	13
	Control unit operation	14
	Fuel batching	14
	Flow-rate correction depending on water temperature	14
	Flow-rate correction to avoid noises, fumes or overloads	14
	De-rating	14
	Electronic injection spark advance check	14
	Speed regulator	15
	Engine start-up	15
	Cold start-up	15
	Hot start-up	15
	Run Up	15
	After Run	15
	Cylinder Balancing	16
	Synchronisation search	16
	Engine coolant temperature sensor	16
	Fuel temperature sensor	16
	Supercharging air temperature sensor	17
	Supercharging pressure sensor	17
	Flywheel sensor	17
	Distribution sensor	18
	Pre - After heating resistance	18

SECTION 10 - ENGINE

BOOK 1 - 87342122

Chapter 4 - IVECO Engine F3B

Model	IVECO Engine
FX 40	F3BE0684A*B001
FX 50	F3BE0684D*B001

CONTENTS

Section	Description	Page
	General specification	3
	Fuel system data	7
	Main data	8
	Torque settings	13
	Plan of tightening sequence	16
	Tools	19
	Mechanical troubleshooting	22
Op. 10 001 54	Engine - Disassembly – Assembly	30
	General notes	39
	Crankshaft	41
	Pistons and connecting rods	45
	Cylinder head	47
	Oil pump and intermediate timing gears	48
	Engine flywheel	49
	Camshaft	50
	Injectors pump	52
	Rocker arm shaft	52
	Completing the engine	56
	Crankcase and cylinder liners	61
	Crankshaft and Bearings	63

SECTION 10 - ENGINE

BOOK 1 - 87342122

Chapter 4 - IVECO Engine F3B (Continued)

Section	Description	Page
	Selecting main and big end bearing shells	66
	Preliminary appraisal of data to make the selection	67
	Main journals	67
	Crankpins	67
	Selecting small end bearings (pins with nominal diameter)	67
	Selecting the main bearing shells (pins with nominal diameter)	69
	Selecting the main bearing shells (pins with nominal diameter)	71
	Selection of main half-bearings (rectified pins)	72
	Selecting the big end bearing shells (pins with nominal diameter)	73
	Selection of connecting rod half-bearings (rectified pins)	75
	Checking main journal assembly clearance	76
	Remove the sub-crankcase	77
	Checking crankshaft end float	77
	Pistons	78
	Connecting rods	81
	Piston - Connecting rod assembly	84
	Cylinder head	86
	Valves	87
	Tappets and Camshaft	90
	Valve springs, Rocker arm shaft and rocker arms	94
	Lubrication system	98
	Cooling system	102
	Fuel supply	103
Op. 10 101 53	Valve guides - Replacement	106
Op. 10 101 60	Injector case - Replacement	107
Op. 10 102 70	Crankshaft front cover seal - Replacement	110
Op. 10 106 12	Clearance of valves to rocker arms and pre-load of pump injector rocker arms	111
Op. 10 218 30	Pump injector - Removal, Refitting	113
Op. 10 246 14	Bleeding the fuel supply system	117
Op. 10 402 11	Water pump - Removal, Refitting	118
Op. 10 402 30	Thermostat - Removal, Refitting	118

SECTION 10 - ENGINE

BOOK 1 - 87342122

Chapter 5 - CATERPILLAR Engine

Model
FX 60

CATERPILLAR Engine
C-15

CONTENTS

Section	Description	Page
	General	2
	New Holland - Caterpillar	2
	Caterpillar engine	2
	Service / Parts	3

SECTION 14 - LIVE P.T.O.

BOOK 2 - 87342123

Chapter 1 - Main drive belt assembly

CONTENT

Section	Description	Page
	Tightening torques and Adjustments	1
	Main drive belt assembly - Remove	2
	Tensioner pulley assembly	4
	Cutterhead drive pulley	5
	Main drive pulley	6
	Cutterhead drive pulley carrier	7
	Cutterhead reverse drive motor coupling	7
	Cutterhead drive pulley shaft	9
	Main drive belt assembly - Install	11

SECTION 14 - LIVE P.T.O.

BOOK 2 - 87342123

Chapter 2 - Main drive gearbox series 5262 > 5294

CONTENT

Section	Description	Page
	Tightening torques and Adjustments	2
	Special tools	2
	Main drive gearbox - Remove	3
	Battery box - Remove	6
	Fuel reservoir - Remove	7
	Rubber vibration damper - Replace	10
	Main drive gearbox - Disassemble / Assemble	11
	Splitting the main drive gearbox	11
	Lower gearbox half - Disassembly / assembly	12
	Disassembly	14
	Assembly	15
	Intermediate gear assembly	17
	Hydro gear assembly	18
	Upper gearbox half - Disassembly / assembly	19
	Main hydraulic clutch - Remove	21
	Output shaft - Remove / Install	22
	Main clutch - Install	23
	Connecting the two gearbox halves together	25
	Main clutch - Overhaul	26
	Pressure hose - Remove / install	27
	Clutch plates - Replace	27
	Clutch seals - Replace	28

SECTION 14 - LIVE P.T.O.

BOOK 2 - 87342123

Chapter 3 - Main drive gearbox series 5298 >

CONTENT

Section	Description	Page
	Special tools	2
	Main drive gearbox - Shafts	3
	General	4
	Main drive shaft - Remove	5
	Main clutch - Remove	6
	Main clutch - Disassemble	7
	Main clutch - Assemble / Install	11
	Main drive shaft - Disassemble	14
	Main drive shaft - Assemble	15
	Main drive shaft - Install	16
	Main drive gearbox - Remove / Install	17
	Main drive gearbox - Disassemble / Assemble	18
	Splitting the main drive gearbox	18
	Lower gearbox half - Disassemble / Assemble	20
	Disassemble	22
	Assemble	24
	Main drive gearbox - Assemble	27

SECTION 21 - TRANSMISSION

BOOK 2 - 87342123

CONTENT

Section	Description	Page
	Specifications	2
	Tightening torques and Adjustments	2
	Special tools	3
	Gearbox shafts	4
	Shifting diagram	4
	Disassembly of traction gearbox	5
	General	5
	Removal of selector forks and shifter shafts	5
	Removal of drive shaft	5
	Removal of the countershaft	6
	Removal of transmission main shaft	7
	Removal of the half-shaft from the differential	8
	Removal of the differential	9
	Assembly of traction gearbox	10
	Assembly of the differential	10
	Assembly of the half-shafts of the differential	10
	Assembly of transmission main shaft	11
	Assembly of the countershaft	12
	Assembly of the drive shaft	12
	Assembly of selector shafts and forks	13
	Calculation of shims to be installed on the shafts	13
	Assembly of the cover	14

SECTION 23 - 4WD LINES

BOOK 2 - 87342123

CONTENT

Section	Description	Page
	Specifications	2
	Tightening torques	2
	Special tools	3
	Self-made tools	3
	Gearbox shafts	5
	4WD gearbox - Removal	6
	4WD gearbox - Components	7
	4WD gearbox - Disassembly	9
	Intermediate shaft	10
	Input shaft	11
	Output shaft and clutch	12
	Clutch cylinder	13
	4WD gearbox - Assembly	14
	Clutch cylinder	14
	Output shaft and clutch - pre assembly	15
	Input shaft - pre assembly	19
	Intermediate shaft - installation	21
	Input shaft - installation	22
	Cover - installation	25
	Clutch pre-assembly - installation	25
	4WD gearbox - Installation	26

SECTION 25 - FRONT MECHANICAL DRIVE

BOOK 2 - 87342123

Chapter 1 - Final drives FX30

CONTENTS

Section	Description	Page
	Final drives - Disassembly	2
	Output shaft	2
	Input shaft	2
	Final drives - Assembly	4
	Input shaft	4
	End play adjustment	4
	Output shaft	4
	Preload adjustment	4

SECTION 25 - FRONT MECHANICAL DRIVE

BOOK 2 - 87342123

Chapter 2 - Final drives FX40-50-60

CONTENTS

Section	Description	Page
	Specifications	2
	Tightening Torques	2
	Gearbox shafts	3
	Wheel bolt - Replacement	4
Op 25.310	Final drive - R./ I.	5
Op 25.310	Final drive D./A.	7
	Disassembly	7
	Assembly	10

SECTION 29 - HYDROSTATIC SYSTEM

BOOK 2 - 87342123

CONTENT

Section	Description	Page
	Hydrostatic circuit and components	2
	Circuit	2
	Hydrostatic Pump and motor Identification plate	4
	Hydrostatic Pump	5
	Pump operation	5
	Circuit	6
	Pump characteristics	9
	Multifunction valve	10
	Servo Valve	14
	System in Neutral	14
	Servo Solenoid Valve Energized	14
	Hydrostatic Motor	16
	Fixed Displacement Motors	16
	Drive Motor Characteristics	17
	Oil Cooler bypass Valve	18
	Filling and bleeding the hydrostatic system	19
	Starting the hydrostatic system	21

SECTION 33 - BRAKES AND CONTROL

BOOK 2 - 87342123

CONTENT

Section	Description	Page
	Brake system	2
	General	2
	Road Mode	3
	Parking brake adjustment	4
	Replacement of the brake linings	5
	Removal	5
	Installation	5
	Bleeding the brakes	6
	Bleeding the left-hand side circuit	6
	Bleeding the connection pipe between the two main cylinders	6
	Bleeding the right-hand side circuit	7
	Disassembly and assembly of brake shoes and discs	8
	Disassembly of brake shoes	8
	Disassembly of brake discs	8
	Assembly of brake discs	8
	Assembly of brake shoes	9

SECTION 35 - HYDRAULIC SYSTEM

BOOK 3 - 87342124

Chapter 1 - General

CONTENT

Section	Description	Page
Op. 35.000	Torque tables for hydraulic components	2
	Union nuts	2
	Ferrules	2
	Metric fittings	2
	Unions	2
	Connections	3
	Swivel nut with ball-type nipple	3
Op. 35.304	Pump group - Disassembly and Assembly	4
	Disassembly of the pump group	5
	Removal of the triple pump from the hydrostatic pump	6
	Splitting of the triple pump	7
	Assembly of the pump group	10
	Installation of the pump group to the hydrostatic pump	10

SECTION 35 - HYDRAULIC SYSTEM

BOOK 3 - 87342124

Chapter 2 - Work hydraulics - Attachment height control

CONTENT

Section	Description	Page
Op. 35.000	Circuit diagrams	2
	Work Hydraulics - Attachment height control	2
Op. 35.300	Hydraulic oil reservoir	4
	Low pressure filter	5
	Breather	5
	High pressure filter	5
	Non-return valve	5
	Function	5
Op. 35.304	Work hydraulics pump	6
	Specifications	6
	High pressure relief valve	7
Op. 35.410	Attachment height control valve (EMR)	8
	Neutral position	10
	Attachment lifting position	10
	Attachment lowering position	11
	Pressure relief valve h	11
	Emergency hand buttons	11
	Specifications	11
	Attachment compensation valve	12
	Specifications	12
	Transport mode	14
	Compensation mode	14
	Stubble height mode	14
	Pressure sensor	15
	Specifications	15
	Hydropneumatic accumulators	16
	Filling	17
	Attachment lift cylinders	18

SECTION 35 - HYDRAULIC SYSTEM

BOOK 3 - 87342124

Chapter 3 - Work hydraulics - Base unit

CONTENT

Section	Description	Page
Op. 35.000	Circuit diagrams - Base unit	2
Op. 35.310	Stack valve	7
	Repair of control valves	8
	Load sensing valve	9
	System in neutral	9
	Cutterhead reverse drive motor	10
	Specifications	10
	Spout rotation pressure relief valve	12
	Spout rotation motor	12
	Specifications	12
	Quick-release couplings	13
	Specifications	13
	Spout lift cylinder	14
	Cylinder disassembly and assembly	14
	Reinstallation of spout lift cylinder	15

SECTION 35 - HYDRAULIC SYSTEM

BOOK 3 - 87342124

Chapter 4 - Steering hydraulics

CONTENT

Section	Description	Page
Op 35.000	Circuit diagrams - Steering hydraulics	2
Op. 35.310	Steering hydraulics pump	7
	Specifications	7
	Steering valve	8
	Special tools	9
Op. 35 311	Steering valve - D./A.	10
	Steering cylinders	18
	Disassembly and assembly	18
	Toe-in adjustment, steering ball joints, steering wheel stops	19

SECTION 35 - HYDRAULIC SYSTEM

BOOK 3 - 87342124

Chapter 5 - Low pressure hydraulics

CONTENT

Section	Description	Page
Op. 35.000	Circuit diagrams - Low pressure hydraulics	2
Op.35.300	Low pressure hydraulic reservoir	4
	Oil and Filter change procedure	4
	Oil pressure check procedure	5
	Filling the system when (re)installing the low pressure pump	5
	Filling the system after (re)installing the main drive transfer gearbox	5
Op. 35.310	Low pressure pump	6
	Specifications	6
	Low pressure valve	7
	Main drive belt tensioning cylinder	10
	Spout deflector cylinder	11

SECTION 35 - HYDRAULIC SYSTEM

BOOK 3 - 87342124

Chapter 6 - High-flow hydraulics

CONTENT

Section	Description	Page
Op. 35.000	Circuit diagrams - High-Flow hydraulics	2

SECTION 50 - CAB CLIMATE CONTROL

BOOK 3 - 87342124

CONTENT

Section	Description	Page
	Correct use of the airconditioning system	2
	Storage maintenance	2
	Air conditioning circuit	3
	Components	3
	Specifications	4
	Refrigerant	4
	Compressor	4
	Compressor clutch	4
	Circuit parameters	4
	Low pressure switch	4
	High pressure switch	4
	Filter-drier	5
Op. 50.200	Compressor clutch replacement	6
	Clutch removal	6
	Clutch installation	8
Op. 50.206	Ventilation unit	10

SECTION 55 - ELECTRICAL SYSTEM

BOOK 3 - 87342124

Chapter 1 - General

CONTENT

Section	Description	Page
	General information	2
	Wires	2
	Color code	2
	Wire identification	3
	Fuses	4
	Symbols	4
	Relays	10
	Connectors	11

SECTION 55 - ELECTRICAL SYSTEM

BOOK 3 - 87342124

Chapter 2 - Wiring Diagrams FX North America

CONTENT

Section	Description	Page
55.000	Wiring diagrams FX NA	2

SECTION 55 - ELECTRICAL SYSTEM

BOOK 3 - 87342124

Chapter 3 - Can network basics

CONTENT

Section	Description	Page
	Can network basics	2
	General layout electronic system	2
	Electronic components	2
	Conclusion	2
	Electronic system layout	4
	Input	4
	Output	4
	Analog signals (from input or to output)	4
	Digital Information	4
	Interfaces	4
	Software	5
	Calibrations	5
	Additional info:	5
	Can spy	6
	Decimal and hexadecimal counting	6
	Decimal	6
	Hexadecimal	6
	How to use the CAN Identifiers	8
	How to Enter CAN-SPY	9
	CAN-SPY in practice	9
	Error codes messages	16
	Wiring checking procedure	17
	Fault finding routine	18

SECTION 55 - ELECTRICAL SYSTEM

BOOK 4 - 87342125

Chapter 4 - Calibration

CONTENT

Section	Description	Page
	General	2
	Special tools	2
	Machine calibration with EST tool	3
	Configuration Item Selection screen	6
	Maximum Handle position calibration	7
	Minimum forward pump current calibration	9
	Minimum reverse pump current calibration	11
	Vehicle Configuration	13

SECTION 55 - ELECTRICAL SYSTEM

BOOK 4 - 87342125

Chapter 5 - Software update

CONTENT

Section	Description	Page
	Software Revision	2
	Software update with EST tool	3

SECTION 55 - ELECTRICAL SYSTEM

BOOK 4 - 87342125

Chapter 6 - Troubleshooting

CONTENT

Section	Description	Page
	Machine error messages	2
	Attachment height control error messages	51
	Error reports	52
	Caterpillar error messages	57
	Cursor error messages	59
	List of CAN identifiers	61
	Detailed analysis per function	89
	1. Electric conditions, engine running or not running	91
	2. Engine protection	93
	3. Harvest mode	96
	4. Engine acceleration	99
	5. Cutterhead engagement	102
	6. Feed rolls forward engagement	105
	7. Feed rolls reverse engagement	107
	8. Power reverse	109
	9. Four-wheel drive	111
	10. Spout rotation	113
	11. Raise / lower spout	116
	12. Spout deflector	118
	13. Reverse cutterhead	120
	14. Auxiliary front hydraulics	123
	15. Auxiliary rear hydraulics	125
	16. Air conditioning	127
	17. Silage additives application	130
	18. Knife sharpening	132
	19. Adjust-O-Matic routine	136
	20. Crop processor	142
	21. Metal detector operation and troubleshooting	144
	22. Attachment height control	155
	23. Ground speed	166
	24. High flow hydraulics	171
	25. Rotary screens	173
	26. Rotary screen brushes	174
	27. Caterpillar engine	175
	28. CAN network	179
	29. Auto Pilot	187
	30. Automatic Greasing	193
	31. Cursor Engine FX30-40-50	197
	32. Feedroll speed	204

SECTION 60 - PRODUCT FEEDING

BOOK 5 - 87342126

Chapter 1 - Feed rolls

CONTENTS

Section	Description	Page
	Metal detector roll	2
	Removal	2
	Disassembly	4
	Metal detector components - D./A.	5
	Disassembly	5
	Assembly	5
	Assembly	6
	Installation	7
	Smooth roll	9
	Removal	9
	Installation	10
	Upper feed rolls - R./I.	11
	Before removal	11
	Removal of the upper feed rolls as a complete assembly.	12
	Removal of the upper feed rolls as separate components.	13
	Replacing wear plates on the upper feed rolls frame	15
	Installation	16

SECTION 60 - PRODUCT FEEDING

BOOK 5 - 87342126

Chapter 2 - Hydroloc gearbox

CONTENTS

Section	Description	Page
	Hydroloc gearbox - R./I.	2
	Removal	2
	Installation	3
	Gearbox shafts	5
	Specifications	7
	Hydroloc gearbox - D./A.	8
	1. Alternative drive shaft.	12
	2. Transfer shaft	15
	3. Upper feed rolls drive shaft	16
	4. Selector shaft	17
	5. Smooth roll drive shaft	19
	6. Metal detector roll drive shaft	20
	7. Reinstall the alternative drive shaft	22
	8. Install seals and covers.	24

SECTION 60 - PRODUCT FEEDING

BOOK 5 - 87342126

Chapter 3 - Attachments drive gearbox

CONTENTS

Section	Description	Page
	Attachments drive gearbox - R./l.	2
	Removal	2
	Installation	3
	Gearbox shafts	4
	Specifications	5
	Attachments drive gearbox - D./A.	6
	Assembly	10
	Idler shaft	10
	Input shaft	11
	Transfer shaft	12
	Attachment drive shaft	13
	Idler shaft - Re-installation	14

SECTION 60 - PRODUCT FEEDING

BOOK 5 - 87342126

Chapter 4 - Upper feed rolls drive gearbox

CONTENTS

Section	Description	Page
	Special tools	2
	Upper feed rolls drive gearbox - R./l.	2
	Removal	2
	Installation	4
	Gearbox shafts	5
	Specifications	5
	Upper feed rolls drive gearbox - D./A.	6
	Assembly	10
	Upper feed rolls drive shaft	10
	Front upper feed roll drive shaft	11
	Rear upper feed roll drive shaft	14
	Re-install the upper feed rolls drive shaft	16
	Seals and cover	17

SECTION 64 - CHOPPING

BOOK 5 - 87342126

Chapter 1 - Cutterhead

CONTENTS

Section	Description	Page
64.000	Splitting of components	2
64.106	Rotor and bearings - R./l.	2
	Removal	2
	Assembly	4
64.150	Shearbar - R./l.	8
	Shearbar support - R./l.	8
	Removal	8
	Installation	9

SECTION 64 - CHOPPING

BOOK 5 - 87342126

Chapter 2 - Cutterhead gearbox

CONTENTS

Section	Description	Page
64.130	Cutterhead gearbox - R./l.	2
	Removal	2
	Installation	3
	Cutterhead gearbox - D./A.	4
	Oil cooler - D./A.	7
	Gearbox - Disassembly	8
	Input shaft	8
	Output shaft	8
	Gearbox - Assembly	10
	Input shaft	10
	Output shaft	10
	Backlash	10

SECTION 70 - EJECTION

BOOK 5 - 87342126

Chapter 1 - Blower gearbox

CONTENTS

Section	Description	Page
70.000	Inspection between cutterhead and blower	2
70.120	Blower - R./l.	2
70.100	Blower gearbox - R./l.	2
	Blower gearbox - D./A.	3
	Disassembly	3
	Assembly	4
	Input shaft	4
	Output shaft	4
	Adjusting the shimming	5



GENERAL INFORMATION
CONTENT

Section	Description	Page
	Introduction	2
	Important information	2
	General instructions	3
	Shimming	3
	Rotating shaft seals	3
	O-ring seals	3
	Sealing compounds	3
	Bearings	3
	Cotter pins	3
	Protecting the electronic / electrical systems during charging or welding	4
	Spare parts	5
	Tools	5
	Safety regulations	6
	Accident prevention	6
	Safety rules	6
	General guidelines	6
	Start-up	8
	Engine	8
	Electrical system	8
	Hydraulic systems	8
	Wheels and Tyres	9
	Removal and Re-fitting	9
	Explanation of machine serial number	10
	Conversion chart	11
	Hardware tightening torques	12
	Drive line and components	14
	Lubricants to be used	16

GENERAL INFORMATION INTRODUCTION

This manual is subdivided in sections marked by two-digit numbers, with independent page numbering within each section. For a quick reference, these sections have the same identification number and the same description of the relevant Flat Time Rate Manual.

The dealt matters and the information can be easily detected by index on the previous pages.

At the bottom of each page there is the manual print number and the relevant publication/up-dating date.

The pages of further up-datings shall have the same print number, followed by a two-digit number (for example: 1st Up-dating 604.64.951.01; 2nd Up-dating 604.64.951.02; etc.) and the relevant publication date. These pages shall be completed by the new print of the index, duly revised.

The information of this manual are up-dated at the date of the publication. As NEW HOLLAND continuously improves its product range, some information could be not up-dated due to modifications of technical or commercial type, as well as for suiting the law regulations of the different countries.

In case of disagreement, refer to NEW HOLLAND Sales and Service networks.

IMPORTANT INFORMATION

All repair and maintenance works listed in this manual must be carried out only by staff belonging to the NEW HOLLAND Service network, strictly complying with the instructions given and using, whenever required, the special tools.

Anyone who carries out the above operations without complying with the prescriptions shall be responsible for the subsequent damages.

The manufacturer and all the organizations of its distribution chain, including – without limitation – national, regional or local dealers, reject any responsibility for damages due to the anomalous behaviour of parts and/or components not approved by the manufacturer himself, including those used for the servicing or repair of the product manufactured or marketed by the Manufacturer.

In any case, no warranty is given or attributed on the product manufactured or marketed by the Manufacturer in case of damages due to an anomalous behaviour of parts and/or components not approved by the Manufacturer.

No reproduction, though partial of text and illustrations allowed