

TC30 REPAIR MANUAL COMPLETE CONTENTS

PIN #HK30001 TO PIN #HK34732 AND PIN #HK34733 AND ABOVE

SECTION 00 - GENERAL INFORMATION	2
SECTION 10 - ENGINE	3
SECTION 18 - CLUTCH	9
SECTION 21 - GEAR TRANSMISSION	11
SECTION 25 - FWD FRONT AXLE	13
SECTION 27 - DIFFERENTIAL, REAR AXLE	15
SECTION 29 - HYDROSTATIC TRANSMISSION	16
SECTION 31 - POWER TAKE-OFF SYSTEMS	21
SECTION 33 - BRAKES	23
SECTION 35 - HYDRAULIC SYSTEM	25
SECTION 41 - STEERING	27
SECTION 44 - WHEELS, TIRES AND 2WD AXLE	29
SECTION 55 - ELECTRICAL SYSTEM	31
SECTION 90 - PLATFORM	43

The following pages are the collation of the contents pages from each section and chapter of the TC30 Repair manual. Complete Repair part # 87361957

The sections used through out all New Holland product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

Sections 00, 10, 18, 21, 25, 27, 29, 31, 33, 35, 41, 44 and 90 are used with all tractors PIN #HK30001 and above.

Section 55 Electrical System - Chapters 1, 2, 3, and 4 are used with PIN #HK30001 to PIN #HK34732.

Section 55 Electrical System - Chapters 5, 6, 7 and 8 are used with PIN #HK34733 and above.

Sample of manual. Download All 828 pages at:

<https://www.aresairmanual.com/downloads/new-holland-tc30-tractor-service-repair-manual-2/>

SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87059163

Chapter 1 - General Information

CONTENTS

Section	Description	Page
	Introduction	2
	Precautionary Statements	3
	Safety	4
	Safety Decals	7
	Instruction Decals	9
	International Symbols	13
	Specifications	14
	General Dimensions	20
	Minimum Hardware Tightening Torques	23
	Metric Bolt Torque Specifications	24
	Lubricants	25
	Adjustments	26

SECTION 10 - ENGINE

BOOK 1 - 87059163

Chapter 1 - Engine

CONTENTS

Section	Description	Page
	Specifications	5
	Metric Bolt Torque Specifications	12
	Engine Bolt Torque Specifications	13
	Engine Fuel System Bolt Torque Specifications	13
	Special Tools	14
	Compression Test and Tools	14
	Description of Operation - Engine	15
	Cylinder Head and Valve Train Components	16
	Cylinder Block Assembly	16
	Troubleshooting	18
	Overhaul - Engine	23
	Engine	23
	Preparation	23
	Fuel Injector and Glow Plug	24
	Removal	24
	Oil Pressure Switch	24
	Removal	24
	Temperature Sending Switch and Alternator	25
	Removal	25
	Fan, Water Pump, and External Oil Tube	25
	Removal	25
	Head Cover	25
	Removal	25
	Rocker Arm Shaft and Support Bracket	26
	Removal	26
	Cylinder Head	26
	Removal	26
	Valve Tappet	27
	Removal	27
	Fuel Shutoff Solenoid	27
	Removal	27
	Timing Gear Cover	27
	Removal	27
	Timing Gears and Camshaft	29
	Removal	29
	Oil Sump	30
	Removal	30
	Oil Suction Pipe and Strainer	30
	Removal	30

SECTION 10 - ENGINE

BOOK 1 - 87059163

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
	Connecting Rods, Bearings, Pistons, and Rings	31
	Removal	31
	Flywheel	31
	Removal	31
	Backplate and Oil Seal	32
	Removal	32
	Crankshaft and Main Bearings	32
	Removal	32
10 101	Cylinder Head	33
	Disassembly	33
	Inspection and Repair	33
	Valve Seats	34
	Inspection and Repair	34
	Valves	35
	Inspection and Repair	35
	Valve Guides	36
	Inspection and Repair	36
	Valve Springs	37
	Inspection and Replacement	37
	Rocker Arms	37
	Inspection and Replacement	37
	Push Rods	38
	Inspection and Replacement	38
	Cylinder Head	39
	Assembly	39
	Cylinder Block	39
	Inspection	39
10 105	Pistons	40
	Disassembly and Inspection	40
	Piston Rings	42
	Disassembly and Inspection	42
	Connecting Rods	42
	Disassembly and Inspection	42
	Connecting Rod Bearing Oil Clearance Check	44
	Pistons, Rings, and Connecting Rod	45
	Assembly	45
10 103	Main Bearing and Thrust Washer	46
	Removal and Inspection	46
	Crankshaft	46
	Inspection	46

SECTION 10 - ENGINE

BOOK 1 - 87059163

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
	Crankshaft Bearing (Bushing)	47
	Inspection	47
	Replacement	48
	Main Bearing and Thrust Washer	48
	Assembly	48
	Port Block	49
	Removal	49
	Installation	49
10 106	Timing Gear	49
	Inspection	49
	Camshaft	50
	Disassembly	50
	Inspection	50
	Assembly	50
10 103	Flywheel	51
	Inspection and Repair	51
	Timing Gear Housing	51
	Front Oil Seal and Steering Pump Seal	51
	Replacement	51
	Crankshaft and Bearing Holder	52
	Installation	52
	Rear Oil Seal and Backplate	52
	Installation	52
	Flywheel	53
	Installation	53
	Pistons and Connecting Rods	53
	Installation	53
	Oil Suction Pipe and Suction Strainer	54
	Installation	54
	Oil Sump	54
	Installation	54
	Camshaft and Camshaft Gear	54
	Installation	54
	Idler Gear, Oil Pump, and Injection Timing	55
	Installation	55
	Timing Gear Cover	55
	Installation	55
	Crankshaft Pulley	55
	Installation	55

SECTION 10 - ENGINE

BOOK 1 - 87059163

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
	Fuel Injection Pump	56
	Installation	56
	Power Steering Pump	56
	Installation	56
	Head Gasket Selection	57
	Cylinder Head	57
	Assembly	57
	Valve Clearance Adjustment	58
	Head Cover	58
	Installation	58
	Water Pump and Cooling Fan	59
	Installation	59
	External Oil Tube	59
	Installation	59
	Glow Plug and Connector	59
	Installation	59
	Fuel Injector	60
	Installation	60
	Fuel Piping	60
	Installation	60
	Alternator and Temperature Sender Switch	60
	Installation	60
	Exhaust Manifold	61
	Installation	61
10 304	Description of Operation - Engine Lubrication System	61
10 206	Oil Filter	64
	Construction and Function	64
	Maintenance	64
10 304	Oil Pump	64
	Removal	64
	Inspection	64
	Installation and Adjustment	65
	Engine Oil Pressure Check	65
	Oil Pressure Relief Valve	67
	Removal	67
	Installation	67
	Oil Consumption	67

SECTION 10 - ENGINE

BOOK 1 - 87059163

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
10 400	Description of Operation - Cooling System	68
	Maintenance	69
	Coolant	69
	Radiator Cap	69
10 402	Thermostat	70
10 402	Water Pump	70
10 414	Cooling Fan	70
	Overhaul - Cooling System	71
10 406	Radiator	71
	Removal	71
	Inspection and Repair	72
	Installation	72
10 402	Water Pump	74
	Removal	74
	Inspection and Repair	75
	Installation	75
10 402	Thermostat	76
	Removal	76
	Inspection and Repair	77
	Installation	77
	Separating the Tractor	78
	Engine/Clutch Housing	78
	Removal	78
	Installation	80

SECTION 10 - ENGINE

BOOK 1 - 87059163

Chapter 2 - Fuel System

CONTENTS

Section	Description	Page
	Specifications	2
	Special Tools	4
10 242	Description of Operation - Injection Pump	5
	Troubleshooting	6
	General	6
	Governor System	9
	Injectors	10
	Breather Valve	11
10 244	Fuel Variation Mechanism	12
	CTD (Compact Timing Device) Mechanism	12
10 214	Delivery Valves	15
	Fuel Delivery	15
10 214	Injection Pump	18
	Removal	18
	Repair	19
	Installation	19
	Timing and Governor Adjustment	20
10 230	Original Pump and Drive Components	20
	Installation	20
	New Pump or Drive Component	21
	Installation	21
	Spill-timing Procedure	22
	Bleeding the Fuel System	26
	Fuel Settings Adjustments	28
	Fuel Screw/High Idle	28
10 230	Description of Operation - Governor	29
	Governor	31
	Disassembly	31
	Assembly	32
10 218	Description of Operation - Injectors	34
	Injectors	36
	Removal	36
	Disassembly	37
	Assembly and Adjustment	37
	Description of Operation - Engine Breather Valve	38
	Breather Valve	39
	Removal	39
	Installation	39

SECTION 18 - CLUTCH

BOOK 2 - 87059164

Chapter 1 - Clutch

CONTENTS

Section	Description	Page
	Description of Operation - Single Clutch	3
	2WD 9 x 3 and HST Models	3
	9 x 3 Gear Transmission (2WD)	3
	HST Drive Transmission	3
	Clutch Pedal Assembly	4
	Overhaul - Single Clutch	5
	Removal	5
	Inspection	5
	Installation	6
	Adjustments - Single Clutch	7
	Free-play Adjustment - HST Models Only	7
	Free-play Adjustment - 2WD 9 x 3 Gear Transmission Models Only	8
	Stop Adjustment - HST and 2WD 9 x 3 Transmissions Models	9
	Clutch Stop - HST and 2WD 9 x 3 Transmission Models On or Above Serial Number HK14260	10
	Description of Operation - Double Clutch	11
	9 x 3 Gear Transmission (4WD) Models	11
	Overhaul - Double Clutch	11
18 110	Disassembly	11
	Inspection	12
18 110	Assembly	13
	Adjustments - Double Clutch	14
	Free-play Adjustment - 9 x 3 Gear Transmission Models with Double Clutch	15
	Stop Adjustment - FWD and 9 x 3 Gear Transmission Models with Double Clutch ..	16
	Clutch Stop - FWD 9 x 3 Transmission Models On or Above Serial Number HK14260 ..	17
	Servicing Clutch-related Components	18

SECTION 18 - CLUTCH

BOOK 2 - 87059164

Chapter 1 - Clutch (Continued)

CONTENTS

Section	Description	Page
18 110	Clutch Pilot Bearing	18
	Removal	18
	Installation	18
	Clutch Release Bearing	19
	Removal	19
	Inspection	19
	Installation	20
	Clutch Linkage Components	20
18 100	Clutch Cross Shaft Bushings	20
	Removal	20
	Installation	20
	Clutch Pedal Bushings	21
	Removal	21
	Installation	21
	Troubleshooting	22
	Specifications	23
	Bolt Torques	24
	Special Tools	24

SECTION 21 - GEAR TRANSMISSION

BOOK 2 - 87059164

Chapter 1 - Gear Transmission 9 x 3

CONTENTS

Section	Description	Page
	Description of Operation	3
	9 x 3 Gear Transmission	3
	Transmission Assembly	11
	Removal	11
21 148 63	Single Clutch Input Shaft	11
	Removal	11
	Double Clutch Input Shaft	11
	Removal	11
	Single and Double Clutch	11
	Main Gear Shifter Rod	11
	Removal	11
	Main Shaft	12
	Removal	12
	Reverse Idler Shaft	12
	Removal	12
	Single Clutch Countershaft	13
	Removal	13
	Double Clutch Countershaft	13
	Removal	13
	Single Clutch PTO Countershaft	14
	Removal	14
	Double Clutch PTO Countershaft	14
	Removal	14
	FWD Drive Shaft	14
	Single and Double Clutch	14
	Removal	14
	FWD Shift Rod	15
	Removal	15
	Rear Main Shaft	15
	Removal	15
	Range Gear Shifter Rod	15
	Removal	15

SECTION 21 - GEAR TRANSMISSION

BOOK 2 - 87059164

Chapter 1 - Gear Transmission 9 x 3 (Continued)

CONTENTS

Section	Description	Page
	Drive Pinion	16
	Removal	16
	Inspection	16
	Pre-installation Instructions	16
	Drive Pinion	17
	Installation	17
	Range Gear Shifter Rod	17
	Installation	17
	Rear Main Shaft	17
	Installation	17
	FWD Drive Shaft	18
	Installation	18
	FWD Shift Rod	18
	Installation	18
	Single Clutch PTO Countershaft	18
	Installation	18
	Double Clutch PTO Countershaft	19
	Installation	19
	Single Clutch Countershaft	19
	Installation	19
	Double Clutch Countershaft	19
	Installation	19
	Reverse Idler	20
	Installation	20
	Main Shaft	20
	Installation	20
	Main Gear Shifter Rod	20
	Installation	20
	Main Transmission Shift Lever	21
21 130	Removal and Overhaul	21
	Installation	21
	Single Clutch Input Shaft	22
	Installation	22

SECTION 21 - GEAR TRANSMISSION

BOOK 2 - 87059164

Chapter 1 - Gear Transmission 9 x 3 (Continued)

CONTENTS

Section	Description	Page
	Double Clutch Input Shaft	23
	Installation	23
	Separating the Tractor	24
	9 x 3 Gear Transmission	24
	Removal	24
	Installation	25
	Specifications	26
	9 x 3 Gear Transmission	26
	General Bolt Torque Specifications	27
	Special Tools	28

SECTION 25 - FWD FRONT AXLE

BOOK 2 - 87059164

Chapter 1 - FWD Front Axle

CONTENTS

Section	Description	Page
	Specifications	2
	Bolt Torque Specifications	3
	Special Tools	4
25 100	Description of Operation - Front-Wheel Drive Front Axle	5
	Troubleshooting	7
	Overhaul	7
	Front-Wheel Drive Front Axle	7
	Removal	7
25 108	Reduction Gear - Drop Box	9
	Disassembly	9

SECTION 25 - FWD FRONT AXLE

BOOK 2 - 87059164

Chapter 1 - FWD Front Axle (Continued)

CONTENTS

Section	Description	Page
25 102	Front Axle and Differential	10
	Disassembly	10
	Drive Pinion	11
	Disassembly	11
	Front Axle	12
	Inspection and Repair	12
	Differential	12
	Inspection and Repair	12
	Gear Reduction - Drop Box	13
	Inspection and Repair	13
	Front Axle and Differential	13
	Assembly	13
	Differential Gear	14
	Assembly	14
	Axle and Differential	14
	Assembly	14
	Differential Case Bearing Pre-load Check and Adjustment	15
	Ring Gear-to-Pinion Backlash Check and Adjustment	15
	Ring Gear to Pinion Adjustment	17
	25 108	Reduction Gear Box
Assembly		17
Bevel Gear-to-Pinion Backlash Check		20
Separating the Tractor		21
Front Axle - 4WD		21
Removal		21
Front Axle (2WD - 4WD)	22	
Installation	22	

SECTION 27 - DIFFERENTIAL, REAR AXLE

BOOK 2 - 87059164

Chapter 1 - Differential, Rear Axle

CONTENTS

Section	Description	Page
	Description of Operation	2
27 110	Differential Assembly	3
27 110	Differential Lock	4
	Overhaul	5
27 106	Differential	5
	Removal	5
	Disassembly	7
	Inspection	7
	Drive Pinion	8
	Removal	8
	Disassembly (With HST Transmission)	8
	Disassembly (With 9 x 3 Transmission)	9
	Assembly and Installation	10
	Differential	11
	Assembly and Installation	11
	Rear Axle	15
27 126	Removal	15
	Disassembly	15
	Inspection	15
	Assembly	16
	Axle Seal	18
	Installation	18
	Rear Axle/Center Housing	20
	Removal	20
	Installation	22
	Specifications	23
	Ring Gear and Pinion Gear Pattern Specification and Adjustment	23
	Bolt Torque Specifications	24

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87059164

Chapter 1 - Hydrostatic Transmission

CONTENTS

Section	Description	Page
29 202	Description of Operation - Hydrostatic Transmission	5
29 212	Variable Displacement Pump	7
	Operation	7
29 212	Fixed Displacement Motor	8
	Operation	8
	Fluid Flow	9
	Neutral Position	9
	Forward Position	10
	Reverse Position	11
	Overhaul - Hydrostatic Unit	12
29 202	Removal	12
	Precautions Before Disassembly	13
	Hydrostatic Pump	16
	Disassembly	16
	Hydrostatic Motor	17
	Disassembly	17
	Hydrostatic Motor Shaft	19
	Removal	19
	Charge Pump	19
	Removal	19
	Swash Plate	20
	Removal	20
	Hydrostatic Transmission	21
	Inspection	21
	Hydrostatic Pump	24
	Assembly	24
	HST Piston Pump Cylinder Block	25
	Assembly	25
	HST Motor Cylinder Block	27
	Assembly	27

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87059164

Chapter 1 - Hydrostatic Transmission (Continued)

CONTENTS

Section	Description	Page
29 130	Port Block Neutral and Feed Valves	28
	Disassembly	28
	Inspection	28
	Neutral Valve Servicing	28
	Disassembly	28
	Inspection	28
	Assembly	28
	Feed Valves Servicing	29
	Inspection	29
	Assembly	29
	Charge Pump Relief Valve	30
	Disassembly	30
	Inspection	30
	Assembly	30
	High Pressure Relief Valve	30
	Removal	30
	Installation	30
	Hydrostatic Pump and Port Block	31
	Assembly	31
	Hydrostatic Motor and Port Block	32
	Assembly	32
	HST Cooler Check Valve	33
	Disassembly	33
	Inspection	33
	Assembly	33
	Pressure Tests	34
	High Pressure Relief Valve	34
	Test	34
	Charge Pump Relief Valve	35
	Test	35

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87059164

Chapter 1 - Hydrostatic Transmission (Continued)

CONTENTS

Section	Description	Page
29 300	Description of Operation - Hydrostatic Transmission Gearbox	36
	HST Unit	37
	Power Flow	37
	Gearbox	37
	Overhaul - Transmission Gearbox	41
	HST Transmission	41
	Removal	41
	Disassembly	41
	Transmission Case	42
	Removal	42
	PTO Input Shaft	42
	Removal	42
	Transmission Input Shaft	42
	Removal	42
	Fwd Shift Rod	43
	Removal	43
	Fwd Drive Shaft	43
	Removal	43
	Rear Main Shaft	43
	Removal	43
	Range Gear Shifter Rod	44
	Removal	44
	Drive Pinion Shaft	44
	Removal	44
	PTO Countershaft Removal	44
	Removal	44
	Inspection	45
	Drive Pinion	45
	Assembly	45
	PTO Countershaft	45
	Assembly	45

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87059164

Chapter 1 - Hydrostatic Transmission (Continued)

CONTENTS

Section	Description	Page
	Range Gear Shifter Rod	46
	Assembly	46
	Rear Main Shaft	46
	Assembly	46
	Fwd Main Shaft	47
	Assembly	47
	Fwd Shift Rod	47
	Assembly	47
	Transmission Input Shaft	48
	Assembly	48
	PTO Input Shaft	48
	Assembly	48
	Transmission Case	49
	Assembly	49
	Mid-PTO Link	49
	Adjustment	49
	Pedal Forward Stop	50
	Adjustment	50
29 200	HST Control Linkage	50
	HST Neutralizer (Spring Holder)	50
	Removal	51
	Disassembly	51
	Inspection	51
	Assembly	52
	Installation	52
	HST Neutral	52
	Adjustment	52
	Separating the Tractor	53
	Hydrostatic Unit	53
	Removal	53

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87059164

Chapter 1 - Hydrostatic Transmission (Continued)

CONTENTS

Section	Description	Page
	Hydrostatic Gearbox	54
	Removal	54
	Hydrostatic Unit and Gearbox	54
	Installation	54
	Troubleshooting	55
	Specifications	56
	Hydrostatic Transmission	56
	Bolt Torques	56
	Special Tools	57

SECTION 31 - POWER TAKE-OFF SYSTEMS

BOOK 3 - 87059165

Chapter 1 - Power Take-off Systems

CONTENTS

Section	Description	Page
	Specifications	3
	Bolt Torque Specifications	4
	Description of Operation - Transmission Drive Power Take-off	5
31 110	9 x 3 Gear Transmission - Single Clutch	5
	Live Power Take-off	7
31 110	Power Take-off Drive - Hydrostatic Transmission	8
	Overhaul - Power Take-off	9
31 114 42	Power Take-off	9
	Removal	9
	Output Shaft	9
	Removal	9
31 114 46	Center Countershaft	10
	Removal	10
	One-way Clutch	10
	Disassembly	10
	Rear Countershaft	11
	Removal	11
	Front Countershaft	11
	Removal	11
	Shifter	11
	Removal	11
	Shifter	13
	Assembly	13
	Front Countershaft	14
	Assembly	14
	Rear Countershaft	14
	Assembly	14
	Center Countershaft	15
	Assembly	15
	Installation	16

SECTION 31 - POWER TAKE-OFF SYSTEMS

BOOK 3 - 87059165

Chapter 1 - Power Take-off Systems (Continued)

CONTENTS

Section	Description	Page
	Output Shaft	17
	Assembly	17
	Description of Operation - Mid-mount Power Take-off	17
	Overhaul - Mid-mount PTO	18
	Mid-mount PTO	18
	Countershaft	18
	Removal	18
	Shifter Arm	19
	Removal	19
31 120	Gearbox	20
	Disassembly	20
	Inspection	21
	Assembly	21
	Shifter Arm	22
	Assembly	22
	Countershaft	22
	Assembly	22
	Rear PTO Components	22
	Assembly	22

SECTION 33 - BRAKES

BOOK 3 - 87059165

Chapter 1 - Brakes

CONTENTS

Section	Description	Page
	Specifications	2
33 120	Rear Axle and Brakes	3
	Brake Operation	3
33 110	Parking Brake	4
33 120	Brakes and Final Pinion Overhaul	4
	Removal	4
	Inspection	5
	Assembly and Installation	5
	Brake Linkage Adjustment	6

SECTION 35 - HYDRAULIC SYSTEM

BOOK 3 - 87059165

Chapter 1 - Hydraulic System

CONTENTS

Section	Description	Page
	Specifications	3
	Bolt Torque Specifications	4
	Special Tools	5
	Troubleshooting	6
35 000	Description of Operation - Hydraulic System	7
	Hydraulic Fluid Filter	8
35 080	Combination System Relief - Diverter Valve Manifold Assembly	8
35 200	Control Valve Assembly (HPL)	9
35 210	Neutral Position - Fluid Flow	10
35 210	Raising Position - Fluid Flow	11
35 210	Lowering Position - Fluid Flow	12
35 200	Bypass Spool - Fluid Flow - Closed Position	13
35 200	Bypass Spool - Fluid Flow - Open Position	13
	Flow Control Valve	13
	Linkage Operation - Single Lever - Position Control	14
	Position Control Operation - Neutral Position to Raise	14
	Raise Position to Neutral Position	14
	Neutral Position to Lowering Position	15
	Overhaul - Lift Cylinder	15
.35 110	Lift Cylinder	15
	Removal	15
	Disassembly	17
	Inspection and Repair	18
	Assembly	19
.35 183	Flow Control Valve	21
	Removal	21
	Disassembly	21
	Inspection	21
	Assembly	22
	Hydraulic Control Valve	22
	Removal	22
	Disassembly	22
	Inspection	24
	Assembly	25
	Installation	26

SECTION 35 - HYDRAULIC SYSTEM

BOOK 3 - 87059165

Chapter 1 - Hydraulic System (Continued)

CONTENTS

Section	Description	Page
	Combination System Relief Valve and Diverter Valve Assembly	26
35 180	Removal	26
	Disassembly	27
	Inspection	27
	Assembly	27
	Adjustments	28
35 124	HPL Linkage Adjustments	28
	Adjustment Procedure	28
	Control Lever	28
	Adjustment	28
35 304	Description of Operation - Hydraulic Pump and Filter	29
	Hydraulic Pump	29
	Disassembly	30
	Inspection and Repair	30
	Assembly	30
35 204	Description of Operation - Remote Valves	31
	Rear (Single-spool) Remote Valve	32
35 184	Front (Double-spool) Remote Valve	32
	Fluid Flow - Neutral Position - Rear (Single-spool) Remote System	34
	Fluid Flow - Remote Cylinder Extending - Rear (Single-spool) Remote System	35
	Fluid Flow - Remote Cylinder Retracting - Rear (Single-spool) Remote System	36
	Front (Double-spool) Remote Control System	37
	Fluid Flow - Bucket Control - Dumping and Lift Control - Neutral	38
	Fluid Flow - Bucket Control - Dumping Regen and Lift Control - Neutral	39
	Fluid Flow - Bucket Control - Roll Back and Lift Control - Neutral	40
	Fluid Flow - Bucket Control - Neutral and Lift Control - Raising	41
	Fluid Flow - Bucket Control - Neutral and Lift Control - Lowering	42
	Fluid Flow - Bucket Control - Neutral and Lift Control - Float	43
	Overhaul - Rear (Single-spool) Remote Valve	44
	Rear (Single-spool) Remote Valve	44
	Removal	44
	Disassembly	44
	Inspection	45
	Assembly	45

SECTION 35 - HYDRAULIC SYSTEM

BOOK 3 - 87059165

Chapter 1 - Hydraulic System (Continued)

CONTENTS

Section	Description	Page
	Front (Double-spool) Remote Control Valve	46
	Removal	46
	Disassembly	46
	Inspection	48
	Assembly	48
	Relief Valve	49
	Disassembly	49
	Inspection	49
	Assembly	49
	Adjustment	49
	Pressure Testing	50
	Main System Relief Valve	50
	Front (Double-spool) Remote Control Valve	50
	Inlet Restriction Test	51
	Pump Efficiency Test	52

SECTION 41 - STEERING

BOOK 3 - 87059165

Chapter 1 - Steering

CONTENTS

Section	Description	Page
	Description of Operation	3
	Power Steering System	3
41 204	Power Steering Control Motor	5
	Spool and Sleeve	5
	Drive Shaft	5
	Gerotor Pump	5
	Check Valve	5
	Relief Valve	5
41 206	Power Steering Pump	6
41 216	Power Steering Cylinder	7
41 200	Power Steering Operation	8
	Fluid Flow - Neutral Position	8
	Fluid Flow - Left Turn	9
	Fluid Flow - Right Turn	10
	Power Steering Manual Operation	11
	Overhaul	12
41 204	Steering Control Motor	12
	Removal	12
	Disassembly	13
	Inspection	19
	Assembly	20
	Installation	26
41 216	Steering Cylinder	27
	Removal	27
	Disassembly	28
	Inspection	29
	Assembly	29
	Installation	29

SECTION 41 - STEERING

BOOK 3 - 87059165

Chapter 1 - Steering (Continued)

CONTENTS

Section	Description	Page
	Power Steering Pump and Reservoir Tank	30
	Removal	30
	Disassembly	31
	Inspection and Repair	31
	Assembly	31
	Power Steering Lines	32
	Inspection	32
	Steering Column	33
	Removal and Disassembly	33
	Assembly and Installation	35
	Troubleshooting	36
	Pressure Testing	38
	Pump, Steering Motor, and Relief Valve	38
	Test	38
	Test Results	38
	Steering Cylinder	39
	Test	38
	Test Results	39
	Specifications	40
	Special Tools	41
	Bolt Torque Specifications	42

SECTION 44 - WHEELS, TIRES AND 2WD AXLE

BOOK 3 - 87059165

Chapter 1 - 2WD Front Axle and Related Parts

CONTENTS

Section	Description	Page
	Description of Operation	2
44 101	Two-Wheel Drive	2
	Two-Wheel Drive Components	3
	Overhaul	4
	Front Wheel Hub	4
	Removal and Disassembly	4
	Spindle	4
	Removal and Disassembly	4
44 103	Front Wheel Hub and Spindle	5
	Inspection and Repair	5
	Spindle	6
	Assembly and Installation	6
	Front Wheel Hub	6
	Assembly and Installation	6
	Separating the Tractor	8
	Front Axle – 2WD	8
	Removal	8
	Troubleshooting	10
	Specifications	11
	Bolt Torque Specifications	12

SECTION 44 - WHEELS, TIRES AND 2WD AXLE

BOOK 3 - 87059165

Chapter 2 - Tread Settings and Ballasting

CONTENTS

Section	Description	Page
	Wheels and Tires - Tread Settings and Ballasting	2
	2WD Tread Setting	2
	FWD Tread Setting	2
	Rear Axle Tread Setting	3
	Tractor Weighting	3
	Weighting for Stability	3
	Weighting Limitations	3
	Rear Wheel Weight Installation	5
	Ag. Tire	5
	R4 Tire (Weight Installed with Flat Side Facing Outward)	5
	Liquid Ballast	6
	Tire Pressure	6
	Wheel Nut Torque Specifications	6