

# TC23DA, TC26DA REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL INFORMATION .....	2
SECTION 10 - ENGINE .....	3
SECTION 18 - SINGLE CLUTCH .....	10
SECTION 21 - TRANSMISSION .....	11
SECTION 25 - FWD FRONT AXLE .....	13
SECTION 27 - DIFFERENTIAL, REAR AXLE .....	14
SECTION 29 - HYDROSTATIC TRANSMISSION .....	15
SECTION 31 - POWER TAKE-OFF (PTO) .....	19
SECTION 33 - BRAKES .....	20
SECTION 35 - HYDRAULIC SYSTEM .....	21
SECTION 41 - STEERING .....	24
SECTION 44 - WHEELS AND TIRES .....	25
SECTION 55 - ELECTRICAL SYSTEM .....	26
SECTION 90 - PLATFORM .....	32

The following pages are the collation of the contents pages from each section and chapter of the TC23DA, TC26DA Repair manual. Complete Repair part # 87367140.

The sections used through out all New Holland product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the TC23DA, TC26DA Tractors.

# SECTION 00 - GENERAL INFORMATION

## BOOK 1 - 87367141

### Chapter 1 - General Information

#### CONTENTS

Section	Description	Page
	Introduction .....	2
	Precautionary Statements .....	3
	Safety .....	4
	The Tractor .....	4
	Servicing the Tractor .....	4
	Operating the Tractor .....	5
	Driving the Tractor .....	5
	Operating the PTO .....	6
	Diesel Fuel .....	6
	Safety Frame (ROPS) .....	6
	Safety Decals .....	7
	Instruction Decals .....	9
	Product Identification Plate .....	13
	Universal Symbols .....	14
	Specifications - TC23DA, TC26DA .....	15
	General Dimensions - TC23DA, TC26DA .....	20
	Minimum Hardware Tightening Torques .....	23
	Lubricants .....	25
	Adjustments .....	26

---

# SECTION 10 - ENGINE

BOOK 1 - 87367141

## Chapter 1 - Engine Systems

### CONTENTS

<b>Section</b>	<b>Description</b>	<b>Page</b>
10 000	Specifications .....	6
	Cylinder Head .....	6
	Cylinder Block .....	7
	Piston .....	7
	Piston Ring .....	8
	Connecting Rod .....	8
	Crankshaft .....	9
	Camshaft .....	10
	Valves .....	11
	Push Rods .....	12
	Rocker Arms .....	12
	Lubrication System .....	12
	Cooling System .....	13
	Torque Specifications .....	14
	Metric Bolt Torque Specifications .....	14
	Special Tools .....	15
	Description and Operation - General Information .....	16
	Identification Chart .....	16
	Cylinder Head and Valve Train Components .....	17
	Cylinder Block Assembly .....	17
	Troubleshooting .....	19
	Overhaul - Engine .....	25
	Engine Preparation .....	25
	Disassembly .....	25
	Fuel Injector and Glow Plug .....	27
	Removal .....	27
	Oil Pressure Switch .....	27
	Removal .....	27
	Temperature Sending Switch and Alternator .....	28
	Removal .....	28
	Fan, Water Pump, and External Oil Tube .....	28
	Removal .....	28

---

# SECTION 10 - ENGINE

BOOK 1 - 87367141

## Chapter 1 - Engine Systems (Continued)

### CONTENTS

Section	Description	Page
	Valve Cover .....	28
	Removal .....	28
	Rocker Shaft and Push Rod .....	29
	Removal .....	29
	Cylinder Head .....	29
	Removal .....	29
	Valve Tappet .....	29
	Removal .....	29
	Fuel Shut-off Solenoid .....	30
	Removal .....	30
	Engine Timing Gear Cover .....	30
	Removal .....	30
	Timing Gears and Camshaft .....	32
	Removal .....	32
	Oil Sump .....	32
	Removal .....	32
	Oil Suction Pipe and Strainer .....	33
	Removal .....	33
	Connecting Rods, Bearing and Pistons .....	33
	Removal .....	33
	Flywheel .....	34
	Removal .....	34
	Backplate and Oil Seal .....	34
	Removal .....	34
	Crankshaft and Main Bearing .....	34
	Removal .....	34
18 110	Cylinder Head .....	35
	Disassembly .....	35
	Inspection .....	35
	Valve Seats .....	36
	Inspection .....	36

---

# SECTION 10 - ENGINE

BOOK 1 - 87367141

## Chapter 1 - Engine Systems (Continued)

### CONTENTS

Section	Description	Page
	Valves .....	37
	Inspection .....	37
	Valve Guides .....	39
	Inspection .....	39
	Valve Springs .....	39
	Inspection .....	39
	Rocker Arms .....	40
	Inspection .....	40
	Push Rods .....	40
	Inspection .....	40
	Cylinder Head .....	41
	Assembly .....	41
	Cylinder Block .....	41
	Inspection .....	41
10 105	Pistons, Piston Rings, and Connecting Rods .....	42
	Disassembly .....	42
	Piston .....	42
	Inspection .....	42
	Piston Rings .....	44
	Inspection .....	44
	Connecting Rods .....	45
	Inspection .....	45
	Bearing Oil Clearance Check .....	47
10 105	Pistons, Piston Rings, and Connecting Rod .....	47
	Assembly .....	47
10 103	Crankshaft Main Bearings .....	48
	Removal .....	48
	Inspection .....	48
	Crankshaft .....	49
	Inspection .....	49
	Crankshaft Journal Wear Limit and Bearing Usage .....	49

---

# SECTION 10 - ENGINE

BOOK 1 - 87367141

## Chapter 1 - Engine Systems (Continued)

### CONTENTS

Section	Description	Page
	Crankshaft Front Main Bearing (Bushing) .....	50
	Inspection .....	50
	Replacement .....	50
	Crankshaft Main Bearing .....	51
	Assembly .....	51
	Port Block .....	51
	Removal .....	51
	Installation .....	51
	Timing Gear .....	52
	Inspection .....	52
	Camshaft .....	52
	Disassembly .....	52
	Inspection .....	53
	Assembly .....	53
10 103	Flywheel .....	54
	Inspection .....	54
	Timing Gear Housing .....	54
	Front Oil Seal and Steering Pump Seal .....	54
	Replacement .....	54
	Crankshaft and Bearing Holder .....	55
	Assembly .....	55
	Rear Oil Seal and Backplate .....	55
	Assembly .....	55
	Flywheel .....	56
	Installation .....	56
	Piston and Connecting Rod .....	56
	Installation .....	56
	Oil Suction Pipe and Suction Strainer .....	57
	Installation .....	57
	Oil Sump .....	57
	Installation .....	57

---

# SECTION 10 - ENGINE

BOOK 1 - 87367141

## Chapter 1 - Engine Systems (Continued)

### CONTENTS

Section	Description	Page
	Camshaft and Camshaft Gear .....	57
	Assembly .....	57
	Idler Gear, Oil Pump and Injection Timing .....	58
	Installation .....	58
	Timing Gear Cover .....	58
	Installation .....	58
	Crankshaft Pulley .....	58
	Installation .....	58
	Fuel Injection Pump .....	59
	Installation .....	59
	Power Steering Pump .....	59
	Installation .....	59
	Head Gasket .....	60
	Cylinder Head .....	61
	Assembly .....	61
	Valve Clearance Adjustment .....	62
	Valve Cover .....	62
	Installation .....	62
	Fan, Water Pump and External Oil Tube .....	63
	Installation .....	63
	Glow Plug and Connector .....	63
	Installation .....	63
	Fuel Injector .....	63
	Installation .....	63
	Fuel Piping .....	64
	Installation .....	64
	Alternator and Temperature Sending Switch .....	64
	Installation .....	64
	Exhaust Manifold, Radiator, and Air Cleaner .....	65
	Installation .....	65

---

# SECTION 10 - ENGINE

BOOK 1 - 87367141

## Chapter 1 - Engine Systems (Continued)

### CONTENTS

<b>Section</b>	<b>Description</b>	<b>Page</b>
10 304	Description of Operation - Engine Lubrication System .....	66
10 206	Engine Oil Filter .....	69
10 304	Oil Pump .....	69
	Removal .....	69
	Inspection .....	69
	Installation and Adjustment .....	70
	Engine Oil Pressure Check .....	71
	Oil Pressure Relief Valve .....	71
	Removal .....	71
	Installation .....	71
	Oil Consumption .....	72
10 400	Description of Operation - Cooling System .....	73
	Maintenance .....	75
	Coolant .....	75
	Thermostat .....	75
	Water Pump .....	75
	Cooling Fan .....	75
	Radiator .....	75
	Radiator Cap .....	75
	Overhaul - Cooling System .....	76
10 406	Radiator .....	76
	Removal .....	76
	Inspection and Repair .....	77
	Installation .....	77
10 402	Water Pump and Thermostat .....	78
	Removal .....	78
	Inspection and Repair .....	80
	Assembly .....	80
	Installation .....	80
	Compression Test and Tools .....	82

---

# SECTION 10 - ENGINE

BOOK 1 - 87367141

## Chapter 2 - Fuel System

### CONTENTS

Section	Description	Page
	Specifications .....	2
10 242	Description and Operation - Injection Pump .....	3
10 236	Pumping Elements .....	5
10 214	Delivery Valves .....	5
	Troubleshooting - General .....	8
	Troubleshooting - Fuel Injectors .....	11
	Troubleshooting - Governor .....	12
	Injection Pump .....	13
10 214	Removal .....	13
	Installation .....	13
	Timing and Governor Adjustments .....	14
10 230	Installation Using Original Pump and Drive Components .....	14
	Install a New Pump or Drive Component .....	14
	Spill-timing Procedure .....	15
	Bleeding the Fuel System .....	19
	Full Screw/High Idle Adjustment .....	19
10 230	Description of Operation - Governor .....	20
	Governor .....	22
	Disassembly .....	22
	Assembly .....	22
	Adjustments .....	23
10 218	Description and Operation - Injectors .....	25
	Injector .....	26
	Removal .....	26
	Disassembly .....	27
	Assembly and Adjustment .....	27
	Engine Breather Valve .....	28
	Removal .....	29
	Installation .....	29
	Troubleshooting .....	30

---

# SECTION 18 - SINGLE CLUTCH

BOOK 1 - 87367141

## Chapter 1 - Single Clutch

### CONTENTS

<b>Section</b>	<b>Description</b>	<b>Page</b>
	Specifications .....	2
	Special Tools .....	3
	Description and Operation - General Information .....	4
	Troubleshooting .....	5
	Single Clutch .....	3
	Free Play Adjustment .....	3
	Separating the Tractor Between the Engine and Clutch Housing - 9 x 3 Transmission .....	7
	Disassembly .....	7
	Removal .....	16
	Installation .....	16
	Assembly .....	18
	Description and Overhaul - Servicing Clutch-Related Components .....	26
18 110	Clutch Pilot Bearing - 9 x 3 Gear Transmission Only .....	26
	Removal .....	26
	Inspection .....	26
	Installation .....	26
	Clutch Release Bearing .....	27
	Removal .....	28
	Inspection .....	29
	Assembly .....	29
	Flywheel Dimensions .....	30
	Clutch Cross Shaft Bushings .....	30
	Removal .....	30
	Assembly .....	30
	Clutch Pedal Bushings .....	31
	Removal .....	31
	Assembly .....	31
	Clutch Linkage Adjustment .....	32

---

# SECTION 21 - TRANSMISSION

BOOK 2 - 87367142

## Chapter 1 - Transmission Systems

### CONTENTS

Section	Description	Page
	Introduction .....	3
	Description and Operation - 9 x 3 Gear Transmission .....	4
	9 x 3 Gear Transmission - Power Flow .....	5
	Overhaul .....	11
	Transmission Preparation .....	11
	Separating the Tractor - Between the Clutch Housing and the Rear Transmission - 9 x 3 Transmission .....	12
	Removal .....	12
	Transmission Shift Cover .....	16
	Disassembly .....	18
	Assembly .....	22
	Input Shaft, Idler Gear and Countershaft Gear .....	26
	Removal .....	26
	Main Shaft .....	27
	Removal .....	27
	Front Wheel Drive Shaft .....	28
	Removal .....	28
	Countershaft .....	29
	Removal .....	29
	Range and Rear PTO Shift Rail and Fork .....	30
	Removal .....	30
	Pinion Shaft .....	31
	Removal .....	31
	PTO Front Countershaft .....	32
	Removal .....	32
	Mid-Mount PTO Idler Shaft .....	33
	Removal .....	33
	Mid-Range Gear Case .....	34
	Disassembly .....	34
	Inspection .....	34
	Assembly .....	35

---

# SECTION 21 - TRANSMISSION

BOOK 2 - 87367142

## Chapter 1 - Transmission Systems (Continued)

### CONTENTS

Section	Description	Page
	Mid-Mount PTO Idler Shaft .....	36
	Assembly .....	36
	PTO Front Countershaft .....	36
	Assembly .....	36
	Rear PTO Countershaft .....	37
	Assembly .....	37
	Pinion Shaft .....	38
	Installation .....	38
	Shift Rail and Fork .....	39
	Installation .....	39
	Countershaft .....	40
	Assembly .....	40
	Front Wheel Drive Shaft .....	41
	Assembly .....	41
	Front Wheel Drive Shift Cover .....	41
	Assembly .....	41
	Main Shaft .....	42
	Assembly .....	42
	Input Shaft, Idler Gear and Countershaft Gear .....	43
	Assembly .....	43
	Reconnecting the Tractor - Between the Clutch Housing and the Rear Transmission - 9 x 3 Transmission .....	44
	Installation .....	44

---

# SECTION 25 - FWD FRONT AXLE

BOOK 2 - 87367142

## Chapter 1 - FWD Front Axle

### CONTENTS

Section	Description	Page
	Specifications .....	2
	Front Wheel Drive .....	2
	Metric Bolt Torque Specifications .....	3
25 100	Description and Operation - Front Axle - Front Wheel Drive .....	4
	Troubleshooting .....	5
	Front Axle .....	5
	Overhaul .....	6
	Front-Wheel Drive Front Axle .....	6
	Removal .....	6
25 108	Front Axle .....	7
	Disassembly .....	7
25 102	Differential .....	9
	Disassembly .....	9
	Inspection .....	9
	Axle .....	9
	Inspection .....	9
	Differential .....	11
	Assembly .....	11
	Pinion .....	11
	Assembly .....	11
	Ring Gear to Pinion Backlash Check (Using Original Components) .....	13
	Ring Gear to Pinion Backlash Check (Using New Components) .....	14
	Shim Calculation - Alternate Method .....	15
	Pinion-To-Ring Gear Tooth Contact Adjustment .....	16
	Front-Wheel Drive Front Axle .....	17
	Installation .....	17
	Final Pinion and Wheel Shaft .....	17
	Backlash Adjustment .....	17

---

# SECTION 27 - DIFFERENTIAL, REAR AXLE

BOOK 2 - 87367142

## Chapter 1 - Differential, Rear Axle

### CONTENTS

Section	Description	Page
	Specifications .....	2
	Metric Bolt Torque Specifications .....	3
	Special Tools .....	3
27 106	Description and Operation - General Information .....	4
	Differential .....	4
27 110	Differential Lock .....	5
27 126	Rear Axle and Brakes .....	6
	Overhaul .....	10
27 106	Differential .....	10
	Removal .....	10
	Drive Pinion .....	12
	Removal .....	12
	Differential .....	13
	Disassembly .....	13
	Inspection .....	13
	Assembly .....	14
	Rear Axle and Brakes .....	18
	Rear Axle Disassembly .....	18
	Inspection .....	18
	Rear Axle Assembly .....	18
27 110	Differential Lock .....	20
	Disassembly .....	20
	Assembly .....	21
	Ring Gear and Pinion Gear Pattern Adjustment .....	22

---

# SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87367142

## Chapter 1 - Hydrostatic Transmission

### CONTENTS

<b>Section</b>	<b>Description</b>	<b>Page</b>
	Specifications .....	5
	Metric Bolt Torque Specifications .....	7
	Special Tools .....	8
29 202	Description and Operation - Hydrostatic Transmission .....	9
29 212	Variable Displacement Pump .....	11
29 212	Fixed Displacement Motor .....	12
	Fluid Flow .....	13
	Neutral Position .....	13
	Forward Position .....	14
	Reverse Position .....	15
	Troubleshooting .....	16
	Overhaul - Hydrostatic Transmission .....	17
	Transmission Preparation .....	17
	Separation between the Clutch Housing and the Extension Housing - the Extension Housing and Rear Transmission .....	18
29 202	Hydrostatic Unit .....	22
	Removal .....	22
	Precautions Before Disassembly .....	26
	Motor and Port Block .....	26
	Disassembly .....	26
	Hydrostatic Motor .....	28
	Disassembly .....	28
	Hydrostatic Motor Shaft .....	30
	Disassembly .....	30
	Charge Pump .....	30
	Disassembly .....	30
	Swash Plate .....	31
	Disassembly .....	31
	Inspection .....	33
	Swash Plate/Charge Pump .....	36
	Assembly .....	36

---

# SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87367142

## Chapter 1 - Hydrostatic Transmission (Continued)

### CONTENTS

Section	Description	Page
	HST Piston Pump Cylinder Block . . . . .	37
	Assembly . . . . .	37
	HST Motor Cylinder Block . . . . .	39
	Assembly . . . . .	39
29 130	Port Block . . . . .	40
	Neutral and Feed Valves . . . . .	40
	Disassembly . . . . .	40
	Inspection . . . . .	40
	Assembly . . . . .	41
	Charge Pump Relief Valve . . . . .	41
	Disassembly . . . . .	41
	Inspection . . . . .	41
	High Pressure Relief Valve . . . . .	42
	Removal . . . . .	42
	Installation . . . . .	42
	Hydrostatic Pump and Port Block . . . . .	42
	Assembly . . . . .	42
	Motor and Port Block . . . . .	44
	Assembly . . . . .	44
29 204	Check Valve . . . . .	45
	Disassembly . . . . .	45
	Inspection . . . . .	45
	Assembly . . . . .	45
	Installation of the Clutch Housing and the Extension Housing - the Extension Housing and Rear Transmission . . . . .	46
	Pressure Tests . . . . .	51
	High Pressure Relief Valve . . . . .	51
	Charge Pump (Low) Pressure Relief Valve . . . . .	52
	Description and Operation - Gearbox . . . . .	54
29 300	Gearbox . . . . .	54

---

# SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87367142

## Chapter 1 - Hydrostatic Transmission (Continued)

### CONTENTS

Section	Description	Page
	Overhaul – Gearbox .....	57
	Gearbox .....	57
	Removal .....	57
	Separation between the Clutch Housing and the Extension Housing – the Extension Housing and Rear Transmission .....	57
	Transmission Drive Shaft and PTO Input Shaft .....	61
	Removal .....	61
	Main Bearing Holder Plate .....	62
	Removal .....	62
	Main Shaft .....	63
	Removal .....	63
	FWD Drive Shaft (FWD Model only) .....	63
	Removal .....	63
	Countershaft .....	65
	Removal .....	65
	Range and Rear PTO Shift Rail and Fork .....	66
	Removal .....	66
	Pinion Shaft .....	67
	Removal .....	67
	PTO Front Countershaft .....	68
	Removal .....	68
	Mid-Mount PTO Idler Shaft .....	69
	Removal .....	69
	Inspection .....	69
	Shift Rail and Fork .....	70
	Installation .....	70
	Mid-Mount PTO Idler Shaft .....	71
	Assembly .....	71
	PTO Front Countershaft .....	72
	Assembly .....	72
	Pinion Shaft .....	73
	Installation .....	73

---

# SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87367142

## Chapter 1 - Hydrostatic Transmission (Continued)

### CONTENTS

Section	Description	Page
	Countershaft .....	73
	Assembly .....	73
	FWD Shaft (FWD Models only) .....	74
	Assembly .....	74
	Main Shaft .....	75
	Assembly .....	75
	Input Shaft, Transmission Drive Shaft and Retaining Plate .....	75
	Assembly .....	75
	Front Wheel Drive Shift Cover .....	77
	Assembly .....	77
	Installation of the Clutch Housing and the Extension Housing - the Extension Housing and Rear Transmission .....	78
	Overhaul and Adjustments - Control Linkage .....	83
29 200	Control Linkage .....	83
	Initial Adjustments .....	84
	Control Rod .....	84
	Pedal Stop .....	84
	HST Neutralizer .....	85
	Removal .....	85
	Disassembly .....	86
	Inspection .....	87
	Assembly .....	88
	Installation .....	89
	HST Neutral Adjustment .....	90
	Linkage Damper .....	91
	Removal .....	91
	Pedal .....	92
	Removal .....	92
	Pedal Pivot Shaft .....	94
	Removal .....	94
	Damper, Pivot Shaft, Pedal and FWD Drive Shaft .....	95
	Assembly .....	95

---

# SECTION 31 - POWER TAKE-OFF (PTO)

BOOK 3 - 87367143

## Chapter 1 - Power Take-Off (PTO)

### CONTENTS

Section	Description	Page
	Specifications .....	3
	Rear PTO .....	3
	Mid-Mount PTO .....	3
	Metric Bolt Torque Specifications .....	4
	Description and Operation - PTO System .....	5
31 110	9 x 3 Gear Transmission .....	5
31 110	Hydrostatic Transmission .....	6
	Overhaul - Rear PTO .....	7
31 114	9 X 3 Rear PTO Output Shaft .....	7
	Removal .....	7
	Inspection .....	7
	Assembly .....	8
	HST Rear PTO Output Shaft .....	9
	Removal .....	9
	Inspection .....	9
	Assembly .....	10
	Description and Operation - Mid-Mount PTO .....	11
	Mid-Mount Power Take-Off .....	11
	Overhaul - Mid-Mount PTO .....	13
31 120	9 x 3 Optional Mid-Mount PTO .....	14
	Gearbox and Countershaft .....	14
	Removal .....	14
	Output Shaft .....	14
	Removal .....	14
	Inspection .....	15
	Assembly .....	15
	Gearbox and Countershaft .....	15
	Assembly .....	15
	Hydrostatic Transmission, Standard Mid-Mount PTO .....	17
	Gearbox and Countershaft .....	17
	Removal .....	17

---

## SECTION 31 - POWER TAKE-OFF (PTO)

BOOK 3 - 87367143

### Chapter 1 - Power Take-Off (PTO) (Continued)

#### CONTENTS

Section	Description	Page
	Output Shaft .....	17
	Removal .....	17
	Inspection .....	18
	Assembly .....	18
	Gearbox and Countershaft .....	18
	Assembly .....	18

## SECTION 33 - BRAKES

BOOK 3 - 87367143

### Chapter 1 - Brakes

#### CONTENTS

Section	Description	Page
	Specifications .....	2
	Overhaul .....	3
33 120	Brakes and Final Pinion .....	3
	Removal .....	3
	Inspection .....	4
	Assembly .....	4
	Brake Adjustment .....	5

---

# SECTION 35 - HYDRAULIC SYSTEM

BOOK 3 - 87367143

## Chapter 1 - Hydraulic System

### CONTENTS

Section	Description	Page
	Specifications .....	4
	Metric Bolt Torque Specifications .....	5
	Special Tools .....	6
	Description and Operation - Hydraulic System .....	7
35 000	Hydraulic System Circuits .....	7
	Oil Filter .....	8
35 080	Combination System Relief - Diverter Valve Manifold .....	9
35 200	Control Valve Assembly (HPL) .....	10
35 210	Oil Flow .....	11
	Neutral Position .....	11
35 210	Lifting Position .....	12
35 210	Lowering Position .....	13
	Cylinder Head and Flow Control Valve .....	14
	Troubleshooting .....	15
	Overhaul - Hydraulic System .....	16
35 110	Lift Cylinder .....	16
	Removal .....	16
	Disassembly .....	20
	Inspection and Repair .....	21
	Assembly .....	22
35 183	Cylinder Head (Flow Control Valve) .....	23
	Disassembly .....	23
	Inspection .....	23
	Assembly .....	23
	Control Valve .....	24
	Disassembly .....	24
	Inspection .....	26
	Assembly .....	26
	Lowering Valve .....	29
	Adjustment .....	29
	Diverter Valve and Relief Valve Manifold Assembly .....	29
	Removal .....	29

---

# SECTION 35 - HYDRAULIC SYSTEM

BOOK 3 - 87367143

## Chapter 1 - Hydraulic System (Continued)

### CONTENTS

Section	Description	Page
	Disassembly .....	30
	Inspection .....	30
	Assembly .....	30
	Adjustments .....	31
35 124	Linkage .....	31
	Adjustment Procedure .....	31
	Control Lever .....	31
	Adjustment Procedure .....	31
	Description and Operation - Hydraulic Pump .....	32
35 304	Hydraulic Pump and Filter .....	32
	Hydraulic Pump .....	33
	Disassembly .....	33
	Inspection and Repair .....	33
	Assembly .....	33
	Description and Operation - Remote Valves .....	34
35 204	Remote Control Valves .....	34
	Hydraulic Manifold Block/Diverter Valve .....	34
	Single Spool Remote Control System .....	36
	Oil Flow .....	36
	Neutral Position .....	36
	Raising Position .....	37
	Lowering Position .....	38
35 184	Front (Double Spool) Remote Valve .....	40
	Double Spool Remote Control System .....	41
	Oil Flow .....	41
	Bucket and Lift Control - Neutral Position .....	41
	Bucket Cylinder - Dumping .....	42
	Bucket Cylinder - REGEN .....	43
	Bucket Cylinder - Rollback .....	44
	Lift Cylinder - Raising .....	45
	Lift Cylinder - Lowering .....	46
	Lift Cylinder - Float Position .....	47

---

# SECTION 35 - HYDRAULIC SYSTEM

BOOK 3 - 87367143

## Chapter 1 - Hydraulic System (Continued)

### CONTENTS

Section	Description	Page
	Overhaul - Remote Valves .....	48
	Single Spool Valve (Rear Remote Valve) .....	49
	Removal .....	49
	Disassembly .....	50
	Inspection .....	50
	Assembly .....	50
	Double Spool Remote Valve .....	51
	Double Spool Remote Valve (Front Remote Valve) .....	52
	Removal .....	52
	Disassembly .....	53
	Lift Spool .....	53
	Bucket REGEN Spool .....	53
	Inspection .....	53
	Assembly .....	55
	Lift Spool .....	55
	Bucket REGEN Spool .....	55
	Front Remote Valve Linkage .....	57
	Removal .....	57
	Installation .....	57
	Pressure Testing .....	59
	Main System Relief Valve .....	59

---

# SECTION 41 - STEERING

BOOK 3 - 87367143

## Chapter 1 - Power Steering System

### CONTENTS

Section	Description	Page
	Specifications .....	3
	Metric Bolt Torque Specifications .....	4
	Torque Specifications .....	5
	Special Tools .....	6
	Description and Operation .....	7
41 204	Power Steering System .....	7
	Power Steering Control Valve .....	7
	Spool and Sleeve .....	7
	Drive Shaft .....	8
	Gerotor Pump .....	8
	Check Valve .....	8
	Relief Valve .....	8
41 206	Power Steering Pump .....	9
	Power Steering Cylinder .....	10
41 200	Power Steering Operation .....	11
	Fluid Flow - Neutral Position .....	11
	Fluid Flow - Left Turn .....	12
	Fluid Flow - Right Turn .....	13
	Power Steering Manual Operation .....	14
	Troubleshooting .....	15
	Overhaul .....	17
	Power Steering System .....	17
	Removal .....	17
	Steering Control Valve .....	21
	Disassembly .....	21
	Inspection .....	24
	Assembly .....	24
41 216	Steering Cylinder .....	30
	Removal .....	30
	Disassembly .....	30
	Inspection .....	31
	Assembly .....	33

---

## SECTION 41 - STEERING

BOOK 3 - 87367143

### Chapter 1 - Power Steering System (Continued)

#### CONTENTS

Section	Description	Page
	Oil Pump .....	34
	Disassembly .....	35
	Inspection .....	35
	Assembly .....	35
	Power Steering System .....	36
	Installation .....	36
	Power Steering Tubes .....	40
	Pressure Testing .....	41
	Pump, Steering Valve and Relief Valve .....	41
	Test Results .....	41
	Steering Cylinder .....	42
	Test Results .....	42

## SECTION 44 - WHEELS AND TIRES

BOOK 3 - 87367143

### Chapter 1 - Wheels and Tires

#### CONTENTS

Section	Description	Page
	Specifications .....	2
	Wheels and Tires - Tread Setting .....	2
	Wheels and Tires Lug Bolt Torque .....	3
	Front and Rear Wheel Hub Bolt Torque Sequence .....	3
	Weights .....	4
	Wheels and Tires - Weight Limitation .....	5
	Liquid Ballast .....	5
	Tire Inflation vs. Permissible Load .....	6

---

# SECTION 55 - ELECTRICAL SYSTEM

BOOK 4 - 87367144

## Chapter 1 - Electrical System

### CONTENTS

Section	Description	Page
55 100	Component Location and Function - Description and Operation .....	3
	Wiring Harnesses .....	4
	Ground Locations .....	7
	Battery .....	8
	Removal .....	9
	Installation .....	9
	Fuse Block .....	10
	Main Fuse .....	10
	Replacement .....	10
	Electrical System Components - Description and Testing .....	11
	Key Switch .....	11
	Replacement .....	12
	Installation .....	12
	Testing .....	13
	Light Switch (Combination Switch) .....	14
	Removal .....	15
	Testing .....	15
	Installation .....	16
	Hazard/Turn Signal Combination Switch .....	17
	Removal .....	17
	Testing .....	18
	Installation .....	19
	9 x 3 Transmission Main (Speed) Gears, Safety Switch .....	20
	Testing .....	21
	Transmission Range Gear Safety Switch (HST Models), Rear PTO Safety Switch and Mid PTO Safety Switch .....	22
	PTO Switch Adjustment .....	22
	Range Switch Adjustment HST Transmission .....	22
	Testing .....	23
55 408	Seat Safety Switch .....	24
	Removal .....	24
	Testing .....	24
	Installation .....	25

---

# SECTION 55 - ELECTRICAL SYSTEM

BOOK 4 - 87367144

## Chapter 1 - Electrical System (Continued)

### CONTENTS

Section	Description	Page
	Parking Brake Switch .....	25
	Testing .....	26
	Cruise Control Brake Release Switch (HST Only) .....	27
	Testing .....	27
	Relays .....	29
	Testing .....	30
	Flasher Controller .....	31
	Removal .....	31
	Testing .....	31
	Safety Controller .....	35
	Testing .....	36
	Testing Alarm Circuit .....	38
	Diodes .....	40
	Testing .....	40
	Cruise Control Magnet (HST Models) .....	41
	Testing .....	42
	HST Speed Control (Cruise Control) Switch (HST Models only) .....	42
	Testing .....	43
	Glow Plugs .....	44
	Testing .....	44
55 414	Engine Sensors .....	45
	Fuel Shutoff Solenoid .....	47
	Testing .....	47
55 404	Lighting .....	48
	Flasher Warning Light .....	49
	Rear Work Light (Optional) .....	50
	Safety Alarm (Buzzer) .....	50
	Removal .....	51
	Inspection .....	51
	Installation .....	51

---

# SECTION 55 - ELECTRICAL SYSTEM

BOOK 4 - 87367144

## Chapter 2 - Electrical Circuits

### CONTENTS

Section	Description	Page
	Electrical Wiring Diagram .....	2
	Starting Circuit (with or without Operator Present) HST Transmission .....	4
	Starting Circuit (with or without Operator Present) Gear Transmission .....	8
	Safe Operation Circuit (Operator Present) All Transmissions .....	12
	Safe Operation Circuit (Operator not Present and Rear PTO Engaged) HST Transmission .....	14
	Safe Operation Circuit (Operator not Present and Rear PTO Engaged) Gear Transmission .....	18
	Glow Plug Circuit (All Tractors) .....	22
	HST Cruise Control Circuit .....	26
	Front Work Lights Circuit .....	30
	Front Road Lights Circuit .....	32
	Hazard Flasher Circuit .....	34
	Left Turn Signal Circuit .....	36
	Right Turn Signal Circuit .....	38
	Engine Temperature Gauge Circuit .....	42
	Engine Oil Pressure Indicator Light Circuit .....	44
	Fuel Level Gauge Circuit .....	46
	Park Brake Indicator Light Circuit .....	48
	PTO Indicator Light Circuit (Rear and/or Mid PTO(s) Engaged) .....	50
	Tachometer Circuit .....	54
	Charging Circuit .....	56
	Auxiliary Power Socket Circuit .....	60
	Safety Alarm Circuit .....	62

---

# SECTION 55 - ELECTRICAL SYSTEM

BOOK 4 - 87367144

## Chapter 3 - Instrument Panel

### CONTENTS

Section	Description	Page
	Component Operation and Servicing .....	2
	Instrument Panel .....	2
	Removal .....	4
	Component Testing and Replacement .....	4
	Fuel Gauge .....	4
	Testing .....	4
	Replacement .....	5
	Temperature Gauge .....	6
	Testing .....	6
	Replacement .....	6
	Tachometer .....	7
	Testing .....	7
	Replacement .....	8
	Instrument Panel, Indicator and Illumination Lights .....	10
	Bulb Replacement .....	11

## SECTION 55 - ELECTRICAL SYSTEM

### BOOK 4 - 87367144

## Chapter 4 - Alternator and Starter

### CONTENTS

Section	Description	Page
	Alternator Specifications .....	3
	Alternator Troubleshooting .....	4
	Troubleshooting - Charging System .....	6
	Failure in Charging System .....	6
	Preliminary Checks .....	6
	Description and Operation - Charging System .....	7
	Alternator Component Construction .....	8
	Stator .....	8
	Rotor .....	8
	Rectifier .....	8
	End Frame .....	9
	Integrated Circuit (IC) Regulator .....	10
	Charging Circuit .....	10
	Preliminary Alternator Tests .....	10
	Alternator Drive Belt .....	10
	Charging System Performance Tests .....	11
	Regulator Voltage Test .....	11
	Alternator Output Current Test .....	11
	M-Type IC Regulator Test Procedure (12 V Specification) .....	12
	Regulator By-Pass Test .....	13
	Alternator .....	13
	Removal .....	13
	Disassembly .....	14
	Component Testing and Inspection .....	20
	Stator .....	20
	Rotor .....	20
	Rectifier .....	22
	Testing .....	22
	Brushes .....	23
	Bearings .....	23
	Drive Pulley .....	24
	Assembly .....	24