

TN60DA, TN60SA, TN70DA, TN70SA, TN75DA, TN75SA, TN85DA, TN95DA REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL	2
SECTION 10 - ENGINE	2
SECTION 18 - CLUTCH	9
SECTION 21 - TRANSMISSIONS	11
SECTION 23 - FWD TRANSFER BOX AND AUTO FWD	14
SECTION 25 - FRONT AXLE (FWD)	15
SECTION 27 - REAR MECHANICAL DRIVE	17
SECTION 31 - MECHANICAL POWER TAKE-OFF	17
SECTION 33 - BRAKING SYSTEM	18
SECTION 35 - HYDRAULIC SYSTEM	18
SECTION 41 - STEERING	21
SECTION 44 - AXLES AND WHEELS	22
SECTION 50 - CAB AIR CONDITIONING SYSTEM	22
SECTION 55 - ELECTRICAL SYSTEM	23
SECTION 90 - PLATFORM, CAB, BODYWORK	29

The following pages are the collation of the contents pages from each section and chapter of the TNDA and TNSA Series Repair manual. Complete Repair part # 87393595.

The sections used through out all New Holland product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the TNDA and TNSA Series Tractors.

Sample of manual. Download All 1474 pages at:

<https://www.arepairmanual.com/downloads/new-holland-tn60da-tn60sa-tn70da-tn70sa-tn75da-tn75sa-tn85da-tn95da-tractor-service-repair-manual/>

SECTION 00 - GENERAL

BOOK 1 - 87393596

Chapter 1 - General

CONTENTS

Section	Description	Page
	General Instructions	3
	Health and Safety	5
	Precautionary Statements	15
	Safety	16
	Ecology and the Environment	19
	Minimum Hardware Tightening Torques	20
	Federal Emissions Warranty	22
	Lubricants and Fluids	25

SECTION 10 - ENGINE

BOOK 1 - 87393596

Chapter 1 - Engine (Three-Cylinder)

CONTENTS

Section	Description	Page
	Specifications	2
	Special Tools	10
	Tightening Torques	12
	Sectional Views	13
	Engine Troubleshooting	15
	Overhaul	19
10 001 10	Engine	19
	Removal	19
	Installation	20
10 001 30	Compression Test	21
10 001 54	Disassembly	22
	Assembly	32
	Checks, Dimensions and Repairs	41
	Cylinder Block	41

SECTION 10 - ENGINE

BOOK 1 - 87393596

Chapter 1 - Engine (Three-Cylinder) (Continued)

CONTENTS

Section	Description	Page
	Crankshaft	43
	Main Bearings	45
	Flywheel	46
	Connecting Rods	47
	Pistons	48
	Valves	51
	Tappets	51
	Camshaft	52
	Valve Timing	53
	Cylinder Head	54
	Valve Seats	55
10 101 53	Valve Guides	56
10 101 60	Injector Sleeves	59
10 102 70	Crankshaft Front Oil Seal	61
10 106 12	Valve/Rocker Arm	63
10 254 44	Exhaust Pipe	65
	Removal	65
	Installation	65

SECTION 10 - ENGINE

BOOK 1 - 87393596

Chapter 2 - Cooling System (Three-Cylinder)

CONTENTS

Section	Description	Page
	Specifications	2
	Special Tools	3
	Sectional Views	4
	Description and Operation	5
	Cooling System	5
	Radiator	5
	Thermometer	5
	Thermostat	5
	Overhaul	6
10 402 11	Coolant Pump	6
	Removal	6
	Installation	7
10 402 28	Disassembly	8
	Assembly	8
10 414 10	Drive Belt Tension Adjustment	9
10 402 30	Cooling System Thermostat	10
	Removal	10
	Installation	11
10 406 10	Radiator	12
	Removal	12
	Installation	15

SECTION 10 - ENGINE

BOOK 1 - 87393596

Chapter 3 - Lubrication System (Three-Cylinder)

CONTENTS

Section	Description	Page
	Specifications	2
	Special Tools	3
	Sectional View	4
	Description and Operation	5
	Oil Filter	5
	Low Oil Indicator	5
	Oil Pump	6

SECTION 10 - ENGINE

BOOK 1 - 87393596

Chapter 4 - Fuel System (Three-Cylinder)

CONTENTS

Section	Description	Page
	Specifications	2
	Special Tools	4
	Description and Operation	6
	Fuel Injection Pump (Bosch)	6
	Turbocharged Models	6
	All Models	8
	Overhaul	9
10 216 10	Fuel Tank	9
	Removal	9
	Installation	10
10 218 30	Fuel Injectors	11
	Removal	11
	Installation	12
10 246 14	Injection Pump	13
	Removal	13
	Lock Timing the Injection Pump On a Workbench	19
	Installation	24
	Check Fuel Injection Pump Timing with Pump Installed on Tractor	25

SECTION 10 - ENGINE

BOOK 1 - 87393596

Chapter 5 - Engine (Four-Cylinder)

CONTENTS

Section	Description	Page
	Specifications	2
	Tightening Torques	9
	Torque Settings with Angles	10
	Special Tools	11
	Description and Operation	12
	Sectional Views	12
	Troubleshooting	17
	Overhaul	21
10 001 10	Engine	21
	Removal	21
	Installation	31
	Compression Test	32
	Disassembly	33
	Assembly	44
	Checks, Measurements and Repairs	67
	Cylinder Block	67
	Crankshaft	70
	Connecting Rods	72
	Pistons	74
	Camshaft and Valves	78
	Cylinder Head	82
	Crankshaft Front Seal	83
	Crankshaft Rear Seal	85
	Adjusting Valve/Rocker Arm Clearance	88

SECTION 10 - ENGINE

BOOK 1 - 87393596

Chapter 6 - Cooling System (Four-Cylinder)

CONTENTS

Section	Description	Page
	Specifications	2
	Description of Operation	3
	Sectional Views	4
	Overhaul	5
10 402 10	Coolant Pump	5
	Removal	5
	Installation	6
10 402 30	Thermostart Valve	7
	Removal	7
	Installation	8
10 406 10	Radiator	9
	Removal	9
	Installation	12
10 414 10	Coolant Pump and Alternator Belts	13
	Tension Adjustment	13

SECTION 10 - ENGINE

BOOK 1 - 87393596

Chapter 7 - Lubrication System (Four-Cylinder)

CONTENTS

Section	Description	Page
	Specifications	2
	Lubrication System Components	4
	Low Oil Pressure Indicator	5
	Functional Checks	5
	Oil Filter	5
	Replacement	5

SECTION 10 - ENGINE

BOOK 1 - 87393596

Chapter 8 - Fuel System (Four-Cylinder)

CONTENTS

Section	Description	Page
	Specifications	2
	Special Tools	4
	Description and Operation	6
	Fuel Injection Pump (BOSCH)	6
	Turbocharged models	6
	All Models	8
	Overhaul	10
10 218 30	Fuel Injectors	10
	Removal	10
	Installation	11
10 246 14	Bosch Fuel Injection Pump	13
	Removal	13
	Lock-Timing the Injection Pump	15
	Lock Timing the Fuel Injection Pump On a Workbench	17
	Installation	19
	Check Fuel Injection Pump Timing with Pump Installed on the Tractor	19

SECTION 18 - CLUTCH

BOOK 1 - 87393596

Chapter 1 - Clutch (3-Cylinder Models)

CONTENTS

Section	Description	Page
	Specifications	2
	Models With Mechanical Shuttle	2
	Models With Power Shuttle	2
	Tightening Torques	3
	Special Tools	3
	Sectional Views	4
	LUK 11 in/11 in Dual Clutch Pack	4
	LUK 11 in Single Clutch	5
	PTO Servo-Assist Control Valve	6
	Troubleshooting	7
	Description and Operation	8
	PTO Clutch Servo-Assist Control	8
	Engagement	8
	Disengagement	9
	Adjustment	9
	Overhaul	10
	Clutch	10
	Removal	10
	Disassembly	21
	Assembly	25
	Checks and Repair	27
	Flywheel	28
	Installation	29
	Clutch Pedal Adjustment	33

SECTION 18 - CLUTCH

BOOK 1 - 87393596

Chapter 2 - Clutch (4-Cylinder Models)

CONTENTS

Section	Description	Page
	Specifications	2
	Models With Mechanical Shuttle	2
	Models With Power Shuttle	2
	Tightening Torques	3
	Special Tools	3
	Sectional Views	4
	LUK 11 in/11 in Dual Clutch Pack	4
	LUK 11 in Single Clutch	5
	PTO Servo-Assist Control Valve	6
	Troubleshooting	7
	Description and Operation	8
	PTO Clutch Servo-Assist Control	8
	Engagement	8
	Disengagement	9
	Adjustment	9
	Overhaul	10
	Clutch	10
	Removal	10
	Disassembly	18
	Assembly	24
	Checks and Repair	25
	Flywheel	26
	Installation	27
	Clutch Pedal Adjustment	30

SECTION 21 - TRANSMISSIONS

BOOK 2 - 87048069

Chapter 1 - Mechanical Transmission (16 x 16) Synchro-Command

CONTENTS

Section	Description	Page
21 000	Main data	2
	Torque settings	2
	Tools	4
	Cross-sectional views	8
	Description and operation	12
	Troubleshooting	12
21 118 10	Rear transmission/gearbox casing. Removal - Installation	14
21 118 85	Gearbox transmission casing. Disassembly - Assembly	21
21 130 10	Gearbox control lever. Removal - Installation	31
21 130 11	Range gear control lever. Removal - Installation	32

SECTION 21 - TRANSMISSIONS

BOOK 2 - 87048069

Chapter 2 - Power Shuttle Transmission (16 x 16) Synchro-Command

CONTENTS

Section	Description	Page
21 000	Main data	2
	Torque values	3
	Special tools	4
	Cross-sectional views	7
	Description and operation	11
21 118 85	Transmission-Gearbox. Disassembly - Assembly	12
21 134 46	Power shuttle control valve. Disassembly - Assembly	14
21 134 70	A + B Clutch valve solenoids. Removal - Installation	16
21 154 60	Dump valve solenoid. Removal - Installation	17
21 154 34	Clutch casing. Disassembly - Assembly	18

SECTION 21 - TRANSMISSIONS

BOOK 2 - 87048069

Chapter 3 - Power Shuttle Transmission Calibration, Faults and Diagnostics

CONTENTS

Section	Description	Page
	Fault Codes Indication	3
	Description of Systems (ECM and CDU)	4
	Automatic Self-Diagnosis (ECM)	5
	ECM First Start Up (Self Configuration)	6
	Transmission Disabled Indicator Light	7
	Diagnosis During Operation	9
	Calibration and Diagnostics Unit (CDU)	10
	Power Shuttle Fault Code Priority	11
	Calibration and Diagnostic Unit Use	14
	HH Menu Access	15
	H1 - Clutches A and B Calibration	18
	H2 - Clutches A and B Calibration Values Display	23
	H3 - System Configuration	24
	H4 - Power Shuttle Hardware and Software Revision Levels	26
	H5 - Control Switch Diagnosis	27
	H6 - Clutch A Fill Time Modification and Display	32
	H7 - Clutch B Fill Time	34
	H8 - Erasure of Data Stored in the Non-Volatile Memory (NVM)	36
	H9 - Voltmeter Functions	37
	HA - Clutch Pedal Potentiometer and Status Switch	41
	Clutch Pedal Potentiometer Replacement and Clutch Pedal Switch Adjustment	43
	HC - Transmission Oil Temperature Sender	44
	HD - HI/LO Synchronizer Operation	45
	HE - Gear Change Adjustments	47
	HF - Stored Error Codes	48
	Troubleshooting Fault Codes	50
	Description of Systems (ECM and EST)	51
	Automatic Self-Diagnosis (ECM)	52
	ECM First Start Up (Self Configuration)	53
	Transmission Disabled Indicator Light	54
	Diagnosis During Operation	56

SECTION 21 - TRANSMISSIONS

BOOK 2 - 87048069

Chapter 3 - Power Shuttle Transmission Calibration, Faults and Diagnostics (Continued)

CONTENTS

Section	Description	Page
	Power Shuttle Fault Code Priority	58
	Electronic Service Tool (EST)	61
	Downloading the Latest Software into TNDA, TNSA Series Tractor Power Shuttle Control Module with the Electronic Service Tool	62
	Connecting the Electronic Service Tool (EST) to the Tractor	66
	H1 - Clutches A and B Calibration	70
	H2 - Clutches A and B Calibration Values Display	75
	H3 - System Configuration	76
	H4 - Power Shuttle Hardware and Software Revision Levels	78
	H5 - Control Switch Diagnosis	79
	H6 - Clutch A Fill Time Modification and Display	84
	H7 - Clutch B Fill Time	86
	H8 - Erasure of Data Stored in the Non-Volatile Memory (NVM)	88
	H9 - Voltmeter Functions	89
	HA - Clutch Pedal Potentiometer and Status Switch	93
	Clutch Pedal Potentiometer Replacement and Clutch Pedal Switch Adjustment	95
	HC - Transmission Oil Temperature Sender	96
	HD - HI/LO Synchronizer Operation	97
	HE - Gear Change Adjustments	99
	HF - Stored Error Codes	100
	Troubleshooting Fault Codes	102
	Fault Codes	104
	Power Shuttle (16 x 16) Electronic Control Module Input/Output Wiring Diagram	307

SECTION 23 - FWD TRANSFER BOX AND AUTO FWD

BOOK 3 - 87048070

Chapter 1 - FWD Transfer Box

CONTENTS

Section	Description	Page
23 000	Main Data	1
	Torque settings	2
	Tools	3
	Cross-Sectional Views	5
	Description and Operation	8
	Troubleshooting	9
23 101 26	Transmission Shafts and Guard. Removal-Installation (TNSA models)	10
	Transmission Shafts and Guard. Removal-Installation (TNDA models)	12
23 101 40	Drive Gear Housing. Removal-Installation	13
23 101 42	Drive Gear Housing (Mechanical). Disassembly-Assembly	15
23 202 52	Drive Gear Housing (Electro-hydraulic). Disassembly-Assembly	17

SECTION 23 - FWD TRANSFER BOX AND AUTO FWD

BOOK 3 - 87048070

Chapter 2 - Auto FWD, Calibration and Diagnostics

CONTENTS

Section	Description	Page
	Automatic FWD Fault Codes	2
	Calibration and Diagnostic Unit (CDU)	3
	HH Menu Access	3
	H3 - System Configuration	4
	H4 - Software Revision Level	7
	H5 - Control Switches Diagnostics	7
	H8 - Deleting Data from the Non-Volatile Memory	8

SECTION 23 - FWD TRANSFER BOX AND AUTO FWD

BOOK 3 - 87048070

Chapter 2 - Auto FWD, Calibration and Diagnostics (Continued)

CONTENTS

Section	Description	Page
	H9 - Voltmeter Functions	9
	HD - FWD Engagement Position	10
	HF - Errors Stored in the Non-Volatile Memory of the ECM	10
	First Start-Up	12
	Electronic Service Tool (EST)	13
	Downloading the Latest Software	13
	Connecting the Electronic Service Tool	17
	HH Menu Access	20
	H3 - System Configuration	21
	H4 - Software Revision Level	24
	H5 - Control Switches Diagnostics	24
	H8 - Deleting Data from the Non-Volatile Memory	25
	H9 - Voltmeter Functions	26
	HD - FWD Engagement Position	27
	HF - Errors Stored in the Non-Volatile Memory of the ECM	27
	First Start-Up	29
	Troubleshooting	30
	ECM Location	31

SECTION 25 - FRONT AXLE (FWD)

BOOK 3 - 87048070

Chapter 1 - Front Axle (Super Steer Axle)

CONTENTS

Section	Description	Page
25 000	Main Data	1
	Torque Settings	4
	Tools	7
	Cross-Sectional Views	10
	Description and Operation	12
	Troubleshooting	14

SECTION 25 - FRONT AXLE (FWD)

BOOK 3 - 87048070

Chapter 1 - Front Axle (Super Steer Axle) (Continued)

CONTENTS

Section	Description	Page
25 100 30	Front axle assembly. Removal-Installation	15
25 102 15	Bevel drive and front axle differential housing. Removal-Installation	19
25 102 20	Front axle bevel drive. Overhaul	23
25 102 24	Front axle differential. Overhaul	31
25 104 34	Front axle differential lock clutch assembly. Overhaul	32
25 108 30	Front epicyclic final drive. Removal-Installation	35
25 108 38	Wheel hub and steering knuckles. Removal-Installation	40
25 108 46	Steering knuckle pins and bearings. Replacement	43
44 511 80	Front wheels adjustment (Toe-in)	44

SECTION 25 - FRONT AXLE (FWD)

BOOK 3 - 87048070

Chapter 2 - Front Axle (FWD)

CONTENT

Section	Description	Page
25 000	Main Data	1
	Tightening Torques	3
	Tools	5
	Cross-Sectional Views	7
	Description and Operation	8
25 100 30	Front axle. - Removal/Installation	9
25 100 38	Front axle. - Disassembly	13
25 102 27	Front axle differential with LIM-SLIP. Overhaul	18
25 108 46	Front axle. - Assembly	22
	Steering knuckle pins and bearings. - Replacement	23
	Stub axle adjustment	24
	Bevel drive adjustment	26
25 108 30	Front epicyclic final drive. Removal - Installation	33
44 511 80	Front wheels adjustment (Toe-in)	36

SECTION 27 - REAR MECHANICAL DRIVE

BOOK 3 - 87048070

Chapter 1 - Rear Mechanical Transmission

CONTENTS

Section	Description	Page
27 000	Main Data	1
	Tightening Torques	3
	Tools	5
	Cross-Sectional Views	9
	Description and Operation	12
	Troubleshooting	12
27 106 16	Rear Transmission Gearbox Removal-Installation	14
27 110 10	Differential Lock Engagement Sleeve-Adjustment	20
27 120 10	LH or RH Final Drive Box Assembly Removal-Installation	26
27 120 34	Drive Shaft Removal-Installation	29
27 120 32	Epicyclic Final Drive Removal-Installation	31

SECTION 31 - MECHANICAL POWER TAKE-OFF

BOOK 3 - 87048070

Chapter 1 - Servo-Assist PTO

CONTENTS

Section	Description	Page
31 000	Main Data	1
	Tools	3
	Tightening Torques	4
	PTO Servo-Assist Valve - Description and Operation	5
	Cross-Sectional Views	5
	Description and Operation of PTO	7
	PTO Clutch Engagement/Oil Flow	8
	PTO Clutch Disengagement/Oil Flow	9
	PTO Clutch Servo Control Adjustment	10
	Hydraulic PTO Servo Assist Cable Adjustment	11
	PTO Engaged Switch Adjustment	12
31 112 20	Mechanical PTO Assembly Removal-Installation	13
	PTO Brake	16

SECTION 33 - BRAKING SYSTEM

BOOK 3 - 87048070

Chapter 1 - Braking System

CONTENTS

Section	Description	Page
33 000	Main Data	1
	Torque Settings	2
	Cross-Sectional Views	3
	Tools	5
	Description and Operation	6
	Troubleshooting	7
33 202 60	Right or Left-Hand Brake. Removal-Installation	9
33 202 46	Braking System Hydraulic Pump. Removal-Installation	11
33 202 04	Brake Hydraulic System. Air Bleeding	16
33 110 40	Parking Brake. Brake Disks Removal-Installation	18
33 110 08	Handbrake Control. Travel Adjustment	20

SECTION 35 - HYDRAULIC SYSTEM

BOOK 4 - 87048071

Chapter 1 - High Pressure System Description and Operation

CONTENTS

Section	Description	Page
	Precautionary statements	2
	Description and Operation	3
35 104	High-pressure system hydraulic pump	4
	Hydraulic system configuration table	5
35 110	Mechanically controlled hydraulic lift	6
	Lift-O-Matic	8
	Hydraulic power lift (HPL) control valve oil flow	9
35 204	Remote control valves	12
	Rear remote valve arrangement	13
	Rear remote valve stacking	14
	Rear remote valve control levers	14

SECTION 35 - HYDRAULIC SYSTEM

BOOK 4 - 87048071

Chapter 1 - High Pressure System Description and Operation (Continued)

CONTENTS

Section	Description	Page
	Deluxe Quick-fit couplers	15
	Zero-pressure return port	15
	Mid-mount control valves (optional)	16
	Switching between single and double acting cylinders	16
	Double-acting valve with automatic detent release and float	17
	Double-acting valve less automatic detent release and float	20
	Single-acting valve less automatic release and float	21
	TN60DA, TN60SA, TN70DA, TN70SA, TN75DA and TN75SA Hydraulic System Diagram .	22

SECTION 35 - HYDRAULIC SYSTEM

BOOK 4 - 87048071

Chapter 2 - High Pressure System Overhaul and Adjustment

CONTENTS

Section	Description	Page
	Specifications	2
	Torque Settings	7
	Hydraulic Lift Tools	9
	Cross-sectional Views	11
	Hydraulic Lift Troubleshooting	18
35 110 40	Mechanically Controlled Lift Internal Controls Disassembly-Assembly	20
	Mechanically Controlled Lift Adjustments	24
35 110 08	Mechanically Controlled Lift Rod Mechanism Adjustments	30
	Lift Arm Descent Speed Adjustments	32
	Upper Stroke Limit Adjustment	32
	Adjusting the Upper Stroke Limit of the Lift-o-matic Device	33
35 110 42	Arm Shaft and Lift Cylinder Disassembly-Assembly	34
35 114 14	Mechanically Controlled Lift Control Valve Disassembly-Assembly	38
35 114 30	Lift Pressure Relief Valve Removal-installation	42
35 114 32	Lift Pressure Relief Valve (Calibration)	42
35 104 30	High Pressure (Lift) Pump Disassembly-Assembly	44

SECTION 35 - HYDRAULIC SYSTEM

BOOK 4 - 87048071

Chapter 3 - Low-Pressure System Description and Operation

CONTENTS

Section	Description	Page
35 260	Low-pressure, steering and lubrication system – General Description	2
	Low-pressure oil flow	5
	Transmission lubrication system	6
	Steering system oil flow	7
	Electro-hydraulic rear differential lock	8
	Electro-hydraulic front differential lock	10
	Electro-hydraulic four-wheel drive (FWD)	12
	PTO servo-assist valve and Piston	14

SECTION 35 - HYDRAULIC SYSTEM

BOOK 4 - 87048071

Chapter 4 - Low-Pressure System Test Fitting Locations

CONTENTS

Section	Description	Page
	System test fitting locations	2

SECTION 41 - STEERING

BOOK 4 - 87048071

Chapter 1 - Steering

CONTENTS

Section	Description	Page
	Torque Settings Main Data - Tools	2
	Description and Operation	3
	Troubleshooting	10
41 204 10	Hydrostatic steering wheel. Removal-Installation	12
41 204 30	Hydrostatic steering control valve. Removal-Installation	13
41 204 34	Hydrostatic steering control valve (Removed) Disassembly-Assembly	16
41 204 38	Hydrostatic steering control valve. Bench testing	32
41 216 10	Steering control cylinder. Removal-Installation	35
41 216 18	Steering control cylinder. Disassembly-Assembly	36

SECTION 41 - STEERING

BOOK 4 - 87048071

Chapter 2 - Open center flow gear pump

CONTENTS

Operation	Description	Page
	Main Data	1
	Torque Settings	2
	Cross Sectional Views	3
	Description and Operation	4
41 206 20	Hydrostatic Steering Oil Pump - Disassembly-Assembly (with unit removed)	5

SECTION 44 - AXLES AND WHEELS

BOOK 4 - 87048071

Chapter 1 - Axles and Wheels

CONTENTS

Section	Description	Page
44 000	Main Data	1
	Cross-Sectional Views	3
	Torque Settings	6
	Tools	7
	Troubleshooting	8
44 101 22	Front axle hub. Disassembly-Assembly	9
44 101 30	Front axle. Removal-Installation	12
44 101 46	Stub axle. Overhaul	15
44 511 80	Checking the alignment of the front wheels (Toe In)	19

SECTION 50 - CAB AIR CONDITIONING SYSTEM

BOOK 4 - 87048071

Chapter 1 - Cab Air Conditioning System

CONTENTS

Section	Description	Page
	Cab Air Conditioning System Safety	2
	Use of the Air Conditioning System	3
	Tools and General Characteristics	4
	Operating Principles	5
	Main Components of the Cab Air Conditioning System	6
	Cab Heating and Ventilation Controls	11
	Cab Air Conditioning and Temperature Controls	13
50 200 03	Function and Cooling Tests	14
	Troubleshooting	18
	Refrigerant Recovery - Recycling and Evacuation - Charging Stations	22
50 200 04	Filter/Drying, Recharging and Refrigeration Check	24
50 200 06	Checks and Elimination of Gas Leaks	31
50 200 10	Compressor Drive Belt Tension Adjustment	33
50 206 14	Cab Air Infeed Vents Removal and Installation	34

SECTION 50 - CAB AIR CONDITIONING SYSTEM

BOOK 4 - 87048071

Chapter 1 - Cab Air Conditioning System (Continued)

CONTENTS

Section	Description	Page
50 206 51	Cab Heating/Air Conditioning System Removal and Installation	35
50 206 54	Cab Heating Unit Disassembly and Assembly	37
50 206 56	Cab Air Conditioning System Evaporator Unit Disassembly and Assembly	38
50 206 66	Cab Electric Fan Unit Disassembly and Assembly	39

SECTION 55 - ELECTRICAL SYSTEM

BOOK 5 - 87393597

Chapter 1 - Instruments

CONTENTS

Section	Description	Page
55100	Instrument Panels	2
	Analog Instrument Panel (3-Cylinder Version)	2
	Digital Instrument Panel (All Models)	3
	Indicator Light Panel	4
	Digital Instrument Display	8
	Controls on the Dashboard and Control Panel	11
	Hazard Warning Lights Switch	11
	Headlight Switch	11
	Power Shuttle Control Lever	11
	Transmitters, Sensors and Switches (Models with 3-Cylinder Engines)	12
	Transmitters, Sensors and Switches (Models with 4-Cylinder Engines)	20

SECTION 55 - ELECTRICAL SYSTEM

BOOK 5 - 87393597

Chapter 2 - Components

CONTENTS

Section	Description	Page
	Description of Controls	2
	Hazard Warning Lights Switch	2
	Headlight Switch	2
	Power Shuttle Control Lever	2
	Light Control Lever	3
	Power Socket for Rotating Beacon	4
	Auxiliary Power Outlets	4
	Controls on Right Hand Cab Upright	5
	Cab Internal Lighting	6
	Cab Air Conditioning/Heating Controls	7
	Air Conditioning System Operation	8
	Light Bulb Maintenance	9
	Replacing Component Light Bulbs	9
	Front Head Lamp	9
	Corner Light Bulbs	9
	Side Direction Indicator Lamp	9
	Rear Direction and Stop Indicator Lamp	10
	Cab Front and Rear Work Lights	10
	Courtesy Light and Adjustable Reading Light	10
	Adjustable Reading Light	11
	Instrument Panel Bulbs	11
	Replacing the Front Side Lights, Brake and Direction Indicator Lamp Bulbs	12
	Rear Sidelights, Brake and Direction Indicator Light Bulbs (3-Cylinder)	12
	Work Light Bulb Replacement (3-Cylinder)	12
	Replacing the Turn Indicator, Flasher, and Brake Light Bulbs (ROPS)	13
	Work Lights (ROPS)	13

SECTION 55 - ELECTRICAL SYSTEM

BOOK 5 - 87393597

Chapter 3 - Starting System

CONTENTS

Section	Description	Page
55 000	Specifications	2
	Tightening Torques	2
	Troubleshooting	3
	Description and Operation	4
	Marelli Starter Motor	4
	Iskra Starter Motor	5
	Starting System Testing	6
	Current Absorption	6
	Starter Motor (No Load)	7
	Circuit Resistance (Voltage Drop)	8
	Battery Cable - Positive	8
	Starter Motor Ground Connections	8
	Battery Cable - Negative (Ground)	8
	Overhaul	9
	Starter Motor	9
	Removal	9
	Disassembly	9
	Testing	10
	Installation	11

SECTION 55 - ELECTRICAL SYSTEM

BOOK 5 - 87393597

Chapter 4 - Charging System

CONTENTS

Section	Description	Page
	Specifications	2
	Tightening Torques	2
	Description and Operation	3
	Alternator (3-Cylinder Version)	3
	Alternator (4-Cylinder Version)	3
	General Operation (All Models)	4
	Testing and Troubleshooting	5
	Precautions and Preliminary Checks	5
	Tests Performed on the Tractor	7
	Alternator Wire Connection Test	7
	Charging Current and Regulated Voltage Test	7
	Charging Circuit Voltage Drop Test	8
	Maximum Alternator Output Test	9
	Overhaul	10
	Alternator	10
	Removal	10
	Tests Performed on a Workbench	12
	Disassembly	15
	Assembly	18
	Installation	18

SECTION 55 - ELECTRICAL SYSTEM

BOOK 5 - 87393597

Chapter 5 - Battery

CONTENTS

Section	Description	Page
55 000	Specifications	2
	Description and Operation	3
	Overhaul	4
	Battery	4
	Removal	4
	Installation	4
	Servicing	5

SECTION 55 - ELECTRICAL SYSTEM

BOOK 5 - 87393597

Chapter 6 - Connectors

CONTENTS

Section	Description	Page
	Electrical Circuit Connectors/Component Connectors	2
	Wire Color Coding	7
	Ground Location Points (Models with 3-Cylinder Engine)	8
	Ground Location Points (Models with 4-Cylinder Engine)	10
	Connector Location Points (Models with 3-Cylinder Engine)	12
	Connector Location Points (Models with 4-Cylinder Engine)	27
	Connector Illustrations / Pin-Out	43

SECTION 55 - ELECTRICAL SYSTEM

BOOK 5 - 87393597

Chapter 7 - Cab Electrical Components

CONTENTS

Section	Description	Page
	Overhaul	2
	Light Control Switch and Lever	2
	Removal	2
	Installation	2
	Analog/Digital Instrument Control Panel	3
	Removal	3
	Installation	3
	Fusebox, Fuses and Relays	4
	Removal	4
	Installation	4
	Fuses/Relay Replacement	5
	Speakers	6
	Removal	6
	Installation	6
	Cab Internal Light Fixture	7
	Removal	7
	Installation	7
	Windscreen Wiper Motor (Front)	8
	Removal	8
	Installation	8
	Windscreen Wiper Motor (Rear)	9
	Removal	9
	Installation	9

SECTION 55 - ELECTRICAL SYSTEM

BOOK 5 - 87393597

Chapter 8 - Wiring Diagrams

CONTENTS

Section	Description	Page
	How to Use Wiring Diagrams	1
	Auto FWD / Mechanical Lift / Less Cab / 3-Cylinder	2
	2WD (Mechanical FWD) / Mechanical Lift / With Cab / 3-Cylinder	6
	Electro-hydraulic FWD / Mechanical Lift / With Cab / 3-Cylinder	10
	Auto FWD / Mechanical Lift / With Cab / 3-Cylinder	14
	2WD (Mechanical FWD) / Mechanical Lift / With Cab / 4-Cylinder	18
	Electro-hydraulic FWD / Mechanical Lift / With Cab / 4-Cylinder	22
	Symbols Used in Electrical Diagrams	26

SECTION 90 - PLATFORM, CAB, BODYWORK

BOOK 5 - 87393597

Chapter 1 - Cab

CONTENTS

Section	Description	Page
	Tools	2
90 100 22	Hood opening Removal and Installation	3
90 100 80	Protective grill Removal and Installation	4
90 100 84	Hood guard Removal and Installation	5
90 110 14	Instrument panel lower guard Removal and Installation	6
90 110 36	Platform assembly Removal and Installation	7
90 114 10	Safety frame roof Removal and Installation	14
90 150 10	Cab with platform assembly Removal and Installation	15
90 156 14	Cab windows (Replacing glued cab windows)	23
90 160 16	RH or LH upright seals Removal and Installation	26
90 160 60	Cab ceiling fitting Removal and Installation	27
88 120 10	Sun shade. Removal - Installation	29

Product: New Holland TN60DA/TN60SA/TN70DA/TN70SA/TN75DA/TN75SA/TN85DA/TN95DA Tractor Service Repair Manual

Full Download: <https://www.arepairmanual.com/downloads/new-holland-tn60da-t>

n60sa-tn70da-tn70sa-tn75da-tn75sa-tn85da-tn95da-tractor-serv

ice-repair-manual/

Sample of manual. Download All 1474 pages at:

<https://www.arepairmanual.com/downloads/new-holland-tn60da-tn60sa-tn70da-tn70sa-tn75da-tn75sa-tn85da-tn95da-tractor-se>