

T2310, T2320, T2330 REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL INFORMATION	2
SECTION 10 - ENGINE	3
SECTION 18 - CLUTCH	10
SECTION 21 - TRANSMISSION	12
SECTION 25 - FWD FRONT AXLE	14
SECTION 27 - DIFFERENTIAL, REAR AXLE	17
SECTION 29 - HYDROSTATIC TRANSMISSION	18
SECTION 31 - POWER TAKE-OFF (PTO) SYSTEMS	21
SECTION 33 - BRAKES	24
SECTION 35 - HYDRAULIC SYSTEM	24
SECTION 41 - STEERING	28
SECTION 44 - 2WD FRONT AXLE	30
SECTION 50 - CLIMATE CONTROL	30
SECTION 55 - ELECTRICAL	35
SECTION 90 - PLATFORM	52

The following pages are the collation of the contents pages from each section and chapter of the T2310, T2320, T2330 Repair manual. Complete Repair part # 87491390.

The sections used through out all New Holland product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87491391

Chapter 1 - General Information

CONTENTS

Section	Description	Page
	Introduction	3
	Precautionary Statements	4
	Personal Safety	4
	Machine Safety	4
	Information	4
	Technical Information	5
	Hardware	5
	General	5
	Plating	5
	Nut Tightening	5
	Locknuts	5
	Jam Nuts	5
	Thread Lubrication	5
	Safety	6
	Precautionary Statements	6
	The Tractor	6
	Servicing the Tractor	6
	Operating the Tractor	7
	Driving the Tractor	7
	Operating the PTO	8
	Diesel Fuel	8
	Safety Frame (ROPS)	8
	Decals - T2310, T2320, T2330 with 12x12 Transmission	9
	Safety Decals	9
	Instruction Decals - T2310, T2320, T2330 with 12x12 Transmission	11
	Decals - T2310, T2320 with HST	14
	Safety Decals	14
	Instruction Decals - T2310, T2320 with HST Transmission	16
	Universal Symbols	20
	Specifications - T2310, T2320, T2330 with 12x12 Gear Transmission	21
	General Dimensions	28

SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87491391

Chapter 1 - General Information (Continued)

CONTENTS

Section	Description	Page
	Specifications - T2310, T2320 with Hydrostatic Transmission	34
	General Dimensions	40
	Minimum Hardware Tightening Torque	48
	Special Tools	48
	Adjustments	50

SECTION 10 - ENGINE

BOOK 1 - 87491391

Chapter 1 - Engine

CONTENTS

Section	Description	Page
	Specifications	6
	Metric Bolt Torque Specifications	15
	Special Tools	16
	Compression Test and Tools	17
	Description of Operation	18
	Troubleshooting	19
	Cylinder Head and Valve Train Components	23
	Separating the Tractor at the Clutch Housing/Engine - 12x12 Transmission	24
	Removal	24
	Separating the Tractor at the Engine/Frame	28
	Installation	30
	Attaching the 12x12 Transmission to the Engine	34
	Overhaul	39
	Engine	39
	Fuel Injector and Glow Plug	39
	Removal	39

SECTION 10 - ENGINE

BOOK 1 - 87491391

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
	Oil Pressure Switch	39
	Temperature Sending Switch and Alternator	39
	Removal	39
	Fan, Water Pump, and External Oil Tube	40
	Removal	40
	Air Inlet Manifold	40
	Removal	40
	Rocker Arm Shaft and Support Bracket	41
	Removal	41
	Cylinder Head	41
	Removal	41
	Valve Tappet	41
	Removal	41
	Fuel Shutoff Solenoid	42
	Removal	42
	Engine Timing Gear Cover, Timing Gears, and Cam Shaft	42
	Timing Gear Cover Removal	42
	Timing Gears and Camshaft	44
	Removal	44
	Oil Sump	45
	Removal	45
	Oil Suction Pipe and Strainer	45
	Removal	45
	Balancer Assembly	46
	Removal	46
	Connecting Rods, Bearings, and Pistons, Rings	46
	Removal	46
	Flywheel	47
	Removal	47
	Backplate and Oil Seal	47
	Removal	47
	Crankshaft and Main Bearings	47
	Removal	47

SECTION 10 - ENGINE

BOOK 1 - 87491391

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
	Cylinder Head	48
	Disassembly	48
	Inspection and Repair	48
	Valve Seats	49
	Valves	50
	Valve Guides	51
	Valve Springs	52
	Rocker Arms	52
	Push Rods	53
	Cylinder Head	53
	Assembly	53
	Cylinder Block	54
	Pistons	54
	Disassembly and Inspection	54
	Piston Rings	57
	Connecting Rods	57
	Pin to Bushing Clearance	58
	Connecting Rod Bearing	59
	Clearance Check	59
	Pistons, Rings, and Connecting Rod	60
	Assembly	60
	Crankshaft - Main Bearing and Thrust Washer	61
	Removal and Inspection	61
	Crankshaft	62
	Bearing (Bushing)	63
	Replacement	63
	Main Bearing	64
	Assembly	64
	Port Block	65
	Removal	65
	Installation	65
	Timing Gear	66

SECTION 10 - ENGINE

BOOK 1 - 87491391

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
	Camshaft	66
	Disassembly	66
	Inspection	66
	Assembly	67
	Flywheel	67
	Timing Gear Housing	68
	Front Oil Seal and Steering Pump Seal	68
	Replacement	68
	Crankshaft and Bearing Holder	69
	Installation	69
	Rear Oil Seal and Backplate	69
	Installation	69
	Flywheel	70
	Installation	70
	Pistons and Connecting Rods	70
	Installation	70
	Balancer Assembly (N844 and N844L Engines)	71
	Installation	71
	Balancer Shims	71
	Oil Suction Pipe and Suction Strainer	72
	Installation	72
	Oil Sump	72
	Installation	72
	Camshaft and Camshaft Gear	72
	Installation	72
	Idle Gear, Oil Pump, and Injection Timing	73
	Installation	73
	Timing Gear Cover	73
	Installation	73
	Crankshaft Pulley	73
	Installation	73
	Fuel Injection Pump	74
	Installation	74

SECTION 10 - ENGINE

BOOK 1 - 87491391

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
	Hydraulic Oil Pump	74
	Installation	74
	Power Steering Pump	75
	Installation	75
	Head Gasket Selection	75
	Selection Chart	75
	Cylinder Head	76
	Installation	76
	Valve Clearance	76
	Adjustment	76
	Valve Cover	77
	Installation	77
	Water Pump and Cooling Fan	77
	Installation	77
	External Oil Tube	77
	Assembly	77
	Glow Plug and Connector	78
	Installation	78
	Fuel Injector	78
	Installation	78
	Fuel Piping	78
	Installation	78
	Alternator and Temperature Sender Switch	79
	Installation	79
	Exhaust Manifold	79
	Installation	79
	Description of Operation - Engine Lubrication System	80
	Oil Filter	83
	Construction and Function	83
	Maintenance	83

SECTION 10 - ENGINE

BOOK 1 - 87491391

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
	Oil Pump	83
	Removal	83
	Inspection	83
	Installation and Adjustment	84
	Engine Oil Pressure	85
	Oil Pressure Relief Valve	86
	Removal	86
	Installation	86
	Oil Consumption	86
	Description of Operation - Cooling System	87
	Maintenance	89
	Coolant	89
	Radiator Cap	89
	Thermostat	90
	Water Pump	90
	Cooling Fan	90
	Overhaul - Cooling System	91
	Radiator	91
	Removal	91
	Inspection and Repair	92
	Installation	92
	Water Pump	93
	Removal	93
	Inspection and Repair	95
	Installation	95
	Thermostat	96
	Removal	96
	Inspection and Repair	96
	Installation	97
	Cab Heater	97
	Installation	97

SECTION 10 - ENGINE

BOOK 1 - 87491391

Chapter 2 - Fuel Systems

CONTENTS

Section	Description	Page
	Specifications	3
	Standards for Adjusting the Injection Pump	4
	Torque Specifications	4
	Special Tools	4
	Description of Operation	5
	Injection Pump	5
	Troubleshooting	7
	General	7
	Fuel Injectors	10
	Governor	11
	Fuel Variation Mechanism	12
	Delivery Valve Assembly	13
	CTD (Compact Timing Device) Mechanism	13
	Pumping Elements	15
	Delivery Valves	15
	Injection Pump	17
	Removal	17
	Repair	19
	Installation	19
	Calibration/Adjustments	20
	Fuel Pump	20
	Installation (New Pump or Drive Component)	20
	Spill-timing Procedure	21
	Fuel Screw/High Idle	25
	Adjustment	25
	Fuel Flow Chart	26
	Auto Bleed	26
	Fuel Lift Pump	27
	Removal	27
	Inspection	27
	Installation	27
	Specifications	27

SECTION 10 - ENGINE

BOOK 1 - 87491391

Chapter 2 - Fuel Systems (Continued)

CONTENTS

Section	Description	Page
	Troubleshooting	27
	Description of Operation	28
	Governor	28
	Disassembly	30
	Assembly	31
	Adjustments	33
	Injectors	34
	Removal	35
	Disassembly	36
	Assembly/Adjustment	36
	Engine Breather Valve	37
	Removal	38
	Installation	38
	Troubleshooting - Engine Breather Valve	39

SECTION 18 - CLUTCH

BOOK 1 - 87491391

Chapter 1 - Clutch

CONTENTS

Section	Description	Page
	Specifications	3
	Bolt Torques	4
	Special Tools	4
	Description of Operation	5
	Troubleshooting	7
	Overhaul	8

SECTION 18 - CLUTCH

BOOK 1 - 87491391

Chapter 1 - Clutch (Continued)

CONTENTS

Section	Description	Page
	Separating the Tractor at the Clutch Housing/Engine	8
	Removal	8
	Clutch	14
	Removal	14
	Inspection	14
	Assembly	15
	Attaching the 12x12 Transmission to the Engine	16
	Clutch Related Components	22
	Pilot Bearing	22
	Removal	22
	Installation	22
	Damper Disc	22
	Removal	23
	Inspection	23
	Installation	23
	Flywheel Dimensions	24
	Clutch Release Bearing	25
	Removal	25
	Inspection	26
	Installation	26
	Clutch Linkage Components	26
	Cross Shaft Bushings	26
	Disassembly	26
	Assembly	27
	Pedal Bushings	28
	Removal	28
	Disassembly	28
	Assembly	28
	Installation	28
	Pedal	29
	Adjustment	29
	Maximum Travel Adjustment	29

SECTION 21 - TRANSMISSION

BOOK 2 - 87491392

Chapter 1 - 12 x 12 Synchronized Shuttle Shift Gear Transmission

CONTENTS

Section	Description	Page
	Specifications	3
	Metric Bolt Torque Specifications	4
	Special Tools	5
	Description of Operation	6
	Cross Section - 12 x 12 Transmission	8
	Powerflow	9
	Troubleshooting	13
	Overhaul	14
	Separating the Tractor at the Clutch Housing/Engine	14
	Removal	14
	Clutch Housing	20
	Disassembly	20
	Main Transmission	24
	Retainer Cover	24
	Disassembly	24
	Main Shift Rails and Shift Forks	25
	Disassembly	25
	Main Shaft	28
	Disassembly	28
	Range Shift Rail and Shift Fork	31
	Disassembly	31
	Range Gear Countershaft	32
	Disassembly	32
	Input Shaft	33
	Disassembly	33
	Reverse Idler Shaft	34
	Disassembly	34
	Shuttle Shift Rail and Fork	36
	Disassembly	36
	Main Countershaft	37
	Disassembly	37

SECTION 21 - TRANSMISSION

BOOK 2 - 87491392

Chapter 1 - 12 x 12 Synchronized Shuttle Shift Gear Transmission (Continued)

CONTENTS

Section	Description	Page
	Synchronizers	39
	Disassembly	39
	Main Transmission Components	40
	Inspection	40
	Synchronizers	40
	Assembly	40
	Main Countershaft	41
	Assembly	41
	Shuttle Shift Rail and Fork	42
	Assembly	42
	Reverse Idler Shaft	44
	Assembly	44
	Input Shaft	46
	Assembly	46
	Main Countershaft End Float	47
	Assembly - Bearing (no preload)	47
	Range Gear Countershaft	47
	Assembly	47
	Range Shift Rail and Fork	48
	Assembly	48
	Main Shaft	49
	Assembly	49
	Retainer Cover	52
	Assembly	52
	Main Shaft End Float	53
	Assembly	53
	Main Shift Rails and Forks	54
	Assembly	54
	Clutch Housing	58
	Assembly	58
	Attaching the 12 x 12 Transmission to the Engine	63
	Transmission Shift Levers	69

SECTION 21 - TRANSMISSION

BOOK 2 - 87491392

Chapter 1 - 12 x 12 Synchronized Shuttle Shift Gear Transmission (Continued)

CONTENTS

Section	Description	Page
	Main Shift Control Lever	70
	Removal	70
	Installation	70
	Main Shift Lever	71
	Adjustment	71
	Shuttle Shift Control Lever	72
	Removal	72
	Installation	72

SECTION 25 - FWD FRONT AXLE

BOOK 2 - 87491392

Chapter 1 - FWD Front Axle, Supersteer™ and Sensitrack™

CONTENTS

Section	Description	Page
	Specifications	3
	Front to Rear Axle Ratio	3
	Bolt Torque Specifications	6
	Special Tools	6
	Description of Operation – FWD Front Axle	7
	FWD Front Axle	7
	Troubleshooting	8
	Lubrication	10
	Lubricate Every 50 Hours – Supersteer™	10
	Lubricate Every 50 Hours – Standard FWD	10

SECTION 25 - FWD FRONT AXLE

BOOK 2 - 87491392

Chapter 1 - FWD Front Axle, Supersteer™ and Sensitrack™ (Continued)

CONTENTS

Section	Description	Page
	Overhaul – Standard FWD Axle	11
	Standard FWD Axle	11
	Removal	11
	Installation	11
	Gear Reduction Drop Box	12
	Disassembly	12
	Front Axle and Differential	15
	Disassembly	15
	Drive Pinion	16
	Disassembly	16
	Front Axle	17
	Inspection	17
	Differential	17
	Inspection	17
	Gear Reduction—Drop Box	17
	Inspection	17
	Drive Pinion	18
	Assembly	18
	Differential Gear	18
	Assembly	18
	Axle and Differential	19
	Assembly	19
	Differential Case Bearing Preload	20
	Check and Adjustment	20
	Gear Reduction Box	21
	Assembly	21
	Bevel Gear-to-Pinion Backlash	23
	Check	23
	Description of Operation – Supersteer/Sensitrack	24
	Supersteer	24
	Sensitrack	25
	Automatic Position (Engaged)	26

SECTION 25 - FWD FRONT AXLE

BOOK 2 - 87491392

Chapter 1 - FWD Front Axle, Supersteer™ and Sensitrack™ (Continued)

CONTENTS

Section	Description	Page
	Automatic Position (Disengaged)	27
	Full Time Front Wheel Drive (Locked Down)	27
	Supersteer Front Axle	27
Overhaul - Supersteer Axle		30
	Supersteer Axle	32
	Removal	32
	Gear Reduction-Drop Box	35
	Disassembly	35
	Front Axle and Differential	38
	Disassembly	38
	Drive Pinion	38
	Disassembly	38
	Front Axle	39
	Inspection	39
	Differential	39
	Inspection	39
	Gear Reduction-Drop Box	39
	Inspection	39
	Drive Pinion	40
	Assembly	40
	Differential Gear	40
	Assembly	40
	Axle and Differential	41
	Assembly	41
	Differential Case Bearing Preload	42
	Check and Adjustment	42
	Gear Reduction Box	43
	Assembly	43
	Bevel Gear-to-pinion Backlash	45
	Check	45
	Supersteer Axle	46
	Installation	46

SECTION 27 - DIFFERENTIAL, REAR AXLE

BOOK 2 - 87491392

Chapter 1 - Differential, Rear Axle

CONTENTS

Section	Description	Page
	Specifications	2
	Bolt Torque Specifications	3
	Special Tools	3
	Description of Operation	4
	Differential	5
	Differential Lock	5
	Rear Axle	6
	Overhaul	7
	Differential	7
	Removal	7
	Disassembly	9
	Inspection	9
	Assembly	10
	Installation	10
	Drive Pinion	12
	Removal	12
	Disassembly	12
	Inspection	13
	Assembly	13
	Rear Axle	16
	Removal	16
	Disassembly	17
	Inspection	20
	Assembly	21
	Final Pinion	25
	Removal	25
	Disassembly	26
	Inspection	28
	Assembly	29
	Installation	31

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87491392

Chapter 1 - Hydrostatic Transmission - T2310-T2320

CONTENTS

Section	Description	Page
	Specifications	4
	Metric Bolt Torque Specifications	6
	Special Tools	6
	Description of Operation	7
	Power Flow	8
	High Range	8
	Low Range	9
	Oil Flow	10
	Neutral Position	10
	Forward Position	11
	Reverse Position	12
	Variable Displacement Pump	13
	Two Position Displacement Motor	14
	Hi/Lo Speed Control/Control Pod	15
	Hi/Lo Speed Control	15
	Foot Control Pedals	16
	Troubleshooting	18
	Charge Pump Relief Valve	20
	Test	20
	Pressure Testing and Adjustments	21
	High Pressure Relief Valve	21
	Hi/Low Pressure Test	23
	Separating the Tractor	25
	T2310 and T2320 w/HST Transmission	25
	Separating at the HST Housing/Engine	25
	Separating the HST Housing at the Gearbox	32
	Attaching the HST Housing to the Gearbox	34
	Attaching the HST to the Engine	37
	Hydrostatic Transmission	44
	Disassembly	44
	Charge Pump	44
	Removal	44

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87491392

Chapter 1 - Hydrostatic Transmission - T2310-T2320 (Continued)

CONTENTS

Section	Description	Page
	Port Block	45
	Removal	45
	Cylinder Block Assembly	46
	Removal	46
	Motor Swash Plate	46
	Removal	46
	Input and Output Shaft	47
	Removal	47
	Pump Swash Plate	47
	Removal	47
	Port Block	48
	Removal	48
	Inspection	48
	Piston	49
	Assembly	49
	Charge Pump	50
	Assembly	50
	Swash Plate	50
	Assembly	50
	Pump Shaft (Input Shaft)	51
	Assembly	51
	Charge Pump	51
	Assembly	51
	Cylinder Block Assembly for Pump	51
	Assembly for Pump	51
	Motor Shaft	52
	Assembly	52
	Cylinder Block Assembly for Motor	52
	Assembly for Motor	52
	Port Block	53
	Assembly	53
	Installation	54

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87491392

Chapter 1 - Hydrostatic Transmission - T2310-T2320 (Continued)

CONTENTS

Section	Description	Page
	Hydrostatic Transmission	55
	Assembly	55
	Check Valve	55
	Disassembly	55
	Inspection	55
	Assembly	55
	Description and Operation - Gearbox	56
	Gearbox	56
	Gearbox Identification	57
	Overhaul - Gearbox	58
	Gearbox	58
	Removal	58
	Disassembly	59
	Inspection	63
	Assembly	64
	Installation	67
	Hi/Lo Solenoid Valve	69
	Removal	71
	Disassembly	71
	Inspection	72
	Testing	72
	Assembly	73
	Adapter Block	74
	Removal	74
	Disassembly	75
	Inspection	76
	Assembly	76
	Cruise Control	77
	Electromagnet Air Gap Adjustment	78
	Adjustment	78

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87491392

Chapter 2 - Adjustment - T2310-T2320

CONTENTS

Section	Description	Page
	HST Pedals	2
	Stop Adjustment	2
	HST Cruise Control Magnet	3
	Adjustment	3
	HST Foot Control Pedals	4
	Neutral Adjustment	4
	HST Pedals Return Spring	5
	Adjustment	5

SECTION 31 - POWER TAKE-OFF (PTO) SYSTEMS

BOOK 3 - 87491393

Chapter 1 - Power Take-Off (PTO) Systems

CONTENTS

Section	Description	Page
	Specifications	3
	PTO Hydraulic System	3
	PTO Clutch	3
	Metric Bolt Torque Specifications	4
	Special Tools	5
	Description of Operation	6
	Rear PTO	7
	Power Flow Diagram for the 12x12 Synchronized Shuttle Shift Transmission	7
	Power Flow Diagram for the Hydrostatic Transmission (HST)	8
	Power Flow Diagram for Tractors Equipped with a Mid PTO Kit	9

SECTION 31 - POWER TAKE-OFF (PTO) SYSTEMS

BOOK 3 - 87491393

Chapter 1 - Power Take-Off (PTO) Systems (Continued)

CONTENTS

Section	Description	Page
	Hydraulic Fluid Flow	10
	PTO Clutch Assembly	10
	Troubleshooting	13
	Pressure Testing	14
	Test Procedure	14
	Overhaul	16
	PTO System Diverter Valve Assembly	16
	Removal	16
	Inspection	16
	Assembly	17
	Installation	17
	PTO Clutch Control Valve	18
	Removal	18
	Disassembly	20
	Inspection	20
	Assembly	20
	Installation	22
	PTO Clutch	23
	Removal	23
	Disassembly	26
	Inspection	28
	Assembly	30
	Installation	34
	Power Take Off System for 12x12 Synchronized Shuttle Shift Transmission	38
	Removal	38
	PTO Input Shaft	38
	Removal	38
	Disassembly	39
	Inspection	39
	Assembly	39
	Installation	40

SECTION 31 - POWER TAKE-OFF (PTO) SYSTEMS

BOOK 3 - 87491393

Chapter 1 - Power Take-Off (PTO) Systems (Continued)

CONTENTS

Section	Description	Page
	PTO Countershaft and Rear PTO Shaft	40
	Removal	40
	Inspection	42
	Assembly	43
	Installation	44
	Power Take Off System for Hydrostatic Transmission (HST)	46
	Removal	46
	PTO Input Shaft	47
	Removal	47
	Disassembly	48
	Inspection	48
	Assembly	48
	Installation	49
	PTO Countershaft and Rear PTO Shaft	49
	Removal	49
	Disassembly	53
	Inspection	55
	Assembly	55
	Installation	57
	Mid PTO Countershaft and Drop Box	60
	Removal	60
	Disassembly	65
	Inspection	67
	Assembly	67
	Installation	69

SECTION 33 - BRAKES

BOOK 3 - 87491393

Chapter 1 - Brakes

CONTENTS

Section	Description	Page
	Specifications	2
	Bolt Torque Specifications	3
	Description of Operation	4
	Brakes	4
	Park Brake	6
	Overhaul	7
	Brakes	7
	Removal and Disassembly	7
	Inspection	9
	Assembly and Installation	10
	Adjustment	12

SECTION 35 - HYDRAULIC SYSTEM

BOOK 3 - 87491393

Chapter 1 - Hydraulic System

CONTENTS

Section	Description	Page
	Specifications	4
	Metric Bolt Torque Specifications	5
	Special Tools	6
	Description of Operation	7
	Flow Priority	8
	Hydraulic System	9
	Hydraulic Fluid Filter	9
	Combination System Relief - Diverter Valve Manifold Assembly	10
	Control Valve Assembly (HPL)	11

SECTION 35 - HYDRAULIC SYSTEM

BOOK 3 - 87491393

Chapter 1 - Hydraulic System (Continued)

CONTENTS

Section	Description	Page
	Fluid Flow	12
	Neutral Position	12
	Raising Position	13
	Lowering Position	14
	Bypass Spool - Fluid Flow	15
	Flow Control Valve	16
	Single Lever - Position Control	16
	Neutral Position to Raise	17
	Raise Position to Neutral Position	17
	Neutral Position to Lowering Position	17
	Troubleshooting	18
	Pressure Testing	20
	Main System Relief Valve	20
	Inlet Restriction	22
	Pump Efficiency	23
	Hydraulic Systems	23
	Pressure Readings	23
	Overhaul - Hydraulic System	24
	Lift Cylinder	24
	Removal	24
	Disassembly	28
	Inspection and Repair	30
	Assembly	30
	Installation	32
	Flow Control Valve	34
	Removal	34
	Disassembly	34
	Inspection	34
	Assembly	34
	Installation	34

SECTION 35 - HYDRAULIC SYSTEM

BOOK 3 - 87491393

Chapter 1 - Hydraulic System (Continued)

CONTENTS

Section	Description	Page
	Hydraulic Control Valve	35
	Removal	35
	Disassembly	35
	Inspection	36
	Assembly	37
	Installation	38
	Combination System Relief Valve and Diverter Valve Assembly	39
	Removal	39
	Disassembly	40
	Inspection	40
	Assembly	40
	Installation	41
	Adjustments	42
	HPL Linkage	42
	Adjustment Procedure	42
	Description of Operation - Hydraulic Pump and Filter	43
	Hydraulic Pump and Filter	43
	Hydraulic Pump	44
	Pump Flow	44
	Removal	44
	Disassembly	46
	Inspection and Repair	46
	Assembly	47
	Installation	48
	Oil Pump Trial Running	50
	Sump Tube and Screen Filter	51
	Removal	51
	Disassembly	52
	Inspection	52
	Assembly	52

SECTION 35 - HYDRAULIC SYSTEM

BOOK 3 - 87491393

Chapter 1 - Hydraulic System (Continued)

CONTENTS

Section	Description	Page
	Description of Operation – Remote Valves	54
	Remote Valves	54
	Rear (Single-Spool) Remote Valve	55
	Front (Double-Spool) Remote Valve	55
	Rear (Single-spool) Remote System – Fluid Flow	57
	Neutral Position	57
	Remote Cylinder Extending	58
	Remote Cylinder Retracting	59
	Front Remote (Two Spool) Loader Control Valve Fluid Flow Diagrams	60
	Bucket Control	60
	Neutral/Lift Control-Neutral	60
	Dumping/Lift Control-Neutral	61
	Dumping REGEN/Lift Control-Neutral	62
	Roll Back/Lift Control-Neutral	63
	Neutral/Lift Control-Raising	64
	Neutral/Lift Control-Lowering	65
	Neutral/Lift Control-Float	66
	Overhaul	67
	Rear (Single-spool) Remote Valve	67
	Removal	67
	Disassembly	68
	Inspection	68
	Assembly	68
	Front (Double Spool) Remote Valve	69
	Removal	69
	Disassembly	71
	Inspection	71
	Assembly	71
	Installation	72

SECTION 41 - STEERING

BOOK 3 - 87491393

Chapter 1 - Steering

CONTENTS

Section	Description	Page
	Specifications	3
	Metric Bolt Torque Specifications	4
	Special Tools	5
	Description of Operation	6
	Supersteer™	6
	Power Steering Control Motor	9
	Spool and Sleeve	9
	Rotor and Fixed Ring	9
	Check Valve	9
	Drive Shaft	9
	Pressure Relief Valve	9
	Power Steering Pump	10
	Steering Cylinders	10
	Supersteer™	10
	2WD and Standard 4WD	11
	Supersteer™	12
	Fluid Flow - Neutral Position	12
	Fluid Flow - Left Turn	13
	Fluid Flow - Right Turn	14
	Manual Operation	15
	Power Steering Operation - 2WD and Standard 4WD	16
	Fluid Flow - Neutral Position	16
	Fluid Flow - Left Turn	17
	Fluid Flow - Right Turn	18
	Manual Operation - 2WD and Standard 4WD	19
	Troubleshooting	20
	Pressure Testing	22
	Pump, Steering Motor, and Relief Valve	22
	Test Results	22
	Steering Cylinder	23
	Test Results	23

SECTION 41 - STEERING

BOOK 3 - 87491393

Chapter 1 - Steering (Continued)

CONTENTS

Section	Description	Page
	Lubrication	24
	Lubricate Every 50 Hours	24
	Overhaul	25
	Steering Control Motor	25
	Removal	25
	Disassembly	25
	Inspection	32
	Assembly	32
	Installation	40
	Steering Cylinder - 4WD and Supersteer™	41
	Removal	41
	Steering Cylinder - 2WD	42
	Removal	42
	Disassembly	45
	Inspection	46
	Assembly	47
	Steering Cylinder - 4WD and Supersteer™	51
	Installation	51
	Steering Cylinder - 2WD	53
	Installation	53
	Pump	54
	Removal	54
	Disassembly	55
	Inspection and Repair	55
	Assembly	56
	Installation	57
	Break-in Procedure	57
	Power Steering Tubes	58

SECTION 44 - 2WD FRONT AXLE

BOOK 3 - 87491393

Chapter 1 - 2WD Front Axle

CONTENTS

Section	Description	Page
	Specifications	2
	Bolt Torque Specifications	2
	Description of Operation	3
	Troubleshooting	4
	Overhaul	5
	Front Axle	5
	Removal	5
	Disassembly	6
	Inspection	9
	Assembly	10
	Installation	13

SECTION 50 - CLIMATE CONTROL

BOOK 3 - 87491393

Chapter 1 - Climate Control - T2310-T2320 With Cab

CONTENTS

Section	Description	Page
	Specifications	4
	Compressor	4
	Refrigerant	4
	Refrigerant Oil	4
	Low Pressure Switch	4
	High Pressure Switch	4
	Special Tools	5