

MC22, MX28, MC35 REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL INFORMATION	2
SECTION 10 - ENGINE AND FUEL SYSTEMS	3
SECTION 25 - FOUR WHEEL DRIVE REAR AXLE	13
SECTION 27 - DIFFERENTIAL, AXLES	14
SECTION 29 - HYDROSTATIC DRIVE SYSTEM	15
SECTION 31 - POWER TAKE-OFF (PTO)	19
SECTION 33 - BRAKES	20
SECTION 35 - HYDRAULIC SYSTEM	21
SECTION 41 - STEERING	24
SECTION 44 - TWO WHEEL DRIVE REAR AXLE	26
SECTION 55 - ELECTRICAL	26
SECTION 90 - PLATFORM	32

The following pages are the collation of the contents pages from each section and chapter of the MC22, MC28, and MC35 Repair manual. Complete Repair part # 87557971.

The sections used through out all New Holland product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the MC22, MC28, and MC35 Tractors.

SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87557972

Chapter 1 - General Information

CONTENTS

Section	Description	Page
	Introduction	2
	Precautionary Statements	3
	Personal Safety	3
	Machine Safety	3
	Technical Information - Hardware	4
	General	4
	Plating	4
	Nut Tightening	4
	Locknuts	4
	Jam Nuts	4
	Thread Lubrication	4
	Safety Precautions	5
	Commercial Mower	5
	Servicing the Commercial Mower	5
	Driving the Commercial Mower	6
	Operating the Power Take Off (PTO)	6
	Operating the Mower Deck	7
	Diesel Fuel	8
	Avoid High-pressure Fluids	8
	Safety	9
	Safety Decals	12
	International Symbols	17
	Specifications	18
	Minimum Hardware Tightening Torques	25
	Special Tools	27
	Lubricants	28
	Touch-up Paint	29
00 100	Pre-season and Predelivery Service	30
	Check and Adjust as Required	30
	Inoperative Service Checks	30
	Safety Items Checks	30
	Operative Service Checks	30

SECTION 10 - ENGINE AND FUEL SYSTEMS

BOOK 1 - 87557972

Chapter 1 - Engine Systems

CONTENTS

Section	Description	Page
	Specifications	6
	General Engine Specifications	6
	Cylinder Block Specifications	6
	Cylinder Head Specifications	7
	Piston Specifications	7
	Piston Wrist Pin Specifications	8
	Piston Ring Specifications	8
	Connecting Rod Specifications	9
	Crankshaft Specifications	10
	Camshaft Specifications	12
	Valve Specifications	13
	Pushrod Specifications	14
	Rocker Arm Specifications	14
	Lubrication System Specifications	14
	Cooling System Specifications	15
	Engine Bolt Torque Specifications	16
	Engine Fuel System Bolt Torque Specifications	16
	Metric Bolt Torque Specifications - All Models	17
	Special Tools	18
	Compression Test	19
	Description of Operation - Engine	21
	Cylinder Block	22
	Cylinder Head And Valve Train Components	22
	Troubleshooting	26
	Overhaul - Engine	30
10 012	Engine	30
	Removal	30
	Fuel Injector and Glow Plug	35
	Removal	35
	Valve Cover/Air Intake - MC22	35
	Removal	35
	Air Intake Manifold Removal - MC28 and MC 35	35
	Valve Cover - MC28 and MC35	36
	Removal	36

SECTION 10 - ENGINE AND FUEL SYSTEMS

BOOK 1 - 87557972

Chapter 1 - Engine Systems (Continued)

CONTENTS

Section	Description	Page
	Oil Transfer Tube	36
	Removal	36
	Water Pump Removal	36
	Rocker Arm and Pushrod - MC22	37
	Removal	37
	Rocker Arm, Support Bracket, and Pushrod - MC28 and MC35	37
	Removal	37
	Exhaust Manifold	38
	Removal	38
10 101	Engine Cylinder Head	38
	Removal	38
	Lifter (Valve Tappet)	39
	Removal	39
	Fuel Shutoff Solenoid	39
	Removal	39
	Timing Gear Cover	40
	Removal	40
10 106	Timing Gears and Camshaft	41
	Removal	41
10 102	Oil Pan and Pick-up	42
10 105	Removal	42
	Connecting Rods, Bearings, and Piston	43
	Removal	43
	Backing Plate and Oil Seal	43
	Removal	43
	Front Crankshaft Gear	44
	Removal	44
	Crankshaft And Main Bearings	44
	Removal	44
10 101	Cylinder Head	45
	Disassembly	45
	Inspection and Repair	45
	Valve Seats	46
	Inspection and Repair	46
	Valves	47
	Inspection and Repair	47

SECTION 10 - ENGINE AND FUEL SYSTEMS

BOOK 1 - 87557972

Chapter 1 - Engine Systems (Continued)

CONTENTS

Section	Description	Page
	Valve Guides	48
	Inspection and Replacement	48
	Valve Springs	49
	Inspection and Replacement	49
	Rocker Arms - MC22	49
	Inspection and Replacement	49
	Rocker Arms - MC28 and MC35	50
	Inspection and Replacement	50
	Pushrods	51
	Inspection and Replacement	51
	Cylinder Head	51
	Assembly	51
10 001	Cylinder Block	52
	Inspection	52
10 105	Pistons	53
	Disassembly and Inspection	53
	Piston Rings	56
	Inspection	56
	Connecting Rods	57
	Inspection	57
	Connecting Rod Bearing Oil Clearance Check	59
	Pistons, Rings, And Connecting Rod	60
	Assembly	60
10 103	Main Bearing - MC22	61
	Removal and Inspection	61
	Main Bearing and Thrust Washer - MC28 and MC35	63
	Removal and Inspection	63
	Crankshaft - All Models	65
	Inspection	65
	Main Journal Number One Bearing (Bushing)	67
	Inspection	67
	Replacement	68
	Crankshaft Front Gear, Main Bearings And Thrust Washers - MC28/MC35	68
	Assembly	68

SECTION 10 - ENGINE AND FUEL SYSTEMS

BOOK 1 - 87557972

Chapter 1 - Engine Systems (Continued)

CONTENTS

Section	Description	Page
10 304	Oil Pump Port Block	69
	Removal	69
	Installation	70
	Timing Gear	70
	Inspection	70
	Camshaft	71
	Disassembly	71
	Inspection	71
	Assembly	72
10 103	Flywheel	73
	Inspection And Repair	73
	Timing Gear Housing	73
	Front Oil Seal and Steering Pump Seal	73
	Replacement	73
	Crankshaft and Bearing Holder	74
	Installation	74
	Rear Oil Seal and Backing Plate	75
	Installation	75
	Piston and Connecting Rod	75
	Installation	75
10 102	Oil Pick-up and Pan	76
	Installation	76
	Camshaft and Timing Gear	76
	Installation	76
10 106	Oil Pump, Idler Gear, and Injection Timing	77
	Installation	77
	Timing Gear Cover	77
	Installation	77
	Crankshaft Pulley	77
	Installation	77
	Fuel Injection Pump	78
	Installation	78
10 101	Head Gasket Selection	78
	Cylinder Head	79
	Assembly	79

SECTION 10 - ENGINE AND FUEL SYSTEMS

BOOK 1 - 87557972

Chapter 1 - Engine Systems (Continued)

CONTENTS

Section	Description	Page
	Valve Clearance Adjustment	80
	Exhaust Manifold	80
	Installation	80
	Oil Transfer Tube	81
	Installation	81
	Water Pump	81
	Installation	81
	Valve Cover/Air Intake - MC22	81
	Installation	81
	Air Intake Manifold - MC28 and MC 35	81
	Installation	81
	Valve Cover - MC28 and MC35	82
	Installation	82
	Fuel Injector and Glow Plug	82
	Installation	82
	Engine	82
	Installation	82
	Lubrication System Specifications	88
10 304	Description of Operation - Engine Lubrication System	89
10 306	Oil Filter	92
	Construction and Function	92
	Maintenance	92
	Oil Pump	92
	Removal	92
	Inspection	92
	Installation and Adjustment	93
	Engine Oil Pressure Check	94
	Oil Pressure Relief Valve	95
	Removal	95
	Installation	95
	Oil Consumption	95
10 400	Description of Operation - Cooling System	96
	Specifications	98
	Maintenance	99
	Coolant	99

SECTION 10 - ENGINE AND FUEL SYSTEMS

BOOK 1 - 87557972

Chapter 1 - Engine Systems (Continued)

CONTENTS

Section	Description	Page
	Radiator Cap	99
10 402	Thermostat - MC22	100
	Thermostat - MC28 and MC35	100
	Water Pump	101
	Cooling Fan	101
	Overhaul - Cooling System	102
10 406	Radiator	102
	Removal	102
	Inspection	104
	Installation	105
10 402	Water Pump - MC22	107
	Removal	107
	Water Pump - MC28 and MC35	109
	Removal	109
	Inspection	110
	Water Pump - MC22	110
	Installation - MC22	110
	Water Pump - MC28 and MC35	111
	Installation	111
10 402	Thermostat - MC22	113
	Removal	113
	Thermostat - MC28 and MC35	113
	Removal	113
	Inspection	114
	Thermostat - MC22	114
	Installation	114
	Thermostat - MC28 and MC35	115
	Installation	115

SECTION 10 - ENGINE AND FUEL SYSTEMS

BOOK 1 - 87557972

Chapter 2 - Fuel Systems

CONTENTS

Section	Description	Page
	Specifications	3
	Engine Fuel System Bolt Torque Specifications	3
	Special Tools	3
10 242	Description of Operation - Injection Pump - MC22	4
	Pumping Elements	6
	Delivery Valves	8
	Injection Pump - MC28 and MC35 - Description and Operation	10
10 242	Fuel Variation Mechanism	11
	Delivery Valve Assembly	12
	CTD (Compact Timing Device) Mechanism	12
	Pumping Elements	15
	Delivery Valves	17
	Troubleshooting - General	19
	Overhaul	20
	Injection Pump	20
	Removal	20
	Repair	21
	Installation	22
	Spill-Timing and Governor Adjustments	23
	New Injection Pump or Drive Component	23
	Installation	23
	Spill-Timing Procedure	24
	Fuel System Bleeding	29
	Automatic Bleeding	29
	Fuel Flow Chart	29
	Manual Bleeding	30
	Smoke Screw and High Idle Adjustment	31
10 230	Description and Operation - Governor	31
	Troubleshooting - Governor System	33

SECTION 10 - ENGINE AND FUEL SYSTEMS

BOOK 1 - 87557972

Chapter 2 - Fuel Systems (Continued)

CONTENTS

Section	Description	Page
10 230	Governor	36
	Disassembly	36
	Assembly	37
	Governor Adjustments	39
10 218	Description and Operation - Fuel Injectors	40
	Fuel Filter and Shutoff Valve	41
	Troubleshooting - Fuel Injectors	42
10 218	Injectors	43
	Removal	43
	Disassembly	44
	Assembly and Adjustment	44
	Description of Operation - Engine Breather Valve	45
	Engine Breather Valve	46
	Removal	46
	Installation	46
	Troubleshooting - Engine Breather Valve	47

SECTION 25 - FOUR WHEEL DRIVE REAR AXLE

BOOK 2 - 87557973

Chapter 1 - Four Wheel Drive Rear Axle

CONTENTS

Section	Description	Page
	Specifications	2
	Rear to Front Axle Ratio	3
	Metric Bolt Torque Specifications	5
25 100	Description of Operation	6
25 104	Two-way (Sensitrack™) Clutch	9
	Automatic Position - Clutch Engaged	10
	Automatic Position - Clutch Disengaged	10
	Fulltime FWD Position - Clutch Locked	10
	Power Flow	11
	Troubleshooting	12
	Adjustment	13
	Rear Wheel Toe-In	13
	Overhaul	14
	Rear Axle	14
	Removal	14
	Drop Box	15
	Disassembly	15
	Inspection	21
25 310	Assembly	21
	Rear Axle and Differential	29
	Disassembly	29
	Inspection	34
25 102	Assembly	35
	Installation	39
	4WD Shift Shaft and Two-way (Sensitrack™) Clutch	41
	Removal	41
	Disassembly	43
	Inspection	43
	Assembly	44
	Installation	45

SECTION 27 - DIFFERENTIAL, AXLES

BOOK 2 - 87557973

Chapter 1 - Differential, Axles

CONTENTS

Section	Description	Page
	Specifications	3
	Metric Bolt Torque Specifications	4
	Special Tools	5
	Description of Operation	6
	Power Flow-Range Gear	9
	Overhaul	11
	Transaxle	11
	Removal	11
	Installation	17
	Rear Transmission	21
	Disassembly	21
	Range Gear and Countershaft	23
	Removal	23
	Main PTO Gear	25
	Removal	25
	Side PTO Gear and Shaft	25
	Removal	25
	Main Shaft and Fixed Main Gears	26
	Removal	26
	Inspection	27
	Assembly	27
	Main PTO Gear	28
	Installation	28
	Side PTO Gear	29
	Installation	29
	Range Gear and Countershaft	30
	Installation	30
	Front Transmission	34
	Disassembly	34
	Inspection	38
	Assembly	39

SECTION 27 - DIFFERENTIAL, AXLES

BOOK 2 - 87557973

Chapter 1 - Differential, Axles (Continued)

CONTENTS

Section	Description	Page
27 126	Axle	42
	Removal	42
	Disassembly	43
	Inspection	46
	Assembly	46
	Installation	51
27 106	Differential	52
	Removal	52
27 106	Disassembly	55
	Inspection	56
	Assembly	57
	Installation	59
27 110	Differential Lock	63
	Removal/Disassembly	63
	Inspection	63
	Assembly/Installation	63
	Calibration	64
	Backlash	64
	Ring and Pinion Gear Tooth Contact Pattern	65

SECTION 29 - HYDROSTATIC DRIVE SYSTEM

BOOK 2 - 87557973

Chapter 1 - Hydrostatic Drive System

CONTENTS

Section	Description	Page
	Specifications	2
	Metric Bolt Torque Specifications	3
	Special Tools	4
	Description of Operation - Hydrostatic Transmission	5
29 218	Variable Displacement Pump Operation	6
	Fixed Displacement Motor Operation	7
	Hydraulic Fluid Flow	8
29 202	Neutral Position	8
29 202	Forward Position	9
29 202	Reverse Position	10
29 212	Hydrostatic Transmission Filter	11
	Troubleshooting	12
	Pressure Testing	14
	High Pressure Relief	14
	Charge Pressure Relief	17
	Overhaul	19
	hydrostatic transmission	20
	Removal	20
29 218	Disassembly	27
	Inspection	38
	Assembly	43
	Installation	55
29 100	Hydrostatic Transmission Adjustment	61
	Neutral Position	61
29 100	Directional Control Pedal Linkage	64
	HST Neutral Safety Switch	66

SECTION 31- POWER TAKE-OFF (PTO)

BOOK 3 - 87557974

Chapter 1 - Power Take-Off (PTO)

CONTENTS

Section	Description	Page
	Specifications	3
	Metric Bolt Torque Specifications	4
	Special Tools	4
	Description of Operation	5
	Troubleshooting	8
	Overhaul	9
31 220	PTO	9
	Removal	9
	Rear Transmission	9
	Disassembly	9
	Main PTO Gear	10
	Removal	10
	Side PTO Gear and Shaft	10
	Removal	10
	Front Transmission	11
	Disassembly	11
	Inspection	14
31 201	Assembly	14
	Rear Transmission	17
	Assembly	17
	Main PTO Gear	17
	Installation	17
	Side PTO Gear	18
	Installation	18
	PTO Clutch	19
	Disassembly	19
	Inspection	22
	Assembly	22
	Installation	27
	Automatic PTO Disengagement System	29
	Removal	30
	Disassembly	31

SECTION 31- POWER TAKE-OFF (PTO)

BOOK 3 - 87557974

Chapter 1 - Power Take-Off (PTO) (Continued)

CONTENTS

Section	Description	Page
	Assembly	32
	Installation	33
	Adjustment	34
	PTO Control Lever Linkage	34
	PTO Disengagement Cable Adjustment	35

SECTION 33 - BRAKES

BOOK 3 - 87557974

Chapter 1 - Brakes

CONTENTS

Section	Description	Page
	Specifications	2
	Brake Discs	2
	Stators	2
	Metric Bolt Torque Specifications	3
33 120	Description of Operation - Brakes	4
33 110	Parking Brake	6
	Troubleshooting	7
	Overhaul	8
33 120	Brakes	8
	Removal	8
	Disassembly	8
	Inspection	11
	Assembly	11
	Installation	14
	Brake Adjustment	15
	Free travel	15
33 110	Parking Brake	16

SECTION 35 - HYDRAULIC SYSTEM

BOOK 3 - 87557974

Chapter 1 - Hydraulic System

CONTENTS

Section	Description	Page
	Specifications	3
	Bolt Torque Specifications	4
	Special Tools	4
35 100	Description of Operation - Hydraulic System	5
	Hydraulic System Priority/Flow Chart	6
35 300	Hydraulic Fluid Filter	7
	Weight Transfer Valve	7
35 200	Lift Control Valve	8
35 210	Oil Flow	9
	Neutral Position	9
	Raise Position	10
	Lower and Float Position	11
	System Pressure Relief Valve	12
	Flow Restrictor	12
	Hydraulic Fluid Flow	12
	Lift Cylinders	12
	Hydraulic Lift Cylinders and Lift Arms	12
	Hydraulic Fluid Cooler	13
	Troubleshooting	14
	Overhaul	15
35 116	Hydraulic Lift Cylinders	15
	Removal	15
	Disassembly	17
	Inspection	18
	Assembly	21
	Installation	23
35 200	Hydraulic Lift Control Valve	25
	Removal	25
	Disassembly	26
	Inspection	28
	Assembly	29
	Installation	31
	Weight Transfer Valve	32
	Removal	32

SECTION 35 - HYDRAULIC SYSTEM

BOOK 3 - 87557974

Chapter 1 - Hydraulic System (Continued)

CONTENTS

Section	Description	Page
	Disassembly	32
	Inspection	33
	Assembly	34
	Installation	35
	Hydraulic System Relief Valve	35
	Removal	35
	Disassembly	36
	Inspection	37
	Assembly	37
	Installation	38
	Hydraulic System Restrictor Valve	39
	Removal	39
	Inspection	40
	Installation	40
35 120	Lift Arms	41
	Removal	41
	Disassembly	42
	Inspection	42
	Assembly	43
	Installation	43
35 300	Hydraulic Fluid Cooler	44
	Removal	44
	Inspection	45
	Installation	45
35 104	Description of Operation – Hydraulic Pump	46
	Overhaul	47
	Hydraulic Pump	47
	Removal	47
	Disassembly	48
	Inspection	49
	Assembly	50
	Installation	51
35 204	Description of Operation – Remote Valves	53
	Single Acting – Neutral	54

SECTION 35 - HYDRAULIC SYSTEM

BOOK 3 - 87557974

Chapter 1 - Hydraulic System (Continued)

CONTENTS

Section	Description	Page
	Single Acting – Spool Moved In	55
	Single Acting – Spool Moved Out	56
	Double Acting – Neutral	57
	Double Acting – Spool Moved In	58
	Double Acting – Spool Moved Out	59
	Removal	60
	Disassembly	61
	Inspection	63
	Assembly	64
	Installation	65
	Pressure Testing	66
	Hydraulic System Relief Valve Pressure Test	67
	Hydraulic System Relief Valve Pressure Adjustment	68

SECTION 41 - STEERING

BOOK 3 - 87557974

Chapter 1 - Steering

CONTENTS

Section	Description	Page
	Specifications	2
	Metric Bolt Torque Specifications	3
	Special Tools	4
41 200	Description of Operation – Power Steering System	5
41 204	Power Steering Control Motor	6
	Check Valves	7
	Relief Valve	7
41 206	Hydrostatic Transmission Charge Pump	8
	Hydraulic Fluid Filters	8
	Steering Cylinder	8
41 101	Steering Column and Wheel	9

SECTION 41 - STEERING

BOOK 3 - 87557974

Chapter 1 - Steering (Continued)

CONTENTS

Section	Description	Page
	Description of Operation – Oil Flow	10
41 200	Oil Flow – Neutral Operation	10
	Oil Flow – Left Turn	11
	Oil Flow – Right Turn	12
	Oil Flow – Manual Operation	13
	Troubleshooting	14
	Pressure Testing	16
	Steering System Relief Pressure	16
41 216	Steering Cylinder Test	19
	Lubrication	21
	Overhaul	22
41 204	Power Steering Motor	22
	Removal	22
	Disassembly	24
	Inspection	28
	Assembly	29
	Installation	35
41 216	Steering Cylinder	37
	Removal	37
	Disassembly	38
	Inspection	39
	Assembly	40
	Installation	42
41 101	Steering Column	43
	Removal and Disassembly	43
	Disassembly	46
	Inspection	46
	Installation	47

SECTION 44 - TWO-WHEEL DRIVE REAR AXLE

BOOK 3 - 87557974

Chapter 1 - Two-Wheel Drive Rear Axle

CONTENTS

Section	Description	Page
	Specifications	2
	Metric Bolt Torque Specifications	3
	Description of Operation - Two Wheel Drive Rear Axle	4
44 101	Troubleshooting	5
	Overhaul	6
44 103	2WD Rear Axle	6
	Removal	6
	Disassembly	8
	Inspection	11
	Assembly	11
	Installation	13

SECTION 44 - TWO-WHEEL DRIVE REAR AXLE

BOOK 3 - 87557974

Chapter 2 - Wheels and Tires

CONTENTS

Section	Description	Page
	Wheels and Tires	2
44 100	Wheel Tread Settings	2
	Front Tires - Std. Size (23 x 10.50 - 12)	3
	Front Tires - Optional Large Size (24 x 13.00 - 12)	3
	Rear Tires - Std. (20 x 8.00 - 10)	3
	Tractor Weighting	4
	Liquid Ballast	4
	Front Wheel Weights	4
	Rear Weights	5
	Tire Inflation vs. Permissible Load	6
	Wheel Bolt Torque	6
	Front Wheel Torque	6
	Rear Wheel Torque	6

SECTION 55 - ELECTRICAL

BOOK 4 - 87557975

Chapter 1 - Electrical Components

CONTENTS

Section	Description	Page
	Introduction	5
55 100	Description	5
	Component Location and Function	5
55 100	Main Ground Locations	8
	Electrical System Components – Description and Testing	9
	Battery	9
	Description	9
	Checking the Battery Electrolyte Level	9
	Battery Removal	10
	Battery Installation	10
	Fusible Link	11
	Description	11
	Replacement	11
	Fuse Block	12
	Description	12
	Replacement	12
55 201	Key Switch	13
	Description and Location	13
	Removal	14
	Key Switch Troubleshooting – Continuity Test	15
	ACCESSORY/RUN Position	15
	HEAT Position	16
	START Position	16
	Key Switch Troubleshooting – Connector Wiring	17
	Installation	17
	Light Switch	18
	Description	18
	Removal	19
	Light Switch Troubleshooting – Continuity Test	19
	Installation	20
	Headlight	20
	Description	20
	Removal	20
	Inspection	21
	Installation	21

SECTION 55 - ELECTRICAL

BOOK 4 - 87557975

Chapter 1 - Electrical Components (Continued)

CONTENTS

Section	Description	Page
	Seat Safety Start Switch	22
	Description	22
	Removal	22
	Seat Safety Start Switch Troubleshooting – Continuity Test	24
	Installation	24
	PTO Safety Start Switch	25
	Description	25
	Removal	26
	PTO Safety Start Switch Troubleshooting – Continuity Test	27
	Installation	28
	Hydrostatic Transmission Safety Start Switch	28
	Description	28
	Adjustment	29
	Removal	30
	HST Safety Start Switch Troubleshooting – Continuity Test	31
	Installation	32
	Park Brake Safety Start Switch	32
	Description	32
	Removal	32
	Park Brake Safety Start Switch Troubleshooting – Continuity Test	34
	Installation	34
	Master Brake Safety Start Switch	35
	Description and Location	35
	Adjustment	35
	Master Brake Safety Start Switch Troubleshooting – Continuity Test	36
	Removal	37
	Installation	38
	Relays	38
	Description and Location	38
	Brake Relay Functions	40
	Relay Testing	42
	Brake Relay Testing	43
	Diodes	45
	Description	45

SECTION 55 - ELECTRICAL

BOOK 4 - 87557975

Chapter 1 - Electrical Components (Continued)

CONTENTS

Section	Description	Page
	Diode Identification	45
	Diode Testing	45
	Glow Plug Indicator Light Timer	46
	Description and Location	46
	Glow Plug Indicator Light Timer Operation Testing	46
	Seat Safety Switch Timer	47
	Description and Location	47
	Seat Safety Switch Timer Operation Testing	48
55 408	Engine Oil Pressure and Overheat Warning Alarm	49
	Description and Location	49
	Warning Alarm Testing	49
	Engine Glow Plugs	50
	Description	50
	Removal	51
	Engine Glow Plug Testing	52
	Installation	52
55 414	Engine Oil Pressure Switch	53
	Description and Location	53
	Removal - MC22	53
	Engine Oil Pressure Switch Testing - MC22	54
	Installation - MC22	54
	Removal - MC28 and MC35	55
	Engine Oil Pressure Switch Testing - MC28 and MC35	55
	Installation - MC28 and MC35	56
55 414	Engine Coolant Temperature Switch (Warning Alarm)	57
	Description and Location	57
	Removal	58
	Engine Coolant Temperature Switch Testing	59
	Installation	59
55 414	Engine Coolant Temperature Sending Unit (Temperature Gauge)	60
	Description	60
	Engine Coolant Temperature Sending Unit Testing	61
	Removal	62
	Installation	63
55 414	Air Filter Restriction Switch	63

SECTION 55 - ELECTRICAL

BOOK 4 - 87557975

Chapter 1 - Electrical Components (Continued)

CONTENTS

Section	Description	Page
	Description and Location	63
	Air Filter Restriction Switch Testing	64
	Fuel Shutoff Solenoid	65
	Description and Location	65
	Removal	65
	Fuel Shutoff Solenoid Testing	66
	Installation	66
	Fuel Level Sending Unit	67
	Description and Location	67
	Removal	67
	Fuel Level Sending Unit Testing	68
	Installation	69
	Electric Fuel Pump	70
	Description and Location	70
	Removal	70
	Electric Fuel Pump Testing	71
	Installation	72
	Auxiliary Power Outlet	72
	Description and Location	72
	Auxiliary Power Outlet Testing	72
	Electric Cruise Control Switch (Optional)	74
	Description and Location	74
	Removal	74
	Cruise Control Switch Testing	76
	Installation	77
	Cruise Control Magnet (Optional)	78
	Description and Location	78
	Removal	78
	Cruise Control Magnet Testing	79
	Installation	80

SECTION 55 - ELECTRICAL

BOOK 4 - 87557975

Chapter 2 - Electrical Circuits

CONTENTS

Section	Description	Page
	Complete Electrical System Wiring Diagram	2
	Safety Start Circuit	4
	Operator Presence Circuit	8
	Engine Stop Circuit (Operator Removed From Seat)	12
	Engine Glow Plug Circuit	16
	Lighting Circuit	20
	Engine Coolant Temperature and Alarm Circuit	24
	Engine Oil Pressure and Alarm Circuit	28
	Fuel Level Circuit	32
	Park Brake Indicator Light Circuit	36
	Air Filter Restriction Warning Light Circuit	40
	Hour Meter Circuit	44
	HST Electronic Cruise Control Circuit (Optional)	48
	Charging Circuit	52

SECTION 55 - ELECTRICAL

BOOK 4 - 87557975

Chapter 3 - Instrument Panel

CONTENTS

Section	Description	Page
55 418	Instrument Panel - Component Operation and Servicing	2
	Description	2
	Instrument Panel Connector	4
	Instrument Panel Removal	4
	Instrument Panel Light Replacement	6
	Fuel Gauge Testing	7
	Temperature Gauge Testing	7
	Instrument Panel Installation	8

SECTION 55 - ELECTRICAL

BOOK 4 - 87557975

Chapter 4 - Charging and Starting Systems

CONTENTS

Section	Description	Page
55 301	Charging System for MC22 Tractors	5
	Description and Operation	5
	Alternator	5
	Alternator Component Construction	6
	Alternator Specifications - MC22	8
	Alternator Troubleshooting - MC22	9
	No Charging	9
	Insufficient Charging	9
	Overcharge	9
	Unstable Charging Circuit	10
	Abnormal Noise of Alternator	10
	Preliminary Alternator Tests	11
	Alternator Drive Belt	11
	Alternator Output	12
	Alternator Removal	13
	Alternator Disassembly	14
	Alternator Component Testing and Inspection	20
	Stator	20
	Rotor	20
	Rectifier	22
	Testing	22
	Alternator Brushes	23
	Alternator Bearings	23
	Drive Pulley	24
	Alternator Assembly	24
	Alternator Bench Check	29
	Alternator Installation	29
	Charging System for MC28 and MC35 Tractors	30
	Description and Operation	30
	Alternator	30
	Charging Circuit	31
	Principle of IC Regulator	31

SECTION 55 - ELECTRICAL

BOOK 4 - 87557975

Chapter 4 - Charging and Starting Systems (Continued)

CONTENTS

Section	Description	Page
	Alternator Specifications – MC28 and MC35	33
	Alternator Troubleshooting – MC28 and MC35	34
	No Charging	34
	Insufficient Charging	34
	Overcharge	34
	Unstable Charging Circuit	35
	Abnormal Noise of Alternator	35
	Preliminary Alternator Tests	36
	Alternator Drive Belt	36
	Alternator Output	37
	Alternator Removal	39
	Alternator Disassembly	39
	Alternator Component Testing and Inspection	42
	Stator	42
	Rotor	43
	Rectifier Assembly	44
	Alternator Brushes	45
	Alternator Bearings	46
	Drive Pulley	46
	Alternator Frames	47
	Alternator Assembly	47
	Alternator Bench Check	51
	Alternator Installation	52
55 201	Starting System for MC22 Tractors	53
	Description and Operation	53
	Starter Motor Assembly	53
	Starter Solenoid	54
	Pinion Clutch	54
	Starter Motor Specifications – MC22	55
	Starter Motor Troubleshooting – MC22	56
	Pinion Shaft Fails to Advance	56
	Pinion Motor Rotates but No Rotation Transmitted to Engine	56

SECTION 55 - ELECTRICAL

BOOK 4 - 87557975

Chapter 4 - Charging and Starting Systems (Continued)

CONTENTS

Section	Description	Page
	Motor Rotates before Pinion Meshes with Ring Gear	56
	Pinion Meshes with Ring Gear But Starting Motor Fails to Turn	57
	Motor Fails to Stop After Engine Starts and Key Switch is Turned Off	57
	Starter Motor Removal	58
	Starter Motor Disassembly	61
	Starter Motor Inspection	65
	Starter Motor Electrical Testing	69
	Armature	69
	Brush Holder	70
	Field Coil	70
	Starter Solenoid	71
	Starter Motor Assembly	75
	Starter Motor No Load Test	79
	Starter Motor Installation	79
	Starting System for MC28 Tractors	81
	Description and Operation	81
	Starter Motor Assembly	82
	Starter Solenoid	82
	Pinion Clutch	83
	Starter Motor Specifications - MC28	84
	Starter Motor Troubleshooting - MC28	85
	Pinion Shaft Fails to Advance	85
	Pinion Motor Rotates but No Rotation Transmitted to Engine	85
	Motor Rotates before Pinion Meshes with Ring Gear	85
	Pinion Meshes with Ring Gear But Starting Motor Fails to Turn	86
	Motor Fails to Stop After Engine Starts and Key Switch is Turned Off	86
	Starter Motor Removal	87
	Starter Motor Disassembly	88
	Starter Motor Inspection	90
	Starter Motor Electrical Testing	94
	Armature	94