

HW345, HW365 REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL INFORMATION	2
SECTION 10 - ENGINE	3
SECTION 25 - FRONT MECHANICAL DRIVE	10
SECTION 29 - HYDROSTATIC TRANSMISSION	11
SECTION 33 - BRAKES AND CONTROLS	15
SECTION 35 - HYDRAULIC SYSTEMS	16
SECTION 44 - REAR AXLE	21
SECTION 50 - CLIMATE CONTROL	23
SECTION 55 - ELECTRICAL SYSTEMS	26
SECTION 58 - HEADER ATTACHMENTS	45
SECTION 88 - OPTIONAL EQUIPMENT	47
SECTION 90 - PLATFORM, CAB AND DECALS	49

The following pages are the collation of the contents pages from each section and chapter of the HW345 and HW365 Repair manual. Complete Repair part # 87576216.

The sections used through out all New Holland product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the HW345 and HW365 Self-Propelled Windrowers.

SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87576217

Chapter 1 - General Information

CONTENTS

Section	Description	Page
00 000	Precautionary Statements	2
	Safety	3
	General Safety Information	5
	Introduction	8
	About Improvements	8
	Product Identification Numbers (PIN)	9
	Engine PIN Number	9
	Company Policy	10
	Parts and Specification	10
	Lubrication	10
	Recommended Lubricants and Coolants	11
	Sealants	12
	Minimum Hardware Tightening Torques	13
	Installation of Adjustable Fittings in Straight Thread O ring Bosses	15
	Standard Torque Data for Hydraulic Tubes and Fittings	15
	Pipe Thread Fitting Torque	16
	Installation of ORFS (O ring Flat Faced) Fittings	16
	Specifications	17

SECTION 10 - ENGINE

BOOK 1 - 87576217

Chapter 1 - Engine

CONTENTS

Section	Description	Page
	Specifications	4
	Torque Values	13
	Special Tools	15
	Troubleshooting	16
	Description of Operation	20
	Cylinder Block Assembly	20
	Cylinder Head Assembly	21
	Camshaft Assembly	21
	Crankshaft Assembly	21
	Connecting Rods	22
	Pistons	22
	Manifolds	23
	Timing Gears	23
	Lubrication System	24
	Crankcase Breather	27
	Overhaul	28
	Engine - Complete	28
	Removal	28
	Flywheel	35
	Removal	35
	Installation	35
	Engine - Complete	37
	Installation	37
	Engine Overhaul - Introduction	44
	Timing Check	45
	Component Overhaul	48

SECTION 10 - ENGINE

BOOK 1 - 87576217

Chapter 1 - Engine (Continue)

CONTENTS

Section	Description	Page
	Cylinder Head, Valves, and Related Parts	48
	Cylinder Head Removal	48
	Cylinder Head Disassembly	52
	Inspection and Repair, Cylinder Head	53
	Valve Inserts	54
	Valve Guides	55
	Valve Springs	56
	Rocker Shaft Inspection and Reassembly	56
	Cylinder Head Reassembly	57
	Hydraulic Tappets	60
	Engine Front Cover and Timing Gears	62
	Timing Gears Checking and Removal	62
	Inspection and Repair of Gears	65
	Installation	65
	Oil Pan	68
	Removal	68
	Inspection and Repair	68
	Installation	68
	Rear Cover Plate	69
	Removal	69
	Installation	69
	Oil Pump	71
	Removal	71
	Disassembly	71
	Inspection and Repair	72
	Installation	72
	Oil Pressure Relief Valve	73
	Removal	73
	Installation	73
	Camshaft	74
	Removal	74
	Inspection and Repair	74

SECTION 10 - ENGINE

BOOK 1 - 87576217

Chapter 1 - Engine (Continue)

CONTENTS

Section	Description	Page
	Camshaft Bearings	75
	Installation	75
	Pistons	76
	Removal	76
	Inspection and Repair	77
	Connecting Rod Bush Replacement	79
	Cylinder Block Overhaul	80
	Cylinder Bore	81
	Specifications	81
	Sleeving - Boring and Honing	82
	Reassembly	83
	Installing Piston Assembly Into Block	85
	Crankshaft	86
	Removal	86
	Inspection and Repair	87
	Reassembly	88
	Front Seal	91
	Installation	91
	Engine Compression Test	93
	Test Procedure	93
	Test Readings	93
	Test Conclusion	93

SECTION 10 - ENGINE

BOOK 1 - 87576217

Chapter 2 - Fuel System

CONTENTS

Section	Description	Page
	Specifications	3
	Fuel System Torque Chart	4
	Special Tools	5
	Fuel System	6
	Fuel Shut Off (Injection Pump)	6
	Description of Operation	7
	6-cylinder Fuel and Induction System	7
	Bosch VP Distributor - Type Fuel Injection System	7
	Fuel Tank	8
	Electric Lift Pump	8
	Fuel Filters	8
	Electric Lift Pump	10
	Removal	10
	Testing	10
	Bleeding Air From Filter	10
	Injection System Bleeding	11
	Air Leakage Test	12
	Fuel Injection Pump	13
	Fuel Injectors	13
	Cold Start Assist (Option)	14
	Plumbing	14
	Fuel Tanks	15
	Removal	15
	Installation	18
	Connecting Fuel Tanks	19
	Electronically Controlled Fuel Injection Pump	21
	Bosch VP Fuel Injection Pump - (Electronically Controlled)	22
	Removal	22
	Inspection	22

SECTION 10 - ENGINE

BOOK 1 - 87576217

Chapter 2 - Fuel System (Continued)

CONTENTS

Section	Description	Page
	Injection Pump Timing Check	23
	Fuel Injectors	27
	Removal	27
	Testing and Overhaul	27
	Disassembly	28
	Inspection and Repair	29
	Reassembly	31
	Nozzle Opening Pressure	32
	Installation	32

SECTION 10 - ENGINE

BOOK 1 - 87576217

Chapter 3 - Air Induction System

CONTENTS

Section	Description	Page
	Specifications	2
	Air Cleaner	2
	General Torques	2
	Description of Operation - Air Cleaner	3
	Air Cleaner	3
	Inner Element	3
	Troubleshooting - Air Cleaner	4
	Overhaul -Air Cleaner	5
	Inspection	5
	Clean or Replace Primary (Outer) Air Filter	5
	Replace the Secondary (Inner) Air Filter	9
	Air Intake Hoses	9
	Removal	10
	Installation	11
	Description of Operation - Turbocharger	12
	Troubleshooting - Turbocharger	14
	Overhaul - Turbocharger	17
	Removal	17
	Disassembly	17
	Cleaning	18
	Inspection	18
	Center Shaft Radial Check	19
	Axial Clearance Check	20
	Reassembly	21
	Installation	22
	Leak Diagnosis	22

SECTION 10 - ENGINE

BOOK 1 - 87576217

Chapter 4 - Cooling System

CONTENTS

Section	Description	Page
	Description of Operation	2
	Cooling System (CNH 7.5 Liter Engine)	2
	Troubleshooting	4
	Specifications	5
	Tightening Torques	5
	Thermostat	5
	Water Pump	5
	Drive Belt	5
	Cooling Capacities	5
	Coolant Flow	5
	Cooling Fluid	5
	Overhaul	6
	Radiator	6
	Removal	6
	Installation	9
	Thermostat	13
	Removal	13
	Inspection and Repair	13
	Installation	14
	Temperature Warning Sender	14
	Installation	14
	Belt Tensioner	15
	Removal	15
	Inspection and Repair	15
	Reassembly	15
	Idler Pulley	16
	Water Pump	16
	Removal	16
	Disassembly	17
	Inspection and Repair	17
	Reassembly: 6-cylinder	18
	Installation: 6-cylinder	20

SECTION 10 - ENGINE

BOOK 1 - 87576217

Chapter 5 - Lubrication System

CONTENTS

Section	Description	Page
	Description of Operation	2
	Lubrication System	3
	Troubleshooting	4
	Engine Oil Consumption	5
	Evaluating Oil Consumption	5

SECTION 25 - FRONT MECHANICAL DRIVE

BOOK 2 - 87576218

Chapter 1 - Front Mechanical Drive

CONTENTS

Section	Description	Page
	Description of Operation	2
	Special Tools	2
	Overhaul	7
	Front Mechanical Drive	7
	Removal	7
	Installation	9
	Planetary Gearbox Drive	14
	Disassembly	15
	Assembly	19
	Labor Guide	25

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87576218

Chapter 1 - Ground Drive

CONTENTS

Section	Description	Page
	Specifications	5
	Hydrostatic Transmission Identification	6
	Torque Specifications	7
	Torque Chart	7
	Motor Area	7
	Description of Operation	8
	Pumps	9
	High Pressure Relief Valves	10
	Check Valves	10
	Charge Pump	11
	Charge Relief Valve (Pump)	11
	Header Lift Pump	11
	Motors	11
	Variable Displacement Motor	11
	Reservoir	13
	Oil Flow	13
	Neutral	13
	Forward/Reverse	13
	Hydraulic System Diagram	14
	Solenoid Valve	16
	Low-Range Operation	16
	High-Range Operation	16
	Cooling Circuit	16
	Relief Valve	16
	Operation	16
	Linkage	17
	Operation	17
	Sauer-Danfoss Authorized Service Centers - North America	18
	Troubleshooting	22
	Excessive Noise	22
	Overheating Transmissions	22
	Loss of Propulsion	22

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87576218

Chapter 1 - Ground Drive (Continued)

CONTENTS

Section	Description	Page
	Control Linkage Inspection	23
	High-Pressure Relief Valve Check	23
	Charge Pump Relief Valve	24
	Check Valve	24
	Pressure Testing	25
	Port Locations	27
	Charge Pressure	28
	Charge Pressure System Test	29
	Tandem Pump Charge Pressure Test	29
	Complete Charge System Test	31
	High Pressure Relief Valve Test	33
	Case Pressure Test (Pump)	36
	Case Pressure Test (Motor)	36
	Suction Test	37
	Case Flow Test	37
	Ground Speed Circuit	38
	Operation	38
	Troubleshooting	38
	Troubleshooting Charts	41
	Windrower Will Not Shift into High Range	41
	Windrower Will Not Shift into Low Range	42
	Charge Pump	43
	Hydrostatic System	44
	Explanation of Terms Used in Failure Analysis	47
	Lack of Lubrication	47
	Operating at Excessive Temperature Levels	47
	Use of Improper Fluid	47
	Cavitation	47
	Overspeeding of the Unit	47
	Parts Worn or Scored From Contamination	47
	Abrasive Contaminants	47
	Plates Scored from Water in Oil (Non-Particle Contaminants)	47

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87576218

Chapter 1 - Ground Drive (Continued)

CONTENTS

Section	Description	Page
	Minor Repairs	48
	Tandem Pump	49
	Port Locations	49
	Rear Half Pump Breakdown	50
	Front Half Pump Breakdown	52
	Shaft Seal Replacement	54
	Charge Pump Removal	55
	Charge Pump Inspection	56
	Charge Pump Assembly	57
	O ring Seals	58
	Trunnion Seal (Control Shaft Side)	59
	Trunnion Cover (Plain)	61
	Tandem Pump Removal	62
	Tandem Pump Installation	65
	Ground Drive Motor	67
	Removal	67
	Installation	70
	Shaft Seal Replacement	71
	Start-Up	72
	Maintenance	72
	Worm Shaft	73
	Removal	73
	Installation	74

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87576218

Chapter 2 - Propulsion System

CONTENTS

Section	Description	Page
	Theory of Operation	2
	Pintle Arm Rotary Potentiometer (R21)	3
	Removal	3
	Installation	3
	Testing	4
	Propulsion Rotary Position Sensor (R23)	5
	Removal	5
	Installation	5
	Testing	6
	MFH Rotary Position Sensor (R18)	7
	Removal	7
	Installation	8
	Testing	9
	Neutral Adjustment	10

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87576218

Chapter 3 - Active Calibrations

CONTENTS

Section	Description	Page
	Active Calibrations	2

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87576218

Chapter 4 - MFH Calibration

CONTENTS

Section	Description	Page
	Dealer Setup Menu Navigation	2
	MFH Calibration	2

SECTION 33 - BRAKES AND CONTROLS

BOOK 2 - 87576218

Chapter 1 - Brakes and Controls

CONTENTS

Section	Description	Page
	Description of Operation	2
	Special Tools	2
	Overhaul	2
	Brake Assembly	2
	Removal	2
	Installation	5
	Disassembly	6
	Rotating, Stationary, and Primary Disc Assembly	12
	Installation	12
	Brake Bleeding Procedure	16
	Labor Guide	18

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 87576219

Chapter 1 - Hydraulic Systems

CONTENTS

Section	Description	Page
	Introduction	5
	System Component Locations	6
	Reading Diagram Symbols	7
	Hydraulic System Diagram	12
	Theory of Operation - Ground Drive	14
	Ground Drive	14
	Circuit Diagrams	16
	Service Techniques	21
	General	21
	Oil Level	21
	Hoses and Tubes	22
	O Ring Flat Face Seal Fittings	22
	O Ring Flat Face Seal Fitting Torque Values	22
	Theory of Operation - Header Drive	23
	Header Drive	23
	Electronic Displacement Control (EDC)	25
	Circuit Diagrams	26
	Theory of Operation - Header Lift System	30
	Header Lift System	30
	Neutral State	31
	Header Lift	31
	Accumulator Charge	31
	Header Lower/Flotation	31
	Theory of Operation - Floatation/Accumulators	32
	Floatation/Accumulators	32
	Increase/Decrease Floatation	32
	Circuit Diagrams	33
	Theory of Operation - Header Tilt System	38
	Header Tilt System	38
	Circuit Diagrams	39
	Theory of Operation - Auxiliary Hydraulic Pump	42
	Auxiliary Hydraulic Pump (optional)	42
	Independent Control Valve (ICV) Manifold (HW345/365)	43
	Service Parts	43
	Valve Identification Codes	44
	Component Identification and Location	45
	Right-Hand (RH) View	45

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 87576219

Chapter 1 - Hydraulic Systems (Continued)

CONTENTS

Section	Description	Page
	Plan View	46
	Front View	47
	Rear View	48
	Bottom View	49
	Left-hand (LH) View (Hidden Against Mounting Plate)	50
	Energized Solenoid Chart	51
	Zero-Leak Plugs	52
	Removal	52
	Install	52
	Plug Torque Requirements	53
	Zero-Leak Plug to SAE J514 ORB Plug Cross Reference	53
	Auxiliary Control Valve (Speed Control) Manifold (HW345/365)	54
	Service Parts	54
	Valve Identification Codes	55
	Auxiliary Control Valve	56
	Component Identification and Location	56
	Right-Hand (RH) View	56
	Plan View	57
	Bottom View	58
	Left-hand (LH) View (Hidden Against Mounting Plate)	59
	Theory of Operation – Cartridge Valves	60
	Cartridge Valves (Solenoid-operated)	60
	Two-way Two-position (Normally Closed) Poppet Valves	61
	Three-way Two-position Spool Valve	63
	Two-way Two-position (Normally Open) Poppet Valve	64
	(Normally Open) Pressure Reducing/Relieving Valves	65
	(Normally Open) Solenoid-operated Relief Valves	66
	(Normally Closed) Solenoid-operated Proportional Flow Control	67
	Main Manifold Cartridge Torque Requirement	68
	Replacement	70
	Installation	71
	Solenoid Coils	72
	Removal	72
	Installation	73
	Cartridge Valves (Non-solenoid-operated)	74
	Direct-acting Flow Control Needle Valve	74

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 87576219

Chapter 1 - Hydraulic Systems (Continued)

CONTENTS

Section	Description	Page
	Pilot-operated Relief Valve	75
	Differential-Pressure-Sensing Valve	76
	Replacement	76
	Adjustment	77
Minor Repairs		78
	Header Drive Pump	78
	Removing the Multifunction Valve Cartridge	78
	Installing the Multifunction Valve Cartridge	79
	Removing the Charge Pressure Relief Valve	79
	Installing the Charge Pressure Relief Valve	80
	Diagnosing the EDC and Pilot Control Valve Assembly	80
	Dealer Setup Menu Navigation	81
	Removing the EDC and PCP Valve Assembly	83
	Installing the EDC and PCP Valve Assembly	84
	Removing the Charge Cooling Circuit Manifold	86
	Installing the Remote Charge Cooling Circuit Manifold	87
Major Components		88
	Header Drive Pump	88
	Removal	88
	Removing the Pump Shaft Seal	93
	Installing the Pump Shaft Seal	94
	Inspection	95
	Installation	96
	Start-up Procedure	98
	Pressure Checks – Header Drive System	102
	Test Equipment	102
	Pressure Readings	103
	Charge Pressure – Header Drive Pump	103
	Charge Pressure – Header Drive Motor	103
	Pump Gauge Information	104
	Case Pressure	105
	High Pressure	105
	Motor Gauge Information	106
	Inlet Vacuum	107
	Case Drain Flow	108
	Cooling Circuit Bypass Pressure	109

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 87576219

Chapter 1 - Hydraulic Systems (Continued)

CONTENTS

Section	Description	Page
	Troubleshooting - Header Drive System	110
	General	110
	Reduced System Pressure	110
	Reduced Hydraulic Flow	110
	Excessive Noise	110
	Overheating	110
	Power Loss	110
	Explanation Of Terms Used In Failure Analysis	111
	Parts Evaluation	112
	Discoloration	112
	Scratches or Grooves	112
	Rework	112
	Repeat Failures	112
	Hydraulic Oil Temperatures	113
	Header Drive System	114
	Further Troubleshooting Tips	117
	Header Drive Pump	118
	Charge Pump	119
	Header Drive Motor	120
	Adjustments	121
	Header Drive Pump	121
	Neutral Adjustment	121
	Diagnosing the Multifunction Valves	125
	Diagnosing the Charge Pressure Relief Valve	126
	Header Drive Motors	127
	Header Drive Speed Sensor Gap	127
	Sauer-Danfoss Authorized Service Centers - North America	128
	Header Lift Pump	132
	Removal	132
	Disassembly	132
	Inspection	134
	Assembly	134
	Installation	137
	Adjustment Instructions	138
	Six Cylinder - RH Header Lift Relief Valve (L-03) Pressure Adjustment	139
	Six Cylinder - LH Header Lift Relief Valve (L-04) Pressure Adjustment	142

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 87576219

Chapter 1 - Hydraulic Systems (Continued)

CONTENTS

Section	Description	Page
	Accumulators - Header Lift	146
	Removal	146
	Inspection	147
	Installation	147
	Accumulator - Surge Suppression	149
	Specifications	149
	Hydraulic Accumulator Breakdown	150
	Checking Pre-Charge	151
	Pre-Charging Procedure	152
	Removal	153
	Installation	153
	Lift Cylinders	154
	Removal	154
	Inspection	158
	Assembly	159
	Tilt Cylinder	163
	Removal	163
	Inspection	167
	Assembly	168
	Maintenance	171
	Auxiliary Engine Mounted Hydraulic Pump (optional)	172
	Removal	172
	Inspection	172
	Installation	173
	Hydraulic Reservoir Replacement	174
	Removal	174
	Installation	175
	Tank Preparation (Plastic Tanks only)	176

SECTION 44 - REAR AXLE

BOOK 3 - 87576219

Chapter 1 - Non-Suspended Rear Axle

CONTENTS

Section	Description	Page
44 000	Introduction	2
	Overview	2
	Special Tools	2
	Specifications	3
	Description of Operation	4
	Extensions and Axle Tube	4
	Adjustments	8
	Wheel Width	8
	Extension Widths (Spindle to Spindle)	8
	Overhaul	9
	Wheel, Axle Shaft and Hub	9
	Removal	9
	Inspection	11
	Installation	12
	Axle Support Fork	14
	Removal	14
	Inspection	14
	Installation	15
	Extension	16
	Removal	16
	Inspection	18
	Installation	18
	Axle Tube and Pivot Pin	20
	Removal	20
	Inspection	21
	Installation	22
	Labor Guide	24

SECTION 44 - REAR AXLE

BOOK 3 - 87576219

Chapter 2 - Suspended Rear Axle

CONTENTS

Section	Description	Page
44 000	Introduction	2
	Overview	2
	Special Tools	2
	Specifications	3
	Description of Operation	4
	Extensions and Axle Tubes	4
	Adjustments	7
	Wheel Width	7
	Extension Widths (spindle to spindle)	7
	Overhaul	8
	Wheel, Axle Shaft and Hub	8
	Removal	8
	Inspection	10
	Installation	11
	Axle Support Fork	13
	Removal	13
	Inspection	14
	Installation	14
	Extension	15
	Removal	15
	Inspection	16
	Installation	17
	Air Spring	18
	Removal	18
	Inspection	19
	Installation	19
	Axle Tubes and Pivot Pins	20
	Removal	20
	Inspection	21
	Installation	22
	Labor Guide	24

SECTION 50 - CLIMATE CONTROL

BOOK 3 - 87576219

Chapter 1 - Climate Control

CONTENTS

Section	Description	Page
	Specifications	4
	Description of Operation	5
	The Basics of Refrigeration	5
	Air Conditioning Process	6
	R134a Refrigerant Information	7
	Refrigerant Ingredients	7
	Lubricants	7
	Refrigerant (R134a)	7
	Cab Air Flow	8
	System Components	10
	Compressor Pump	10
	Compressor Clutch (L-27)	10
	External Cab Filter	11
	Removal/Replacement	11
	Recirculation Filter	13
	Removal	14
	Cleaning With Air	15
	Condenser	15
	Receiver/Drier	16
	Expansion Valve	17
	Description	17
	Valve Components	17
	Operation	18
	Port Identification	21
	Evaporator	21
	Blower Fan	21
	Description of Operation - Climate Controls	22
	Control Panel – Manual Temperature Control (A-05)	22
	Blower Fan Switch	22
	Temperature Control Switch	22
	Control Panel – (ATC) Automatic Temperature Control (If Equipped)	23
	Control Operation Specifications	23
	ATC Operator Controls	24
	Compressor Protection Switches	25

SECTION 50 - CLIMATE CONTROL

BOOK 3 - 87576219

Chapter 1 - Climate Control (Continued)

CONTENTS

Section	Description	Page
	High-pressure Cutout Switch (S-40)	25
	Low-pressure Cutout Switch (S-69)	25
	Troubleshooting and Servicing Air Conditioning System	26
	General Safety and Service Precautions	26
	Cleanliness	27
	Preliminary Troubleshooting and Testing	27
	Operational Checks	27
	Troubleshooting - Fault Code Chart	28
	Display Fault Codes	28
	Advanced Diagnostics	31
	Diagnosis Charts - Air Conditioning System	35
	Test Procedure: Stabilizing the System	39
	Test Ports	39
	Pressure/Temperature Relationships	40
	Leak Testing	40
	Refilling	40
	Contaminants	41
	Refrigerant Extraction and Recycling Equipment	41
	Using Extraction Equipment	42
	Using Recycled Equipment	42
	Recycling Vs. Reclaiming	42
	Containment of Air Conditioning Refrigerants	42
	Recovery	43
	Flushing	43
	Recharging/Refilling	43
	Using a Manifold Gauge Set	44
	Checking Refrigerant for Excess Air	44
	Containers for Storing Recycled Refrigerant	45
	Disposal of Empty or Near-empty Disposable Containers	45
	Applicable SAE Standards	45
	Manifold Gauge Readings and Interpretations	46
	Performance Test Examples	46
	Overhaul	57
	Condenser	57

SECTION 50 - CLIMATE CONTROL

BOOK 3 - 87576219

Chapter 1 - Climate Control (Continued)

CONTENTS

Section	Description	Page
	Removal	57
	Inspection and Repair	57
	Installation	57
	Receiver/Drier	58
	Removal	58
	Installation	58
	High (S-40) Pressure Switches	58
	Low (S-69) Pressure Switches	58
	Removal	58
	Installation	58
	Blower Motor	59
	Removal	59
	Inspection	61
	Assembly	62
	Installation	63
	Blower Fan Resistor	65
	Removal	65
	Installation	65
	Expansion Valve	65
	Removal	65
	Installation	65
	HVAC Cores	66
	Inspection and Cleaning	66
	Removal	66
	Heater Core and/or Evaporator Core	68
	Removal	68
	Inspection	69
	Installation	70
	Compressor and Clutch	73
	Compressor Clutch Components	73
	Removal	73
	Installation	74
	Checking Compressor Oil for Contamination	75
	Adding Compressor Oil	75

SECTION 50 - CLIMATE CONTROL

BOOK 3 - 87576219

Chapter 1 - Climate Control (Continued)

CONTENTS

Section	Description	Page
	Clutch Procedures	76
	Clutch Run-In	76
	Clutch Test	76
	Clutch Removal	76
	Clutch Inspection	78
	Clutch Installation	79
	Electrical Connection	80
	Tightening Torques	81
	Labor Guide	87

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 4 - 87576220

Chapter 1 - General Information

CONTENTS

Section	Description	Page
	Introduction	3
	Troubleshooting	3
	Fault Codes and Fault Finding	4
	Electrical Terms and Equipment	5
	Definition	5
	Electrical System Components	7
	Electrical Components Chart	7
	Rocker Switches	13
	Momentary Rocker Switches	13
	Circuit Breakers	13
	Location of Circuit Breakers	14
	Fuses	15
	Fuse Panel Identification Table	15

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 4 - 87576220

Chapter 1 - General Information (Continued)

CONTENTS

Section	Description	Page
	Basic Circuitry/Component Testing	17
	Continuity Test for Open Circuits	17
	Continuity Test for Short to Ground	18
	Resistance Test for Electrical Components	19
	Measuring Voltage	20
	Diodes	21
	Test Procedure	21
	Electro-hydraulic Solenoid Valve Coils	22
	Test Procedure	22
	Operational Check	22
	Relays	23
	Test Procedure	25
	Welding on the Machine	25
	Wiring Harnesses, Connectors, Power Sources and Controls	28
	Connectors	28
	Harness Splices	28
	Fuses, Relays and Switches	28
	Switch and Relay Contacts	28
	Grounds	28
	Power Sources	28
	Wire Harness Identification	28
	Wire Color Codes	29
	Primary Harness Connectors	29
	Ground System	30
	Introduction	30
	Ground Points	30
	Windrower Electronic System	36
	Introduction	36
	Function Monitoring, Machine Configuration and Diagnostics Menus	37
	Selectable Functions Monitoring	37
	Machine Configuration/User Setup Menu	39

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 4 - 87576220

Chapter 1 - General Information (Continued)

CONTENTS

Section	Description	Page
	Critical Warning Displays - Automatic Shutdown	45
	Critical Warning Displays - No Shutdown	47
	Non-critical Warning Displays	48
	Electrical Fault Codes	48
	System Monitoring	49

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 4 - 87576220

Chapter 2 - Power Distribution

CONTENTS

Section	Description	Page
	Description, Power Distribution, and Troubleshooting	2
	XCM Power	2
	Unswitched XCM Power	2
	Operation	2
	Switched XCM Power	3
	Operation	3
	Power Distribution	4
	Main Distribution Panel – Fuse Block	5
	Unswitched Power	6
	Q-09 #2 Main Circuit Breaker	6
	Q-11 #4 Main Circuit Breaker Busbar	6
	Battery Busbar	6
	Q-08 #1 Main Circuit Breaker Busbar	7
	Switched Power	7

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 4 - 87576220

Chapter 2 - Power Distribution (Continued)

CONTENTS

Section	Description	Page
	K-33 VI Supply Busbar	7
	K-38 IGN Control Busbar	7
	K-04 ACC Control Busbar	8
	XCM Function and Configure Select Switches	17
	Operation	17
	Troubleshooting	17
	Ground Speed Circuit	17
	Operation	17
	Troubleshooting	18

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 4 - 87576220

Chapter 3 - Air Conditioning Systems

CONTENTS

Section	Description	Page
	Air Conditioning Systems	2
	Introduction	2
	General Principles of Operation (Manual and ATC Systems)	2
	Manual HVAC System (Standard)	4
	Operation	4
	Troubleshooting	4
	A/C Clutch Circuit (Manual HVAC)	8
	Operation	8
	Troubleshooting	8
	Automatic (ATC) HVAC System	11
	Operation	11
	Control Operation Specifications	11
	General Operation	12

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 4 - 87576220

Chapter 3 - Air Conditioning Systems

CONTENTS

Section	Description	Page
	Heater Operation	12
	Heater Operation – Sequence of Events	12
	Defrosting/Defogging Operation	13
	Air Conditioner (A/C) Operation	13
	Ventilation	13
	System Component Functions	13
	Automatic Fan Speed Control (AUTO)	13
	Manual Mode Fan Speed Control (Up/Down)	13
	A/C Compressor Clutch Control	13
	Heater Water Valve	14
	Cab Air Temperature Sensor	14
	Evaporator Probe	14
	ATC HVAC Component Usage	14
	Troubleshooting	15
	Fault Codes	15
	Advanced Diagnostics Display Mode	18
	Revision Level	19
	Setting Parameters	20
	ATC Troubleshooting Quick-Checks	20
	A/C Clutch Circuit (ATC HVAC)	26
	Operation	26
	Troubleshooting	26