

HW305, HW305S, HW325 REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL INFORMATION	2
SECTION 10 - ENGINE	3
SECTION 25 - FRONT MECHANICAL DRIVE	11
SECTION 29 - HYDROSTATIC TRANSMISSION	12
SECTION 33 - BRAKES AND CONTROLS	16
SECTION 35 - HYDRAULIC SYSTEMS	17
SECTION 44 - REAR AXLE	22
SECTION 50 - CLIMATE CONTROL	24
SECTION 55 - ELECTRICAL SYSTEMS	30
SECTION 58 - HEADER ATTACHMENTS	51
SECTION 88 - OPTIONAL EQUIPMENT	56
SECTION 90 - PLATFORM, CAB AND DECALS	60

The following pages are the collation of the contents pages from each section and chapter of the HW305, HW305S and HW325 Repair manual. Complete Repair part # 87576230.

The sections used through out all New Holland product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the HW305, HW305S and HW325 Self-Propelled Windrowers.

SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87576231

Chapter 1 - General Information

CONTENTS

Section	Description	Page
00 000	Precautionary Statements	2
	Safety	3
	General Safety Information	5
	Protecting the Electronic/Electrical Systems During Charging or Welding	7
	Introduction	8
	About Improvements	8
	Product Identification Numbers (PIN)	9
	Engine PIN Number	9
	Company Policy	10
	Parts and Accessories	10
	Lubrication	10
	Recommended Lubricants and Coolants	11
	Sealants	12
	Minimum Hardware Tightening Torques	13
	Installation of Adjustable Fittings in Straight Thread O ring Bosses	15
	Standard Torque Data for Hydraulic Tubes and Fittings	15
	Pipe Thread Fitting Torque	16
	Installation of ORFS (O ring Flat Faced) Fittings	16
	Specifications	17

SECTION 10 - ENGINE

BOOK 1 - 87576231

Chapter 1 - Engine

CONTENTS

Section	Description	Page
	Engine Overhaul Introduction	5
	Description of Operation	6
	Specifications	6
	Special Tools	14
	Torques	16
	Overhaul	18
	Engine	18
	Removal	18
	Turbocharger	24
	Removal	24
	Fuel System	24
	Removal	24
	Thermostat	29
	Removal	29
	Oil Cooler	29
	Removal	29
	Water Pump	30
	Removal	30
	Cylinder Head	30
	Removal	30
	Front Housing	31
	Removal	31
	Oil Pump	32
	Removal	32
	Rear Housing	33
	Removal	33
	Oil Pan	34
	Removal	34
	Timing Gears	34
	Removal	34
	Pistons	35
	Removal	35

SECTION 10 - ENGINE

BOOK 1 - 87576231

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
	Main Bearings	35
	Removal	35
	Crankshaft	35
	Removal	35
	Oil Nozzles	36
	Removal	36
	Camshaft	36
	Removal	36
	Tappets	38
	Removal	38
	Block	38
	Inspection	38
	Crankshaft	40
	Inspection	40
	Oil Pump Gear	42
	Inspection, Removal, and Installation	42
	Crankshaft	42
	Installation for Inspection	42
	Camshaft	44
	Inspection	44
	Camshaft Bushings	45
	Inspection and Installation	45
	Tappets	46
	Inspection	46
	Piston	46
	Disassembly	46
	Inspection	47
	Piston	47
	Assembly	47
	Connecting Rod	50
	Inspection	50

SECTION 10 - ENGINE

BOOK 1 - 87576231

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
	Bushings	50
	Inspection	50
	Rod Markings	51
	Connecting Rods	51
	Inspection	51
	Piston and Connecting Rod	53
	Assembly	53
	Piston Rings	54
	Installation	54
	Piston and Rod Assembly	54
	Installation for Clearance	54
	Rod Bearing	55
	Clearance	55
	Piston	57
	Height Measurement	57
	Cylinder Head	57
	Valve	57
	Removal	57
	Valve Seals	58
	Removal	58
	Inspection/Installation	58
	Cylinder Head	58
	Inspection	58
	Valves	59
	Specifications	59
	Inspection	60
	Valve Stem Play	60
	Valve Guides	60
	Inspection	60
	Valve Seats	60
	Inspection	61

SECTION 10 - ENGINE

BOOK 1 - 87576231

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
	Valve Springs	63
	Inspection of the Intake and Exhaust Valve Springs	63
	Cylinder Head	63
	Assembly	63
	Installation	64
	Push Rods	64
	Rocker Arm Group	65
	Inspection	65
	Installation	65
	Block Assembly	67
	Tappets	67
	Installation	67
	Camshaft	67
	Installation	67
	Oil Nozzles	68
	Installation	68
	Crankshaft	69
	Installation	69
	Piston and Connecting Rod	70
	Installation	70
	Timing Gearbox	72
	Installation	72
	Camshaft	73
	Timing	73
	Fuel Pump	74
	Installation	74
	Engine Components	76
	Flywheel Housing	76
	Installation	76
	Oil Pump	82
	Installation	82

SECTION 10 - ENGINE

BOOK 1 - 87576231

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
	Water Pump	82
	Installation	82
	Front Cover	83
	Installation	83
	Crankshaft Pulley	84
	Installation	84
	Oil Pan	85
	Installation	85
	Oil Cooling System	86
	Installation	86
	Injector Assembly	86
	Installation	86
	Valve Covers	87
	Installation	87
	Exhaust Manifold	87
	Installation	87
	Turbocharger	88
	Installation	88
	Engine	89
	Installation	89
	Troubleshooting	96

SECTION 10 - ENGINE

BOOK 1 - 87576231

Chapter 2 - Fuel System

CONTENTS

Section	Description	Page
	Specifications	2
	4-Cyl. Engine Without Charge Air Cooling	3
	4-Cyl. Engine Setup For Charge Air Cooling	4
	Torques	5
	Special Tools	6
	Description of Operation	7
	Injection System	7
	Injection Pump	8
	Mechanical Fuel Pump	17
	Fuel Filter	18
	Injection Pump	20
	Removal	20
	Installation	24
	Calibration	29
	Injection Pump	29
	Timing	29
	Injectors	33
	Removal	33
	Reinstallation	34
	Fuel System	36
	Bleeding	36
	Fuel Tanks	37
	Removal	37
	Install	42

SECTION 10 - ENGINE

BOOK 1 - 87576231

Chapter 3 - Air Intake

CONTENTS

Section	Description	Page
	Description of Operation	2
	Air Intake System	2
	Specifications	3
	Air Cleaner	3
	Turbocharger	3
	Sealants	3
	General Torques	4
	Description of Operation	5
	Turbocharger	5
	Overhaul	6
	Turbocharger	6
	Removal	6
	Inspection	6
	Installation	8
	Air Filter	9
	Inspection	9
	Primary (Outer) Air Filter	9
	Removal	9
	Cleaning With Air	11
	Cleaning By Washing	11
	Installation	12
	Secondary (Inner) Air Filter	13
	Removal	13
	Installation	13
	Intake Manifold Assembly	14
	Installation	14
	Troubleshooting	15

SECTION 10 - ENGINE

BOOK 1 - 87576231

Chapter 4 - Cooling System

CONTENTS

Section	Description	Page
	Specifications	2
	Cooling System	2
	Overview - Cooling System	3
	Description of Operation	5
	Overhaul	5
	Thermostat	5
	Removal	5
	Inspection	6
	Installation	6
	Coolant Temperature Sender	6
	Removal	6
	Installation	7
	Fan Belt	7
	Removal	7
	Installation	7
	Spring-loaded Automatic Fan Belt Tensioner	8
	Removal	8
	Installation	8
	Inspection	8
	Coolant Pump	9
	Removal	10
	Installation	10
	Radiator	11
	Removal	11
	Installation	14
	Troubleshooting	17

SECTION 10 - ENGINE

BOOK 1 - 87576231

Chapter 5 - Lubrication System

CONTENTS

Section	Description	Page
	Description of Operation	2
	Lubrication System	2
	Specifications	7
	Oil Specification	7
	Oil Pump	7
	Repair	7
	Oil Filter Mount and Oil Cooler	7
	Removal	7
	Installation	9
	Oil Pan	9
	Removal	9
	Installation	10

SECTION 25 - FRONT MECHANICAL DRIVE

BOOK 2 - 87576232

Chapter 1 - Front Mechanical Drive

CONTENTS

Section	Description	Page
	Description of Operation	2
	Special Tools	2
	Overhaul	6
	Front Mechanical Drive	6
	Removal	6
	Installation	9
	Planetary Gearbox Drive	12
	Disassembly	13
	Assembly	17
	Labor Guide	23

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87576232

Chapter 1 - Ground Drive

CONTENTS

Section	Description	Page
	Specifications	5
	Hydrostatic Transmission Identification	6
	Torque Specifications	7
	Torque Chart	7
	Motor Area	7
	Description of Operation	8
	Pumps	9
	High Pressure Relief Valves	10
	Check Valves	10
	Charge Pump	11
	Charge Relief Valve (Pump)	11
	Header Lift Pump	11
	Motors	11
	Fixed Displacement Motor	11
	Variable Displacement Motor	11
	Reservoir	13
	Oil Flow	13
	Neutral	13
	Forward/Reverse	13
	HW305/305S Hydraulic System Diagram	14
	HW325 Hydraulic System Diagram	16
	Solenoid Valve (2-Speed Drive Motor Only)	18
	Low-Range Operation	18
	High-Range Operation	18
	Cooling Circuit	18
	Relief Valve	18
	Operation	18
	Linkage	19
	Operation	19
	Sauer-Danfoss Authorized Service Centers – North America	20
	Troubleshooting	24
	Excessive Noise	24

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87576232

Chapter 1 - Ground Drive (Continued)

CONTENTS

Section	Description	Page
	Overheating Transmissions	24
	Loss of Propulsion	24
	Control Linkage Inspection	25
	High-Pressure Relief Valve Check	25
	Charge Pump Relief Valve	26
	Check Valve	26
	Pressure Testing	27
	Port Locations	29
	Charge Pressure (HW305/305S)	30
	Charge Pressure (HW325)	30
	Charge Pressure System Test	31
	Tandem Pump Charge Pressure Test	31
	Complete Charge System Test (HW325 Only)	33
	High Pressure Relief Valve Test	35
	Gage Port and Relief Valve Locations	35
	Pressure Port Locations	37
	Case Pressure Test (Pump)	38
	Case Pressure Test (Motor, HW325 only)	38
	Suction Test	39
	Case Flow Test (HW325 Only)	39
	Ground Speed Circuit (HW305/305S)	40
	Operation	40
	Troubleshooting	40
	Ground Speed Display Does Not Function (HW305/305S)	41
	Ground Speed Circuit (HW325)	42
	Operation	42
	Troubleshooting	42
	Ground Speed Display Does Not Function (HW325)	43
	Troubleshooting Charts	45
	Windrower Will Not Shift into High Range	45
	Windrower Will Not Shift into Low Range	46
	Charge Pump	47

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87576232

Chapter 1 - Ground Drive (Continued)

CONTENTS

Section	Description	Page
	Hydrostatic System	48
	Explanation of Terms Used in Failure Analysis	51
	Lack of Lubrication	51
	Operating at Excessive Temperature Levels	51
	Cavitation	51
	Overspeeding of the Unit	51
	Parts Worn or Scored From Contamination	51
	Abrasive Contaminants	51
	Plates Scored from Water in Oil (Non-Particle Contaminants)	51
	Minor Repairs	52
	Tandem Pump	53
	Port Locations	53
	Rear Half Port Breakdown	54
	Front Half Port Breakdown	56
	Shaft Seal Replacement	58
	Charge Pump Removal	59
	Charge Pump Inspection	60
	Charge Pump Assembly	61
	O Ring Seals	62
	Trunnion Seal (Control Shaft Side)	63
	Trunnion Cover (Plain)	65
	Tandem Pump Removal	66
	Tandem Pump Installation	69
	Ground Drive Motor	71
	Removal	71
	Inspection/Parts Breakdown	73
	Installation	76
	Start-Up	77
	Maintenance	77
	Worm Shaft	78
	Removal	78
	Installation	79

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87576232

Chapter 2 - Propulsion System

CONTENTS

Section	Description	Page
	HW305/305S	2
	Pintle Arm Rotary Potentiometer (R21)	2
	Removal	2
	Installation	2
	Testing	3
	Propulsion Rotary Potentiometer (R21)	4
	Removal	4
	Installation	4
	Testing	5
	Neutral Adjustment	6
	HW325	27
	Theory of Operation	27
	Pintle Arm Rotary Potentiometer (R21)	28
	Removal	28
	Installation	28
	Testing	29
	Propulsion Rotary Position Sensor (R23)	30
	Removal	30
	Installation	30
	Testing	31
	MFH Rotary Position Sensor (R18)	32
	Removal	32
	Installation	33
	Testing	34
	Neutral Adjustment	35

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87576232

Chapter 3 - Active Calibrations (HW325 only)

CONTENTS

Section	Description	Page
	Active Calibrations	2

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87576232

Chapter 4 - MFH Calibration (HW325 Only)

CONTENTS

Section	Description	Page
	Dealer Setup Menu Navigation	2
	MFH Calibration	2

SECTION 33 - BRAKES AND CONTROLS

BOOK 2 - 87576232

Chapter 1 - Brakes and Controls

CONTENTS

Section	Description	Page
	Description of Operation	2
	Special Tools	2
	Overhaul	2
	Brake Assembly	2
	Removal	2
	Installation	5
	Disassembly	6
	Rotating, Stationary, and Primary Disc Assembly	12
	Installation	12
	Brake Bleeding Procedure	16
	Labor Guide	18

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 87576233

Chapter 1 - Hydraulic Systems

CONTENTS

Section	Description	Page
	Introduction	5
	System Component Locations	6
	Reading Diagram Symbols	7
	HW305/305S Hydraulic System Diagram	12
	HW325 Hydraulic System Diagram	14
	Hydraulic System Operation	16
	Ground Drive	16
	Circuit Diagrams	18
	HW305/305S	18
	HW325	18
	Header Drive	26
	Circuit Diagrams	28
	HW305/305S	28
	HW325	28
	Theory of Operation	35
	Header Lift	35
	Circuit Diagrams	38
	HW305/305S/325	38
	Theory of Operation	43
	Header Tilt	43
	Circuit Diagrams	44
	HW305/305S/325	44
	Auxiliary Engine Mounted Hydraulic Pump (optional)	47
	Control Valve Manifold (HW305/305S/325)	48
	Service Parts	48
	Valve Identification Codes	49
	HW305/305S Component Identification and Location	50
	Right-hand (RH) View	50
	Plan View	51
	Front View	52
	Rear View	53
	Bottom View	54
	Left-hand (LH) View (Hidden Against Mounting Plate)	55
	HW305/305S Solenoid Engagement Chart	56
	HW325 Component Identification and Location	57
	Right-hand (RH) View	57
	Plan View	58
	Front View	59

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 87576233

Chapter 1 - Hydraulic Systems (Continued)

CONTENTS

Section	Description	Page
	Rear View	60
	Bottom View	61
	Left-hand (LH) View (Hidden Against Mounting Plate)	62
	HW325 Solenoid Engagement Chart	63
	Auxiliary Control Valve (Speed Control) Manifold (HW305/305S/325)	64
	Service Parts	64
	Valve Identification Codes	65
	Auxiliary Control Manifold	66
	Component Identification and Location	66
	Right-Hand (RH) View	66
	Plan View	67
	Bottom View	68
	Left-hand (LH) View (Hidden Against Mounting Plate)	69
	Header Control Valve Manifold (HW305/305S/325)	70
	Service Parts	70
	Valve Identification Codes	71
	Header Control Valve Manifold (HW305/305S)	72
	Component Identification and Location	72
	Right-hand (RH) View	72
	Front View	73
	Top View	74
	Header Control Manifold (HW325)	75
	HW325 Component Identification and Location	75
	Right-hand (RH) View	75
	Front View	76
	Top View	77
	Cartridge Valves (Solenoid-operated)	78
	Main Control Manifold Valves	79
	Two-way Two-position (Normally Closed) Poppet Valves	79
	Three-way Two-position Spool Valve	81
	Two-way Two-position (Normally Open) Poppet Valve	82
	(Normally Open) Pressure Reducing/Relieving Valves	83
	(Normally Open) Solenoid-operated Relief Valves	84
	(Normally Closed) Solenoid-operated Proportional Flow Control	84
	Replacement	85
	HW305/305S Main Manifold – Cartridge Torque Requirements	86
	HW325 Main Manifold – Cartridge Torque Requirements	87
	Installation	88

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 87576233

Chapter 1 - Hydraulic Systems (Continued)

CONTENTS

Section	Description	Page
	Solenoid Coils	89
	Removal	89
	Installation	89
	Cartridge Valves (Non-solenoid-operated)	90
	Direct-acting Flow Control Needle Valve	90
	Pilot-operated Relief Valve	91
	Differential-Pressure-Sensing Valve	92
	HW305/305S Header Control Manifold – Cartridge Torque Requirements	93
	HW325 Header Control Manifold – Cartridge Torque Requirements	94
	Needle Valve (AD) and Piloted Relief Valves	95
	Replacement	95
	Adjustment	95
	Minor Repairs	96
	Accumulators – Header Lift	96
	Removal	96
	Inspection	97
	Installation	97
	Accumulator Surge Suppression	99
	Specifications	99
	Hydraulic Accumulator Breakdown	100
	Checking Pre-Charge	101
	Pre-Charging Procedure	102
	Removal	103
	Installation	103
	Major Components	104
	Header Drive Pump	104
	Removal	104
	Inspection	105
	Installation	105
	Adjustment Instructions	106
	Header Drive System Pressure Adjustment (Valve L-30)	107
	Pump Flow	114
	Header Lift Pump	115
	Removal	115
	Disassembly	115
	Inspection	117
	Assembly	117
	Installation	120

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 87576233

Chapter 1 - Hydraulic Systems (Continued)

CONTENTS

Section	Description	Page
	Adjustment Instructions	121
	Header Lift System Pressure Adjustment (Valve L-03)	122
	Auxiliary Engine Mounted Hydraulic Pump (optional)	128
	Removal	128
	Inspection	128
	Installation	128
	Start-up Procedure	129
	Maintenance	130
	Cooling Circuit Bypass Pressure	131
	Temperatures	131
	Troubleshooting	132
	General	132
	Reduced System Pressure	132
	Reduced Hydraulic Flow	132
	Excessive Noise	132
	Overheating	132
	Power Loss	132
	Explanation of Terms Used In Failure Analysis	133
	Parts Evaluation	134
	Discoloration	134
	Scratches or Grooves	134
	Rework	134
	Repeat Failures	134
	Troubleshooting	135
	Header Drive System	135
	Header Drive Pump	138
	Header Drive Motor	139
	Service Techniques	140
	General	140
	Oil Level	140
	Hoses and Tubes	141
	O Ring Flat Face Seal Fittings	141
	O Ring Flat Face Seal Fitting Torque Values	141
	Adjustments	142
	Header Drive Motors	142
	Sauer-Danfoss Authorized Service Centers - North America	143
	Tilt Cylinder	147

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 87576233

Chapter 1 - Hydraulic Systems (Continued)

CONTENTS

Section	Description	Page
	Removal	147
	Inspection	151
	Assembly	151
Lift Cylinders		155
	Removal	155
	Inspection	159
	Assembly	159
Zero Leak Plugs		163
	Removal	163
	Replacement	163
Plug Torque Requirements		164
Zero-Leak Plug to SAE J514 ORB Plug Cross Reference		164
Hydraulic Reservoir Replacement - HW305 and HW305S		165
	Removal	165
	Installation	166
	Tank Preparation (Plastic Tanks only)	167
Hydraulic Reservoir Replacement - HW325		169
	Removal	169
	Installation	170
	Tank Preparation (Plastic Tanks only)	171

SECTION 44 - REAR AXLE

BOOK 3 - 87576233

Chapter 1 - Non-Suspended Rear Axle

CONTENTS

Section	Description	Page
	Introduction	2
	Overview	2
	Specifications	3
	Special Tools	3
	Description of Operation	4
	Extensions and Axle Tube	4
	Adjustments	3
	Wheel Width	8
	Channel Widths (Spindle to Spindle)	8
	Axle Extension Position	8
	Overhaul	9
	Wheel, Axle Shaft and Hub	9
	Removal	9
	Inspection	10
	Installation	12
	Axle Support Fork	15
	Removal	15
	Inspection	15
	Installation	16
	Rear Axle Extension	18
	Removal	18
	Inspection	19
	Installation	19
	Axle Tube and Center Pivot Pin	20
	Removal	20
	Inspection	21
	Installation	22
	Labor Guide	24

SECTION 44 - REAR AXLE

BOOK 3 - 87576233

Chapter 2 - Suspended Rear Axle

CONTENTS

Section	Description	Page
	Introduction	2
	Overview	2
	Special Tools	2
	Specifications	3
	Description of Operation	4
	Extensions and Axle Tubes	4
	Adjustments	7
	Wheel Width	7
	Extension Widths (Spindle to Spindle)	7
	Axle Extension Position	7
	Overhaul	8
	Wheel, Axle Shaft and Hub	8
	Removal	8
	Inspection	10
	Installation	11
	Axle Support Fork	13
	Removal	13
	Inspection	13
	Installation	14
	Extension	15
	Removal	15
	Inspection	16
	Installation	17
	Air Spring	18
	Removal	18
	Inspection	19
	Installation	20
	Axle Tubes and Pivot Pins	21
	Removal	21
	Inspection	22
	Installation	23
	Labor Guide	25

SECTION 50 - CLIMATE CONTROL

BOOK 3 - 87576233

Chapter 1 - Climate Control - HW305 and HW305S

CONTENTS

Section	Description	Page
	Specifications	4
	Special Tools	4
	Description of Operation	5
	The Basics of Refrigeration	5
	Air Conditioning Process	6
	R134a Refrigerant Information	7
	Refrigerant Ingredients	7
	Lubricants	7
	Refrigerant (R134a)	7
	System Components	11
	Compressor Pump	11
	Compressor Clutch (L-27)	11
	Air Conditioning Filter	11
	Condenser	12
	Receiver/Drier	12
	Expansion Valve	13
	Description	13
	Valve Components	13
	Operation	14
	Port Identification	17
	Evaporator	17
	Blower Fan	17
	Description of Operation - Climate Controls	18
	Switches and Controls	18
	Air Conditioner Temperature (Thermostatic) Control Switch	18
	Blower Fan Switch	18
	Compressor Protection Switches	19
	High-pressure Cutout Switch (S-40)	19
	Low-pressure Cutout Switch (S-69)	19

SECTION 50 - CLIMATE CONTROL

BOOK 3 - 87576233

Chapter 1 - Climate Control - HW305 and HW305S (Continued)

CONTENTS

Section	Description	Page
	Troubleshooting and Servicing Air Conditioning System	20
	General Safety and Service Precautions	20
	Cleanliness	21
	Preliminary Troubleshooting and Testing	21
	Operational Checks	21
	Diagnosis Charts - Air Conditioning System	22
	Test Procedure: Stabilizing the System	24
	Test Ports	24
	Pressure/Temperature Relationships	25
	Leak Testing	25
	Refilling	25
	Contaminants	26
	General	26
	Preventing Mixing of Service Equipment	26
	Refrigerant Extraction and Recycling Equipment	26
	Using Extraction Equipment	27
	Using Recycled Equipment	27
	Recycling vs. Reclaiming	27
	Containment of Air Conditioning Refrigerants	27
	Recovery	28
	Flushing	28
	Recharging/Refilling	28
	Using a Manifold Gauge Set	29
	Checking Refrigerant for Excess Air	29
	Containers for Storing Recycled Refrigerant	30
	Disposal of Empty or Near-Empty Disposable Containers	30
	Applicable SAE Standards	30
	Gauge Reading	31
	Manifold Gauge Readings and Interpretations	35
	Performance Test Examples	35
	Overhaul - Air Conditioning System	46
	Condenser	46

SECTION 50 - CLIMATE CONTROL

BOOK 3 - 87576233

Chapter 1 - Climate Control - HW305 and HW305S (Continued)

CONTENTS

Section	Description	Page
	Removal	46
	Inspection and Repair	46
	Installation	46
	Receiver/Drier	47
	Removal	47
	Installation	47
	High (S-40) and Low (S-69) Pressure Switches	47
	Removal	47
	Installation	47
	Blower Motor (M-20) and Fan Assembly	48
	Removal	48
	Inspection	48
	Installation	48
	Expansion Valve	49
	Removal	49
	Installation	49
	Evaporator Core	49
	Removal	49
	Inspection	49
	Installation	49
	Compressor and Clutch - Special Tools	50
	Compressor Clutch Components	50
	Removal	50
	Installation	51
	Overhaul - Compressor	51
	Clutch and seal replacement	51
	Removal	51
	Inspection and Assembly	55
	Labor Guide	60

SECTION 50 - CLIMATE CONTROL

BOOK 3 - 87576233

Chapter 2 - Climate Control - HW325

CONTENTS

Section	Description	Page
	Specifications	4
	Description of Operation	5
	The Basics of Refrigeration	5
	Air Conditioning Process	6
	R134a Refrigerant Information	7
	Refrigerant Ingredients	7
	Lubricants	7
	Refrigerant (R134a)	7
	Cab Air Flow	8
	System Components	10
	Compressor Pump	10
	Compressor Clutch (L-27)	10
	Air Conditioning Filters	11
	Removal/Replacement	11
	Recirculation Filter	13
	Removal	14
	Cleaning with Air	15
	Condenser	15
	Receiver/Drier	16
	Expansion Valve	17
	Valve Components	17
	Operation	18
	Port Identification	21
	Evaporator	21
	Blower Fan	21
	Description of Operation - Climate Controls	22
	Control Panel - Manual Temperature Control - (A-05)	22
	Blower Fan Switch	22
	Temperature Control Switch	22
	Control Panel - (ATC) Automatic Temperature Control (if equipped)	23
	Control Operation Specifications	23
	Celsius/Fahrenheit Button	24
	Compressor Protection Switches	25
	High-pressure Cutout Switch (S-40)	25
	Low-pressure Cutout Switch (S-69)	25

SECTION 50 - CLIMATE CONTROL

BOOK 3 - 87576233

Chapter 2 - Climate Control - HW325 (Continued)

CONTENTS

Section	Description	Page
	Troubleshooting and Servicing Air Conditioning System	26
	General Safety and Service Precautions	26
	Cleanliness	27
	Preliminary Troubleshooting and Testing	27
	Operational Checks	27
	ATC Troubleshooting Fault Code Chart	28
	Display Fault Codes	28
	Advanced Diagnostics	31
	Diagnosis Charts – Air Conditioning System	35
	Test Procedure: Stabilizing the System	39
	Test Ports	39
	Pressure/Temperature Relationships	40
	Leak Testing	40
	Refilling	40
	Contaminants	41
	General	41
	Preventing Mixing of Service Equipment	41
	Refrigerant Extraction and Recycling Equipment	41
	Using Extraction Equipment	42
	Using Recycled Equipment	42
	Recycling vs. Reclaiming	42
	Containment of Air Conditioning Refrigerants	42
	Recovery	43
	Flushing	43
	Recharging/Refilling	43
	Using a Manifold Gauge Set	44
	Checking Refrigerant for Excess Air	44
	Containers For Storing Recycled Refrigerant	45
	Disposal of Empty or Near-Empty Disposable Containers	45
	Applicable SAE Standards	45
	Gauge Readings	46
	Manifold Gauge Readings and Interpretations	50
	Performance Test Examples	50
	Overhaul	61
	Condenser	61
	Removal	61
	Inspection and Repair	61
	Installation	61
	Receiver/Drier	62
	Removal	62
	Installation	62

SECTION 50 - CLIMATE CONTROL

BOOK 3 - 87576233

Chapter 2 - Climate Control - HW325 (Continued)

CONTENTS

Section	Description	Page
	High (S-40) Pressure Switches	62
	Removal	62
	Installation	62
	Low (S-69) Pressure Switches	62
	Removal	62
	Installation	62
	Blower Motor	63
	Removal	63
	Inspection	65
	Assembly	66
	Installation	67
	Blower Fan Resistor	69
	Removal	69
	Installation	69
	Expansion Valve	69
	Removal	69
	Installation	69
	HVAC Cores	70
	Inspection and Cleaning	70
	Removal	70
	Heater Core and/or Evaporator Core	72
	Removal	72
	Inspection	73
	Installation	74
	Compressor and Clutch	77
	Compressor Clutch Components	77
	Removal	77
	Installation	78
	Checking Compressor Oil for Contamination	79
	Adding Compressor Oil	79
	Clutch Procedures	80
	Clutch Run-In	80
	Clutch Test	80
	Clutch Removal	80
	Clutch Inspection	82
	Clutch Installation	83
	Electrical Connection	84
	Tightening Torques	85
	Labor Guide	90

SECTION 55 - ELECTRICAL SYSTEMS

BOOK 4 - 87576234

Chapter 1 - General Information

CONTENTS

Section	Description	Page
	Introduction	3
	Troubleshooting	3
	Fault Codes and Fault Finding	4
	Electrical Terms and Equipment	5
	Definition	5
	Electrical System Components	7
	Electrical Components Chart	7
	Rocker Switches	13
	Momentary Rocker Switches	13
	Circuit Breakers	13
	Location of Circuit Breakers	14
	Fuses	16
	Fuse Panel Identification Tables	17
	Basic Circuitry/Component Testing	19
	Continuity Test for Open Circuits	19
	Continuity Test for Short to Ground	20
	Resistance Test for Electrical Components	21
	Measuring Voltage	22
	Diodes	23
	Test Procedure	23
	Electro-hydraulic Solenoid Valve Coils	24
	Test Procedure	24
	Operational Check	24
	Relays	25
	Test Procedure	26
	Welding on the Machine	26
	Wiring Harnesses and Connectors - All models	31
	Connectors	31
	Harness Splices	31
	Fuses, Relays and Switches	31
	Switch and Relay Contacts	31