

TK75VA, TK80A, TK80MA, TK90A, TK90MA, TK100A REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL	2
SECTION 10 - ENGINE	3
SECTION 18 - CLUTCH	6
SECTION 21 - TRANSMISSIONS	7
SECTION 27 - REAR MECHANICAL DRIVE	7
SECTION 31 - MECHANICAL POWER TAKE-OFF	9
SECTION 33 - BRAKING SYSTEM	10
SECTION 35 - HYDRAULIC SYSTEMS	11
SECTION 46 - STEERING CLUTCHES	13
SECTION 48 - SUSPENSION AND TRACKS	14
SECTION 55 - ELECTRICAL SYSTEM	15

The following pages are the collation of the contents pages from each section and chapter of the TKA Series Repair manual. Complete Repair part # 87582124.

The sections used through out all New Holland product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the TKA Series Tractors.

SECTION 00 - GENERAL

BOOK 1 - 87582125

Chapter 1 - General

CONTENTS

Section	Description	Page
	General Instructions	2
	Important Notice	2
	Shimming	2
	Rotating Shaft Seals	2
	O-Rings	2
	Sealers	2
	Bearings	2
	Spring Pins	2
	Precautionary Notice	3
	Equipment Notice	3
	Spare Parts Notice	3
	General Notices	3
	Health and Safety	4
	Health and Safety Precautions	4
	General Workshop Tools and Equipment	10
	Legal Aspects	10
	Lubricants and Greases	10
	Precautionary Statements	11
	Personal Safety	11
	Machine Safety	11
	Safety	12
	The Tractor	12
	Driving the Tractor	12
	Operating the Tractor	12
	Operating the PTO	13
	Servicing the Tractor	13
	Diesel Fuel	14
	ROPS	14
	Ecology and the Environment	15
	Tightening Torques	16
	Federal Emissions Warranty	18
	California Emission Control Warranty Statement	19
	Sample of manual. Download All 638 pages at: Lubricants	21
	https://www.arepairmanual.com/downloads/new-holland-tk75va-tk80a-tk80ma-tk90a-tk90ma-tk100a-tractor-service-repair-manual/	

SECTION 10 - ENGINE

BOOK 1 - 87582125

Chapter 1 - Engine

CONTENTS

Section	Description	Page
	Specifications	4
	Tightening Torques	24
	Special Tools	26
	Engine Cooling System Diagram	30
	Troubleshooting	31
	Engine Overhaul	35
	Engine	35
	Removal	35
	Installation	38
	Compression Test	39
	Disassembly	40
	Assembly	54
	Mounting the Balancing Device with Counter-rotating Weights	54
	Mounting the Tappets and Drive Shaft With Main Bearing Caps, Bearings and Thrust Rings	55
	Mounting the Rear Cover With Seal and Engine Flywheel	57
	Seal Installation	59
	Mounting the Pistons Complete With Rings, Pins, Connecting Rods, Big End Caps and Bearings – Checking Protrusion In Relation To Cylinder Block Face	60
	Synchronizing the Timing Gears	61
	Installing the Counter-rotating Weight Box to the Oil Sump	62
	Installing the Bosch Injection Pump	63
	Installing the Cylinder Head Gasket	64
	Installing and Tightening the Cylinder Head	64
	Valve / Rocker Arm Clearance Adjustment	65
	Installing Fuel Injectors	65
	Cooling System Belt Tension Adjustment	65
	Checks, Measurements and Repairs of Components	66
	Cylinder Block	66
	Crankshaft, Main Bearings and Flywheel	68
	Crankshaft	68

SECTION 10 - ENGINE

BOOK 1 - 87582125

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
	Bearings	70
	Flywheel	71
	Connecting Rods	72
	Pistons	73
	Camshaft, Tappets and Valves	76
	Valves	76
	Tappets	76
	Camshaft	77
	Cylinder Head	79
	Valve Guides	80
	Valve Seats In Cylinder Head	83
	Injector Sleeves	84
	Cylinder Head Bolts	85
	Counterweight Balancer	86
	Lubrication System Maintenance	87
	Engine Oil Pump Servicing	87
	Low Oil Pressure Indicator	88
	Cooling System Maintenance	88
	Radiator Servicing	88
	Testing Cooling System Thermometer	89
	Replacing the Thermostat	89
	Drive Belts Tension Adjustment	89
	Radiator	90
	Removal	90
	Installation	92
	Crankshaft Front Oil Seal	93
	Removal	93
	Installation	96
	Valve-Rocker Arm Clearance	97
	Rear Fuel Tank	100
	Removal	100
	Installation	102

SECTION 10 - ENGINE

BOOK 1 - 87582125

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
	Front Fuel Tank	103
	Removal	103
	Installation	104
	Injectors	105
	Removal	105
	Installation	106
	Bosch Injection Pump	107
	Removal	107
	Installation	111
	Timing	112
	Air Bleeding	114
	Timing Injection Pump Off the Tractor	115
	Installing the Injection Pump Onto the Engine	120
	Turbocharged Diesel Engine -	
	TK75VA, TK90A, TK90MA, TK100A Models	121
	Exhaust Pipe	124
	Removal	124
	Installation	124
	Coolant Pump	125
	Removal	125
	Installation	126
	Disassembly	127
	Assembly	127
	Thermostatic Valve	128
	Removal	128
	Installation	129
	Coolant Pump and Alternator Drive Belt	130
	Tension Adjustment	130

SECTION 18 - CLUTCH

BOOK 1 - 87582125

Chapter 1 - Clutch

CONTENTS

Section	Description	Page
	Specifications	2
	Torque Settings	3
	Special Tools	4
	Sectional Views	7
	Troubleshooting	8
	Adjustments	9
	Power Take-Off (PTO) Clutch	9
	Lever Adjustment	9
	Main Clutch	10
	Lever Adjustment	10
	Overhaul	11
	Clutch	11
	Removal	11
	Installation	22
	Dual Disk Clutch 11.5"	24
	Disassembly	24
	Assembly	29
	PTO Clutch Adjustment	30
	Main Clutch Adjustment	31

SECTION 21 - TRANSMISSIONS

BOOK 1 - 87582125

Chapter 1 - 8 x 8 Transmission with Non-synchronized Mechanical Shuttle

CONTENTS

Section	Description	Page
	Specifications	2
	Shuttle	2
	Gearbox and Range Gear	2
	Tightening Torques	3
	Special Tools	5
	Description and Operation	9
	Sectional Views	9
	Gearbox and Shuttle	12
	Troubleshooting	12
	Overhaul	13
	Rear Transmission Housing - Gearbox	13
	Disassembly	13
	Assembly	18
	Gearbox Driving Shaft Clearance Adjustment	21

SECTION 27 - REAR MECHANICAL DRIVE

BOOK 2 - 87582126

Chapter 1 - Rear Mechanical Drive

CONTENTS

Section	Description	Page
	Specifications	2
	Lateral Final Drives	2
	Torque Settings	3
	Special Tools	5
	Description and Operation	10
	Sectional Views	10

SECTION 27 - REAR MECHANICAL DRIVE

BOOK 2 - 87582126

Chapter 1 - Rear Mechanical Drive (Continued)

CONTENTS

Section	Description	Page
	Troubleshooting	13
	Bevel Gear	13
	Final Drive	13
	Overhaul	14
	Rear Transmission-Gearbox Housing (Model TK75VA)	14
	Removal-Installation	14
	Rear Transmission-Gearbox Housing (Models TK80A, TK90A, and TK100A)	34
	Removal	34
	Installation	49
	Bevel Gear	51
	Disassembly	51
	Adjustments	51
	Assembly	56
	Left-Hand Final Drive Casing (Model TK75VA)	57
	Removal-Installation	57
	Left-Hand Final Drive Casing (Models TK80A, TK90A, and TK100A)	68
	Removal	68
	Installation	75
	Final Drive Driven Gear	77
	Removal	77
	Installation	78

SECTION 31 - MECHANICAL POWER TAKE-OFF

BOOK 2 - 87582126

Chapter 1 - Mechanical Power Take-Off System

CONTENTS

Section	Description	Page
	Specifications	2
	Torque Settings	3
	Special Tools	4
	Description and Operation	6
	Sectional Views	6
	Troubleshooting	8
	Overhaul	8
	Mechanical PTO	8
	Removal	8
	Installation	12
	Disassembly	13
	Assembly	15

SECTION 33 - BRAKING SYSTEM

BOOK 2 - 87582126

Chapter 1 - Braking System

CONTENTS

Section	Description	Page
	Specifications	2
	Tightening Torques	3
	Special Tools	4
	Sectional Views	7
	Description and Operation	11
	Service Brakes	11
	Parking Brake	11
	Troubleshooting	11
	Adjustments	12
	Brake Unit	12
	Removal	12
	Installation	13
	Steering Clutch Right or Left-Hand Hub Seal	15
	Removal	15
	Installation	15
	Braking Unit Hydraulic Actuator	16
	Removal	16
	Disassembly	18
	Assembly	18
	Installation	18
	Pressure Adjustment for the Left or Right Brake Actuator Assembly	18

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 2 - 87582126

Chapter 1 - Rear Mechanical Hydraulic Lift

CONTENTS

Section	Description	Page
	Specifications	2
	Implement Hitching Device	4
	Hydraulic Pump	4
	Torque Settings	5
	Special Tools	7
	Description and Operation	9
	Sectional Views	10
	Lift Oil Flow	12
	Troubleshooting	15
	Hydraulic Lift (model TK75VA)	17
	Removal-Refitting	17
	Installation	24
	Hydraulic Lift (models TK80A, TK90A, and TK100A)	26
	Removal-Refitting	26
	Installation	37
	Disassembly	39
	Assembly	42
	Lift Adjustment	44
	Rod Mechanism Adjustments	50
	Lift Control Valve	53
	Removal	53
	Installation	57
	Disassembly	58
	Installation	62

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 2 - 87582126

Chapter 2 - Auxiliary Control Valves

CONTENTS

Section	Description	Page
	Specifications	2
	Torque Settings	2
	Sectional Views	3
	Special Tools	6
	Description and Operation	6
	Lifting	9
	Lowering	9
	Float Operation	10
	Overhaul	11
	Auxiliary Control Valves	11
	Removal	11
	Installation	13
	Disassembly	13
	Assembly	15
	Valve Leakage Test	16
	Adjustment of the Automatic Detent Release Pressure	16
	Flow Control Valve	17
	Disassembly	17
	Flow Control Adjustment	18

SECTION 46 - STEERING CLUTCHES

BOOK 2 - 87582126

Chapter 1 - Steering Clutches

CONTENTS

Section	Description	Page
	Specifications	2
	Torque Settings	4
	Special Tools	5
	Sectional Views	8
	Description and Operation	12
	Steering Clutches	12
	Operation	12
	Troubleshooting	12
	Overhaul	13
	Steering Clutches	13
	Removal	13
	Disassembly	13
	Assembly	14
	Installation	15
	Steering Clutches Internal Control	16
	Removal	16
	Disassembly	16
	Assembly	17
	Installation	17
	Steering Clutches Hydraulic Control Valve	18
	Removal	18
	Installation	19
	Disassembly	20
	Assembly	22
	Steering Clutch Pressure Adjustment	23

SECTION 48 - SUSPENSION AND TRACKS

BOOK 3 - 87582127

Chapter 1 - Suspension and Tracks

CONTENTS

Section	Description	Page
	Specifications	3
	Tightening Torques	9
	Special Tools	15
	Sectional Views	16
	Overhaul	21
	Chains	21
	Tension Adjustment	21
	Removal	22
	Installation	23
	Shoes	24
	Removal	24
	Installation	24
	Link	25
	Removal	25
	Installation	26
	Front Suspension	27
	Removal	27
	Installation	27
	Disassembly	28
	Assembly	28
	Rear Suspension	29
	Removal	29
	Installation	30
	Chain Tightener Wheel	32
	Removal	32
	Installation	33
	Chain Tightener Wheel with Bushings	34
	Disassembly	34
	Assembly	35
	Chain Tightener Wheel with Ball Bearings	36
	Disassembly	36
	Assembly	37

SECTION 48 - SUSPENSION AND TRACKS

BOOK 3 - 87582127

Chapter 1 - Suspension and Tracks (Continued)

CONTENTS

Section	Description	Page
	Chain Tightener Device	39
	Removal	39
	Installation	39
	Disassembly	40
	Assembly	40
	Support Rollers	41
	Removal	41
	Installation	42
	Disassembly	44
	Assembly	45
	Supporting Roller	46
	Removal	46
	Installation	46
	Disassembly	47
	Assembly	47

SECTION 55 - ELECTRICAL SYSTEM

BOOK 3 - 87582127

Chapter 1 - Instruments

CONTENTS

Section	Description	Page
	Description and Operation	2
	Analog Instrument Panel for Model TK75VA	2
	Analog Instrument Panel for Model TK80A, TK90A, and TK100A	3
	Fuel Gauge	4
	Rev Counter	4
	Engine Cooling Liquid Temperature Indicator	4
	Transmitters, Sensors and Switches	5

SECTION 55 - ELECTRICAL SYSTEM

BOOK 3 - 87582127

Chapter 2 - Components

CONTENTS

Section	Description	Page
	Description and Operation	2
	Central Console Panel	2
	Analog Control Panel	2
	Hazard Warning Lights Switch	3
	Lights/Horn Switch	3
	Side/tail Lights	3
	Dipped Beam Headlights	3
	Full Beam Headlights	3
	Horn	4
	Swivel Lights Switch	4
	Direction Indicators Switch	4
	Central Console Controls	5
	Starter Key Switch	5
	Thermostart Pushbutton	5
	Bulb Replacement	6
	Front Head Lamp	6
	Front Sidelight and Direction Indicator Lamp	7
	Work Light Bulbs On Tractors With Roll Bar	7
	Rear Sidelights, Brake and Direction Indicator Light	8

SECTION 55 - ELECTRICAL SYSTEM

BOOK 3 - 87582127

Chapter 3 - Starting System

CONTENTS

Section	Description	Page
	Specifications	2
	Tightening Torques	2
	Description and Operation	3
	System Testing	5
	Starting System Test on Tractor	5
	Current Absorbed on the Starter Motor Circuit	5
	Starting System Circuit Resistance (Voltage Drop)	6
	Positive Battery Cable	6
	Starter Motor Ground Connections	6
	Battery Ground Lead	6
	Overhaul	7
	Starter Motor	7
	Installation	7
	Assembly	8
	Bench Tests	9

SECTION 55 - ELECTRICAL SYSTEM

BOOK 3 - 87582127

Chapter 4 - Charging System

CONTENTS

Section	Description	Page
	Specifications	2
	Torque Settings	2
	Description and Operation	3
	System Testing and Troubleshooting	5
	Precautions	5
	Preliminary Checks	5
	Preliminary Tests	5
	Alternator Wire Connection Tests	6
	Alternator Charging Current and Regulated Voltage	6
	Voltage Drops in the Alternator Charging Circuit	7
	Alternator Component Tests	8
	Overhaul	9
	Alternator	9
	Removal	9
	Testing Before Disassembly	10
	Rotor and Regulator Field Circuit Test	10
	Checking the Continuity of Three Stator Windings	11
	Checking the Diodes	12
	Excitation Diodes Test	12
	Positive Power Diode Tests	13
	Negative Power Diode Tests	13
	Rotor	13
	Check on Rotor Winding Resistance Measured Between Pins Connected to Brushes	13
	Disassembly	14
	Assembly	17
	Repair	17
	Installation	17

SECTION 55 - ELECTRICAL SYSTEM

BOOK 3 - 87582127

Chapter 5 - Battery

CONTENTS

Section	Description	Page
	Specifications	2
	Description and Operation	2
	Overhaul	3
	Battery	3
	Removal	3
	Installation	3
	Battery Maintenance	4
	Relative Density	4
	Battery Servicing	4
	Dry-charged Batteries	5
	Charging the Battery	5
	Normal charging (Top Off)	5
	Charging Extremely Flat Batteries	5
	Battery Testing	6
	Performance Test	6
	Battery Problems - Causes	7

SECTION 55 - ELECTRICAL SYSTEM

BOOK 3 - 87582127

Chapter 6 - Electrical Circuits

CONTENTS

Section	Description	Page
	Electrical Circuit Components	3
	Location of Components	5
	Main Wiring	7
	Fuses and Relays	8
	Fusebox	8
	Relays	10
	Symbols Used In Electrical Circuits	11

SECTION 55 - ELECTRICAL SYSTEM

BOOK 3 - 87582127

Chapter 6 - Electrical Circuits (Continued)

CONTENTS

Section	Description	Page
	Wire Color Coding	12
	Wiring Diagrams and Connections Identification Code	12
	Connectors	13
	Electrical Circuits	17
	Starter and Recharging Circuit	19
	Operator Safety Circuit	26
	Sensors And Transmitters Circuit	32
	Horn, Power Socket and Seven Pole Coupling Circuit	37
	Diagnostics	43
	Power Supply - Battery	44
	Starter Motor	45
	Starter Switch	49
	Thermostarter Push-Button	50
	Engine Stop Electromagnet	52
	Alternator	54
	Operator Safety Circuit	57
	Horn and Power Socket	62
	Tale/Side Lights	64
	Number Plate Light	67
	Dipped Beam Headlights	68
	Full Beam Headlights	70
	Full Beam Headlights Indicator Lamp	72
	Hazard and Direction Indicator Lights	73
	Swivel Position Lights	77
	Work Lights	79
	Instruments	80
	Engine Coolant Temperature Sensor	82
	Fuel Level Transmitter	84
	Engine Oil Pressure Sensor	86
	Air Filter Clogged Sensor	88
	Water Sediment in Fuel Filter Sensor	90
	Checking Procedure for Sensors and Transmitters Circuits to Ground	92

SECTION 00 - GENERAL

Chapter 1 - General

CONTENTS

Section	Description	Page
General Instructions	2
Important Notice	2
Shimming	2
Rotating Shaft Seals	2
O-Rings	2
Sealers	2
Bearings	2
Spring Pins	2
Precautionary Notice	3
Equipment Notice	3
Spare Parts Notice	3
General Notices	3
Health and Safety	4
Health and Safety Precautions	4
General Workshop Tools and Equipment	10
Legal Aspects	10
Lubricants and Greases	10
Precautionary Statements	11
Personal Safety	11
Machine Safety	11
Safety	12
The Tractor	12
Driving the Tractor	12
Operating the Tractor	12
Operating the PTO	13
Servicing the Tractor	13
Diesel Fuel	14
ROPS	14
Ecology and the Environment	15
Tightening Torques	16
Federal Emissions Warranty	18
California Emission Control Warranty Statement	19
Lubricants	21

GENERAL INSTRUCTIONS

▲ WARNING ▲

All maintenance and repair work described in this manual must be performed exclusively by NEW HOLLAND service technicians in strict accordance with the instructions given and using any specific tools necessary.

▲ WARNING ▲

Anyone who performs the operations described herein without strictly following the instructions is personally responsible for resulting injury or damage to property.

▲ WARNING ▲

The Manufacturer and all organizations belonging to the Manufacturer's distribution network, including but not restricted to national, regional or local distributors, will accept no responsibility for personal injury or damage to property caused by abnormal function of parts and/or components not approved by the Manufacturer, including those used for maintenance and/or repair of the product manufactured or marketed by the Manufacturer. In any case, the product manufactured or marketed by the Manufacturer is covered by no guarantee of any kind against personal injury or damage to property caused by abnormal function of parts and/or components not approved by the Manufacturer.

IMPORTANT NOTICE

All maintenance and repair operations described in this manual should be carried out exclusively by the authorized workshops. All instructions detailed should be carefully observed and special equipment indicated should be used if necessary.

Everyone who carries out service operations described without carefully observing these prescriptions will be directly responsible of deriving damages.

SHIMMING

At each adjustment, select adjusting shims, measure them individually using a micrometer and then sum up recorded values. Do not rely on measuring the whole shimming set, which may be incorrect, or on the rated value indicated for each shim.

ROTATING SHAFT SEALS

To correctly install rotating shaft seals, observe the following instructions:

- Let the seal soak into the same oil as it will seal for at least half an hour before mounting.

- Thoroughly clean the shaft and ensure that the shaft working surface is not damaged.
- Place the sealing lip towards the fluid. In case of a hydrodynamic lip, consider the shaft rotation direction and orient grooves in order that they deviate the fluid towards the inner side of the seal.
- Coat the sealing lip with a thin layer of lubricant (oil rather than grease) and fill the gap between the sealing lip and the dust lip of double lip seals with grease.
- Insert the seal into its seat and press it down using a flat punch. Do not tap the seal with a hammer or a drift.
- Take care to insert the seal perpendicularly to its seat while you are pressing it. Once the seal is settled, ensure that it contacts the thrust element, if required.
- To prevent damaging the sealing lip against the shaft, place a suitable protection during installation.

O-RINGS

Lubricate the O-rings before inserting them into their seats. This will prevent the O-rings from roll over and twisting during mounting, which will jeopardize sealing.

SEALERS

Apply silicone/gasket eliminator over the mating surfaces marked with an X.

Before applying the sealer, prepare the surface as follows:

- Remove possible scales using a metal brush.
- Thoroughly degrease the surfaces using one of the following cleaning agents: trichlorethylene, diesel fuel or a water and soda solution.

BEARINGS

It is advisable to heat the bearings to 80° to 90°C (176° to 194°F) before mounting them on their shafts and cool them down before inserting them into their seats with external tapping.

SPRING PINS

When mounting split socket spring pins, ensure that the pin notch is oriented in the direction of the effort to stress the pin.

Spiral spring pins should not be oriented during installation.

GENERAL INSTRUCTIONS *(continued)*

PRECAUTIONARY NOTICE

Only authorized workshops should carry out maintenance and repair operations on the tractor, or tractor components. Carefully observe all instructions, safety precautions, and the use of equipment such as special tools, as detailed in this manual. Damage to the tractor, or injury to personnel is the direct responsibility of anyone who fails to observe these precautions.


EQUIPMENT NOTICE

The equipment proposed in this manual is:

- Designed and studied expressly for use on New Holland tractors
- Necessary for adequate and reliable repair of the tractor
- Strictly tested for the efficient and long lasting life cycle of the tractor

SPARE PARTS NOTICE

Genuine NEW HOLLAND spare parts guarantee the same quality, safety and life cycle as original components. These parts bear the logo:

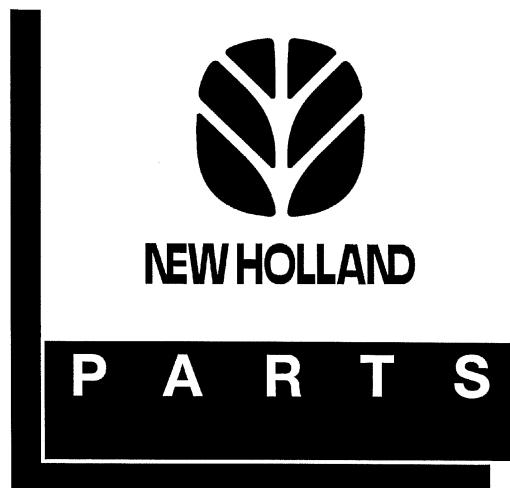

GENERAL NOTICES

In this manual, the description 'FRONT', 'REAR', 'RIGHT-HAND' and 'LEFT-HAND' refer to the view seen by the operator while in the operator's seat, looking in the direction in which the tractor normally moves.

Wear limits detailed in this manual, although advised, are not binding.

HEALTH AND SAFETY

CONTENTS

Description	Page
HEALTH AND SAFETY PRECAUTIONS	5
ACIDS AND ALKALIS	6
ADHESIVES AND SEALERS - see Fire	6
ANTIFREEZE - see Fire, Solvents e.g. Isopropanol, Ethylene Glycol, Methanol	6
ARC WELDING - see Welding	7
BATTERY ACIDS - see Acids and Alkalies	7
BRAKE AND CLUTCH FLUIDS (Polyalkylene Glycols) - see Fire	7
BRAZING - see Welding	7
CHEMICAL MATERIALS - GENERAL - see Legal Aspects	7
DO'S	7
DO NOTS	8
CORROSION PROTECTION MATERIALS - see Solvents, Fire	8
DUSTS	8
ELECTRIC SHOCK	8
EXHAUST FUMES	9
FIBER INSULATION - see Dusts	9
FIRE - see Welding, Foams, Legal Aspects	9
FIRST AID	9
FOAMS - Polyurethane - see Fire	9
FUELS - see Fire, Legal Aspects, Chemicals - General, Solvents	10
GAS CYLINDERS - see Fire	10
GENERAL WORKSHOP TOOLS AND EQUIPMENT	11
LEGAL ASPECTS	11
LUBRICANTS AND GREASES	11

HEALTH AND SAFETY PRECAUTIONS

Many of the procedures associated with vehicle maintenance and repair involve physical hazards or other risks to health. This section lists, alphabetically, some of these hazardous operations and the materials and equipment associated with them. The precautions necessary to avoid these hazards are identified.

The list is not exhaustive and all operations and procedures and the handling of materials, should be carried out with health and safety in mind.

ACIDS AND ALKALIS - see Battery acids, e.g. caustic soda, sulfuric acid.

Used in batteries and cleaning materials.

Irritant and corrosive to the skin, eyes, nose and throat. Causes burns.

Avoid splashes to the skin, eyes and clothing. Wear suitable protective gloves and goggles. Can destroy ordinary protective clothing. Do not breathe mists.

Ensure access to water and soap is readily available for splashing accidents.

ADHESIVES AND SEALERS - see Fire

Highly Flammable, Flammable, combustible.

Generally should be stored in "No Smoking" areas; cleanliness and tidiness in use should be observed, e.g. disposable paper covering benches; should be dispensed from applicators where possible; containers, including secondary containers, should be labelled.

Solvent based Adhesives/Sealers - See Solvents.

Follow manufacturers instructions.

Water based Adhesives/Sealers

Those based on polymer emulsions and rubber lattices may contain small amounts of volatile toxic and harmful chemicals. Skin and eye contact should be avoided and adequate ventilation provided during use.

Follow manufacturers instructions.

Resin based Adhesives/Sealers - e.g. epoxide and formaldehyde resin based.

Mixing should only be carried out in well ventilated areas as harmful or toxic volatile chemicals may be released.

Skin contact with uncured resins and hardeners can result in irritation; dermatitis and absorption of toxic or harmful chemicals through the skin. Splashes can damage the eyes.

Provide adequate ventilation and avoid skin and eye contact. Follow manufacturers instructions.

Anaerobic, Cyanoacrylate and other Acrylic Adhesives

Many are irritant, sensitizing or harmful to the skin. Some are eye irritants.

Skin and eye contact should be avoided and the manufacturers instructions followed.

Cyanoacrylate adhesives (super glues) must not contact the skin or eyes. If skin or eye tissue is bonded, cover with a clean moist pad and get medical attention. Do not attempt to pull tissue apart. Use in well ventilated areas as vapors can cause irritation of the nose and eyes.

For two-pack systems, see Resin based adhesives/sealers.

Isocyanate (Polyurethane) Adhesives/Sealers - see Resin based Adhesives.

Individuals suffering from asthma or respiratory allergies should not work with or near these materials as sensitivity reactions can occur.

Any spraying should preferably be carried out in exhaust ventilated booths, removing vapors and spray droplets from the breathing zone. Individuals working with spray applications should wear supplied air respirators.

ANTIFREEZE - see Fire, Solvents e.g. Isopropanol, Ethylene Glycol, Methanol.

Highly Flammable, Flammable, Combustible.

Used in vehicle coolant systems, brake air pressure systems, screenwash solutions.

Vapors given off from coolant antifreeze (glycol) arise only when heated.

Antifreeze may be absorbed through the skin in toxic or harmful quantities. Antifreeze if swallowed is fatal and medical attention must be found immediately.

ARC WELDING - see Welding.

BATTERY ACIDS - see Acids and Alkalies.

Gases released during charging are explosive. Never use naked flames or allow sparks near charging or recently charged batteries.

**BRAKE AND CLUTCH FLUIDS
(Polyalkylene Glycols)** - see Fire.

Combustible.

Splashes to the skin and eyes are slightly irritating. Avoid skin and eye contact as far as possible. Inhalation of vapors hazards do not arise at ambient temperatures because of the very low vapors pressure.

BRAZING - see Welding.

CHEMICAL MATERIALS - GENERAL - see Legal Aspects.

Chemical materials such as solvents, sealers, adhesives, paints, resin foams, battery acids, antifreeze, brake fluids, oils and grease should always be used with caution and stored and handled with care. They may be toxic, harmful, corrosive, irritant or highly inflammable and give rise to hazardous fumes and dusts.

The effects of excessive exposure to chemicals may be immediate or delayed; briefly experienced or permanent; cumulative; superficial; life threatening; or may reduce life-expectancy.

DO'S

Do remove chemical materials from the skin and clothing as soon as practicable after soiling. Change heavily soiled clothing and have it cleaned.

Do carefully read and observe hazard and precaution warnings given on material containers (labels) and in any accompanying leaflets, poster or other instructions. Material health and safety data sheets can be obtained from Manufacturers.

Do organize work practices and wear protective clothing to avoid irritation of the skin and eyes; breathing vapors/aerosols/dusts/fumes; inadequate container labelling; fire and explosion hazards.

Do wash before job breaks; before eating, smoking, drinking or using toilet facilities when handling chemical materials.

Do keep work areas clean, uncluttered and free of spills.

Do store according to national and local regulations.

Do keep chemical materials out of reach of children.

DO NOTS

Do Not mix chemical materials except under the manufacturers instructions; some chemicals can form other toxic or harmful chemicals; give off toxic or harmful fumes; be explosive when mixed together.

Do Not spray chemical materials, particularly those based on solvents, in confined spaces e.g. when people are inside a vehicle.

Do Not apply heat or flame to chemical materials except under the manufacturers' instructions. Some are highly inflammable and some may release toxic or harmful fumes.

Do Not leave containers open. Fumes given off can build up to toxic, harmful or explosive concentrations. Some fumes are heavier than air and will accumulate in confined areas, pits etc.

Do Not transfer chemical materials to unlabeled containers.

Do Not clean hands or clothing with chemical materials. Chemicals, particularly solvents and fuels will dry the skin and may cause irritation with dermatitis. Some can be absorbed through the skin in toxic or harmful quantities.

Do Not use emptied containers for other materials, except when they have been cleaned under supervised conditions.

Do Not sniff or smell chemical materials. Brief exposure to high concentrations of fumes can be toxic or harmful.

Clutch Fluids - see Brake and Clutch Fluids.

Clutch Linings and Pads - see Brake and Clutch Linings and Pads.

CORROSION PROTECTION MATERIALS -

see Solvents, Fire.

Highly flammable, flammable.

These materials are varied and the manufacturers instructions should be followed. They may contain solvents, resins, petroleum products etc. Skin and eye contact should be avoided. They should only be sprayed in conditions of adequate ventilation and not in confined spaces.

Cutting - see Welding.

De-Waxing - see Solvents and Fuels (Kerosene).

DUSTS

Powder, dusts or clouds may be irritant, harmful or toxic. Avoid breathing dusts from powdery chemical materials or those arising from dry abrasion operations. Wear respiratory protection if ventilation is inadequate.

ELECTRIC SHOCK

Electric shocks can result from the use of faulty electrical equipment or from the misuse of equipment even in good condition.

Ensure that electrical equipment is maintained in good condition and frequently tested.

Ensure that flexes, cables, plugs and sockets are not frayed, kinked, cut, cracked or otherwise damaged.

Ensure that electric equipment is protected by the correct rated fuse.

Never misuse electrical equipment and never use equipment which is in any way faulty. The results could be fatal.

Use reduced voltage equipment (110 volt) for inspection and working lights where possible.

Ensure that the cables of mobile electrical equipment cannot get trapped and damaged, such as in a vehicle hoist.

Use air operated mobile equipment where possible in preference to electrical equipment.

In cases of electrocution:

- Switch off electricity before approaching victim.
- If this is not possible, push or drag victim from source of electricity using dry non-conductive material.
- Commence resuscitation if trained to do so.
- SUMMON MEDICAL ASSISTANCE.

EXHAUST FUMES

These contain asphyxiating, harmful and toxic chemicals and particles such as carbon oxides, nitrogen oxides, aldehydes, lead and aromatic hydrocarbons. Engines should only be run under conditions of adequate extraction or general ventilation and not in confined spaces.

Gasoline (Petrol) Engine

There may not be adequate warning properties of odor or irritation before immediate and delayed toxic or harmful effects arise.

Diesel Engine

Soot, discomfort and irritation usually give adequate warning of hazardous fume concentrations.

FIBER INSULATION – see Dusts.

Used in noise and sound insulation.

The fibrous nature of surfaces and cut edges can cause skin irritation. This is usually a physical and not a chemical effect.

Precautions should be taken to avoid excessive skin contact through careful organization of work practices and the use of gloves.

FIRE – see Welding, Foams, Legal Aspects.

Many of the materials found on or associated with the repair of vehicles are highly flammable. Some give off toxic or harmful fumes if burnt.

Observe strict fire safety when storing and handling flammable materials or solvents, particularly near electrical equipment or welding processes.

Ensure before using electrical or welding equipment that there is no fire hazard present.

Have a suitable fire extinguisher available when using welding or heating equipment.

FIRST AID

Apart from meeting any legal requirements it is desirable for someone in the workshop to be trained in first aid procedures.

Splashes in the eye should be flushed with clean water for at least ten minutes.

Soiled skin should be washed with soap and water.

Inhalation affected individuals should be removed to fresh air immediately.

If swallowed or if effects persist consult a doctor with information (label) on material used.

Do not induce vomiting (unless indicated by manufacturer).

FOAMS - Polyurethane – see Fire.

Used in sound and noise insulation. Cured foams used in seat and trim cushioning.

Follow manufacturers instructions.

Unreacted components are irritating and may be harmful to the skin and eyes. Wear gloves and goggles.

Individuals with chronic respiratory diseases, asthma, bronchial medical problems or histories of allergic diseases should not work with or near uncured materials.

The components, vapors, spray mists can cause direct irritation, sensitivity reactions and may be toxic or harmful.

Vapors and spray mists must not be breathed. These materials must be applied with adequate ventilation and respiratory protection. Do not remove respirator immediately after spraying, wait until vapors/ mists have cleared.

Burning of the uncured components and the cured foams can generate toxic and harmful fumes.

Smoking, open flames or the use of electrical equipment during foaming operations and until vapors/mists have cleared should not be allowed. Any heat cutting of cured foams or partially cured foams should be conducted with extraction ventilation.

FUELS - see Fire, Legal Aspects, Chemicals - General, Solvents.

Used as fuels and cleaning agents.

Gasoline (Petrol)

Highly flammable.

Swallowing can result in mouth and throat irritation and absorption from the stomach can result in drowsiness and unconsciousness. Small amounts can be fatal to children. Aspiration of liquid into the lungs, e.g. through vomiting, is a very serious hazard.

Gasoline dries the skin and can cause irritation and dermatitis on prolonged or repeated contact. Liquid in the eye causes severe smarting.

Motor gasoline may contain appreciable quantities of benzene, which is toxic upon inhalation and the concentrations of gasoline vapors must be kept very low. High concentrations will cause eye, nose and throat irritation, nausea, headache, depression and symptoms of drunkenness. Very high concentrations will result in rapid loss of consciousness.

Ensure there is adequate ventilation when handling and using gasoline. Great care must be taken to avoid the serious consequences of inhalation in the event of vapor build up arising from spillages in confined spaces.

Special precautions apply to cleaning and maintenance operations on gasoline storage tanks.

Gasoline should not be used as a cleaning agent. It must not be siphoned by mouth.

Kerosene (Paraffin)

Used also as heating fuel, solvent and cleaning agent.

Flammable.

Irritation of the mouth and throat may result from swallowing. The main hazard from swallowing arises

if liquid aspiration into the lungs occurs. Liquid contact dries the skin and can cause irritation or dermatitis. Splashes in the eye may be slightly irritating.

In normal circumstances the low volatility does not give rise to harmful vapors. Exposure to mists and vapors from kerosene at elevated temperatures should be avoided (mists may arise in de-waxing). Avoid skin and eye contact and ensure there is adequate ventilation.

Gas-Oil (Diesel Fuel) - see Fuels (Kerosene).

Combustible.

Gross or prolonged skin contact with high boiling gas oils may also cause serious skin disorders including skin cancer.

GAS CYLINDERS - see Fire.

Gases such as oxygen, acetylene, carbon dioxide, argon and propane are normally stored in cylinders at pressures of up to 2000 lb/sq in (13,790 kg/m²) and great care should be taken in handling these cylinders to avoid mechanical damage to them or to the valve gear attached. The contents of each cylinder should be clearly identified by appropriate markings.

Cylinders should be stored in well ventilated enclosures, and protected from ice and snow, or direct sunlight. Fuel gases (e.g. acetylene and propane) should not be stored in close proximity to oxygen cylinders.

Care should be exercised to prevent leaks from gas cylinders and lines, and to avoid sources of ignition.

Only trained personnel should undertake work involving gas cylinders.

Gases - see Gas Cylinders.

Gas Shielded Welding - see Welding.

Gas Welding - see Welding.

GENERAL WORKSHOP TOOLS AND**I/ EQUIPMENT**

It is essential that all tools and equipment are maintained in good condition and the correct safety equipment used where required.

Never use tools or equipment for any purpose other than that for which they were designed.

Never overload equipment such as hoists, jacks, axle and chassis stands or lifting slings. Damage caused by overloading is not always immediately apparent and may result in a fatal failure the next time that the equipment is used.

Do not use damaged or defective tools or equipment, particularly high speed equipment such as grinding wheels. A damaged grinding wheel can disintegrate without warning and cause serious injury.

Wear suitable eye protection when using grinding, chiselling or sand blasting equipment.

Wear a suitable breathing mask when using sand blasting equipment, working with asbestos based materials or using spraying equipment.

Glues - see Adhesives and Sealers.

High Pressure Air, Lubrication and Oil Test Equipment - see Lubricants and Greases.

Always keep high pressure equipment in good condition and regularly maintained, particularly at joints and unions.

Never direct a high pressure nozzle at the skin as the fluid may penetrate to the underlying tissue etc. and cause serious injury.

LEGAL ASPECTS

Many laws and regulations make requirements relating to health and safety in the use of materials and equipment in workshops.

Workshops should be familiar, in detail, with these and associated laws and regulations. Consult local regulatory agencies if in any doubt.

LUBRICANTS AND GREASES

Avoid all prolonged and repeated contact with mineral oils, especially used oils. Used oils contaminated during service (e.g. routine service change sump oils) are more irritating and more likely to cause serious effects including skin cancer in the event of gross and prolonged skin contact.

Wash skin thoroughly after work involving oil. Over-the-counter hand cleaners may be of value provided they can be removed from the skin with water. Do not use gasoline, paraffin or other solvents to remove oil from the skin.

Lubricants and greases may be slightly irritating to the eyes.

Repeated or prolonged skin contact should be avoided by wearing protective clothing if necessary. Particular care should be taken with used oils and greases containing lead. Do not allow work clothing to be contaminated with oil. Dry clean or launder such clothing at regular intervals. Discard oil soaked shoes.

Do not use used engine oils as lubricants or for any application where appreciable skin contact is likely to occur. Used oils may only be disposed of in accordance with local regulations.

There are publications describing the problems and advising on precautionary measures.