

CR920, CR940, CR960, CR970 REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL INFORMATION	2
SECTION 10 - ENGINE	4
SECTION 14 - LIVE PTO	13
SECTION 21 - TRANSMISSION	15
SECTION 25 - FRONT MECHANICAL DRIVE	16
SECTION 29 - HYDROSTATIC SYSTEM	19
SECTION 33 - BRAKES AND CONTROLS	25
SECTION 35 - HYDRAULIC SYSTEMS	26
SECTION 41 - STEERING AXLE	31
SECTION 50 - CLIMATE CONTROL	34
SECTION 55 - ELECTRICAL SYSTEMS	41
SECTION 60 - PRODUCT FEEDING	79
SECTION 66 - THRESHING	84
SECTION 72 - DISCHARGE BEATER	87
SECTION 74 - CLEANING SYSTEMS	87
SECTION 80 - GRAIN STORAGE	93
SECTION 88 - ACCESSORIES	95
SECTION 90 - PLATFORM, CAB, BODYWORK, DECALS	98

The following pages are the collation of the contents pages from each section and chapter of the CR920, CR940, CR960, and CR970 Repair manual. Complete Repair part # 87600552.

The sections used through out all New Holland product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the CR920, CR940, CR960, and CR970 Combines.

Sample of manual. Download All 4344 pages at:

<https://www.aresairmanual.com/downloads/new-holland-cr920-cr940-cr960-cr970-combines-service-repair-manual/>

SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87600553

Chapter 1 - General Information

CONTENTS

Section	Description	Page
	Foreword	3
	About Improvements	3
	Part and Accessories	3
	Precautionary Statements	4
	Personal Safety	4
	Machine Safety	4
	Information	4
	Safety Precautions	4
	Personal Considerations	4
	Equipment Considerations	5
	General Considerations	6
	Operational Considerations	6
	Health and Safety Precautions	7
	Acids and Alkalis	7
	Adhesives and Sealers	7
	Antifreeze	8
	Battery Acids	8
	Brake and Clutch Linings and Pads	8
	Brazing	8
	Chemical Materials - General	8
	Clutch Linings and Pads	9
	Corrosion Protection Materials	9
	Cutting	9
	Dewaxing	9
	Do's	9
	Don'ts	9
	Dusts	9
	Electric Shock	9
	Exhaust Fumes	10
	Fiber Insulation	10
	Fire	10
	First Aid	10
	Foams- Polyurethane	10
	Fluents	10

SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87600553

Chapter 1 - General Information (Continued)

CONTENTS

Section	Description	Page
	Gas Cylinders	11
	Gases	11
	Gas Shielding Welding	11
	Gas Welding	11
	General Workshop Tools and Equipment	11
	Glues	12
	High-pressure Air, Lubrication and Oil Test Equipment	12
	Legal Aspects	12
	Lubricants and Greases	12
	Noise Insulation Material	12
	Paints	12
	Paint Thinners	12
	Pressurized Equipment	12
	Resistance Welding	12
	Sealers	12
	Solder	12
	Welding	12
	Service Techniques	13
	General	13
	Hoses and Tubes	13
	Product Identification	14
	Base Unit	14
	Engine	14
	Straw Chopper (If Equipped)	16
	Powered Rear Axle Wheel Motors (If Equipped)	16
	Minimum Hardware Tightening Torques	17
	Recommended Lubricants And Coolants (North America Only)	21

SECTION 10 - ENGINE

BOOK 1 - 87600553

Chapter 1 - 7.5L Engine Block

CONTENTS

Section	Description	Page
	Specifications	3
	Tightening Torques	9
	Special Tools	10
	Troubleshooting	12
	Description and Operation	16
	Overhaul	23
	Introduction	23
	Injection Pump	24
	Timing	24
	Cylinder Head	28
	Removal	28
	Disassembly	32
	Inspection and Repair	33
	Assembly	37
	Engine Front Cover and Timing Gears	41
	Timing Gears Checking and Removal	41
	Gears - Inspection and Repair	44
	Installation	44
	Oil Pan	46
	Removal	46
	Inspection and Repair	46
	Installation	46
	Flywheel	47
	Removal	47
	Inspection and Repair	48
	Installation	48
	Rear Cover Plate	49
	Removal	49
	Installation	49
	Oil Pump	51
	Removal	51
	Disassembly	51
	Inspection and Repair	52
	Installation	52

SECTION 10 - ENGINE

BOOK 1 - 87600553

Chapter 1 - 7.5L Engine Block (Continued)

CONTENTS

Section	Description	Page
	Oil Pressure Relief Valve	53
	Removal	53
	Installation	53
	Camshaft	54
	Removal	54
	Inspection and Repair	54
	Camshaft Bearings	55
	Installation	55
	Pistons	57
	Removal	57
	Inspection and Repair	58
	Connecting Rod Bush Replacement	59
	Cylinder Block Overhaul	61
	Cylinder Bore	62
	Specifications	62
	Sleeving - Boring and Honing	63
	Reassembly	64
	Installing Piston Assembly Into Block	66
	Crankshaft	67
	Removal	67
	Inspection and Repair	68
	Reassembly	69
	Front Crankshaft Cassette Oil Seal Replacement	72
	Removal	72
	Installation	74
	Engine Compression Test	78
	Test Procedure	78
	Test Readings	78
	Test Conclusion	78

SECTION 10 - ENGINE

BOOK 1 - 87600553

Chapter 2 - 7.5L Cooling

CONTENTS

Section	Description	Page
	Description and Operation	2
	Troubleshooting	4
	Specifications	5
	Overhaul	6
	Thermostat	6
	Removal	6
	Inspection and Repair	6
	Installation	6
	Fan Belt Tensioner	7
	Removal	7
	Inspection and Repair	7
	Reassembly	7
	Idler Pulley	8
	Water Pump	8
	Removal	8
	Disassembly and Repair	9
	Inspection and Repair	10
	Assembly	10
	Installation	12

SECTION 10 - ENGINE

BOOK 1 - 87600553

Chapter 3 - 7.5L Complete Engine, Remove and Replace

CONTENTS

Section	Description	Page
	Overhaul	2
	Engine	2
	Removal	2
	Installation	17

SECTION 10 - ENGINE

BOOK 1 - 87600553

Chapter 4 - 7.5L Fuel System

CONTENTS

Section	Description	Page
	Specifications	3
	Tightening Torques	3
	Special Tools	4
	Description and Operation	5
	General	5
	Bosch P7100 Mechanically Controlled Fuel Injection System	7
	Bosch P7100 Electronically Controlled Fuel Injection System	13
	Fuel Injector Assemblies	18
	Overhaul	20
	Injection Pump	20
	Timing Check	20
	Set Low Idle and Anti-Surge	24
	Fuel Shutoff Diagnosis	24
	Fuel Prefilter/Water Separator	26
	Replace	26
	Fuel Filter/Water Separator	27
	Replace	27

SECTION 10 - ENGINE

BOOK 1 - 87600553

Chapter 4 - 7.5L Fuel System (Continued)

CONTENTS

Section	Description	Page
	Supply Pump Sedimenter	27
	Inspect	27
	Fuel System	28
	Bleeding	28
	Injection Pump	29
	Removal	29
	Installation	31
	Fuel Lift Pump	34
	Removal	34
	Installation	34
	Fuel Shutoff Solenoid	35
	Removal	35
	Installation	35
	Low Pressure Fuel Injection Lines	36
	Removal	36
	Installation	36
	High Pressure Fuel Injection Lines	37
	Removal	37
	Installation	37
	Fuel Injectors	39
	Removal	39
	Testing	40
	Disassembly	42
	Inspection and Repair	42
	Assembly	44
	Installation	45

SECTION 10 - ENGINE

BOOK 2 - 87600554

Chapter 5 - 7.8L, 10.3L Description of Operation

CONTENTS

Section	Description	Page
	Walk Around	2
	Engine Block and Cylinder Liners	9
	Crankshaft	9
	Crankshaft Sealing Rings	10
	Connecting Rods	10
	Pistons	10
	Camshaft	11
	Timing System	11
	Flywheel	12
	Auxiliary Drive Belt	13
	Lubrication	14
	Oil Filter	15
	Oil Sump	16
	Cooling	16
	Electronically Controlled Injection System	17
	Pump Injector	18

SECTION 10 - ENGINE

BOOK 2 - 87600554

Chapter 6 - 7.8L, 10.3L Complete Engine, Remove and Replace

CONTENTS

Section	Description	Page
	Overhaul	2
	Engine	2
	Removal	2
	Installation	15

SECTION 10 - ENGINE

BOOK 2 - 87600554

Chapter 7 - 7.8L, 10.3L Engine Block

<i>Model</i>	<i>Engine</i>	<i>Size</i>
CR 960	F2BE0684A*B001	7.8L
CR 970	F3AE0684D*B001	10.3L

CONTENTS

Section	Description	Page
	Specifications	3
	General	3
	Lubrication	5
	Cooling System	5
	Rev Counter	5
	Timing System	6
	Fuel System	7
	Crank Gear and Cylinder Data	8
	Cylinder Head - Timing System	13
	Torque Settings	17
	Engine F2B	17
	Engine F3A	22
	Plan of Tightening Sequence of Screws Securing Sub-Crankcase	27
	Special Tools	30
	System Diagrams	33
	Mechanical Troubleshooting	36
	Overhaul	39
	Engine	39
	Assembly and Disassembly	39
	Assembling Crankshaft With Main Bearing Caps, Thrust Bearings and Rings, Crankshaft End Float	50
	Assembling Pistons With Piston Rings, Pins, Connecting Rods, Connecting Rod Caps and Bearings - Checking Protrusion Over the Top Face of the Crankcase	53
	Fitting and Tightening the Cylinder Head	55
	Fitting Oil Pump, Timing System Intermediate Gears and Gear Box	56
	Engine Flywheel Assembly	58
	Fitting Camshaft	59
	Fitting Injectors - Pump	60

SECTION 10 - ENGINE

BOOK 2 - 87600554

Chapter 7 - 7.8L, 10.3L Engine Block (Continued)

CONTENTS

Section	Description	Page
	Fitting Rocker Arm Shaft	60
	Completing the Engine	64
	Assembly Diagram For Fan Drive Belt - Water Pump - Alternator For F2B Engine ..	67
	Assembly Diagram For Fan Drive Belt - Water Pump - Alternator For F3A Engine ..	68
	Checks, Measurements and Repairs on the Crankcase, Cylinder Liners	69
	Checks, Measurements and Repairs on the Crankshaft, Bearings	72
	Selecting Main and Big End Bearing Shells	76
	Preliminary Appraisal of Data to Make the Selection	77
	Checks, Measurements and Repairs on the Pistons	86
	Checks, Measurements and Repairs on the Connecting Rods	89
	Piston Connecting Rod Assembly	92
	Checks, Measurements and Repairs on the Cylinder Head	95
	Valve Seats On The Head	98
	Checks, Measurements and Repairs on the Tappets And Camshaft	99
	Checks, Measurements and Repairs on the Valve Springs, Rocker Arm Shaft and Rocker Arms	103
	Rocker Arms	106
	Checks, Measurements and Repairs on the Lubrication System	106
	Cooling	111
	Checks, Measurements and Repairs on the Cooling Circuit	111
	Fuel Supply	113
	Valve Guides	115
	Injector Case	116
	Replacing the Crankshaft Front Cover Seal	119
	Adjusting Clearance Valve of Intake Exhaust Rocker Arms and Pre-Load of Pump Injector Rocker Arms	120
	Pump Injector - Removal and Refitting	121
	Bleeding the Fuel Supply System	125
	Water Pump	126
	Thermostat	126

SECTION 10 - ENGINE

BOOK 2 - 87600554

Chapter 8 - Common Engine Compartment Components

CONTENTS

Section	Description	Page
	Overhaul	2
	Cooling Fan Drive	2
	Removal	2
	Disassembly	4
	Inspection	5
	Assembly	5
	Installation	7
	Radiator Unit	9
	Removal	9
	Disassembly	15
	Inspection	16
	Assembly	17
	Installation	18
	Rotary Screen	23
	Removal	23
	Disassembly	24
	Inspection	25
	Assembly	26
	Installation	28
	Rotary Screen Drive Shaft	29
	Removal	29
	Installation	31
	Rotary Screen Seal	33
	Replacement	33
	Rotary Screen Brush	34
	Removal	34
	Installation	35
	Rotary Screen Brush Actuator	37
	Removal	37
	Installation	38

SECTION 14 - LIVE PTO

BOOK 3 - 87600555

Chapter 1 - Engine Gearbox, Clutch Pack Removal/Installation

CONTENTS

Section	Description	Page
	Special Torque	2
	Special Tool	2
	General	3
	Labor Guide	3
	Overhaul	4
	Clutch Pack	4
	Removal	4
	Installation	11

SECTION 14 - LIVE PTO

BOOK 3 - 87600555

Chapter 2 - Engine Gearbox, Clutch Pack Rebuild

CONTENTS

Section	Description	Page
	Overhaul	2
	Main Clutch	2
	Disassembly	2
	Assembly	6
	Unload Clutch	12
	Disassembly	12
	Assembly	15

SECTION 14 - LIVE PTO

BOOK 3 - 87600555

Chapter 3 - Engine Gearbox Removal/Installation

CONTENTS

Section	Description	Page
	Gearbox	2
	Removal	2
	Installation	12
	Flexplate	21
	Removal	21
	Installation	23

SECTION 14 - LIVE PTO

BOOK 3 - 87600555

Chapter 4 - Engine Gearbox Rebuild

CONTENTS

Section	Description	Page
	Overhaul	2
	Gearbox	2
	Disassembly	2
	Inspection	8
	Component Repair - Bearing and Race Removal/Installation	10
	Component Repair - Clutch Cylinder Bushing Removal/Installation	10
	Assembly	13

SECTION 21 - TRANSMISSION

BOOK 3 - 87600555

Chapter 1 - Transmission

CONTENTS

Section	Description	Page
	Specifications	2
	Tightening Torques	2
	Special Tools	3
	Sectional/Exploded Views	4
	Transmission Cover (Exploded View)	4
	Gearbox Shafts (Sectional View)	5
	Shifting Diagram (Sectional View)	6
	Shifting Disc/Drive Gear (Sectional View)	7
	Shifting Disc/Drive Gear (Exploded View)	8
	Differential (Sectional View)	9
	Differential (Exploded View)	10
	Differential Shafts (Exploded View)	11
	Drive Shaft/Cover (Exploded View)	12
	Drive Shaft (Sectional View)	13
	Drive Shaft (Exploded View)	14
	Input Shaft and Bearing Caps (Exploded View)	15
	Input Shaft (Sectional View)	16
	Input Shaft (Exploded View)	17
	Overhaul	18
	Transmission	18
	Removal	18
	Disassembly	22
	Assembly	38
	Installation	52
	Differential	57
	Disassembly	57
	Assembly	59
	Drive Shaft	60
	Disassembly	60
	Assembly	63
	Input Shaft	65
	Disassembly	65
	Assembly	66

SECTION 25 - FRONT MECHANICAL DRIVE

BOOK 3 - 87600555

Chapter 1 - Planetary Final Drive

CONTENTS

Section	Description	Page
	General Specification – Final Drive	3
	Specifications	3
	Type I and Type II Final Drive Identification	3
	Final Drive – Torque	4
	Final Drive – Special tools	5
	Overview	6
	Final Drive – Sectional View	6
	Final Drive – Exploded View	8
	Final Drive Reducer, Spur Gear – Sectional View	10
	Final Drive Reducer, Spur Gear – Exploded View	10
	Final Drive Input Shaft – Exploded View	11
	Final Drive Input Shaft – Overview	12
	Final Drive Reducer, Satellite and Planetary – Exploded View	13
	Overhaul – Type I Final Drive	14
	Removal	14
	Disassembly	15
	Assembly	19
	Installation	28
	Final Drive Reducer, Spur Gear	29
	Disassembly	29
	Assembly	29
	Final Drive Input Shaft	32
	Disassembly	32
	Assembly	33
	Final Drive Output Shaft	34
	Disassembly	34
	Assembly	35
	Final Drive Reducer, Satellite and Planetary	37
	Disassembly	37
	Assembly	38

SECTION 25 - FRONT MECHANICAL DRIVE

BOOK 3 - 87600555

Chapter 1 - Planetary Final Drive (Continued)

CONTENTS

Section	Description	Page
	Final Drive Wheel Stud	41
	Replacement	41
	Overhaul - Type II Final Drive	42
	Removal	42
	Disassembly	43
	Assembly	49
	Distance Ring Combinations Table	50
	Installation	59
	Final Drive Input Shaft	60
	Disassembly	60
	Assembly	61
	Final Drive Output Shaft	62
	Disassembly	62
	Assembly	63
	Final Drive Reducer, Satellite and Planetary	65
	Disassembly	65
	Assembly	66
	Final Drive Wheel Stud	69
	Replacement	69
	Half-shaft	70
	Removal	70
	Installation	71

SECTION 25 - FRONT MECHANICAL DRIVE

BOOK 3 - 87600555

Chapter 2 - 11/111 Final Drives

CONTENTS

Section	Description	Page
25 000	Specifications	2
	Tightening Torques	2
	Special Tools	2
	Overview	3
	Final Drive (Standard Seal) - Sectional View	3
	Final Drive (Mud Seal) - Sectional View	4
	Overhaul	5
	Wheel Bolt	5
	Replacement	5
	Final Drive	6
	Removal	6
	Disassembly	7
	Inspection	9
	Assembly	10
	Installation	16

SECTION 29 - HYDROSTATIC SYSTEM

BOOK 4 - 87600556

Chapter 1 - Hydrostatic Drive System Introduction

CONTENTS

Section	Description	Page
	Specifications	2
	Hydrostatic Oil	2
	Hydrostatic Pump (CR920, 940 and 960 Machines W/Hd 11/111 Final Drives)	2
	Hydrostatic Pump (CR940 and 960 Machines W/Planetary Final Drives)	3
	Hydrostatic Pump (CR970 and 980 Machines)	3
	Hydrostatic Drive Motor (CR920, 940 and 960 Machines W/Hd 11/111 Final Drives)	3
	Hydrostatic Drive Motor (CR940 And 960 Machines W/Planetary Final Drives; CR970 and 980 Machines)	4
	Oil Cooler Bypass Valve	4
	Introduction	5
	Oil Reservoir	5
	Hydrostatic Pump	5
	Hydrostatic Brake (External Block)	5
	Hydrostatic Brake (Integrated)	6
	Hydrostatic Drive Motor	6
	Powered Rear Axle (PRA) (Optional)	7
	Hydrostatic Drive Schematic	8
	Explanation of Hydraulic Symbols	11

SECTION 29 - HYDROSTATIC SYSTEM

BOOK 4 - 87600556

Chapter 2 - Hydrostatic System Operation

CONTENTS

Section	Description	Page
	Description of Operation	2
	Hydrostatic System	2
	Neutral	2
	Forward	2
	Schematic Circuit for CR920, 940, 960, 970 and 980 Machines	3
	Hydrostatic Block Operation (External Block)	4
	Hydrostatic Block Operation (Integrated Brake)	5
	Reverse	5
	Schematic Circuit for CR920, 940, 960, 970 and 980 Machines	6
	Gear Changing	10
	Temperature Control	10
	Schematic Circuit for CR920, 940, 960, 970 and 980 Machines	11
	Multi Function Valves	12
	Charge Check Valve 8a - 9a	14
	Pressure Limiter 8b - 9b	14
	High Pressure Relief Valve 8c - 9c	14
	Bypass Valve 8d - 9d	15
	Servo Valve	16
	System in Neutral	16
	Servo Solenoid Valve 10a Energized	16
	Hydrostatic Drive Motor Valves	18
	Shuttle Spool Valve	18
	Flushing Relief Valve	18
	Pressure Release Valve Circuit	18
	Oil Cooler bypass Valve	20
	Hydrostatic Pump and Drive motor Identification Numbers	21
	Hydrostatic Pump	23
	Variable Displacement Pump	23
	Pump Characteristics	24
	Hydrostatic Drive Motor	26
	Fixed Displacement Motors	26
	Drive Motor Characteristics	28

SECTION 29 - HYDROSTATIC SYSTEM

BOOK 4 - 87600556

Chapter 3 - Filling the Hydrostatic System and Start-up Procedure

CONTENTS

Section	Description	Page
29 000	Filling the Hydrostatic System and Start-up Procedure	2

SECTION 29 - HYDROSTATIC SYSTEM

BOOK 4 - 87600556

Chapter 4 - Powered Rear Axle

CONTENTS

Section	Description	Page
	Description of Operation	3
	Powered Rear Axle - Style I	5
	Equa-Trac II [®] Control Valve	5
	Drain Valve	7
	Low Pressure Shuttle Valve	8
	Forward and Reverse Flow Divider Valves	9
	Forward and Reverse Check Valves	10
	Equa-Trac II [®] Valve Operation – “OFF” Position	11
	Equa-Trac II [®] Valve Operation – “INTERMEDIATE” Position	13
	Equa-Trac II [®] Valve Operation – “ON” Position	15
	Forward	15
	Reverse	18
	Powered Rear Axle Motors	20
	Wheel Motor Operation	20
	Full Supply Position	21
	Bottom Neutral Position	21
	Discharge Position	21
	Top Neutral Position	22

SECTION 29 - HYDROSTATIC SYSTEM

BOOK 4 - 87600556

Chapter 4 - Powered Rear Axle (Continued)

CONTENTS

Section	Description	Page
	Wheel Motor Power Distribution	23
	Powered Rear Axle Hydraulic Schematic	24
Powered Rear Axle - Style II		25
	Specifications	25
	Selector Valve	25
	Flow Regulator (Optional)	26
Description of Operation		27
	2WD-4WD Hydraulic System - Overview	27
	2WD-4WD Hydraulic System - Detailed View	30
	Selector Valve - Dynamic Description	41
	Flow Regulator (Optional)	46
	Hydraulic Line - Plumbing Schema PRA Hoses	48
Testing		53
	Selector Valve	53
Troubleshooting		61
	2WD-4WD Hydraulic System	61
	Selector Valve - Electrical	63
	Two-speed Valve - Electrical	65
Repair		67
	Control Valve	67
	Replacement	67
	Overhaul	68
	Two-speed Valve	70
	Replacement	70

SECTION 29 - HYDROSTATIC SYSTEM

BOOK 4 - 87600556

Chapter 5 - Pressure Testing and Troubleshooting

CONTENTS

Section	Description	Page
29 000	Specifications	2
	Special Tools	3
	Main Hydrostatic System, Pressure Testing	4
	Charge Pressure	5
	Servo Pressure	6
	High Pressure	7
	Troubleshooting	9

SECTION 29 - HYDROSTATIC SYSTEM

BOOK 4 - 87600556

Chapter 6 - Hydrostatic Pump and Motor Repair

CONTENTS

Section	Description	Page
	Repair	3
29 212	Main Hydrostatic Pump	3
	Removal	3
	Installation	4
29 218	Shaft Seal Removal	6
29 218	Shaft Seal Installation	7
29 218	Shaft Removal	8
29 218	Shaft Installation	9
29 212	Charge Pump Removal	11
29 212	Charge Pump Installation	12
	Major Repairs	14
	Electric Displacement Control (EDC) Valve	15
	Removal	15
	Inspection	16
	Installation	17

SECTION 29 - HYDROSTATIC SYSTEM

BOOK 4 - 87600556

Chapter 6 - Hydrostatic Pump and Motor Repair (Continued)

CONTENTS

Section	Description	Page
29 218	Multi-Function Valve	18
	Adjustment	19
29 218	Removal	20
29 218	Installation	21
	Pump Charge Pressure Relief Valve	21
	Adjustment	21
	Removal	22
	Installation	23
29 212	Drive Motor	23
	Removal	23
	Installation	25
	Major Repairs	26
29 218	Motor Charge Relief Valve - Style 1	27
	Check	27
29 218	Replace	28
	Shuttle Spool Valve - Style 1	29
	Removal	29
	Installation	30
	Motor Pressure Relief Valve - Style 2	31
	Replacement	31
	Shuttle Spool Valve - Style 2	33
	Removal	33
	Installation	34
	Pressure Release Valve Solenoid	36
	Removal	36
	Installation	37
	Pressure Release Valve Spool	39
	Removal	39
	Installation	40

SECTION 33 - BRAKES AND CONTROLS

BOOK 5 - 87600557

Chapter 1 - Brakes and Controls

CONTENTS

Section	Description	Page
	Specifications	2
	Tightening Torques	2
	Minimum Hardware Tightening Torques	3
	Overhaul	5
	Brake Pads	5
	Replacement	5
	Brake Cylinders	8
	Bleeding the Brake System	9
	Brake Caliper and Brake Disc	12
	Removal	12
	Installation	14
	Parking Brake Caliper	16
	Removal	16
	Installation	17
	Parking Brake Disc	17
	Removal	17
	Installation	18
	Park Brake Override	20
	Parking Brake Piston Travel and Adjustment	22
	Parking Brake Pads	25
	Replacement	25
	Bleeding the Hydraulic Parking Brake Caliper	26
	Parking Brake Caliper	27
	Parking Brake Caliper - Cross Section View	27
	Disassembly	28
	Assembly	30

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 5 - 87600557

Chapter 1 - Introduction

CONTENTS

Section	Description	Page
	Specifications	2
	High Pressure System	2
	Low Pressure System	3
	Introduction	4
	Low Pressure Circuit	4
	High Pressure Circuit	5
	Hydraulic Symbols	7
	High Pressure System Description	8
	Schematic Diagrams	8
	High Pressure Circuit Diagram, Main	8
	High Pressure Circuit Diagram, Main (with Hydraulic Cleaning Fan)	10
	Main Frame Stack Valve (NA Only)	12
	Feeder Stack Valve (NA Only)	14
	Main Frame Stack Valve (Europe Only)	16
	Feeder Stack Valve (Europe Only)	18
	Component Locations	20
	Component Descriptions	21
	Low Pressure System Description	30
	Schematic Diagrams	30
	Low Pressure System	30
	Low Pressure System with Positive Straw Discharge	32
	Low Pressure System with Chopper Infeed Roll Motor with Valve - Model Year 2004 and Earlier	34
	Low Pressure System with Chopper Infeed Roll Motor with Valve - Model Year 2005 and Later	36
	Component Locations	38
	Component Descriptions	39

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 5 - 87600557

Chapter 2 - Description of Operation

CONTENTS

Section	Description	Page
	Description of Operation	2
	Closed Center Load Sensing (CCLS) Variable Displacement Pump	2
	Principal of Pump Operation - Fixed Vs. Variable Displacement	3
	Flow and Pressure Compensating Valves	5
	Hydraulic Circuit Operation	6
	Low Pressure Standby	6
	High Pressure Circuit High Demand	8
	High Pressure Circuit Low Demand	9
	Controlling Maximum System Pressure	10
	Main Stack	11
	Feeder Valve Stack	11
	Stack Valves	12
	Priority Valve	12
	Header Height Control Valve	17
	Accumulator Valve	21
	Function Control Valves	24
	Rotor Variator/Feeder Variator/Reel Raise-lower	30
	Unloading Auger Swing/Feeder Reverser Valve	30
	Lateral Float Valve/Reel Fore-Aft Valve	30
	Reel Drive Valve	31
	Stone Trap Valve	31
	Hydraulic Cleaning Fan Drive	31
	Low Pressure System	33
	Chaff Spreader Valve	33
	Chaff Spreader/PSD Valve	33
	Chopper Infeed Roll Motor Valve	34
	Low Pressure Valve	35

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 5 - 87600557

Chapter 3 - Pressure Testing and Fault Finding The High and Low Pressure Hydraulic Systems

CONTENTS

Section	Description	Page
	Description and Operation	2
	Special Tools	3
	Specifications – Closed Center Systems	4
	Main Hydraulic Pump	4
	Low Pressure Pump	4
	General Fault Finding	5
	CCLS Pump Pressure and Flow Testing	11
	CCLS Pump Low Pressure Standby	11
	CCLS Pump High Pressure Standby	12
	CCLS Pump Load Sensing Circuit	13
	CCLS Pump Flow Test	14
	Steering Testing	15
	Steering Test	15
	Steering Relief Valve Pressure Test	15
	Hydraulic Cleaning Fan Flow Test	16
	Low Pressure System Testing	18
	Low Pressure System – Chaff Spreader Pressure Test	18
	Chaff Spreader/PSD Pressure Test	18
	Low Pressure System – Regulated Pressure Test	19
	Low Pressure System – Individual Circuit Testing	19
	Low Pressure System – Pump Flow Test	20

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 5 - 87600557

Chapter 4 - Hydraulic Pump

CONTENTS

Section	Description	Page
	Special Torque	2
Repair		3
	Low Pressure Pump	3
	Removal	3
	Installation	3
	Pressure and Flow Compensating Valve	3
	Disassembly	3
	Inspection	4
	Assembly	5
	High Pressure Hydraulic Pump	6
	Removal	6
	Disassembly	7
	Inspection	12
	Assembly	12
	Installation	16

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 5 - 87600557

Chapter 5 - Stack Valves Overhaul

CONTENTS

Section	Description	Page
	Repair	2
	Main Stack Valve	2
	Removal	2
	Installation	3
	Disassembly	4
	Inspection	6
	Assembly	7
	Feeder Stack Valve	10
	Removal	10
	Installation	11
	Disassembly	12
	Inspection	14
	Assembly	15
	Low Pressure Valve Block	18
	Removal	18
	Installation	19