

TC35A, TC35DA, TC40A, TC40DA, TC45A, TC45DA REPAIR MANUAL COMPLETE CONTENTS

| | |
|---|----|
| SECTION 00 - GENERAL INFORMATION | 2 |
| SECTION 10 - ENGINE | 3 |
| SECTION 18 - CLUTCH | 10 |
| SECTION 21 - TRANSMISSION | 12 |
| SECTION 23 - DRIVELINE | 14 |
| SECTION 25 - FWD FRONT AXLE | 15 |
| SECTION 27 - DIFFERENTIAL, REAR AXLE | 18 |
| SECTION 29 - HYDROSTATIC TRANSMISSION | 19 |
| SECTION 31 - POWER TAKE-OFF (PTO) SYSTEMS | 22 |
| SECTION 33 - BRAKES | 25 |
| SECTION 35 - HYDRAULIC SYSTEM | 25 |
| SECTION 41 - STEERING | 29 |
| SECTION 44 - 2WD FRONT AXLE | 31 |
| SECTION 50 - CLIMATE CONTROL | 31 |
| SECTION 55 - ELECTRICAL | 35 |
| SECTION 90 - PLATFORM | 53 |

The following pages are the collation of the contents pages from each section and chapter of the TC35A - TC45DA Repair manual. Complete Repair part # 87618714.

The sections used through out all New Holland product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the TC35A - TC45DA Tractors.

Sample of manual. Download All 1478 pages at:

<https://www.aresairmanual.com/downloads/new-holland-tc35a-tc35da-tc40a-tc40da-tc45a-tc45da-tractor-service-repair-manual>

SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87054260

Chapter 1 - General Information

CONTENTS

| Section | Description | Page |
|---------|---|------|
| 00 000 | Introduction | 2 |
| | Safety | 3 |
| | Technical Information | 4 |
| | Safety Precautions | 5 |
| | Safety Decals - TC35A, TC40A, TC45A | 8 |
| | Instruction Decals - TC35A, TC40A, TC45A | 9 |
| | Safety Decals - TC35DA, TC40DA, TC45DA | 12 |
| | Instruction Decals - TC35DA, TC40DA, TC45DA | 13 |
| | International Symbols | 17 |
| | Specifications - TC35A, TC40A, TC45A | 18 |
| | General Dimensions - TC35A, TC40A, TC45A | 25 |
| | Specifications - TC35DA, TC40DA, TC45DA | 31 |
| | General Dimensions - TC35DA, TC40DA, TC45DA | 37 |
| | Minimum Hardware Tightening Torques | 41 |
| | Special Tools | 43 |
| | Lubricants | 44 |
| 00 400 | Recommended Lubricants | 44 |
| | Adjustments | 45 |
| | Tire Inflation Pressure - Adjustments | 45 |
| 00 100 | Pre-Season and Pre-Delivery Checklist | 46 |

SECTION 10 - ENGINE

BOOK 1 - 87054260

Chapter 1 - Engine

CONTENTS

| Section | Description | Page |
|---------|--|------|
| | Specifications | 6 |
| | Metric Bolt Torque Specifications | 15 |
| | Special Tools | 16 |
| | Compression Test and Tools | 17 |
| | Description of Operation | 18 |
| | Troubleshooting | 19 |
| | Cylinder Head and Valve Train Components | 23 |
| | Cylinder Block Assembly | 23 |
| | Separating the Tractor at the Clutch Housing/Engine - 12x12 Transmission | 25 |
| | Removal | 25 |
| | Separating the Tractor at the HST Housing/Engine - HST Transmission | 29 |
| | Removal | 29 |
| | Separating the Tractor at the HST Engine Frame | 33 |
| | Installation | 35 |
| | Attaching the 12x12 Transmission to the Engine | 42 |
| | Attaching the HST to the Engine | 46 |
| | Overhaul | 54 |
| | Engine | 54 |
| | Fuel Injector and Glow Plug | 54 |
| | Removal | 54 |
| | Oil Pressure Switch | 54 |
| | Temperature Sending Switch and Alternator | 54 |
| | Removal | 54 |
| | Fan, Water Pump and External Oil Tube | 55 |
| | Removal | 55 |
| | Air Inlet Manifold | 55 |
| | Removal | 55 |
| | Rocker Arm Shaft and Support Bracket | 56 |
| | Removal | 56 |
| 10 101 | Cylinder Head | 56 |
| | Removal | 56 |
| | Valve Tappet | 57 |
| | Removal | 57 |

SECTION 10 - ENGINE

BOOK 1 - 87054260

Chapter 1 - Engine (Continued)

CONTENTS

| Section | Description | Page |
|---------|---|------|
| | Fuel Shutoff Solenoid | 57 |
| | Removal | 57 |
| 10 106 | Engine Timing Gear Cover, Timing Gears, and Cam Shaft | 57 |
| | Timing Gear Cover Removal | 57 |
| 10 106 | Timing Gears and Cam Shaft | 60 |
| | Removal | 60 |
| 10 102 | Oil Sump | 61 |
| | Removal | 61 |
| | Oil Suction Pipe and Strainer | 61 |
| | Removal | 61 |
| 10 110 | Balancer Assembly | 62 |
| | Removal | 62 |
| 10 105 | Connecting Rods, Bearings, and Pistons, Rings | 62 |
| | Removal | 62 |
| 10 103 | Flywheel | 63 |
| | Removal | 63 |
| 10 103 | Backplate and Oil Seal | 63 |
| | Removal | 63 |
| | Crankshaft - Main Bearings | 63 |
| | Removal | 63 |
| 10 101 | Cylinder Head | 64 |
| | Disassembly | 64 |
| | Inspection and Repair | 64 |
| | Valve Seats | 65 |
| | Valves | 66 |
| | Valve Guides | 67 |
| | Valve Springs | 68 |
| | Rocker Arms | 68 |
| | Push Rods | 69 |
| | Cylinder Head | 69 |
| | Assembly | 69 |
| | Cylinder Block | 70 |

SECTION 10 - ENGINE

BOOK 1 - 87054260

Chapter 1 - Engine (Continued)

CONTENTS

| Section | Description | Page |
|---------|---|------|
| | Pistons | 70 |
| | Disassembly and Inspection | 70 |
| | Piston Rings | 73 |
| | Connecting Rods | 73 |
| | Connecting Rod Bearing | 75 |
| | Clearance Check | 75 |
| | Pistons, Rings, and Connecting Rod | 76 |
| | Assembly | 76 |
| 10 103 | Crankshaft - Main Bearing and Thrust Washer | 77 |
| | Removal and Inspection | 77 |
| | Crankshaft | 78 |
| | Bearing (Bushing) | 79 |
| | Replacement | 79 |
| | Main Bearing | 80 |
| | Assembly | 80 |
| | Port Block | 81 |
| | Removal | 81 |
| | Installation | 81 |
| 10 106 | Timing Gear | 82 |
| | Camshaft | 82 |
| | Disassembly | 82 |
| | Inspection | 82 |
| | Assembly | 83 |
| 10 103 | Flywheel | 83 |
| 10 102 | Timing Gear Housing | 84 |
| 10 102 | Front Oil Seal and Steering Pump Seal | 84 |
| | Replacement | 84 |
| 10 103 | Crankshaft and Bearing Holder | 85 |
| | Installation | 85 |
| | Rear Oil Seal and Backplate | 85 |
| | Installation | 85 |
| | Flywheel | 86 |
| | Installation | 86 |

SECTION 10 - ENGINE

BOOK 1 - 87054260

Chapter 1 - Engine (Continued)

CONTENTS

| Section | Description | Page |
|---------|--|------|
| 10 105 | Pistons and Connecting Rods | 86 |
| | Installation | 86 |
| 10 110 | Balancer Assembly | 87 |
| | Installation | 87 |
| | Balancer Shims | 87 |
| | Oil Suction Pipe and Suction Strainer | 88 |
| | Installation | 88 |
| | Oil Sump | 84 |
| | Installation | 88 |
| 10 106 | Camshaft and Camshaft Gear | 88 |
| | Installation | 88 |
| 10 106 | Idler Gear, Oil Pump, and Injection Timing | 89 |
| | Installation | 89 |
| | Timing Gear Cover | 89 |
| | Installation | 89 |
| | Crankshaft Pulley | 90 |
| | Installation | 90 |
| | Fuel Injection Pump | 90 |
| | Installation | 90 |
| | Hydraulic Oil Pump | 91 |
| | Installation | 91 |
| | Power Steering Pump | 91 |
| | Installation | 91 |
| 10 101 | Head Gasket Selection | 92 |
| | Selection Chart | 92 |
| | Cylinder Head | 92 |
| | Installation | 92 |
| 10 106 | Valve Clearance | 93 |
| | Adjustment | 93 |
| | Valve Cover | 94 |
| | Installation | 94 |
| | Water Pump and Cooling Fan | 94 |
| | Installation | 94 |

SECTION 10 - ENGINE

BOOK 1 - 87054260

Chapter 1 - Engine (Continued)

CONTENTS

| Section | Description | Page |
|---------|--|------|
| | External Oil Tube | 94 |
| | Assembly | 94 |
| | Glow Plug and Connector | 95 |
| | Installation | 95 |
| | Fuel Injector | 95 |
| | Installation | 95 |
| 10 218 | Fuel Piping | 95 |
| | Installation | 95 |
| | Alternator and Temperature Sender Switch | 96 |
| | Installation | 96 |
| | Exhaust Manifold | 96 |
| | Installation | 96 |
| 10 304 | Description of Operation - Engine Lubrication System | 97 |
| 10 206 | Oil Filter | 101 |
| | Construction and Function | 101 |
| | Maintenance | 101 |
| 10 304 | Oil Pump | 101 |
| | Removal | 102 |
| | Inspection | 102 |
| | Installation and Adjustment | 102 |
| | Engine Oil Pressure | 103 |
| | Check | 103 |
| | Oil Pressure Relief Valve | 104 |
| | Removal | 104 |
| | Installation | 104 |
| | Oil Consumption | 104 |
| 10 400 | Description of Operation - Cooling System | 105 |
| | Maintenance | 107 |
| | Coolant | 107 |
| | Radiator Cap | 107 |
| 10 402 | Thermostat | 108 |
| 10 402 | Water Pump | 108 |
| 10 414 | Cooling Fan | 108 |

SECTION 10 - ENGINE

BOOK 1 - 87054260

Chapter 1 - Engine (Continued)

CONTENTS

| Section | Description | Page |
|----------------|---------------------------------|-------------|
| | Overhaul - Cooling System | 109 |
| 10 406 | Radiator | 109 |
| | Removal | 109 |
| | Inspection and Repair | 110 |
| | Installation | 110 |
| 10 402 | Water Pump | 111 |
| | Removal | 111 |
| | Inspection and Repair | 113 |
| | Installation | 113 |
| 10 402 | Thermostat | 114 |
| | Removal | 114 |
| | Inspection and Repair | 114 |
| | Installation | 115 |
| | Cab Heater | 115 |
| | Installation | 115 |

SECTION 10 - ENGINE

BOOK 1 - 87054260

Chapter 2 - Fuel Systems

CONTENTS

| Section | Description | Page |
|---------|--|------|
| | Specifications | 3 |
| | Standards for Adjusting Injection Pump | 3 |
| | Torque Specifications | 4 |
| | Special Tools | 4 |
| | Description of Operation | 5 |
| 10 242 | Injection Pump | 5 |
| | Troubleshooting - General | 7 |
| | Troubleshooting - Fuel Injectors | 10 |
| | Troubleshooting - Governor | 11 |
| 10 244 | Fuel Variation Mechanism | 12 |
| | Delivery Valve Assembly | 13 |
| 10 244 | CTD (Compact Timing Device) | 13 |
| 10 236 | Pumping Elements | 15 |
| 10 214 | Delivery Valves | 15 |
| 10 242 | Injection Pump | 17 |
| | Removal | 17 |
| | Repair | 19 |
| | Installation | 19 |
| | Calibration/Adjustments | 20 |
| 10 230 | Fuel Pump | 20 |
| | Installation | 20 |
| | Spill-Timing Procedure | 21 |
| | Fuel Screw/High Idle | 25 |
| | Adjustment | 25 |
| 10 230 | Fuel Pump | 26 |
| | Auto Bleed | 26 |
| | Description of Operation | 27 |
| 10 230 | Governor | 27 |
| | Disassembly | 29 |
| | Assembly | 30 |
| | Adjustments | 32 |

SECTION 10 - ENGINE

BOOK 1 - 87054260

Chapter 2 - Fuel Systems (Continued)

CONTENTS

| Section | Description | Page |
|---------|---|------|
| 10 218 | Injectors | 33 |
| | Removal | 34 |
| | Disassembly | 35 |
| | Assembly/Adjustment | 35 |
| | Engine Breather Valve | 36 |
| | Removal | 37 |
| | Installation | 37 |
| | Troubleshooting - Engine Breather Valve | 38 |

SECTION 18 - CLUTCH

BOOK 1 - 87054260

Chapter 1 - Clutch

CONTENTS

| Section | Description | Page |
|---------|---|------|
| 18 000 | Specifications | 3 |
| | Bolt Torques | 4 |
| | Special Tools | 4 |
| | Description of Operation | 5 |
| | Troubleshooting | 7 |
| | Overhaul | 8 |
| | Separating the Tractor at the Clutch Housing/Engine | 8 |
| | Removal | 8 |
| 18 110 | Clutch | 14 |
| | Removal | 14 |
| | Inspection | 14 |
| | Assembly | 15 |
| | Attaching the 12x12 Transmission to the Engine | 16 |

SECTION 18 - CLUTCH

BOOK 1 - 87054260

Chapter 1 - Clutch (Continued)

CONTENTS

| Section | Description | Page |
|---------|---------------------------------|------|
| 18 110 | Clutch Related Components | 22 |
| | Pilot Bearing | 22 |
| | Removal | 22 |
| | Installation | 22 |
| | Damper Disc | 22 |
| | Removal | 23 |
| | Inspection | 23 |
| | Installation | 23 |
| | Flywheel Dimensions | 24 |
| | Clutch Release Bearing | 25 |
| | Removal | 25 |
| | Inspection | 25 |
| | Installation | 26 |
| | Clutch Linkage Components | 26 |
| 18 100 | Cross Shaft Bushings | 26 |
| | Disassembly | 26 |
| | Assembly | 27 |
| | Pedal Bushings | 28 |
| | Removal | 28 |
| | Disassembly | 28 |
| | Assembly | 28 |
| | Installation | 28 |
| | Pedal | 29 |
| | Adjustment | 29 |
| | Maximum Travel Adjustment | 29 |

SECTION 21 - TRANSMISSION

BOOK 2 - 87054261

Chapter 1 - 12 x 12 Synchronized Shuttle Shift Gear Transmission

CONTENTS

| Section | Description | Page |
|-----------|---|------|
| 21 000 | Specifications | 3 |
| | Metric Bolt Torque Specifications | 4 |
| | Special Tools | 5 |
| | Description of Operation | 6 |
| | Cross Section - 12 x 12 Transmission | 8 |
| | Powerflow | 9 |
| | Troubleshooting | 13 |
| | Overhaul | 14 |
| 21 114 | Separating the Tractor at the Clutch Housing/Engine | 14 |
| 21 110 10 | Removal | 14 |
| | Clutch Housing | 20 |
| | Disassembly | 20 |
| | Main Transmission | 24 |
| 21 148 63 | Retainer Cover | 24 |
| | Disassembly | 24 |
| 21 148 63 | Main Shift Rails and Shift Forks | 25 |
| | Disassembly | 25 |
| 21 148 63 | Main Shaft | 28 |
| | Disassembly | 28 |
| 21 148 63 | Range Shift Rail and Shift Fork | 31 |
| | Disassembly | 31 |
| 21 148 63 | Range Gear Countershaft | 32 |
| | Disassembly | 32 |
| 21 148 63 | Input Shaft | 33 |
| | Disassembly | 33 |
| 21 148 63 | Reverse Idler Shaft | 34 |
| | Disassembly | 34 |
| 21 148 63 | Shuttle Shift Rail and Fork | 36 |
| | Disassembly | 36 |
| 21 148 63 | Main Countershaft | 37 |
| | Disassembly | 37 |
| 21 148 63 | Synchronizers | 39 |
| | Disassembly | 39 |

SECTION 21 - TRANSMISSION

BOOK 2 - 87054261

Chapter 1 - 12 x 12 Synchronized Shuttle Shift Gear Transmission (Continued)

CONTENTS

| Section | Description | Page |
|-----------|--|------|
| | Main Transmission Components | 40 |
| | Inspection | 40 |
| | Synchronizers | 40 |
| | Assembly | 40 |
| | Main Countershaft | 41 |
| | Assembly | 41 |
| | Shuttle Shift Rail and Fork | 42 |
| | Assembly | 42 |
| | Reverse Idler Shaft | 44 |
| | Assembly | 44 |
| 21 148 63 | Input Shaft | 46 |
| | Assembly | 46 |
| 21 148 63 | Main Countershaft End Float | 47 |
| | Assembly | 47 |
| 21 148 63 | Range Gear Countershaft | 48 |
| | Assembly | 48 |
| 21 148 63 | Range Shift Rail and Fork | 49 |
| | Assembly | 49 |
| 21 148 63 | Main Shaft | 50 |
| | Assembly | 50 |
| 21 148 63 | Main Shaft End Float | 53 |
| | Assembly | 53 |
| 21 148 63 | Main Shaft Gears End Float | 54 |
| | Assembly | 54 |
| | Main Shift Rails and Forks | 55 |
| | Assembly | 55 |
| | Retainer Cover | 58 |
| | Assembly | 58 |
| 21 110 10 | Clutch Housing | 59 |
| | Assembly | 59 |
| | Attaching the 12 X 12 Transmission to the Engine | 64 |
| 21 130 | Transmission Shift Levers | 70 |

SECTION 21 - TRANSMISSION

BOOK 2 - 87054261

Chapter 1 - 12 x 12 Synchronized Shuttle Shift Gear Transmission (Continued)

CONTENTS

| Section | Description | Page |
|---------|-----------------------------------|------|
| | Main Shift Control Lever | 71 |
| | Removal | 71 |
| | Installation | 71 |
| | Main Shift Lever | 72 |
| | Adjustment | 72 |
| | Shuttle Shift Control Lever | 73 |
| | Removal | 73 |
| | Installation | 73 |

SECTION 23 - DRIVELINE

BOOK 2 - 87054261

Chapter 1 - Driveline

CONTENTS

| Section | Description | Page |
|---------|---|------|
| 23 000 | Bolt Torque Specifications | 2 |
| | Special Tools | 3 |
| | Description of Operation | 4 |
| | Front Wheel Drive Take Off Gearbox | 4 |
| | Sensitrack | 5 |
| | Automatic Position (Engaged) | 6 |
| | Automatic Position (Disengaged) | 6 |
| | Full Time Front Wheel Drive (Locked Down) | 6 |
| | Supersteer™ Front Axle | 7 |
| | Troubleshooting | 9 |
| | Lubrication | 9 |
| | Overhaul | 10 |
| | Front Wheel Drive Take Off Gearbox | 10 |

SECTION 23 - DRIVELINE

BOOK 2 - 87054261

Chapter 1 - Driveline (Continued)

CONTENTS

| Section | Description | Page |
|---------|------------------------|------|
| | Removal | 10 |
| | Disassembly | 12 |
| | Inspection | 12 |
| | Assembly | 12 |
| | Installation | 12 |
| 23 260 | Sensitrack | 14 |
| | Removal | 14 |
| | Disassembly | 16 |
| | Inspection | 23 |
| | Assembly | 23 |
| 23 260 | Installation | 31 |
| | Cable Adjustment | 33 |

SECTION 25 - FWD FRONT AXLE

BOOK 2 - 87054261

Chapter 1 - FWD Front Axle, Supersteer™ and Sensitrack™

CONTENTS

| Section | Description | Page |
|---------|---|------|
| | Specifications | 3 |
| | Front to Rear Axle Ratio | 3 |
| | Bolt Torque Specifications | 6 |
| | Special Tools | 6 |
| 25 100 | Description of Operation - FWD Front Axle | 7 |
| | FWD Front Axle | 7 |
| | Troubleshooting | 8 |
| | Lubrication | 10 |

SECTION 25 - FWD FRONT AXLE

BOOK 2 - 87054261

Chapter 1 - FWD Front Axle, Supersteer™ and Sensitrack™ (Continued)

CONTENTS

| Section | Description | Page |
|---------|---|------|
| | Overhaul - Standard FWD Axle | 11 |
| | Standard FWD Axle | 11 |
| | Removal | 11 |
| | Installation | 11 |
| 25 108 | Gear Reduction Drop Box | 12 |
| | Disassembly | 12 |
| 25 102 | Front Axle and Differential | 15 |
| | Disassembly | 15 |
| | Drive Pinion | 16 |
| | Disassembly | 16 |
| | Front Axle | 17 |
| | Inspection | 17 |
| | Differential | 17 |
| | Inspection | 17 |
| | Gear Reduction - Drop Box | 17 |
| | Inspection | 17 |
| | Drive Pinion | 18 |
| | Assembly | 18 |
| | Differential Gear | 18 |
| | Assembly | 18 |
| | Axle and Differential | 19 |
| | Assembly | 19 |
| | Differential Case Bearing Preload | 20 |
| | Check and Adjustment | 20 |
| | Ring Gear-to-Pinion Backlash | 20 |
| | Check and Adjustment | 20 |
| 25 108 | Gear Reduction Box | 23 |
| | Assembly | 23 |
| | Ring Gear-to-Pinion Backlash | 25 |
| | Check and Adjustment | 25 |
| | Bevel Gear-to-Pinion Backlash | 26 |
| | Check | 26 |
| | Description and Operation - Supersteer™/Sensitrack™ | 27 |
| 25 100 | Supersteer™ | 27 |

SECTION 25 - FWD FRONT AXLE

BOOK 2 - 87054261

Chapter 1 - FWD Front Axle, Supersteer™ and Sensitrack™ (Continued)

CONTENTS

| Section | Description | Page |
|---------|---|------|
| | Sensitrack™ | 28 |
| | Automatic Position (Engaged) | 29 |
| | Automatic Position (Disengaged) | 30 |
| | Full Time Front Wheel Drive (Locked Down) | 30 |
| | Supersteer™ Front Axle | 30 |
| | Overhaul - Supersteer™ Axle | 33 |
| 25 100 | Supersteer™ Axle | 35 |
| | Removal | 35 |
| | Gear Reduction-Drop Box | 40 |
| | Disassembly | 40 |
| 25 102 | Front Axle and Differential | 42 |
| | Disassembly | 42 |
| | Drive Pinion | 43 |
| | Disassembly | 43 |
| | Front Axle | 44 |
| | Inspection | 44 |
| | Differential | 44 |
| | Inspection | 44 |
| | Gear Reduction-Drop Box | 44 |
| | Inspection | 44 |
| | Drive Pinion | 45 |
| | Assembly | 45 |
| | Differential Gear | 45 |
| | Assembly | 45 |
| 25 102 | Axle and Differential | 46 |
| | Assembly | 46 |
| | Differential Case Bearing Preload | 47 |
| | Check and Adjustment | 47 |
| | Ring Gear-to-Pinion Backlash | 47 |
| | Check and Adjustment | 47 |
| 25 108 | Gear Reduction Box | 50 |
| | Assembly | 50 |
| | Bevel Gear-to-Pinion Backlash | 52 |
| | Check | 52 |
| | Supersteer™ Axle | 53 |
| | Installation | 53 |

SECTION 27 - DIFFERENTIAL, REAR AXLE

BOOK 2 - 87054261

Chapter 1 - Differential, Rear Axle

CONTENTS

| Section | Description | Page |
|---------|----------------------------------|------|
| 27 000 | Specifications | 2 |
| | Bolt Torque Specifications | 3 |
| | Special Tools | 3 |
| | Description of Operation | 4 |
| 27 110 | Differential | 6 |
| 27 110 | Differential Lock | 6 |
| 27 126 | Rear Axle | 7 |
| | Overhaul | 8 |
| 27 106 | Differential | 8 |
| | Removal | 8 |
| | Disassembly | 10 |
| | Inspection | 10 |
| | Assembly | 11 |
| | Installation | 11 |
| | Drive Pinion | 13 |
| | Removal | 13 |
| | Disassembly | 13 |
| | Inspection | 14 |
| | Assembly | 14 |
| 27 126 | Rear Axle | 17 |
| | Removal | 17 |
| | Disassembly | 18 |
| | Inspection | 21 |
| | Assembly | 22 |
| 27 126 | Final Pinion | 26 |
| | Removal | 26 |
| | Disassembly | 27 |
| | Inspection | 29 |
| | Assembly | 30 |
| | Installation | 32 |

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 3 - 87054262

Chapter 1 - Hydrostatic Transmission

CONTENTS

| Section | Description | Page |
|---------|---|------|
| | Specifications | 4 |
| | Metric Bolt Torque Specifications | 6 |
| | Special Tools | 6 |
| 29 202 | Description of Operation | 7 |
| | Power Flow | 8 |
| | High Range | 8 |
| | Low Range | 9 |
| | Oil Flow | 10 |
| | Neutral Position | 10 |
| | Forward Position | 11 |
| | Reverse Position | 12 |
| 29 212 | Variable Displacement Pump | 13 |
| 29 212 | Two Position Displacement Motor | 14 |
| 29 134 | Hi/Lo Speed Control/Control Pod | 15 |
| | Hi/Lo Speed Control | 15 |
| 29 200 | Foot Control Pedals | 16 |
| | Troubleshooting | 18 |
| | Charge Pump Relief Valve | 20 |
| | Test | 20 |
| | Pressure Testing and Adjustments | 21 |
| | High Pressure Relief Valve | 21 |
| | Hi/Low Pressure Test | 23 |
| | Separating the Tractor | 25 |
| | TC35DA, TC40DA, and TC45DA w/HST Transmission | 25 |
| | Separating at the HST Housing/Engine | 25 |
| | Separating the HST Housing at the Gearbox | 32 |
| | Attaching the HST Housing to the Gearbox | 34 |
| | Attaching the HST to the Engine | 37 |
| 29 202 | Hydrostatic Transmission | 44 |
| | Disassembly | 44 |
| | Charge Pump | 44 |
| | Removal | 44 |

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 3 - 87054262

Chapter 1 - Hydrostatic Transmission (Continued)

CONTENTS

| Section | Description | Page |
|---------|---|------|
| 29 130 | Port Block | 45 |
| | Removal | 45 |
| | Cylinder Block Assembly | 46 |
| | Removal | 46 |
| | Motor Swash Plate | 46 |
| | Removal | 46 |
| | Input and Output Shaft | 47 |
| | Removal | 47 |
| | Pump Swash Plate | 47 |
| | Removal | 47 |
| 29 130 | Port Block | 48 |
| | Removal | 48 |
| | Inspection | 48 |
| | Piston | 49 |
| | Assembly | 49 |
| | Charge Pump | 50 |
| | Assembly | 50 |
| | Swash Plate | 50 |
| | Assembly | 50 |
| | Pump Shaft (Input Shaft) | 51 |
| | Assembly | 51 |
| | Charge Pump | 51 |
| | Assembly | 51 |
| 29 218 | Cylinder Block Assembly for Pump | 51 |
| | Assembly for Pump | 51 |
| | Motor Shaft | 52 |
| | Assembly | 52 |
| 29 218 | Cylinder Block Assembly for Motor | 52 |
| | Assembly for Motor | 52 |
| | Port Block | 53 |
| 29 130 | Assembly | 53 |
| | Installation | 54 |

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 3 - 87054262

Chapter 1 - Hydrostatic Transmission (Continued)

CONTENTS

| Section | Description | Page |
|---------|---|------|
| | Hydrostatic Transmission | 55 |
| | Assembly | 55 |
| 29 204 | Check Valve | 55 |
| | Disassembly | 55 |
| | Inspection | 55 |
| | Assembly | 55 |
| | Description and Operation - Gearbox | 56 |
| 29 300 | Gearbox | 56 |
| | Gearbox Identification | 57 |
| | Overhaul - Gearbox | 58 |
| | Gearbox | 58 |
| | Removal | 58 |
| | Disassembly | 59 |
| | Inspection | 63 |
| | Assembly | 64 |
| | Installation | 67 |
| 29 214 | Hi/Lo Solenoid Valve | 69 |
| | Removal | 71 |
| | Disassembly | 71 |
| | Inspection | 72 |
| | Testing | 72 |
| | Assembly | 73 |
| | Adapter Block | 74 |
| | Removal | 74 |
| | Disassembly | 75 |
| | Inspection | 76 |
| | Assembly | 76 |
| | Cruise Control | 77 |
| | Electromagnet Air Gap Adjustment | 78 |
| | Adjustment | 78 |

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 3 - 87054262

Chapter 2 - Adjustment

CONTENTS

| Section | Description | Page |
|---------|---------------------------------|------|
| | HST Pedals | 2 |
| | Stop Adjustment | 2 |
| | HST Cruise Control Magnet | 3 |
| | Adjustment | 3 |
| 29 200 | HST Foot Control Pedals | 4 |
| 29 200 | Neutral Adjustment | 4 |
| | HST Pedals Return Spring | 5 |
| | Adjustment | 5 |

SECTION 31 - POWER TAKE-OFF (PTO) SYSTEMS

BOOK 3 - 87054262

Chapter 1 - Power Take-Off (PTO) Systems

CONTENTS

| Section | Description | Page |
|---------|--|------|
| | Specifications | 3 |
| | PTO Hydraulic System | 3 |
| | PTO Clutch | 3 |
| | Metric Bolt Torque Specifications | 4 |
| | Special Tools | 5 |
| 31 000 | Description of Operation | 6 |
| 31 110 | Rear PTO | 7 |
| | Power Flow Diagram for the 12x12 Synchronized Shuttle Shift Transmission | 7 |
| | Power Flow Diagram for the Hydrostatic Transmission (HST) | 8 |
| 31 120 | Power Flow Diagram for Tractors Equipped with a Mid PTO Kit | 9 |
| 31 104 | Hydraulic Fluid Flow | 10 |
| | PTO Clutch Assembly | 10 |
| | Troubleshooting | 13 |

SECTION 31 - POWER TAKE-OFF (PTO) SYSTEMS

BOOK 3 - 87054262

Chapter 1 - Power Take-Off (PTO) Systems (Continued)

CONTENTS

| Section | Description | Page |
|-----------|--|------|
| | Pressure Testing | 14 |
| | Test Procedure (Below Serial Number - See Chart) | 14 |
| | Test Procedure (Serial Number and Above - See Chart) | 15 |
| | Overhaul | 17 |
| 31 104 82 | PTO System Diverter Valve Assembly | 17 |
| | Removal | 17 |
| | Disassembly | 17 |
| | Inspection | 18 |
| | Assembly | 18 |
| | Installation | 19 |
| 31 104 82 | PTO Clutch Control Valve (BSN) | 20 |
| | Removal | 20 |
| | Spool | 21 |
| | Removal | 21 |
| | Inspection | 21 |
| | Assembly | 21 |
| | Clutch Control Relief Valve | 23 |
| | Disassembly | 23 |
| | Inspection | 23 |
| | Assembly | 23 |
| | Installation | 24 |
| 31 104 82 | PTO Clutch Control Valve (ASN) | 25 |
| | Removal | 25 |
| | Disassembly | 26 |
| | Inspection | 26 |
| | Assembly | 26 |
| | Installation | 28 |
| 31 114 62 | PTO Clutch | 29 |
| | Removal | 29 |
| 31 114 68 | Disassembly | 32 |
| 31 114 62 | Installation | 34 |
| | Assembly | 36 |
| | Installation | 40 |

SECTION 31 - POWER TAKE-OFF (PTO) SYSTEMS

BOOK 3 - 87054262

Chapter 1 - Power Take-Off (PTO) Systems (Continued)

CONTENTS

| Section | Description | Page |
|-----------|---|------|
| 31 114 42 | PTO System System for 12x12 Synchronized Shuttle Shift Transmission | 44 |
| | Removal | 44 |
| | PTO Input Shaft | 44 |
| | Removal | 44 |
| | Disassembly | 45 |
| | Inspection | 45 |
| | Assembly | 45 |
| | Installation | 46 |
| 31 114 46 | PTO Countershaft and Rear PTO Shaft | 46 |
| | Removal | 46 |
| 31 114 46 | Countershaft | 48 |
| | Disassembly | 48 |
| | Inspection | 49 |
| | Assembly | 49 |
| | Installation | 51 |
| 31 114 00 | PTO System for Hydrostatic Transmission (HST) | 53 |
| | Removal | 53 |
| 31 114 42 | PTO Input Shaft | 53 |
| | Removal | 53 |
| | Disassembly | 54 |
| | Inspection | 54 |
| | Assembly | 54 |
| | Installation | 55 |
| 31 114 46 | PTO Countershaft and Rear PTO Shaft | 55 |
| | Removal | 55 |
| 31 114 42 | Disassembly | 59 |
| | Inspection | 60 |
| | Assembly | 60 |
| 31 114 19 | Installation | 63 |
| 31 120 00 | Mid PTO Countershaft and Drop Box | 66 |
| | Removal | 63 |
| | Disassembly | 71 |
| | Inspection | 73 |
| | Assembly | 74 |
| | Installation | 75 |

SECTION 33 - BRAKES

BOOK 3 - 87054262

Chapter 1 - Brakes

CONTENTS

| Section | Description | Page |
|---------|----------------------------------|------|
| | Specifications | 2 |
| | Bolt Torque Specifications | 3 |
| | Description of Operation | 4 |
| 33 120 | Brakes | 4 |
| 33 110 | Parking Brake | 6 |
| 33 120 | Overhaul | 7 |
| | Brakes | 7 |
| | Removal and Disassembly | 7 |
| | Inspection | 9 |
| | Assembly and Installation | 10 |
| | Adjustment | 12 |

SECTION 35 - HYDRAULIC SYSTEM

BOOK 3 - 87054262

Chapter 1 - Hydraulic System

CONTENTS

| Section | Description | Page |
|---------|--|------|
| | Specifications | 4 |
| | Metric Bolt Torque Specifications | 5 |
| | Special Tools | 6 |
| 35 100 | Description of Operation | 7 |
| | Flow Priority | 8 |
| | Hydraulic System | 9 |
| | Hydraulic Fluid Filter | 9 |
| 35 080 | Combination System Relief - Diverter Valve Manifold Assembly | 10 |
| 35 200 | Control Valve Assembly (HPL) | 11 |
| | Fluid Flow | 12 |

SECTION 35 - HYDRAULIC SYSTEM

BOOK 3 - 87054262

Chapter 1 - Hydraulic System (Continued)

CONTENTS

| Section | Description | Page |
|---------|---|------|
| 35 210 | Neutral Position | 12 |
| 35 210 | Raising Position | 13 |
| 35 210 | Lowering Position | 14 |
| | Bypass Spool - Fluid Flow | 15 |
| 35 200 | Closed Position | 15 |
| 35 200 | Open Position | 15 |
| 35 183 | Flow Control Valve | 16 |
| 35 108 | Single Lever - Position Control | 16 |
| 35 108 | Neutral Position to Raise | 17 |
| | Raise Position to Neutral Position | 17 |
| | Neutral Position to Lowering Position | 17 |
| 35 112 | Dual Lever Position Control (Draft Control) | 18 |
| | Top Link Sensing Raise | 18 |
| | Top Link Sensing Lower | 19 |
| | Varying Draft Control Settings | 19 |
| 35 124 | Combining Position and Draft Control Settings | 20 |
| | Troubleshooting | 21 |
| | Pressure Testing | 23 |
| | Main System Relief Valve | 23 |
| | Inlet Restriction | 25 |
| | Pump Efficiency | 26 |
| 35 110 | Overhaul - Hydraulic System | 27 |
| 35 110 | Lift Cylinder | 27 |
| | Removal | 27 |
| | Disassembly | 31 |
| | Inspection and Repair | 33 |
| | Assembly | 33 |
| | Installation | 35 |
| | Flow Control Valve | 37 |
| | Removal | 37 |
| | Disassembly | 37 |
| | Inspection | 37 |
| | Assembly | 37 |
| | Installation | 37 |

SECTION 35 - HYDRAULIC SYSTEM

BOOK 3 - 87054262

Chapter 1 - Hydraulic System (Continued)

CONTENTS

| Section | Description | Page |
|---------|---|------|
| 35 200 | Hydraulic Control Valve | 38 |
| | Removal | 38 |
| | Disassembly | 38 |
| | Inspection | 39 |
| | Assembly | 39 |
| | Installation | 41 |
| 35 180 | Combination System Relief and Diverter Valve Assembly | 42 |
| | Removal | 42 |
| | Disassembly | 42 |
| | Inspection | 43 |
| | Assembly | 43 |
| | Installation | 44 |
| 35 182 | PTO System Diverter Valve | 45 |
| | Removal | 45 |
| | Disassembly | 45 |
| | Inspection | 46 |
| | Assembly | 46 |
| | Installation | 47 |
| 35 124 | Adjustments | 48 |
| | HPL Linkage | 48 |
| | Adjustment Procedure | 48 |
| | Control Lever | 48 |
| | Adjustment Procedure | 48 |
| | Description of Operation - Hydraulic Pump and Filter | 49 |
| 35 304 | Hydraulic Pump and Filter | 49 |
| 35 304 | Hydraulic Pump | 50 |
| | Removal | 50 |
| | Disassembly | 52 |
| | Inspection and Repair | 52 |
| | Assembly | 53 |
| | Installation | 54 |
| 35 300 | Sump Tube and Screen Filter | 56 |
| | Removal | 56 |
| | Disassembly | 57 |

SECTION 35 - HYDRAULIC SYSTEM

BOOK 3 - 87054262

Chapter 1 - Hydraulic System (Continued)

CONTENTS

| Section | Description | Page |
|---------|---|------|
| | Inspection | 57 |
| | Assembly | 57 |
| | Description of Operation - Remote Valves | 59 |
| 35 204 | Remote Valves | 59 |
| | Rear (Single-Spool) Remote Valve | 60 |
| | Front (Double-Spool) Remote Valve | 60 |
| | Rear (Single-spool) Remote System | 62 |
| | Fluid Flow | 62 |
| | Neutral Position | 62 |
| | Remote Cylinder Extending | 63 |
| | Remote Cylinder Retracting | 64 |
| | Front Remote (Two Spool) Loader Control Valve Fluid Flow Diagrams | 65 |
| | Bucket Control | 65 |
| | Neutral/Lift Control-Neutral | 65 |
| | Dumping/Lift Control-Neutral | 66 |
| | Dumping REGEN/ Lift Control-Neutral | 67 |
| | Roll Back/Lift Control-Neutral | 68 |
| | Neutral/Lift Control-Raising | 69 |
| | Neutral/Lift Control-Lowering | 70 |
| | Neutral/Lift Control-Float | 71 |
| 35 204 | Overhaul | 72 |
| | Rear (Single-Spool) Remote Valve | 72 |
| | Removal | 72 |
| | Disassembly | 73 |
| | Inspection and Repair | 73 |
| | Assembly | 73 |
| | Front (Double Spool) Remote Valve | 74 |
| | Removal | 74 |
| | Disassembly | 76 |
| | Inspection and Repair | 76 |
| | Assembly | 76 |
| | Installation | 76 |

SECTION 41 - STEERING

BOOK 4 - 87056433

Chapter 1 - Steering

CONTENTS

| Section | Description | Page |
|---------|---|------|
| 41 000 | Specifications | 2 |
| | Metric Bolt Torque Specifications | 3 |
| | Special Tools | 4 |
| | Description of Operation | 5 |
| | Supersteer™ | 5 |
| 41 204 | Power Steering Control Motor | 10 |
| | Spool and Sleeve | 10 |
| | Rotor and Fixed Ring | 10 |
| | Check Valve | 10 |
| | Drive Shaft | 10 |
| | Pressure Relief Valve | 10 |
| 41 206 | Power Steering Pump | 10 |
| 41 216 | Steering Cylinders | 10 |
| | Supersteer™ | 10 |
| 41 216 | 2WD and Standard 4WD | 12 |
| 41 206 | Supersteer™ | 13 |
| | Fluid Flow - Neutral Position | 13 |
| 41 200 | Fluid Flow - Left Turn | 14 |
| 41 200 | Fluid Flow - Right Turn | 15 |
| 41 200 | Manual Operation | 16 |
| 41 200 | Power Steering Operation - 2WD and Standard 4WD | 17 |
| | Fluid Flow - Neutral Position | 17 |
| 41 200 | Fluid Flow - Left Turn | 18 |
| 41 200 | Fluid Flow - Right Turn | 19 |
| 41 200 | Manual Operation - 2WD and Standard 4WD | 20 |
| | Troubleshooting | 21 |
| | Pressure Testing | 23 |
| | Pump, Steering Motor, and Relief Valve | 23 |
| | Test Results | 23 |
| | Steering Cylinder | 24 |
| | Test Results | 24 |

SECTION 41 - STEERING

BOOK 4 - 87056433

Chapter 1 - Steering (Continued)

CONTENTS

| Section | Description | Page |
|---------|---|------|
| | Lubrication | 25 |
| | Lubricate Every 50 Hours | 25 |
| | Overhaul | 25 |
| 41 204 | Steering Control Motor | 26 |
| | Removal | 26 |
| | Disassembly | 27 |
| | Inspection | 33 |
| | Assembly | 33 |
| | Installation | 42 |
| 41 216 | Steering Cylinder - 4WD and Supersteer™ | 43 |
| | Removal | 43 |
| 41 216 | Steering Cylinder - 2WD | 43 |
| | Removal | 44 |
| | Disassembly | 47 |
| | Inspection | 48 |
| | Assembly | 49 |
| 41 216 | Steering Cylinder - 4WD and Supersteer™ | 53 |
| | Installation | 53 |
| 41 216 | Steering Cylinder - 2WD | 55 |
| | Installation | 55 |
| 41 206 | Pump and Reservoir Tank | 57 |
| | Pump Removal | 57 |
| | Disassembly | 58 |
| | Inspection and Repair | 58 |
| | Assembly | 58 |
| 41 206 | Pump Installation | 59 |
| | Power Steering Tubes | 60 |